

SUZUKI

PARTS CATALOGUE

DF350A/325A

DF350AT
DF325AT



OUTBOARD MOTOR

E01/E40

2018-1

2ND EDITION

This part catalogue supersedes all the following part catalogue with immediate effect

Model of catalogue	Parts catalogue No.
DF350A	9900B-45383

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF350A/325A production start 2017.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	X, XX	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 35001F-123456	PTT	: Power trim and tilt
123456~	: From E. NO. 35001F-123456		
12 x 34 x 5.6	 Figures in the description column		
	show the dimensions of parts.		
ID OD T	(or W, L)		

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF350AT	E01	35001F	X, XX	YAY, Y5S	35001F-810001~
DF325AT	E01, E40	35001F	X, XX	YAY, Y5S	32501F-810001~

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

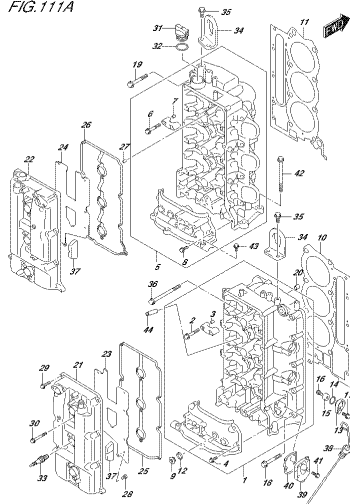


DC380A, E71, 016, 1114
CYLINDER HEAD

FIG.113A

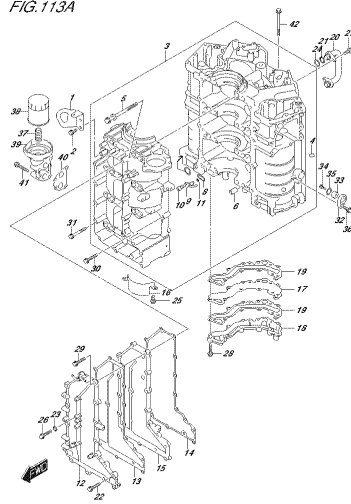


DC380A, E71, 016, 1134
CYLINDER BODY

FIG.116A

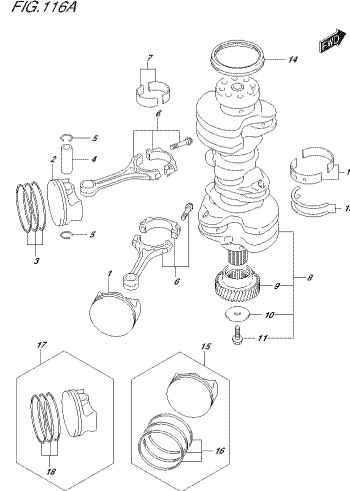


DC380A, E71, 016, 1164
CYLINDER HEAD

FIG.116B

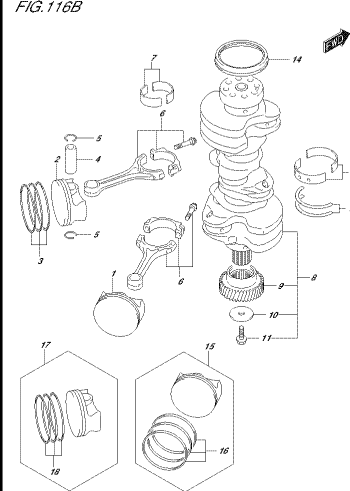


DC380A, E71, 016, 116B
CYLINDER HEAD

FIG.119A

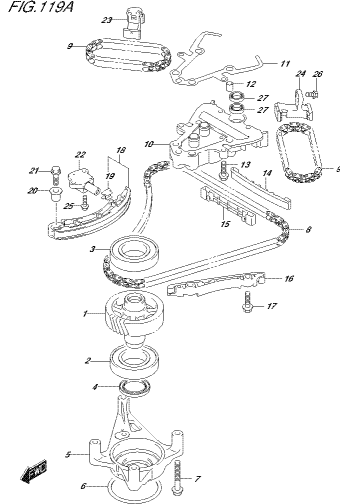


DC380A, E71, 016, 1194
TURNING CHAIR

FIG.121A

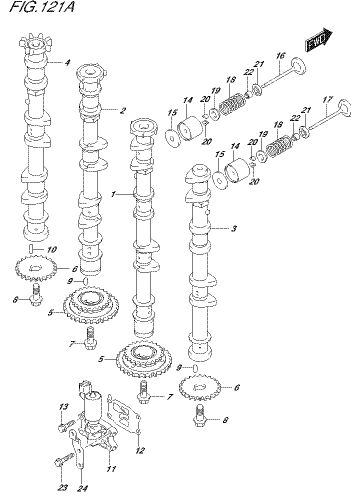


DC380A, E71, 016, 1214
CAMSHAFT

FIG.121B

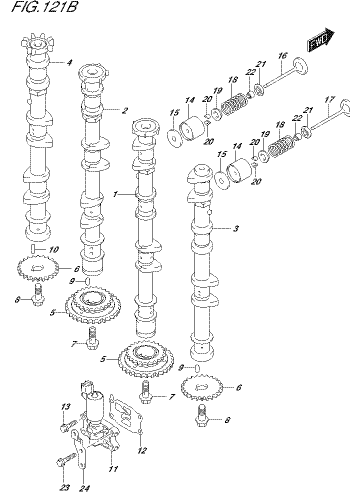


DC380A, E71, 016, 121B
CAMSHAFT

FIG.122A

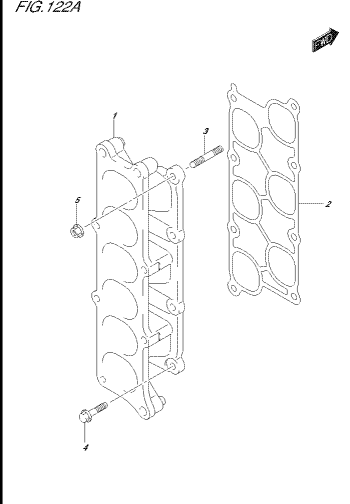


DC380A, E71, 016, 1224
PITANE MANIFOLD

FIG. 136A

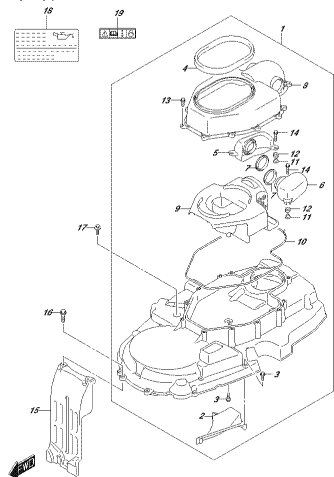


DCS80A, EPT, 016, 1404
FUEL PUMP

FIG. 140A

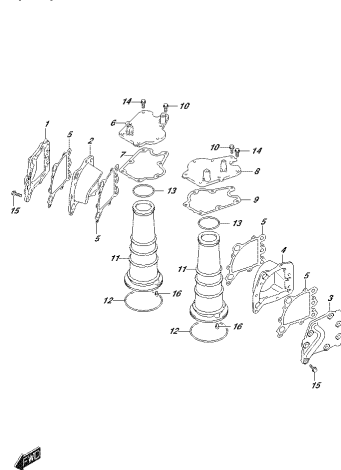


DCS80A, EPT, 016, 1404
FUEL PUMP

FIG. 144A

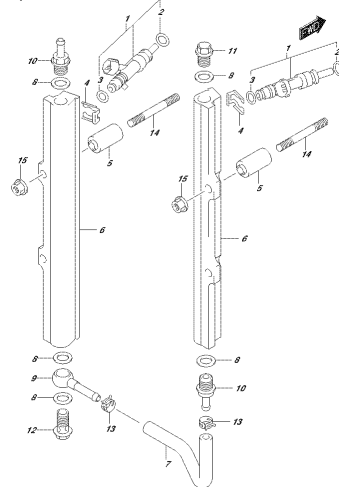


DCS80A, EPT, 016, 1404
FUEL PUMP

FIG. 144B

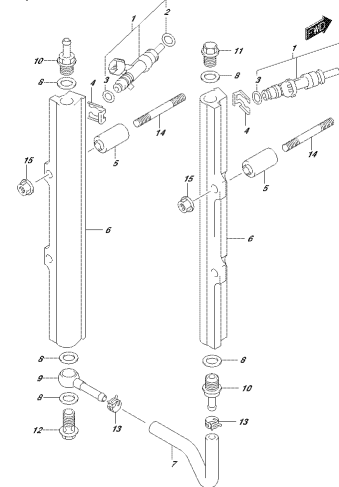


DCS80A, EPT, 016, 1405
FUEL PUMP

FIG. 147A

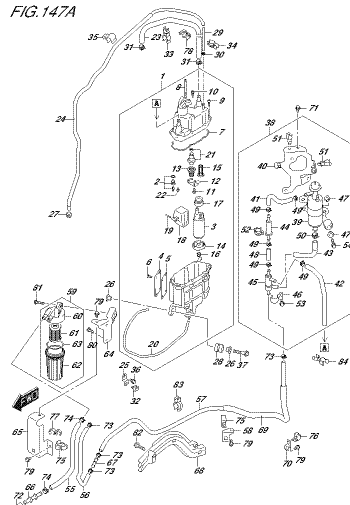


DCS80A, EPT, 016, 1474
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 147B

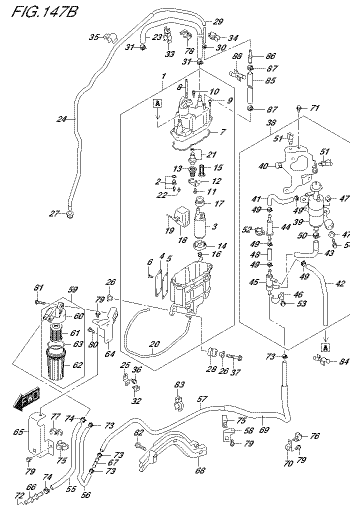


DCS80A, EPT, 016, 1475
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 147C

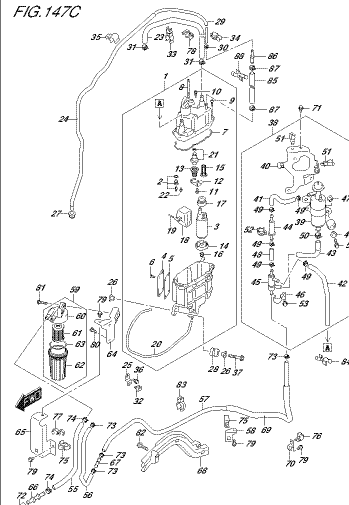

DCS80A, EPT, 016, 147C
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 147D

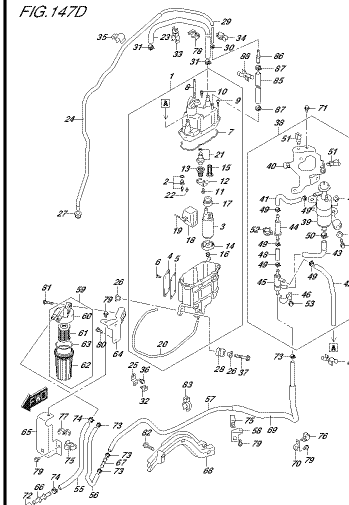

DCS80A, EPT, 016, 147D
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 160A

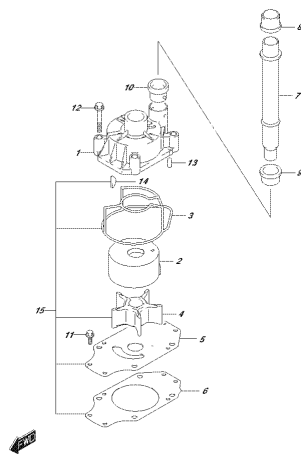
DC380A, EPT, 016, 1604
FUEL PUMP

FIG. 160B

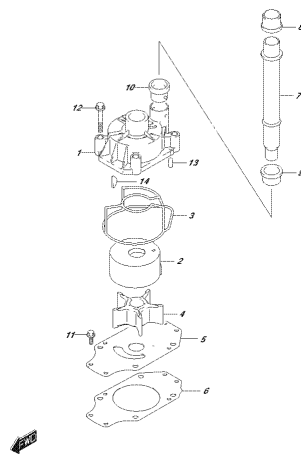
DC380A, EPT, 016, 1605
FUEL PUMP

FIG. 162A

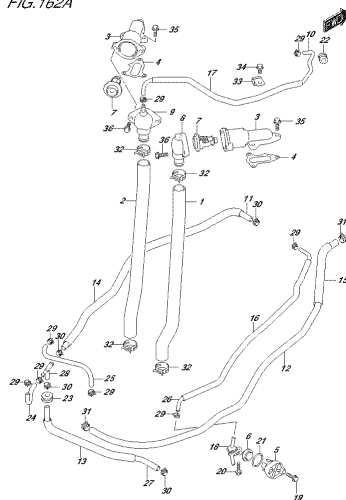
DC380A, EPT, 016, 1604
FUEL PUMP

FIG. 162B

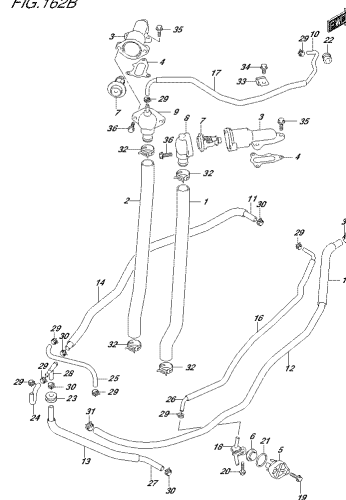
DC380A, EPT, 016, 1605
FUEL PUMP

FIG. 163A

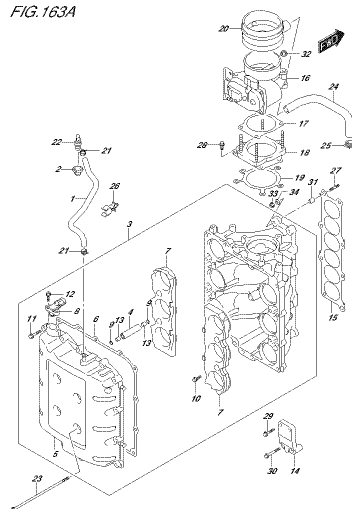
DC380A, EPT, 016, 1604
THROTTLE BODY

FIG. 175A

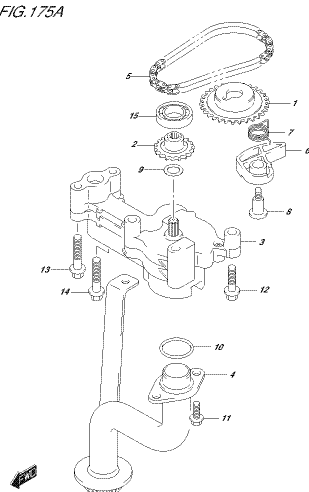
DC380A, EPT, 016, 1704
FUEL PUMP

FIG. 175B

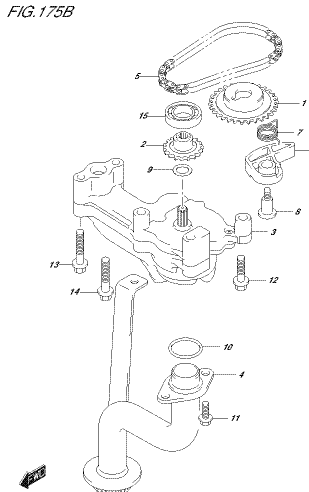
DC380A, EPT, 016, 1705
FUEL PUMP

FIG. 180A




DC380A, EPT, 016, 1804
FUEL PUMP

FIG.204A




DC380A, EPT1, 016, 3044
CLUTCH SHAFT

FIG.206A

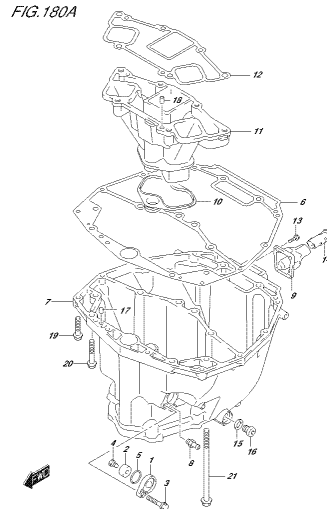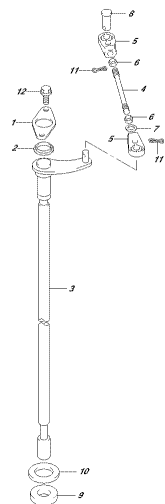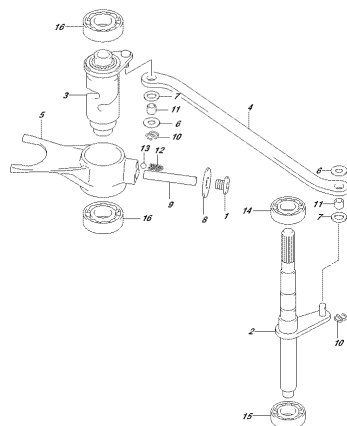


DC380A, EPT1, 016, 3044
CLUTCH SHAFT

FIG.220A

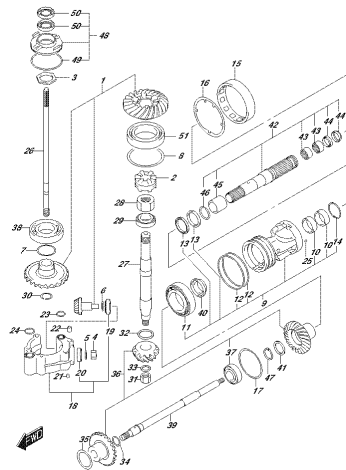


DC380A, EPT1, 016, 3044
TRANSMISSION

FIG.301A

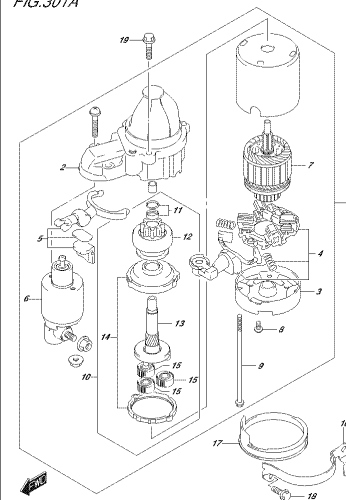


DC380A, EPT1, 016, 3014
STATOR/REAR COVER

FIG.303A

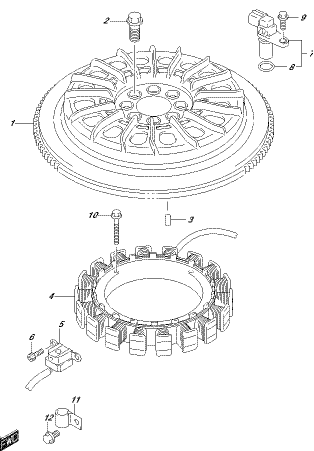


DC380A, EPT1, 016, 3044
MAGNET

FIG.310A

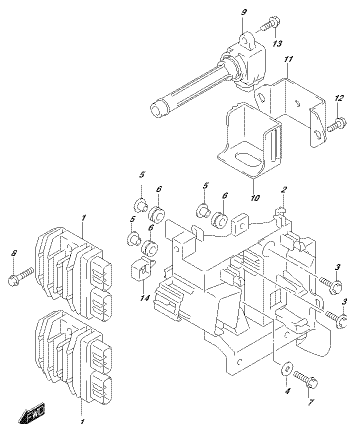


DC380A, EPT1, 016, 3104
RECTOR/REAR COVER

FIG.310B

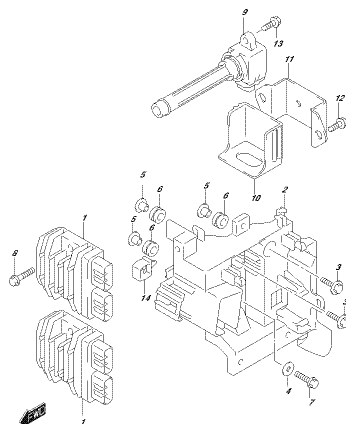


DC380A, EPT1, 016, 310B
RECTOR/REAR COVER

FIG.315A

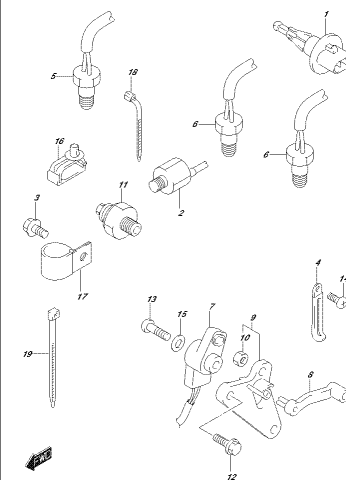


DC380A, EPT1, 016, 315A
STATOR

FIG.322A

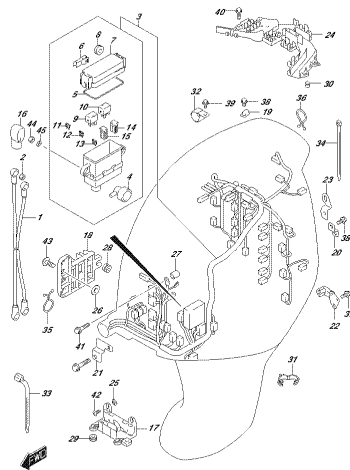


DC380A, F31, 016, S304
MAGNETIC

FIG.322B

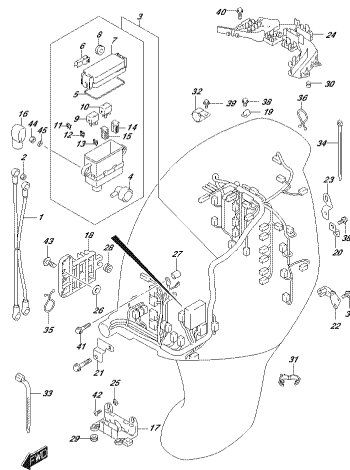


DC380A, F31, 016, S305
MAGNETIC

FIG.326A

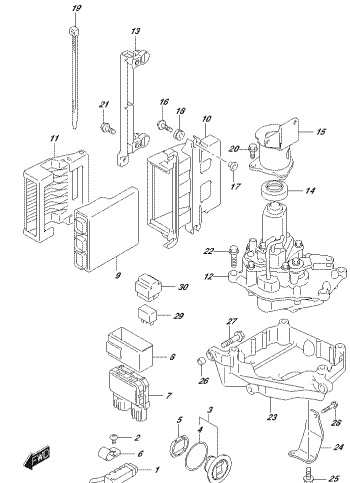


DC380A, F31, 016, S304
PIT SWITCHING-MAGNOR CONTROL UNIT

FIG.326B

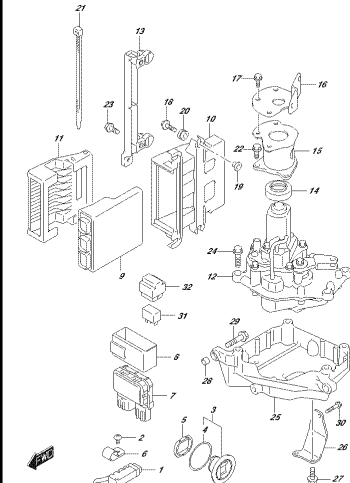


DC380A, F31, 016, S305
PIT SWITCHING-MAGNOR CONTROL UNIT

FIG.326C

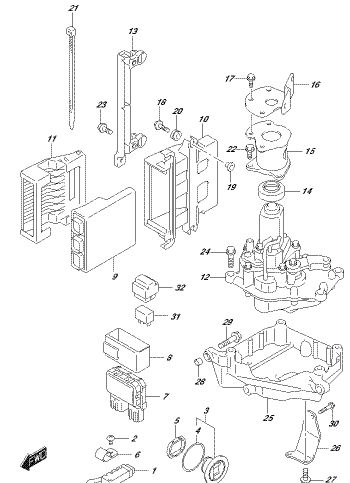


DC380A, F31, 016, S30C
PIT SWITCHING-MAGNOR CONTROL UNIT

FIG.326D

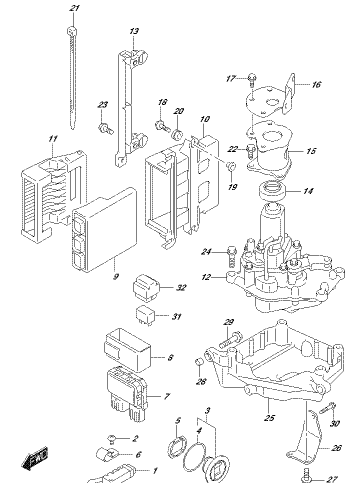


DC380A, F31, 016, S30D
PIT SWITCHING-MAGNOR CONTROL UNIT

FIG.331A

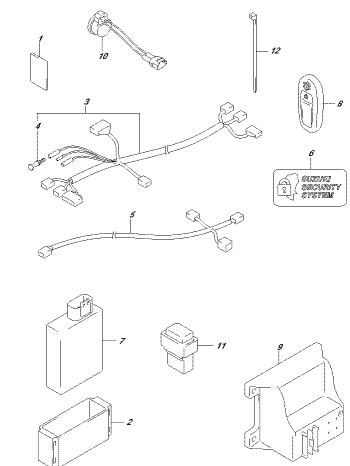


DC380A, F31, 016, S304
KEYLESS START

FIG.335A

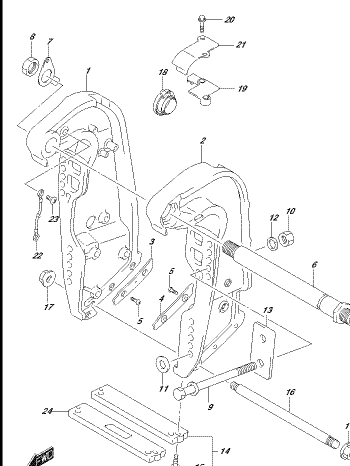


DC380A, F31, 016, S304
CLAMP BRACKET

FIG.335B

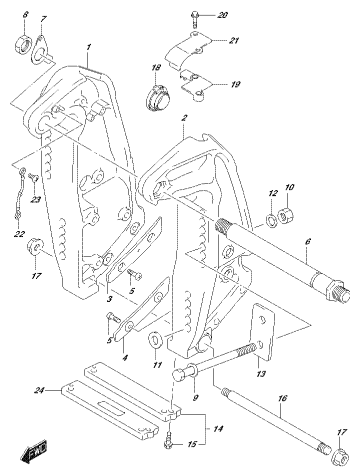


DC380A, EPT, 016, 335B
CLAMP BRACKET

FIG.335C

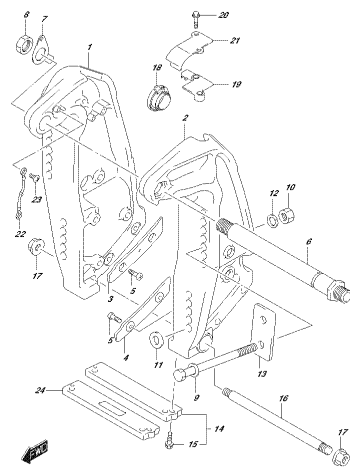


DC380A, EPT, 016, 335C
CLAMP BRACKET

FIG.336A

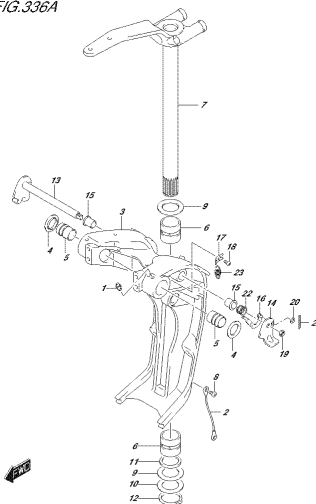


DC380A, EPT, 016, 336A
CONTROL BRACKET

FIG.337A

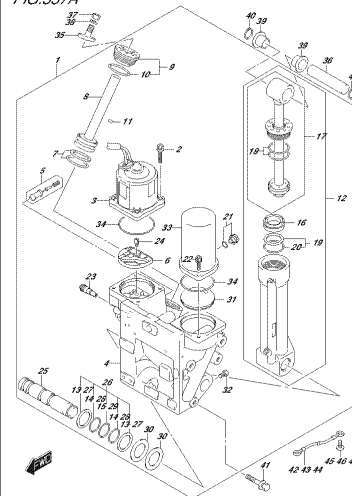


DC380A, EPT, 016, 337A
PUSH TUNER

FIG.340A

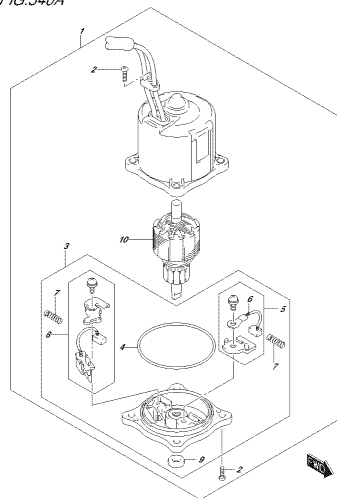


DC380A, EPT, 016, 340A
PIT METER

FIG.401A

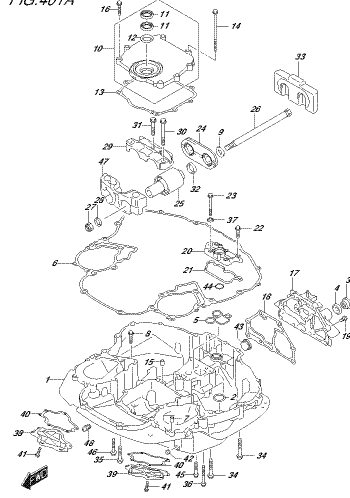


DC380A, EPT, 016, 401A
ENGINE HOLDER

FIG.405A

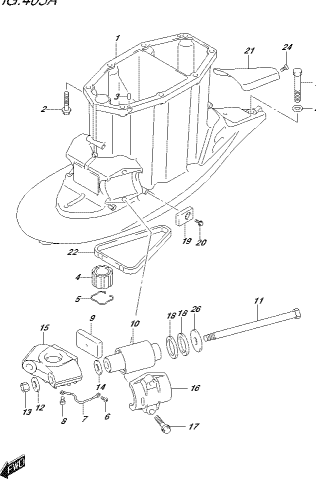


DC380A, EPT, 016, 405A
ENGINE SHAFT HOLDER

FIG.405B

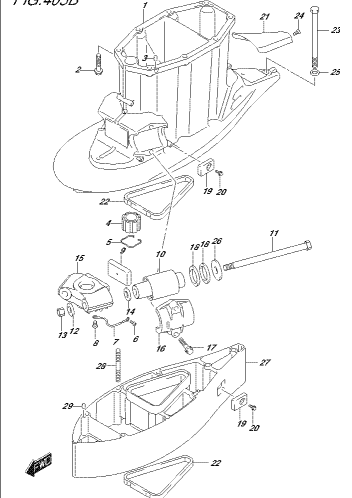


DC380A, EPT, 016, 405B
ENGINE SHAFT HOLDER

FIG.407A

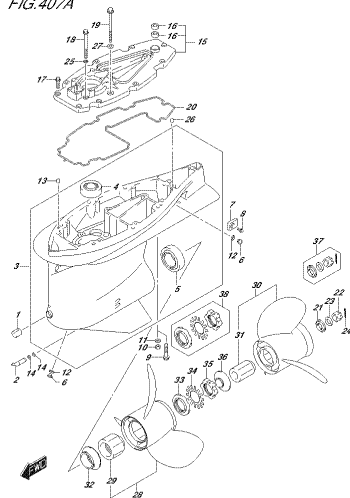


DC380A, EPT1, 016, 407A
SEA COCKLE

FIG.410A

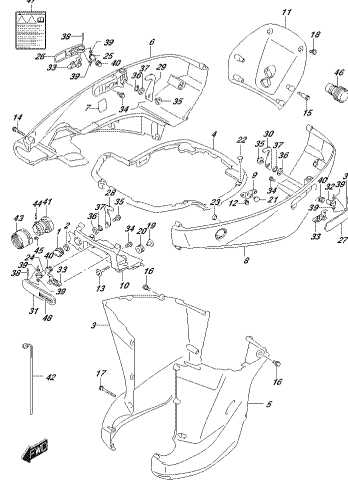


DC380A, EPT1, 016, 410A
SEA COCKLE

FIG.410B

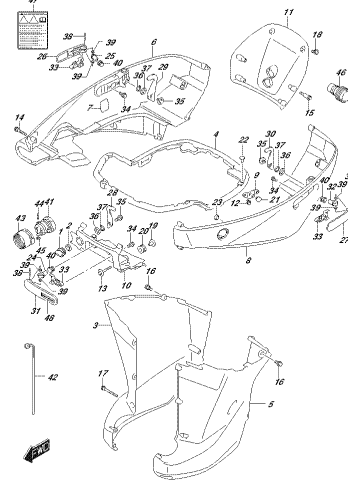


DC380A, EPT1, 016, 410B
SEA COCKLE

FIG.420A

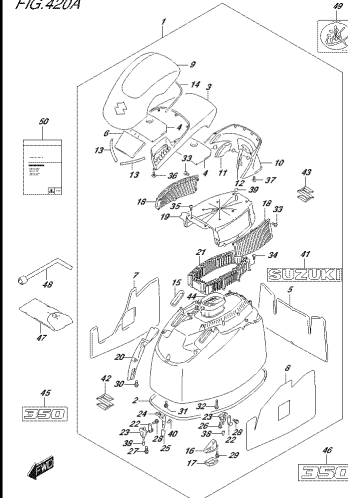


DC380A, EPT1, 016, 420A
ENGINE COVER

FIG.420B

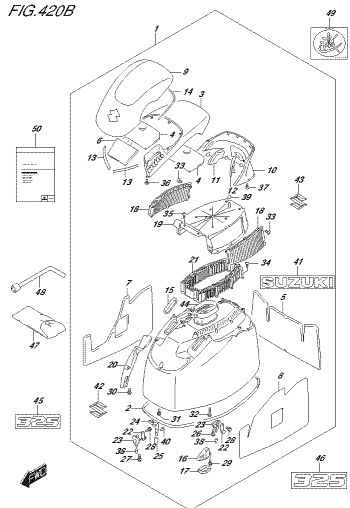


DC380A, EPT1, 016, 420B
ENGINE COVER

FIG.420C

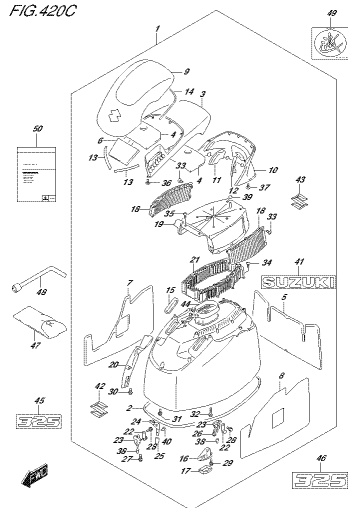


DC380A, EPT1, 016, 420C
ENGINE COVER

FIG.430A

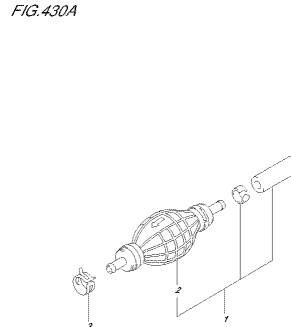


DC380A, EPT1, 016, 430A
FUEL HOSE

FIG.520A

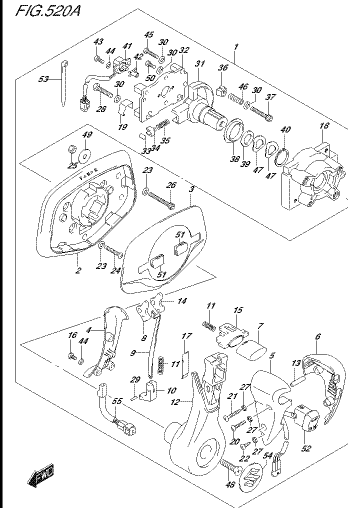


DC380A, EPT1, 016, 520A
OIL/FUEL MIXING RESERVOIR

FIG.522A

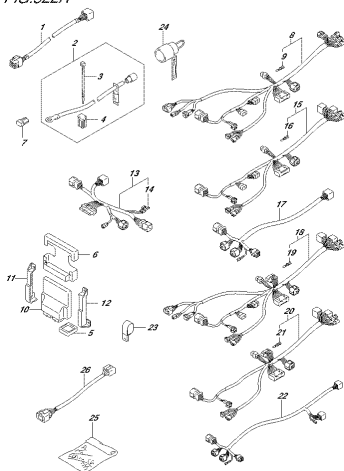


DC800A, F311, 016, S304
OPT:46146125 (7)

FIG.523A

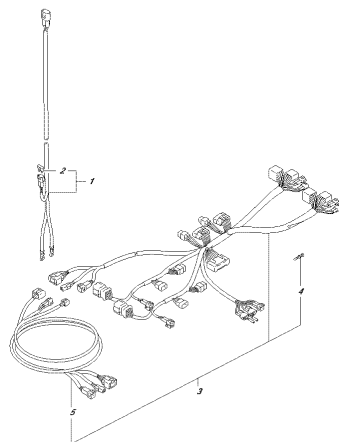


DC800A, F311, 016, S304
OPT:46146125 (7)

FIG.530A

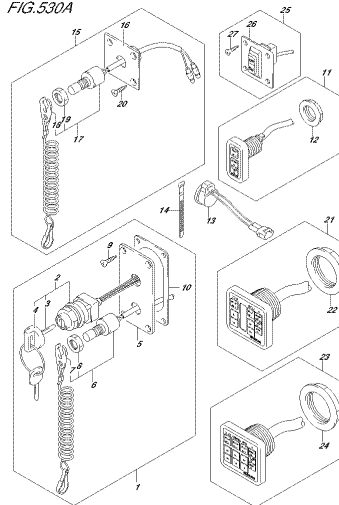


DC800A, F311, 016, S304
OPT:2007024

FIG.530B

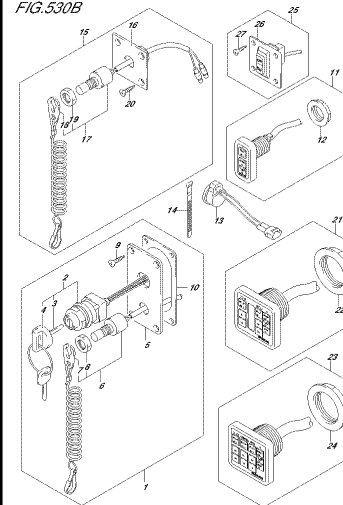


DC800A, F311, 016, S304
OPT:2007024

FIG.535A

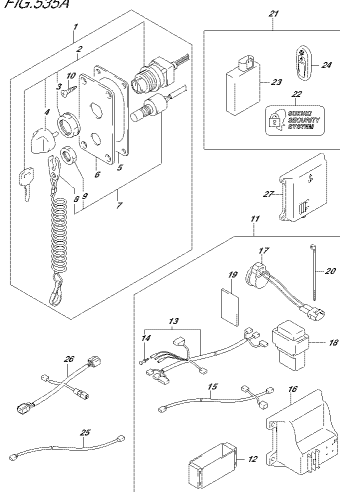


DC800A, F311, 016, S304
OPT:46146125 (7)

FIG.540A

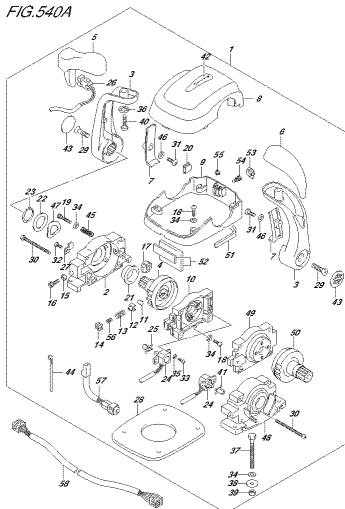


DC800A, F311, 016, S304
OPT:PARAMETRIC CONTROL ASSY DUAL

FIG.543A

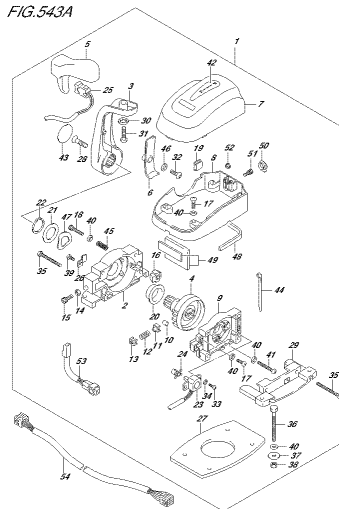


DC800A, F311, 016, S304
OPT:PARAMETRIC CONTROL ASSY SINGLE

FIG.585A

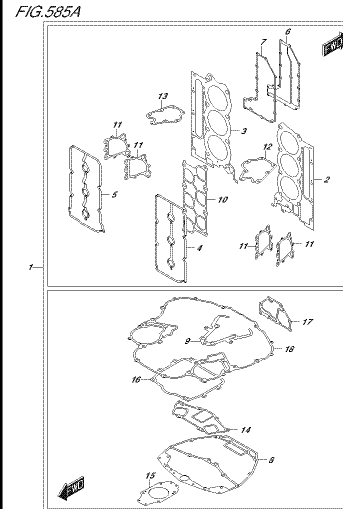


DC800A, F311, 016, S304
OPT:PARAMETRIC CONTROL ASSY SET

FIG.601A

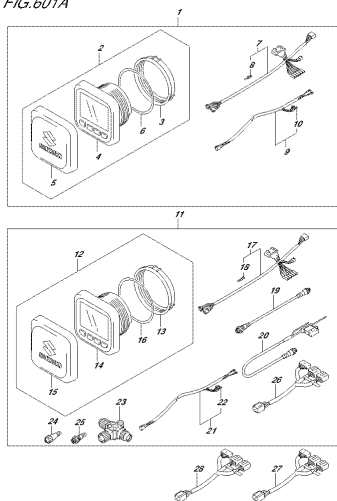

OPTIONAL KIT: 016, 601A
OPTIONAL KIT: 016, 601A

FIG.602A

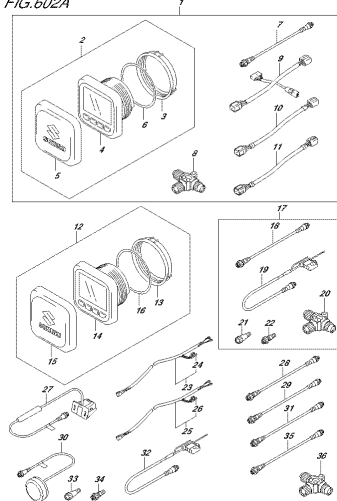

OPTIONAL KIT: 016, 602A
OPTIONAL KIT: 016, 602A

FIG.111A

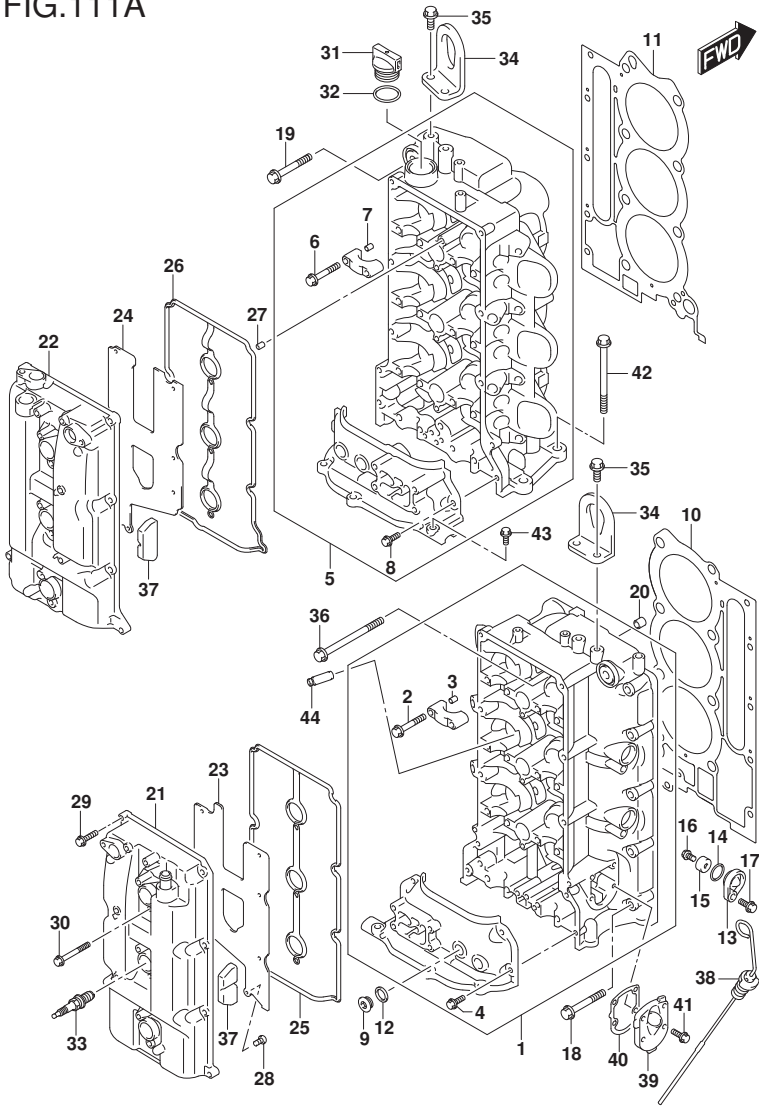


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11101-98L00	HEAD ASSY, CYLINDER STBD	1	
2	09103-06266	.BOLT (6X40)	16	
3	09206-08001	.PIN (8X11)	14	
4	01547-06207	.BOLT	4	
5	11103-98L00	HEAD ASSY, CYLINDER PORT	1	
6	09103-06266	.BOLT (6X40)	16	
7	09206-08001	.PIN (8X11)	14	
8	01547-06207	.BOLT	2	
9	11116-93J01	PLUG	4	
10	11141-98L00	GASKET, CYL HEAD STBD	1	
11	11142-98L00	GASKET, CYL HEAD PORT	1	
12	09168-16009	GASKET (16X22X0.8)	4	
13	11261-93J00	COVER, PROTECTION ANODE	4	
14	09280-22019	O RING (D:1.9,ID:21.8)	4	
15	55321-87J01	ANODE, PROTECTION	4	
16	09103-06281	BOLT (6X14)	4	
17	01550-0820C	BOLT	4	
18	01550-08607	BOLT	6	
19	01550-08607	BOLT	5	
20	09206-15001	PIN (12.4X15X17)	4	
21	11170-93J01	COVER, CYL HEAD STBD	1	
22	11180-98L00	COVER, CYLINDER HEAD PORT	1	
23	11173-93J00	PLATE, BREATHER STBD	1	
24	11183-93J00	PLATE, BREATHER PORT	1	
25	11179-93J00	GASKET, CYL HEAD COVER STBD	1	
26	11189-93J00	GASKET, CYL HEAD COVER PORT	1	
27	09206-08001	PIN (8X11)	1	
28	02142-0612A	SCREW	14	
29	01547-0625C	BOLT	16	
30	01547-06507	BOLT	6	
31	11382-93J00	CAP, OIL FILLER	1	
32	09280-26006	O RING (D:3.1,ID:26.4)	1	
33	09482-00642	SPARK PLUG (ILZKR7D8)	6	NGK
34	11291-98L00	HOOK, ENGINE	2	

FIG.111A

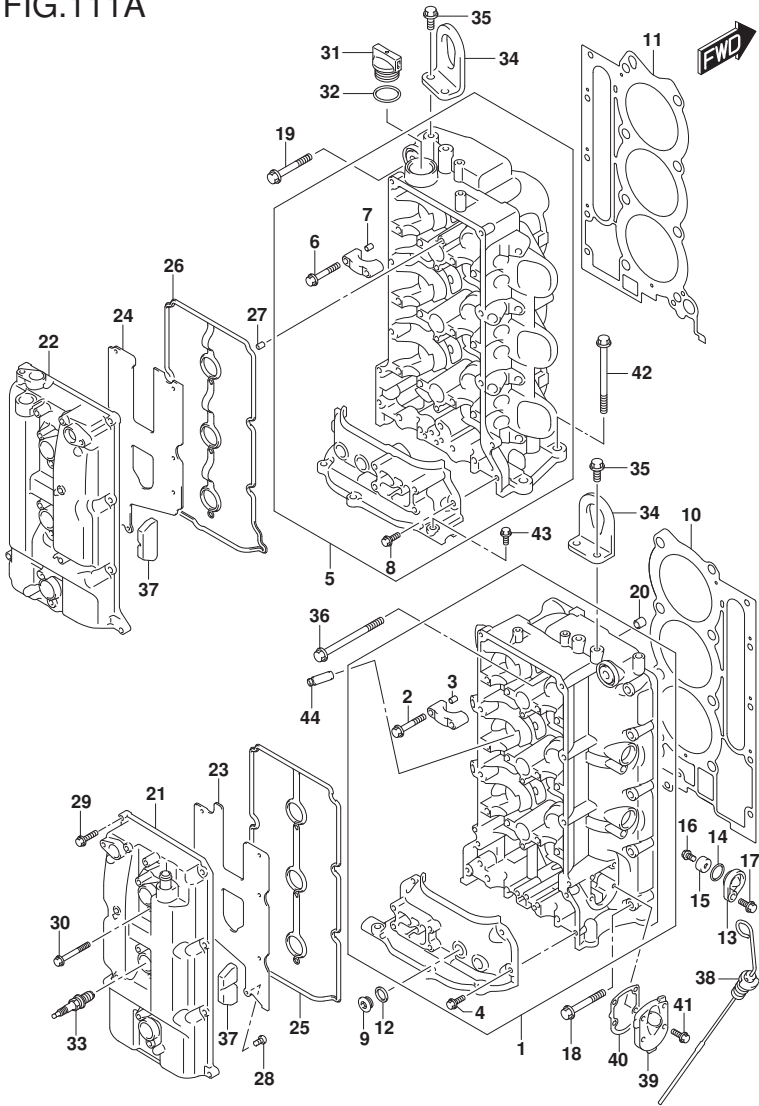


FIG.111A (1-B-3) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01550-0820C	BOLT	4	
36	11119-98L00	BOLT, CYLINDER HEAD	16	
37	11186-15501	SEPARATOR, OIL BREATHER	2	
38	16910-98L00	GAUGE, OIL LEVEL	1	
39	16931-98L00	GUIDE, OIL LEVEL GAUGE	1	
40	16941-98L00	GASKET, OIL LEVEL GAUGE GUIDE	1	
41	01550-0625C	BOLT	4	
42	09116-10146	BOLT (10X195)	2	
43	01550-0830C	BOLT	6	
44	11115-98L00-001	GUIDE, VALVE (OS:0.5)	24	OPT

FIG.113A

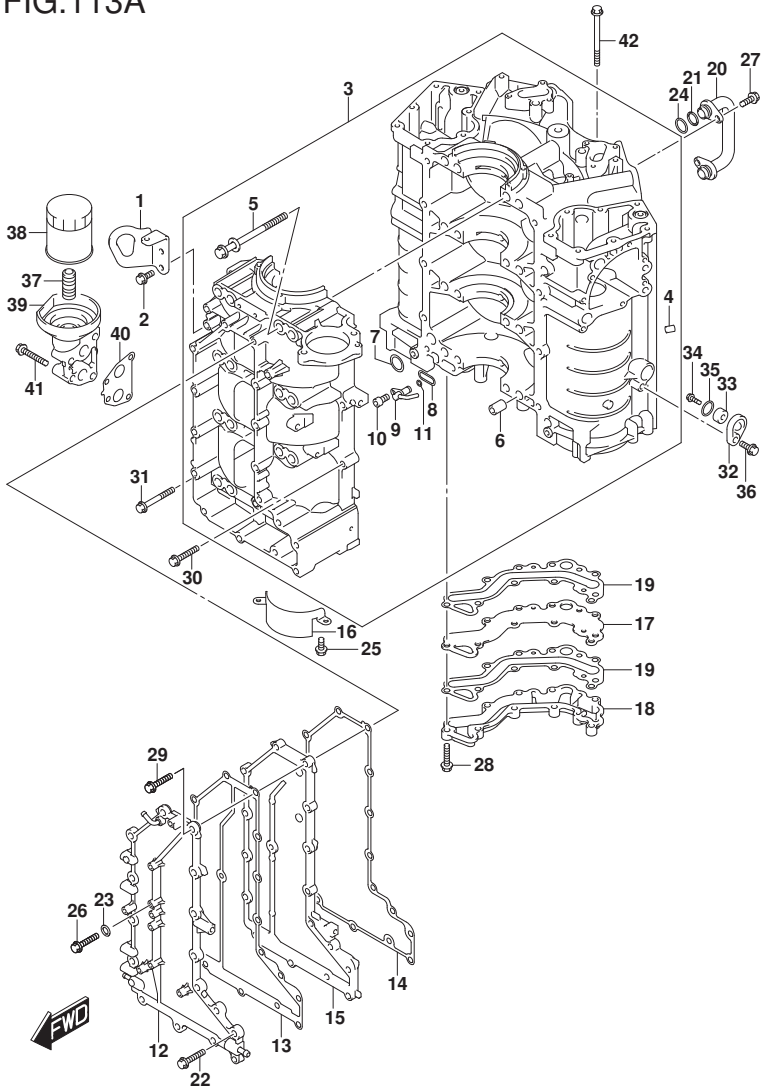


FIG.113A (1-B-4) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11293-98L00	HOOK, ENGINE FRONT	1	
2	01550-0820C	BOLT	2	
3	11301-98L00	BLOCK SET, CYLINDER	1	
4	11112-93J00	.PLUG, OIL VENTURI	2	
5	11117-98L00	.BOLT, CRANKCASE	16	
6	09206-14004	.PIN (14X11.4X23)	5	
7	11318-98L00	.GASKET, OIL GALLERY NO.1	1	
8	11319-98L00	.GASKET, OIL GALLERY NO.2	1	
9	11390-98L00	.JET, PISTON COOLING	6	
10	09106-06075	.BOLT (6X12)	6	
11	09280-05007	.O RING (D:1.2, ID:4.7)	6	
12	11330-98L00	COVER, CRANKCASE WTR JKT	1	
13	11332-98L00	GASKET, WTR JKT COVER	1	
14	11333-98L00	GASKET, CRANKCASE OIL COVER	1	
15	11334-98L00	COVER, OIL GALLERY CRANKCASE	1	
16	12247-98L00	PLATE, OIL GUARD	1	
17	16431-98L00	PLATE, OIL GALLERY	1	
18	16432-98L00	COVER, OIL GALLERY	1	
19	16433-98L00	GASKET, OIL GALLERY	2	
20	16480-98L00	PIPE, OIL GALLERY	1	
21	16485-98L00	RING, BACK UP OIL GALLERY	2	
22	09103-08379	BOLT (8X165)	1	
23	09168-06023	GASKET (5.8X13X1.2)	1	
24	09280-18004	O RING (D:2.4, ID:17.8)	2	
25	01550-0612A	BOLT	2	
26	01550-06357	BOLT	1	
27	01550-0820C	BOLT	2	
28	01550-0835A	BOLT	9	
29	01550-0840C	BOLT	13	
30	01550-08457	BOLT	7	
31	01550-08657	BOLT	1	
32	11261-93J00	COVER, PROTECTION ANODE	2	
33	55321-87J01	ANODE, PROTECTION	2	
34	09103-06281	BOLT (6X14)	2	

FIG.113A


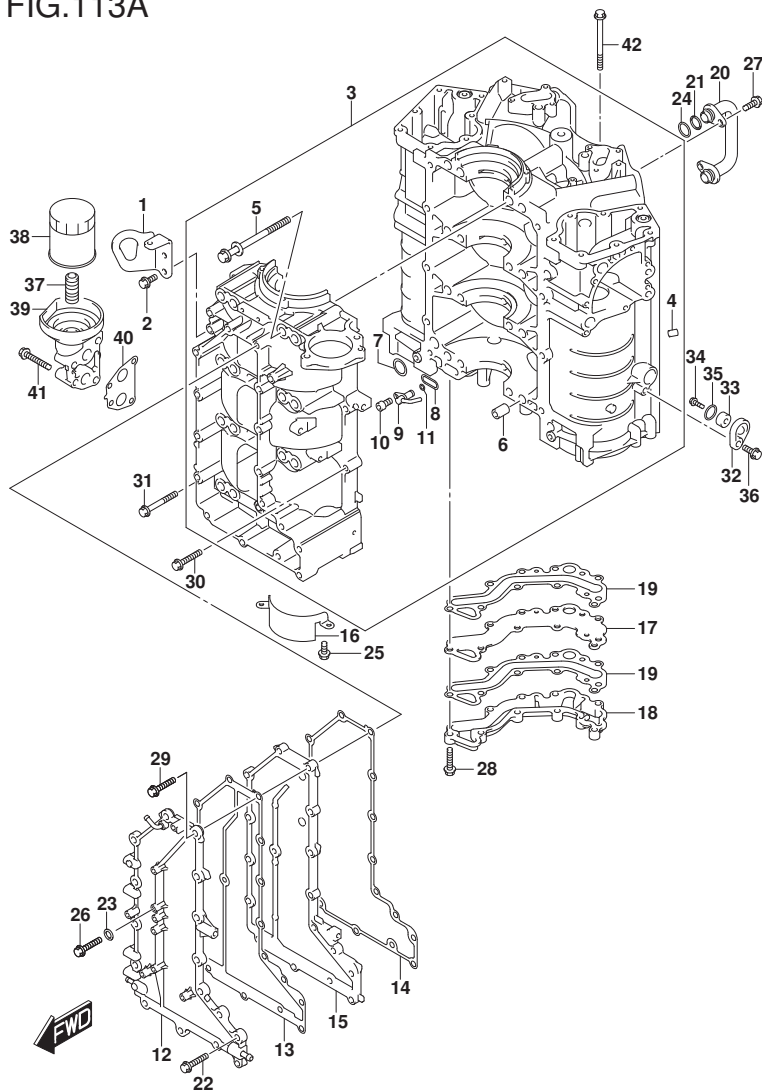


FIG.113A (1-B-5) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09280-22019	O RING (D:1.9, ID:21.8)	2	
36	01550-0820C	BOLT	2	
37	11241-86FA0	STAND, OIL FILTER	1	
38	16510-96J10	FILTER ASSY, OIL	1	
39	16531-98L00	CASE, OIL FILTER ADAPTER	1	
40	16539-98L10	GASKET, CASE	1	
41	01550-08507	BOLT	4	
42	09116-10134	BOLT (10X115)	1	

FIG.116A

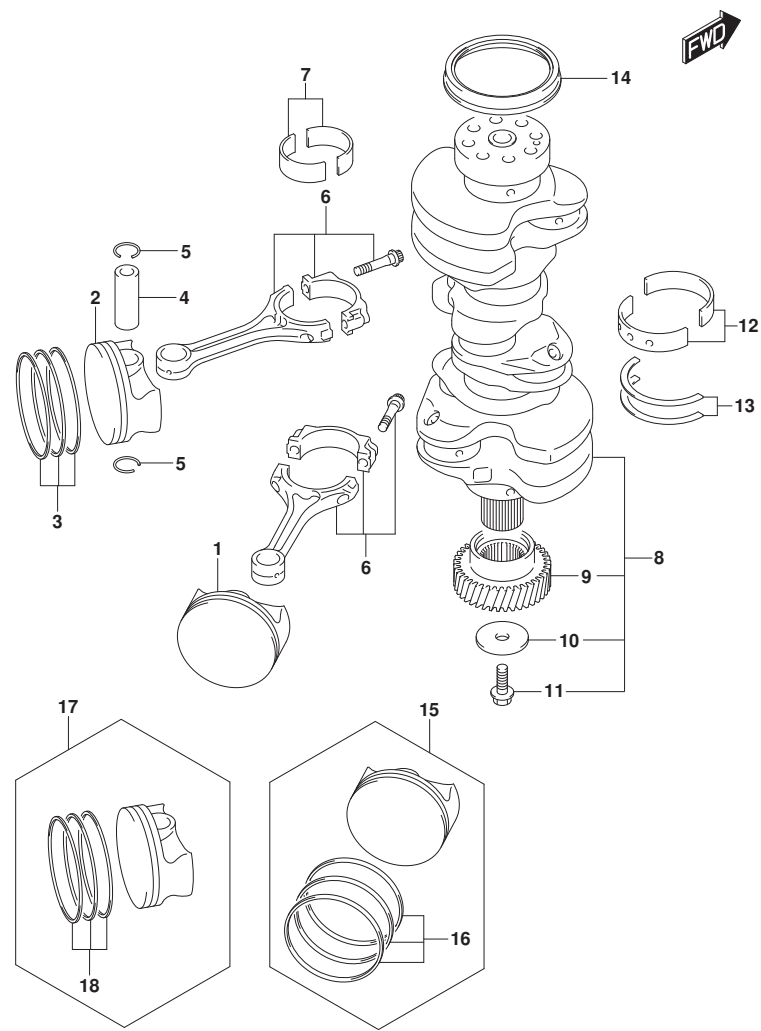

DF350A_E01_018_116A
CRANKSHAFT

FIG.116A (1-B-6) CRANKSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98L00-0B0	PISTON, STBD	3	
2	12121-98L00-0B0	PISTON, PORT	3	
3	12140-98J00	RING SET, PISTON	6	
4	12151-98L00	PIN, PISTON	6	
5	09381-22010	CIRCLIP	12	
6	12160-98L00	CONNROD ASSY	6	
7-1	12100-98810-0A0	BEARING SET, CONNROD	6	GREEN
7-2	12100-98810-025	BEARING SET, CONNROD (US:0.25)	6	OPT
8	12200-98L00	CRANKSHAFT ASSY	1	
9	12242-98J00	.GEAR, DRIVE (NT:32)	1	
10	09160-10104	.WASHER (10.5X50X3.2)	1	
11	01550-1025A	.BOLT	1	
12-1	12340-98L00-0A0	BEARING SET, CRANKSHAFT	4	BLACK
12-2	12340-98L00-0B0	BEARING SET, CRANKSHAFT	4	NON
12-3	12340-98L00-0C0	BEARING SET, CRANKSHAFT	4	YELLOW
12-4	12340-98L00-0D0	BEARING SET, CRANKSHAFT	4	BLUE
12-5	12340-98L00-0E0	BEARING SET, CRANKSHAFT	4	PINK
12-6	12300-98840-0AA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLACK
12-7	12300-98840-0BA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED
12-8	12300-98840-0CA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/YELLOW
12-9	12300-98840-0DA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLUE
12-10	12300-98840-0EA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/PINK
13-1	12300-98830	BEARING SET, CRANK THRUST	1	
13-2	12300-98830-012	BEARING SET, CRANK THRUST	1	OPT OS:0.125

DF350A_E01_018

FIG.116A

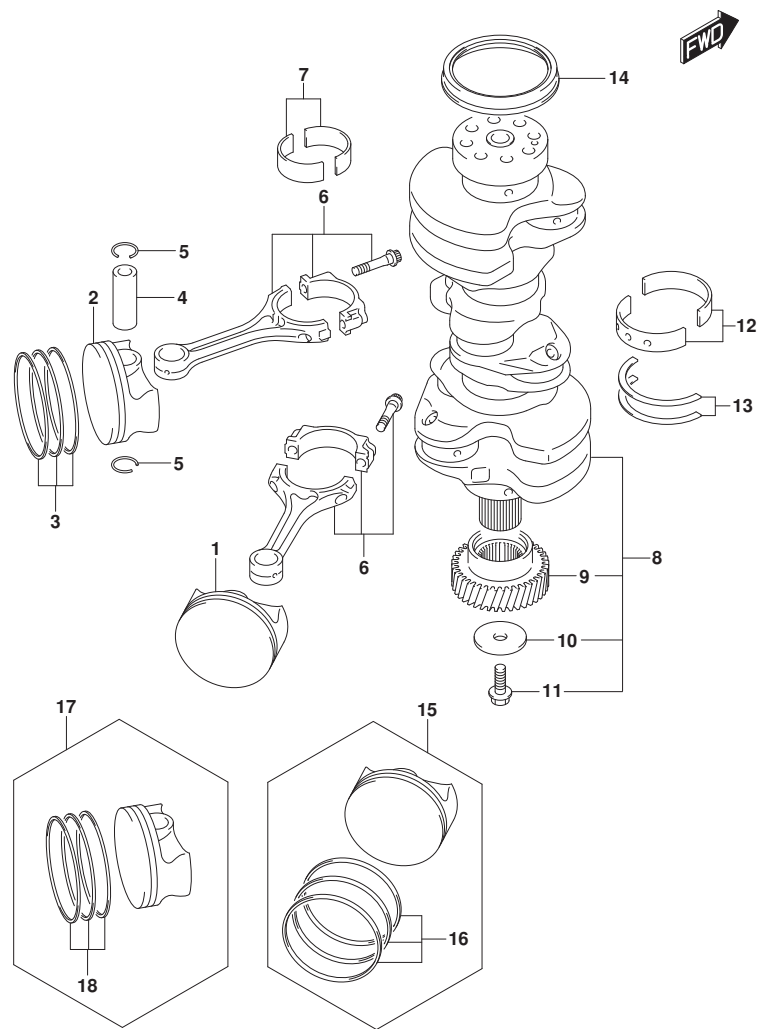


FIG.116A (1-B-7) CRANKSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
14	09283-91001	OIL SEAL (91X109X10)	1		
15	12101-98L00-050	PISTON SET, STBD (OS:0.50)	3	OPT	
16	12140-98J00-050	.RING SET, PISTON (OS:0.50)	3	OPT	
17	12102-98L00-050	PISTON SET, PORT (OS:0.50)	3	OPT	
18	12140-98J00-050	.RING SET, PISTON (OS:0.50)	3	OPT	

DF350A E01

FIG.116B


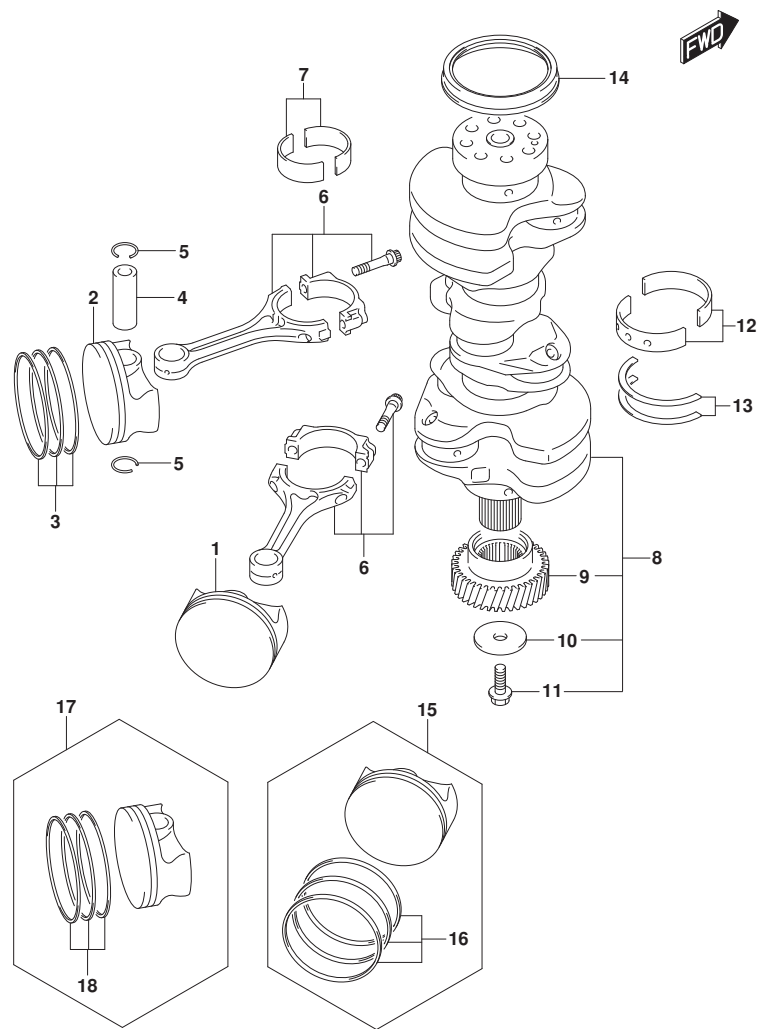



FIG.116B (1-B-8) CRANKSHAFT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98L10-0B0	PISTON, STBD	3	
2	12121-98L10-0B0	PISTON, PORT	3	
3	12140-98J00	RING SET, PISTON	6	
4	12151-98L00	PIN, PISTON	6	
5	09381-22010	CIRCLIP	12	
6	12160-98L00	CONNROD ASSY	6	
7-1	12100-98810-0A0	BEARING SET, CONNROD	6	GREEN
7-2	12100-98810-025	BEARING SET, CONNROD (US:0.25)	6	OPT
8	12200-98L00	CRANKSHAFT ASSY	1	
9	12242-98J00	.GEAR, DRIVE (NT:32)	1	
10	09160-10104	.WASHER (10.5X50X3.2)	1	
11	01550-1025A	.BOLT	1	
12-1	12340-98L00-0A0	BEARING SET, CRANKSHAFT	4	BLACK
12-2	12340-98L00-0B0	BEARING SET, CRANKSHAFT	4	NON
12-3	12340-98L00-0C0	BEARING SET, CRANKSHAFT	4	YELLOW
12-4	12340-98L00-0D0	BEARING SET, CRANKSHAFT	4	BLUE
12-5	12340-98L00-0E0	BEARING SET, CRANKSHAFT	4	PINK
12-6	12300-98840-0AA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLACK
12-7	12300-98840-0BA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED
12-8	12300-98840-0CA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/YELLOW
12-9	12300-98840-0DA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLUE
13-1	12300-98830	BEARING SET, CRANK THRUST	1	
13-2	12300-98830-012	BEARING SET, CRANK THRUST	1	OPT OS:0.125

 FIG.116B (1-B-9) CRANKSHAFT (DF325A)



DF350A_E01_018

 

DF350A_E01_018

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12730-98J02	GEAR, DRIVEN (NT:40)	1	
2	09262-40018	BEARING (40X80X18)	1	LOWER
3	09262-40017	BEARING (40X80X18)	1	UPPER
4	09283-32044	OIL SEAL (32X47X6)	1	
5	12734-98L00	HOLDER, DRIVEN GEAR	1	
6	09280-70012	O RING (D:5.7,ID:69.6)	1	
7	01550-0855A	BOLT	4	
8	12761-98L00	CHAIN, TIMING 1ST	1	
9	12762-93J00	CHAIN, TIMING 2ND	2	
10	12770-98L00	BASE, TIMING CHAIN GUIDE NO.1	1	
11	12778-98L00	GASKET, GUIDE BASE	1	
12	04211-13149	PIN	2	
13	01550-0830A	BOLT	2	
14	12771-93J00	SHOE, TIMING CHAIN UPPER	1	
15	12775-93J00	SHOE, TIMING CHAIN LOWER	1	
16	12772-98L00	GUIDE, TIMING CHAIN NO.2	1	
17	01550-0830A	BOLT	2	
18	12810-93J00	TENSIONER ASSY, TIMING CHAIN	1	
19	12813-73G00	.PAD, TIMING CHAIN TENSIONER	1	
20	12812-90J00	SPACER, TIMING CHAIN TENSIONER	1	
21	01550-0830A	BOLT	1	
22	12831-93J01	ADJUSTER ASSY, TENSIONER	1	
23	12832-93J00	TENSIONER ASSY, STBD	1	
24	12833-93J00	TENSIONER ASSY, PORT	1	
25	01550-0620A	BOLT	2	
26	01550-0620A	BOLT	4	
27	09282-17011	SEAL (16.5X28X6)	2	

Diagram illustrating the exploded view of a mechanical assembly, showing various components and their assembly sequence. The components are numbered 1 through 24. An arrow in the top right corner indicates the direction of assembly, labeled "FWD".

The assembly consists of several main shafts and associated components:

- Shaft 1:** The central vertical shaft, featuring a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 2:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 3:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 4:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 5:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 6:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 7:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 8:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 9:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 10:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 11:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 12:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 13:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 14:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 15:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 16:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 17:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 18:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 19:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 20:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 21:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 22:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 23:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.
- Shaft 24:** A vertical shaft with a large gear (5) at the bottom and a smaller gear (6) at the top.

The diagram shows the assembly sequence for the front wheel drive (FWD) system, with components 1 through 24 representing the various parts of the assembly.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98L00	CAMSHAFT, INTAKE STBD	1	
2	12705-98L00	CAMSHAFT, INTAKE PORT	1	
3	12721-98L00	CAMSHAFT, EXH STBD	1	
4	12729-98L00	CAMSHAFT, EXH PORT	1	
5	12740-98L00	SPROCKET ASSY, CAM TIMING (NT:22/32)	2	
6	12748-93J00	SPROCKET, EXH CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT, INTAKE CAMSHAFT	2	
8	12749-93J00	BOLT, CAMSHAFT EXHAUST	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE, OIL CONTROL	2	
12	16555-93J00	GASKET, VALVE	2	
13	01550-0625C	BOLT	6	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM, TAPPET (T:2.175)	AR	
15-2	12892-93J00-220	SHIM, TAPPET (T:2.200)	AR	
15-3	12892-93J00-223	SHIM, TAPPET (T:2.225)	AR	
15-4	12892-93J00-225	SHIM, TAPPET (T:2.250)	AR	
15-5	12892-93J00-228	SHIM, TAPPET (T:2.275)	AR	
15-6	12892-93J00-230	SHIM, TAPPET (T:2.300)	AR	
15-7	12892-93J00-233	SHIM, TAPPET (T:2.325)	AR	
15-8	12892-93J00-235	SHIM, TAPPET (T:2.350)	AR	
15-9	12892-93J00-238	SHIM, TAPPET (T:2.375)	AR	
15-10	12892-93J00-240	SHIM, TAPPET (T:2.400)	AR	
15-11	12892-93J00-243	SHIM, TAPPET (T:2.425)	AR	
15-12	12892-93J00-245	SHIM, TAPPET (T:2.450)	AR	
15-13	12892-93J00-248	SHIM, TAPPET (T:2.475)	AR	
15-14	12892-93J00-250	SHIM, TAPPET (T:2.500)	AR	
15-15	12892-93J00-253	SHIM, TAPPET (T:2.525)	AR	
15-16	12892-93J00-255	SHIM, TAPPET (T:2.550)	AR	
15-17	12892-93J00-258	SHIM, TAPPET (T:2.575)	AR	
15-18	12892-93J00-260	SHIM, TAPPET (T:2.600)	AR	
15-19	12892-93J00-263	SHIM, TAPPET (T:2.625)	AR	

FIG.121A

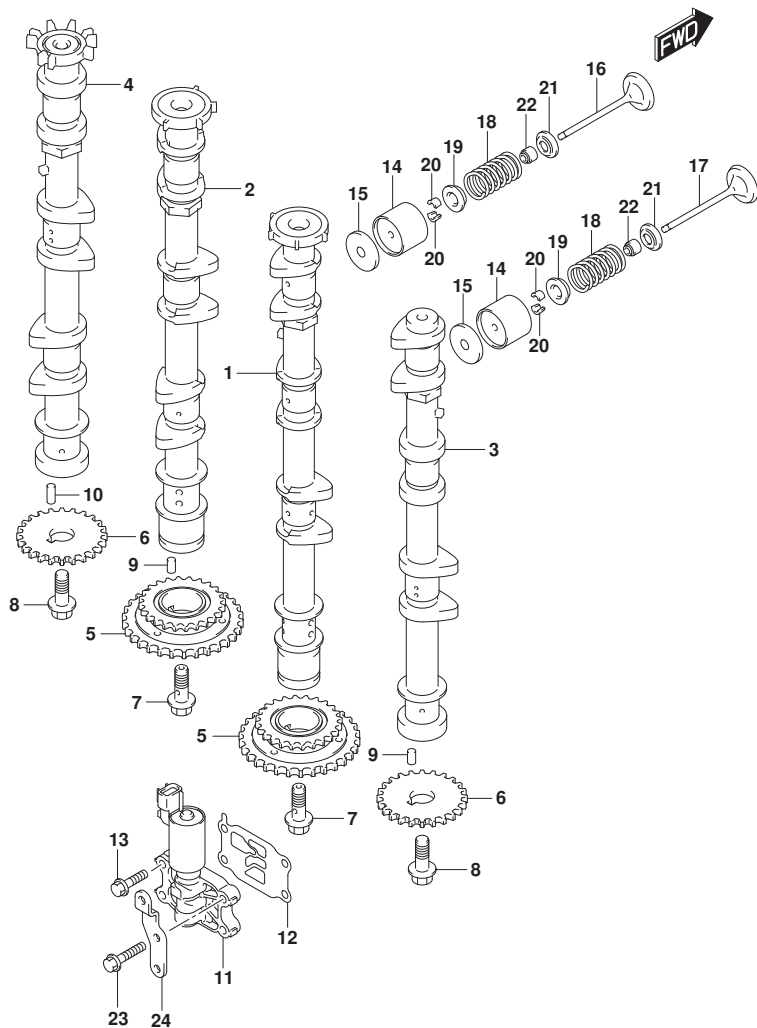


FIG.121A (1-B-12) CAMSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-20	12892-93J00-265	SHIM, TAPPET (T:2.650)	AR	
15-21	12892-93J00-268	SHIM, TAPPET (T:2.675)	AR	
15-22	12892-93J00-270	SHIM, TAPPET (T:2.700)	AR	
15-23	12892-93J00-273	SHIM, TAPPET (T:2.725)	AR	
15-24	12892-93J00-275	SHIM, TAPPET (T:2.750)	AR	
15-25	12892-93J00-278	SHIM, TAPPET (T:2.775)	AR	
15-26	12892-93J00-280	SHIM, TAPPET (T:2.800)	AR	
15-27	12892-93J00-283	SHIM, TAPPET (T:2.825)	AR	
15-28	12892-93J00-285	SHIM, TAPPET (T:2.850)	AR	
15-29	12892-93J00-288	SHIM, TAPPET (T:2.875)	AR	
15-30	12892-93J00-290	SHIM, TAPPET (T:2.900)	AR	
15-31	12892-93J00-293	SHIM, TAPPET (T:2.925)	AR	
15-32	12892-93J00-295	SHIM, TAPPET (T:2.950)	AR	
15-33	12892-93J00-298	SHIM, TAPPET (T:2.975)	AR	
15-34	12892-93J00-300	SHIM, TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE, INTAKE	12	
17	12915-98L00	VALVE, EXHAUST	12	
18	12921-98L00	SPRING, VALVE	24	
19	12931-78G00	RETAINER, VALVE SPRING	24	
20	12932-24400	COTTER, VALVE	48	
21	12933-69G10	SEAT, VALVE SPRING	24	
22	09289-05012	OIL SEAL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT	2	
24	36617-98L40	BRACKET, HARNESS	1	

DF350A E01

FIG.121B

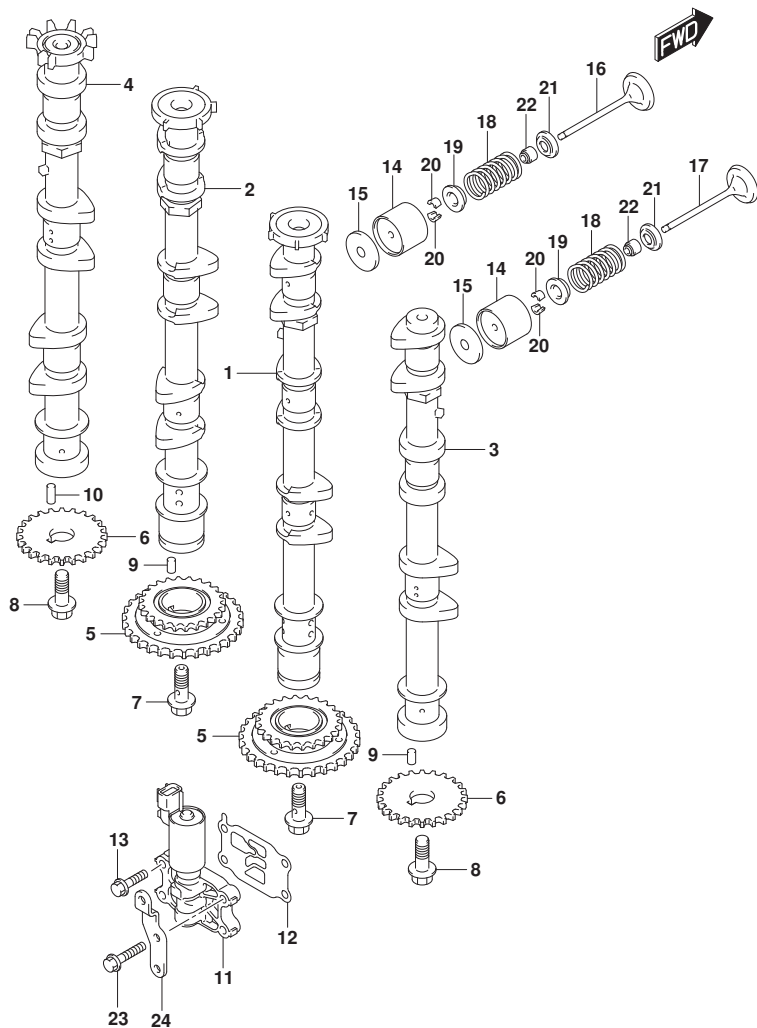


FIG.121B (1-B-13) CAMSHAFT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98L00	CAMSHAFT, INTAKE STBD	1	
2	12705-98L00	CAMSHAFT, INTAKE PORT	1	
3	12721-98L30	CAMSHAFT, EXH STBD	1	
4	12729-98L30	CAMSHAFT, EXH PORT	1	
5	12740-98L00	SPROCKET ASSY, CAM TIMING	2	
		(NT:22/32)		
6	12748-93J00	SPROCKET, EXH CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT, INTAKE CAMSHAFT	2	
8	12749-93J00	BOLT, CAMSHAFT EXHAUST	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE, OIL CONTROL	2	
12	16555-93J00	GASKET, VALVE	2	
13	01550-0625C	BOLT	6	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM, TAPPET (T:2.175)	AR	
15-2	12892-93J00-220	SHIM, TAPPET (T:2.200)	AR	
15-3	12892-93J00-223	SHIM, TAPPET (T:2.225)	AR	
15-4	12892-93J00-225	SHIM, TAPPET (T:2.250)	AR	
15-5	12892-93J00-228	SHIM, TAPPET (T:2.275)	AR	
15-6	12892-93J00-230	SHIM, TAPPET (T:2.300)	AR	
15-7	12892-93J00-233	SHIM, TAPPET (T:2.325)	AR	
15-8	12892-93J00-235	SHIM, TAPPET (T:2.350)	AR	
15-9	12892-93J00-238	SHIM, TAPPET (T:2.375)	AR	
15-10	12892-93J00-240	SHIM, TAPPET (T:2.400)	AR	
15-11	12892-93J00-243	SHIM, TAPPET (T:2.425)	AR	
15-12	12892-93J00-245	SHIM, TAPPET (T:2.450)	AR	
15-13	12892-93J00-248	SHIM, TAPPET (T:2.475)	AR	
15-14	12892-93J00-250	SHIM, TAPPET (T:2.500)	AR	
15-15	12892-93J00-253	SHIM, TAPPET (T:2.525)	AR	
15-16	12892-93J00-255	SHIM, TAPPET (T:2.550)	AR	
15-17	12892-93J00-258	SHIM, TAPPET (T:2.575)	AR	
15-18	12892-93J00-260	SHIM, TAPPET (T:2.600)	AR	
15-19	12892-93J00-263	SHIM, TAPPET (T:2.625)	AR	

FIG.121B

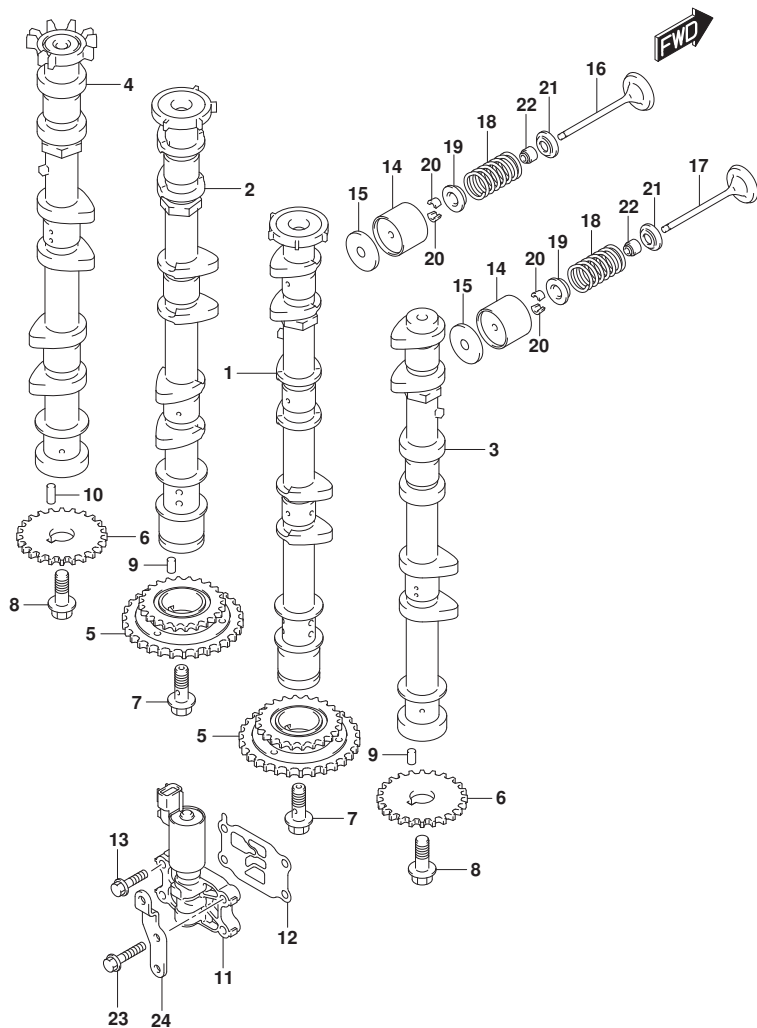


FIG.121B (1-B-14) CAMSHAFT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-20	12892-93J00-265	SHIM, TAPPET (T:2.650)	AR	
15-21	12892-93J00-268	SHIM, TAPPET (T:2.675)	AR	
15-22	12892-93J00-270	SHIM, TAPPET (T:2.700)	AR	
15-23	12892-93J00-273	SHIM, TAPPET (T:2.725)	AR	
15-24	12892-93J00-275	SHIM, TAPPET (T:2.750)	AR	
15-25	12892-93J00-278	SHIM, TAPPET (T:2.775)	AR	
15-26	12892-93J00-280	SHIM, TAPPET (T:2.800)	AR	
15-27	12892-93J00-283	SHIM, TAPPET (T:2.825)	AR	
15-28	12892-93J00-285	SHIM, TAPPET (T:2.850)	AR	
15-29	12892-93J00-288	SHIM, TAPPET (T:2.875)	AR	
15-30	12892-93J00-290	SHIM, TAPPET (T:2.900)	AR	
15-31	12892-93J00-293	SHIM, TAPPET (T:2.925)	AR	
15-32	12892-93J00-295	SHIM, TAPPET (T:2.950)	AR	
15-33	12892-93J00-298	SHIM, TAPPET (T:2.975)	AR	
15-34	12892-93J00-300	SHIM, TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE, INTAKE	12	
17	12915-98L00	VALVE, EXHAUST	12	
18	12921-98L00	SPRING, VALVE	24	
19	12931-78G00	RETAINER, VALVE SPRING	24	
20	12932-24400	COTTER, VALVE	48	
21	12933-69G10	SEAT, VALVE SPRING	24	
22	09289-05012	OIL SEAL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT	2	
24	36617-98L40	BRACKET, HARNESS	1	

DF325A E01
DF325A E40

FIG.122A

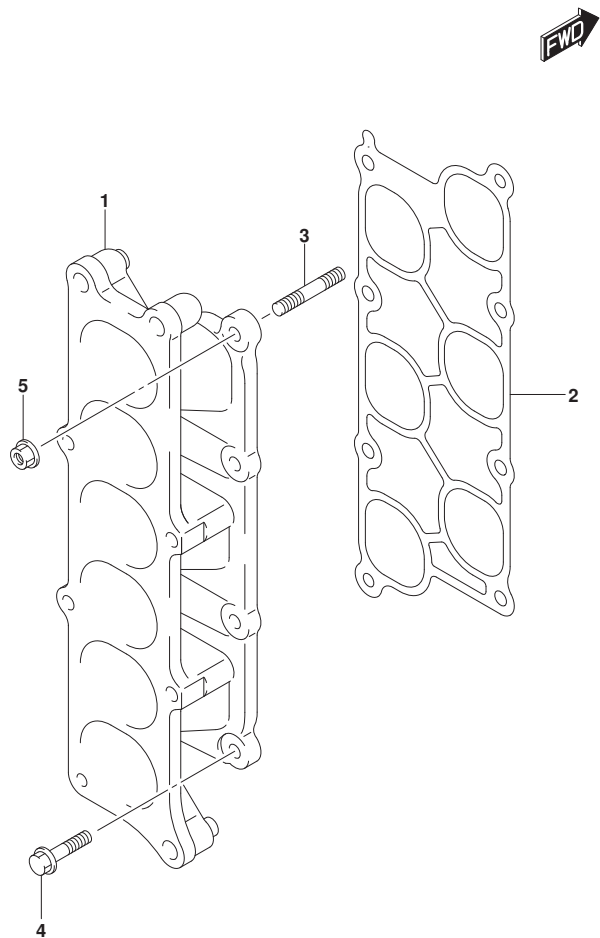


FIG.122A (1-B-15) INTAKE MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-98L00	MANIFOLD, INTAKE	1	
2	13119-98L00	GASKET, INTAKE MANIFOLD	1	
3	09108-08143	STUD BOLT	2	
4	09116-08158	BOLT (8X35)	6	
5	08316-1008C	NUT	2	

FIG.136A

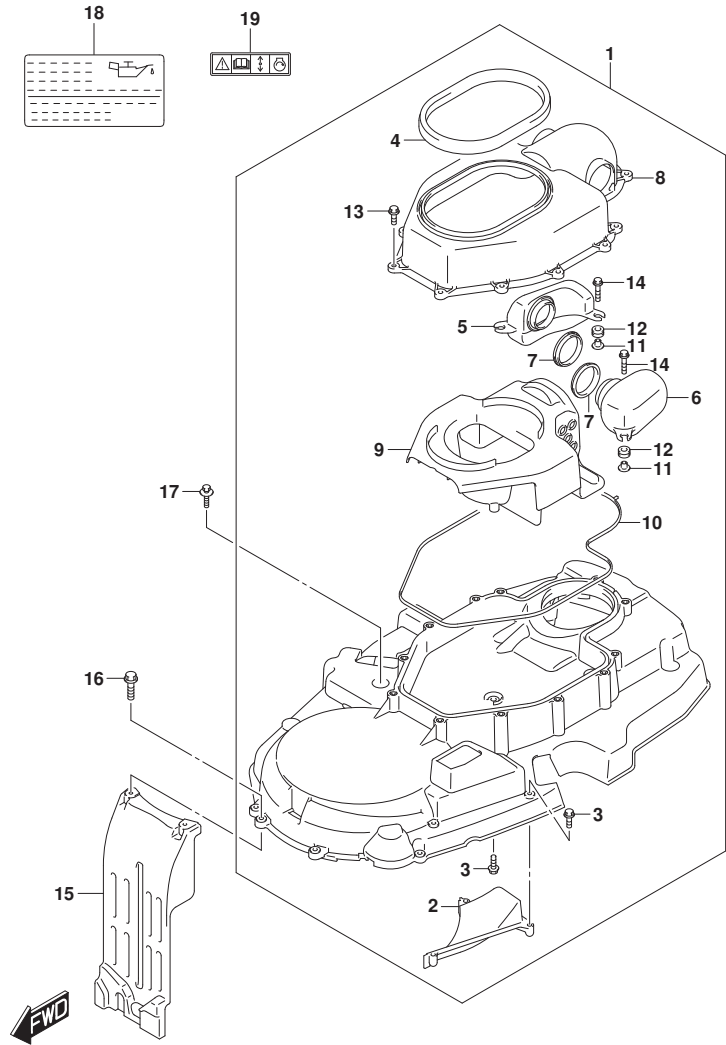


FIG.136A (1-C-2) RING GEAR COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11510-98L01	COVER, RING GEAR	1	
2	11514-98J00	.PLATE, RING GEAR COVER	1	
3	11517-98J00	.SCREW	6	
4	11531-98L00	.SEAL, SILENCER UPPER	1	
5	13761-98L00	.RESONATOR, STBD	1	
6	13762-98L00	.RESONATOR, PORT	1	
7	13766-98L00	.GROMMET, RESONATOR	2	
8	13811-98L00	.SILENCER, UPPER COVER	1	
9	13812-98L00	.SILENCER, INNER	1	
10	13851-98L00	.SEAL, SILENCER	1	
11	09169-06062	.WASHER	4	
12	09320-09016	.CUSHION	4	
13	01550-0620C	.BOLT	8	
14	01550-0630C	.BOLT	4	
15	11522-98L01	COVER, RING GEAR FRONT	1	
16	01550-0625C	BOLT	4	
17	09116-06215	BOLT (6X30)	4	
18	61494-93J00	LABEL, OIL & CLEARANCE	1	
19	69711-93E10	LABEL, S.I.G.P.	1	

FIG.140A

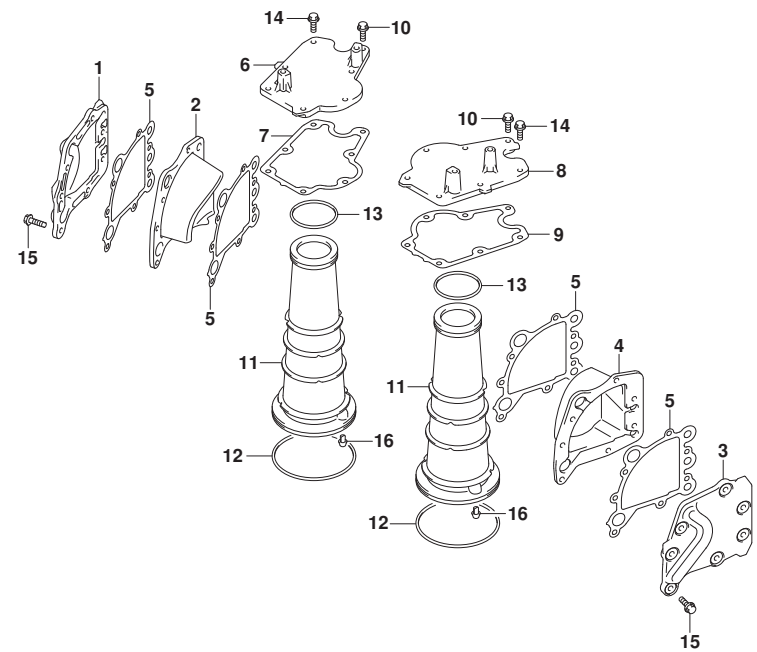


FIG.140A (1-C-3) EXHAUST COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	14141-98L00	COVER, EXHAUST STBD	1	
2	14161-98L00	COVER, EXHAUST INNER STBD	1	
3	14142-98L00	COVER, EXHAUST PORT	1	
4	14162-98L00	COVER, EXHAUST INNER PORT	1	
5	14151-98L00	GASKET, EXHAUST COVER	4	
6	14171-98L00	COVER, EXHAUST UPPER STBD	1	
7	14181-98L00	GASKET, EXH UPPER COVER STBD	1	
8	14172-98L00	COVER, EXHAUST UPPER PORT	1	
9	14182-98L00	GASKET, EXH UPPER COVER PORT	1	
10	09116-06228	BOLT (6X20)	2	
11	14111-98L00	PIPE, EXHAUST INNER	2	
12	09280-00049	O RING (D:3.5,ID:99.6)	2	
13	09280-55001	O RING (D:3.5,ID:54.4)	2	
14	01550-0620C	BOLT	12	
15	01550-0625C	BOLT	14	
16	14112-98L00	CUSHION, EXH PIPE	4	



FIG.144A

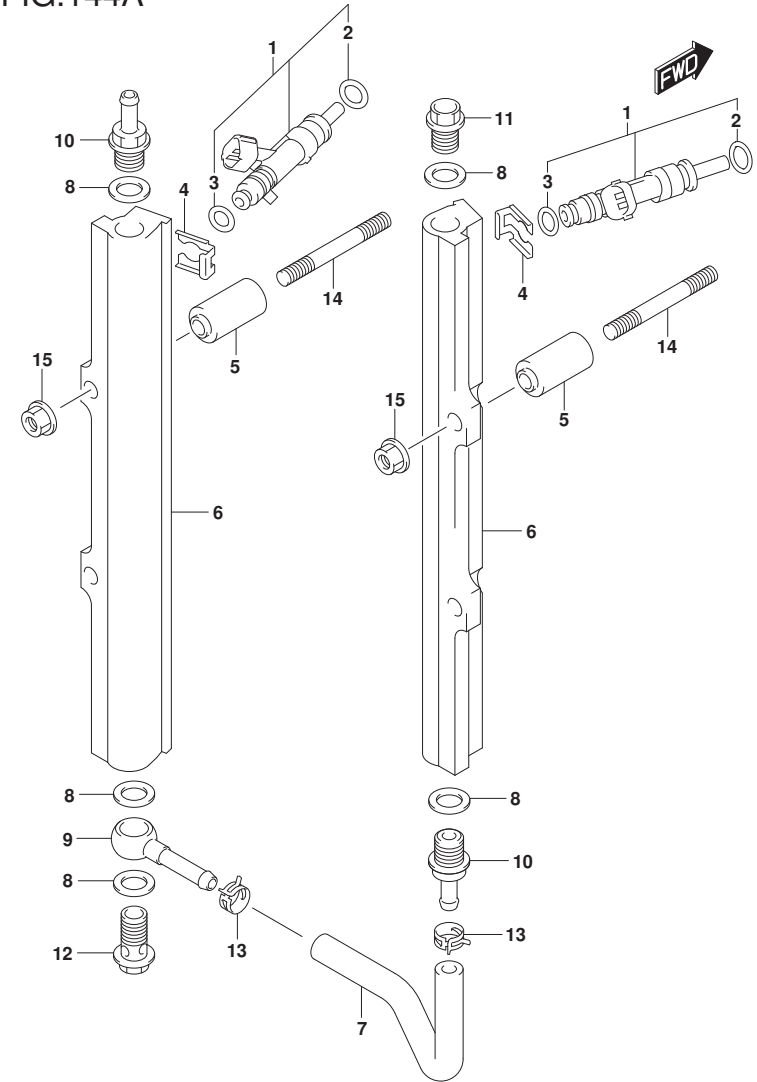


FIG.144A (1-C-4) FUEL INJECTOR (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-98L00	INJECTOR ASSY, FUEL	12	
2	15716-82M00	.O RING, LOWER	12	
3	15717-82M00	.O RING, UPPER	12	
4	15715-98L00	CLIP, INJECTOR	12	
5	15735-98L00	INSULATOR, DELIVERY PIPE	4	
6	15751-98L00	PIPE, DELIVERY	2	
7	15756-98L00	HOSE, FUEL (DLVY TO DLVY)	1	
8	15762-93J00	GASKET, DELIVERY PIPE	5	
9	15830-77EA0	UNION, DELIVERY PIPE	1	
10	15831-93J00	UNION, DELIVERY PIPE	2	
11	09247-14041	PLUG (14X14)	1	
12	09360-14009	UNION	1	
13	09401-11425	CLIP	2	
14	09108-08189	STUD BOLT	4	
15	08316-1008C	NUT	4	

DF350A E01
DF325A E01

FIG.144B

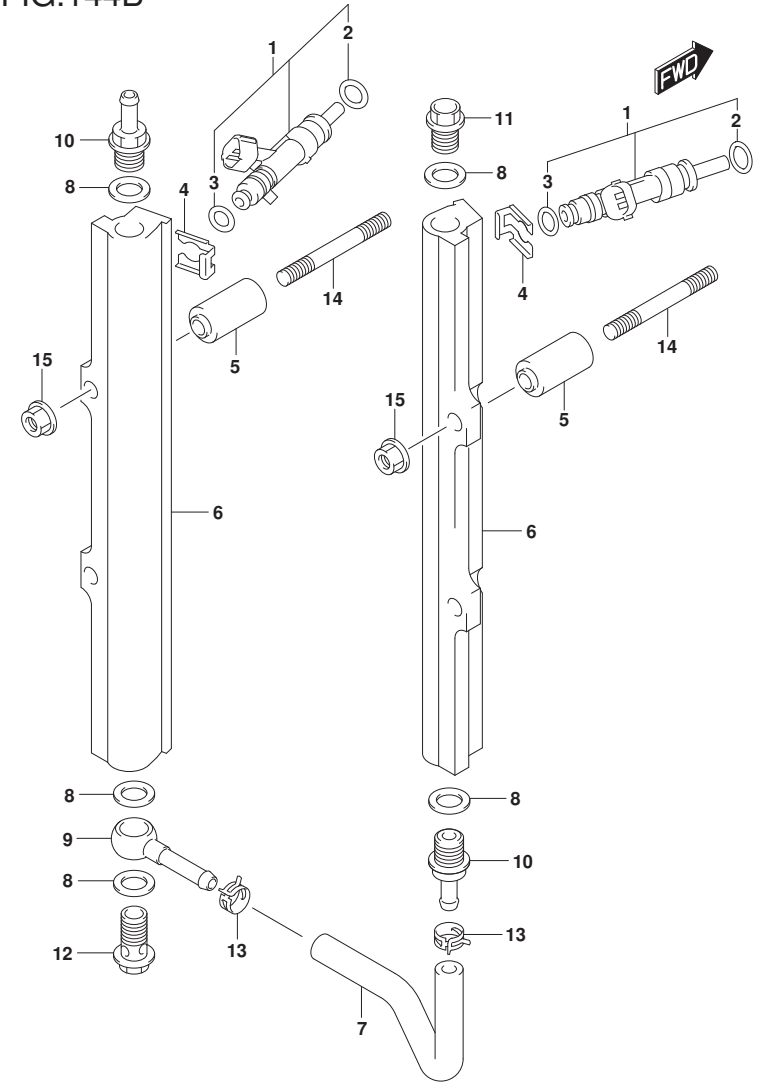


FIG.144B (1-C-5) FUEL INJECTOR (E40)


REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-98L00	INJECTOR ASSY, FUEL	12	
2	15716-82M00	.O RING, LOWER	12	
3	15717-82M00	.O RING, UPPER	12	
4	15715-98L00	CLIP, INJECTOR	12	
5	15735-98L00	INSULATOR, DELIVERY PIPE	4	
6	15751-98L00	PIPE, DELIVERY	2	
7	15756-98L00	HOSE, FUEL (DLVY TO DLVY)	1	
8	15762-93J10	GASKET, DELIVERY PIPE	5	
9	15832-93J00	UNION, DELIVERY PIPE	1	
10	15831-93J00	UNION, DELIVERY PIPE	2	
11	09247-14042	PLUG (14X14)	1	
12	09360-14014	UNION	1	
13	09401-11425	CLIP	2	
14	09108-08189	STUD BOLT	4	
15	08316-1008C	NUT	4	

DF325A E40

[illegible]

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L00	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-98L00	.VALVE ASSY, NEEDLE	1	
3	15200-98L00	.PUMP ASSY, FUEL (H)	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J00	.GASKET, SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW, DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L00	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L00	.BUSH, FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE, DRAIN	1	
21	15760-98L00	.REGULATOR, FUEL PRESSURE	1	
22	02142-0408B	.SCREW	1	
23	15681-98L00	HOSE, FUEL (V/S TO DLVY)	1	
24	18498-98L20	PROTECTOR, EVAP HOSE	1	
25	36617-93J10	BRACKET, HOSE CLAMP	1	
26	09169-08042	WASHER	6	
27	09320-08086	CUSHION	1	
28	09320-12072	CUSHION	3	
29	09352-50003-30A	HOSE (5X8.2X1300)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP	1	
34	09408-00142	CLIP	3	

FIG.147A

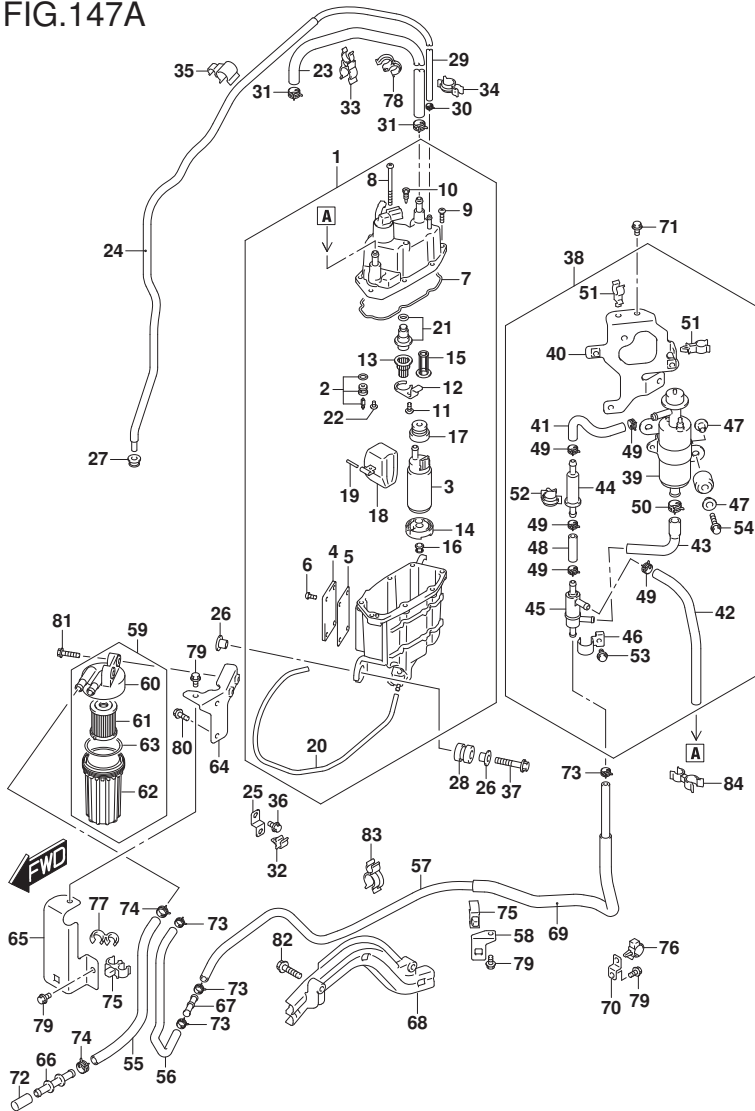

DF350A_E01_018_147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147A (1-C-7) FUEL PUMP/FUEL VAPOR SEPARATOR (DF350A:UP TO VIN.811874)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	CLAMP	3	
36	01550-0612C	BOLT	1	
37	01550-0840C	BOLT	3	
38	15100-98L00	PUMP SET, FUEL (L)	1	
39	15100-94900	.PUMP ASSY, FUEL (L)	1	
40	15116-98L00	.BRACKET, FUEL PUMP (L)	1	
41	15632-98L00	.HOSE, FUEL (PUMP TO FILTER)	1	
42	15635-98L00	.HOSE, FUEL (VALVE TO VST)	1	
43	15637-98L00	.HOSE, FUEL (VALVE TO PUMP)	1	
44	15643-98L00	.FILTER, FUEL (L)	1	
45	15645-93J10	.VALVE, CHECK	1	
46	15674-98L00	.CLIP, CHECK VALVE	1	
47	09169-06062	.WASHER	4	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	7	
50	09401-15414	.CLIP	1	
51	09403-13310	.CLAMP	2	
52	09403-16307	.CLAMP	1	
53	01550-0612C	.BOLT	1	
54	01550-0630C	.BOLT	2	
55	15191-98L00	HOSE, FUEL (CONN TO FILTER)	1	
56	15192-98L00	HOSE, FUEL (FILTER TO 2WAY)	1	
57	15193-98L00	HOSE, FUEL (2WAY TO 2WAY)	1	
58	15198-98L00	BRACKET, FUEL HOSE	1	
59	15410-98L00	FILTER, FUEL (L)	1	
60	15411-93J10	.CAP, FUEL FILTER	1	
61	15412-93J10	.FILTER ASSY, FUEL	1	
62	15413-98L00	.CASE ASSY, FUEL FILTER	1	
63	15415-93J10	.SEAL, FUEL FILTER NO.1	1	
64	15421-98L00	BRACKET, FUEL FILTER (L)	1	
65	15423-98L00	GUARD, FUEL HOSE	1	
66	15830-98J01	JOINT, FUEL HOSE	1	
67	15831-96J00	UNION, 2 WAY FUEL HOSE	1	
68	15852-98L00	GUIDE, FUEL HOSE	1	

FIG.147A

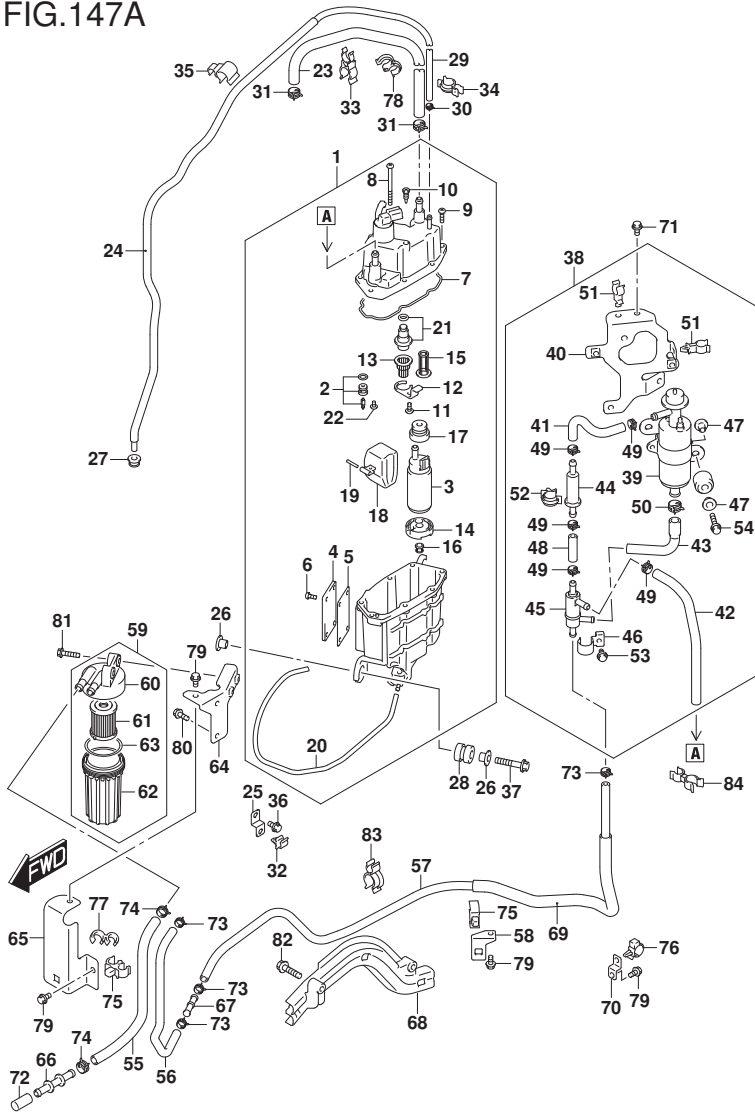


FIG.147A (1-C-8) FUEL PUMP/FUEL VAPOR SEPARATOR (DF350A:UP TO VIN.811874)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
69	18498-99E10	PROTECTOR, FUEL HOSE (610)	1	L:610->450
70	36617-93J10	BRACKET, FUEL HOSE	1	
71	09103-06267	BOLT (6X18)	2	
72	09251-09005	CAP	1	
73	09401-11423	CLIP	4	
74	09401-13423	CLIP	2	
75	09403-13308	CLAMP	2	
76	09403-17403	CLAMP	1	
77	09408-00121	CLAMP	1	
78	09408-00155	CLIP	1	
79	01550-0612C	BOLT	4	
80	01550-0616C	BOLT	2	
81	01550-0625C	BOLT	2	
82	01550-0630C	BOLT	2	
83	09408-00142	CLIP	1	
84	09408-00054	CLAMP	1	

DF350A E01

FIG.147B


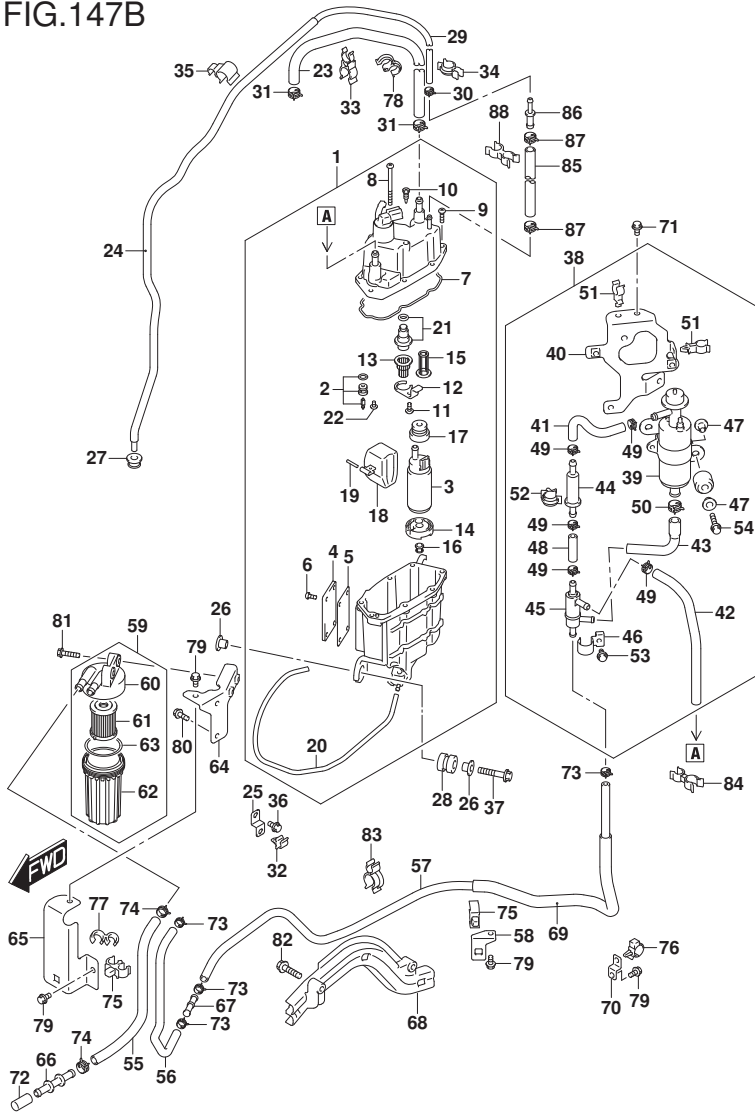


FIG.147B (1-C-9) FUEL PUMP/FUEL VAPOR SEPARATOR (DF350A:FROM VIN.811875)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L20	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY, NEEDLE	1	
3	15200-98L00	.PUMP ASSY, FUEL (H)	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J00	.GASKET, SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW, DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L00	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L00	.BUSH, FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE, DRAIN	1	
21	15760-98L00	.REGULATOR, FUEL PRESSURE	1	
22	02142-0408B	.SCREW	1	
23	15681-98L00	HOSE, FUEL (V/S TO DLVY)	1	
24	18498-98L20	PROTECTOR, EVAP HOSE	1	
25	36617-93J10	BRACKET, HOSE CLAMP	1	
26	09169-08042	WASHER	6	
27	09320-08086	CUSHION	1	
28	09320-12072	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP	1	
34	09408-00142	CLIP	1	

FIG.147B

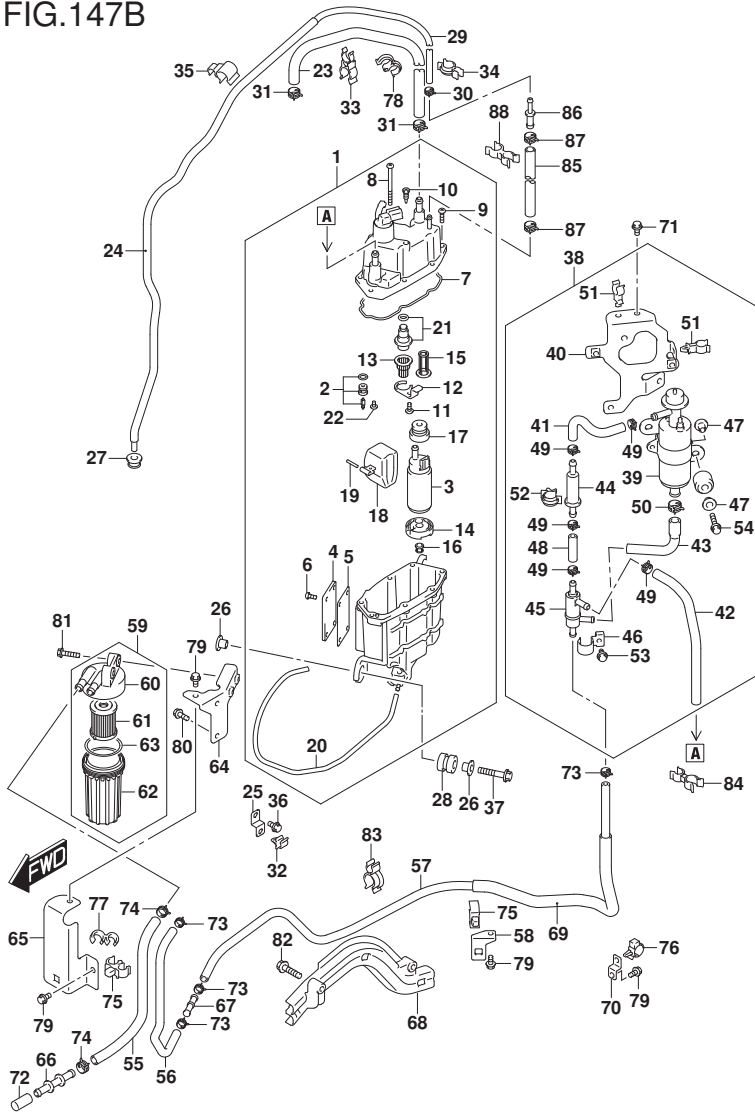

DF350A_E01_018_147B
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147B (1-C-10) FUEL PUMP/FUEL VAPOR SEPARATOR (DF350A:FROM VIN.811875)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	CLAMP	3	
36	01550-0612C	BOLT	1	
37	01550-0840C	BOLT	3	
38	15100-98L00	PUMP SET, FUEL (L)	1	
39	15100-94900	.PUMP ASSY, FUEL (L)	1	
40	15116-98L00	.BRACKET, FUEL PUMP (L)	1	
41	15632-98L00	.HOSE, FUEL (PUMP TO FILTER)	1	
42	15635-98L00	.HOSE, FUEL (VALVE TO VST)	1	
43	15637-98L00	.HOSE, FUEL (VALVE TO PUMP)	1	
44	15643-98L00	.FILTER, FUEL (L)	1	
45	15645-93J10	.VALVE, CHECK	1	
46	15674-98L00	.CLIP, CHECK VALVE	1	
47	09169-06062	.WASHER	4	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	7	
50	09401-15414	.CLIP	1	
51	09403-13310	.CLAMP	2	
52	09403-16307	.CLAMP	1	
53	01550-0612C	.BOLT	1	
54	01550-0630C	.BOLT	2	
55	15191-98L10	HOSE, FUEL (CONN TO FILTER)	1	
56	15192-98L00	HOSE, FUEL (FILTER TO 2WAY)	1	
57	15193-98L00	HOSE, FUEL (2WAY TO 2WAY)	1	
58	15198-98L00	BRACKET, FUEL HOSE	1	
59	15410-98L00	FILTER, FUEL (L)	1	
60	15411-93J10	.CAP, FUEL FILTER	1	
61	15412-93J10	.FILTER ASSY, FUEL	1	
62	15413-98L00	.CASE ASSY, FUEL FILTER	1	
63	15415-93J10	.SEAL, FUEL FILTER NO.1	1	
64	15421-98L00	BRACKET, FUEL FILTER (L)	1	
65	15423-98L00	GUARD, FUEL HOSE	1	
66	15830-98J01	JOINT, FUEL HOSE	1	
67	15831-96J00	UNION, 2 WAY FUEL HOSE	1	
68	15852-98L00	GUIDE, FUEL HOSE	1	

FIG.147B


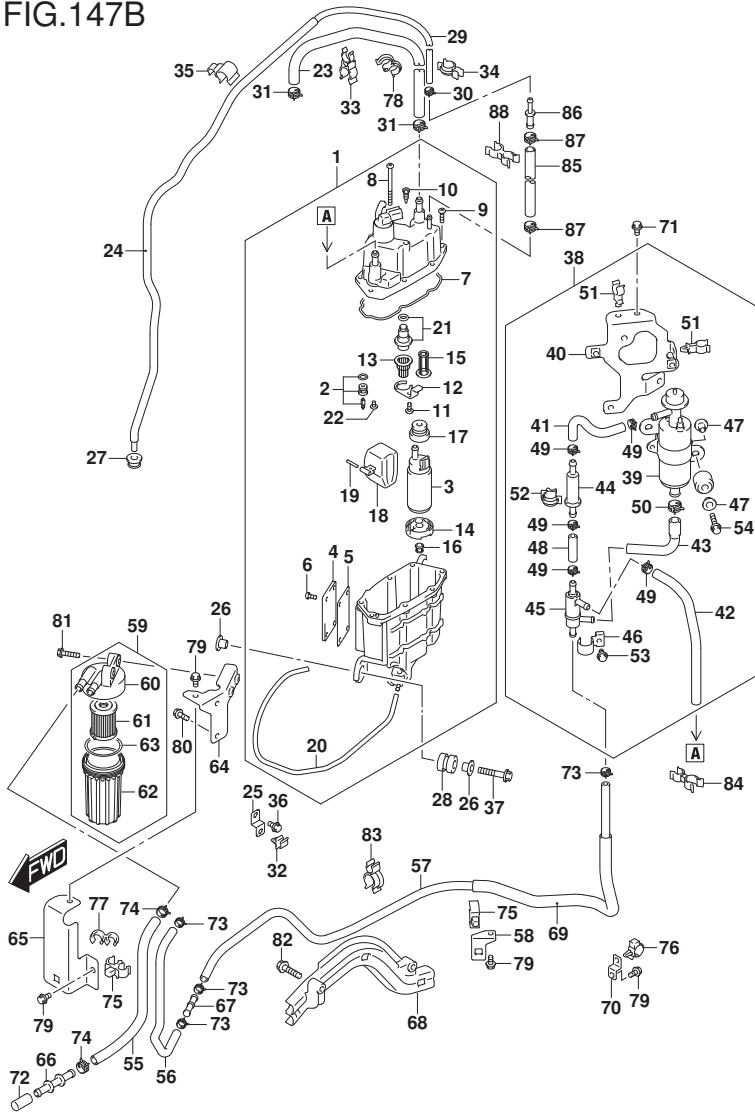


FIG.147B (1-C-11) FUEL PUMP/FUEL VAPOR SEPARATOR (DF350A:FROM VIN.811875)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
69	18498-99E10	PROTECTOR, FUEL HOSE (610)	1	L:610->450
70	36617-93J10	BRACKET, FUEL HOSE	1	
71	09103-06267	BOLT (6X18)	2	
72	09251-09005	CAP	1	
73	09401-11423	CLIP	4	
74	09401-13423	CLIP	2	
75	09403-13308	CLAMP	2	
76	09403-17403	CLAMP	1	
77	09408-00121	CLAMP	1	
78	09408-00155	CLIP	1	
79	01550-0612C	BOLT	4	
80	01550-0616C	BOLT	2	
81	01550-0625C	BOLT	2	
82	01550-0630C	BOLT	2	
83	09408-00142	CLIP	1	
84	09408-00054	CLAMP	1	
85	09343-70503-600	HOSE (7X12X600)	1	L:600->240
86	15695-98L00	UNION, EVAPORATION	1	
87	09401-11423	CLIP	2	
88	09408-00050	CLIP	2	

DF350A E01

FIG.147C

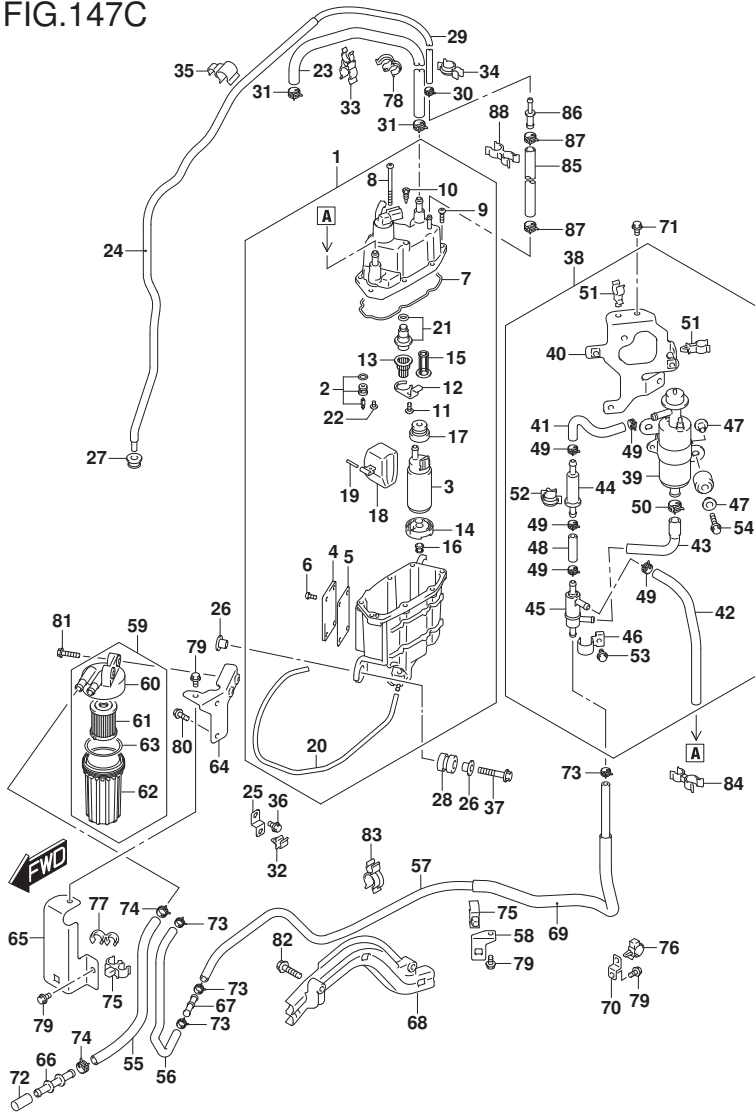

DF350A_E01_018_147C
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147C (1-C-12) FUEL PUMP/FUEL VAPOR SEPARATOR (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L20	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY, NEEDLE	1	
3	15200-98L00	.PUMP ASSY, FUEL (H)	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J00	.GASKET, SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW, DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L00	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L00	.BUSH, FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE, DRAIN	1	
21	15760-98L00	.REGULATOR, FUEL PRESSURE	1	
22	02142-0408B	.SCREW	1	
23	15681-98L00	HOSE, FUEL (V/S TO DLVY)	1	
24	18498-98L20	PROTECTOR, EVAP HOSE	1	
25	36617-93J10	BRACKET, HOSE CLAMP	1	
26	09169-08042	WASHER	6	
27	09320-08086	CUSHION	1	
28	09320-12072	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP	1	
34	09408-00142	CLIP	1	

FIG.147C

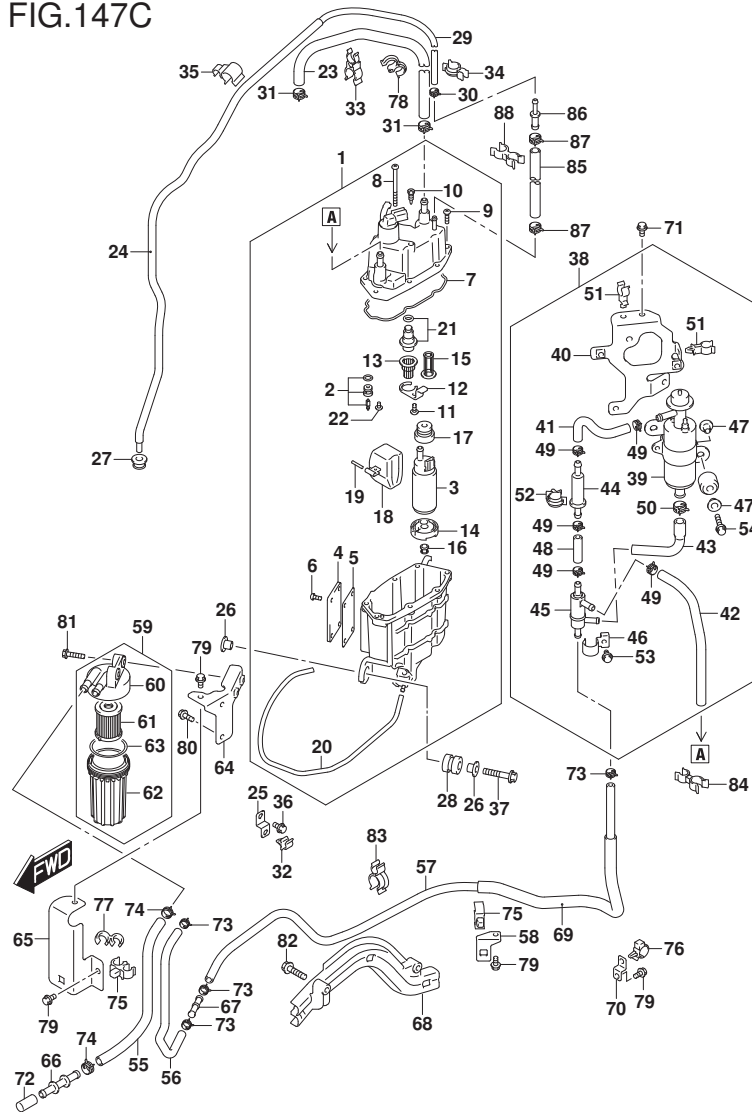


FIG.147C (1-C-13) FUEL PUMP/FUEL VAPOR SEPARATOR (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	CLAMP	3	
36	01550-0612C	BOLT	1	
37	01550-0840C	BOLT	3	
38	15100-98L00	PUMP SET, FUEL (L)	1	
39	15100-94900	.PUMP ASSY, FUEL (L)	1	
40	15116-98L00	.BRACKET, FUEL PUMP (L)	1	
41	15632-98L00	.HOSE, FUEL (PUMP TO FILTER)	1	
42	15635-98L00	.HOSE, FUEL (VALVE TO VST)	1	
43	15637-98L00	.HOSE, FUEL (VALVE TO PUMP)	1	
44	15643-98L00	.FILTER, FUEL (L)	1	
45	15645-93J10	.VALVE, CHECK	1	
46	15674-98L00	.CLIP, CHECK VALVE	1	
47	09169-06062	.WASHER	4	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	7	
50	09401-15414	.CLIP	1	
51	09403-13310	.CLAMP	2	
52	09403-16307	.CLAMP	1	
53	01550-0612C	.BOLT	1	
54	01550-0630C	.BOLT	2	
55	15191-98L10	HOSE, FUEL (CONN TO FILTER)	1	
56	15192-98L00	HOSE, FUEL (FILTER TO 2WAY)	1	
57	15193-98L00	HOSE, FUEL (2WAY TO 2WAY)	1	
58	15198-98L00	BRACKET, FUEL HOSE	1	
59	15410-98L00	FILTER, FUEL (L)	1	
60	15411-93J10	.CAP, FUEL FILTER	1	
61	15412-93J10	.FILTER ASSY, FUEL	1	
62	15413-98L00	.CASE ASSY, FUEL FILTER	1	
63	15415-93J10	.SEAL, FUEL FILTER NO.1	1	
64	15421-98L00	BRACKET, FUEL FILTER (L)	1	
65	15423-98L00	GUARD, FUEL HOSE	1	
66	15830-98J01	JOINT, FUEL HOSE	1	
67	15831-96J00	UNION, 2 WAY FUEL HOSE	1	
68	15852-98L00	GUIDE, FUEL HOSE	1	

FIG.147C

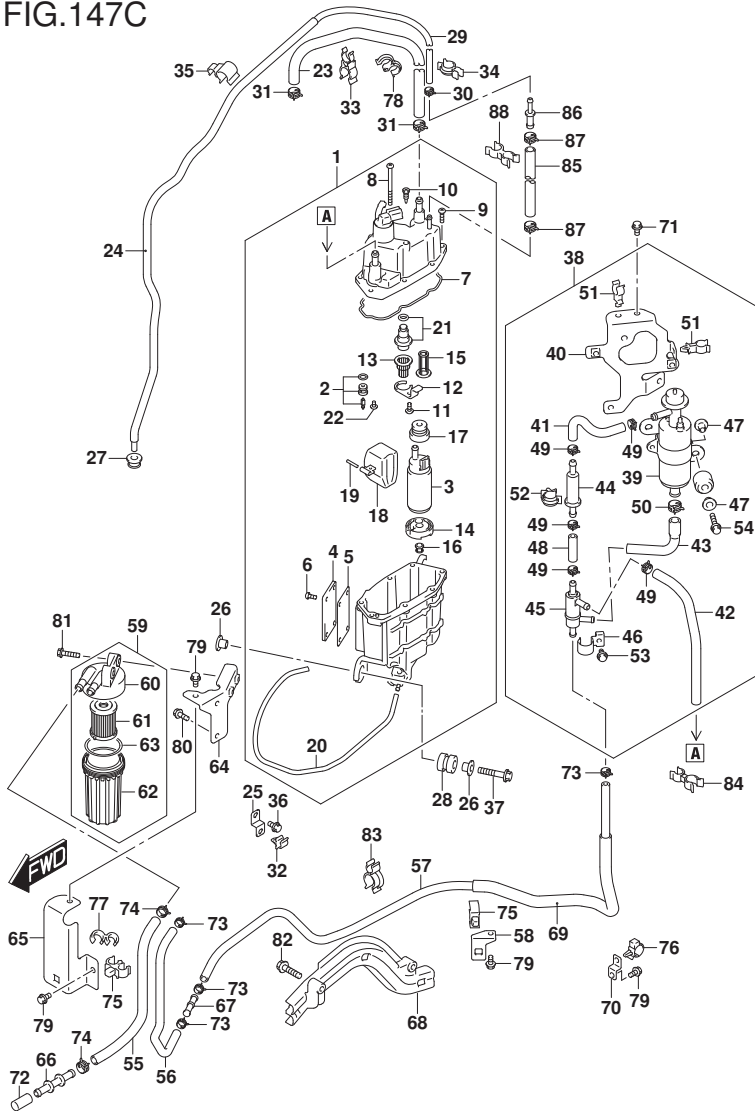



FIG.147C (1-C-14) FUEL PUMP/FUEL VAPOR SEPARATOR (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
69	18498-99E10	PROTECTOR, FUEL HOSE (610)	1	L:610->450
70	36617-93J10	BRACKET, FUEL HOSE	1	
71	09103-06267	BOLT (6X18)	2	
72	09251-09005	CAP	1	
73	09401-11423	CLIP	4	
74	09401-13423	CLIP	2	
75	09403-13308	CLAMP	2	
76	09403-17403	CLAMP	1	
77	09408-00121	CLAMP	1	
78	09408-00155	CLIP	1	
79	01550-0612C	BOLT	4	
80	01550-0616C	BOLT	2	
81	01550-0625C	BOLT	2	
82	01550-0630C	BOLT	2	
83	09408-00142	CLIP	1	
84	09408-00054	CLAMP	1	
85	09343-70503-600	HOSE (7X12X600)	1	L:600->240
86	15695-98L00	UNION, EVAPORATION	1	
87	09401-11423	CLIP	2	
88	09408-00050	CLIP	2	

DF325A E01

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	15600-98L10	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY, NEEDLE	1	
3	15200-98L10	.PUMP ASSY, FUEL (H)	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J10	.GASKET, SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW, DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L10	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L10	.BUSH, FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE, DRAIN	1	
21	15760-98L00	.REGULATOR, FUEL PRESSURE	1	
22	13614-93J00	.SCREW	1	
23	15681-98L00	HOSE, FUEL (V/S TO DLVY)	1	
24	18498-98L20	PROTECTOR, EVAP HOSE	1	
25	36617-93J10	BRACKET, HOSE CLAMP	1	
26	09169-08042	WASHER	6	
27	09320-08086	CUSHION	1	
28	09320-12072	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP	1	
34	09408-00142	CLIP	1	

FIG.147D

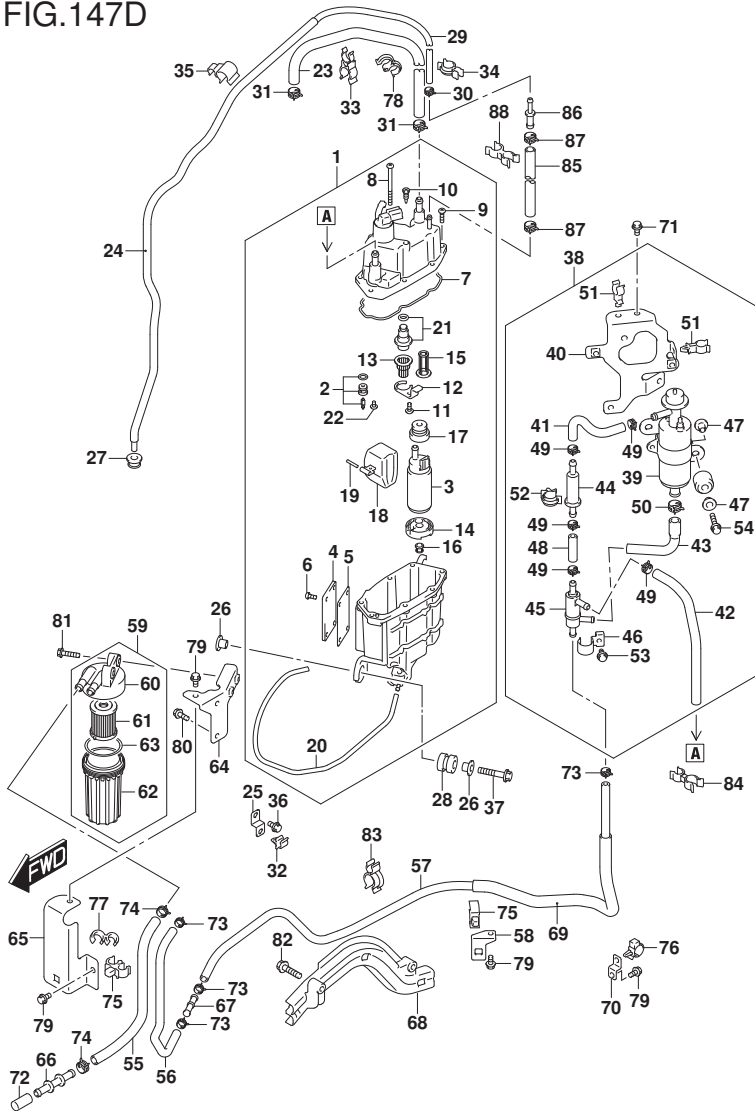

DF350A_E01_018_147D
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147D (1-D-2) FUEL PUMP/FUEL VAPOR SEPARATOR (DF325A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	CLAMP	3	
36	01550-0612C	BOLT	1	
37	01550-0840C	BOLT	3	
38	15100-98L00	PUMP SET, FUEL (L)	1	
39	15100-94900	.PUMP ASSY, FUEL (L)	1	
40	15116-98L00	.BRACKET, FUEL PUMP (L)	1	
41	15632-98L00	.HOSE, FUEL (PUMP TO FILTER)	1	
42	15635-98L00	.HOSE, FUEL (VALVE TO VST)	1	
43	15637-98L00	.HOSE, FUEL (VALVE TO PUMP)	1	
44	15643-98L00	.FILTER, FUEL (L)	1	
45	15645-93J10	.VALVE, CHECK	1	
46	15674-98L00	.CLIP, CHECK VALVE	1	
47	09169-06062	.WASHER	4	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	7	
50	09401-15414	.CLIP	1	
51	09403-13310	.CLAMP	2	
52	09403-16307	.CLAMP	1	
53	01550-0612C	.BOLT	1	
54	01550-0630C	.BOLT	2	
55	15191-98L10	HOSE, FUEL (CONN TO FILTER)	1	
56	15192-98L00	HOSE, FUEL (FILTER TO 2WAY)	1	
57	15193-98L00	HOSE, FUEL (2WAY TO 2WAY)	1	
58	15198-98L00	BRACKET, FUEL HOSE	1	
59	15410-98L00	FILTER, FUEL (L)	1	
60	15411-93J10	.CAP, FUEL FILTER	1	
61	15412-93J10	.FILTER ASSY, FUEL	1	
62	15413-98L00	.CASE ASSY, FUEL FILTER	1	
63	15415-93J10	.SEAL, FUEL FILTER NO.1	1	
64	15421-98L00	BRACKET, FUEL FILTER (L)	1	
65	15423-98L00	GUARD, FUEL HOSE	1	
66	15830-98J01	JOINT, FUEL HOSE	1	
67	15831-96J00	UNION, 2 WAY FUEL HOSE	1	
68	15852-98L00	GUIDE, FUEL HOSE	1	

FIG.147D

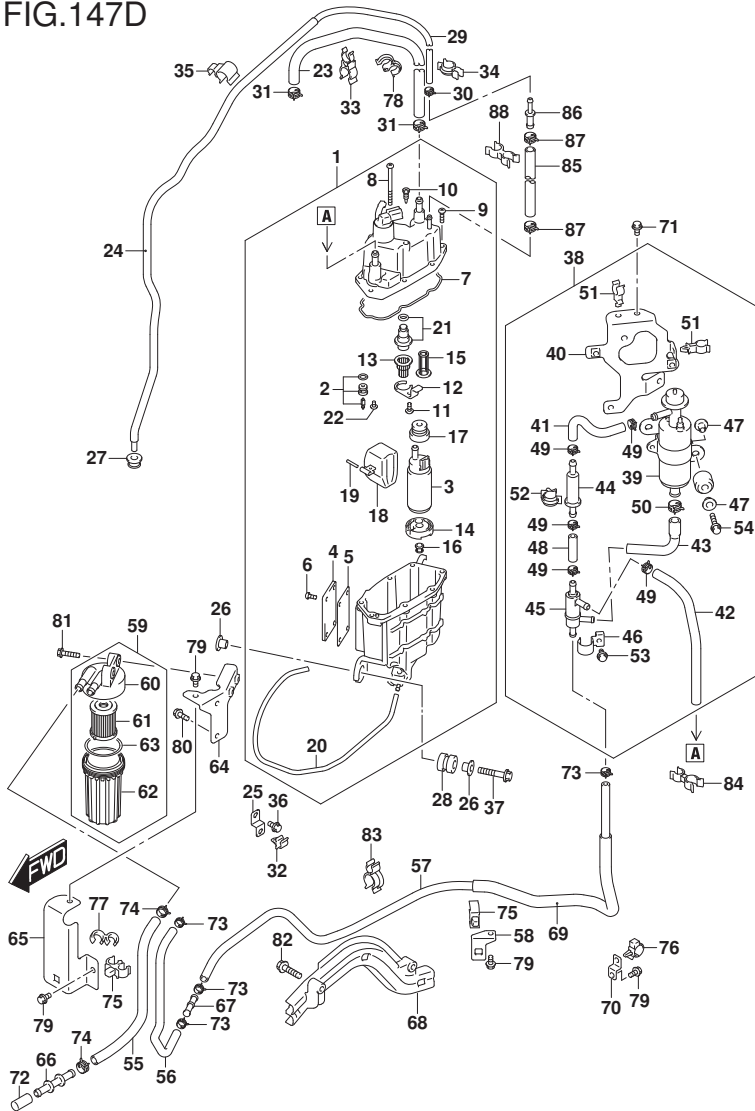


FIG.147D (1-D-3) FUEL PUMP/FUEL VAPOR SEPARATOR (DF325A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
69	18498-99E10	PROTECTOR, FUEL HOSE (610)	1	L:610->450
70	36617-93J10	BRACKET, FUEL HOSE	1	
71	09103-06267	BOLT (6X18)	2	
72	09251-09005	CAP	1	
73	09401-11423	CLIP	4	
74	09401-13423	CLIP	2	
75	09403-13308	CLAMP	2	
76	09403-17403	CLAMP	1	
77	09408-00121	CLAMP	1	
78	09408-00155	CLIP	1	
79	01550-0612C	BOLT	4	
80	01550-0616C	BOLT	2	
81	01550-0625C	BOLT	2	
82	01550-0630C	BOLT	2	
83	09408-00142	CLIP	1	
84	09408-00054	CLAMP	1	
85	09343-70503-600	HOSE (7X12X600)	1	L:600->240
86	15695-98L00	UNION, EVAPORATION	1	
87	09401-11423	CLIP	2	
88	09408-00050	CLIP	2	

DF325A E40

FIG.160A

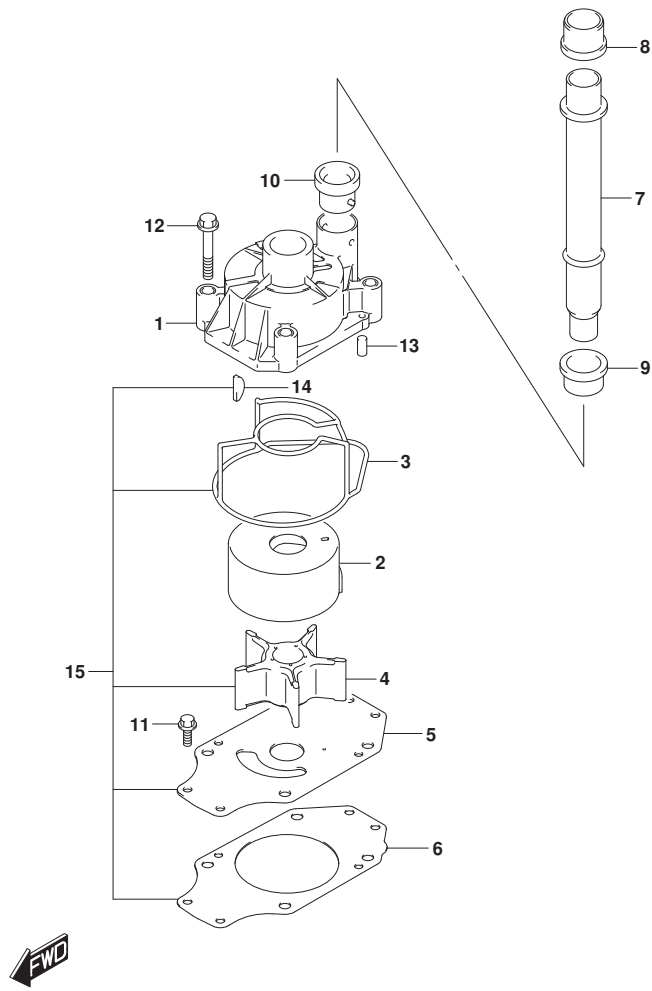


FIG.160A (1-D-4) WATER PUMP (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J02	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98L00	PANEL, PUMP CASE UNDER	1	
6	17472-98L00	GASKET, PUMP CASE PANEL	1	
7-1	17560-98L00	TUBE, WATER (X)	1	W/TRANSOM(X)
7-2	17560-98L10	TUBE, WATER (XX)	1	W/TRANSOM(XX)
8	17562-98L00	BUSH, WATER TUBE UPPER	1	
9	17563-98L00	BUSH, WATER TUBE LOWER	1	
10	17564-93J00	BUSH, WATER PUMP CASE	1	
11	29116-93J00	BOLT, PUMP CASE PANEL	4	
12	09116-08131	BOLT (8X45)	4	
13	09202-06031	PIN (6X12)	2	
14	09420-05009	KEY	1	
15	17400-98L00	WATER PUMP REPAIR KIT	1	OPT

DF350A E01
DF325A E01

FIG.160B


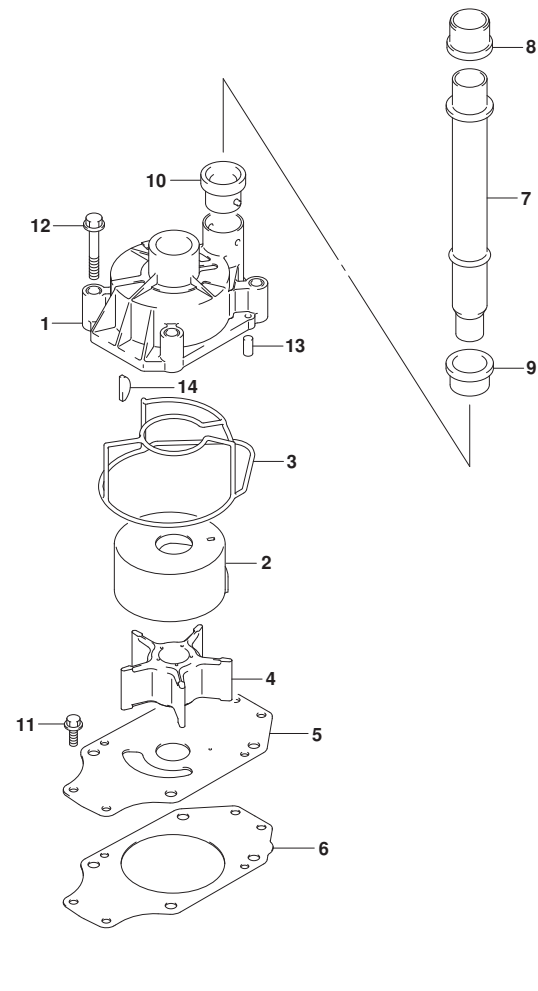


FIG.160B (1-D-5) WATER PUMP (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J12	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98L10	PANEL, PUMP CASE UNDER	1	
6	17472-98L00	GASKET, PUMP CASE PANEL	1	
7-1	17560-98L00	TUBE, WATER (X)	1	W/TRANSOM(X)
7-2	17560-98L10	TUBE, WATER (XX)	1	W/TRANSOM(XX)
8	17562-98L00	BUSH, WATER TUBE UPPER	1	
9	17563-98L00	BUSH, WATER TUBE LOWER	1	
10	17564-93J00	BUSH, WATER PUMP CASE	1	
11	29116-93J00	BOLT, PUMP CASE PANEL	4	
12	09116-08131	BOLT (8X45)	4	
13	09202-06031	PIN (6X12)	2	
14	09420-05009	KEY	1	

DF325A E40

FIG.162A

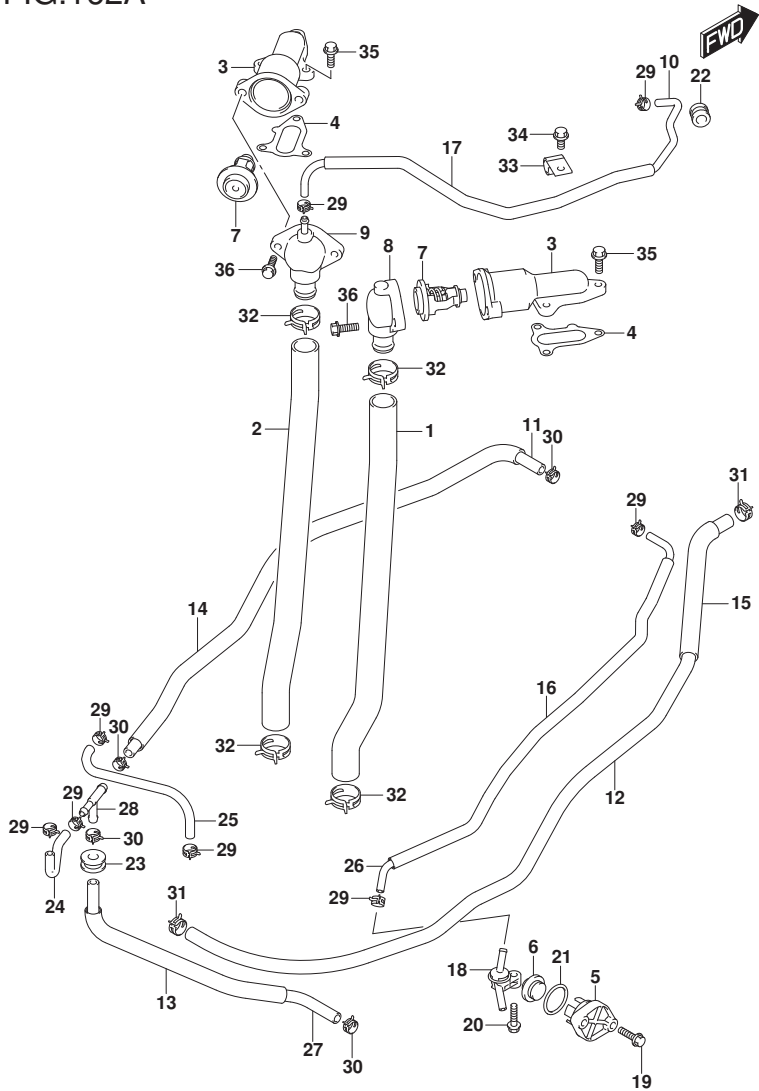

DF350A_E01_018_162A
THERMOSTAT

FIG.162A (1-D-6) THERMOSTAT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11196-98L00	HOSE, WATER RETURN STBD	1	
2	11197-98L00	HOSE, WATER RETURN PORT	1	
3	17581-98L00	PIPE, WATER OUTLET	2	
4	17582-93J00	GASKET, WTR OUTLET PIPE	2	
5-1	17611-90J00-YAY	COVER, WTR PRESSURE VALVE (BLACK)	1	
5-2	17611-90J00-Y5S	COVER, WTR PRESSURE VALVE (WHITE)	1	
6	17660-98L00	VALVE WATER PRESSURE	1	
7-1	17670-98L00	THERMOSTAT, WATER 55 DEG	2	
7-2	17670-98L10	THERMOSTAT, WATER 70 DEG	2	OPT
8	17680-98L00	COVER, THERMOSTAT STBD	1	
9	17680-98L10	COVER, THERMOSTAT PORT	1	
10	17712-98L00	HOSE, WATER (CASE JKT TO THERMO)	1	
11	17714-98L00	HOSE, WATER (3WAY TO CASE JKT)	1	
12	17915-98L00	HOSE, WATER FLUSH	1	
13	18498-99E10	PROTECTOR, WATER HOSE (610)	1	L:610->320
14	18498-99E10	PROTECTOR, WATER HOSE (610)	1	L:610->540
15	18498-99E20	PROTECTOR, WATER HOSE (450)	1	L:450->160
16	18498-98L00	PROTECTOR, WATER HOSE (520)	1	
17	18498-87JC0	PROTECTOR, WATER HOSE (450)	1	L:450->390
18	51170-98L00	BRACKET WATER INDICATOR	1	
19	09116-06121	BOLT (6X25)	2	
20	09116-06121	BOLT (6X25)	1	
21	09280-26006	O RING (D:3.1,ID:26.4)	1	
22	09320-09039	CUSHION	1	
23	09320-10503	CUSHION	1	
24	09352-50903-600	HOSE (5X9X600)	1	3WAY TO VST L:600->110
25	09352-50903-600	HOSE (5X9X600)	1	VST TO E/H COVER L:600->170
26	09352-50903-600	HOSE (5X9X600)	1	CASE JKT TO W/I L:600->580
27	09352-70113-600	HOSE (7X11X600)	1	OILPAN TO 3WAY L:600->400

FIG.162A


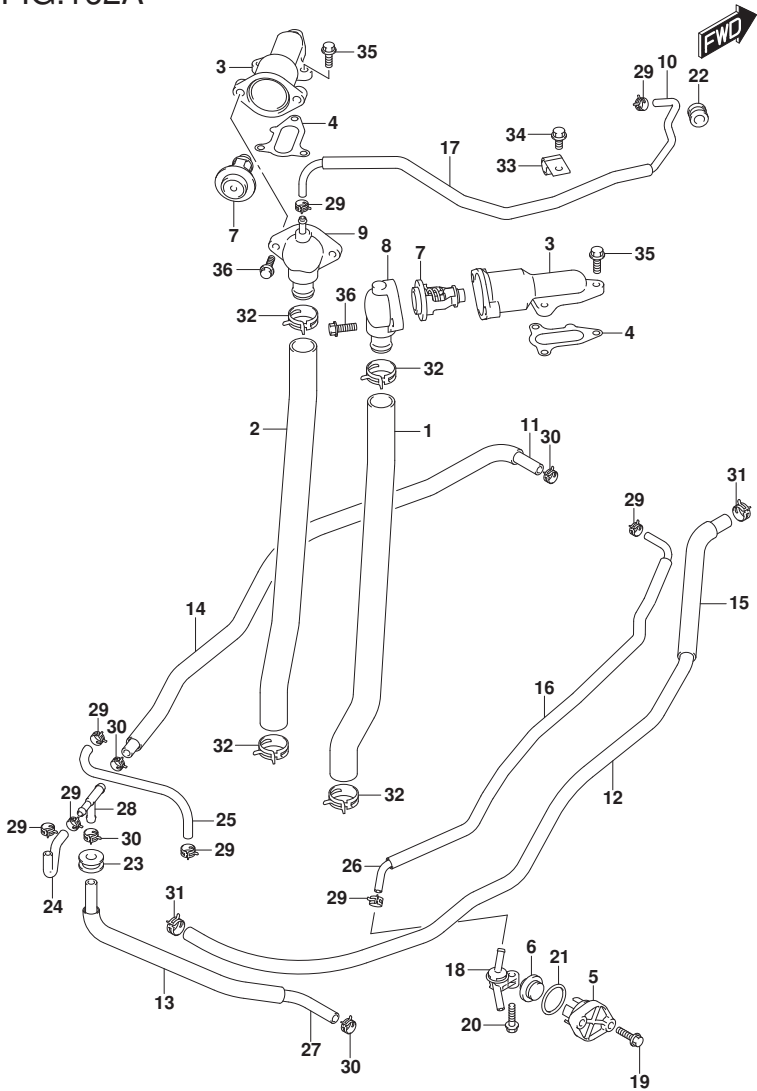


FIG.162A (1-D-7) THERMOSTAT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	09367-08005	3 WAY	1	
29	09401-08413	CLIP	8	
30	09401-11424	CLIP	4	
31	09401-13425	CLIP	2	
32	09401-25406	CLIP	4	
33	09403-13408	CLAMP	2	
34	01550-0612C	BOLT	2	
35	01550-0620C	BOLT	6	
36	01550-0620C	BOLT	4	

DF350A E01

FIG.162B

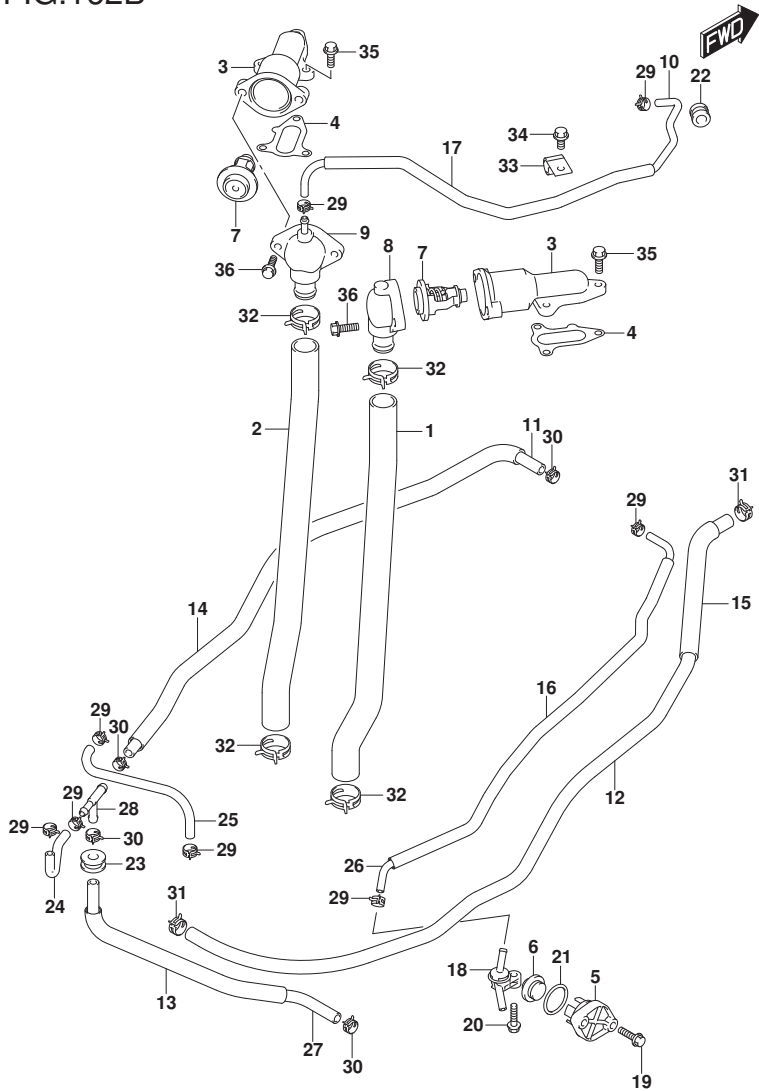

DF350A_E01_018_162B
THERMOSTAT

FIG.162B (1-D-8) THERMOSTAT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11196-98L00	HOSE, WATER RETURN STBD	1	
2	11197-98L00	HOSE, WATER RETURN PORT	1	
3	17581-98L00	PIPE, WATER OUTLET	2	
4	17582-93J00	GASKET, WTR OUTLET PIPE	2	
5-1	17611-90J00-YAY	COVER, WTR PRESSURE VALVE (BLACK)	1	
5-2	17611-90J00-Y5S	COVER, WTR PRESSURE VALVE (WHITE)	1	
6	17660-98L00	VALVE WATER PRESSURE	1	
7-1	17670-98L20	THERMOSTAT, WATER 55 DEG	2	
7-2	17670-98L10	THERMOSTAT, WATER 70 DEG	2	OPT
8	17680-98L00	COVER, THERMOSTAT STBD	1	
9	17680-98L10	COVER, THERMOSTAT PORT	1	
10	17712-98L00	HOSE, WATER (CASE JKT TO THERMO)	1	
11	17714-98L00	HOSE, WATER (3WAY TO CASE JKT)	1	
12	17915-98L00	HOSE, WATER FLUSH	1	
13	18498-99E10	PROTECTOR, WATER HOSE (610)	1	L:610->320
14	18498-99E10	PROTECTOR, WATER HOSE (610)	1	L:610->540
15	18498-99E20	PROTECTOR, WATER HOSE (450)	1	L:450->160
16	18498-98L00	PROTECTOR, WATER HOSE (520)	1	
17	18498-87JC0	PROTECTOR, WATER HOSE (450)	1	L:450->390
18	51170-98L00	BRACKET WATER INDICATOR	1	
19	09116-06121	BOLT (6X25)	2	
20	09116-06121	BOLT (6X25)	1	
21	09280-26006	O RING (D:3.1, ID:26.4)	1	
22	09320-09039	CUSHION	1	
23	09320-10503	CUSHION	1	
24	09352-50903-600	HOSE (5X9X600)	1	3WAY TO VST L:600->110
25	09352-50903-600	HOSE (5X9X600)	1	VST TO E/H COVER L:600->170
26	09352-50903-600	HOSE (5X9X600)	1	CASE JKT TO W/I L:600->580
27	09352-70113-600	HOSE (7X11X600)	1	OILPAN TO 3WAY L:600->400

FIG.162B


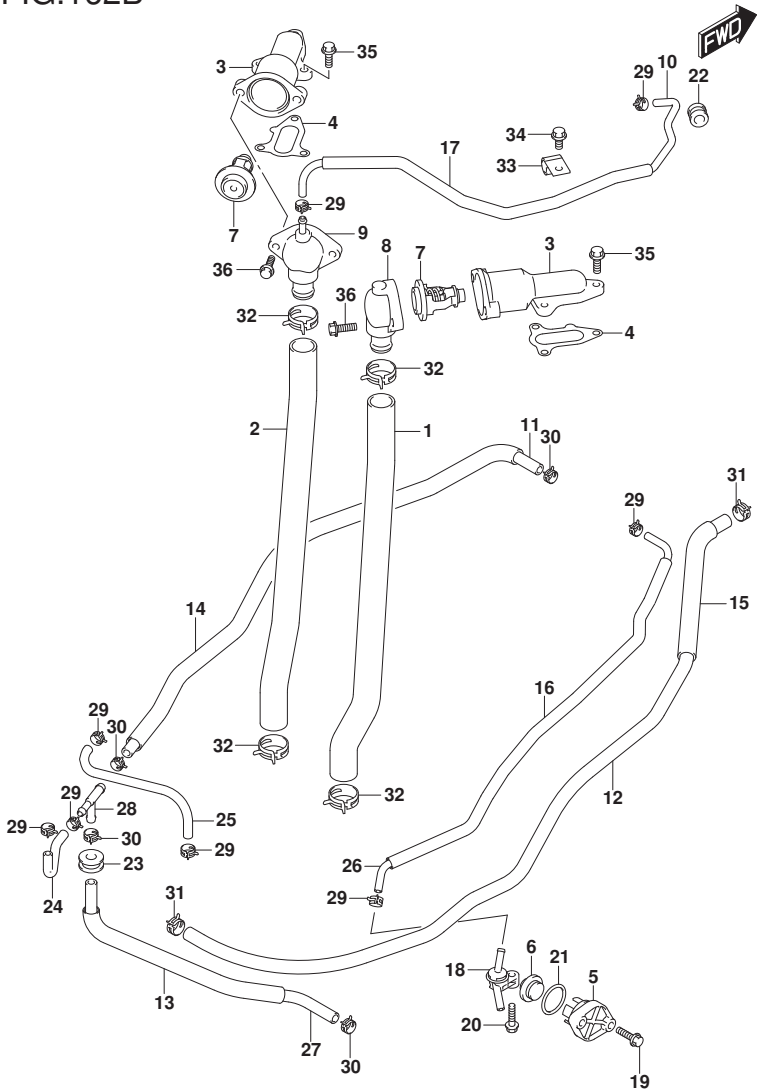


FIG.162B (1-D-9) THERMOSTAT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	09367-08005	3 WAY	1	
29	09401-08413	CLIP	8	
30	09401-11424	CLIP	4	
31	09401-13425	CLIP	2	
32	09401-25406	CLIP	4	
33	09403-13408	CLAMP	2	
34	01550-0612C	BOLT	2	
35	01550-0620C	BOLT	6	
36	01550-0620C	BOLT	4	

DF325A E01
DF325A E40

FIG.163A

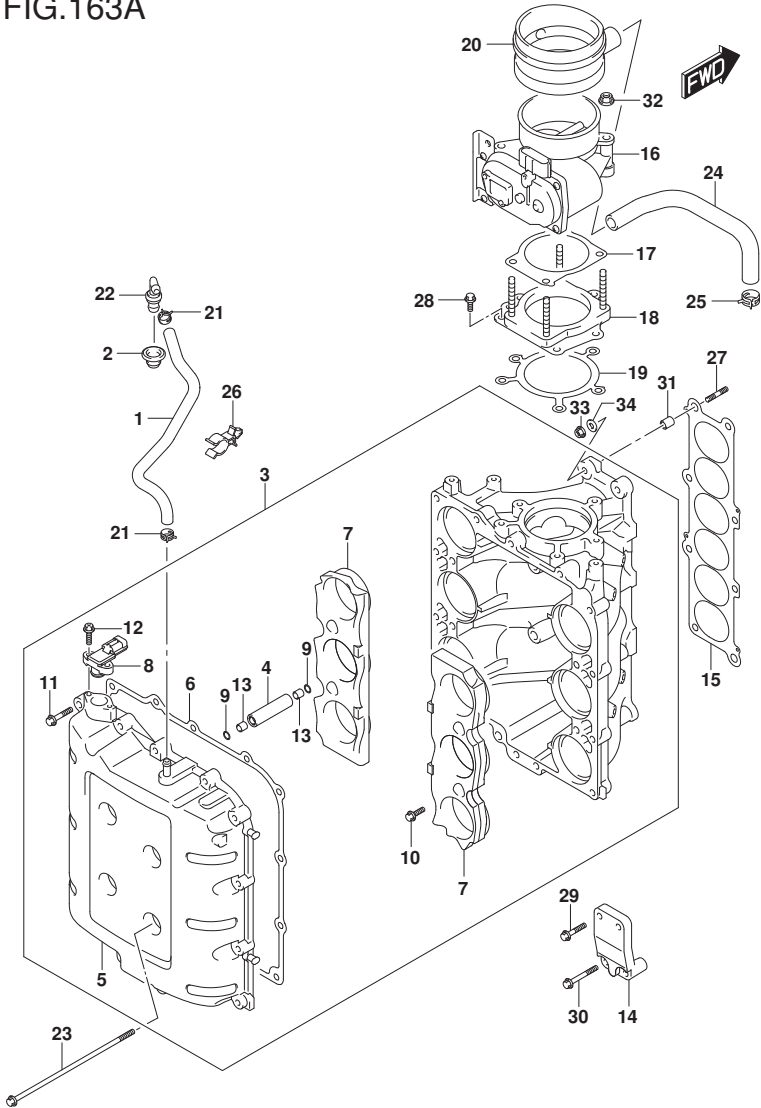

DF350A_E01_018_163A
THROTTLE BODY

FIG.163A (1-D-10) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11193-98J00	HOSE, PCV	1	
2	11198-58B00	SEAL, PCV VALVE	1	
3	13100-98L00	COLLECTOR ASSY	1	
4	13137-98J00	.SPACER, COLLECTOR	4	
5	13140-98L00	.COVER, COLLECTOR	1	
6	13147-98J00	.GASKET, COLLECTOR COVER	1	
7	13180-98J00	.FUNNEL, COLLECTOR	2	
8	18590-68H00	.SENSOR, MAP	1	
9	09280-10009	.O RING (D:1.3,ID:9.8)	8	
10	01550-0816C	.BOLT	4	
11	01550-0835C	.BOLT	10	
12	02162-05207	.SCREW	2	
13	04211-11129	.PIN	8	
14	13134-98J00	BRACKET, COLLECTOR	1	
15	13139-98J01	GASKET, COLLECTOR	1	
16	13300-98L00	BODY ASSY, THROTTLE	1	
17	13343-98J10	GASKET, THROTTLE BODY	1	
18	13315-98J00	DAMPER, THROTTLE BODY	1	
19	13421-98L00	GASKET, THROTTLE BODY	1	
20	13813-98L00	GROMMET, THROTTLE BODY	1	
21	09401-13423	CLIP	2	
22	18118-93J00	VALVE, PCV	1	
23	09103-08370	BOLT (8X250)	6	
24	11174-98L00	HOSE, BREATHER	1	
25	09401-18410	CLIP	1	
26	09403-13310	CLAMP	1	
27	01421-08357	STUD BOLT	2	
28	01550-0816C	BOLT	5	
29	01550-0835C	BOLT	2	
30	01550-08607	BOLT	2	
31	04211-11129	PIN	2	
32	09159-08136	NUT	4	
33	08316-1008C	NUT	2	
34	09160-08161	WASHER (8.2X23X3.2)	2	

FIG.175A

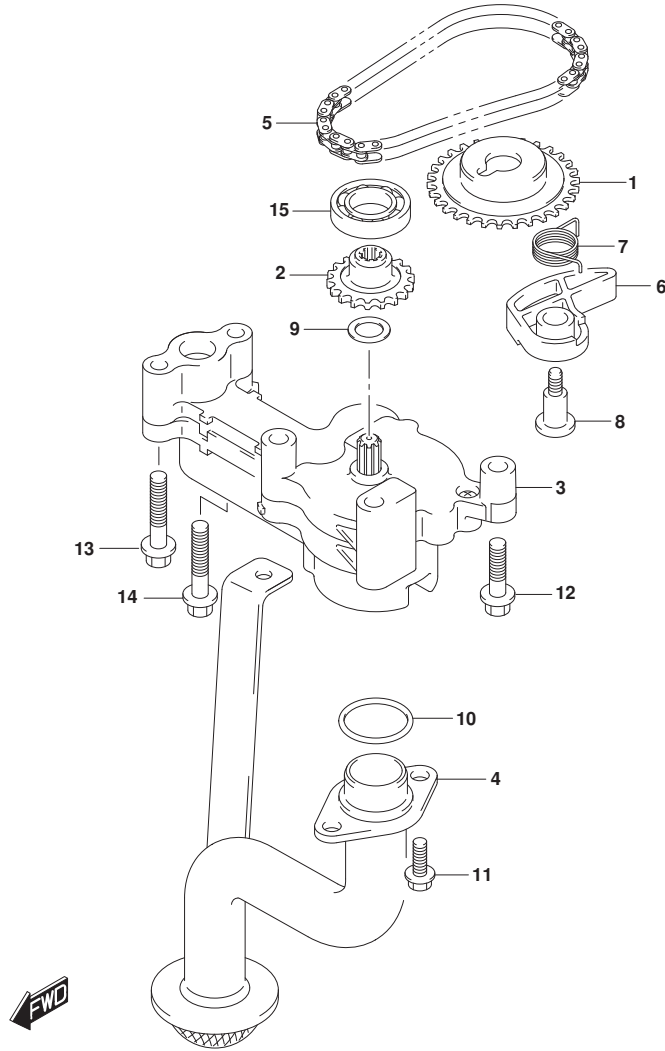


FIG.175A (1-D-11) OIL PUMP (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12632-93J11	SPROCKET, OIL PUMP DRIVE (NT:32)	1	
2	16113-93J10	SPROCKET, OIL PUMP DRIVEN (NT:18)	1	
3-1	16400-93J03	PUMP ASSY, OIL	1	UP TO VIN.811583
3-2	16400-93J10	PUMP ASSY, OIL	1	FROM VIN.811584
4	16520-93J00	STRAINER, OIL PUMP	1	
5	16760-93J00	CHAIN, OIL PUMP DRIVE	1	
6	16781-93J00	TENSIONER, OIL PUMP CHAIN	1	
7	16782-93J00	SPRING, OIL PUMP TENSIONER	1	
8	16783-93J01	BOLT, OIL PUMP TENSIONER	1	
9	09181-12158	SHIM (12X20X0.5)	1	
10	09280-22020	O RING (D:2.4,ID:21.8)	2	
11	01550-0616A	BOLT	3	
12	01550-0845A	BOLT	1	
13	01550-0865A	BOLT	3	
14	01550-0885A	BOLT	1	
15	08110-60020	BEARING	1	

DF350A E01

FIG.175B


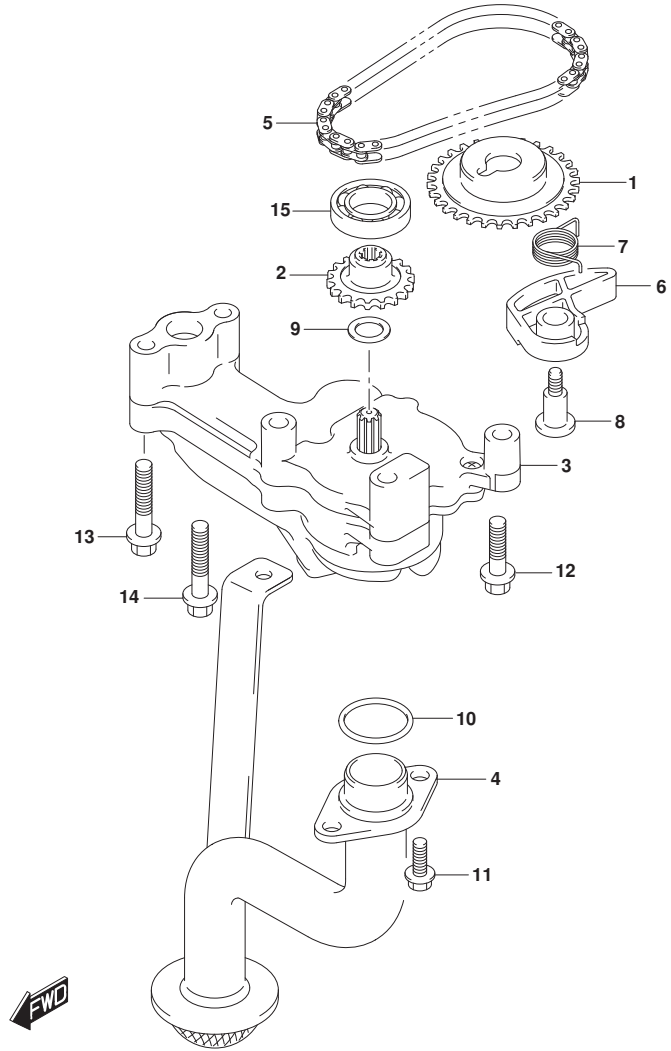


FIG.175B (1-D-12) OIL PUMP (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12632-93J11	SPROCKET, OIL PUMP DRIVE (NT:32)	1	
2	16113-93J10	SPROCKET, OIL PUMP DRIVEN (NT:18)	1	
3	16400-93J10	PUMP ASSY, OIL	1	
4	16520-93J00	STRAINER, OIL PUMP	1	
5	16760-93J00	CHAIN, OIL PUMP DRIVE	1	
6	16781-93J00	TENSIONER, OIL PUMP CHAIN	1	
7	16782-93J00	SPRING, OIL PUMP TENSIONER	1	
8	16783-93J01	BOLT, OIL PUMP TENSIONER	1	
9	09181-12158	SHIM (12X20X0.5)	1	
10	09280-22020	O RING (D:2.4,ID:21.8)	2	
11	01550-0616A	BOLT	3	
12	01550-0845A	BOLT	1	
13	01550-0865A	BOLT	3	
14	01550-0885A	BOLT	1	
15	08110-60020	BEARING	1	

DF325A E01
DF325A E40

FIG.180A

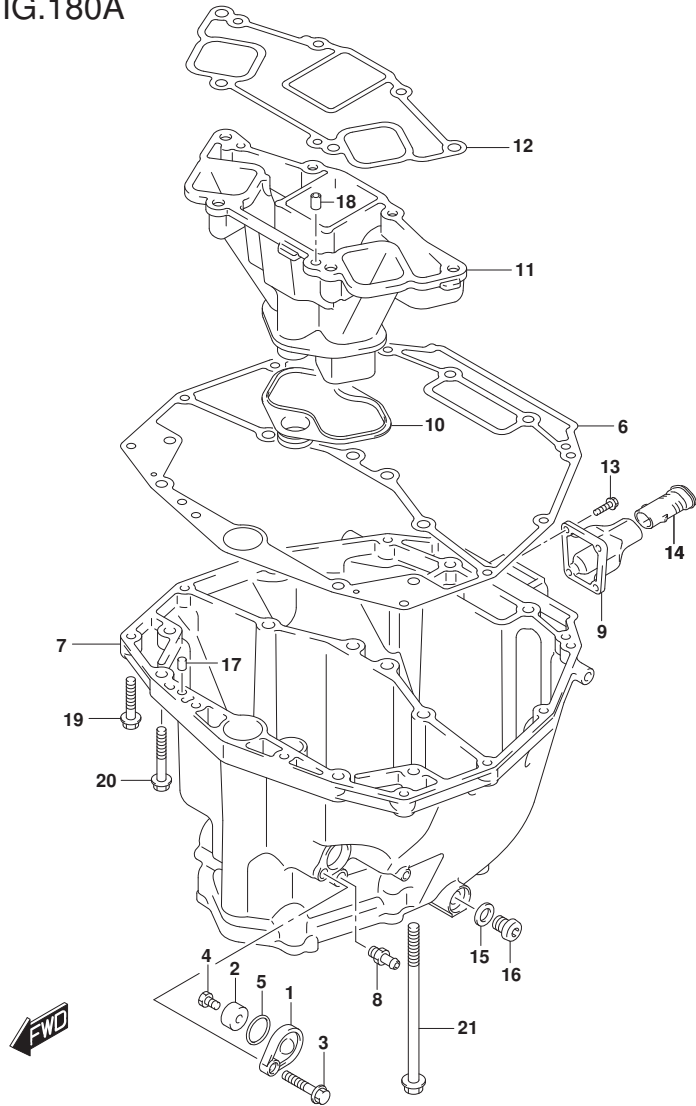

DF350A_E01_018_180A
OIL PAN

FIG.180A (1-D-13) OIL PAN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	11261-93J10-YAY	COVER, PROTECTION ANODE (BLACK)	1	
1-2	11261-93J10-Y5S	COVER, PROTECTION ANODE (WHITE)	1	
2-1	55321-87J01	ANODE, PROTECTION	1	OPT
2-2	55321-87J11	ANODE (MAGNESIUM)	1	
3	29103-93J30	BOLT, ANODE COVER	1	
4	09103-06281	BOLT (6X14)	1	
5	09280-22019	O RING (D:1.9,ID:21.8)	1	
6	11489-98L00	GASKET, OIL PAN	1	
7-1	11501-98L00-YAY	PAN, OIL (BLACK)	1	
7-2	11501-98L00-Y5S	PAN, OIL (WHITE)	1	
8	11591-98L00	UNION, OIL PAN	1	
9	11541-93J00-019	PIPE, EXHAUST (BLACK)	1	
10	14154-93J01	SEAL, EXHAUST TUBE	1	
11	14211-98L00	TUBE, EXHAUST	1	
12	14212-98L00	GASKET, EXHAUST TUBE	1	
13	29116-93J00	BOLT, EXHAUST PIPE	4	
14	11435-98L01	PIPE, EXHAUST RELEASE	1	
15	09168-12012	GASKET (12.5X20X2.5)	1	
16	09248-12009	PLUG (12X18.65)	1	
17	09202-08006	PIN (8X12)	2	
18	09202-08006	PIN (8X12)	2	
19	09116-08128	BOLT (8X40)	10	
20	09116-10176	BOLT (10X44)	4	
21	09116-10184	BOLT (10X200)	2	

DF350A_E01_018

FIG.204A

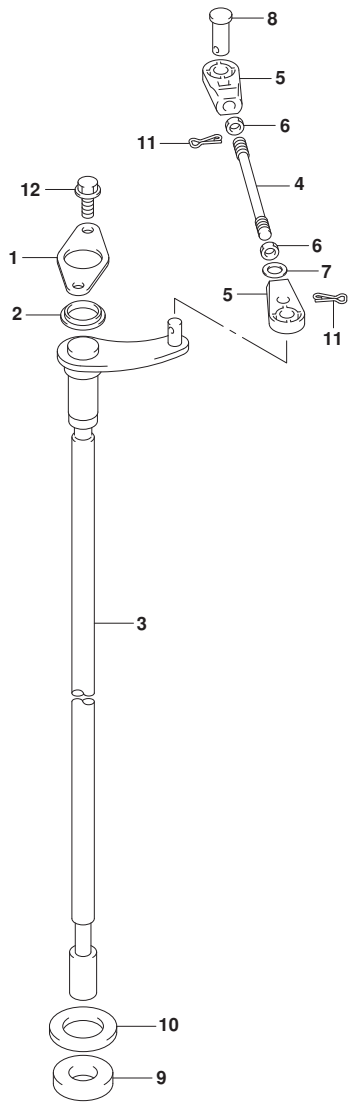


FIG.204A (1-D-14) CLUTCH SHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21152-98L00	PLATE, CLUTCH SFT	1	
2	21153-98L00	BUSH, CLUTCH SFT	1	
3	21210-98L00	SHAFT, CLUTCH	1	
4	21241-98L00	LINK, CLUTCH LEVER	1	
5	67467-98L00	CONNECTOR, CLUTCH LINK	2	
6	09140-06023	NUT	2	
7	09160-08091	WASHER (8.5X14X1.0)	1	
8	09200-08074	PIN	1	
9	09262-17019	BEARING (17X35X8)	1	
10	09282-22003	OIL SEAL (22X38X6)	1	
11	09385-08004	PIN	2	
12	01550-0616C	BOLT	2	

FIG.206A

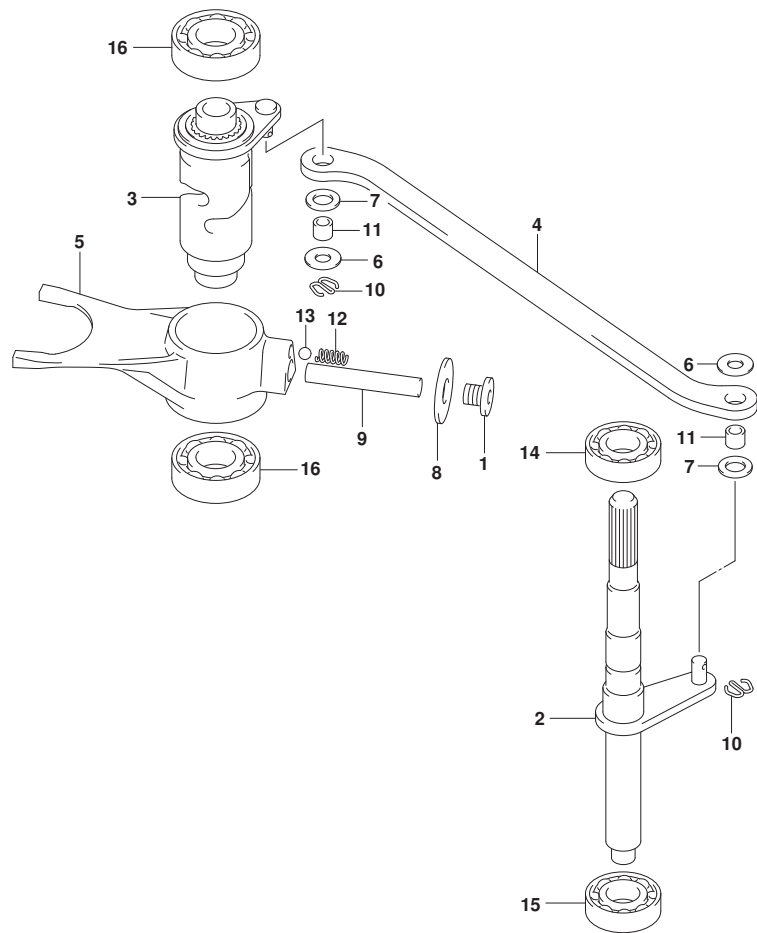


FIG.206A (1-D-15) CLUTCH ROD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11118-93J00	PLUG, SHIFT CAM	1	
2-1	25110-98L00	ROD, SHIFT (X)	1	W/TRANSOM(X)
2-2	25110-98L10	ROD, SHIFT (XX)	1	W/TRANSOM(XX)
3	25300-98L00	CAM, SHIFT	1	
4	25315-98L00	LINK, SHIFT CAM ARM	1	
5	25411-98L00	FORK, SHIFT	1	
6	09160-06094	WASHER (6.5X15X1.0)	2	
7	09160-08091	WASHER (8.5X14X1.0)	2	
8	09160-10129	WASHER (10.5X28X1.6)	1	
9	09202-08007	PIN (8X49)	1	
10	09204-01006	PIN	2	
11	25214-98L00	BUSH, SHIFT LINK	2	
12	09440-05031	SPRING	1	
13	06111-07004	BALL	1	
14	08113-60020	BEARING	1	
15	08113-62000	BEARING	1	
16	08113-69047	BEARING	2	

FIG.220A

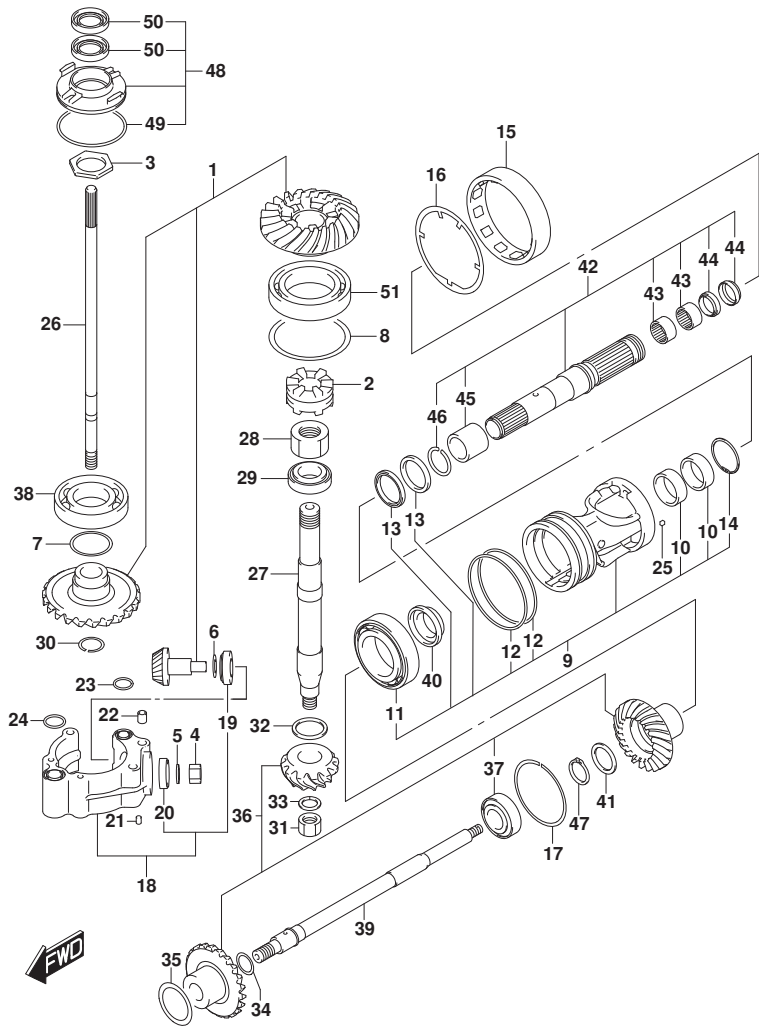


FIG.220A (1-E-2) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	25500-98L00	GEAR SET, REVERSE	1	
2	25711-98L00	SHIFTER, CLUTCH DOG	1	
3	09140-36003	NUT (M36,T:6)	1	
4	09159-16027	NUT (M16)	1	
5	09160-16026	WASHER (16X30X3)	1	
6-1	09181-25051	SHIM (25X34X0.6)	1	
6-2	09181-25052	SHIM (25X34X0.65)	1	
6-3	09181-25160	SHIM (25X34X0.7)	1	
6-4	09181-25054	SHIM (25X34X0.75)	1	
6-5	09181-25162	SHIM (25X34X0.8)	1	
6-6	09181-25056	SHIM (25X34X0.85)	1	
6-7	09181-25057	SHIM (25X34X0.90)	1	
6-8	09181-25058	SHIM (25X34X0.95)	1	
6-9	09181-25059	SHIM (25X34X1)	1	
6-10	09181-25060	SHIM (25X34X1.05)	1	
6-11	09181-25061	SHIM (25X34X1.1)	1	
6-12	09181-25062	SHIM (25X34X1.15)	1	
6-13	09181-25063	SHIM (25X34X1.2)	1	
6-14	09181-25130	SHIM (25X32X0.5)	1	
7-1	09181-40004	SHIM (T:0.60)	1	
7-2	09181-40005	SHIM (T:0.65)	1	
7-3	09181-40006	SHIM (T:0.70)	1	
7-4	09181-40007	SHIM (T:0.75)	1	
7-5	09181-40008	SHIM (T:0.80)	1	
7-6	09181-40009	SHIM (T:0.85)	1	
7-7	09181-40010	SHIM (T:0.90)	1	
7-8	09181-40011	SHIM (T:0.95)	1	
7-9	09181-40012	SHIM (T:1.00)	1	
7-10	09181-40013	SHIM (T:1.05)	1	
7-11	09181-40014	SHIM (T:1.10)	1	
7-12	09181-40015	SHIM (T:1.15)	1	
8-1	09181-77003	SHIM (T:0.5)	1	
8-2	09181-77004	SHIM (T:0.55)	1	
8-3	09181-77005	SHIM (T:0.60)	1	

FIG.220A

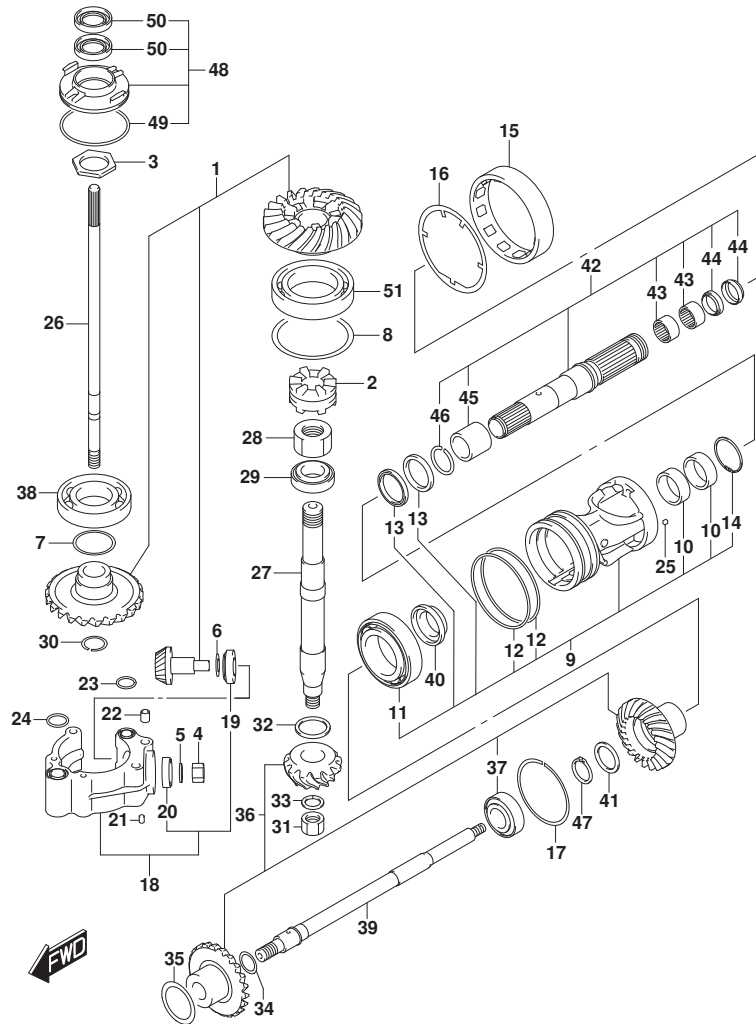


FIG.220A (1-E-3) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
8-4	09181-77006	SHIM (T:0.65)	1	
8-5	09181-77007	SHIM (T:0.70)	1	
8-6	09181-77008	SHIM (T:0.75)	1	
8-7	09181-77009	SHIM (T:0.80)	1	
8-8	09181-77010	SHIM (T:0.85)	1	
8-9	09181-77011	SHIM (T:0.90)	1	
8-10	09181-77012	SHIM (T:0.95)	1	
8-11	09181-77013	SHIM (T:1.00)	1	
8-12	09181-77014	SHIM (T:1.05)	1	
8-13	09181-77015	SHIM (T:1.10)	1	
9	56120-98L00	HOUSING, PROP SHAFT BRG	1	
10	09263-45005	.BEARING (45X55X20)	2	
11	09265-50002	.BEARING (50X90X21.75)	1	
12	09280-00047	.O RING (D:3, ID:109)	2	
13	09282-45001	.SEAL (45X60X8)	2	
14	08331-41559	.CIRCLIP	1	
15	56122-98L00	STOPPER, PROP SHAFT BRG HSG	1	
16	56123-98L00	WASHER, HSG NO.2	1	
17-1	56126-98L00	WASHER, HSG (T:1.9)	1	
17-2	56126-98L10	WASHER, HSG (T:2.0)	1	
17-3	56126-98L20	WASHER, HSG (T:2.1)	1	
17-4	56126-98L30	WASHER, HSG (T:2.2)	1	
17-5	56126-98L40	WASHER, HSG (T:2.3)	1	
17-6	56126-98L50	WASHER, HSG (T:2.4)	1	
17-7	56126-98L60	WASHER, HSG (T:2.5)	1	
17-8	56126-98L70	WASHER, HSG (T:2.6)	1	
18	56150-98L00	HOUSING, REV PINION BRG	1	
19	09265-25024	.BEARING (25X52X16.25)	1	
20	09265-25038	.BEARING (25X47X15)	1	
21	04221-08129	PIN	1	
22	09206-13019	PIN (10.4X13X16)	2	
23	09280-21015	O RING (D:2.7, ID:21.4)	2	
24	09280-26006	O RING (D:3.1, ID:26.4)	2	
25	09421-04008	KEY	1	

[illegible]

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26-1	57110-98L00	SHAFT, DRIVE UPPER (X)	1	W/TRANSOM(X)
26-2	57110-98L10	SHAFT, DRIVE UPPER (XX)	1	W/TRANSOM(XX)
27	57113-98L00	SHAFT, DRIVE LOWER	1	
28	09159-27001	NUT,DRIVE SHAFT LOWER (M27)	1	
29	09265-28006	BEARING (28X52X16)	1	PART OF FIG.407A REF3
30	09380-24007	CIRCLIP	1	
31	09159-16027	NUT (M16)	1	
32-1	09181-30037	SHIM (T:0.60)	1	
32-2	09181-30038	SHIM (T:0.65)	1	
32-3	09181-30039	SHIM (T:0.70)	1	
32-4	09181-30040	SHIM (T:0.75)	1	
32-5	09181-30041	SHIM (T:0.80)	1	
32-6	09181-30042	SHIM (T:0.85)	1	
32-7	09181-30046	SHIM (T:1.05)	1	
32-8	09181-30158	SHIM (T:0.50)	1	
32-9	09181-30164	SHIM (T:0.90)	1	
32-10	09181-30165	SHIM (T:0.95)	1	
33	08221-16256	SHIM	1	
34-1	09181-25051	SHIM (25X34X0.6)	1	
34-2	09181-25052	SHIM (25X34X0.65)	1	
34-3	09181-25160	SHIM (25X34X0.7)	1	
34-4	09181-25054	SHIM (25X34X0.75)	1	
34-5	09181-25162	SHIM (25X34X0.8)	1	
34-6	09181-25056	SHIM (25X34X0.85)	1	
34-7	09181-25057	SHIM (25X34X0.90)	1	
34-8	09181-25058	SHIM (25X34X0.95)	1	
34-9	09181-25059	SHIM (25X34X1)	1	
34-10	09181-25060	SHIM (25X34X1.05)	1	
34-11	09181-25061	SHIM (25X34X1.1)	1	
34-12	09181-25062	SHIM (25X34X1.15)	1	
34-13	09181-25063	SHIM (25X34X1.2)	1	
34-14	09181-25130	SHIM (25X32X0.5)	1	
35-1	09181-50020	SHIM (T:0.45)	1	
35-2	09181-50021	SHIM (T:0.50)	1	

This exploded view diagram illustrates the assembly of a mechanical unit, likely a pump or motor. The components are numbered as follows:

- 1**: Main housing or frame.
- 2**: Gear or impeller component.
- 3**: Nut or cap screw.
- 4**: Small pin or clip.
- 5**: Small pin or clip.
- 6**: Small pin or clip.
- 7**: Seal or O-ring.
- 8**: Ring or flange.
- 9**: Housing or bracket part.
- 10**: Small pin or clip.
- 11**: Housing or bracket part.
- 12**: Ring or flange.
- 13**: Small pin or clip.
- 14**: Small pin or clip.
- 15**: Ring or flange.
- 16**: Ring or flange.
- 17**: Ring or flange.
- 18**: Housing or bracket part.
- 19**: Housing or bracket part.
- 20**: Small pin or clip.
- 21**: Small pin or clip.
- 22**: Small pin or clip.
- 23**: Small pin or clip.
- 24**: Small pin or clip.
- 25**: Small pin or clip.
- 26**: Long shaft or rod.
- 27**: Long shaft or rod.
- 28**: Nut or cap screw.
- 29**: Nut or cap screw.
- 30**: Seal or O-ring.
- 31**: Small pin or clip.
- 32**: Small pin or clip.
- 33**: Small pin or clip.
- 34**: Gear or impeller component.
- 35**: Gear or impeller component.
- 36**: Small pin or clip.
- 37**: Ring or flange.
- 38**: Ring or flange.
- 39**: Long shaft or rod.
- 40**: Ring or flange.
- 41**: Ring or flange.
- 42**: Ring or flange.
- 43**: Small pin or clip.
- 44**: Small pin or clip.
- 45**: Small pin or clip.
- 46**: Small pin or clip.
- 47**: Small pin or clip.
- 48**: Ring or flange.
- 49**: Ring or flange.
- 50**: Ring or flange.
- 51**: Ring or flange.

A 'FWD' arrow is located at the bottom left of the diagram.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35-3	09181-50022	SHIM (T:0.55)	1	
35-4	09181-50023	SHIM (T:0.60)	1	
35-5	09181-50024	SHIM (T:0.65)	1	
35-6	09181-50025	SHIM (T:0.70)	1	
35-7	09181-50026	SHIM (T:0.75)	1	
35-8	09181-50027	SHIM (T:0.80)	1	
35-9	09181-50028	SHIM (T:0.85)	1	
35-10	09181-50029	SHIM (T:0.95)	1	
36	57301-98810	GEAR SET, CONTRA	1	
37	09265-30024	.BEARING (30X62X21.25)	1	
38	09262-40017	BEARING (40X80X18)	1	PART OF FIG.407A REF15
39	57610-98L00	SHAFT, PROPELLER INNER	1	
40	57622-98L00	SPACER, PROP SHAFT	1	
41	09160-36007	WASHER (32X47X2)	1	
42	57600-98820	SHAFT SET, PROPELLER OUTER	1	
43	09263-30064	.BEARING (30X37X20)	2	
44	09282-30009	.SEAL (30X38X10.9)	2	
45	09300-40003	.BUSH (40X45X40)	1	
46	09380-40004	.SNAP RING	1	
47	57635-98L00	STOPPER, PROPELLER SHAFT	1	
48	17450-98L00	HOUSING, WATER INLET	1	
49	09280-69001	.O RING (D:3.1, ID:68.5)	1	
50	09282-24004	.OIL SEAL (24X40X7)	2	
51	09262-55002	BEARING (55X90X18)	1	

FIG.301A

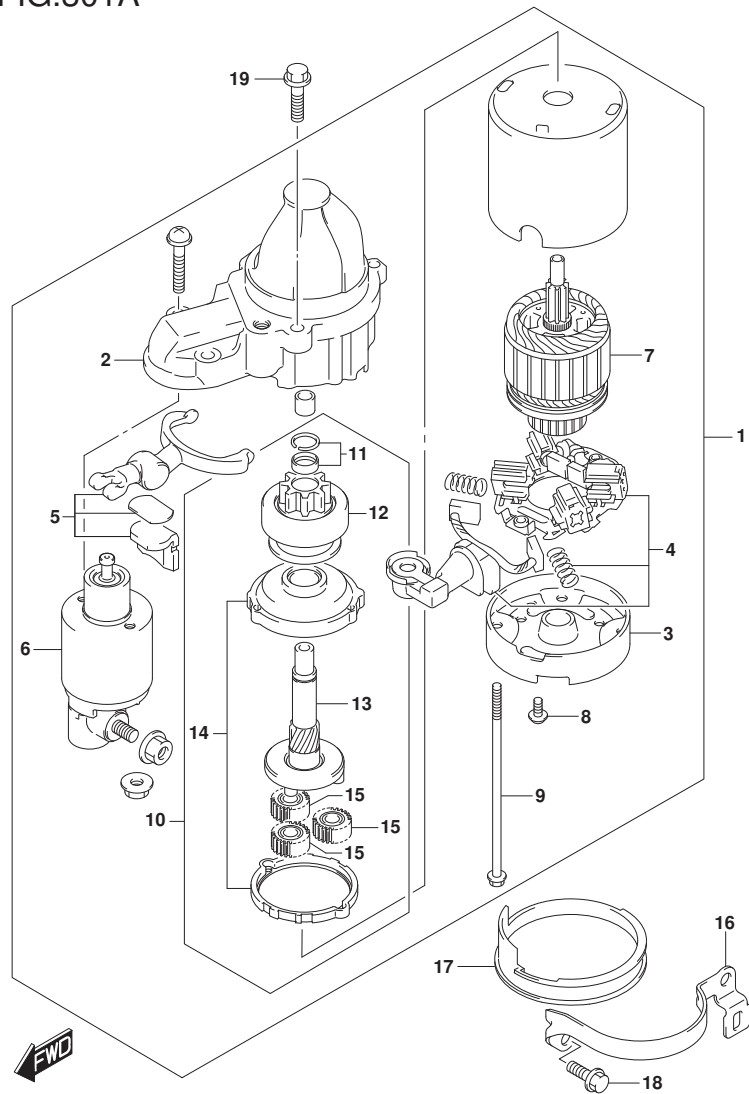


FIG.301A (1-E-6) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-98L10	STARTING MOTOR	1	
2	31150-98L00	.CASE, GEAR	1	
3	31170-92J00	.HOUSING, REAR	1	
4	31173-98L00	.HOLDER ASSY, BRUSH	1	
5	31191-63J00	.LEVER ASSY	1	
6	31220-98L10	.SWITCH ASSY	1	
7	31311-63J00	ARMATURE	1	
8	31192-92J00	.SCREW SET	1	
9	31261-75F10	.BOLT, THROUGH	2	
10	31340-98L00	.CLUTCH SET, STARTER	1	
11	31313-86030	..STOPPER SET	1	
12	31320-98L00	..PINION	1	
13	31341-98L00	..SHAFT, PINION	1	
14	31343-63J00	..INTERNAL GEAR	1	
15	31344-63J00	..GEAR ASSY	3	
16	31912-98L00	BAND, STARTING MOTOR	1	
17	31918-92J01	DAMPER, LOWER	1	
18	01550-0820C	BOLT	2	
19	01550-0830C	BOLT	2	

FIG.303A (1-E-7) MAGNETO

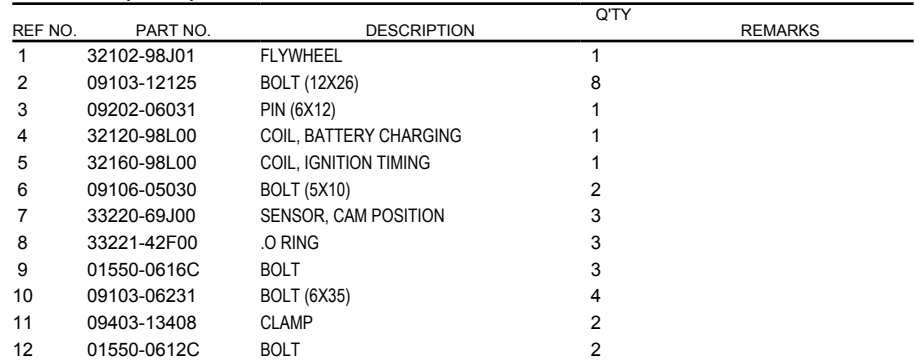


FIG.310A


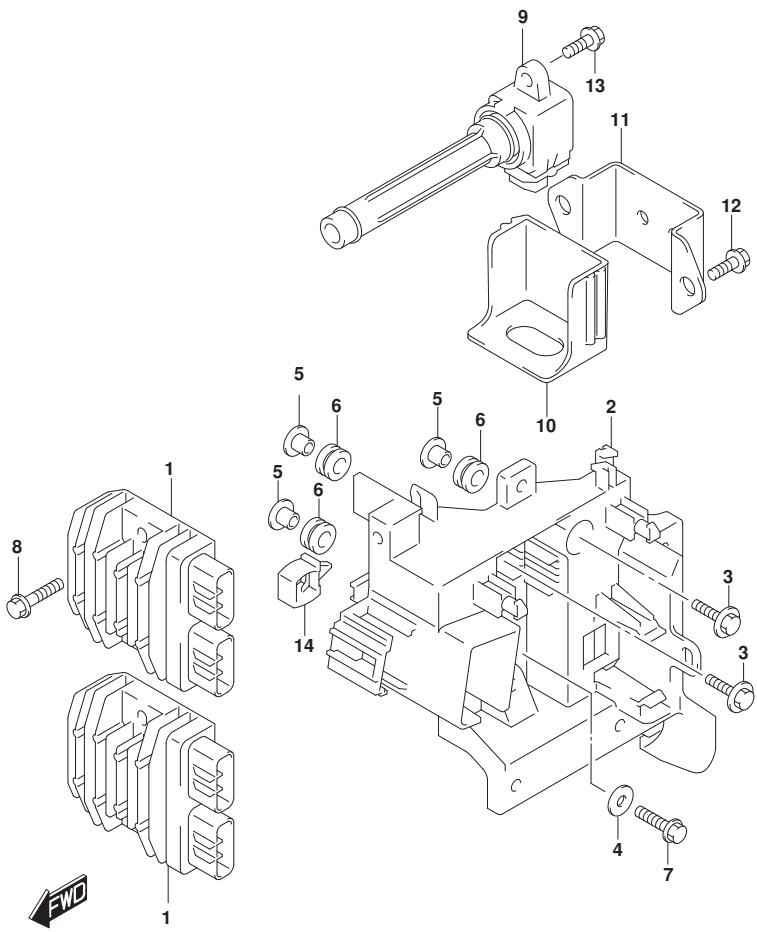


FIG.310A (1-E-8) RECTIFIER/IGNITION COIL (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-26J01	RECTIFIER ASSY	2	
2	32890-98L00	HOLDER, ELECTRIC PARTS	1	
3	09116-06202	BOLT (6X25)	3	
4	09160-06084	WASHER (6.5X18X1.6)	1	
5	09169-06062	WASHER	4	
6	09320-09016	CUSHION	4	
7	01550-06257	BOLT	1	
8	01550-0625C	BOLT	4	
9	33410-98L00	COIL ASSY, IGNITION	6	
10-1	33411-98L00	CUSHION, IGN COIL CONNECTOR	6	UP TO VIN.811005
10-2	33411-98L10	CUSHION, IGN COIL CONNECTOR	6	FROM VIN.811006
11	33414-98L00	BRACKET, IGNITION COIL	5	
12	01547-06127	BOLT	10	
13	01550-0620C	BOLT	6	
14	09403-12412	CLAMP	1	

DF350A E01

FIG.310B (1-E-9) RECTIFIER/IGNITION COIL (DF325A)

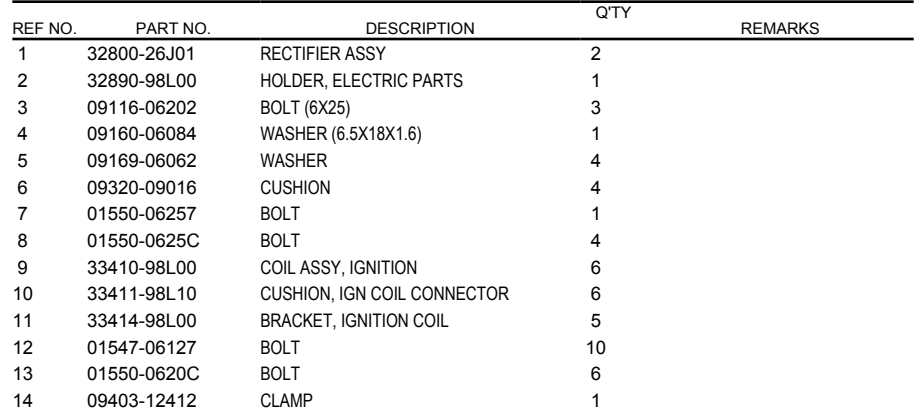

DF350A_E01_018

FIG.315A

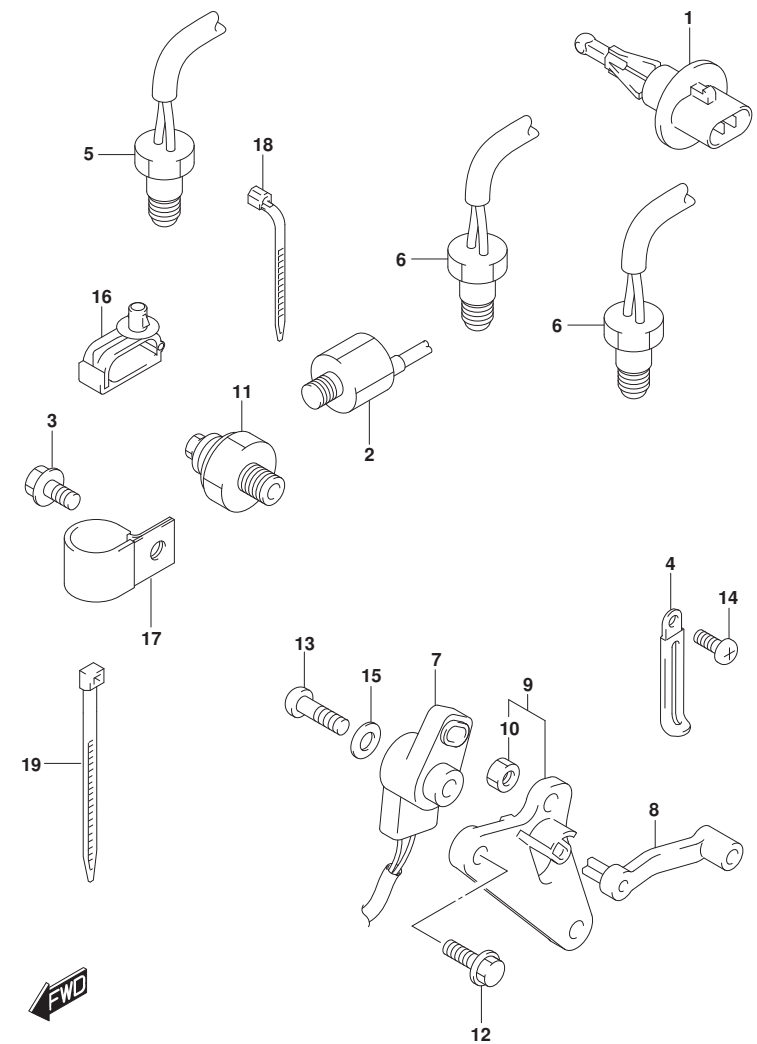


FIG.315A (1-E-10) SENSOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13650-52G00	SENSOR, INLET AIR TEMP	1	
2	18640-98L00	SENSOR ASSY, KNOCK	1	
3	29103-93J00	BOLT, PTT MOTOR LEAD CLAMP	1	
4	29404-93J10	CLAMP, PTT MOTOR LEAD	1	
5	34830-87J20	SENSOR ASSY, EXHAUST TEMP	1	
6	34830-87J20	SENSOR ASSY, CYLINDER TEMP	2	
7	34840-98J03	SENSOR ASSY, TRIM	1	
8	34841-88L00	LEVER, TRIM SENSOR	1	
9	34845-88L01	BRACKET, TRIM SENSOR	1	
10	09140-05005	.NUT	1	
11	37820-99E02	SWITCH ASSY, OIL PRESSURE	1	
12	09103-06093	BOLT (6X20)	2	
13	09125-05048	SCREW (5X16)	1	
14	09125-06063	SCREW (6X10)	1	
15	09160-05029	WASHER (5.5X12X0.8)	1	
16	09403-07340	CLAMP	1	
17	09403-19409	CLAMP	1	
18	09407-14403	CLAMP (L:125)	1	
19	09407-14407	CLAMP (L:145)	2	

FIG.322A

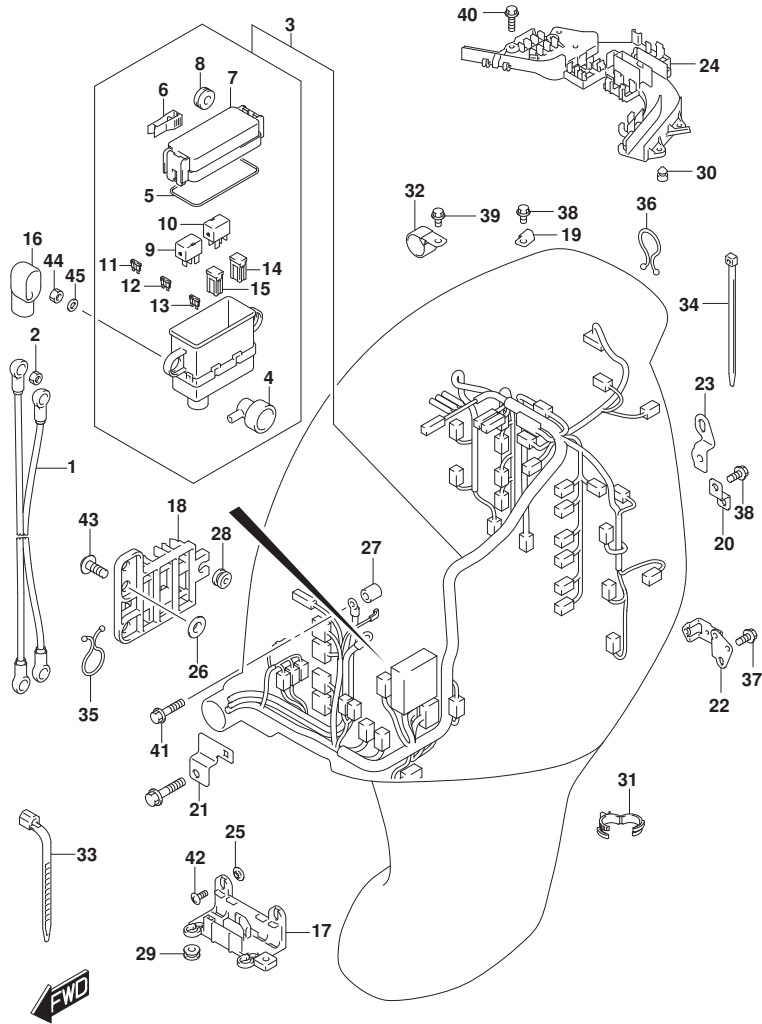


FIG.322A (1-E-11) HARNESS (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L00	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3-1	36610-98L00	HARNESS ASSY, WIRING	1	UP TO VIN.811005 ->36610-98L20 USED WITH 33411-98L10(6PCS)
3-2	36610-98L20	HARNESS ASSY, WIRING	1	FROM VIN.811006
3-3	36610-98L10	HARNESS ASSY, WIRING	1	FROM VIN.812086
4	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
5	36721-96J00	.O RING, UPR COVER	1	
6	36737-96J00	.PULLER, FUSE	1	
7	36738-98J00	.COVER, FUSE CASE UPR	1	
8	09320-08021	.CUSHION	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10501	.FUSE (10A)	2	
12	09481-15501	.FUSE (15A)	5	
13	09481-30501	.FUSE (30A)	3	
14	09481-40401	.FUSE (40A)	1	
15	09481-60401	.FUSE (60A)	2	
16	36612-96J00	CAP, TERMINAL	1	
17	36616-98L00	HOLDER, CABLE	1	
18	36616-98L10	HOLDER, CONNECTOR	1	
19	36617-88L00	BRACKET, PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET, HARNESS	5	
21	36617-98L10	BRACKET, HARNESS	1	
22	36617-98L30	BRACKET, HARNESS	1	
23	36617-98L50	BRACKET, HARNESS	2	
24	36626-98L00	HOLDER, MAIN HARNESS	1	
25	09169-06053	WASHER	2	
26	09169-06053	WASHER	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04009	BUSH	1	

FIG.322A

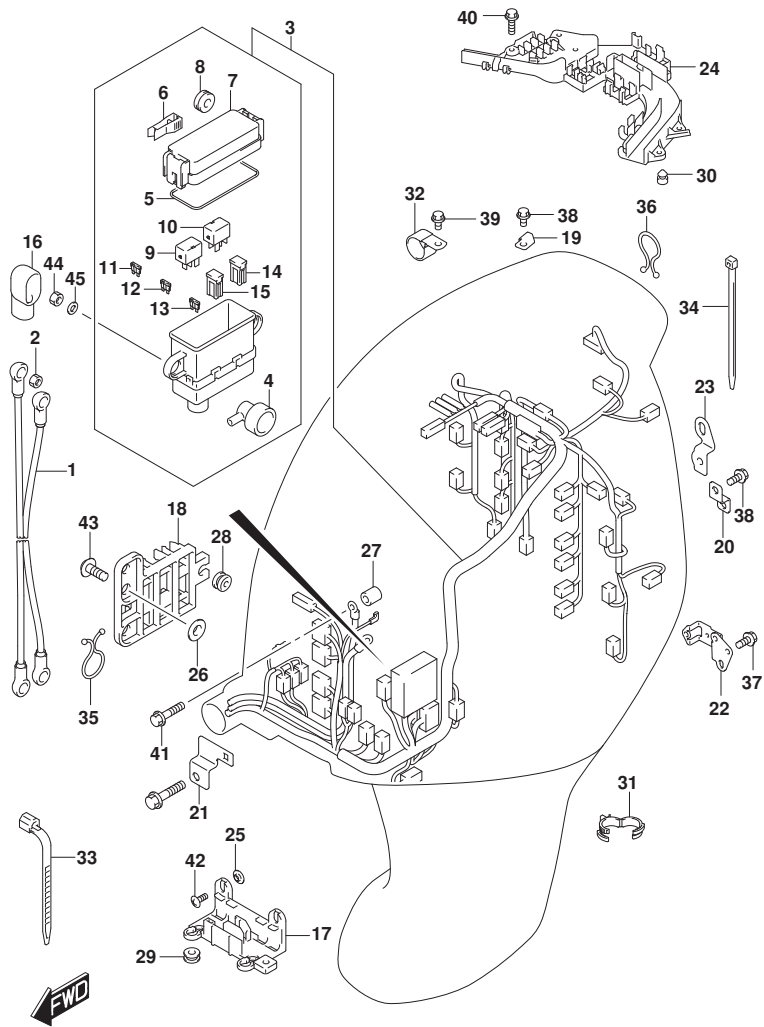


FIG.322A (1-E-12) HARNESS (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09320-08076	GROMMET	2	
30	09321-06013	CUSHION	1	
31	09403-25001	CLAMP	1	
32	09403-26401	CLAMP	1	
33	09407-11401	CLAMP (L:95)	1	
34	09407-25402	CLAMP (L:250)	1	
35	09408-00008	CLIP (ID:20)	3	
36	09408-00327	CLIP, HARNESS (ID:42)	4	
37	01547-06127	BOLT	2	
38	01550-0612C	BOLT	7	
39	01550-0612C	BOLT	1	
40	01550-0620C	BOLT	4	
41	01550-08357	BOLT	1	
42	02142-06167	SCREW	2	
43	02142-06167	SCREW	2	
44	08310-00067	NUT	1	
45	08321-01067	LOCK WASHER	1	

DF350A E01

FIG.322B

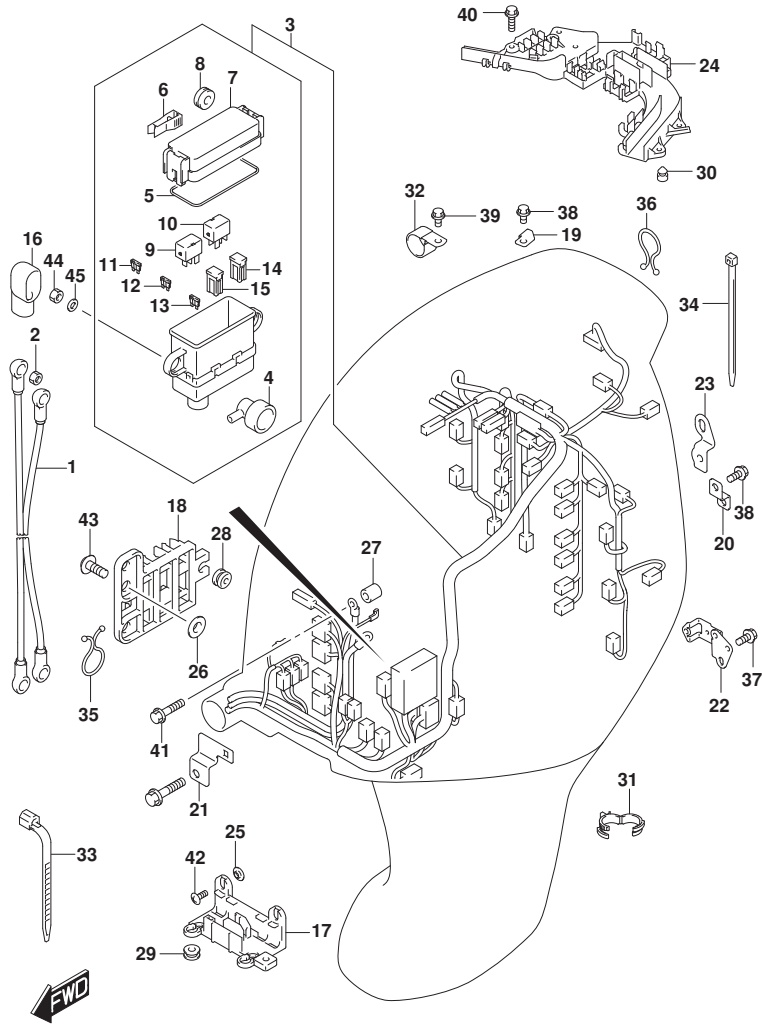


FIG.322B (1-E-13) HARNESS (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L00	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98L10	HARNESS ASSY, WIRING	1	
4	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
5	36721-96J00	.O RING, UPR COVER	1	
6	36737-96J00	.PULLER, FUSE	1	
7	36738-98J00	.COVER, FUSE CASE UPR	1	
8	09320-08021	.CUSHION	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10501	.FUSE (10A)	2	
12	09481-15501	.FUSE (15A)	5	
13	09481-30501	.FUSE (30A)	3	
14	09481-40401	.FUSE (40A)	1	
15	09481-60401	.FUSE (60A)	2	
16	36612-96J00	CAP, TERMINAL	1	
17	36616-98L00	HOLDER, CABLE	1	
18	36616-98L10	HOLDER, CONNECTOR	1	
19	36617-88L00	BRACKET, PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET, HARNESS	5	
21	36617-98L10	BRACKET, HARNESS	1	
22	36617-98L30	BRACKET, HARNESS	1	
23	36617-98L50	BRACKET, HARNESS	2	
24	36626-98L00	HOLDER, MAIN HARNESS	1	
25	09169-06053	WASHER	2	
26	09169-06053	WASHER	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04009	BUSH	1	
29	09320-08076	GROMMET	2	
30	09321-06013	CUSHION	1	
31	09403-25001	CLAMP	1	
32	09403-26401	CLAMP	1	
33	09407-11401	CLAMP (L:95)	1	
34	09407-25402	CLAMP (L:250)	1	

FIG.322B


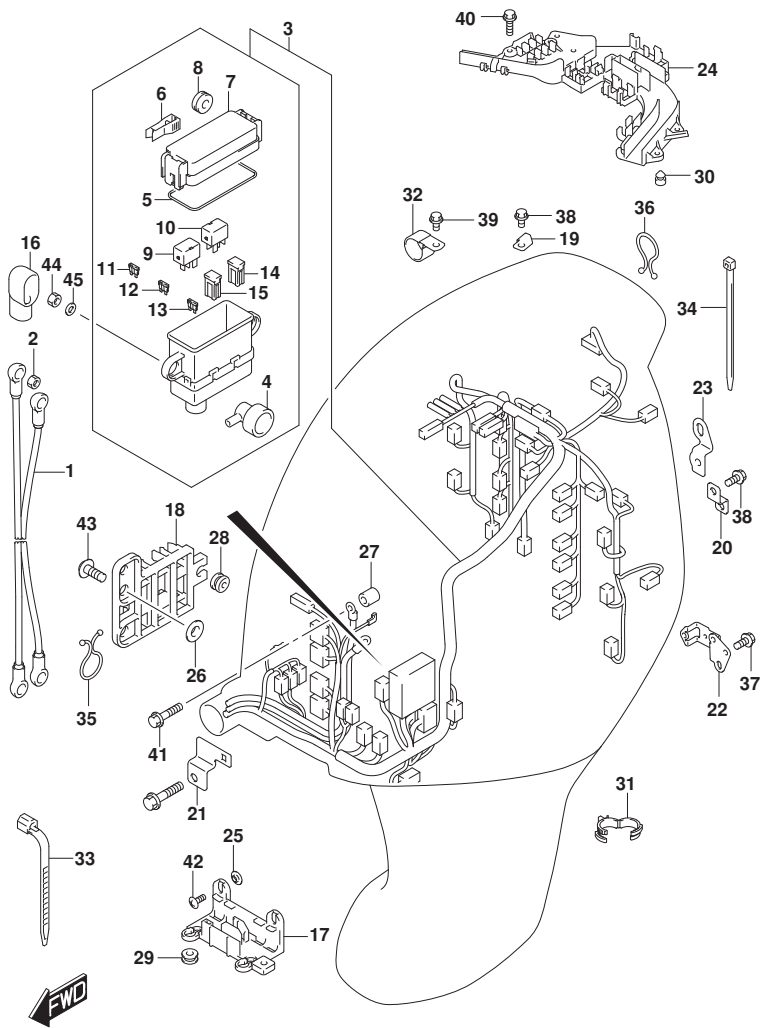


FIG.322B (1-E-14) HARNESS (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00008	CLIP (ID:20)	3	
36	09408-00327	CLIP, HARNESS (ID:42)	4	
37	01547-06127	BOLT	2	
38	01550-0612C	BOLT	7	
39	01550-0612C	BOLT	1	
40	01550-0620C	BOLT	4	
41	01550-08357	BOLT	1	
42	02142-06167	SCREW	2	
43	02142-06167	SCREW	2	
44	08310-00067	NUT	1	
45	08321-01067	LOCK WASHER	1	

DF325A E01
DF325A E40

FIG.326A

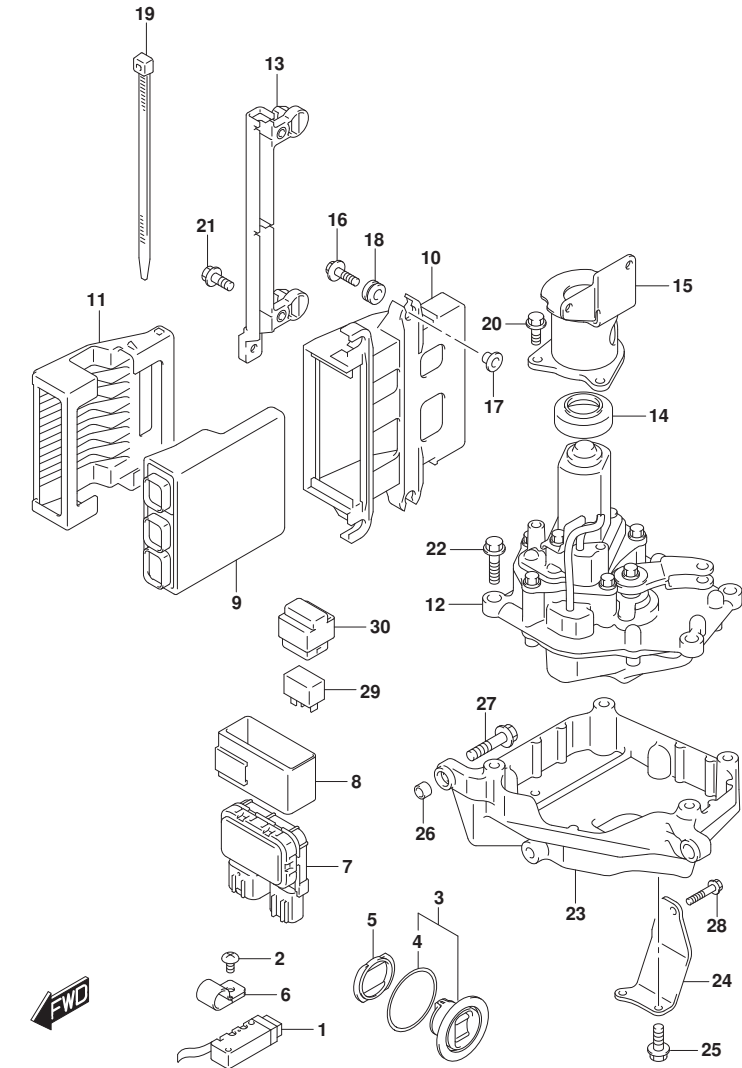

DF350A_E01_018_326A
PTT SWITCH/ENGINE CONTROL UNIT


FIG.326A (1-E-15) PTT SWITCH/ENGINE CONTROL UNIT (DF350A:UP TO VIN.811005)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J20	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L00	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L10	BRACKET, SHIFT ACTUATOR	1	->38895-98L11 USED WITH 38895-98L20 (1PCS), 01550-06127 (2PCS)
16	09116-06215	BOLT (6X30)	2	
17	09169-06062	WASHER	2	
18	09320-09016	CUSHION	4	
19	09407-14407	CLAMP (L:145)	2	
20	01550-0616C	BOLT	3	
21	01550-0625C	BOLT	2	
22	01560-0830C	BOLT	4	
23	19115-98L00	HOLDER, ACTUATOR	1	
24	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
25	09116-08137	BOLT (8X22)	2	
26	09206-11006	PIN (8.4X11X8)	2	
27	01550-0835C	BOLT	3	
28	01550-0840C	BOLT	1	
29	38860-76F01	RELAY, ACTUATOR	2	
30	38915-90J00	HOLDER, RELAY	2	

DF350A E01

DF350A_E01_018

FIG.326B

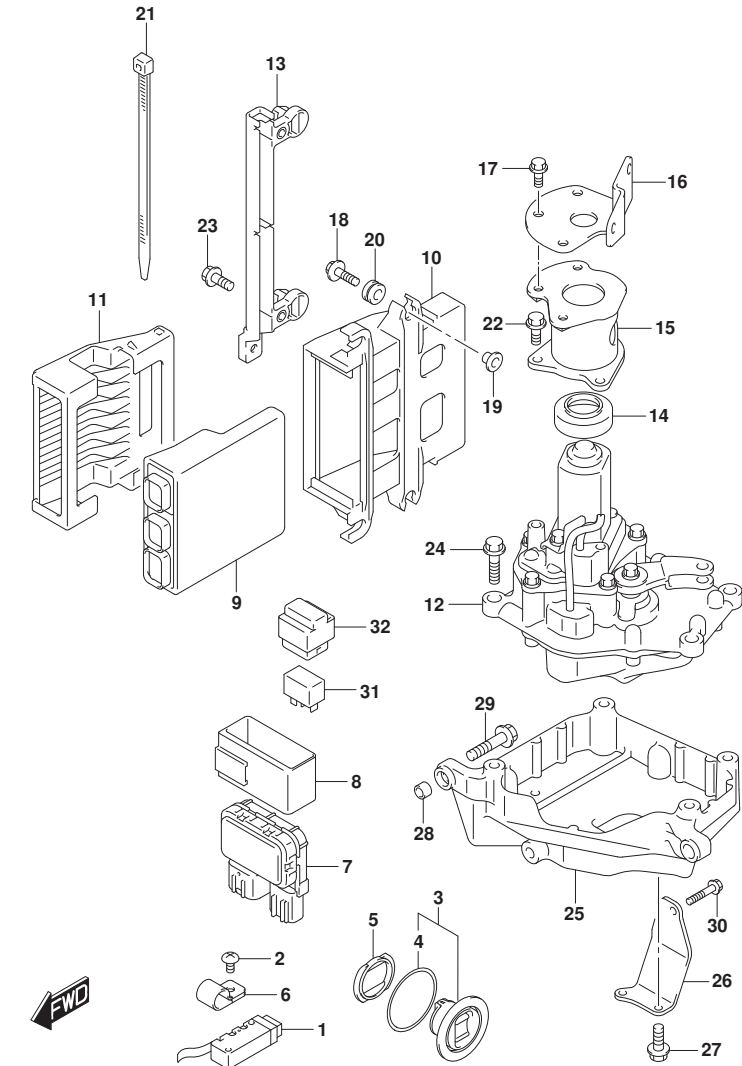


DF350A_E01_018_326B
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326B (1-F-2) PTT SWITCH/ENGINE CONTROL UNIT (DF350A:FROM VIN.811006)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J21	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L00	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET, SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET, ACTE UPPER	1	
17	01550-0612C	BOLT	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER	2	
20	09320-09016	CUSHION	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT	3	
23	01550-0625C	BOLT	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER, ACTUATOR	1	
26	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY, ACTUATOR	2	
32	38915-90J00	HOLDER, RELAY	2	

DF350A E01

FIG.326C

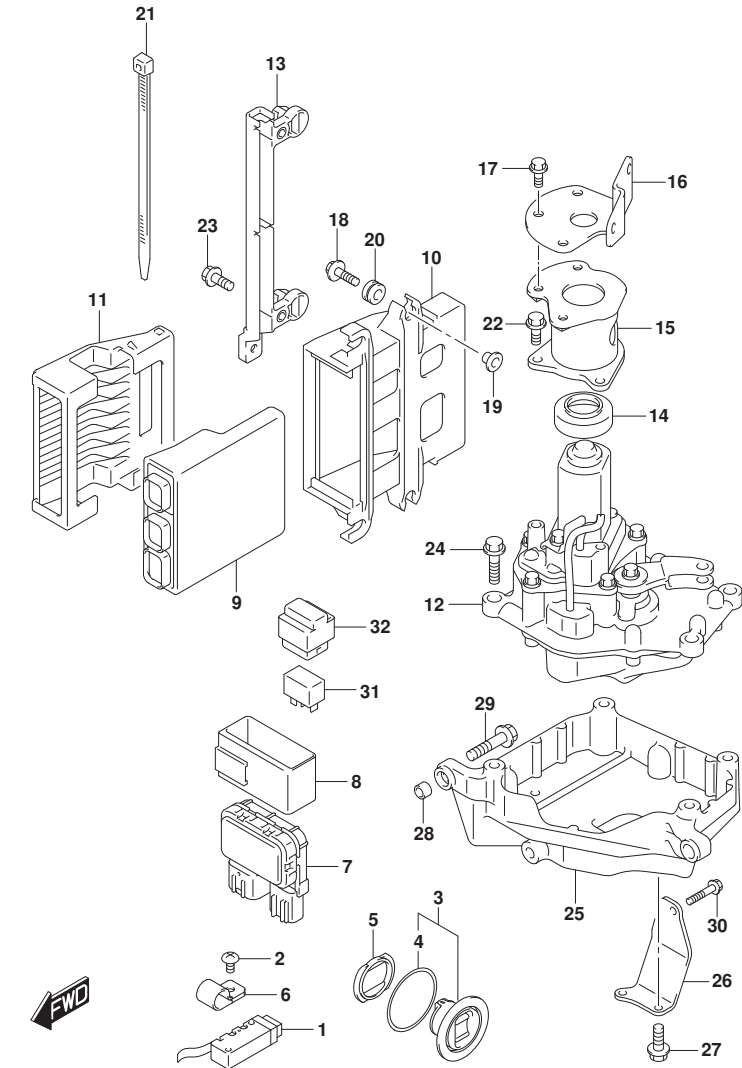


DF350A_E01_018_326C
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326C (1-F-3) PTT SWITCH/ENGINE CONTROL UNIT (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J21	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L30	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET, SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET, ACTE UPPER	1	
17	01550-0612C	BOLT	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER	2	
20	09320-09016	CUSHION	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT	3	
23	01550-0625C	BOLT	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER, ACTUATOR	1	
26	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY, ACTUATOR	2	
32	38915-90J00	HOLDER, RELAY	2	

DF325A E01

FIG.326D

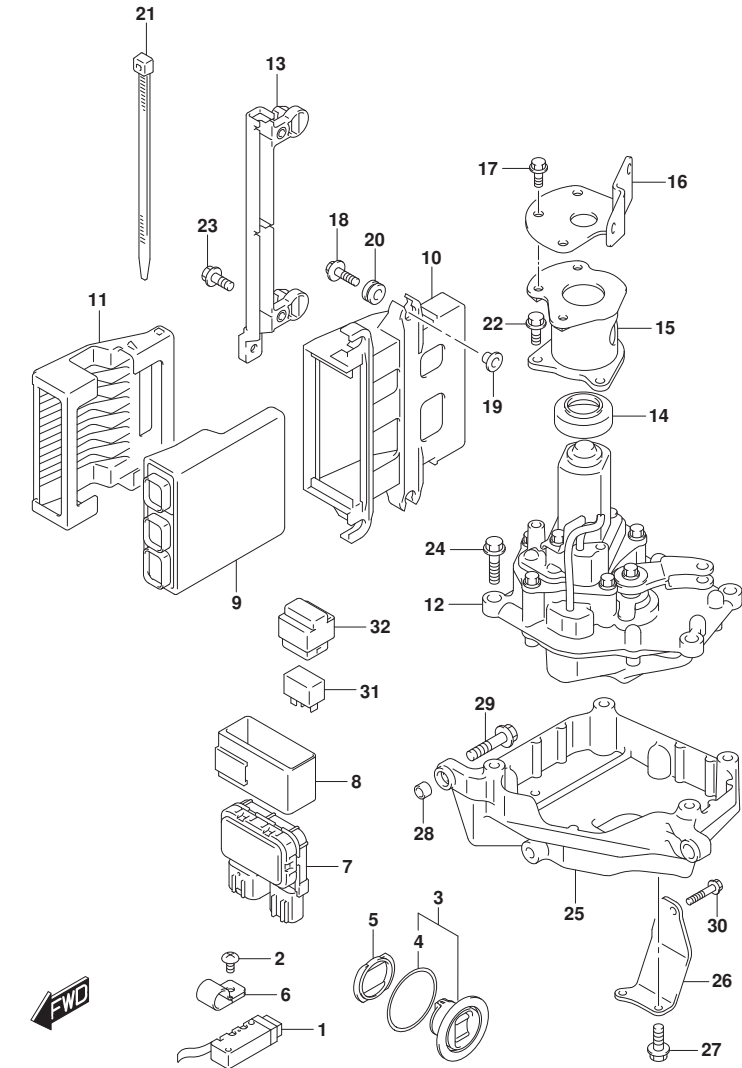

DF350A_E01_018_326D
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326D (1-F-4) PTT SWITCH/ENGINE CONTROL UNIT (DF325A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J21	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L40	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET, SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET, ACTE UPPER	1	
17	01550-0612C	BOLT	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER	2	
20	09320-09016	CUSHION	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT	3	
23	01550-0625C	BOLT	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER, ACTUATOR	1	
26	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY, ACTUATOR	2	
32	38915-90J00	HOLDER, RELAY	2	

DF325A E40

FIG.331A


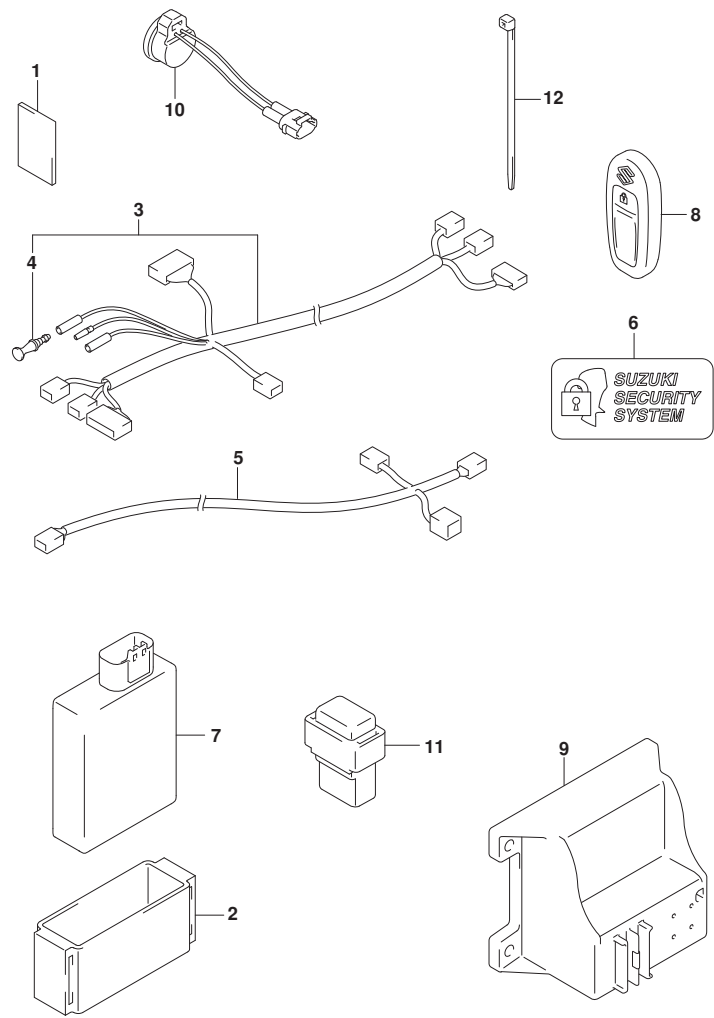


FIG.331A (1-F-5) KEY LESS START (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32851-93J00	CUSHION, KLS CONTROLLER	1	
2	32980-38F00	HOLDER, KLS CONTROLLER	1	
3	36623-96L01	HARNESS ASSY, KLS CONT	1	
4	36615-96300	.TERMINAL, RESIN	1	
5	36662-96L00	HARNESS ASSY, KLS CAN	1	L:6500+110
6	37117-96L00	DECAL, KLS	2	
7	37171-96L02	CONTROLLER ASSY, KLS 433MHZ	1	
8	37172-96L01	REMOCON ASSY, KLS 433MHZ	2	
9	37173-96L10	HOLDER, KLS PARTS	1	
10	38500-93J90	BUZZER ASSY	1	
11	38860-96L01	RELAY ASSY, KLS	1	
12	09407-14407	CLAMP (L:145)	1	

DF350A E01
DF325A E01

FIG.335A

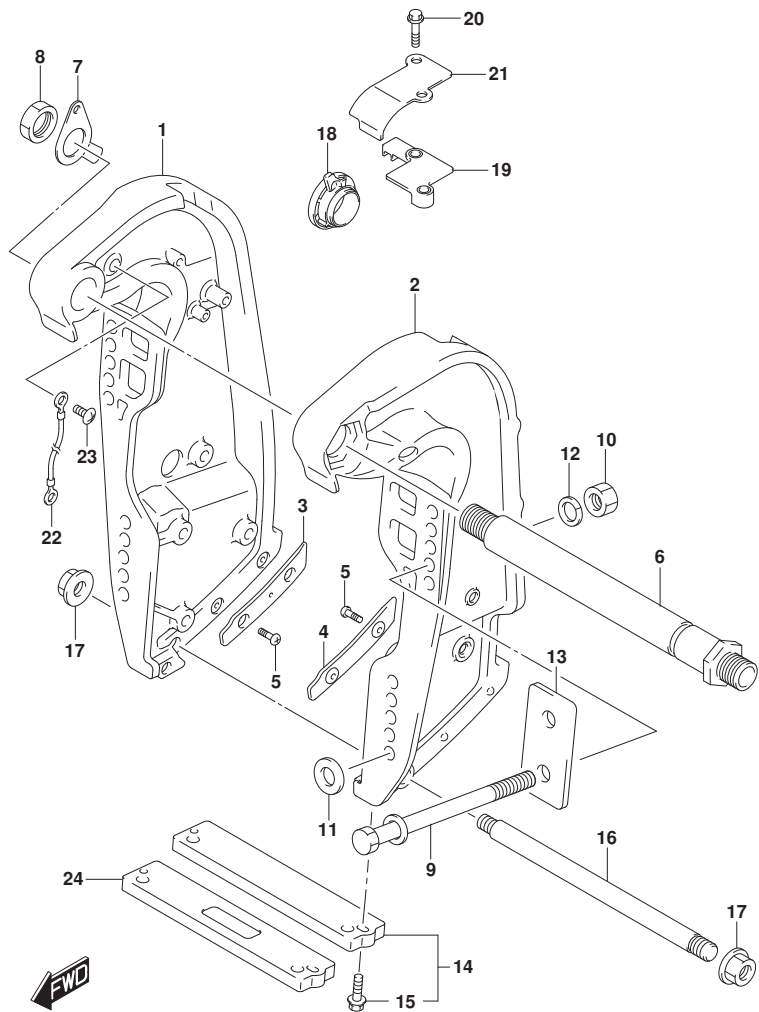


DF350A_E01_018_335A
CLAMP BRACKET

FIG.335A (1-F-6) CLAMP BRACKET (DF350A:UP TO VIN.811463)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-93J16-YAY	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-93J16-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-93J08-YAY	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-93J08-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41117-93J02	PLATE, CLAMP BRKT LOWER STBD	1	
4	41122-93J02	PLATE, CLAMP BRKT LOWER PORT	1	
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT, CLAMP BRKT	1	
7	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT	1	
9-1	09100-12086	BOLT (12.7X150)	6	
9-2	09100-12085	BOLT (12.7X115)	1	OPT
9-3	09100-12092	BOLT (12.7X75)	1	OPT
9-4	09100-12125	BOLT (12.7X170)	1	OPT
9-5	09100-12126	BOLT (12.7X190)	1	OPT
10	09159-12062	NUT	6	
11	09160-13022	WASHER (13.2X45X3)	4	
12	09160-13021	WASHER (13.2X26X3)	6	
13	41155-93J02	PLATE, TRANSOM	2	
14	55320-94900	ANODE SET, PROTECTION	1	
15	09116-06121	.BOLT (6X25)	2	
16	45421-87D03	PIN, TILT LOCK	1	
17	09159-14020	NUT	2	
18	48140-93J01	CAM, TILT LIMIT SWITCH	1	
19	48144-93J00	HOLDER, TILT LIMIT SWITCH	1	
20	09103-06278	BOLT (6X25)	2	
21	48145-93J00	COVER, TILT LIMIT SWITCH	1	
22	36894-87D00	LEAD (CLAMP TO SWIVEL)	1	
23	09125-06063	SCREW (6X10)	2	
24	55321-94910	ANODE (MAGNESIUM)	1	OPT

DF350A E01

FIG.335B

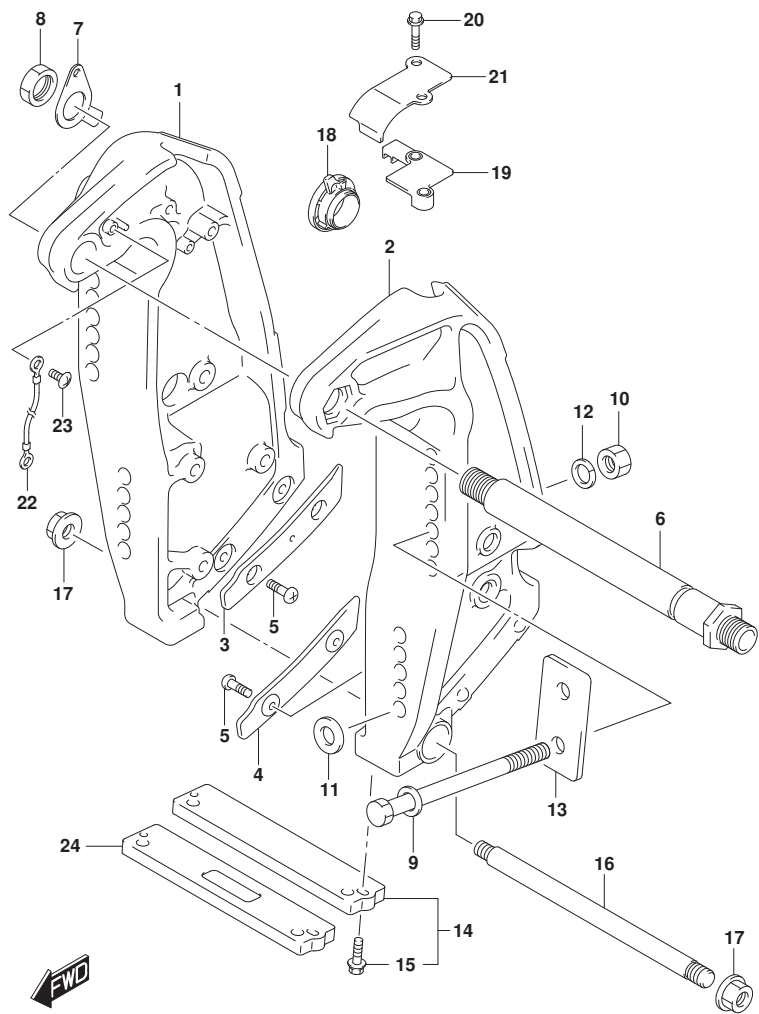


DF350A_E01_018_335B
CLAMP BRACKET

FIG.335B (1-F-7) CLAMP BRACKET (DF350A:FROM VIN.811464)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-98L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-98L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-98L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-98L00-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41117-93J02	PLATE, CLAMP BRKT LOWER STBD	1	
4	41122-93J02	PLATE, CLAMP BRKT LOWER PORT	1	
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT, CLAMP BRKT	1	
7	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT	1	
9-1	09100-12086	BOLT (12.7X150)	6	
9-2	09100-12085	BOLT (12.7X115)	1	OPT
9-3	09100-12092	BOLT (12.7X75)	1	OPT
9-4	09100-12125	BOLT (12.7X170)	1	OPT
9-5	09100-12126	BOLT (12.7X190)	1	OPT
10	09159-12062	NUT	6	
11	09160-13022	WASHER (13.2X45X3)	4	
12	09160-13021	WASHER (13.2X26X3)	6	
13	41155-93J02	PLATE, TRANSOM	2	
14	55320-94900	ANODE SET, PROTECTION	1	
15	09116-06121	.BOLT (6X25)	2	
16	45421-87D03	PIN, TILT LOCK	1	
17	09159-14020	NUT	2	
18	48140-93J01	CAM, TILT LIMIT SWITCH	1	
19	48144-93J00	HOLDER, TILT LIMIT SWITCH	1	
20	09103-06278	BOLT (6X25)	2	
21	48145-93J00	COVER, TILT LIMIT SWITCH	1	
22	36894-87D00	LEAD (CLAMP TO SWIVEL)	1	
23	09125-06063	SCREW (6X10)	2	
24	55321-94910	ANODE (MAGNESIUM)	1	OPT

DF350A E01

FIG.335C

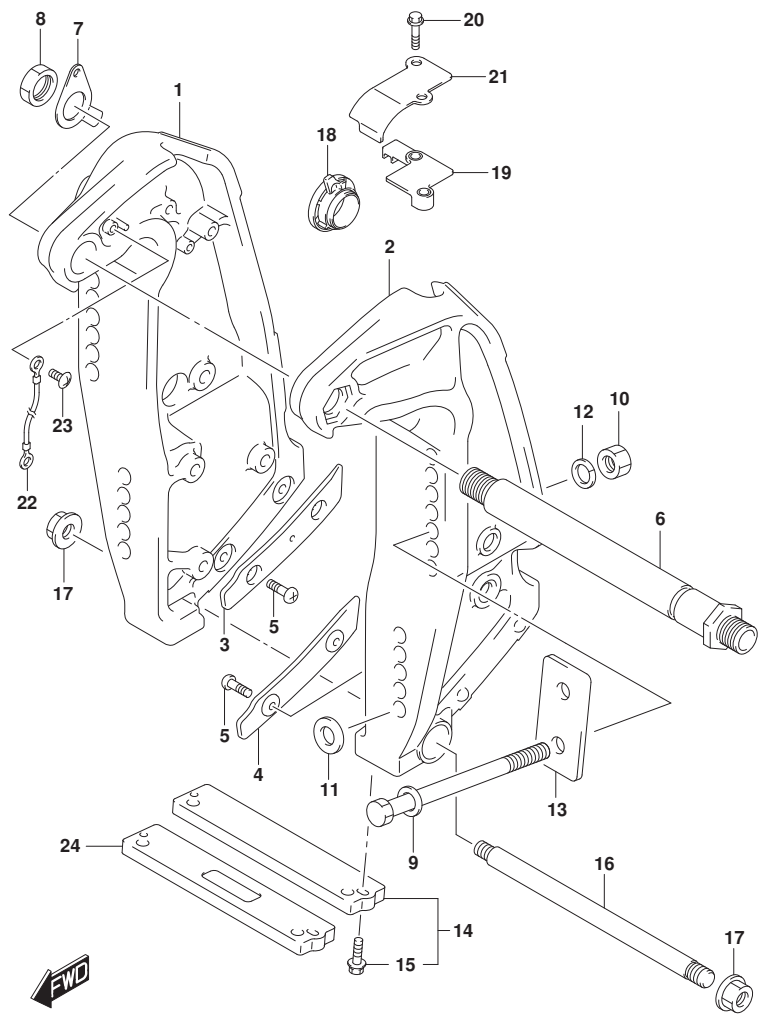


DF350A_E01_018_335C
CLAMP BRACKET

FIG.335C (1-F-8) CLAMP BRACKET (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-98L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-98L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-98L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-98L00-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41117-93J02	PLATE, CLAMP BRKT LOWER STBD	1	
4	41122-93J02	PLATE, CLAMP BRKT LOWER PORT	1	
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT, CLAMP BRKT	1	
7	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT	1	
9-1	09100-12086	BOLT (12.7X150)	6	
9-2	09100-12085	BOLT (12.7X115)	1	OPT
9-3	09100-12092	BOLT (12.7X75)	1	OPT
9-4	09100-12125	BOLT (12.7X170)	1	OPT
9-5	09100-12126	BOLT (12.7X190)	1	OPT
10	09159-12062	NUT	6	
11	09160-13022	WASHER (13.2X45X3)	4	
12	09160-13021	WASHER (13.2X26X3)	6	
13	41155-93J02	PLATE, TRANSOM	2	
14	55320-94900	ANODE SET, PROTECTION	1	
15	09116-06121	.BOLT (6X25)	2	
16	45421-87D03	PIN, TILT LOCK	1	
17	09159-14020	NUT	2	
18	48140-93J01	CAM, TILT LIMIT SWITCH	1	
19	48144-93J00	HOLDER, TILT LIMIT SWITCH	1	
20	09103-06278	BOLT (6X25)	2	
21	48145-93J00	COVER, TILT LIMIT SWITCH	1	
22	36894-87D00	LEAD (CLAMP TO SWIVEL)	1	
23	09125-06063	SCREW (6X10)	2	
24	55321-94910	ANODE (MAGNESIUM)	1	OPT

DF325A E01
DF325A E40

FIG.336A

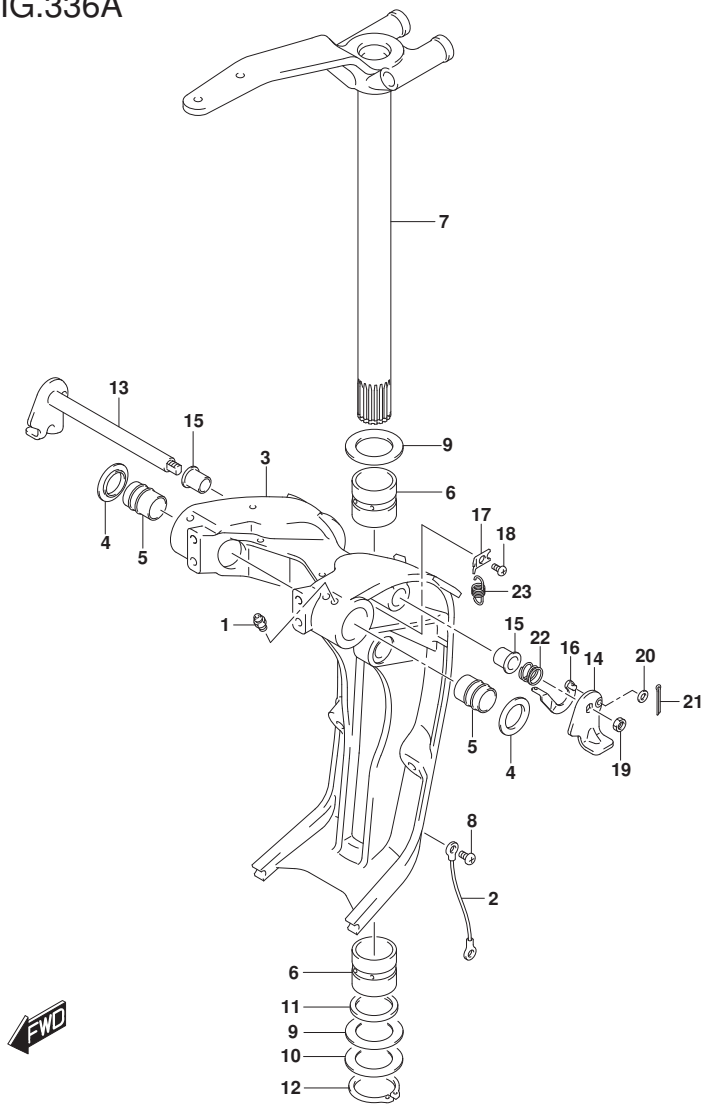

DF350A_E01_018_336A
SWIVEL BRACKET

FIG.336A (1-F-9) SWIVEL BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE SWIVEL BRKT	4	
2	36894-87D00	LEAD (SWIVEL TO MOUNT BRKT)	1	
3-1	43111-93J24-YAY	BRACKET, SWIVEL (BLACK)	1	
3-2	43111-93J24-Y5S	BRACKET, SWIVEL (WHITE)	1	
4	43114-93J00	WASHER, SWIVEL TO CLAMP BRKT	2	
5	43211-93J00	BUSH, CLAMP SHAFT SWIVEL	2	
6	43711-97E01	BUSH, STEERING	2	
7-1	43750-93J21-YAY	BRACKET, STEERING (BLACK)	1	
7-2	43750-93J21-Y5S	BRACKET, STEERING (WHITE)	1	
8	09125-06063	SCREW (6X10)	1	
9	09160-39004	WASHER (39.5X65.5X1)	2	
10	09181-39001	SHIM (39.5X64X0.3)	AR	
11	09282-39001	OIL SEAL (39X51X5)	1	
12	09380-38003	CIRCLIP	1	
13	41220-93J11	LEVER, TILT LOCK	1	
14	41234-93J11	LEVER, TILT LOCK PORT	1	
15	41224-95E01	BUSH, TILT STOPPER ROD	2	
16	41230-96J00	LINK, TILT LOCK LEVER	1	
17	41233-95E10	BRACKET, TILT LOCK SPRING	1	
18	09125-06063	SCREW (6X10)	1	
19	09140-10032	NUT	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09204-01006	PIN	1	
22	09440-19028	SPRING	1	
23	09443-10043	SPRING	1	

FIG.337A

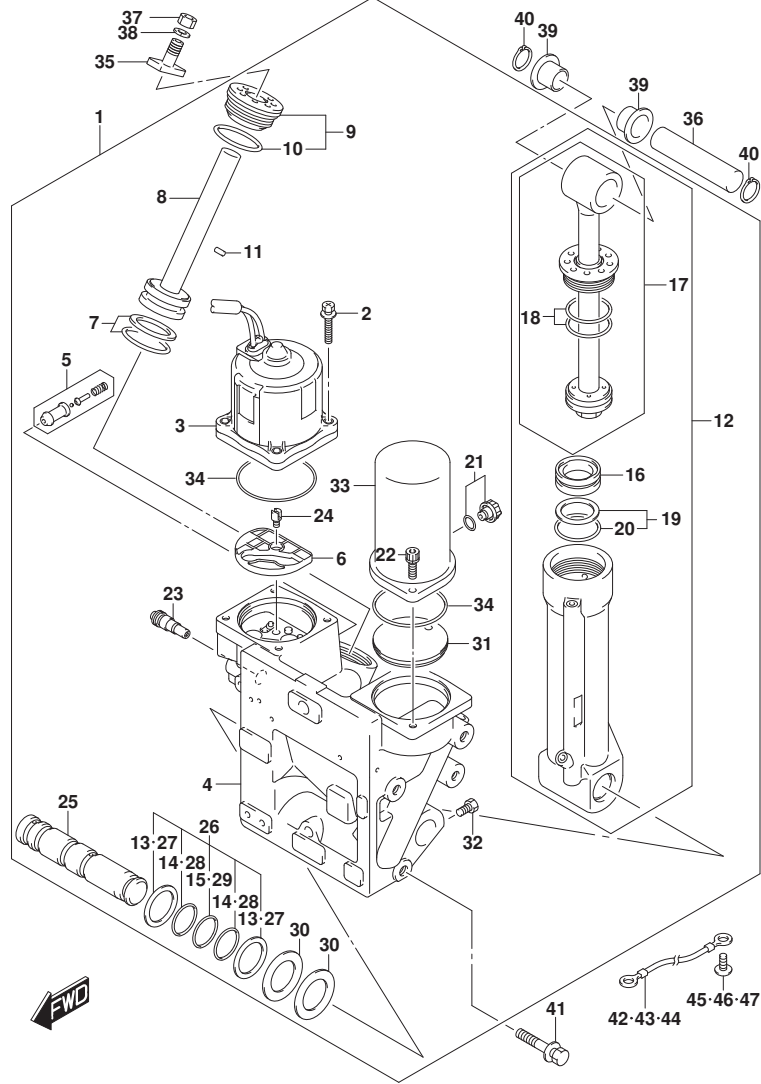


FIG.337A (1-F-10) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-98L00	TRIM ASSY, POWER WITH TILT	1	
2	31281-92J10	..BOLT	4	
3	38100-98L00	..MOTOR ASSY, PTT	1	
4	48500-98L00	..MANIFOLD ASSY	1	
5	48320-93J00	..VALVE SET, UP BLOW	1	
6	48582-95E01	..FILTER	1	
7	48605-93J00	..O RING SET	1	
8	48610-98L00	..PISTON / RAM	2	
9	48630-98L00	..ROD GUIDE	2	
10	48633-93J00	...O RING	2	
11	48691-93J00	..CHECK VALVE	1	
12	48400-98L00	..CYLINDER ASSY	1	
13	48451-93J00	..BACK UP RING	2	
14	48452-93J00	..O RING	2	
15	48452-93J10	..O RING	1	
16	48650-93J00	..PISTON, FREE	1	
17	48401-98L00	..PISTON ROD SUB ASSY	1	
18	48427-87D00	...O RING, PISTON	1	
19	48627-93J00	..O RING SET	1	
20	48427-87D00	...O RING, PISTON	1	
21	48572-87J10	..PLUG	1	
22	48862-87J20	..BOLT, RESERVOIR	2	
23	48864-93J01	..MANUAL VALVE	1	
24	48583-95E00	..JOINT, DRIVE	1	
25	48121-93J20	..SHAFT	1	
26	48125-93J10	..O RING SET	1	
27	48451-93J00	..BACK UP RING	4	
28	48452-93J00	..O RING	4	
29	48452-93J10	..O RING	2	
30	48126-93J00	..WASHER, TILT CYL TO MANIF	2	
31	48573-93J00	..COVER	1	
32	48128-93J11	..BOLT	1	
33	48571-93J00	..RESERVOIR TANK	1	
34	48585-95E00	..O RING	2	

FIG.337A

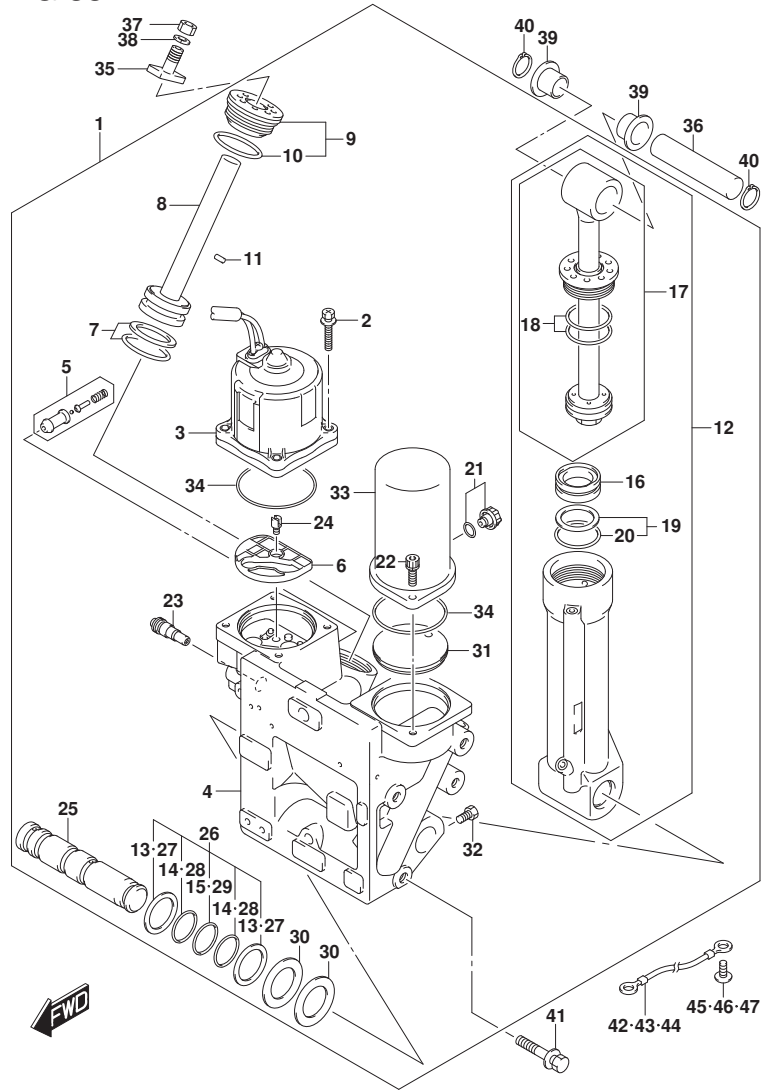


FIG.337A (1-F-11) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	48311-93J01	PAD, TRIM CYL RAM	2	
36	48321-93J00	SHAFT, TILT CYL UPPER	1	
37	09140-10031	NUT	2	
38	09162-10005	LOCK WASHER	2	
39	09306-24001	BUSH	2	
40	09380-21002	CIRCLIP	2	
41	09116-10175	BOLT (10X50)	8	
42	36894-87D00	LEAD, PTT TO ANODE (L:165)	1	
43	36895-87D01	LEAD, PTT TO ANODE (L:230)	1	
44	36895-87D01	LEAD, PTT TO ANODE (L:230)	1	
45	09125-06063	SCREW (6X10)	1	
46	09125-06063	SCREW (6X10)	1	
47	09125-06063	SCREW (6X10)	1	

FIG.340A

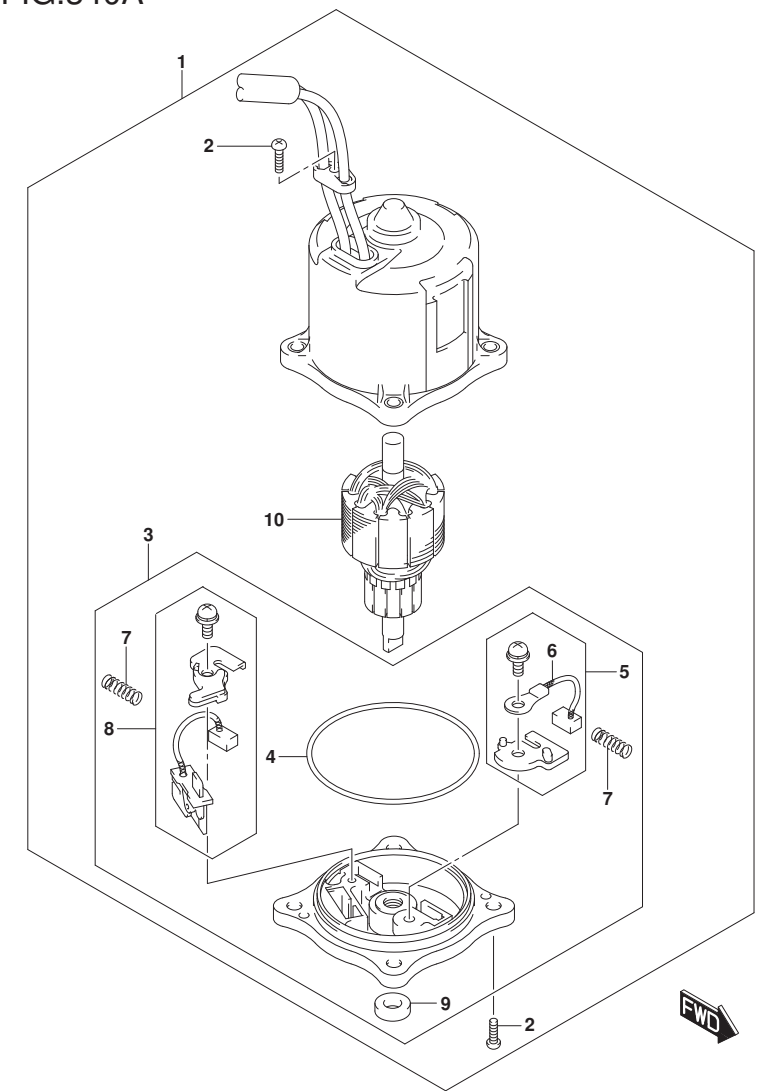


FIG.340A (1-F-12) PTT MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-98L00	MOTOR ASSY, PTT	1	
2	31111-94900	.SCREW, YOKE	3	
3	31173-94920	.HOLDER ASSY, BRUSH	1	
4	31123-94910	..O RING	1	
5	31133-90J10	..BRUSH SET, PLUS	1	
6	31133-94910	...BRUSH	1	
7	31135-94900	..SPRING	2	
8	31136-90J20	..BREAKER	1	
9	33799-97E00	..OIL SEAL	1	
10	31311-93J00	..ARMATURE	1	

FIG.401A

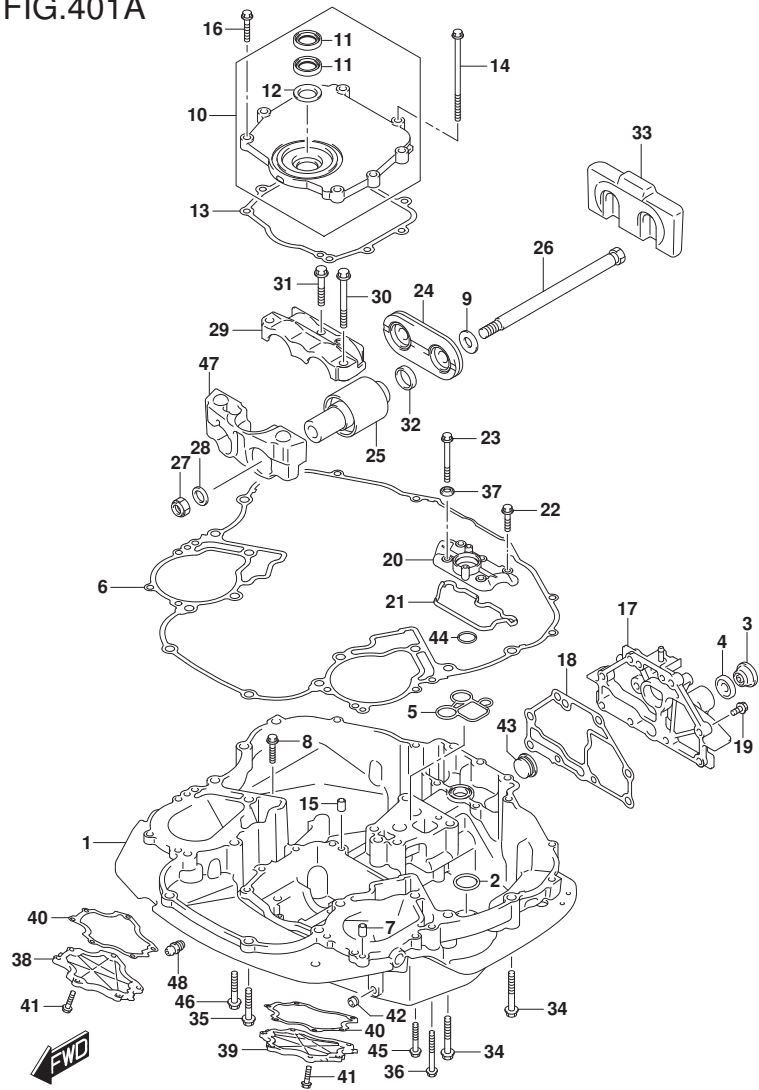


FIG.401A (1-F-13) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	51111-98L00-YAY	HOLDER, ENGINE (BLACK)	1	
1-2	51111-98L00-Y5S	HOLDER, ENGINE (WHITE)	1	
2	16519-93J00	SEAL, ENGINE HOLDER OIL	1	
3	17913-93J00	PLUG, WATER	1	
4	17914-93J00	GASKET, WATER PLUG	1	
5	51116-98L00	SEAL, WATER RETURN	1	
6	51211-98L00	GASKET, ENGINE HOLDER	1	
7	09206-08001	PIN (8X11)	2	
8	01550-1050A	BOLT	4	
9	09160-14076	WASHER (14.5X32X3)	2	
10	51120-98L00	COVER, MOUNT OIL SEAL	1	
11	51124-93J01	.OIL SEAL	2	
12	51125-93J00	.SCRAPER	1	
13	51123-98L00	GASKET, MOUNT OIL SEAL COVER	1	
14	09103-08109	BOLT (8X120)	2	
15	09206-08001	PIN (8X11)	2	
16	01550-0830A	BOLT	6	
17	51140-98L00-019	COVER, ENGINE HOLDER (BLACK)	1	
18	51142-98L00	GASKET, ENGINE HOLDER COVER	1	
19	09116-08122	BOLT (8X30)	8	
20	51151-98L00	COVER, ENGINE HOLDER UPPER	1	
21	51152-98L00	SEAL, ENGINE HOLDER UPPER COV	1	
22	01550-0830C	BOLT	3	
23	01550-08607	BOLT	2	
24	54120-98L00	PLATE, UPPER MOUNT	1	
25	54130-98L00	MOUNT, UPPER	2	
26	54112-93J00	BOLT, UPPER MOUNT	2	
27	29159-93J00	NUT, UPPER MOUNT BOLT	2	
28	09160-15051	WASHER (15X24X3)	2	
29	54137-93J02	COVER, UPPER MOUNT	1	
30	09116-10135	BOLT (10X95)	2	
31	09116-10175	BOLT (10X50)	1	
32	54127-98L00	MOUNT, UPPER SIDE	2	
33	54140-98J10	MOUNT, UPPER THRUST REVERSE	1	

FIG.401A

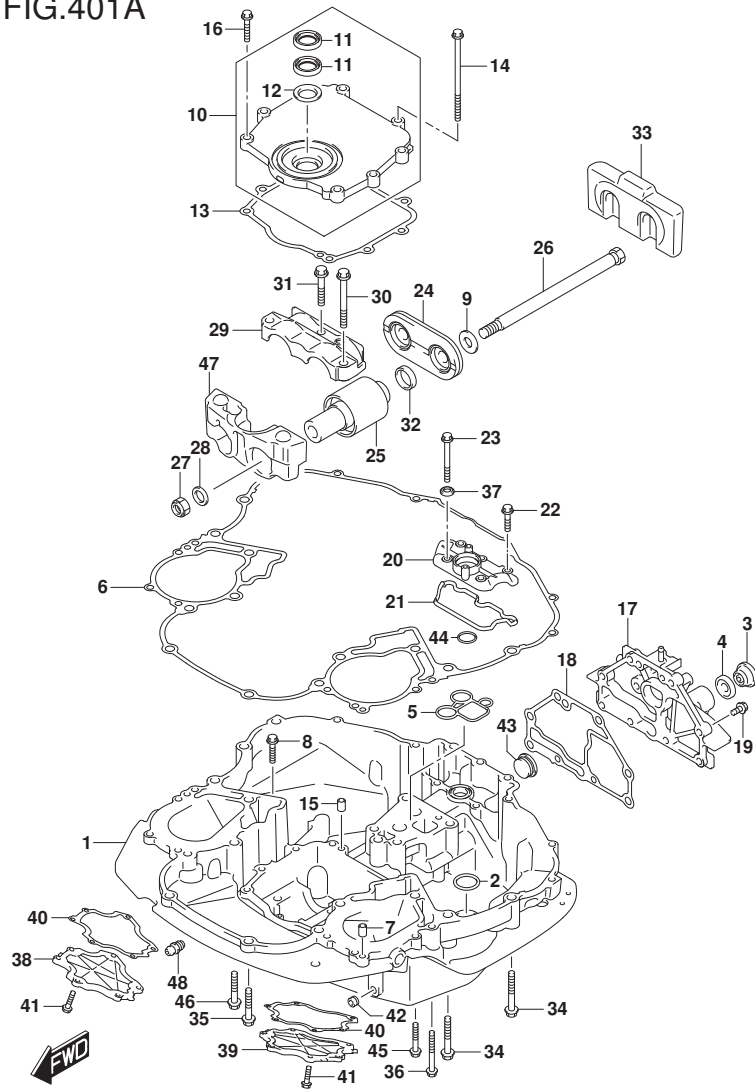


FIG.401A (1-F-14) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	09116-10137	BOLT (10X70)	6	
35	09116-10175	BOLT (10X50)	4	
36	09116-08126	BOLT (8X65)	2	
37	09169-08038	WASHER	2	
38	51161-98L00	COVER, ENG HLDR WATER JKT STBD	1	
39	51165-98L00	COVER, ENG HLDR WATER JKT PORT	1	
40	51162-98L00	GASKET, ENG HLDR WATER JKT COV	2	
41	09116-06516	BOLT (6X25)	12	
42	09246-08006	PLUG	2	
43	09248-26003	PLUG	1	
44	09280-26014	O RING (D:2.4,ID:25.8)	1	
45	09116-08131	BOLT (8X45)	4	
46	09116-10135	BOLT (10X95)	2	
47	54180-98L00	MOUNT, UPPER SIDE	1	
48	22511-99011	NIPPLE, GREASE	1	

FIG.405A

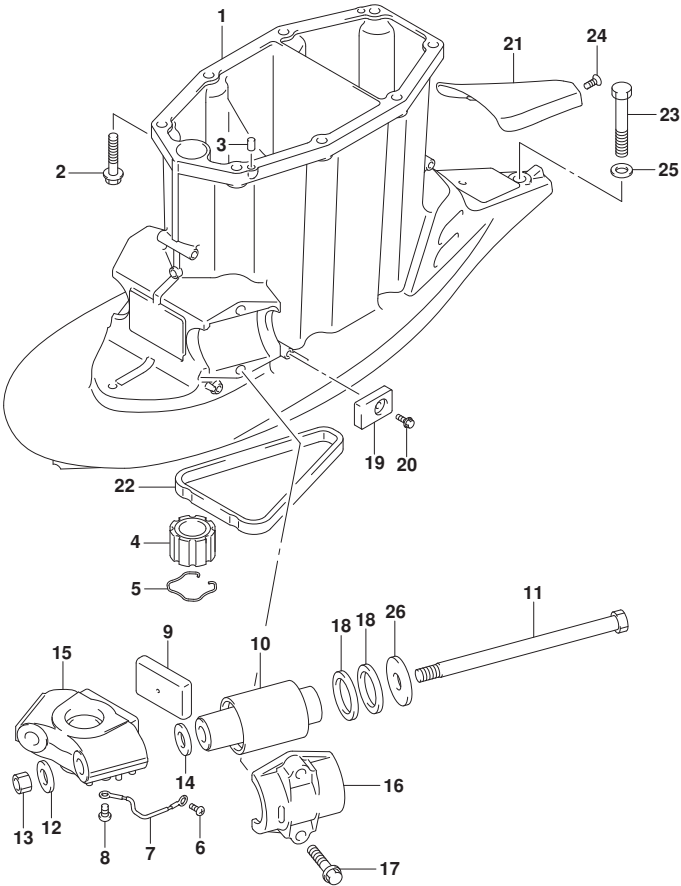


FIG.405A (1-F-15) DRIVE SHAFT HOUSING (X)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	
1-2	52111-98L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD, MT BRKT TO HSG	1	
8	09125-06063	SCREW (6X10)	1	
9	54151-98L00	MOUNT, LOWER THRUST	1	
10	54160-98L00	MOUNT, LOWER	2	
11	54112-93J00	BOLT, LOWER MOUNT	2	
12	09160-14073	WASHER (14.5X34X3)	2	
13	29159-93J00	NUT, LOWER MOUNT BOLT	2	
14	09160-14073	WASHER (14.5X34X3)	2	
15-1	54211-98L00-YAY	BRACKET, LOWER MOUNT (BLACK)	1	
15-2	54211-98L00-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	
16-1	54221-93J00-YAY	COVER, LOWER MOUNT (BLACK)	2	
16-2	54221-93J00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
17	09116-10175	BOLT (10X50)	4	
18	54165-98L00	STOPPER, LOWER THRUST REVERSE	4	
19	55321-93J01	ANODE, PROTECTION	1	
20	09116-06236	BOLT (6X16)	1	
21-1	52115-98L00-YAY	CAP, DRIVE SHAFT HOUSING (BLACK)	1	
21-2	52115-98L00-Y5S	CAP, DRIVE SHAFT HOUSING (WHITE)	1	
22	52118-98L00	SEAL, DRIVE SHAFT HOUSING	1	
23	09100-12124	BOLT (12X75)	2	
24	09120-06016	SCREW	1	
25	09160-12066	WASHER (12.5X22X2.5)	2	
26	09160-16055	WASHER (16X50X4)	2	

FIG.405B

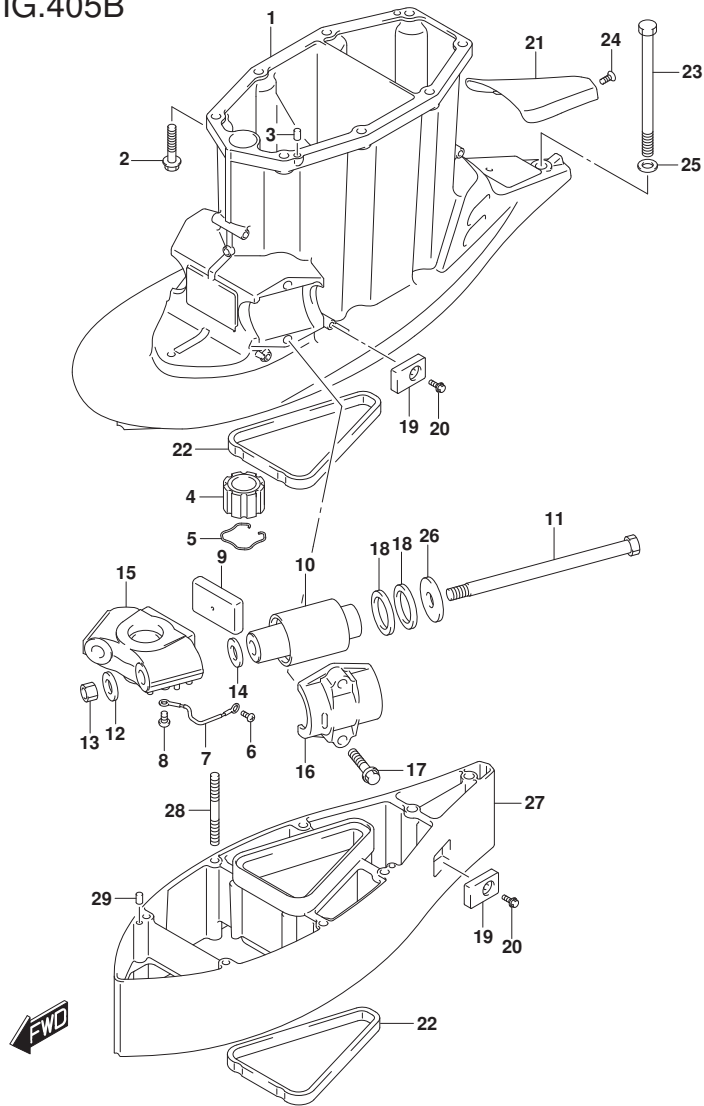


FIG.405B (1-G-2) DRIVE SHAFT HOUSING (XX)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	
1-2	52111-98L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD, MT BRKT TO HSG	1	
8	09125-06063	SCREW (6X10)	1	
9	54151-98L00	MOUNT, LOWER THRUST	1	
10	54160-98L00	MOUNT, LOWER	2	
11	54112-93J00	BOLT, LOWER MOUNT	2	
12	09160-14073	WASHER (14.5X34X3)	2	
13	29159-93J00	NUT, LOWER MOUNT BOLT	2	
14	09160-14073	WASHER (14.5X34X3)	2	
15-1	54211-98L00-YAY	BRACKET, LOWER MOUNT (BLACK)	1	
15-2	54211-98L00-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	
16-1	54221-93J00-YAY	COVER, LOWER MOUNT (BLACK)	2	
16-2	54221-93J00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
17	09116-10175	BOLT (10X50)	4	
18	54165-98L00	STOPPER, LOWER THRUST REVERSE	4	
19	55321-93J01	ANODE, PROTECTION	2	
20	09116-06236	BOLT (6X16)	2	
21-1	52115-98L00-YAY	CAP, DRIVE SHAFT HOUSING (BLACK)	1	
21-2	52115-98L00-Y5S	CAP, DRIVE SHAFT HOUSING (WHITE)	1	
22	52118-98L00	SEAL, DRIVE SHAFT HOUSING	2	
23	54166-95J02	BOLT EXTENSION CASE	2	
24	09120-06016	SCREW	1	
25	09160-12066	WASHER (12.5X22X2.5)	2	
26	09160-16055	WASHER (16X50X4)	2	
27-1	52131-98L00-YAY	CASE, EXTENSION (XX) (BLACK)	1	
27-2	52131-98L00-Y5S	CASE, EXTENSION (XX) (WHITE)	1	
28	09108-10115	BOLT	6	
29	09202-08006	PIN (8X12)	2	

FIG.407A

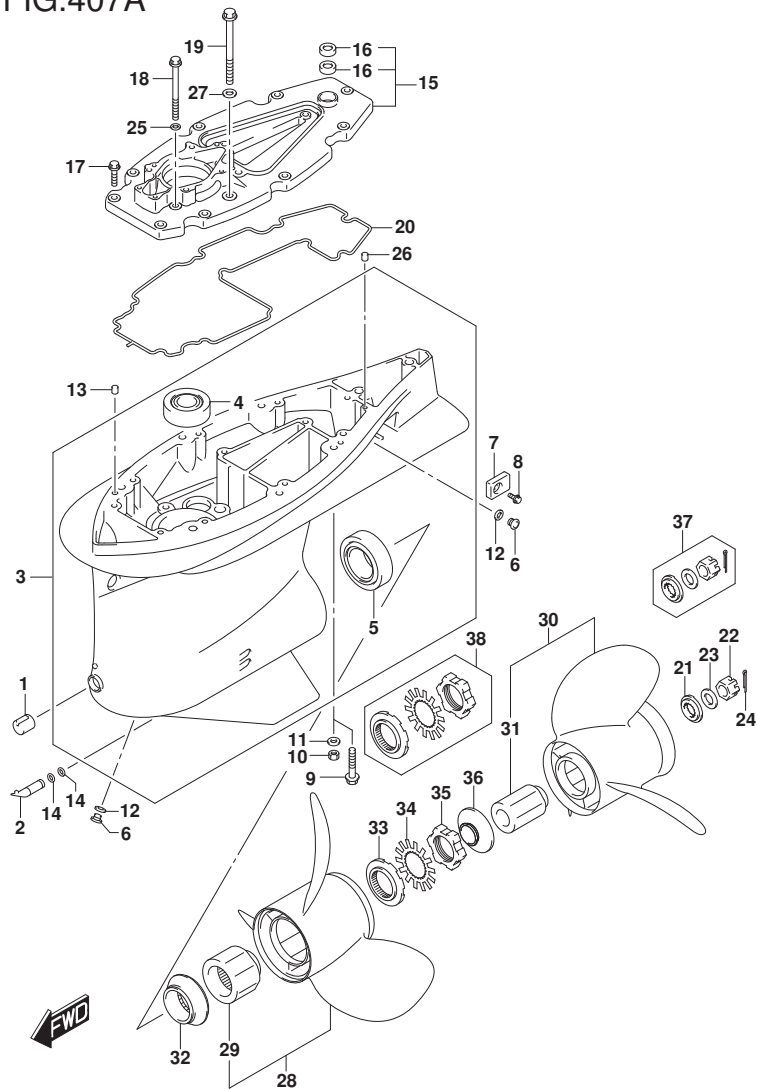


FIG.407A (1-G-3) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17631-98L01	FILTER, WATER	1	
2	17635-98L00	FILTER, SUB WATER	2	
3-1	55100-98850-YAY	CASE SET, GEAR (BLACK)	1	INCLUDE FIG.220A REF29
3-2	55100-98850-Y5S	CASE SET, GEAR (WHITE)	1	
4	57710-98L00	.BEARING ASSY, CONTRA PINION	1	
5	09265-50001	.BEARING (50X90X32)	1	
6	55128-93L00	PLUG, DRAIN	3	
7	55321-93J01	ANODE, PROTECTION	2	
8	09116-06236	BOLT (6X16)	2	
9	09116-10150	BOLT (10X55)	6	W/TRANSOM(X)
10	09140-10031	NUT	6	W/TRANSOM(XX)
11	09160-10141	WASHER (10.5X19X2)	6	W/TRANSOM(XX)
12	09168-10034	GASKET (9.5X16.5X2)	3	
13	09202-08006	PIN (8X12)	2	
14	09280-10012	O RING (D:1.5,ID:10)	2	
15	56130-98L11	HOUSING, DRIVE SFT BRG	1	INCLUDE FIG.220A REF38
16	09282-15008	.OIL SEAL (14.7X25X6.5)	2	
17	29116-93J10	BOLT, DRIVE SHAFT BRG HOUSIN	11	
18	09103-08552	BOLT (8X105)	2	
19	09103-10461	BOLT (10X107)	3	
20	55122-98L00	SEAL, DRIVE SHAFT BRG HSG	1	
21	58641-98L00	SPACER, REAR PROPELLER NUT	1	
22	09141-18005	NUT	1	
23	09160-18019	WASHER (18.5X32X2.5)	1	
24	09204-03003	PIN	1	
25	09169-08038	WASHER	2	
26	09202-06031	PIN (6X12)	1	
27	09169-10023	WASHER	3	
28-1	58500-98L00	PROPELLER, FR (3X15-1/2X21)	1	
28-2	58500-98L10	PROPELLER, FR (3X15-1/2X22.5)	1	
28-3	58500-98L20	PROPELLER, FR (3X15-1/2X24)	1	
28-4	58500-98L30	PROPELLER, FR (3X15-1/2X25.5)	1	
28-5	58500-98L40	PROPELLER, FR (3X15-1/2X27)	1	
28-6	58500-98L50	PROPELLER, FR (3X15-1/2X28.5)	1	

FIG.407A

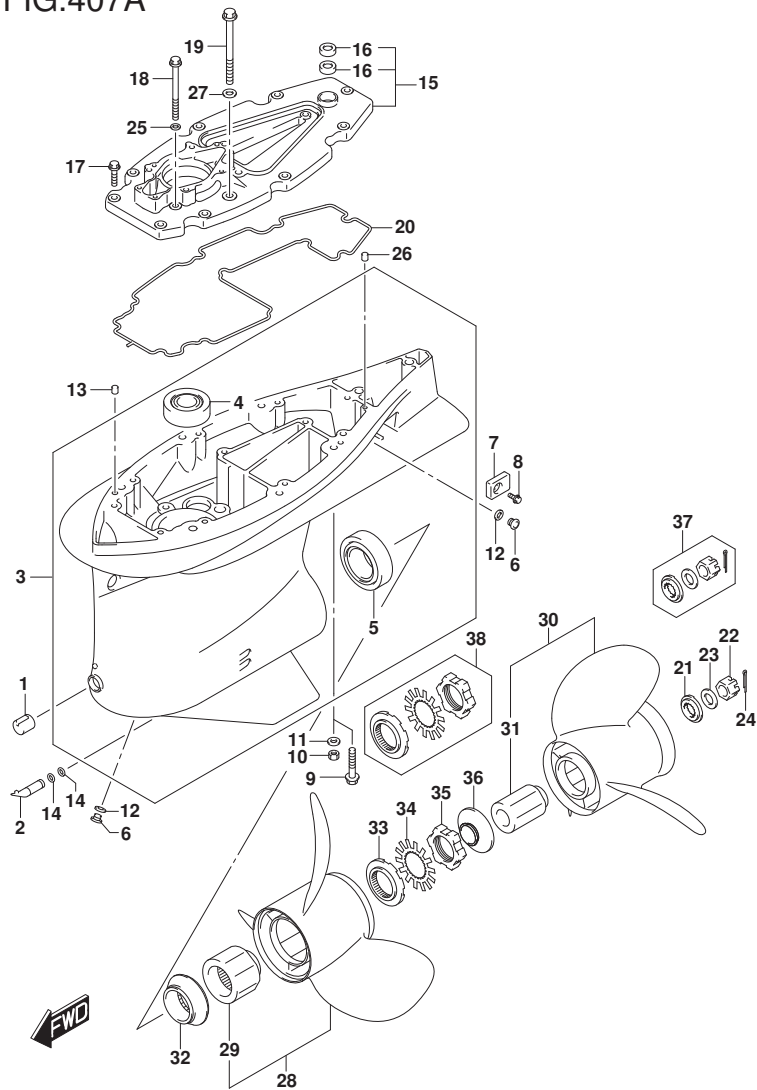


FIG.407A (1-G-4) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28-7	58500-98L60	PROPELLER, FR (3X15-1/2X19.5)	1	
28-8	58500-98L70	PROPELLER, FR (3X15-1/2X30)	1	
28-9	58500-98L80	PROPELLER, FR (3X15-1/2X31.5)	1	
28-10	58500-98L90	PROPELLER, FR (3X15-1/2X18)	1	
29	58520-98L00	.BUSH, FRONT PROPELLER	1	
30-1	58600-98L00	PROPELLER, RR (3X15-1/2X21)	1	
30-2	58600-98L10	PROPELLER, RR (3X15-1/2X22.5)	1	
30-3	58600-98L20	PROPELLER, RR (3X15-1/2X24)	1	
30-4	58600-98L30	PROPELLER, RR (3X15-1/2X25.5)	1	
30-5	58600-98L40	PROPELLER, RR (3X15-1/2X27)	1	
30-6	58600-98L50	PROPELLER, RR (3X15-1/2X28.5)	1	
30-7	58600-98L60	PROPELLER, RR (3X15-1/2X19.5)	1	
30-8	58600-98L70	PROPELLER, RR (3X15-1/2X30)	1	
30-9	58600-98L80	PROPELLER, RR (3X15-1/2X31.5)	1	
30-10	58600-98L90	PROPELLER, RR (3X15-1/2X18)	1	
31	58620-98L00	.BUSH, REAR PROPELLER	1	
32	58531-98L00	STOPPER, FRONT PROPELLER BUSH	1	
33	58541-98L00	SPACER, FRONT PROPELLER NUT	1	
34	58551-98L00	STOPPER, FRONT PROPELLER NUT	1	
35	58561-98L00	NUT, FRONT PROPELLER	1	
36	58631-98L00	STOPPER, REAR PROPELLER BUSH	1	
37	58640-98L00	KIT, REAR PROPELLER NUT	1	OPT
38	58540-98L00	KIT, FRONT PROPELLER NUT	1	OPT
39	25700-98L00	KIT, GEAR CASE SEALING	1	OPT
				NOT ILLUSTRATED

FIG.410A


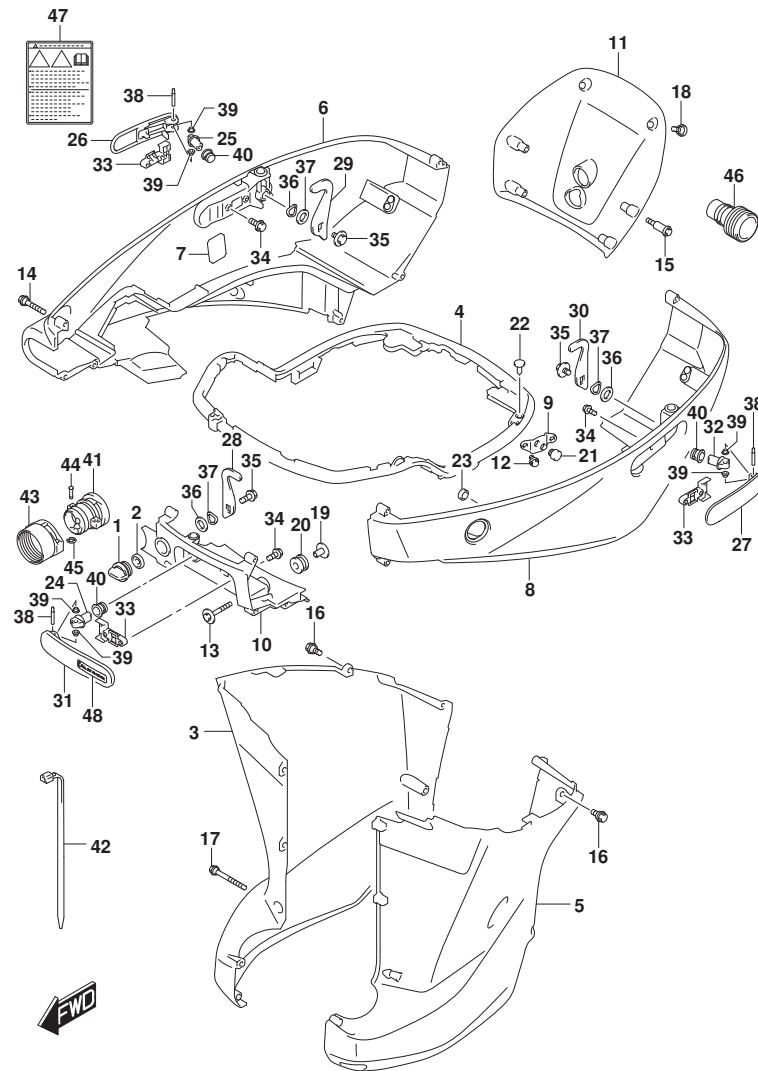


FIG.410A (1-G-5) SIDE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG, WATER	1	
2	17914-93J00	GASKET, WATER PLUG	1	
3-1	61131-98L00-YAY	COVER, OIL PAN STBD (BLACK)	1	UP TO VIN.810080 ->61140-98800-YAY COVER SET, OIL PAN STBD/PORT
3-2	61131-98L00-Y5S	COVER, OIL PAN STBD (WHITE)	1	UP TO VIN.810080 ->61140-98800-Y5S COVER SET, OIL PAN STBD/PORT
3-3	61131-98L01-YAY	COVER, OIL PAN STBD (BLACK)	1	FROM VIN.810081
3-4	61131-98L01-Y5S	COVER, OIL PAN STBD (WHITE)	1	FROM VIN.810081
4	61134-98L00	SEAL, ENGINE HOLDER	1	
5-1	61140-98L00-YAY	COVER, OIL PAN PORT (BLACK)	1	UP TO VIN.810080
5-2	61140-98L00-Y5S	COVER, OIL PAN PORT (WHITE)	1	UP TO VIN.810080
5-3	61140-98L01-YAY	COVER, OIL PAN PORT (BLACK)	1	FROM VIN.810081
5-4	61140-98L01-Y5S	COVER, OIL PAN PORT (WHITE)	1	FROM VIN.810081
6-1	61810-98L00-YAY	COVER, SIDE STBD (BLACK)	1	
6-2	61810-98L00-Y5S	COVER, SIDE STBD (WHITE)	1	
7	61814-98L00	PROTECTOR, SIDE COVER	2	
8-1	61820-98L00-YAY	COVER, SIDE PORT (BLACK)	1	
8-2	61820-98L00-Y5S	COVER, SIDE PORT (WHITE)	1	
9	61827-98L00	HOLDER, SIDE COVER	1	
10-1	61830-98L00-YAY	PANEL, FRONT (BLACK)	1	
10-2	61830-98L00-Y5S	PANEL, FRONT (WHITE)	1	
11	61861-98L00-20H	PANEL, REAR (SILVER)	1	
12	01550-0816C	BOLT	2	
13	09116-08170	BOLT (8X60)	2	
14	09136-06148	SCREW (6X35)	8	
15	09111-06253	BOLT	4	
16	09139-06135	SCREW (6X17)	8	
17	09139-06136	SCREW (6X65)	2	
18	09139-06135	SCREW (6X17)	2	
19	09169-08050	WASHER, FRONT PANEL (ID:8.5)	2	
20	09320-11013	CUSHION	2	
21	09321-10030	CUSHION	2	
22	09409-05302-5PK	CLIP (BLACK)	2	
23	09329-14002	CUSHION	1	

FIG.410A

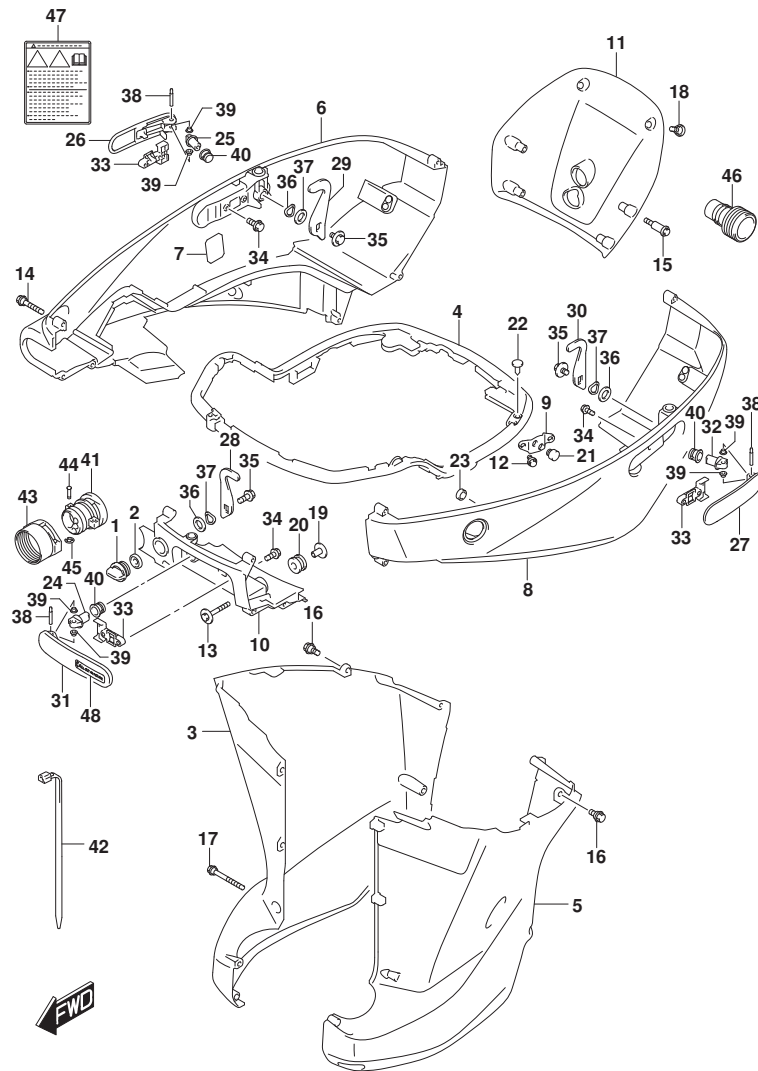

DF350A_E01_018_410A
SIDE COVER

FIG.410A (1-G-6) SIDE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	61632-93J00	SHAFT, ENGINE COVER HOOK	1	
25	61632-98L00	SHAFT, ENGINE COVER HOOK STBD	1	
26-1	61633-93J00-YAY	LEVER, HOOK REAR STBD (BLACK)	1	
26-2	61633-93J00-Y5S	LEVER, HOOK REAR STBD (WHITE)	1	
27-1	61634-93J00-YAY	LEVER, HOOK REAR PORT (BLACK)	1	
27-2	61634-93J00-Y5S	LEVER, HOOK REAR PORT (WHITE)	1	
28	61641-93J10	HOOK, ENGINE COVER	1	
29	61641-93J10	HOOK, ENGINE COVER RR STBD	1	
30	61641-93J20	HOOK, ENGINE COVER RR PORT	1	
31-1	61645-93J01-YAY	LEVER, HOOK FRONT (BLACK)	1	
31-2	61645-93J01-Y5S	LEVER, HOOK FRONT (WHITE)	1	
32	61652-98L00	SHAFT, ENGINE COVER HOOK PORT	1	
33	61673-93J01	LATCH, HOOK LEVER	3	
34	09116-05010	BOLT (5X12)	6	
35	09116-06127	BOLT (6X12)	3	
36	09160-13014	WASHER (13.2X25X1)	3	
37	09164-14008	WASHER	3	
38	09202-04022	PIN	3	
39	09306-04005	BUSH	6	
40	09306-13007	BUSH	3	
41-1	61124-98L10	GROMMET, R/CON HARNESS	1	UP TO VIN.811874
41-2	61124-98L20	GROMMET, R/CON HARNESS	1	FROM VIN.811875
42	09407-25402	CLAMP (L:250)	1	
43	67361-90J10	ADAPTER, HOSE (RIGGING)	1	
44	09208-06009	PIN	2	
45	09383-04002	E RING	2	
46	17917-87L00	CONNECTOR, FLUSH WATER	1	
47	61458-90J00	LABEL, ENGINE COVER	1	
48-1	61649-93J00	LABEL, HOOK LEVER	1	FOR YAY
48-2	61649-93J10	LABEL, HOOK LEVER	1	FOR Y5S

DF350A E01

DF350A_E01_018

FIG.410B

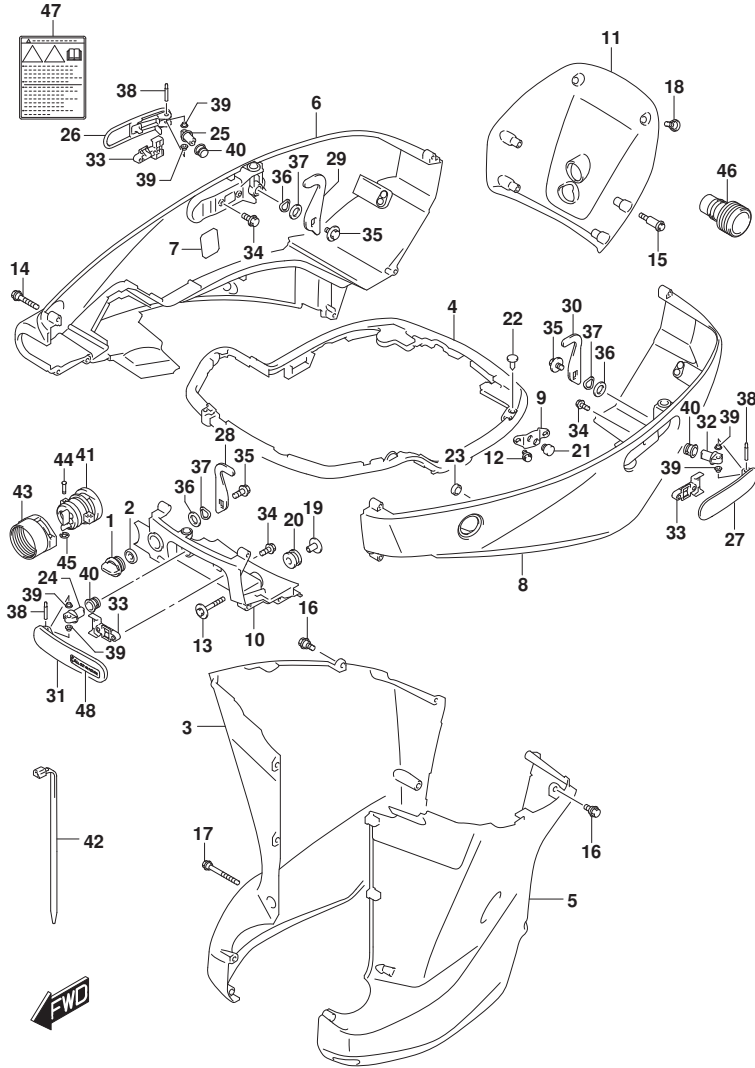


FIG.410B (1-G-7) SIDE COVER (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG, WATER	1	
2	17914-93J00	GASKET, WATER PLUG	1	
3-1	61131-98L01-YAY	COVER, OIL PAN STBD (BLACK)	1	
3-2	61131-98L01-Y5S	COVER, OIL PAN STBD (WHITE)	1	
4	61134-98L00	SEAL, ENGINE HOLDER	1	
5-1	61140-98L01-YAY	COVER, OIL PAN PORT (BLACK)	1	
5-2	61140-98L01-Y5S	COVER, OIL PAN PORT (WHITE)	1	
6-1	61810-98L00-YAY	COVER, SIDE STBD (BLACK)	1	
6-2	61810-98L00-Y5S	COVER, SIDE STBD (WHITE)	1	
7	61814-98L00	PROTECTOR, SIDE COVER	2	
8-1	61820-98L00-YAY	COVER, SIDE PORT (BLACK)	1	
8-2	61820-98L00-Y5S	COVER, SIDE PORT (WHITE)	1	
9	61827-98L00	HOLDER, SIDE COVER	1	
10-1	61830-98L00-YAY	PANEL, FRONT (BLACK)	1	
10-2	61830-98L00-Y5S	PANEL, FRONT (WHITE)	1	
11	61861-98L00-20H	PANEL, REAR (SILVER)	1	
12	01550-0816C	BOLT	2	
13	09116-08170	BOLT (8X60)	2	
14	09136-06148	SCREW (6X35)	8	
15	09111-06253	BOLT	4	
16	09139-06135	SCREW (6X17)	8	
17	09139-06136	SCREW (6X65)	2	
18	09139-06135	SCREW (6X17)	2	
19	09169-08050	WASHER, FRONT PANEL (ID:8.5)	2	
20	09320-11013	CUSHION	2	
21	09321-10030	CUSHION	2	
22	09409-05302-5PK	CLIP (BLACK)	2	
23	09329-14002	CUSHION	1	

FIG.410B

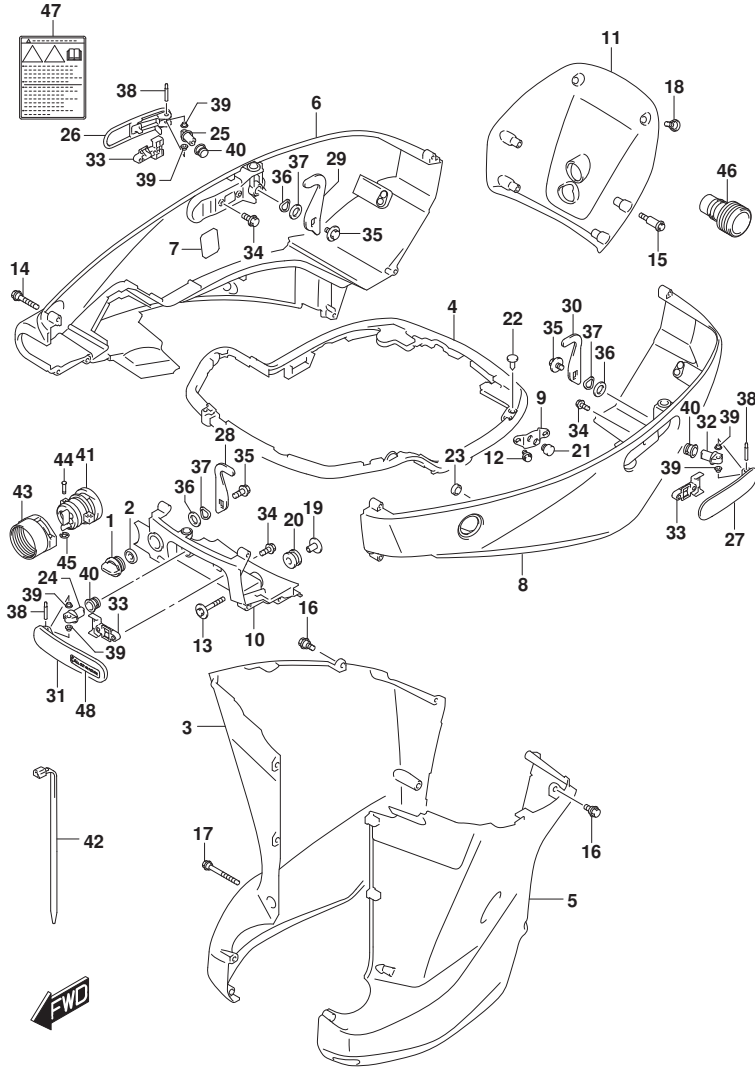


FIG.410B (1-G-8) SIDE COVER (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	61632-93J00	SHAFT, ENGINE COVER HOOK	1	
25	61632-98L00	SHAFT, ENGINE COVER HOOK STBD	1	
26-1	61633-93J00-YAY	LEVER, HOOK REAR STBD (BLACK)	1	
26-2	61633-93J00-Y5S	LEVER, HOOK REAR STBD (WHITE)	1	
27-1	61634-93J00-YAY	LEVER, HOOK REAR PORT (BLACK)	1	
27-2	61634-93J00-Y5S	LEVER, HOOK REAR PORT (WHITE)	1	
28	61641-93J10	HOOK, ENGINE COVER	1	
29	61641-93J10	HOOK, ENGINE COVER RR STBD	1	
30	61641-93J20	HOOK, ENGINE COVER RR PORT	1	
31-1	61645-93J01-YAY	LEVER, HOOK FRONT (BLACK)	1	
31-2	61645-93J01-Y5S	LEVER, HOOK FRONT (WHITE)	1	
32	61652-98L00	SHAFT, ENGINE COVER HOOK PORT	1	
33	61673-93J01	LATCH, HOOK LEVER	3	
34	09116-05010	BOLT (5X12)	6	
35	09116-06127	BOLT (6X12)	3	
36	09160-13014	WASHER (13.2X25X1)	3	
37	09164-14008	WASHER	3	
38	09202-04022	PIN	3	
39	09306-04005	BUSH	6	
40	09306-13007	BUSH	3	
41	61124-98L20	GROMMET, R/CON HARNESS	1	
42	09407-25402	CLAMP (L:250)	1	
43	67361-90J10	ADAPTER, HOSE (RIGGING)	1	
44	09208-06009	PIN	2	
45	09383-04002	E RING	2	
46	17917-87L00	CONNECTOR, FLUSH WATER	1	
47	61458-90J00	LABEL, ENGINE COVER	1	
48-1	61649-93J00	LABEL, HOOK LEVER	1	FOR YAY
48-2	61649-93J10	LABEL, HOOK LEVER	1	FOR Y5S

DF325A E01
DF325A E40

FIG.420A

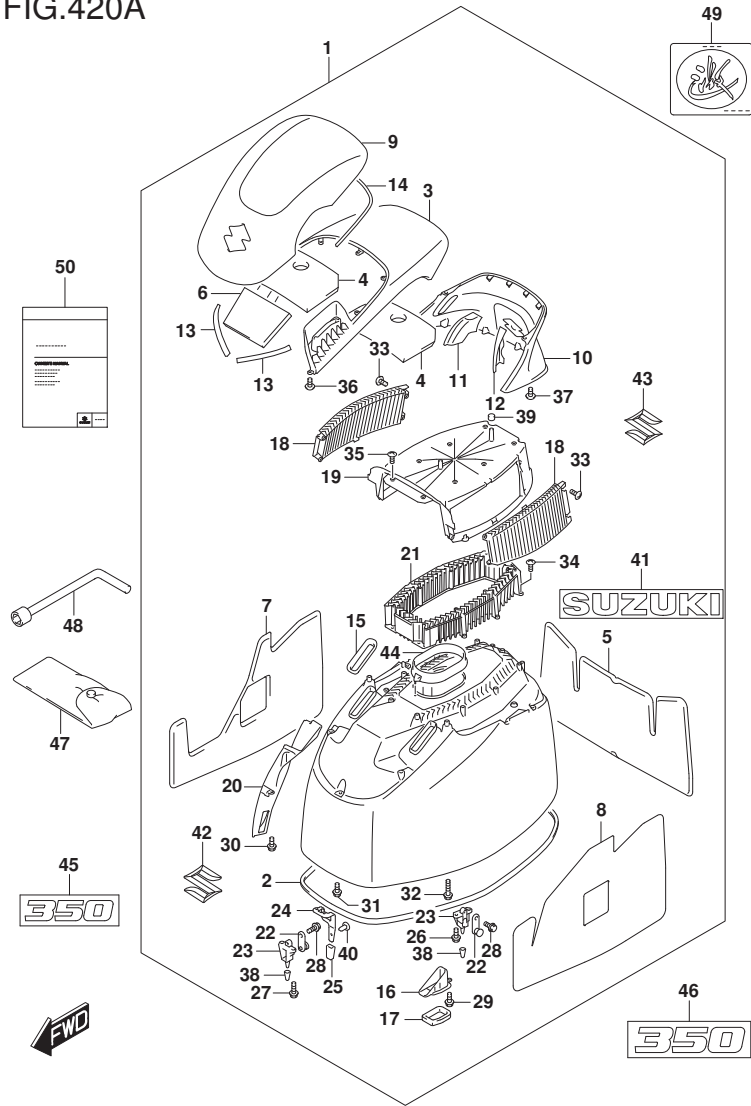


FIG.420A (1-G-9) ENGINE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61420-98821-AML	COVER SET, ENGINE (BLACK/SILVER)	1	FOR YAY
1-2	61420-98821-BBK	COVER SET, ENGINE (WHITE/SILVER)	1	FOR Y5S
2	61414-98L00	.SEAL, ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER, ENGINE TOP RR (BLACK)	1	
3-2	61421-98L00-Y5S	.COVER, ENGINE TOP RR (WHITE)	1	
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER, ENGINE COVER	1	
6	61427-98L00	.SILENCER, ENGINE COVER	1	
7	61428-98L00	.SILENCER, ENGINE COVER STBD	1	
8	61429-98L00	.SILENCER, ENGINE COVER PORT	1	
9	61430-98L00-20H	.COVER, ENGINE TOP FR (SILVER)	1	
10	61432-98L00-20H	.GARNISH, AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER, AIR INTAKE STBD	1	
12	61434-98L00	.COVER, AIR INTAKE PORT	1	
13	61437-98L00	.SEAL, AIR INTAKE	2	
14	61438-98L00	.SEAL, ENGINE COVER TOP	1	
15	61439-98L00	.SEAL, AIR VENT NO.2	2	
16	61475-98L00	.GUIDE, AIR VENT	1	
17	61476-98L00	.SEAL, AIR VENT NO.1	1	
18	61561-98L00	.LOUVER, AIR INTAKE OUTER	2	
19	61562-98L00	.FRAME, AIR INTAKE	1	
20	61565-98L00	.DUCT, AIR INTAKE	1	
21	61591-98L00	.LOUVER, AIR INTAKE INNER	1	
22	61610-98L00	.FASTENER COMP	3	
23	61621-93J01	.BRACKET, FASTENER	3	
24	61682-98L00	.STAND, ENGINE COVER	1	
25	61683-98L00	.CUSHION, ENGINE COVER STAND	1	
26	01547-06167	.BOLT	4	
27	01547-06207	.BOLT	2	
28	01550-0616C	.BOLT	3	
29	01550-0616C	.BOLT	1	
30	01550-0616C	.BOLT	2	
31	01550-0616C	.BOLT	3	

FIG.420A

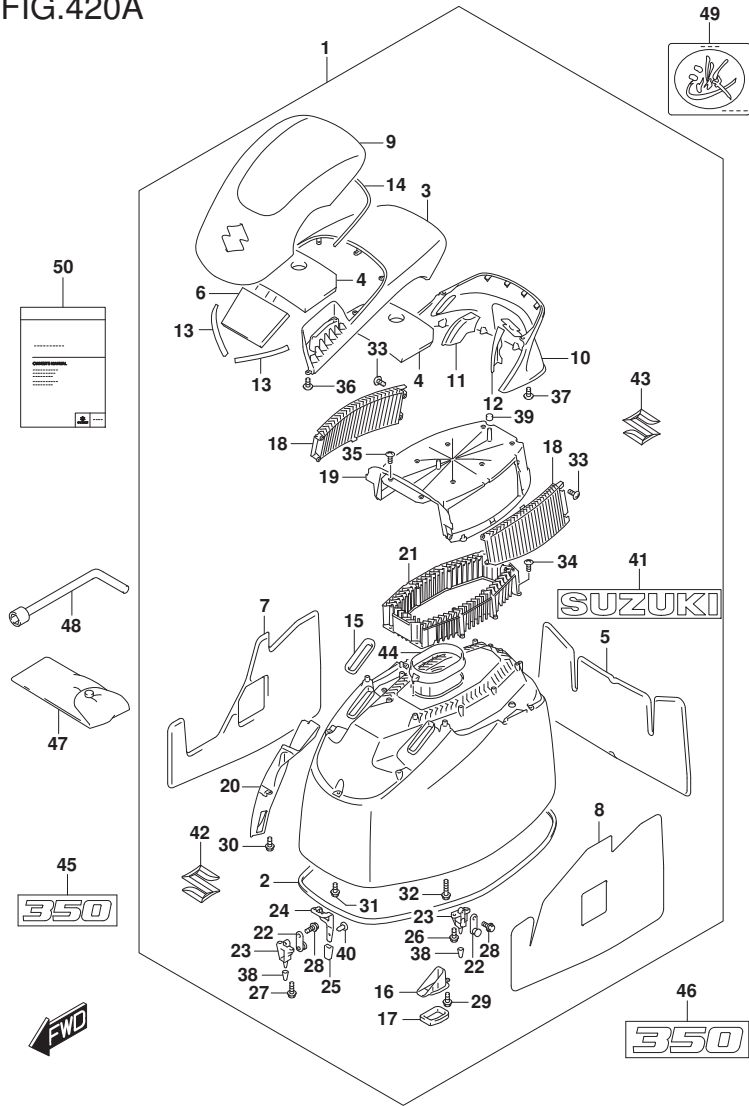


FIG.420A (1-G-10) ENGINE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	01550-0630C	.BOLT	2	
33	03542-06169	.SCREW	8	
34	03542-06169	.SCREW	9	
35	03542-06169	.SCREW	14	
36	03542-06169	.SCREW	7	
37	03542-06169	.SCREW	13	
38	09329-10024	.CUSHION	3	
39	09329-12004	.CUSHION	2	
40	09409-05302-5PK	.CLIP (BLACK)	1	
41	61441-98L00	.MARK, SUZUKI	2	
42	68111-93J00	.EMBLEM, "S"	1	
43	77811-63J00-0PG	.EMBLEM, "S"	1	
44	61416-98L00	.GUARD, AIR INTAKE	1	FROM VIN.811875
45	61422-98L00	MARK, EMBLEM FRONT (350)	1	
46	61435-98L00	MARK, EMBLEM REAR (350)	1	
47	09800-81835	TOOL SET	1	
48	09816-00175	WRENCH, BOX (8)	1	
49-1	61424-98L00	MARK, EMBLEM (GEKI FOR YAY)	1	
49-2	61424-98L10	MARK, EMBLEM (GEKI FOR Y5S)	1	
50-1	99011-98L20-054	MANUAL, OWNER'S	1	
50-2	99011-98L20-059	MANUAL, OWNER'S	1	

DF350A E01

FIG.420B

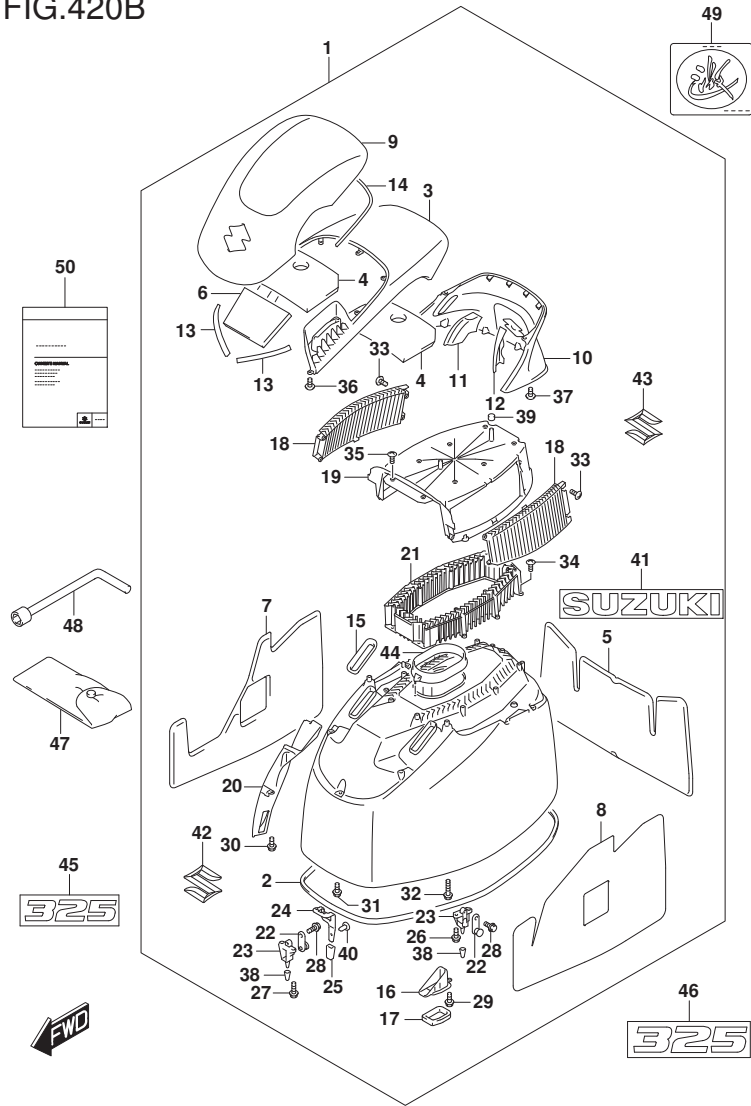


FIG.420B (1-G-11) ENGINE COVER (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61420-98821-AML	COVER SET, ENGINE (BLACK/SILVER)	1	FOR YAY
1-2	61420-98821-BBK	COVER SET, ENGINE (WHITE/SILVER)	1	FOR Y5S
2	61414-98L00	.SEAL, ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER, ENGINE TOP RR (BLACK)	1	
3-2	61421-98L00-Y5S	.COVER, ENGINE TOP RR (WHITE)	1	
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER, ENGINE COVER	1	
6	61427-98L00	.SILENCER, ENGINE COVER	1	
7	61428-98L00	.SILENCER, ENGINE COVER STBD	1	
8	61429-98L00	.SILENCER, ENGINE COVER PORT	1	
9	61430-98L00-20H	.COVER, ENGINE TOP FR (SILVER)	1	
10	61432-98L00-20H	.GARNISH, AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER, AIR INTAKE STBD	1	
12	61434-98L00	.COVER, AIR INTAKE PORT	1	
13	61437-98L00	.SEAL, AIR INTAKE	2	
14	61438-98L00	.SEAL, ENGINE COVER TOP	1	
15	61439-98L00	.SEAL, AIR VENT NO.2	2	
16	61475-98L00	.GUIDE, AIR VENT	1	
17	61476-98L00	.SEAL, AIR VENT NO.1	1	
18	61561-98L00	.LOUVER, AIR INTAKE OUTER	2	
19	61562-98L00	.FRAME, AIR INTAKE	1	
20	61565-98L00	.DUCT, AIR INTAKE	1	
21	61591-98L00	.LOUVER, AIR INTAKE INNER	1	
22	61610-98L00	.FASTENER COMP	3	
23	61621-93J01	.BRACKET, FASTENER	3	
24	61682-98L00	.STAND, ENGINE COVER	1	
25	61683-98L00	.CUSHION, ENGINE COVER STAND	1	
26	01547-06167	.BOLT	4	
27	01547-06207	.BOLT	2	
28	01550-0616C	.BOLT	3	
29	01550-0616C	.BOLT	1	
30	01550-0616C	.BOLT	2	
31	01550-0616C	.BOLT	3	

FIG.420B

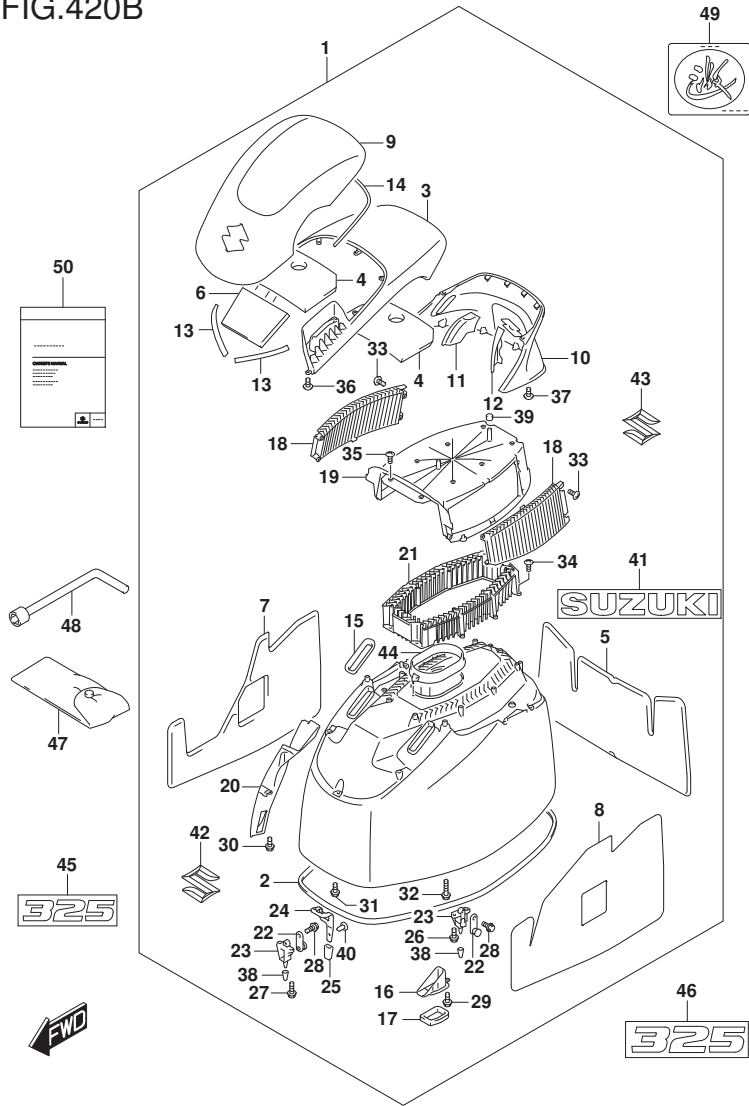


FIG.420B (1-G-12) ENGINE COVER (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	01550-0630C	.BOLT	2	
33	03542-06169	.SCREW	8	
34	03542-06169	.SCREW	9	
35	03542-06169	.SCREW	14	
36	03542-06169	.SCREW	7	
37	03542-06169	.SCREW	13	
38	09329-10024	.CUSHION	3	
39	09329-12004	.CUSHION	2	
40	09409-05302-5PK	.CLIP (BLACK)	1	
41	61441-98L00	.MARK, SUZUKI	2	
42	68111-93J00	.EMBLEM, "S"	1	
43	77811-63J00-0PG	.EMBLEM, "S"	1	
44	61416-98L00	.GUARD, AIR INTAKE	1	
45	61422-98L60	MARK, EMBLEM FRONT (325)	1	
46	61435-98L60	MARK, EMBLEM REAR (325)	1	
47	09800-81835	TOOL SET	1	
48	09816-00175	WRENCH, BOX (8)	1	
49-1	61424-98L00	MARK, EMBLEM (GEKI FOR YAY)	1	
49-2	61424-98L10	MARK, EMBLEM (GEKI FOR Y5S)	1	
50-1	99011-98L20-054	MANUAL, OWNER'S	1	
50-2	99011-98L20-059	MANUAL, OWNER'S	1	

DF325A E01

FIG.420C

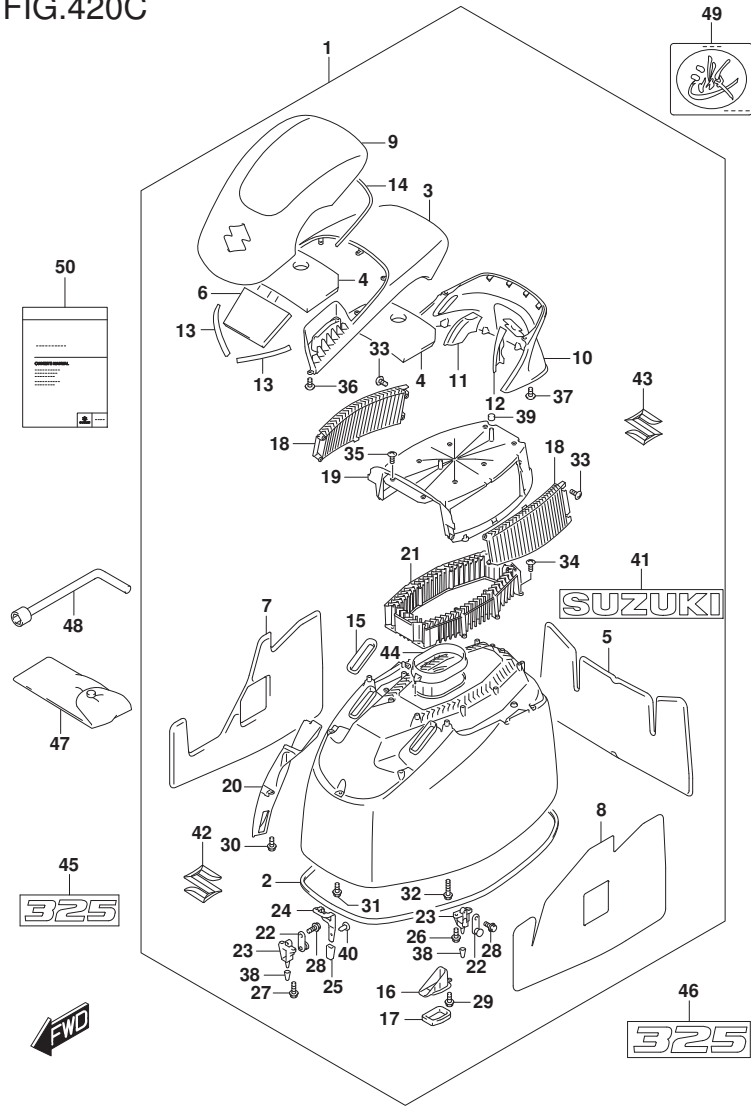


FIG.420C (1-G-13) ENGINE COVER (DF325A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61420-98821-AML	COVER SET, ENGINE (BLACK/SILVER)	1	FOR YAY
1-2	61420-98821-BBK	COVER SET, ENGINE (WHITE/SILVER)	1	FOR Y5S
2	61414-98L00	.SEAL, ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER, ENGINE TOP RR (BLACK)	1	
3-2	61421-98L00-Y5S	.COVER, ENGINE TOP RR (WHITE)	1	
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER, ENGINE COVER	1	
6	61427-98L00	.SILENCER, ENGINE COVER	1	
7	61428-98L00	.SILENCER, ENGINE COVER STBD	1	
8	61429-98L00	.SILENCER, ENGINE COVER PORT	1	
9	61430-98L00-20H	.COVER, ENGINE TOP FR (SILVER)	1	
10	61432-98L00-20H	.GARNISH, AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER, AIR INTAKE STBD	1	
12	61434-98L00	.COVER, AIR INTAKE PORT	1	
13	61437-98L00	.SEAL, AIR INTAKE	2	
14	61438-98L00	.SEAL, ENGINE COVER TOP	1	
15	61439-98L00	.SEAL, AIR VENT NO.2	2	
16	61475-98L00	.GUIDE, AIR VENT	1	
17	61476-98L00	.SEAL, AIR VENT NO.1	1	
18	61561-98L00	.LOUVER, AIR INTAKE OUTER	2	
19	61562-98L00	.FRAME, AIR INTAKE	1	
20	61565-98L00	.DUCT, AIR INTAKE	1	
21	61591-98L00	.LOUVER, AIR INTAKE INNER	1	
22	61610-98L00	.FASTENER COMP	3	
23	61621-93J01	.BRACKET, FASTENER	3	
24	61682-98L00	.STAND, ENGINE COVER	1	
25	61683-98L00	.CUSHION, ENGINE COVER STAND	1	
26	01547-06167	.BOLT	4	
27	01547-06207	.BOLT	2	
28	01550-0616C	.BOLT	3	
29	01550-0616C	.BOLT	1	
30	01550-0616C	.BOLT	2	
31	01550-0616C	.BOLT	3	

[illegible]

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	01550-0630C	.BOLT	2	
33	03542-06169	.SCREW	8	
34	03542-06169	.SCREW	9	
35	03542-06169	.SCREW	14	
36	03542-06169	.SCREW	7	
37	03542-06169	.SCREW	13	
38	09329-10024	.CUSHION	3	
39	09329-12004	.CUSHION	2	
40	09409-05302-5PK	.CLIP (BLACK)	1	
41	61441-98L00	.MARK, SUZUKI	2	
42	68111-93J00	.EMBLEM, "S"	1	
43	77811-63J00-0PG	.EMBLEM, "S"	1	
44	61416-98L00	.GUARD, AIR INTAKE	1	
45	61422-98L60	MARK, EMBLEM FRONT (325)	1	
46	61435-98L60	MARK, EMBLEM REAR (325)	1	
47	09800-81835	TOOL SET	1	
48	09816-00175	WRENCH, BOX (8)	1	
49-1	61424-98L00	MARK, EMBLEM (GEKI FOR YAY)	1	
49-2	61424-98L10	MARK, EMBLEM (GEKI FOR Y5S)	1	
50	99011-98L20-059	MANUAL, OWNER'S	1	

DF350A_E01_018

FIG.430A

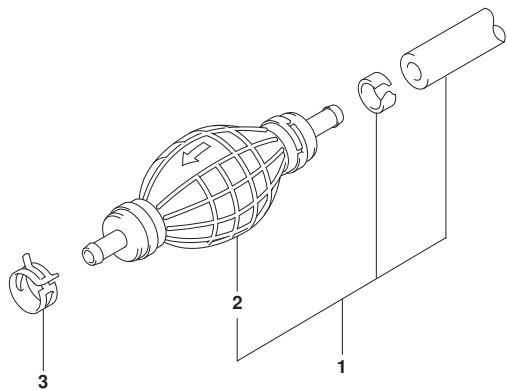


FIG.430A (1-G-15) FUEL HOSE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65700-93J11	HOSE, FUEL (TANK TO ENGINE)	1	
2	65770-93J12	.PUMP, SQUEEZE	1	
3	09401-13423	CLIP	1	

FIG.520A

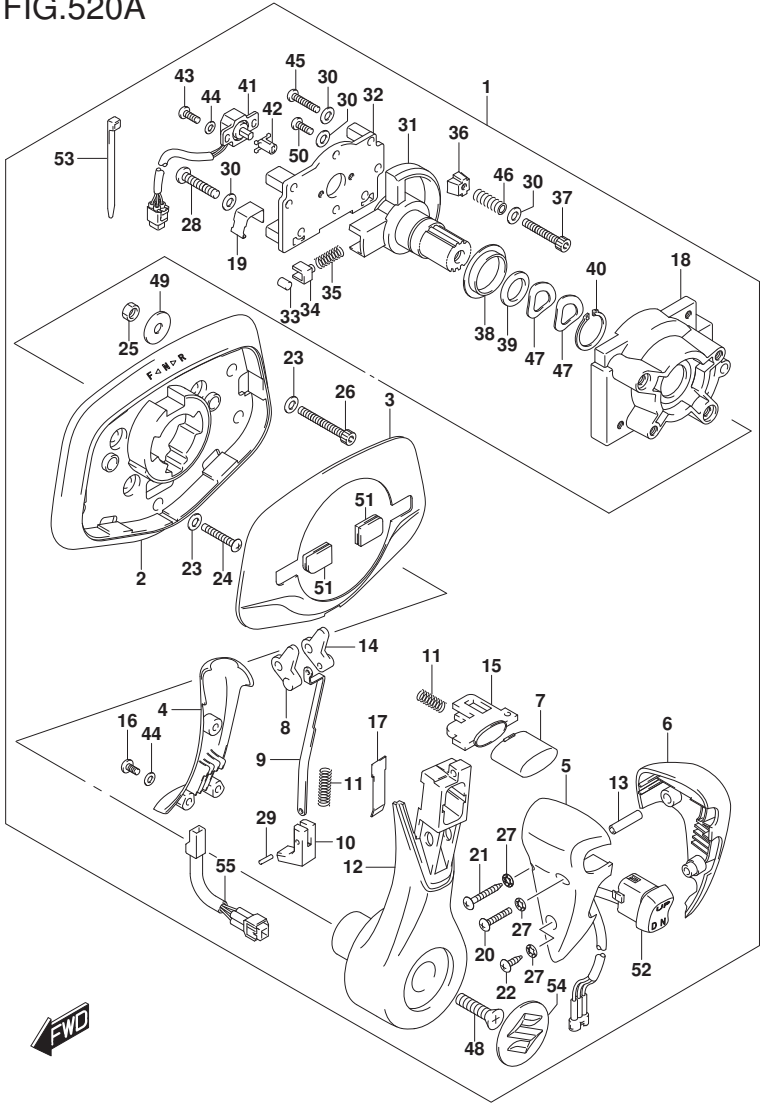


FIG.520A (1-H-2) OPT:FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J23	REMOCON ASSY, FLUSH MOUNT	1	
2	67271-98J20	.COVER, BOTTON BASE	1	
3	67264-98J00	.COVER, TOP BASE	1	
4	67263-98J20	.COVER, LEVER	1	
5	67261-98J20	.GRIP, A	1	
6	67261-98J30	.GRIP, B	1	
7	67265-98J00	.BUTTON, NEUTRAL LOCK	1	
8	67255-98J00	.LINK, NEUTRAL LOCK NO.1	1	
9	67258-98J00	.PLATE, JOINT	1	
10	67256-98J00	.BLOCK, NEUTRAL LOCK	1	
11	67259-98J00	.SPRING	3	
12	67251-98J20	.LEVER, HANDLE	1	
13	67294-98J00	.SPACER	1	
14	67254-98J00	.LINK, NEUTRAL LOCK NO.2	1	
15	67233-98J00	.SLIDER, NEUTRAL BUTTON	1	
16	67296-98JA0	.SCREW (4X10)	3	
17	67234-98J00	.PLATE, LEVER	1	
18	67211-98J20	.HOUSING	1	
19	67269-98J20	.CLAMP, LEAD	1	
20	67296-98JB0	.SCREW (4X30)	1	
21	67227-98J20	.SCREW, TAPPING (4X35)	1	
22	67227-98J30	.SCREW, TAPPING (4X20)	1	
23	67288-98J50	.WASHER, PLANE	8	
24	67296-98JC0	.SCREW (6X40)	4	
25	67287-98J00	.NUT	4	
26	67226-98J10	.BOLT (6X50)	4	
27	67288-98J60	.WASHER	3	
28	67296-98JD0	.SCREW (5X40)	1	
29	67238-98J00	.PIN	2	
30	67288-98J70	.WASHER, PLANE	5	
31	67246-98J00	.SHAFT, DRIVE REMOCON	1	
32	67222-98J00	.PANEL ASSY, BACK	1	
33	67236-98J00	.ROLLER, DETENT	1	
34	67235-98J00	.GUIDE, DETENT ROLLER	1	

FIG.520A

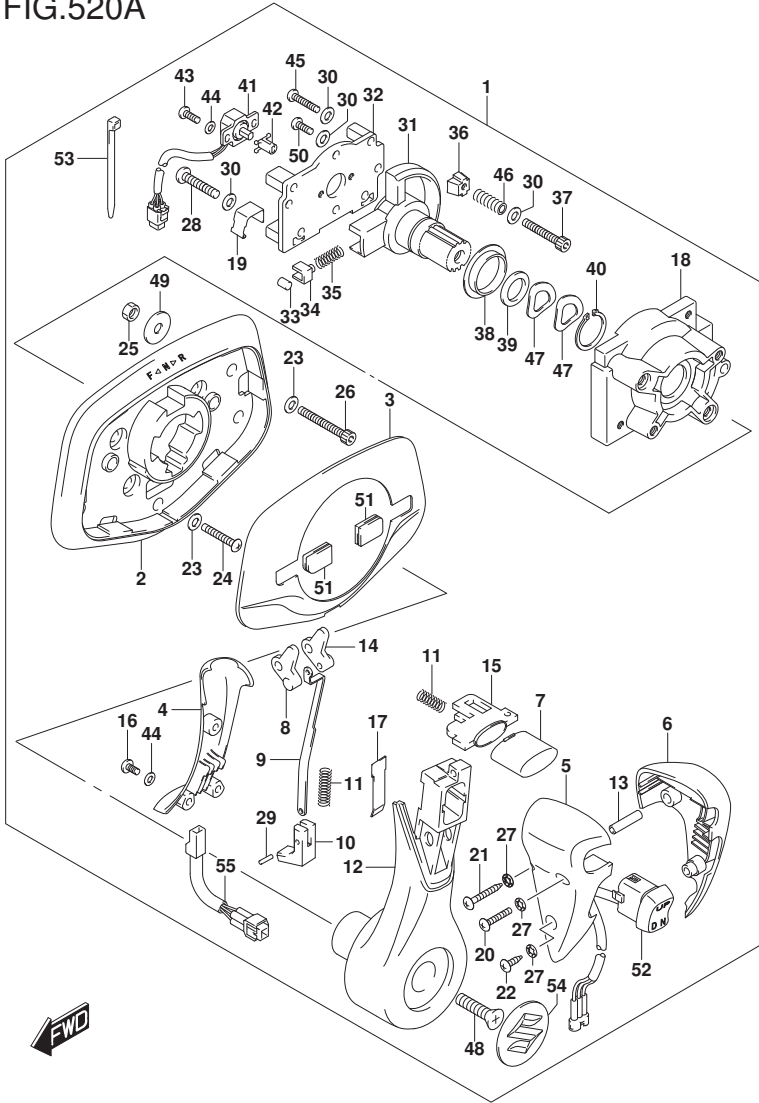


FIG.520A (1-H-3) OPT:FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67237-98J00	.SPRING, DETENT	1	
36	67223-98J00	.PAD, BRAKE	1	
37	67296-98JE0	.SCREW, ADJUST (5X35)	1	
38	67252-98J00	.BUSH, DRIVE	1	
39	67288-98J20	.WASHER, PLANE	1	
40	67292-98J00	.C RING	1	
41	15980-98J00	.POTENTIOMETER	1	
42	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
43	67296-94300	.SCREW (4X10)	2	
44	67288-98J00	.WASHER, PLANE	5	
45	67296-98J10	.SCREW (5X35)	1	
46	67288-98J10	.WASHER, SPRING	8	
47	67228-98J50	.WASHER, WAVE	2	
48	67296-98J60	.SCREW (8X30)	1	
49	09160-06104	.WASHER (6.5X24X2)	4	
50	67296-98J50	.SCREW (5X18)	2	
51	67272-98J00	.GROMMET	2	
52	37850-98J02	.SWITCH ASSY, PTT	1	
53	67269-98J10	.BAND	1	
54	67257-98J00	.MARK, LEVER (S)	1	
55	36890-98J00	.HARNESS, CONDENSER ADAPTER	1	

FIG.522A

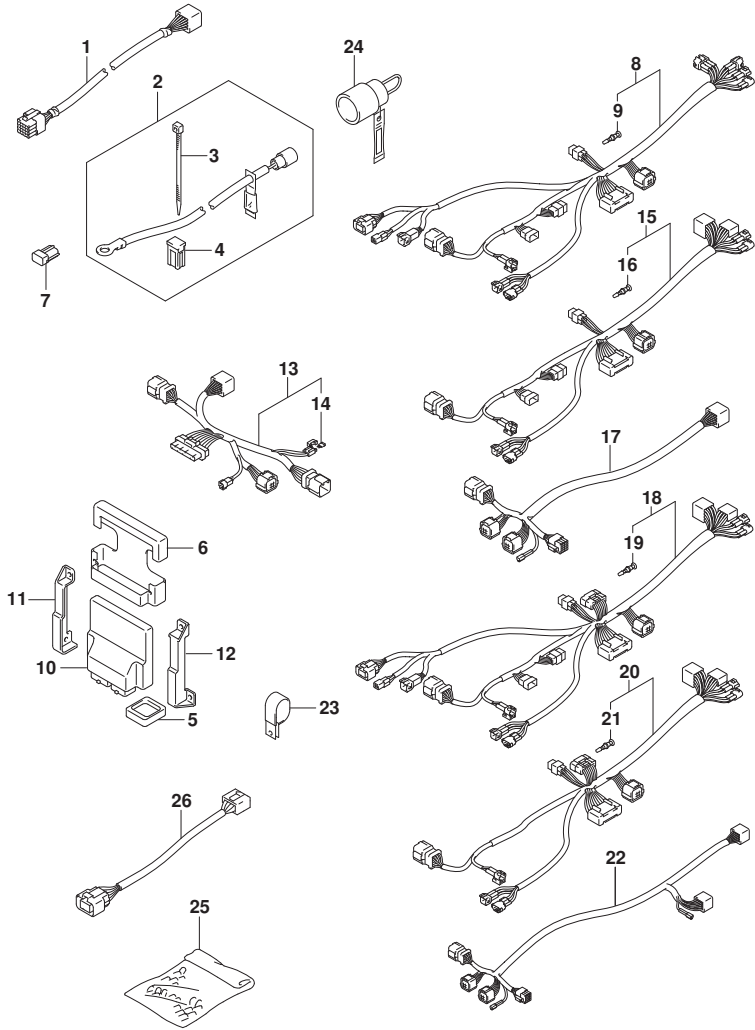


FIG.522A (1-H-4) OPT:HARNESS (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-98J50	WIRE ASSY, REMOCON EXTENSION	1	
2	33830-98J11	SET, BATTERY ISOLATOR LEAD	1	
3	09407-10404	.CLAMP (L:100)	2	
4	09481-40401	.FUSE (40A)	1	
5	33911-88BL0	CAP, BCM CONNECTOR	1	
6	33925-93J00	CUSHION, BCM	AR	
7	33926-98J00	RESISTOR, TERMINAL	AR	
8	36623-98J20	HARNESS ASSY, BCM NO.1 FOR SNGL	1	
9	36615-96300	.TERMINAL RESIN	4	
10-1	36770-98J13	CONTROLLER ASSY, BOAT ELECTRIC	1	
10-2	36770-98J21	CONTROLLER, BOAT ELEC QUADRUPLE	2	
11	36775-98J00	HOLDER, BCM (L)	AR	
12	36776-98J00	HOLDER, BCM (R)	AR	
13	36622-98J00	HARNESS ASSY, DUAL STATION MAIN	AR	
14	09481-10501	.FUSE (10A)	AR	
15	36624-98J02	HARNESS ASSY, BCM NO.2 FOR SNGL	1	
16	36615-96300	.TERMINAL, RESIN	2	
17	36621-98J00	HARNESS ASSY, DUAL ENGINE	AR	
18	36623-98J30	HARNESS ASSY, BCM NO.1 FOR MULT	1	
19	36615-96300	.TERMINAL, RESIN	5	
20	36624-98J11	HARNESS ASSY, BCM NO.2 FOR MULT	1	
21	36615-96300	.TERMINAL, RESIN	2	
22	36621-98J10	HARNESS ASSY, TRIPLE ENGINE	1	
23	09403-13402	CLAMP (ID:13)	AR	
24	36612-98J20	CONNECTOR, COUNTER SELECT (WHITE)	AR	
25	36990-87D00	TERIMINAL SET, WITH SLEEVE	1	
26	36667-96L20	WIRE, GAUGE EXT	1	

FIG.523A


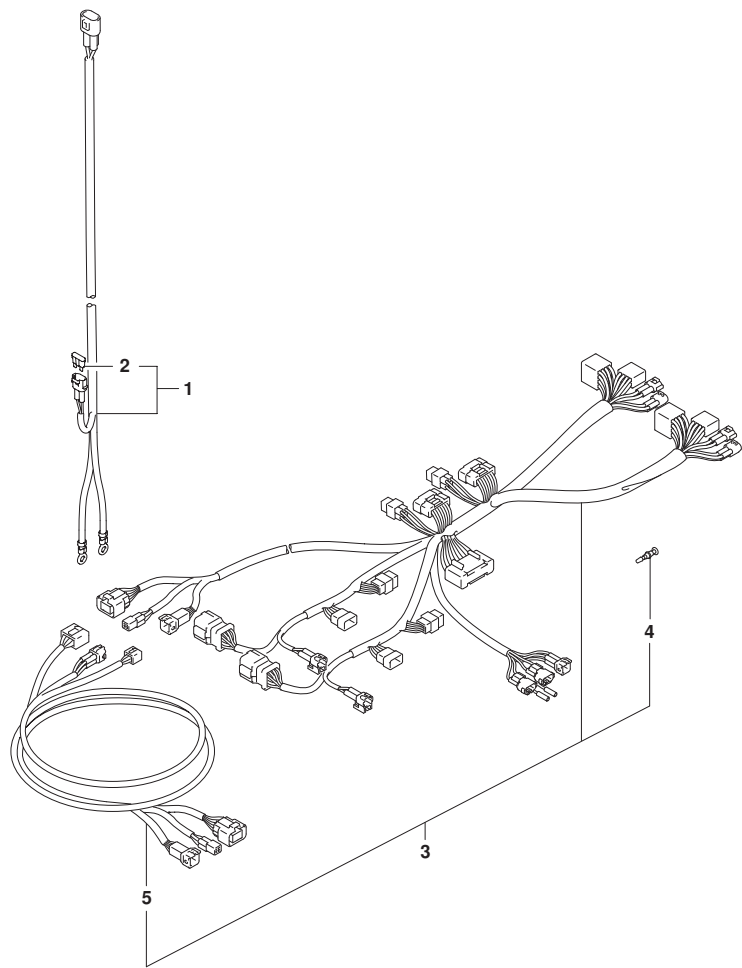


FIG.523A (1-H-5) OPT:HARNESS (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36625-98J10	WIRE ASSY, BATTERY	AR	
2	09481-30501	.FUSE (30A)	AR	
3	36623-98J40	HARNESS ASSY, BCM QUADRUPLE	1	
4	36615-96300	.TERMINAL	8	
5	36627-98J00	.HARNESS COMP, R/CON EXTENSION	1	

FIG.530A

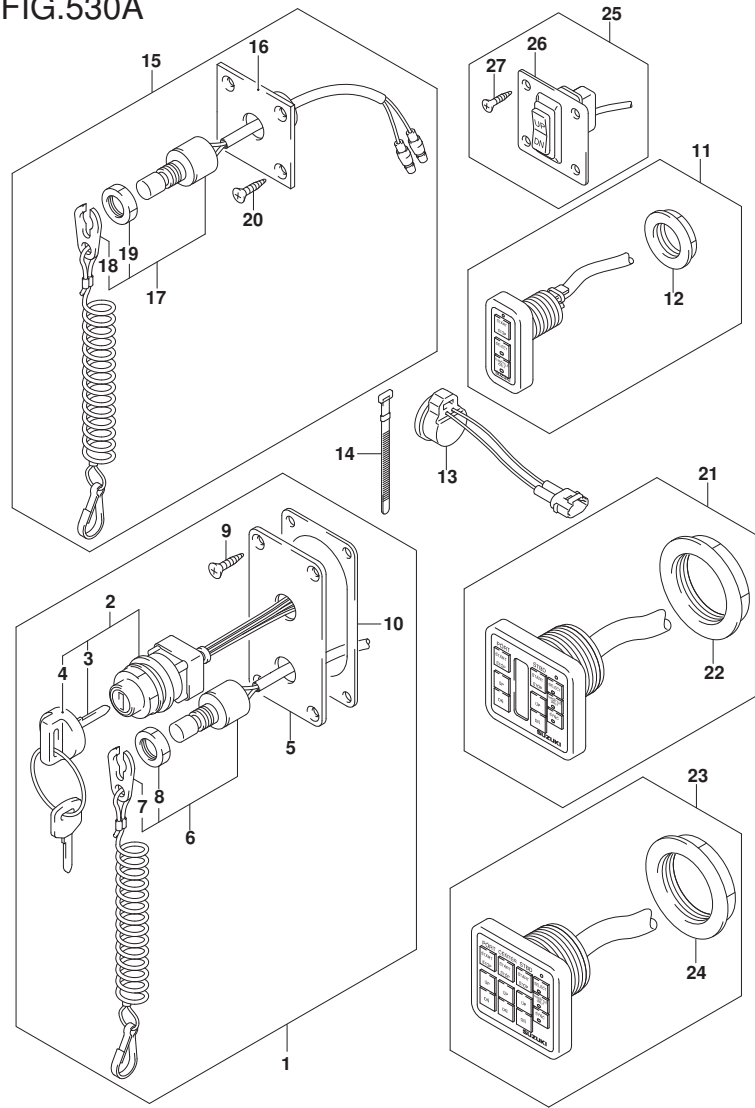

DF350A_E01_018_530A
OPT:SWITCH

FIG.530A (1-H-6) OPT:SWITCH (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	37100-98J04	PANEL ASSY, MAIN SW	1	->37100-98J05
1-2	37100-98J05	PANEL ASSY, MAIN SW	1	
2	37110-98J01	..SWITCH ASSY, MAIN	1	
3-1	37141-99EA0	..KEY (941)	1	
3-2	37141-99EB0	..KEY (942)	1	
3-3	37141-99E00	..KEY (931)	1	
3-4	37141-99E10	..KEY (932)	1	
3-5	37141-99E20	..KEY (933)	1	
3-6	37141-99E30	..KEY (934)	1	
3-7	37141-99E40	..KEY (935)	1	
3-8	37141-99E50	..KEY (936)	1	
3-9	37141-99E60	..KEY (937)	1	
3-10	37141-99E70	..KEY (938)	1	
3-11	37141-99E80	..KEY (939)	1	
3-12	37141-99E90	..KEY (940)	1	
4	37143-99E00	..CAP, KEY	1	
5-1	37139-98J00	..PANEL, MAIN SW	1	FOR 37100-98J04
5-2	37139-98J10	..PANEL, MAIN SW	1	FOR 37100-98J05
6-1	37820-93J04	..SWITCH ASSY, EMERGENCY STOP	1	FOR 37100-98J04
6-2	37820-93J10	..SWITCH ASSY, EMERGENCY STOP	1	FOR 37100-98J05
7	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
8-1	37826-92J00	..NUT	1	FOR 37100-98J04
8-2	37826-92J10	..NUT	1	FOR 37100-98J05
9	03122-05165	..SCREW	4	
10	37114-98J00	..SHEET, MAIN SW PANEL	1	
11	37100-98J11	PANEL ASSY, SINGLE	1	
12	37112-98J00	..NUT	1	
13	38500-93J90	BUZZER ASSY, WARNING	AR	
14	09407-08401	CLAMP (L:80)	AR	

FIG.530A


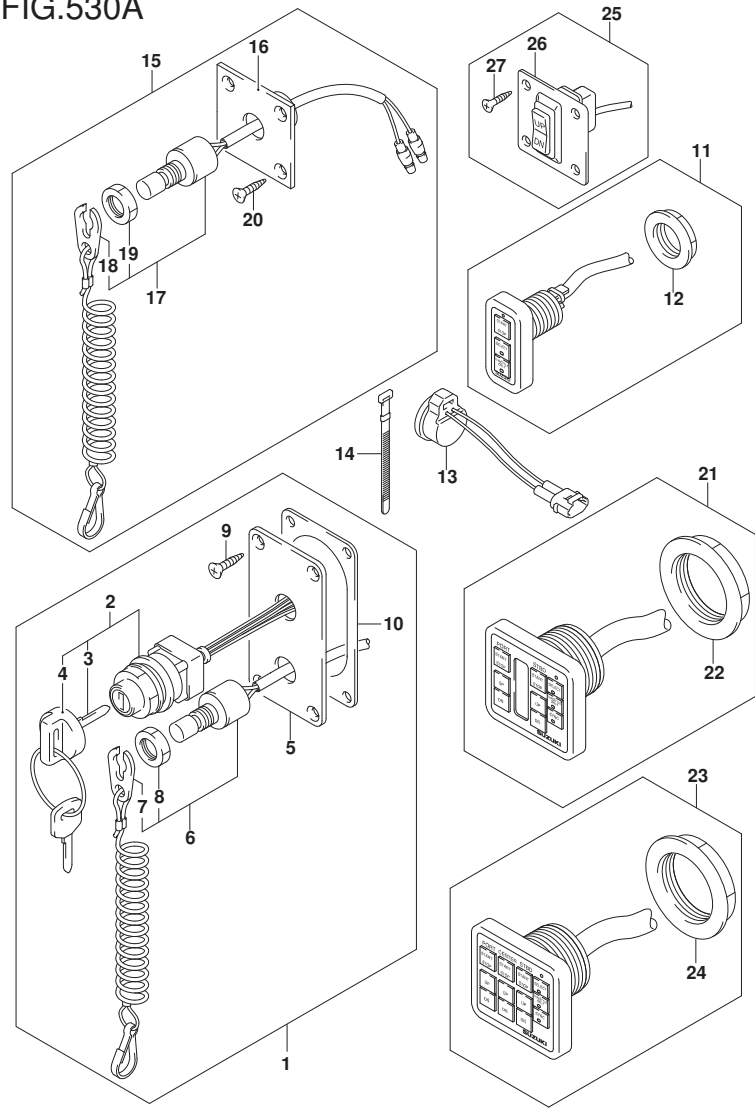


FIG.530A (1-H-7) OPT:SWITCH (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-1	37803-93J04	PANEL ASSY, EMERGENCY SW	1	->37803-93J05
15-2	37803-93J05	PANEL ASSY, EMERGENCY SW	1	
16-1	37825-99E00	.PANEL, EMERGENCY STOP SW	1	FOR 37803-93J04
16-2	37825-99E10	.PANEL, EMERGENCY STOP SW	1	FOR 37803-93J05
17-1	37820-93J04	.SWITCH ASSY, EMERGENCY STOP	1	FOR 37803-93J04
17-2	37820-93J10	.SWITCH ASSY, EMERGENCY STOP	1	FOR 37803-93J05
18	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
19-1	37826-92J00	..NUT	1	FOR 37803-93J04
19-2	37826-92J10	..NUT	1	FOR 37803-93J05
20	03122-05165	.SCREW	4	
21	37100-98J21	PANEL ASSY, DUAL	AR	
22	37112-98J10	.NUT	AR	
23	37100-98J31	PANEL ASSY, TRIPLE	1	
24	37112-98J10	.NUT	1	
25	37860-87L00	PANEL ASSY, TROLLING CTR SW	1	
26	37862-87L00	.PANEL	1	
27	09131-05004	.SCREW (5X16)	4	

DF350A E01

FIG.530B

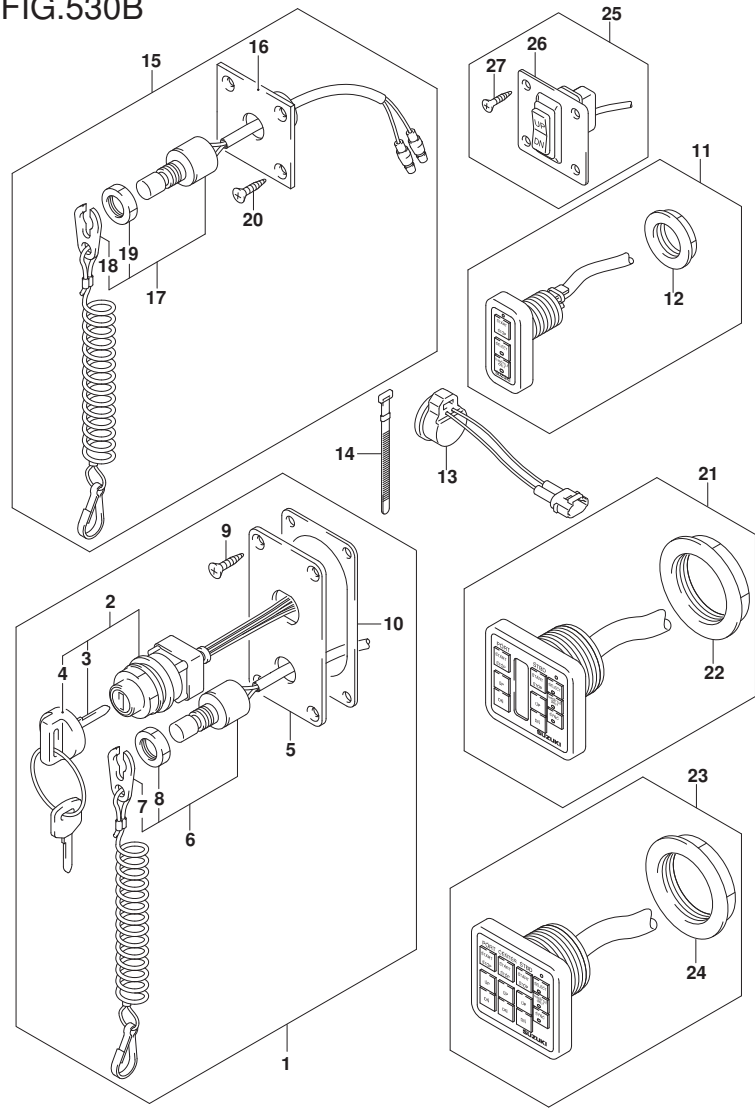

DF350A_E01_018_530B
OPT:SWITCH

FIG.530B (1-H-8) OPT:SWITCH (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98J05	PANEL ASSY, MAIN SW	1	
2	37110-98J01	..SWITCH ASSY, MAIN	1	
3-1	37141-99EA0	..KEY (941)	1	
3-2	37141-99EB0	..KEY (942)	1	
3-3	37141-99E00	..KEY (931)	1	
3-4	37141-99E10	..KEY (932)	1	
3-5	37141-99E20	..KEY (933)	1	
3-6	37141-99E30	..KEY (934)	1	
3-7	37141-99E40	..KEY (935)	1	
3-8	37141-99E50	..KEY (936)	1	
3-9	37141-99E60	..KEY (937)	1	
3-10	37141-99E70	..KEY (938)	1	
3-11	37141-99E80	..KEY (939)	1	
3-12	37141-99E90	..KEY (940)	1	
4	37143-99E00	..CAP, KEY	1	
5	37139-98J10	..PANEL, MAIN SW	1	
6	37820-93J10	..SWITCH ASSY, EMERGENCY STOP	1	
7	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
8	37826-92J10	..NUT	1	
9	03122-05165	..SCREW	4	
10	37114-98J00	..SHEET, MAIN SW PANEL	1	
11	37100-98J11	PANEL ASSY, SINGLE	1	
12	37112-98J00	..NUT	1	
13	38500-93J90	BUZZER ASSY, WARNING	AR	
14	09407-08401	CLAMP (L:80)	AR	

DF350A_E01_018

FIG.530B

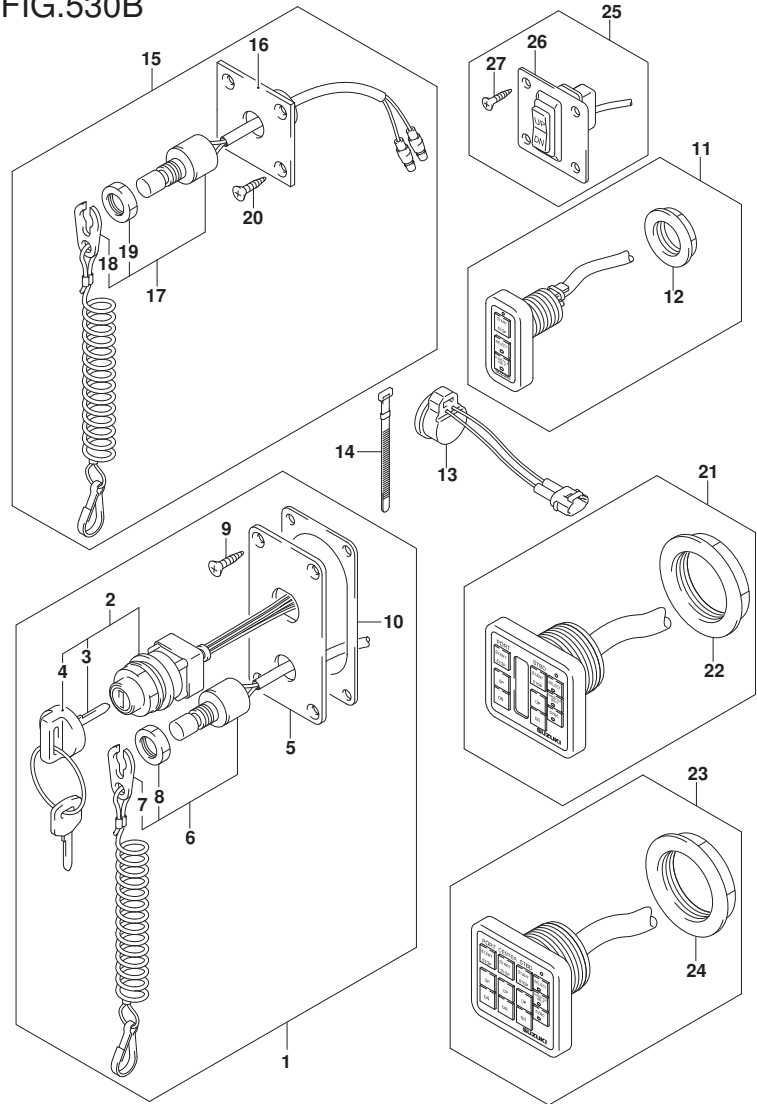


FIG.530B (1-H-9) OPT:SWITCH (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15	37803-93J05	PANEL ASSY, EMERGENCY SW	1	
16	37825-99E10	.PANEL, EMERGENCY STOP SW	1	
17	37820-93J10	.SWITCH ASSY, EMERGENCY STOP	1	
18	37823-92E01	..PLATE ASSY, EMERGENCY	1	
		SW LOCK		
19	37826-92J10	..NUT	1	
20	03122-05165	.SCREW	4	
21	37100-98J21	PANEL ASSY, DUAL	AR	
22	37112-98J10	.NUT	AR	
23	37100-98J31	PANEL ASSY, TRIPLE	1	
24	37112-98J10	.NUT	1	
25	37860-87L00	PANEL ASSY, TROLLING CTR SW	1	
26	37862-87L00	.PANEL	1	
27	09131-05004	.SCREW (5X16)	4	

DF325A E01
DF325A E40

This exploded view diagram illustrates the components of a Suzuki security system and their assembly sequence, indicated by numbers 1 through 27. The components are as follows:

- 1**: Main control unit housing.
- 2**: Mounting plate for the main unit.
- 3**: Mounting screw.
- 4**: Lock cylinder.
- 5**: Lock cylinder mounting bracket.
- 6**: Lock cylinder mounting pin.
- 7**: Lock cylinder mounting plate.
- 8**: Lock cylinder mounting pin.
- 9**: Lock cylinder mounting pin.
- 10**: Lock cylinder mounting pin.
- 11**: Main control unit housing (shown separately).
- 12**: Battery pack.
- 13**: Wiring harness.
- 14**: Wiring harness connector.
- 15**: Wiring harness.
- 16**: Alarm siren.
- 17**: Alarm siren mounting bracket.
- 18**: Alarm siren mounting plate.
- 19**: Alarm siren mounting plate.
- 20**: Alarm siren mounting screw.
- 21**: Alarm siren mounting plate.
- 22**: Suzuki Security System logo.
- 23**: Alarm siren mounting plate.
- 24**: Alarm siren mounting plate.
- 25**: Alarm siren mounting plate.
- 26**: Alarm siren mounting plate.
- 27**: Alarm siren mounting plate.

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	37100-96L01	PANEL ASSY, MAIN SWITCH KLS	1	
2	37110-96L00	.SWITCH ASSY, MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
4	37143-96L00	..KNOB, MAIN SWITCH	1	
5	37114-98J00	.SHEET, MAIN SWITCH PANEL	1	
6	37139-96L30	.PANEL, MAIN SWITCH	1	
7	37820-93J10	.SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
9	37826-92J10	..NUT	1	
10	03122-05165	.SCREW	4	
11	37105-96L02	HARNESS SET, KLS CONTROLLER	1	
12	32980-38F00	.HOLDER, KLS CONT	1	
13	36623-96L01	.HARNESS ASSY, KLS CONT	1	
14	36615-96300	..TERMINAL, RESIN	1	
15	36662-96L00	.HARNESS ASSY, KLS CAN EXT	1	L:6500+110
16	37173-96L10	.HOLDER, KLS PARTS	1	
17	38500-93J90	.BUZZER ASSY, KLS	1	
18	38860-96L01	.RELAY ASSY, KLS	1	
19	32851-93J00	.CUSHION, LEAD WIRE	1	
20	09407-14407	.CLAMP (L:145)	1	

FIG.535A

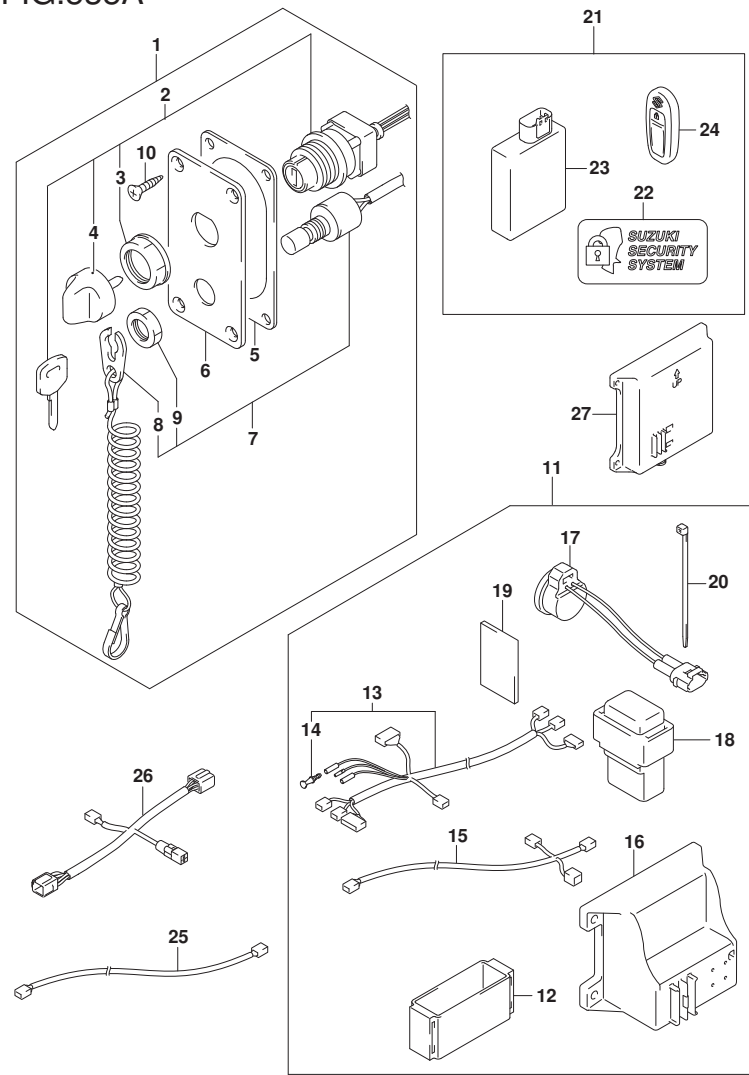


FIG.535A (1-H-11) OPT:KEY LESS START (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	37170-96L04	CONTROLLER SET, KLS 433MHZ	1	
22	37117-96L00	.DECAL, KLS	2	
23	37171-96L02	.CONTROLLER ASSY, KLS 433MHZ	1	
24	37172-96L01	.REMOCON ASSY, KLS 433MHZ	2	
25	36663-96L00	WIRE, KLS CAN EXT	1	
26	36664-96L00	HARNESS ASSY, KLS CAN	AR	L:810+110
27	37173-96L00	HOLDER, KLS PARTS	1	

DF350A E01
DF325A E01

FIG.540A

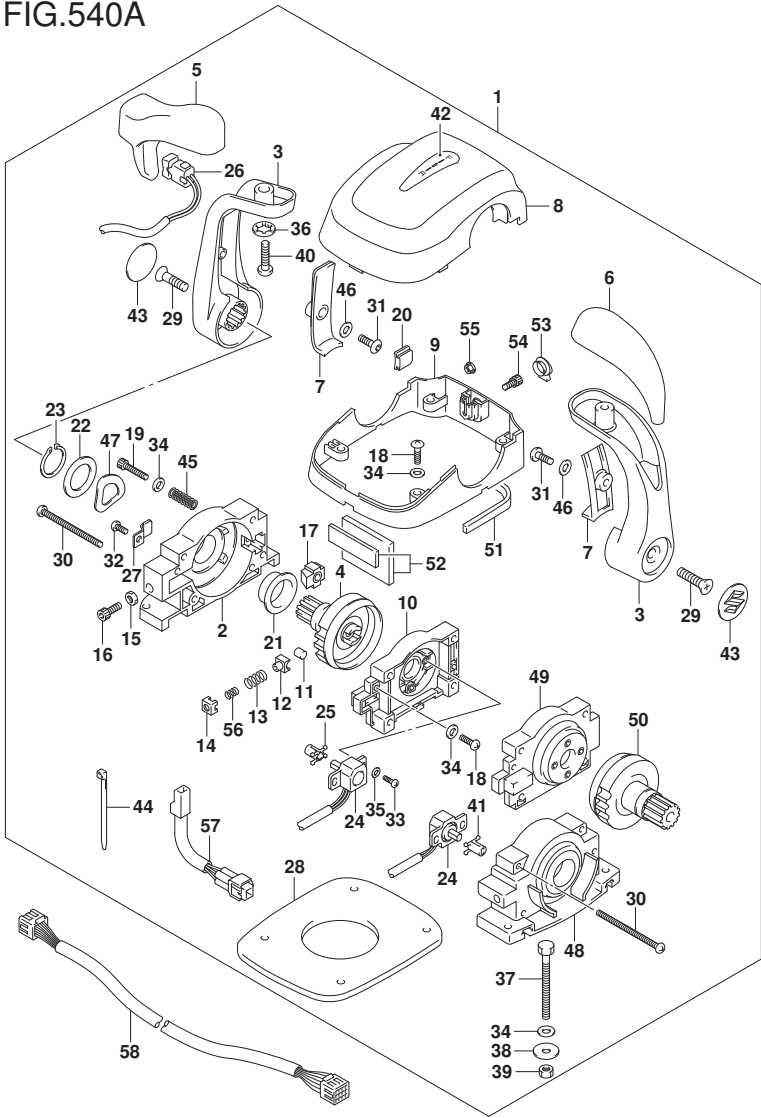


FIG.540A (1-H-12) OPT:REMOTE CONTROL ASSY DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J14	REMOTE CONTROL ASSY	1	
2	67211-98J20	.HOUSING (L)	1	
3	67251-98J00	.LEVER, HANDLE	2	
4	67246-98J10	.SHAFT, DRIVE (L)	1	
5	67261-98J00	.GRIP, NO.1	1	
6	67261-98J10	.GRIP, NO.2	1	
7	67263-98J00	.COVER, LEVER	2	
8	67212-98J30	.COVER, UPPER	1	
9	67271-98J40	.COVER, BOTTOM	1	
10	67222-98J10	.PANEL ASSY, BACK (L)	1	
11	67236-98J10	.ROOLER, DETENT	2	
12	67235-98J10	.GUIDE, DETENT ROOLER	2	
13	67237-98J40	.SPRING, DETENT	2	
14	67233-98J10	.HOLDER, DETENT SPRING	2	
15	67287-92E00	.NUT	2	
16	67239-98J00	.SCREW, DETENT ADJUST	2	
17	67223-98J00	.PAD, BRAKE	2	
18	67296-98J50	.SCREW (5X18)	8	
19	67296-98JA0	.SCREW (4X10)	2	
20	67272-98J10	.GROMMET, COVER	2	
21	67252-98J10	.BUSH, DRIVE SHAFT	2	
22	67288-98J20	.WASHER	2	
23	67292-98J00	.C RING	2	
24	15980-98J00	.POTENTIOMETER	2	
25	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
26	37850-98J02	.SWITCH ASSY, PTT	1	
27	67269-98J00	.CLAMP, LEAD	1	
28	67273-98J20	.PACKING	1	
29	67296-98J60	.SCREW (8X30)	2	
30	67296-98J30	.SCREW (5X70)	4	
31	67296-98JG0	.SCREW (5X14)	2	
32	67296-98J00	.SCREW (5X12)	1	
33	67296-94300	.SCREW (4X10)	4	
34	67288-98J40	.WASHER	14	

FIG.540A


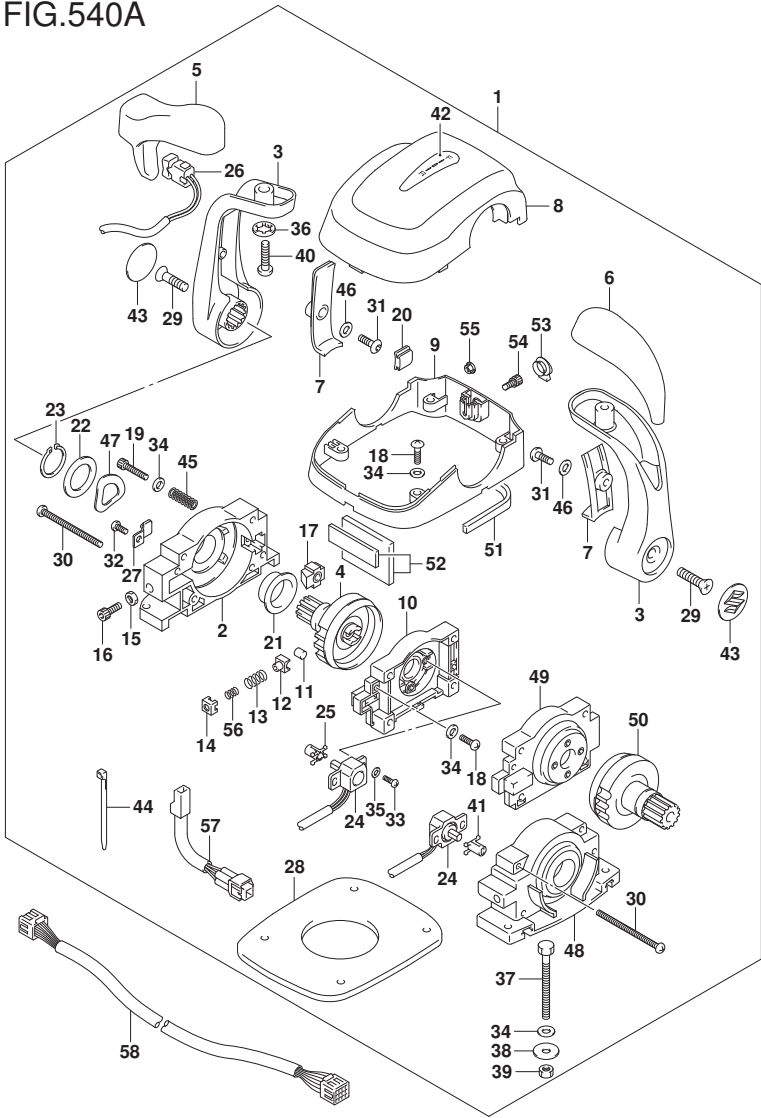


FIG.540A (1-H-13) OPT:REMOTE CONTROL ASSY DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67288-98J00	.WASHER	4	
36	67288-92E20	.WASHER	2	
37	67226-98J00	.BOLT (5X50)	4	
38	09160-05024	.WASHER (5.5X16X1.5)	4	
39	67287-92E00	.NUT	4	
40	67296-98J90	.SCREW	2	
41	67227-98J00	.LEVER, POTENTIOMETER NO.1	1	
42	67284-98J10	.MARK (F-N-R)	1	
43	67257-98J00	.MARK, LEVER (S)	2	
44	67269-98J30	.BAND	1	
45	67288-98J10	.WASHER, SPRING	16	
46	67288-98J30	.WASHER	2	
47	67228-98J50	.WASHER, WAVE	2	
48	67211-98J30	.HOUSING (R)	1	
49	67222-98J20	.PANEL ASSY, BACK (R)	1	
50	67246-98J20	.SHAFT, DRIVE (R)	1	
51	67273-98J10	.PACKING (FRONT)	1	
52	67273-98J30	.PACKING (REAR)	1	
53	67277-98J00	.GROMMET	1	
54	67296-98JF0	.BOLT (5X14)	1	
55	67297-98J00	.NUT	1	
56	67237-98J50	.SPRING, DETENT	2	
57	36890-98J00	.HARNES, CONDENSER ADAPTER	1	
58-1	36620-98J30	WIRE ASSY, REMOTE CONTROL	1	L:6500
58-2	36620-98J40	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.543A

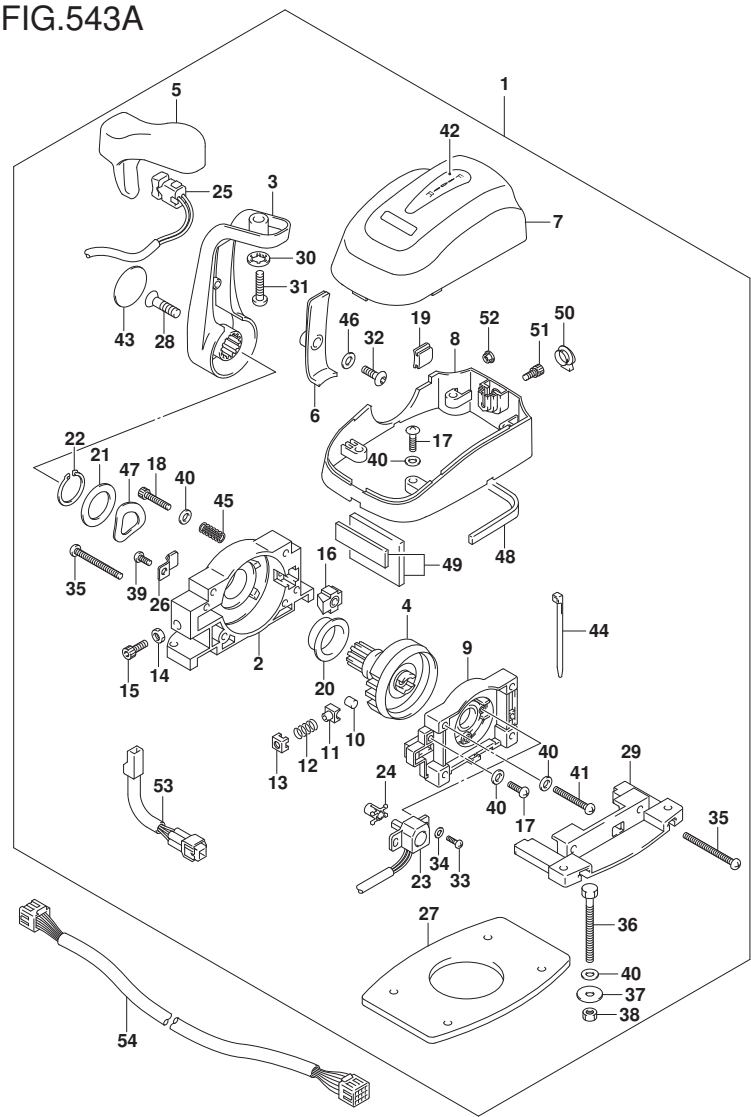


DF350A_E01_018_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG.543A (1-H-14) OPT:REMOTE CONTROL ASSY SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J04	REMOTE CONTROL ASSY	1	
2	67211-98J20	.HOUSING	1	
3	67251-98J00	.LEVER, HANDLE	1	
4	67246-98J10	.SHAFT, DRIVE	1	
5	67261-98J00	.GRIP, NO.1	1	
6	67263-98J00	.COVER, LEVER	1	
7	67212-98J20	.COVER, UPPER	1	
8	67271-98J30	.COVER, BOTTOM	1	
9	67222-98J10	.PANEL ASSY, BACK	1	
10	67236-98J10	.ROLLER, DETENT	1	
11	67235-98J10	.GUIDE, DETENT ROLLER	1	
12	67237-98J30	.SPRING, DETENT	1	
13	67233-98J10	.HOLDER, DETENT SPRING	1	
14	67287-92E00	.NUT	1	
15	67239-98J00	.SCREW, DETENT ADJUST	1	
16	67223-98J00	.PAD, BRAKE	1	
17	67296-98J50	.SCREW (5X18)	6	
18	67296-98JA0	.SCREW (4X10)	1	
19	67272-98J10	.GROMMET, COVER	1	
20	67252-98J10	.BUSH, DRIVE SHAFT	1	
21	67288-98J20	.WASHER	1	
22	67292-98J00	.C RING	1	
23	15980-98J00	.POTENTIOMETER	1	
24	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
25	37850-98J02	.SWITCH ASSY, PTT	1	
26	67269-98J00	.CLAMP, LEAD	1	
27	67273-98J00	.PACKING	1	
28	67296-98J60	.SCREW (8X30)	1	
29	67274-98J00	.FLANGE, BASE	1	
30	67288-92E20	.WASHER	1	
31	67296-98J90	.SCREW	1	
32	67296-98JG0	.SCREW (5X14)	1	
33	67296-94300	.SCREW (4X10)	2	
34	67288-98J00	.WASHER	2	

FIG.543A

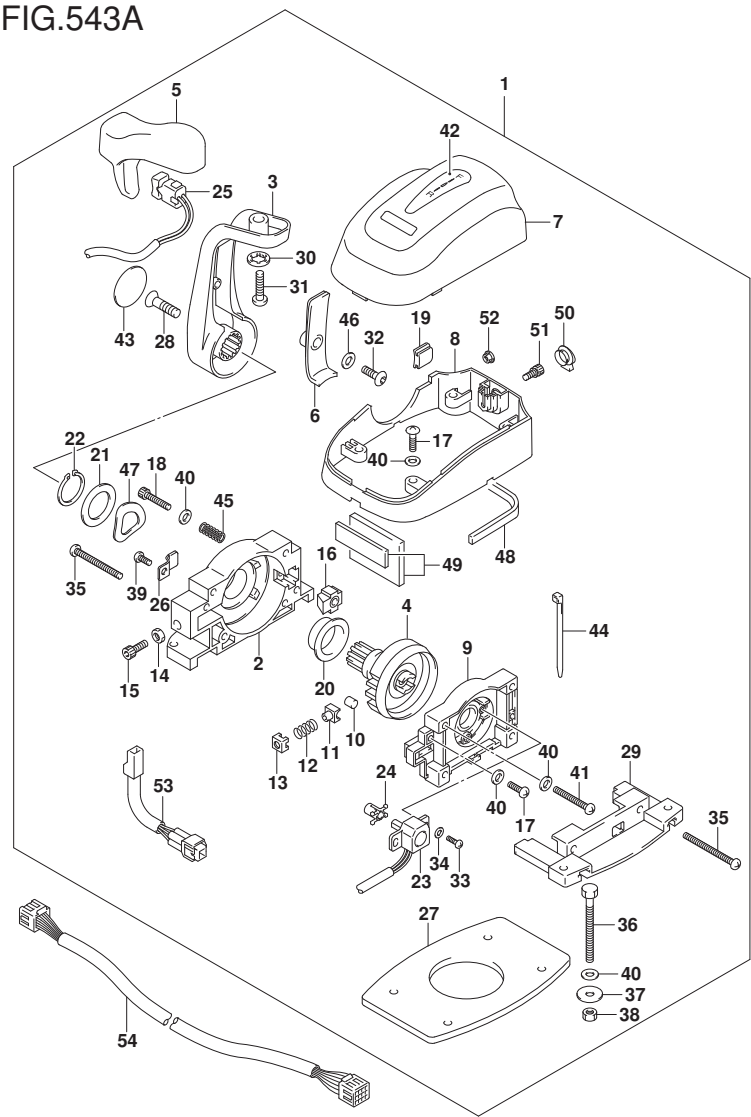

DF350A_E01_018_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG.543A (1-H-15) OPT:REMOTE CONTROL ASSY SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67296-98J20	.SCREW (5X50)	2	
36	67226-98J00	.BOLT (5X50)	4	
37	09160-05024	.WASHER (5.5X16X1.5)	4	
38	67287-92E00	.NUT	4	
39	67296-98J00	.SCREW (5X12)	1	
40	67288-98J40	.WASHER	12	
41	67296-98J10	.SCREW (5X35)	1	
42	67284-98J10	.MARK (F-N-R)	1	
43	67257-98J00	.MARK, LEVER (S)	1	
44	67269-98J30	.BAND	1	
45	67288-98J10	.WASHER, SPRING	8	
46	67288-98J30	.WASHER	1	
47	67228-98J50	.WASHER, WAVE	1	
48	67273-98J10	.PACKING (FRONT)	1	
49	67273-98J30	.PACKING (REAR)	1	
50	67277-98J00	.GROMMET	1	
51	67296-98JF0	.BOLT (5X14)	1	
52	67297-98J00	.NUT	1	
53	36890-98J00	.HARNESS, CONDENSER ADAPTER	1	
54-1	36620-98J30	WIRE ASSY, REMOTE CONTROL	1	L:6500
54-2	36620-98J40	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.585A

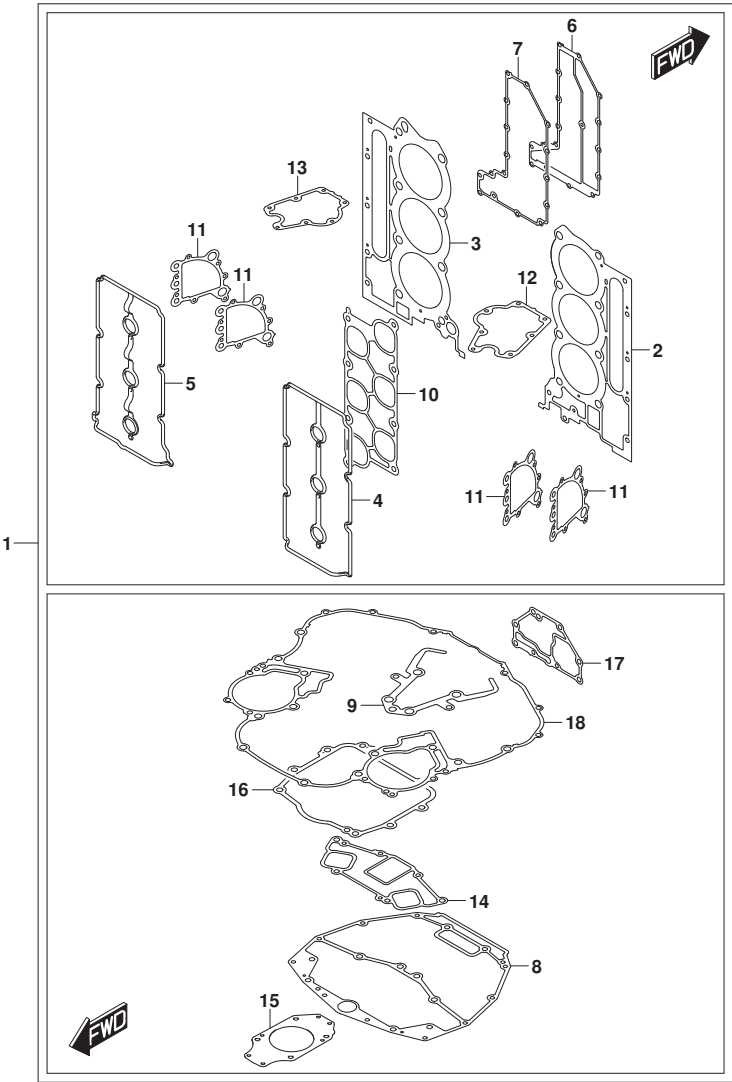


FIG.585A (1-1-2) OPT:GASKET SET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11410-98840	GASKET SET	1	
2	11141-98L00	.GASKET, CYLINDER HEAD STBD	1	
3	11142-98L00	.GASKET, CYLINDER HEAD PORT	1	
4	11179-93J00	.GASKET, CYL HEAD COVER STBD	1	
5	11189-93J00	.GASKET, CYL HEAD COVER PORT	1	
6	11332-98L00	.GASKET, WTR JKT COVER	1	
7	11333-98L00	.GASKET, CRANKCASE OIL COVER	1	
8	11489-98L00	.GASKET, OIL PAN	1	
9	12778-98L00	.GASKET, GUIDE BASE	1	
10	13119-98L00	.GASKET, INTAKE MANIFOLD	1	
11	14151-98L00	.GASKET, EXH COVER	4	
12	14181-98L00	.GASKET, EXH UPPER COVER STBD	1	
13	14182-98L00	.GASKET, EXH UPPER COVER PORT	1	
14	14212-98L00	.GASKET, EXHAUST TUBE	1	
15	17472-98L00	.GASKET, PUMP CASE PANEL	1	
16	51123-98L00	.GASKET, MOUNT OIL SEAL COVER	1	
17	51142-98L00	.GASKET, ENGINE HOLDER COVER	1	
18	51211-98L00	.GASKET, ENGINE HOLDER	1	

FIG.601A


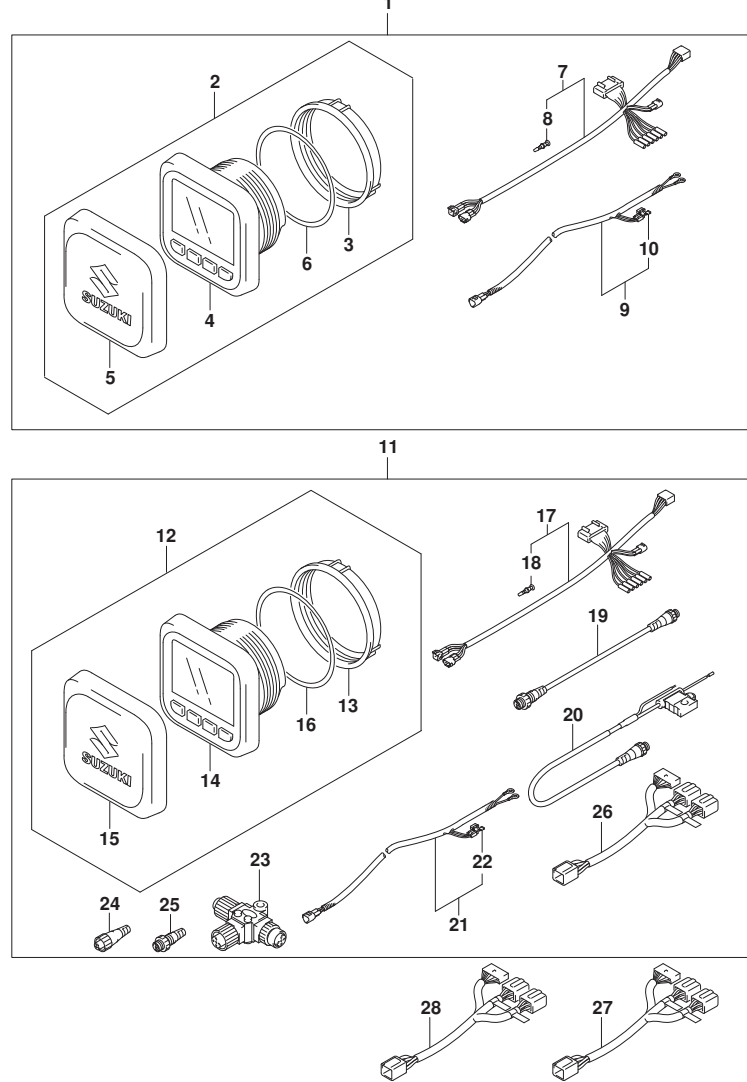


FIG.601A (1-1-3) OPT:MULTI FUNCTION GAUGE (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34000-96L62	KIT, SINGLE GAUGE ELECTRIC	1	
2	34011-96L12	..GAUGE SET, MULTI	1	
3	34112-96L00	..NUT, GAUGE	1	
4	34193-96L00	..BEZEL, GAUGE	1	
5	34211-96L00	..COVER, GAUGE	1	
6	34825-96L00	..PACKING, GAUGE	1	
7	36661-96L00	ADAPTER, GAUGE	1	
8	36615-96300	..TERMINAL, RESIN	5	
9	36663-98J10	..WIRE, GAUGE POWER	1	
10	09481-05501	..FUSE (5A)	1	
11	34000-96L72	KIT, DUAL GAUGE ELECTRIC	1	
12	34011-96L12	..GAUGE SET, MULTI	2	
13	34112-96L00	..NUT, GAUGE	2	
14	34193-96L00	..BEZEL, GAUGE	2	
15	34211-96L00	..COVER, GAUGE	2	
16	34825-96L00	..PACKING, GAUGE	2	
17	36661-96L00	ADAPTER, GAUGE	1	
18	36615-96300	..TERMINAL, RESIN	5	
19	36662-88L10	..WIRE, 2 EXTENSION	2	
20	36663-88L00	..HARNESS ASSY, NETWORK POWER	1	
21	36663-98J10	..WIRE, GAUGE POWER	1	
22	09481-05501	..FUSE (5A)	1	
23	36664-88L00	..CONNECTOR, BRANCH	2	
24	36665-88L00	..UNIT, RESISTOR FEMALE	1	
25	36665-88L10	..UNIT, RESISTOR MALE	1	
26	36667-96L00	..WIRE, GAUGE ADAPTER	1	L:100+100
27	36667-96L11	WIRE, DUAL GAUGE ADAPTER	1	L:100+150
28	36667-96L30	WIRE, GAUGE ADAPTER	1	

FIG.602A

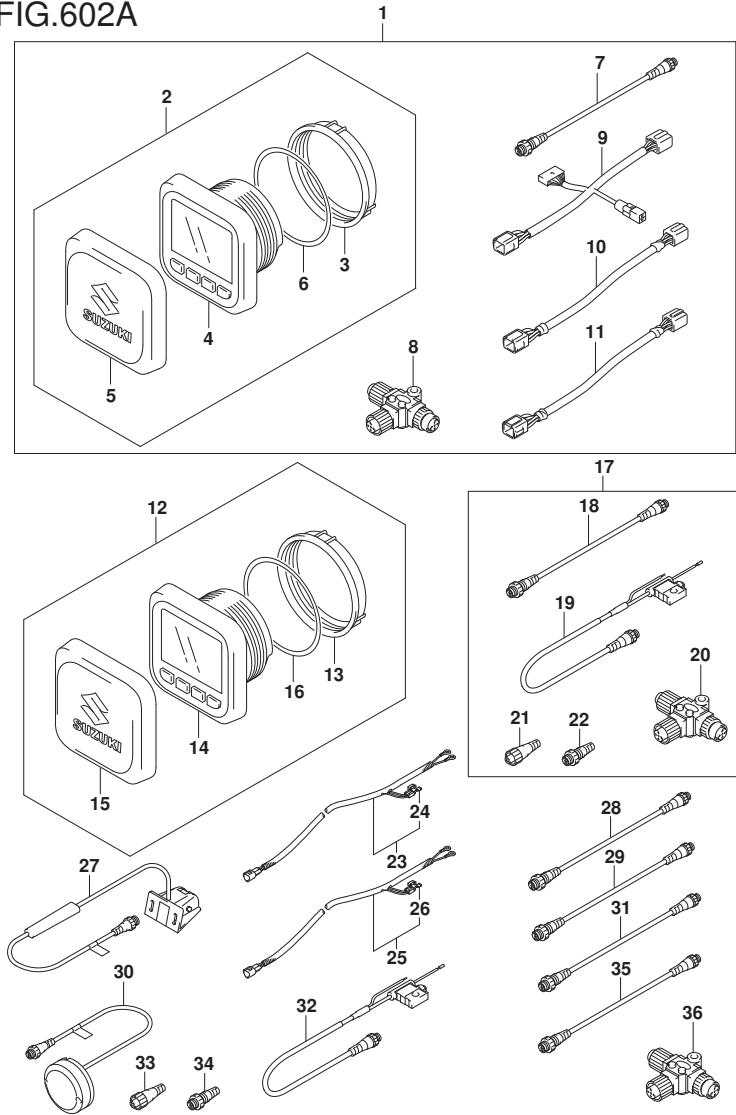

DF350A_E01_018_602A
OPT:MULTI FUNCTION GAUGE (2)

FIG.602A (1-I-4) OPT:MULTI FUNCTION GAUGE (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34002-96L12	KIT, DUAL STATION	1	
2	34011-96L12	.GAUGE SET, MULTI	1	
3	34112-96L00	.NUT, GAUGE	1	
4	34193-96L00	.BEZEL, GAUGE	1	
5	34211-96L00	.COVER, GAUGE	1	
6	34825-96L00	.PACKING, GAUGE	1	
7	36662-88L10	.WIRE, 2 EXTENSION	1	
8	36664-88L00	.CONNECTOR, BRANCH	1	
9	36665-96L00	.ADAPTER, DUAL STATION	1	
10	36666-96L00	.ADAPTER, GAUGE POWER	1	
11	36682-92E00	.WIRE, GAUGE EXT	1	
12	34011-96L12	SET, MULTI GAUGE	1	
13	34112-96L00	.NUT, GAUGE	1	
14	34193-96L00	.BEZEL, GAUGE	1	
15	34211-96L00	.COVER, GAUGE	1	
16	34825-96L00	.PACKING, GAUGE	1	
17	36001-88L00	SET, WIRE	1	
18	36662-88L10	.WIRE, 2 EXTENSION	1	
19	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
20	36664-88L00	.CONNECTOR, BRANCH	1	
21	36665-88L00	.UNIT, RESISTOR FEMALE	1	
22	36665-88L10	.UNIT, RESISTOR MALE	1	
23	36663-98J00	WIRE, GAUGE POWER	1	L:2500
24	09481-05501	.FUSE (5A)	1	
25	36663-98J10	WIRE, GAUGE POWER	1	L:6000
26	09481-05501	.FUSE (5A)	1	
27	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
28	36662-88L20	WIRE, 6 EXTENSION	1	
29	36662-88L30	WIRE, 15 EXTENSION	1	
30	39950-88L02	MODULE ASSY, GPS RECEIVER	1	
31	36662-88L00	WIRE, 25 EXTENSION	1	
32	36663-88L00	HARNESS ASSY, NETWORK POWER	1	
33	36665-88L00	UNIT, RESISTOR FEMALE	1	
34	36665-88L10	UNIT, RESISTOR MALE	1	
35	36662-88L10	WIRE, 2 EXTENSION	1	
36	36664-88L00	CONNECTOR, BRANCH	1	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11390-98L00	113A-9		116B-12-8
		11410-98840	585A-1	12300-98840-ODA	116A-12-9
		11435-98L01	180A-14		116B-12-9
		11489-98L00	180A-6	12300-98840-0EA	116A-12-10
			585A-8	12340-98L00-0A0	116A-12-1
11101-98L00	111A-1	11501-98L00-Y5S	180A-7-2		116B-12-1
11103-98L00	111A-5	11501-98L00-YAY	180A-7-1	12340-98L00-0B0	116A-12-2
11112-93J00	113A-4	11510-98L01	136A-1		116B-12-2
11115-98L00-001	111A-44	11514-98J00	136A-2	12340-98L00-0C0	116A-12-3
11116-93J01	111A-9	11517-98J00	136A-3		116B-12-3
11117-98L00	113A-5	11522-98L01	136A-15	12340-98L00-0D0	116A-12-4
11118-93J00	206A-1	11531-98L00	136A-4		116B-12-4
11119-98L00	111A-36	11541-93J00-019	180A-9	12340-98L00-0E0	116A-12-5
11141-98L00	111A-10	11591-98L00	180A-8		116B-12-5
		585A-2	12100-98810-025	12632-93J11	175A-1
11142-98L00	111A-11		116B-7-2		175B-1
	585A-3	12100-98810-0A0	116A-7-1	12701-98L00	121A-1
11170-93J01	111A-21		116B-7-1		121B-1
11173-93J00	111A-23	12101-98L00-050	116A-15	12705-98L00	121A-2
11174-98L00	163A-24	12101-98L10-050	116B-15		121B-2
11179-93J00	111A-25	12102-98L00-050	116A-17	12721-98L00	121A-3
	585A-4	12102-98L10-050	116B-17	12721-98L30	121B-3
11180-98L00	111A-22	12111-98L00-0B0	116A-1	12729-98L00	121A-4
11183-93J00	111A-24	12111-98L10-0B0	116B-1	12729-98L30	121B-4
11186-15501	111A-37	12121-98L00-0B0	116A-2	12730-98J02	119A-1
11189-93J00	111A-26	12121-98L10-0B0	116B-2	12734-98L00	119A-5
	585A-5	12140-98J00	116A-3	12740-98L00	121A-5
11193-98J00	163A-1		116B-3		121B-5
11196-98L00	162A-1	12140-98J00-050	116A-16	12748-93J00	121A-6
	162B-1		116A-18		121B-6
11197-98L00	162A-2		116B-16	12749-93J00	121A-8
	162B-2		116B-18		121B-8
11198-58B00	163A-2	12151-98L00	116A-4	12753-93J00	121A-7
11241-86FA0	113A-37		116B-4		121B-7
11261-93J00	111A-13	12160-98L00	116A-6	12761-98L00	119A-8
	113A-32		116B-6	12762-93J00	119A-9
11261-93J10-Y5S	180A-1-2	12200-98L00	116A-8	12770-98L00	119A-10
11261-93J10-YAY	180A-1-1		116B-8	12771-93J00	119A-14
11291-98L00	111A-34	12242-98J00	116A-9	12772-98L00	119A-16
11293-98L00	113A-1		116B-9	12775-93J00	119A-15
11301-98L00	113A-3	12247-98L00	113A-16	12778-98L00	119A-11
11318-98L00	113A-7	12300-98830	116A-13-1		585A-9
11319-98L00	113A-8		116B-13-1	12810-93J00	119A-18
11330-98L00	113A-12	12300-98830-012	116A-13-2	12812-90J00	119A-20
11332-98L00	113A-13		116B-13-2	12813-73G00	119A-19
	585A-6	12300-98840-0AA	116A-12-6	12831-93J01	119A-22
11333-98L00	113A-14		116B-12-6	12832-93J00	119A-23
	585A-7	12300-98840-0BA	116A-12-7	12833-93J00	119A-24
11334-98L00	113A-15		116B-12-7	12891-93J00	121A-14
11382-93J00	111A-31	12300-98840-0CA	116A-12-8		121B-14

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12892-93J00-218	121A-15-1	12892-93J00-280	121A-15-26	13761-98L00	136A-5
	121B-15-1		121B-15-26	13762-98L00	136A-6
12892-93J00-220	121A-15-2	12892-93J00-283	121A-15-27	13766-98L00	136A-7
	121B-15-2		121B-15-27	13811-98L00	136A-8
12892-93J00-223	121A-15-3	12892-93J00-285	121A-15-28	13812-98L00	136A-9
	121B-15-3		121B-15-28	13813-98L00	163A-20
12892-93J00-225	121A-15-4	12892-93J00-288	121A-15-29	13851-98L00	136A-10
	121B-15-4		121B-15-29	14111-98L00	140A-11
12892-93J00-228	121A-15-5	12892-93J00-290	121A-15-30	14112-98L00	140A-16
	121B-15-5		121B-15-30	14141-98L00	140A-1
12892-93J00-230	121A-15-6	12892-93J00-293	121A-15-31	14142-98L00	140A-3
	121B-15-6		121B-15-31	14151-98L00	140A-5
12892-93J00-233	121A-15-7	12892-93J00-295	121A-15-32		585A-11
	121B-15-7		121B-15-32	14154-93J01	180A-10
12892-93J00-235	121A-15-8	12892-93J00-298	121A-15-33	14161-98L00	140A-2
	121B-15-8		121B-15-33	14162-98L00	140A-4
12892-93J00-238	121A-15-9	12892-93J00-300	121A-15-34	14171-98L00	140A-6
	121B-15-9		121B-15-34	14172-98L00	140A-8
12892-93J00-240	121A-15-10	12911-98L00	121A-16	14181-98L00	140A-7
	121B-15-10		121B-16		585A-12
12892-93J00-243	121A-15-11	12915-98L00	121A-17	14182-98L00	140A-9
	121B-15-11		121B-17		585A-13
12892-93J00-245	121A-15-12	12921-98L00	121A-18	14211-98L00	180A-11
	121B-15-12		121B-18	14212-98L00	180A-12
12892-93J00-248	121A-15-13	12931-78G00	121A-19		585A-14
	121B-15-13		121B-19	15100-94900	147A-39
12892-93J00-250	121A-15-14	12932-24400	121A-20		147B-39
	121B-15-14		121B-20		147C-39
12892-93J00-253	121A-15-15	12933-69G10	121A-21		147D-39
	121B-15-15		121B-21	15100-98L00	147A-38
12892-93J00-255	121A-15-16	13100-98L00	163A-3		147B-38
	121B-15-16	13111-98L00	122A-1		147C-38
12892-93J00-258	121A-15-17	13119-98L00	122A-2		147D-38
	121B-15-17		585A-10	15116-98L00	147A-40
12892-93J00-260	121A-15-18	13134-98J00	163A-14		147B-40
	121B-15-18	13137-98J00	163A-4		147C-40
12892-93J00-263	121A-15-19	13139-98J01	163A-15		147D-40
	121B-15-19		163A-5	15191-98L00	147A-55
12892-93J00-265	121A-15-20	13147-98J00	163A-6	15191-98L10	147B-55
	121B-15-20	13180-98J00	163A-7		147C-55
12892-93J00-268	121A-15-21	13300-98L00	163A-16		147D-55
	121B-15-21	13315-98J00	163A-18	15192-98L00	147A-56
12892-93J00-270	121A-15-22	13343-98J10	163A-17		147B-56
	121B-15-22	13370-93J10	147B-2		147C-56
12892-93J00-273	121A-15-23		147C-2		147D-56
	121B-15-23		147D-2	15193-98L00	147A-57
12892-93J00-275	121A-15-24	13370-98L00	147A-2		147B-57
	121B-15-24	13421-98L00	163A-19		147C-57
12892-93J00-278	121A-15-25	13614-93J00	147D-22		147D-57
	121B-15-25	13650-52G00	315A-1	15198-98L00	147A-58

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15200-98L00	147B-58	15626-93J00	147D-6	15643-98L00	147B-16
	147C-58		147A-7		147C-16
	147D-58		147B-7		147D-16
	147A-3		147C-7		147A-44
15200-98L10	147B-3	15626-93J10	147D-7	15645-93J10	147B-44
	147C-3		147A-8		147C-44
	147D-3		147B-8		147D-44
	147A-59		147C-8		147A-45
15410-98L00	147B-59	15628-99E00	147D-8	15647-98L00	147B-45
	147C-59		147A-9		147C-45
	147D-59		147B-9		147D-45
	147A-60		147C-9		147A-17
15411-93J10	147B-60	15629-99E10	147D-9	15647-98L10	147B-17
	147C-60		147A-10		147C-17
	147D-60		147B-10		147D-17
	147A-61		147C-10		147A-18
15412-93J10	147B-61	15631-98L00	147D-10	15650-93J00	147B-18
	147C-61		147A-11		147C-18
	147D-61		147B-11		147D-18
	147A-62		147C-11		147A-19
15413-98L00	147B-62	15632-98L00	147D-11	15654-99E00	147B-19
	147C-62		147A-41		147C-19
	147D-62		147B-41		147D-19
	147A-63		147C-41		147A-46
15415-93J10	147B-63	15635-98L00	147D-41	15674-98L00	147B-46
	147C-63		147A-42		147C-46
	147D-63		147B-42		147D-46
	147A-64		147C-42		147A-23
15421-98L00	147B-64	15637-98L00	147D-42	15681-98L00	147B-23
	147C-64		147A-43		147C-23
	147D-64		147B-43		147D-23
	147A-65		147C-43		147A-20
15423-98L00	147B-65	15638-98L00	147D-43	15683-98L00	147B-20
	147C-65		147A-12		147C-20
	147D-65		147B-12		147D-20
	147A-1		147C-12		147B-86
15600-98L00	147D-1	15639-98L00	147D-12	15695-98L00	147C-86
15600-98L10	147B-1		147A-13		147D-86
15600-98L20	147C-1		147B-13		144A-1
15612-98L00	147A-4		147C-13	15710-98L00	144B-1
	147B-4	15641-98L00	147D-13		144A-4
	147C-4		147A-14		144B-4
	147D-4		147B-14		144A-2
15613-98L00	147A-5	15642-88L10	147C-14	15716-82M00	144B-2
	147B-5		147D-14		144A-3
	147C-5		147A-15		144B-3
	147D-5		147B-15		144A-5
15614-98L00	147A-6	15642-90J00	147C-15	15735-98L00	144B-5
	147B-6		147D-15		144A-6
	147C-6		147A-16		144B-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15756-98L00	144A-7	16782-93J00	175B-6	17680-98L10	162B-8
15760-98L00	144B-7		175A-7		162A-9
	147A-21		175B-7		162B-9
	147B-21		175A-8		162A-10
	147C-21	16783-93J01	175B-8	17712-98L00	162B-10
	147D-21		111A-38		162A-11
	16910-98L00		111A-39		162B-11
	16931-98L00		111A-40		401A-3
15762-93J00	144A-8	16941-98L00	160A-15	17913-93J00	410A-1
15762-93J10	144B-8		17400-98L00		410B-1
15830-77EA0	144A-9		160A-1		401A-4
15830-98J01	147A-66		17410-93J01		410B-2
	147B-66	17413-93J02	160B-1	17914-93J00	401A-4
	147C-66		160A-2		410A-2
	147D-66		160B-2		410B-2
	144A-10		160A-3		162A-12
15831-93J00	144B-10	17416-93J00	160B-3	17915-98L00	162B-12
	147A-67		220A-48		410A-46
	147B-67		160A-4		410B-46
	147C-67		160B-4		163A-22
	147D-67	17471-98L00	160A-5	18498-87JC0	162A-17
	144B-9		160B-5		162B-17
	147A-68		160A-6		162A-16
	147B-68		160B-6		162B-16
15832-93J00	147C-68	17560-98L00	585A-15	18498-98L20	147A-24
	147D-68		160A-7-1		147B-24
	520A-41		160B-7-1		147C-24
	540A-24		160A-7-2		147D-24
15980-98J00	543A-23	17560-98L10	160B-7-2	18498-99E10	147A-69
	175A-2		160A-8		147B-69
	175B-2		160B-8		147C-69
	175A-3-1		160A-9		147D-69
16113-93J10	175A-3-2	17562-98L00	160B-9	17563-98L00	162A-13
16400-93J03	175B-3		160A-10		162A-14
16400-93J10	113A-17		160B-10		162B-13
16431-98L00	113A-18		162A-3		162B-14
16432-98L00	113A-19	17581-98L00	162B-3	18498-99E20	162A-15
16433-98L00	113A-20		162A-4		162B-15
16480-98L00	113A-21		162B-4		163A-8
16485-98L00	113A-38		162A-5-2		315A-2
16510-96J10	401A-2	17611-90J00-Y5S	162B-5-2	19115-98L00	326A-23
16519-93J00	175A-4		162A-5-1		326B-25
16520-93J00	175B-4		162B-5-1		326C-25
	113A-39		407A-1		326D-25
16531-98L00	113A-40	17631-98L01	407A-2	19116-98L00	326A-24
16539-98L10	121A-11		162A-6		326B-26
16550-93J00	121B-11		162B-6		326C-26
	121A-12		162A-7-1		326D-26
	121B-12	17670-98L00	162A-7-2		
	175A-5		162B-7-2		
	175B-5		162B-7-1		
16760-93J00	175A-6		162A-8		
16781-93J00		17670-98L20			

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
20000		31173-98L00	301A-4	33925-98J00	326A-11
		31191-63J00	301A-5		326B-11
		31192-92J00	301A-8		326C-11
		31220-98L10	301A-6		326D-11
		31261-75F10	301A-9	33926-98J00	522A-7
	21152-98L00	204A-1	31281-92J10	337A-2	601A-1
	21153-98L00	204A-2	31311-63J00	301A-7	34000-96L72
	21210-98L00	204A-3	31311-93J00	340A-10	34002-96L12
	21241-98L00	204A-4	31313-86030	301A-11	34011-96L12
	22511-99011	336A-1	31320-98L00	301A-12	601A-12
		401A-48	31340-98L00	301A-10	602A-2
	25110-98L00	206A-2-1	31341-98L00	301A-13	602A-12
	25110-98L10	206A-2-2	31343-63J00	301A-14	601A-3
	25214-98L00	206A-11	31344-63J00	301A-15	601A-13
	25300-98L00	206A-3	31912-98L00	301A-16	602A-3
	25315-98L00	206A-4	31918-92J01	301A-17	602A-13
	25411-98L00	206A-5	32102-98J01	303A-1	602A-27
	25500-98L00	220A-1	32120-98L00	303A-4	601A-4
	25700-98L00	407A-39	32160-98L00	303A-5	601A-14
	25711-98L00	220A-2	32800-26J01	310A-1	602A-4
	29103-93J00	315A-3		310B-1	602A-14
30000		29103-93J30	180A-3	32851-93J00	331A-1
		29116-93J00	160A-11		535A-19
			160B-11	32890-98L00	310A-2
			180A-13		310B-2
	29116-93J10	407A-17	32980-38F00	331A-2	34825-96L00
	29125-93J00	326A-2		535A-12	601A-16
		326B-2	33220-69J00	303A-7	602A-6
		326C-2	33221-42F00	303A-8	602A-16
		326D-2	33410-98L00	310A-9	34830-87J20
	29159-93J00	401A-27		310B-9	315A-6
		405A-13	33411-98L00	310A-10-1	34840-98J03
		405B-13	33411-98L10	310A-10-2	34841-88L00
	29404-93J10	315A-4		310B-10	34845-88L01
			33414-98L00	310A-11	36001-88L00
				310B-11	36610-98L00
			33799-97E00	340A-9	36610-98L10
			33810-98L00	322A-1	322B-3
				322B-1	36610-98L20
			33830-98J11	522A-2	36612-96J00
	31100-98L10	301A-1	33911-88BL0	522A-5	322B-16
	31111-94900	340A-2	33920-98L00	326A-9	36612-98J20
	31123-94910	340A-4		326B-9	36615-96300
	31133-90J10	340A-5	33920-98L30	326C-9	522A-9
	31133-94910	340A-6	33920-98L40	326D-9	522A-16
	31135-94900	340A-7	33924-98L00	326A-10	522A-19
	31136-90J20	340A-8		326B-10	522A-21
	31150-98L00	301A-2		326C-10	523A-4
	31170-92J00	301A-3		326D-10	535A-14
	31173-94920	340A-3	33925-93J00	522A-6	601A-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
36616-98L00	601A-18		602A-7		337A-42
	322A-17		602A-18		405A-7
	322B-17		602A-35		405B-7
	322A-18	36662-88L20	602A-28	36895-87D01	337A-43
	322B-18	36662-88L30	602A-29		337A-44
	322A-19	36662-96L00	331A-5	36990-87D00	522A-25
	322B-19		535A-15	37100-96L01	535A-1
	147A-25	36663-88L00	601A-20	37100-98J04	530A-1-1
	147A-70		602A-19	37100-98J05	530A-1-2
	147B-25		602A-32		530B-1
	147B-70	36663-96L00	535A-25	37100-98J11	530A-11
	147C-25	36663-98J00	602A-23		530B-11
	147C-70	36663-98J10	601A-9	37100-98J21	530A-21
	147D-25		601A-21		530B-21
	147D-70		602A-25	37100-98J31	530A-23
	322A-20	36664-88L00	601A-23		530B-23
	322B-20		602A-8	37105-96L02	535A-11
	322A-21		602A-20	37110-96L00	535A-2
	322B-21		602A-36	37110-98J01	530A-2
	322A-22	36664-96L00	535A-26		530B-2
	322B-22	36665-88L00	601A-24	37112-98J00	530A-12
36617-98L10	121A-24		602A-21		530B-12
	121B-24		602A-33	37112-98J10	530A-22
	322A-23	36665-88L10	601A-25		530A-24
	322B-23		602A-22		530B-22
	322A-34		602A-34		530B-24
	322B-4	36665-96L00	602A-9	37114-98J00	530A-10
	540A-58-1	36666-96L00	602A-10		530B-10
	543A-54-1	36667-96L00	601A-26		535A-5
	540A-58-2	36667-96L11	601A-27	37117-96L00	331A-6
	543A-54-2	36667-96L20	522A-26		535A-22
	522A-1	36667-96L30	601A-28	37139-96L30	535A-6
	522A-17	36682-92E00	602A-11	37139-98J00	530A-5-1
	522A-22	36721-96J00	322A-5	37139-98J10	530A-5-2
	522A-13		322B-5		530B-5
	331A-3	36737-96J00	322A-6	37141-99E00	530A-3-3
	535A-13		322B-6		530B-3-3
	522A-8	36738-98J00	322A-7		535A-3-1
	522A-18		322B-7	37141-99E10	530A-3-4
	523A-3	36770-98J13	522A-10-1		530B-3-4
	522A-15	36770-98J21	522A-10-2		535A-3-2
	522A-20	36775-98J00	522A-11	37141-99E20	530A-3-5
	523A-1	36776-98J00	522A-12		530B-3-5
36622-98J00	322A-24	36890-98J00	530A-55		535A-3-3
	322B-24		540A-57	37141-99E30	530A-3-6
	523A-5		543A-53		530B-3-6
	601A-7	36894-87D00	335A-22		535A-3-4
	601A-17		335B-22	37141-99E40	530A-3-7
	602A-31		335C-22		530B-3-7
	601A-19		336A-2		535A-3-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37141-99E50	530A-3-8 530B-3-8 535A-3-6	37826-92J10	530A-19-1 530A-8-2 530A-19-2		322B-10 326A-29 326B-31
37141-99E60	530A-3-9 530B-3-9		530B-8 530B-19		326C-31 326D-31
37141-99E70	530A-3-10 530B-3-10	37850-92J00	535A-9 326A-3	38860-96L01	331A-11 535A-18
37141-99E80	530A-3-11 530B-3-11		326B-3 326C-3	38892-98L00	326A-14 326B-14
37141-99E90	530A-3-12 530B-3-12		326D-3		326C-14 326D-14
37141-99EA0	530A-3-1 530B-3-1	37850-98J02	520A-52 540A-26		326A-15
37141-99EB0	530A-3-2 530B-3-2	37856-92J00	543A-25 326A-4	38895-98L10 38895-98L11	326B-15 326C-15
37143-96L00	535A-4		326B-4		326D-15
37143-99E00	530A-4 530B-4	37857-92J00	326C-4 326D-4	38895-98L20	326B-16 326C-16
37170-96L04	535A-21		326A-5		326D-16
37171-96L02	331A-7		326B-5	38915-90J00	326A-30 326B-32
	535A-23		326D-5		326C-32
37172-96L01	331A-8	37860-87L00	530A-25		326D-32
37173-96L00	535A-24		530B-25	39950-88L02	602A-30
37173-96L10	535A-27	37862-87L00	530A-26		
	331A-9		530B-26		
37722-93J11	535A-16	38100-98L00	337A-3		
	326A-1		340A-1		
	326B-1	38410-93J20	326A-7		
	326C-1	38410-93J21	326B-7		
	326D-1		326C-7		
37803-93J04	530A-15-1		326D-7	41111-93J16-Y5S	335A-1-2
37803-93J05	530A-15-2	38415-93J20	326A-8	41111-93J16-YAY	335A-1-1
	530B-15		326B-8	41111-98L00-Y5S	335B-1-2
37820-93J04	530A-6-1		326C-8		335C-1-2
	530A-17-1		326D-8	41111-98L00-YAY	335B-1-1
37820-93J10	530A-6-2	38500-93J90	331A-10		335C-1-1
	530A-17-2		530A-13	41117-93J02	335A-3
	530B-6		530B-13		335B-3
	530B-17		535A-17		335C-3
	535A-7	38800-98L00	326A-12	41121-93J08-Y5S	335A-2-2
37820-99E02	315A-11		326B-12	41121-93J08-YAY	335A-2-1
37823-92E01	530A-7		326C-12	41121-98L00-Y5S	335B-2-2
	530A-18		326D-12		335C-2-2
	530B-7	38831-98L00	326A-13	41121-98L00-YAY	335B-2-1
	530B-18		326B-13		335C-2-1
	535A-8		326C-13	41122-93J02	335A-4
37825-99E00	530A-16-1		326D-13		335B-4
37825-99E10	530A-16-2	38860-76F01	322A-9		335C-4
	530B-16		322A-10	41130-93J12	335A-6
37826-92J00	530A-8-1		322B-9		335B-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	335C-6	48571-93J00	337A-33	52131-98L00-Y5S	405B-27-2
41135-93J11	335A-7	48572-87J10	337A-21	52131-98L00-YAY	405B-27-1
	335B-7	48573-93J00	337A-31	54112-93J00	401A-26
	335C-7	48582-95E01	337A-6		405A-11
41155-93J02	335A-13	48583-95E00	337A-24		405B-11
	335B-13	48585-95E00	337A-34	54120-98L00	401A-24
	335C-13	48605-93J00	337A-7	54127-98L00	401A-32
41220-93J11	336A-13	48610-98L00	337A-8	54130-98L00	401A-25
41224-95E01	336A-15	48627-93J00	337A-19	54137-93J02	401A-29
41230-96J00	336A-16	48630-98L00	337A-9	54140-98J10	401A-33
41233-95E10	336A-17	48633-93J00	337A-10	54151-98L00	405A-9
41234-93J11	336A-14	48650-93J00	337A-16		405B-9
43111-93J24-Y5S	336A-3-2	48691-93J00	337A-11	54160-98L00	405A-10
43111-93J24-YAY	336A-3-1	48862-87J20	337A-22		405B-10
	336A-4	48864-93J01	337A-23	54165-98L00	405A-18
43211-93J00	336A-5				405B-18
43711-97E01	336A-6			54166-95J02	405B-23
43750-93J21-Y5S	336A-7-2			54180-98L00	401A-47
43750-93J21-YAY	336A-7-1			54211-98L00-Y5S	405A-15-2
45421-87D03	335A-16				405B-15-2
	335B-16	51111-98L00-Y5S	401A-1-2	54211-98L00-YAY	405A-15-1
	335C-16	51111-98L00-YAY	401A-1-1		405B-15-1
48000-98L00	337A-1	51116-98L00	401A-5	54221-93J00-Y5S	405A-16-2
48121-93J20	337A-25	51120-98L00	401A-10		405B-16-2
48125-93J10	337A-26	51123-98L00	401A-13	54221-93J00-YAY	405A-16-1
48126-93J00	337A-30		585A-16		405B-16-1
48128-93J11	337A-32	51124-93J01	401A-11	55100-98850-Y5S	407A-3-2
48140-93J01	335A-18	51125-93J00	401A-12	55100-98850-YAY	407A-3-1
	335B-18	51140-98L00-019	401A-17	55122-98L00	407A-20
	335C-18	51142-98L00	401A-18	55128-93L00	407A-6
48144-93J00	335A-19		585A-17	55320-94900	335A-14
	335B-19	51151-98L00	401A-20		335B-14
	335C-19	51152-98L00	401A-21		335C-14
48145-93J00	335A-21	51161-98L00	401A-38	55321-87J01	111A-15
	335B-21	51162-98L00	401A-40		113A-33
	335C-21	51165-98L00	401A-39		180A-2-1
48311-93J01	337A-35	51170-98L00	162A-18	55321-87J11	180A-2-2
48320-93J00	337A-5		162B-18	55321-93J01	405A-19
48321-93J00	337A-36	51211-98L00	401A-6		405B-19
48400-98L00	337A-12		585A-18		407A-7
48401-98L00	337A-17	52111-98L00-Y5S	405A-1-2	55321-94910	335A-24
48427-87D00	337A-18		405B-1-2		335B-24
	337A-20	52111-98L00-YAY	405A-1-1		335C-24
48451-93J00	337A-13		405B-1-1	56120-98L00	220A-9
	337A-27	52115-98L00-Y5S	405A-21-2	56122-98L00	220A-15
48452-93J00	337A-14		405B-21-2	56123-98L00	220A-16
	337A-28	52115-98L00-YAY	405A-21-1	56126-98L00	220A-17-1
48452-93J10	337A-15		405B-21-1	56126-98L10	220A-17-2
	337A-29	52118-98L00	405A-22	56126-98L20	220A-17-3
48500-98L00	337A-4		405B-22	56126-98L30	220A-17-4

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
56126-98L40	220A-17-5	60000			420B-4
56126-98L50	220A-17-6				420C-4
56126-98L60	220A-17-7			61426-98L10	420A-5
56126-98L70	220A-17-8				420B-5
56130-98L11	407A-15				420C-5
56150-98L00	220A-18			61427-98L00	420A-6
57110-98L00	220A-26-1			61124-98L10	410A-41-1
57110-98L10	220A-26-2			61124-98L20	410A-41-2
57113-98L00	220A-27				410B-41
57130-87D10	405A-4			61131-98L00-Y5S	410A-3-2
	405B-4	61131-98L00-YAY	410A-3-1	61428-98L00	420A-7
	220A-36	61131-98L01-Y5S	410A-3-4		420B-7
57600-98820	220A-42				420C-7
57610-98L00	220A-39	61131-98L01-YAY	410A-3-3	61429-98L00	420A-8
57622-98L00	220A-40				420B-8
57635-98L00	220A-47	61134-98L00	410A-4	61430-98L00-20H	420C-8
57710-98L00	407A-4		410B-4		420C-9
58500-98L00	407A-28-1	61140-98L00-Y5S	410A-5-2		420A-9
58500-98L10	407A-28-2	61140-98L00-YAY	410A-5-1	61432-98L00-20H	420B-9
58500-98L20	407A-28-3	61140-98L01-Y5S	410A-5-4		420C-9
58500-98L30	407A-28-4		410B-5-2		420A-10
58500-98L40	407A-28-5	61140-98L01-YAY	410A-5-3	61433-98L00	420B-10
58500-98L50	407A-28-6		410B-5-1		420C-10
58500-98L60	407A-28-7	61414-98L00	420A-2		420A-11
58500-98L70	407A-28-8		420B-2	61434-98L00	420B-11
58500-98L80	407A-28-9		420C-2		420C-11
58500-98L90	407A-28-10	61416-98L00	420A-44		420A-12
58520-98L00	407A-29		420B-44	61435-98L00	420B-12
58531-98L00	407A-32		420C-44	61435-98L60	420C-12
58540-98L00	407A-38	61420-98821-AML	420A-1-1		420A-46
58541-98L00	407A-33		420B-1-1		420B-46
58551-98L00	407A-34		420C-1-1	61437-98L00	420C-46
58561-98L00	407A-35	61420-98821-BBK	420A-1-2		420A-13
58600-98L00	407A-30-1		420B-1-2	61438-98L00	420B-13
58600-98L10	407A-30-2		420C-1-2		420C-13
58600-98L20	407A-30-3	61421-98L00-Y5S	420A-3-2		420A-14
58600-98L30	407A-30-4		420B-3-2		420B-14
58600-98L40	407A-30-5	61421-98L00-YAY	420A-3-1	61439-98L00	420C-14
58600-98L50	407A-30-6		420B-3-1		420A-15
58600-98L60	407A-30-7		420C-3-1	61441-98L00	420B-15
58600-98L70	407A-30-8	61422-98L00	420A-45		420C-15
58600-98L80	407A-30-9	61422-98L60	420B-45		420A-41
58600-98L90	407A-30-10		420C-45		420B-41
58620-98L00	407A-31	61424-98L00	420A-49-1		420C-41
58631-98L00	407A-36		420B-49-1	61458-90J00	410A-47
58640-98L00	407A-37		420C-49-1		410B-47
58641-98L00	407A-21	61424-98L10	420A-49-2	61475-98L00	420A-16
			420B-49-2		420B-16
			420C-49-2		420C-16
		61425-98L00	420A-4	61476-98L00	420A-17
					420B-17
					420C-17
				61494-93J00	136A-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61561-98L00	420A-18		420C-24		540A-47
	420B-18	61683-98L00	420A-25		543A-47
	420C-18		420B-25	67233-98J00	520A-15
61562-98L00	420A-19		420C-25	67233-98J10	540A-14
	420B-19	61810-98L00-Y5S	410A-6-2		543A-13
	420C-19		410B-6-2	67234-98J00	520A-17
61565-98L00	420A-20	61810-98L00-YAY	410A-6-1	67235-98J00	520A-34
	420B-20		410B-6-1	67235-98J10	540A-12
	420C-20	61814-98L00	410A-7		543A-11
61591-98L00	420A-21		410B-7	67236-98J00	520A-33
	420B-21	61820-98L00-Y5S	410A-8-2	67236-98J10	540A-11
	420C-21		410B-8-2		543A-10
61610-98L00	420A-22	61820-98L00-YAY	410A-8-1	67237-98J00	520A-35
	420B-22		410B-8-1	67237-98J30	543A-12
	420C-22	61827-98L00	410A-9		540A-13
61621-93J01	420A-23		410B-9	67237-98J50	540A-56
	420B-23	61830-98L00-Y5S	410A-10-2	67238-98J00	520A-29
	420C-23		410B-10-2	67239-98J00	540A-16
61632-93J00	410A-24	61830-98L00-YAY	410A-10-1		543A-15
	410B-24		410B-10-1	67246-98J00	520A-31
61632-98L00	410A-25	61861-98L00-20H	410A-11	67246-98J10	540A-4
	410B-25		410B-11		543A-4
61633-93J00-Y5S	410A-26-2	65700-93J11	430A-1	67246-98J20	540A-50
	410B-26-2	65770-93J12	430A-2	67251-98J00	540A-3
61633-93J00-YAY	410A-26-1	67200-98J04	543A-1		543A-3
	410B-26-1	67200-98J14	540A-1	67251-98J20	520A-12
61634-93J00-Y5S	410A-27-2	67200-98J23	520A-1	67252-98J00	520A-38
	410B-27-2	67211-98J20	520A-18	67252-98J10	540A-21
61634-93J00-YAY	410A-27-1		540A-2		543A-20
	410B-27-1		543A-2	67254-98J00	520A-14
61641-93J10	410A-28	67211-98J30	540A-48	67255-98J00	520A-8
	410A-29	67212-98J20	543A-7	67256-98J00	520A-10
	410B-28	67212-98J30	540A-8	67257-98J00	520A-54
	410B-29	67222-98J00	520A-32		540A-43
61641-93J20	410A-30	67222-98J10	540A-10		543A-43
	410B-30		543A-9	67258-98J00	520A-9
61645-93J01-Y5S	410A-31-2	67222-98J20	540A-49	67259-98J00	520A-11
	410B-31-2	67223-98J00	520A-36	67261-98J00	540A-5
61645-93J01-YAY	410A-31-1		540A-17		543A-5
	410B-31-1		543A-16	67261-98J10	540A-6
61649-93J00	410A-48-1	67226-98J00	540A-37	67261-98J20	520A-5
	410B-48-1		543A-36	67261-98J30	520A-6
61649-93J10	410A-48-2	67226-98J10	520A-26	67263-98J00	540A-7
	410B-48-2	67227-98J00	540A-41		543A-6
61652-98L00	410A-32	67227-98J10	520A-42	67263-98J20	520A-4
	410B-32		540A-25	67264-98J00	520A-3
	410A-33		543A-24	67265-98J00	520A-7
61673-93J01	410B-33	67227-98J20	520A-21	67269-98J00	540A-27
	420A-24	67227-98J30	520A-22		543A-26
61682-98L00	420B-24	67228-98J50	520A-47	67269-98J10	520A-53

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67269-98J20	520A-19	67296-98J00	540A-32	99011-98L20-054	420A-50-1
67269-98J30	540A-44		543A-39		420B-50-1
	543A-44	67296-98J10	520A-45	99011-98L20-059	420A-50-2
67271-98J20	520A-2		543A-41		420B-50-2
67271-98J30	543A-8	67296-98J20	543A-35		420C-50
67271-98J40	540A-9	67296-98J30	540A-30	00000	
67272-98J00	520A-51	67296-98J50	520A-50		
67272-98J10	540A-20		540A-18		
	543A-19		543A-17		
67273-98J00	543A-27	67296-98J60	520A-48		
67273-98J10	540A-51		540A-29		01421-08357 163A-27
	543A-48		543A-28		01547-06127 310A-12
67273-98J20	540A-28	67296-98J90	540A-40		310B-12
67273-98J30	540A-52		543A-31		322A-37
	543A-49	67296-98JA0	520A-16		322B-37
67274-98J00	543A-29		540A-19	01547-06167	420A-26
67277-98J00	540A-53		543A-18		420B-26
	543A-50	67296-98JB0	520A-20		420C-26
67284-98J10	540A-42	67296-98JC0	520A-24	01547-06207	111A-4
	543A-42	67296-98JD0	520A-28		111A-8
67287-92E00	540A-15	67296-98JE0	520A-37		420A-27
	540A-39	67296-98JF0	540A-54		420B-27
	543A-14		543A-51		420C-27
	543A-38	67296-98JG0	540A-31	01547-0625C	111A-29
67287-98J00	520A-25		543A-32	01547-06507	111A-30
67288-92E20	540A-36	67297-98J00	540A-55	01550-0612A	113A-25
	543A-30		543A-52	01550-0612C	147A-36
67288-98J00	520A-44	67361-90J10	410A-43		147A-53
	540A-35		410B-43		147A-79
	543A-34	67467-98L00	204A-5		147B-36
67288-98J10	520A-46	68111-93J00	420A-42		147B-53
	540A-45		420B-42		147B-79
	543A-45		420C-42		147C-36
67288-98J20	520A-39	69711-93E10	136A-19		147C-53
	540A-22				147C-79
	543A-21				147D-36
67288-98J30	540A-46	70000			147D-53
	543A-46				147D-79
67288-98J40	540A-34				162A-34
	543A-40				162B-34
67288-98J50	520A-23		420A-43		303A-12
67288-98J60	520A-27	77811-63J00-0PG	420B-43		322A-38
67288-98J70	520A-30		420C-43		322A-39
67292-98J00	520A-40				322B-38
	540A-23				322B-39
	543A-22				326B-17
67294-98J00	520A-13	90000			326C-17
67296-94300	520A-43				326D-17
	540A-33			01550-0616A	175A-11
	543A-33				175B-11

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-0616C	147A-80		326D-23		326D-30
	147B-80	01550-0630C	121A-23	01550-08457	113A-30
	147C-80		121B-23	01550-0845A	175A-12
	147D-80		136A-14		175B-12
	204A-12		147A-54	01550-08507	113A-41
	303A-9		147A-82	01550-0855A	119A-7
	326A-20		147B-54	01550-08607	111A-18
	326B-22		147B-82		111A-19
	326C-22		147C-54		163A-30
	326D-22		147C-82		401A-23
	420A-28		147D-54	01550-08657	113A-31
	420A-29		147D-82	01550-0865A	175A-13
	420A-30		420A-32		175B-13
	420A-31		420B-32	01550-0885A	175A-14
	420B-28		420C-32		175B-14
	420B-29	01550-06357	113A-26	01550-1025A	116A-11
	420B-30	01550-0816C	163A-10		116B-11
	420B-31		163A-28	01550-1050A	401A-8
	420C-28		410A-12	01560-0830C	326A-22
	420C-29		410B-12		326B-24
	420C-30	01550-0820C	111A-17		326C-24
	420C-31		111A-35		326D-24
01550-0620A	119A-25		113A-2	02142-0408B	147A-22
	119A-26		113A-27		147B-22
01550-0620C	136A-13		113A-36		147C-22
	140A-14		140A-18	02142-0612A	111A-28
	162A-35	01550-0830A	119A-13	02142-06167	322A-42
	162A-36		119A-17		322A-43
	162B-35		119A-21		322B-42
	162B-36		401A-16		322B-43
	310A-13	01550-0830C	111A-43	02162-05207	163A-12
	310B-13		301A-19	03122-05165	530A-9
	322A-40		401A-22		530A-20
	322B-40	01550-08357	322A-41		530B-9
01550-06257	310A-7		322B-41		530B-20
	310B-7	01550-0835A	113A-28		535A-10
01550-0625C	111A-41	01550-0835C	163A-11	03542-06169	420A-33
	121A-13		163A-29		420A-34
	121B-13		326A-27		420A-35
	136A-16		326B-29		420A-36
	140A-15		326C-29		420A-37
	147A-81		326D-29		420B-33
	147B-81	01550-0840C	113A-29		420B-34
	147C-81		147A-37		420B-35
	147D-81		147B-37		420B-36
	310A-8		147C-37		420B-37
	310B-8		147D-37		420C-33
	326A-21		326A-28		420C-34
	326B-23		326B-30		420C-35
	326C-23		326C-30		420C-36

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
04211-11129	420C-37	09103-06281	111A-16	09116-08158	122A-4
	163A-13		113A-34	09116-08170	410A-13
	163A-31		180A-4		410B-13
04211-13149	119A-12	09103-08109	401A-14	09116-10134	113A-42
04221-08129	220A-21	09103-08370	163A-23	09116-10135	401A-30
06111-07004	206A-13	09103-08379	113A-22		401A-46
08110-60020	175A-15	09103-08552	407A-18	09116-10137	401A-34
	175B-15	09103-10461	407A-19	09116-10146	111A-42
08113-60020	206A-14	09103-12125	303A-2	09116-10150	407A-9
08113-62000	206A-15	09106-05030	303A-6	09116-10175	337A-41
08113-69047	206A-16	09106-06075	113A-10		401A-31
08221-16256	220A-33	09108-08143	122A-3		401A-35
08310-00067	322A-44	09108-08189	144A-14		405A-17
	322B-44		144B-14		405B-17
08316-10087	322A-2	09108-10115	405B-28	09116-10176	180A-20
	322B-2	09111-06253	410A-15		405A-2
08316-1008C	122A-5		410B-15		405B-2
	144A-15	09116-05010	410A-34	09116-10184	180A-21
	144B-15		410B-34	09120-06016	405A-24
	163A-33	09116-06121	162A-19		405B-24
08321-01067	322A-45		162A-20	09125-05048	315A-13
	322B-45		162B-19	09125-06063	315A-14
08331-41559	220A-14		162B-20		335A-5
	09100-12085		335A-15		335A-23
	335B-9-2		335B-15		335B-5
	335C-9-2		335C-15		335B-23
09100-12086	335A-9-1	09116-06127	410A-35		335C-5
	335B-9-1		410B-35		335C-23
	335C-9-1	09116-06202	310A-3		336A-8
09100-12092	335A-9-3		310B-3		336A-18
	335B-9-3	09116-06215	136A-17		337A-45
	335C-9-3		326A-16		337A-46
09100-12124	405A-23		326B-18		337A-47
09100-12125	335A-9-4		326C-18		405A-6
	335B-9-4		326D-18		405A-8
09100-12126	335C-9-4	09116-06228	140A-10		405B-6
	335A-9-5	09116-06236	405A-20		405B-8
	335B-9-5		405B-20	09131-05004	530A-27
	335C-9-5		407A-8		530B-27
09103-06093	315A-12	09116-06516	401A-41		410A-14
09103-06231	303A-10	09116-08122	401A-19	09136-06148	410B-14
09103-06266	111A-2	09116-08126	401A-36	09139-06135	410A-16
	111A-6	09116-08128	180A-19		410A-18
09103-06267	147A-71	09116-08131	160A-12		410B-16
	147B-71		160B-12		410B-18
	147C-71		401A-45	09139-06136	410A-17
	147D-71	09116-08137	326A-25		410B-17
09103-06278	335A-20		326B-27	09140-05005	315A-10
	335B-20		326C-27	09140-06023	204A-6
	335C-20		326D-27	09140-10031	337A-37

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	407A-10		405B-26		220A-34-8
09140-10032	336A-19	09160-18019	407A-23	09181-25059	220A-6-9
09140-36003	220A-3	09160-36007	220A-41		220A-34-9
09141-18005	407A-22	09160-39004	336A-9	09181-25060	220A-6-10
09159-08136	163A-32	09162-10005	337A-38		220A-34-10
09159-12062	335A-10	09164-14008	410A-37	09181-25061	220A-6-11
	335B-10		410B-37		220A-34-11
	335C-10	09168-06023	113A-23	09181-25062	220A-6-12
09159-14020	335A-17	09168-10034	407A-12		220A-34-12
	335B-17	09168-12012	180A-15	09181-25063	220A-6-13
	335C-17	09168-16009	111A-12		220A-34-13
09159-16027	220A-4	09169-06053	322A-25	09181-25130	220A-6-14
	220A-31		322A-26		220A-34-14
09159-22006	335A-8		322B-25	09181-25160	220A-6-3
	335B-8		322B-26		220A-34-3
	335C-8	09169-06062	136A-11	09181-25162	220A-6-5
09159-27001	220A-28		147A-47		220A-34-5
09160-05024	540A-38		147B-47	09181-30037	220A-32-1
	543A-37		147C-47	09181-30038	220A-32-2
09160-05029	315A-15		147D-47	09181-30039	220A-32-3
09160-06082	336A-20		310A-5	09181-30040	220A-32-4
09160-06084	310A-4		310B-5	09181-30041	220A-32-5
	310B-4		326A-17	09181-30042	220A-32-6
09160-06094	206A-6		326B-19	09181-30046	220A-32-7
09160-06104	520A-49		326C-19	09181-30158	220A-32-8
09160-08091	204A-7		326D-19	09181-30164	220A-32-9
	206A-7	09169-08038	401A-37	09181-30165	220A-32-10
09160-08161	163A-34		407A-25	09181-39001	336A-10
09160-10104	116A-10	09169-08042	147A-26	09181-40004	220A-7-1
	116B-10		147B-26	09181-40005	220A-7-2
09160-10129	206A-8		147C-26	09181-40006	220A-7-3
09160-10141	407A-11		147D-26	09181-40007	220A-7-4
09160-12066	405A-25	09169-08050	410A-19	09181-40008	220A-7-5
	405B-25		410B-19	09181-40009	220A-7-6
09160-13014	410A-36	09169-10023	407A-27	09181-40010	220A-7-7
	410B-36	09180-08229	322A-27	09181-40011	220A-7-8
09160-13021	335A-12		322B-27	09181-40012	220A-7-9
	335B-12	09181-12158	175A-9	09181-40013	220A-7-10
	335C-12		175B-9	09181-40014	220A-7-11
09160-13022	335A-11	09181-25051	220A-6-1	09181-40015	220A-7-12
	335B-11		220A-34-1	09181-50020	220A-35-1
	335C-11	09181-25052	220A-6-2	09181-50021	220A-35-2
09160-14073	405A-12		220A-34-2	09181-50022	220A-35-3
	405A-14	09181-25054	220A-6-4	09181-50023	220A-35-4
	405B-12		220A-34-4	09181-50024	220A-35-5
	405B-14	09181-25056	220A-6-6	09181-50025	220A-35-6
09160-14076	401A-9		220A-34-6	09181-50026	220A-35-7
09160-15051	401A-28	09181-25057	220A-6-7	09181-50027	220A-35-8
09160-16026	220A-5		220A-34-7	09181-50028	220A-35-9
09160-16055	405A-26	09181-25058	220A-6-8	09181-50029	220A-35-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-77003	220A-8-1	09248-26003	401A-43	09289-05012	121A-22
09181-77004	220A-8-2	09251-09005	147A-72		121B-22
09181-77005	220A-8-3		147B-72	09300-40003	220A-45
09181-77006	220A-8-4		147C-72	09306-04005	410A-39
09181-77007	220A-8-5		147D-72		410B-39
09181-77008	220A-8-6	09261-05006	121A-10	09306-13007	410A-40
09181-77009	220A-8-7		121B-10		410B-40
09181-77010	220A-8-8	09262-17019	204A-9	09306-24001	337A-39
09181-77011	220A-8-9	09262-40017	119A-3	09320-04009	322A-28
09181-77012	220A-8-10		220A-38		322B-28
09181-77013	220A-8-11	09262-40018	119A-2	09320-08021	322A-8
09181-77014	220A-8-12	09262-55002	220A-51		322B-8
09181-77015	220A-8-13	09263-30064	220A-43	09320-08076	322A-29
09200-08074	204A-8	09263-45005	220A-10		322B-29
09202-04022	410A-38	09265-25024	220A-19	09320-08086	147A-27
	410B-38	09265-25038	220A-20		147B-27
09202-05032	121A-9	09265-28006	220A-29		147C-27
	121B-9	09265-30024	220A-37		147D-27
09202-06031	160A-13	09265-50001	407A-5	09320-09016	136A-12
	160B-13	09265-50002	220A-11		310A-6
	303A-3	09280-00047	220A-12		310B-6
	407A-26	09280-00049	140A-12		326A-18
09202-08006	180A-17	09280-05007	113A-11		326B-20
	180A-18	09280-10009	163A-9		326C-20
	405A-3	09280-10012	407A-14		326D-20
	405B-3	09280-18004	113A-24	09320-09039	162A-22
	405B-29	09280-21015	220A-23		162B-22
	407A-13	09280-22019	111A-14	09320-10503	162A-23
09202-08007	206A-9		113A-35		162B-23
09204-01006	206A-10		180A-5	09320-11013	410A-20
	336A-21	09280-22020	175A-10		410B-20
09204-03003	407A-24		175B-10	09320-12072	147A-28
09206-08001	111A-3	09280-26006	111A-32		147B-28
	111A-7		162A-21		147C-28
	111A-27		162B-21		147D-28
	401A-7		220A-24	09321-06013	322A-30
	401A-15	09280-26014	401A-44		322B-30
09206-11006	326A-26	09280-55001	140A-13	09321-10030	410A-21
	326B-28	09280-69001	220A-49		410B-21
	326C-28	09280-70012	119A-6	09329-10024	420A-38
	326D-28	09282-15008	407A-16		420B-38
09206-13019	220A-22	09282-17011	119A-27		420C-38
09206-14004	113A-6	09282-22003	204A-10	09329-12004	420A-39
09206-15001	111A-20	09282-24004	220A-50		420B-39
09208-06009	410A-44	09282-30009	220A-44		420C-39
	410B-44	09282-39001	336A-11	09329-14002	410A-23
09246-08006	401A-42	09282-45001	220A-13		410B-23
09247-14041	144A-11	09283-32044	119A-4	09343-70503-040	147A-48
09247-14042	144B-11	09283-91001	116A-14		147B-48
09248-12009	180A-16		116B-14		147C-48

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	147D-48	09401-11425	144A-13		147B-76
09343-70503-600	147B-85		144B-13		147C-76
	147C-85		147A-31		147D-76
	147D-85		147B-31	09403-19409	315A-17
09352-50003-06A	147B-29		147C-31	09403-25001	322A-31
	147C-29		147D-31		322B-31
	147D-29	09401-13423	147A-74	09403-26401	322A-32
09352-50003-30A	147A-29		147B-74		322B-32
09352-50903-600	162A-24		147C-74	09407-08401	530A-14
	162A-25		147D-74		530B-14
	162A-26		163A-21	09407-10404	522A-3
	162B-24		430A-3	09407-11401	322A-33
	162B-25	09401-13425	162A-31		322B-33
	162B-26		162B-31	09407-14403	315A-18
09352-70113-600	162A-27	09401-15414	147A-50	09407-14407	315A-19
	162B-27		147B-50		326A-19
09360-14009	144A-12		147C-50		326B-21
09360-14014	144B-12		147D-50		326C-21
09367-08005	162A-28	09401-18410	163A-25		326D-21
	162B-28	09401-25406	162A-32		331A-12
09380-21002	337A-40		162B-32		535A-20
09380-24007	220A-30	09403-07323	147A-32	09407-25402	322A-34
09380-38003	336A-12		147B-32		322B-34
09380-40004	220A-46		147C-32		410A-42
09381-22010	116A-5		147D-32		410B-42
	116B-5	09403-07340	315A-16	09408-00008	322A-35
09383-04002	410A-45	09403-09316	326A-6		322B-35
	410B-45		326B-6	09408-00050	147B-88
09385-08004	204A-11		326C-6		147C-88
09387-38002	405A-5		326D-6		147D-88
	405B-5	09403-12412	310A-14	09408-00054	147A-84
09401-08412	147A-30		310B-14		147B-84
	147B-30	09403-13308	147A-75		147C-84
	147C-30		147B-75		147D-84
	147D-30		147C-75	09408-00056	147A-33
09401-08413	162A-29		147D-75		147B-33
	162B-29	09403-13310	147A-51		147C-33
09401-11423	147A-49		147B-51		147D-33
	147A-73		147C-51	09408-00121	147A-77
	147B-49		147D-51		147B-77
	147B-73		163A-26		147C-77
	147B-87	09403-13402	522A-23		147D-77
	147C-49	09403-13408	162A-33	09408-00142	147A-34
	147C-73		162B-33		147A-83
	147C-87		303A-11		147B-34
	147D-49	09403-16307	147A-52		147B-83
	147D-73		147B-52		147C-34
	147D-87		147C-52		147C-83
09401-11424	162A-30		147D-52		147D-34
	162B-30	09403-17403	147A-76		147D-83

SUZUKI DF350A/325A PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Service Engineering Department
300 Takatsuka, Minami, Hamamatsu, Japan

Copyright © SUZUKI MOTOR CORPORATION 2018 All Rights Reserved

SUZUKI MOTOR CORPORATION

PRINTED IN JAPAN

9900B-45383-001