

SUZUKI

PARTS CATALOGUE

DF350A/325A

DF350AT
DF325AT



OUTBOARD MOTOR

E01/E40

2018-8

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF350A/325A production start 2018.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	X, XX	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 35001F-123456	PTT	: Power trim and tilt
123456~	: From E. NO. 35001F-123456		
12 x 34 x 5.6	 Figures in the description column		
	show the dimensions of parts.		
ID OD T	(or W, L)		

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF350AT	E01	35001F	X, XX	YAY, Y5S	35001F-910001~
DF325AT	E01, E40	35001F	X, XX	YAY, Y5S	32501F-910001~

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

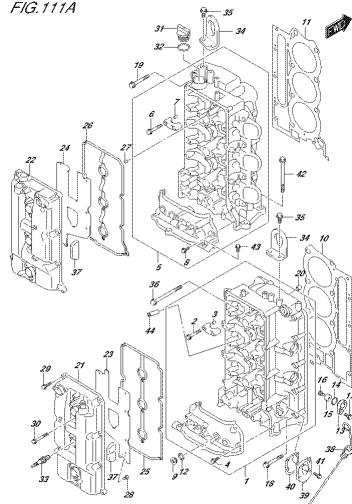


3P38M_E01_010_111A
CYLINDER HEAD

FIG.113A

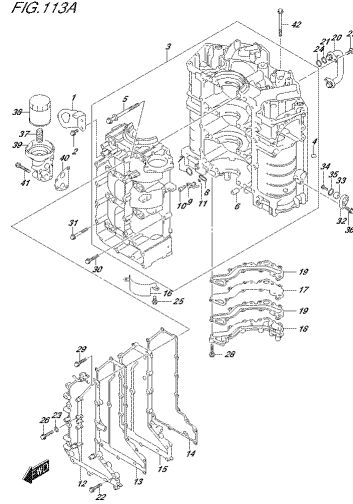


3P38M_E01_010_113A
CYLINDER BLOCK

FIG.116A

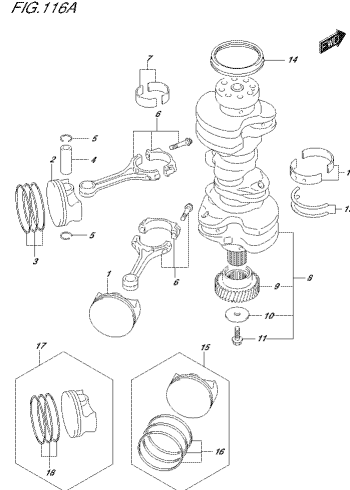


3P38M_E01_010_116A
CRANKSHAFT

FIG.116B

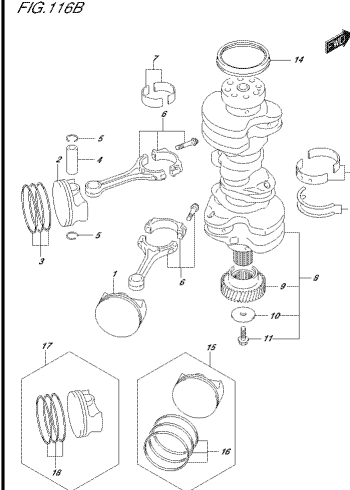


3P38M_E01_010_116B
CRANKSHAFT

FIG.119A

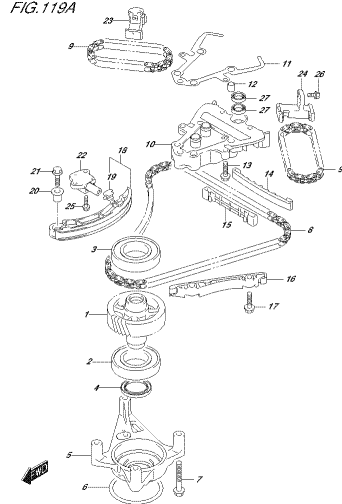


3P38M_E01_010_119A
PISTON CROWN

FIG.121A

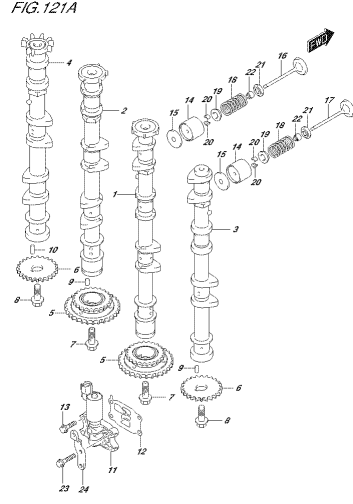


3P38M_E01_010_121A
CRANKSHAFT

FIG.122A

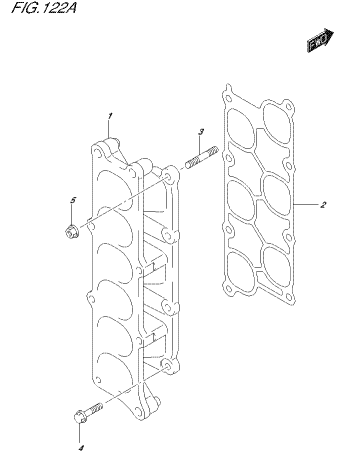

3P38M_E01_010_122A
PISTON RING CROWN

FIG.136A

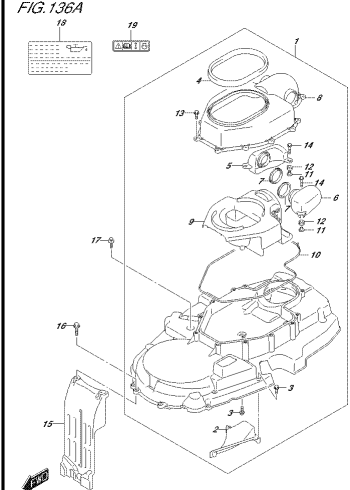

3P38M_E01_010_136A
PISTON RING CROWN

FIG. 140A

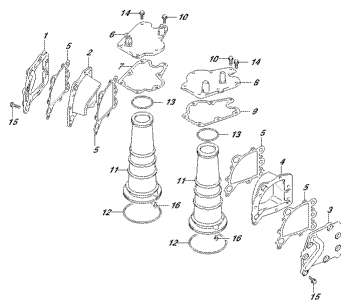


FIG. 140A
EXHAUST

FIG. 144A

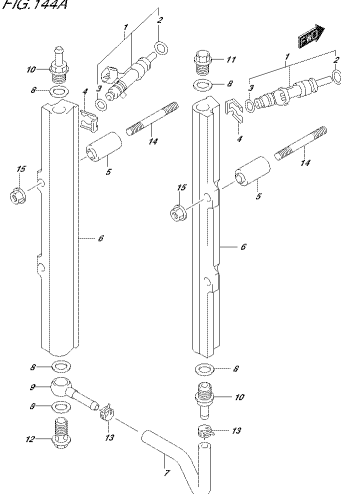


FIG. 144A
FUEL INJECTOR

FIG. 144B

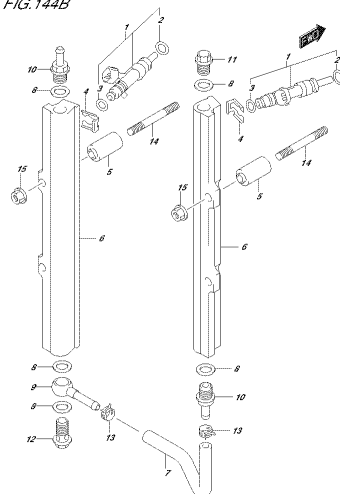


FIG. 144B
FUEL INJECTOR

FIG. 147A

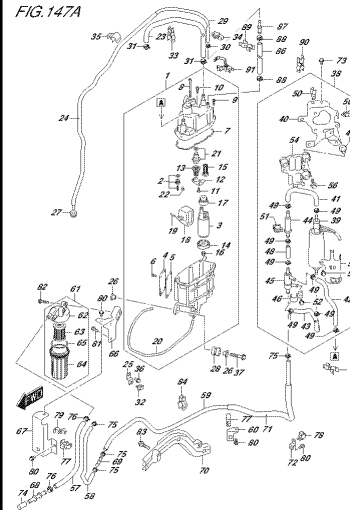


FIG. 147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 147B

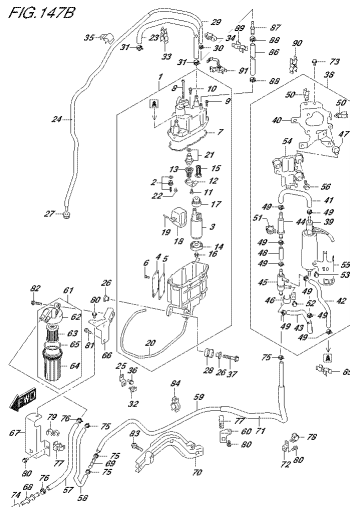


FIG. 147B
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG. 160A

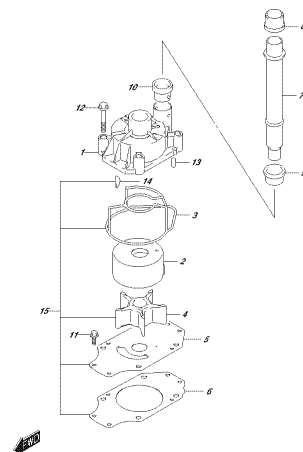


FIG. 160A
WATER PUMP

FIG. 160B

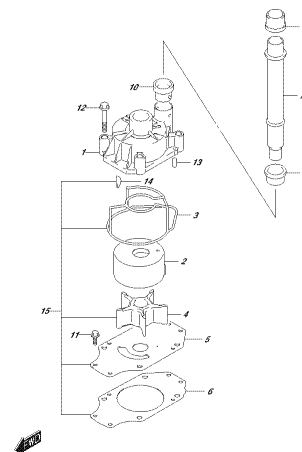


FIG. 160B
WATER PUMP

FIG. 162A


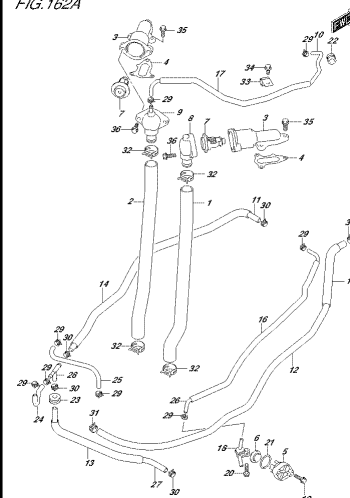



FIG. 162A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.163A

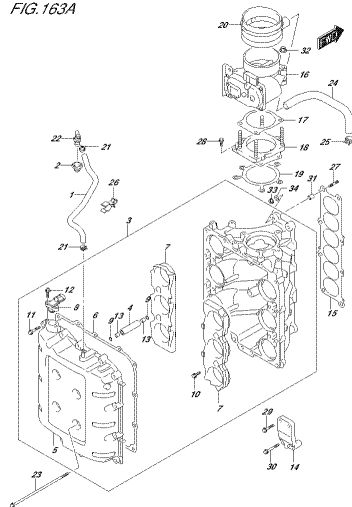


DEBNA_E01_010_163A
CLV 200V

FIG.175A

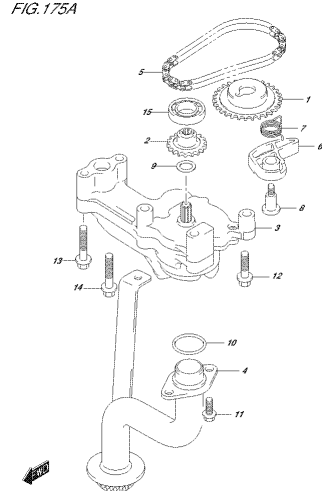


DEBNA_E01_010_175A
CLV 200P

FIG.180A

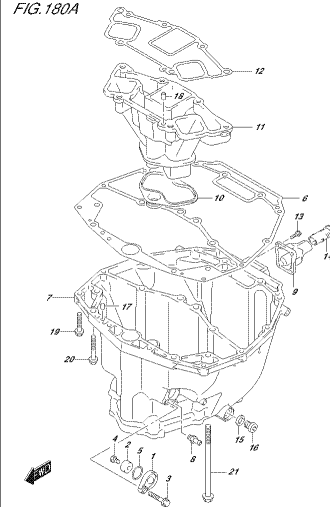


DEBNA_E01_010_180A
CLV 200V

FIG.204A

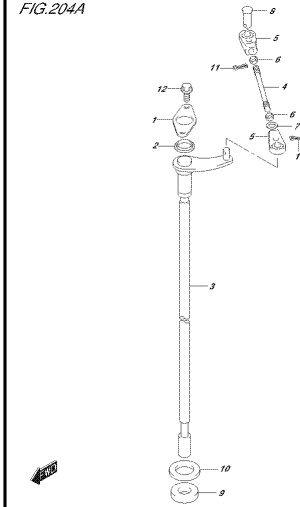


DEBNA_E01_010_204A
CLV 200SH47

FIG.206A

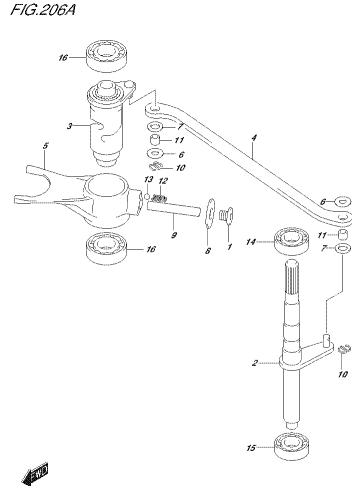


DEBNA_E01_010_206A
CLV 200V RED

FIG.220A

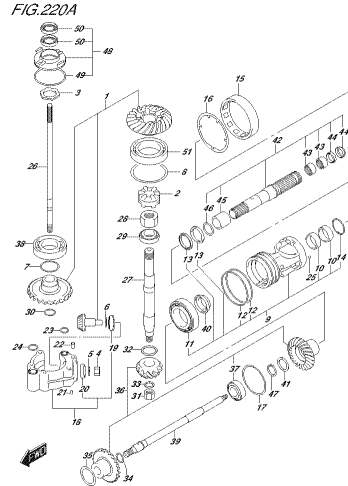


DEBNA_E01_010_220A
TRAMASHERSON

FIG.301A

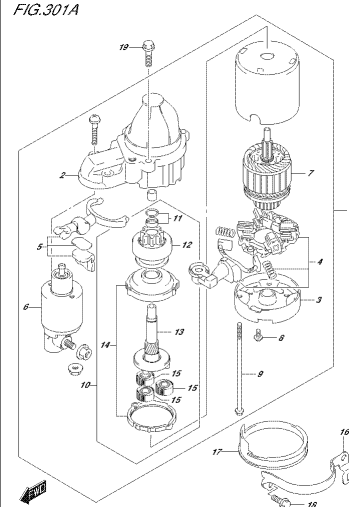


DEBNA_E01_010_301A
STARTING MOTOR

FIG.303A

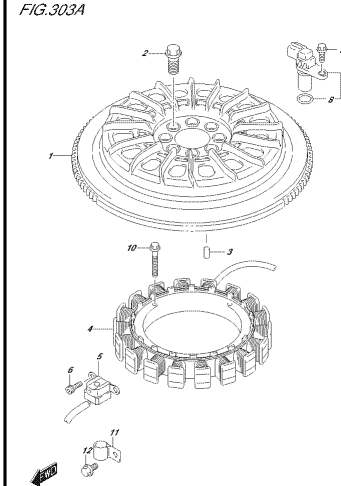


DEBNA_E01_010_303A
MAGNETO

FIG.310A

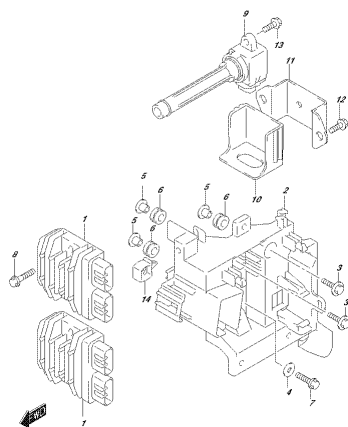


DFORNA_E01_010_310A
PTT SWITCH ENGINE CONTROL UNIT

FIG.315A

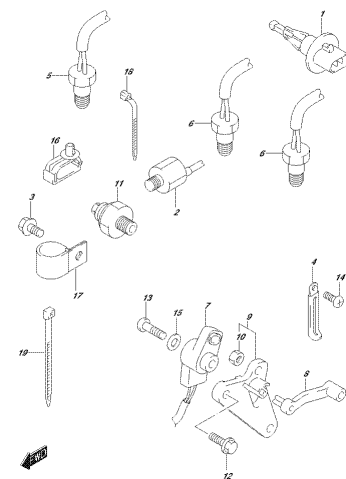


DFORNA_E01_010_315A
PTT SWITCH

FIG.322A

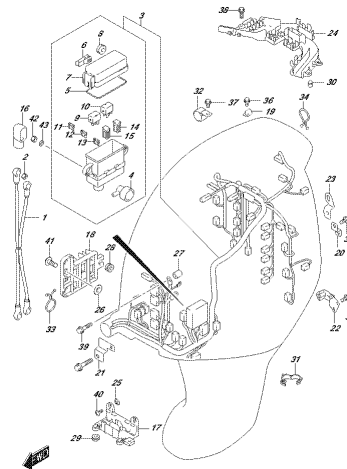


DFORNA_E01_010_322A
HARDNESS

FIG.326A

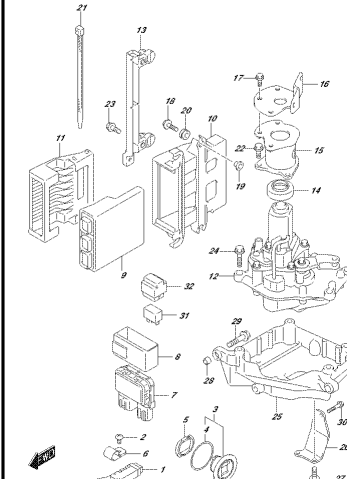


DFORNA_E01_010_326A
PTT SWITCH ENGINE CONTROL UNIT

FIG.326B

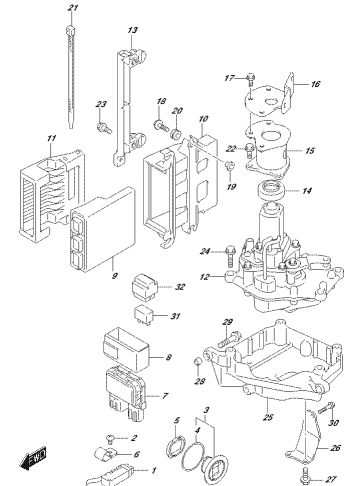


DFORNA_E01_010_326B
PTT SWITCH ENGINE CONTROL UNIT

FIG.326C

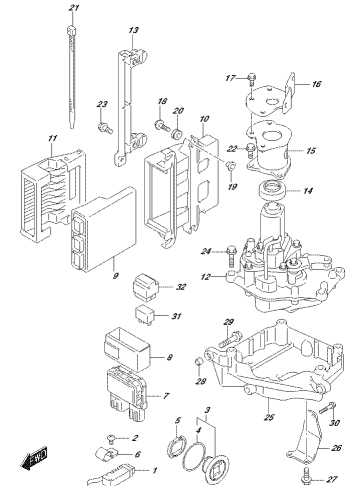


DFORNA_E01_010_326C
PTT SWITCH ENGINE CONTROL UNIT

FIG.331A

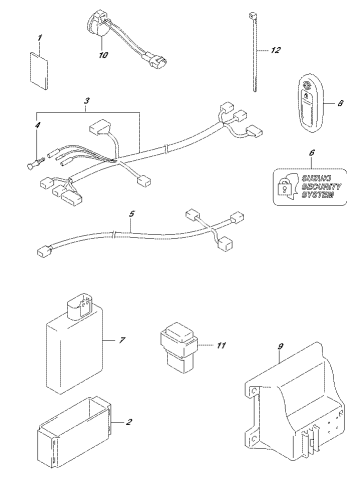


DFORNA_E01_010_331A
KEY-LESS START

FIG.335A

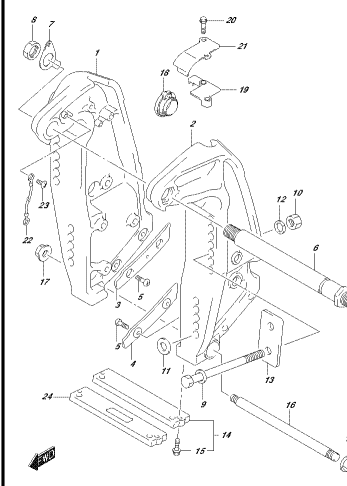


DFORNA_E01_010_335A
CLAMP BRACKET

FIG.336A

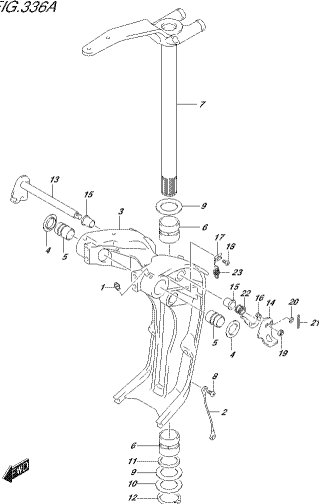


DEBNA_ELT_010_336A
DRIVE SHAFT ASSEMBLY

FIG.337A

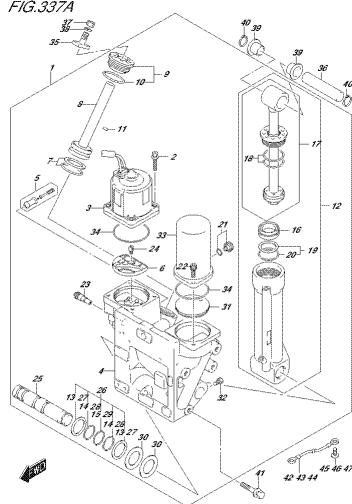


DEBNA_ELT_010_337A
DRIVE SHAFT ASSEMBLY

FIG.340A

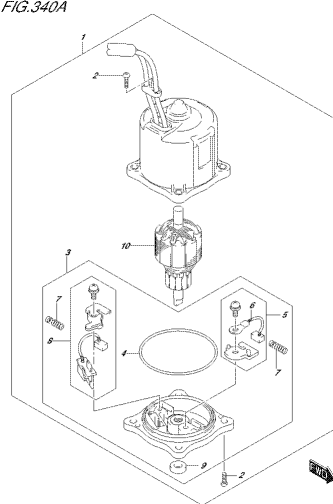


DEBNA_ELT_010_340A
DRIVE SHAFT ASSEMBLY

FIG.401A

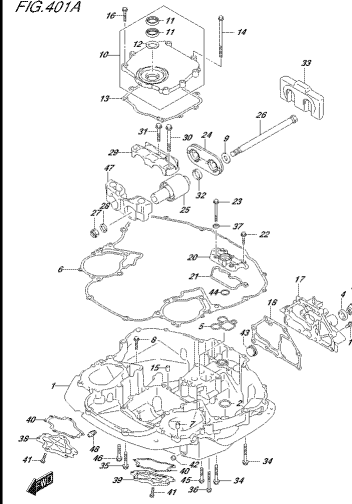


DEBNA_ELT_010_401A
DRIVE SHAFT ASSEMBLY

FIG.405A

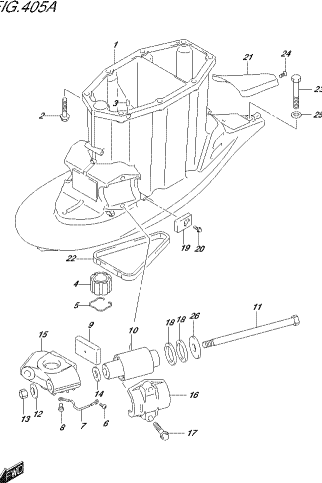


DEBNA_ELT_010_405A
DRIVE SHAFT ASSEMBLY

FIG.405B

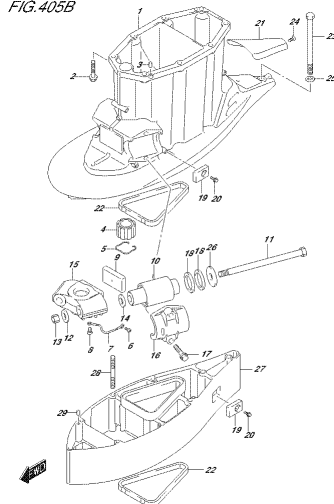


DEBNA_ELT_010_405B
DRIVE SHAFT ASSEMBLY

FIG.407A

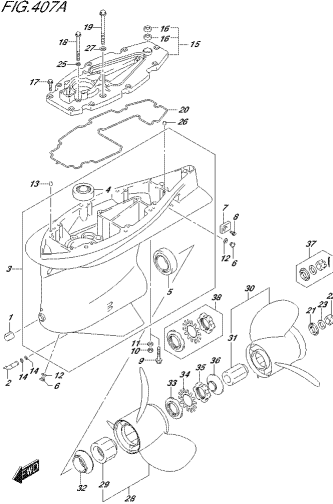


DEBNA_ELT_010_407A
DRIVE SHAFT ASSEMBLY

FIG.410A

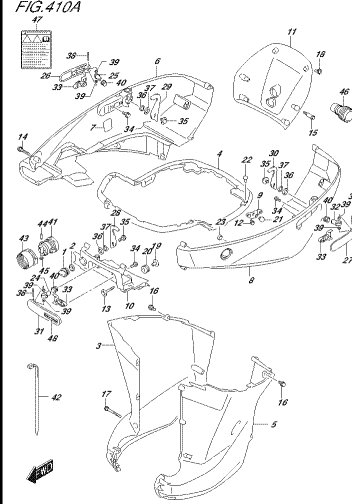


DEBNA_ELT_010_410A
DRIVE SHAFT ASSEMBLY

FIG.420A

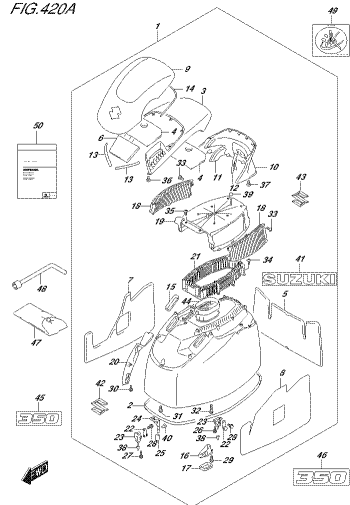


DF300H, ECU, 010, 420A
ENGINE COVER

FIG.420B

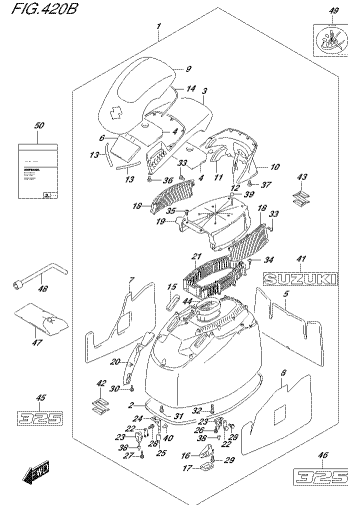


DF300H, ECU, 010, 420B
ENGINE COVER

FIG.420C

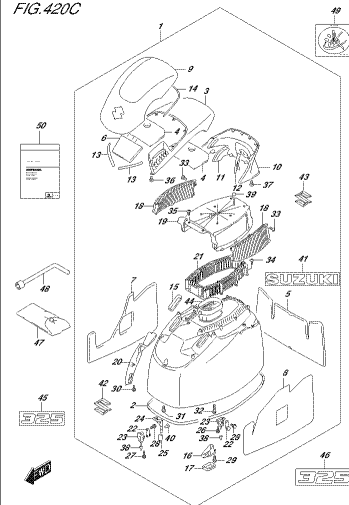


DF300H, ECU, 010, 420C
ENGINE COVER

FIG.430A

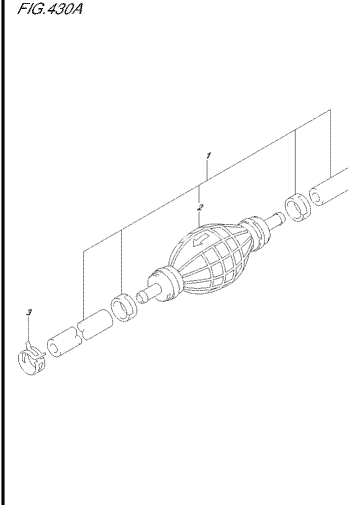


DF300H, ECU, 010, 430A
FUEL VALVE

FIG.520A

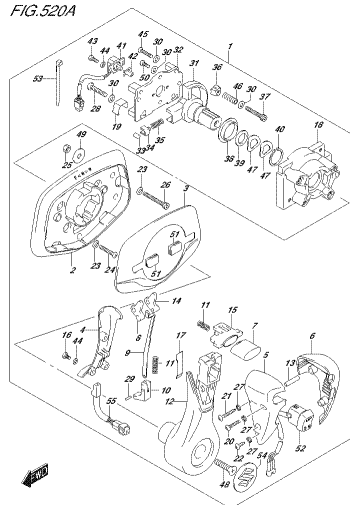


DF300H, ECU, 010, 520A
OIL PUMP ASSEMBLY

FIG.522A

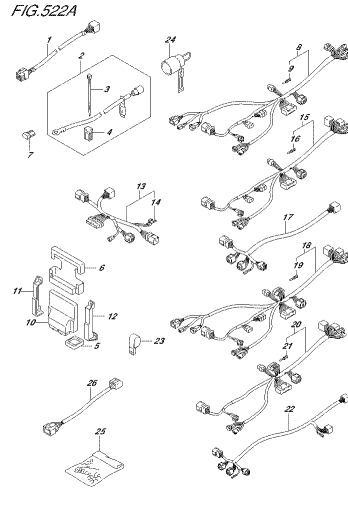


DF300H, ECU, 010, 522A
OIL PUMP ASSEMBLY (1)

FIG.523A

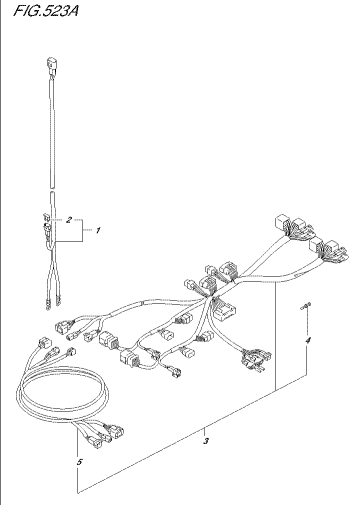


DF300H, ECU, 010, 523A
OIL PUMP ASSEMBLY (2)

FIG.530A

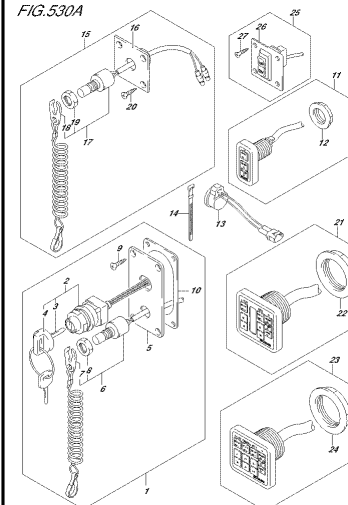


DF300H, ECU, 010, 530A
OIL PUMP ASSEMBLY

FIG.535A

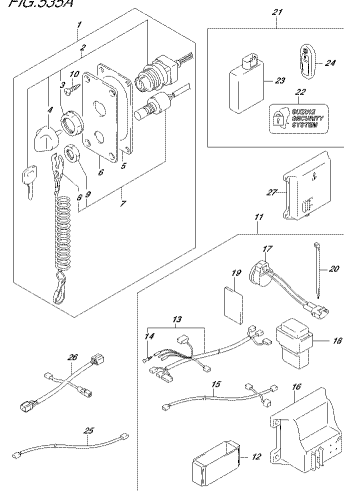


DFBNA_E01_010-0304
UNIT KIT LESS CABLE

FIG.540A

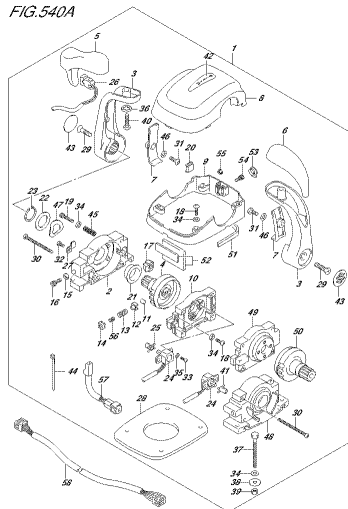


DFBNA_E01_010-0304
UNIT/BEADATE CONTROL ASSY DUAL

FIG.543A

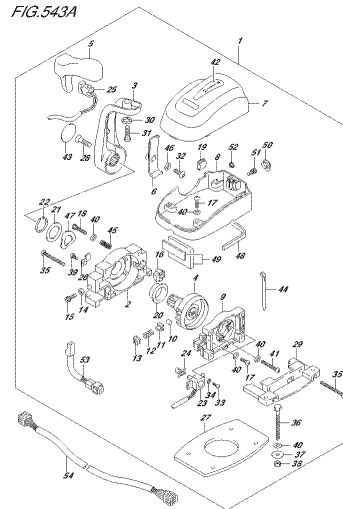


DFBNA_E01_010-0304
UNIT/BEADATE CONTROL ASSY SINGLE

FIG.585A

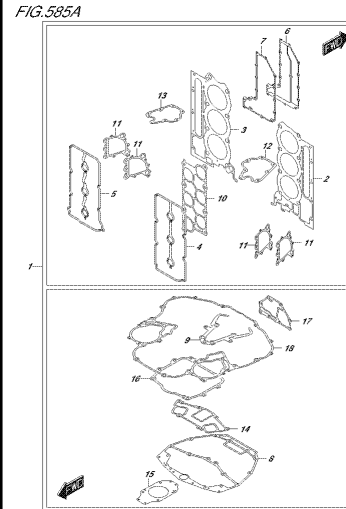


DFBNA_E01_010-0304
UNIT/GASSET SET

FIG.601A

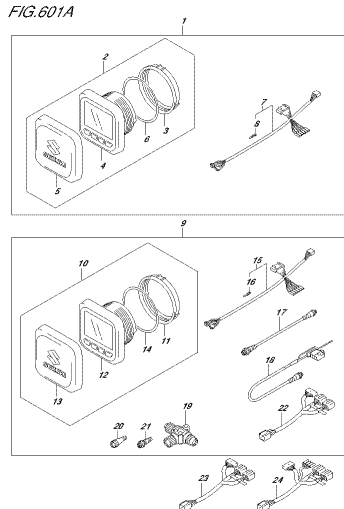

DFBNA_E01_010-0304
OPTICAL REFLECTIVITY GAUGE (1)

FIG.602A

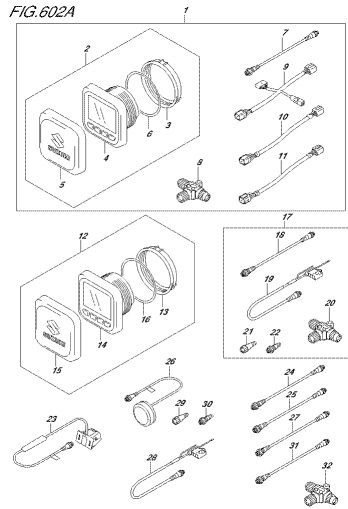

DFBNA_E01_010-0304
OPTICAL REFLECTIVITY GAUGE (2)

FIG.111A

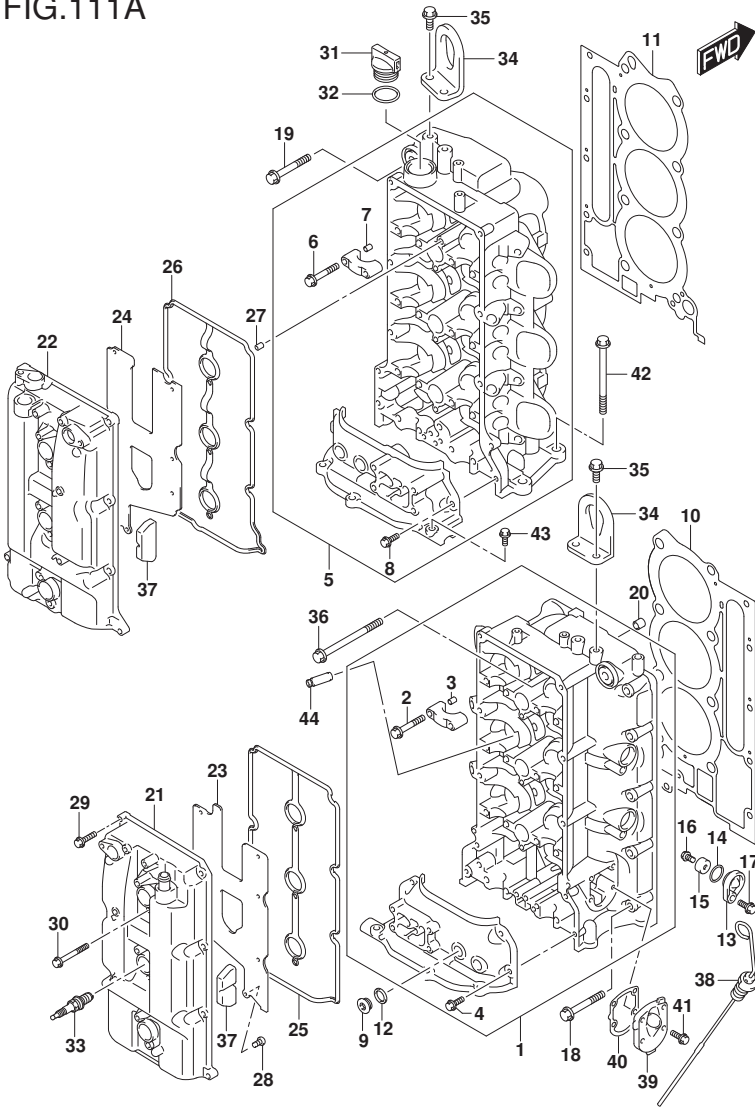


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11101-98L10	HEAD ASSY, CYLINDER STBD	1	
2	09103-06266	.BOLT (6X40)	16	
3	09206-08001	.PIN (8X11)	14	
4	01547-06207	.BOLT	4	
5	11103-98L10	HEAD ASSY, CYLINDER PORT	1	
6	09103-06266	.BOLT (6X40)	16	
7	09206-08001	.PIN (8X11)	14	
8	01547-06207	.BOLT	2	
9	11116-93J01	PLUG	4	
10	11141-98L00	GASKET, CYL HEAD STBD	1	
11	11142-98L00	GASKET, CYL HEAD PORT	1	
12	11216-98L10	GASKET	4	
13	11261-93J00	COVER, PROTECTION ANODE	4	
14	09280-22019	O RING (D:1.9,ID:21.8)	4	
15	55321-87J01	ANODE, PROTECTION	4	
16	09103-06281	BOLT (6X14)	4	
17	01550-0820C	BOLT	4	
18	01550-08607	BOLT	6	STBD
19	01550-08607	BOLT	5	PORT
20	09206-15001	PIN (12.4X15X17)	4	
21	11170-93J01	COVER, CYL HEAD STBD	1	
22	11180-98L00	COVER, CYLINDER HEAD PORT	1	
23	11173-93J00	PLATE, BREATHER STBD	1	
24	11183-93J00	PLATE, BREATHER PORT	1	
25	11179-93J00	GASKET, CYL HEAD COVER STBD	1	
26	11189-93J00	GASKET, CYL HEAD COVER PORT	1	
27	09206-08001	PIN (8X11)	1	
28	02142-0612A	SCREW	14	
29	01547-0625C	BOLT	16	
30	01547-06507	BOLT	6	
31	11382-93J00	CAP, OIL FILLER	1	
32	09280-26006	O RING (D:3.1,ID:26.4)	1	
33	09482-00642	SPARK PLUG (ILZKR7D8)	6	NGK
34	11291-98L00	HOOK, ENGINE	2	

FIG.111A

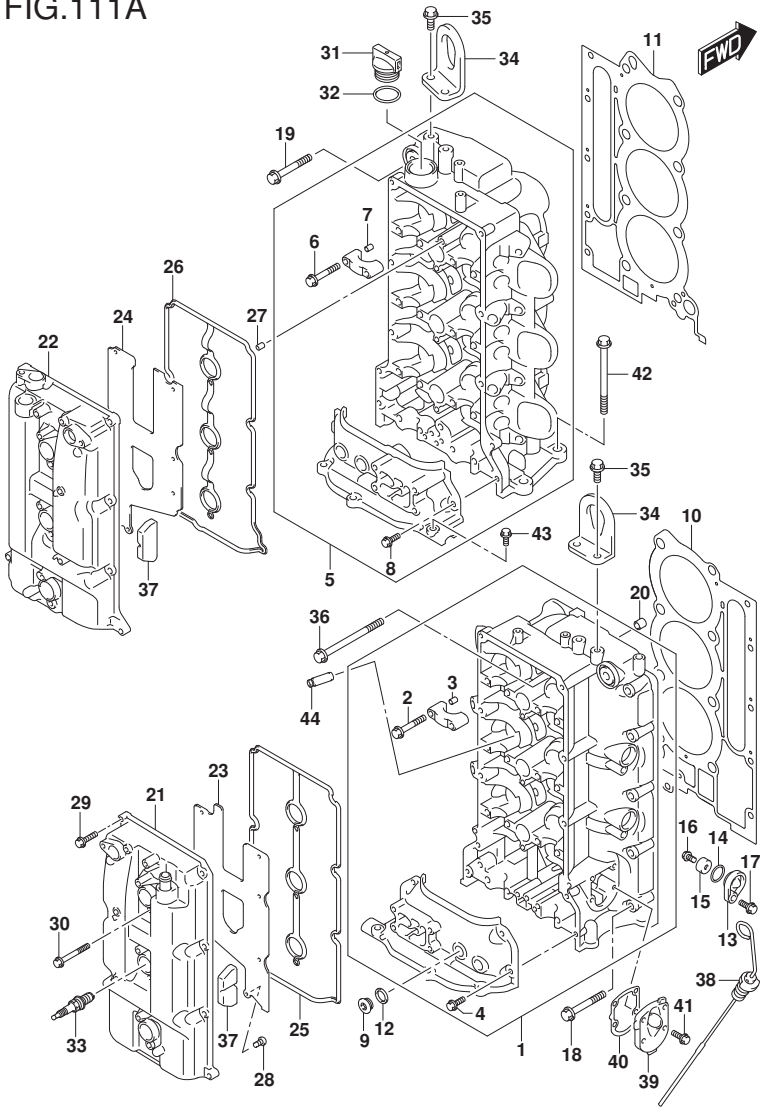


FIG.111A (1-B-3) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	01550-0820C	BOLT	4	
36	11119-98L00	BOLT, CYLINDER HEAD	16	
37	11186-15501	SEPARATOR, OIL BREATHER	2	
38	16910-98L00	GAUGE, OIL LEVEL	1	
39	16931-98L00	GUIDE, OIL LEVEL GAUGE	1	
40	16941-98L00	GASKET, OIL LEVEL GAUGE GUIDE	1	
41	01550-0625C	BOLT	4	
42	09116-10146	BOLT (10X195)	2	
43	01550-0830C	BOLT	6	
44	11115-98L00-001	GUIDE, VALVE (OS:0.5)	24	OPT

FIG.113A

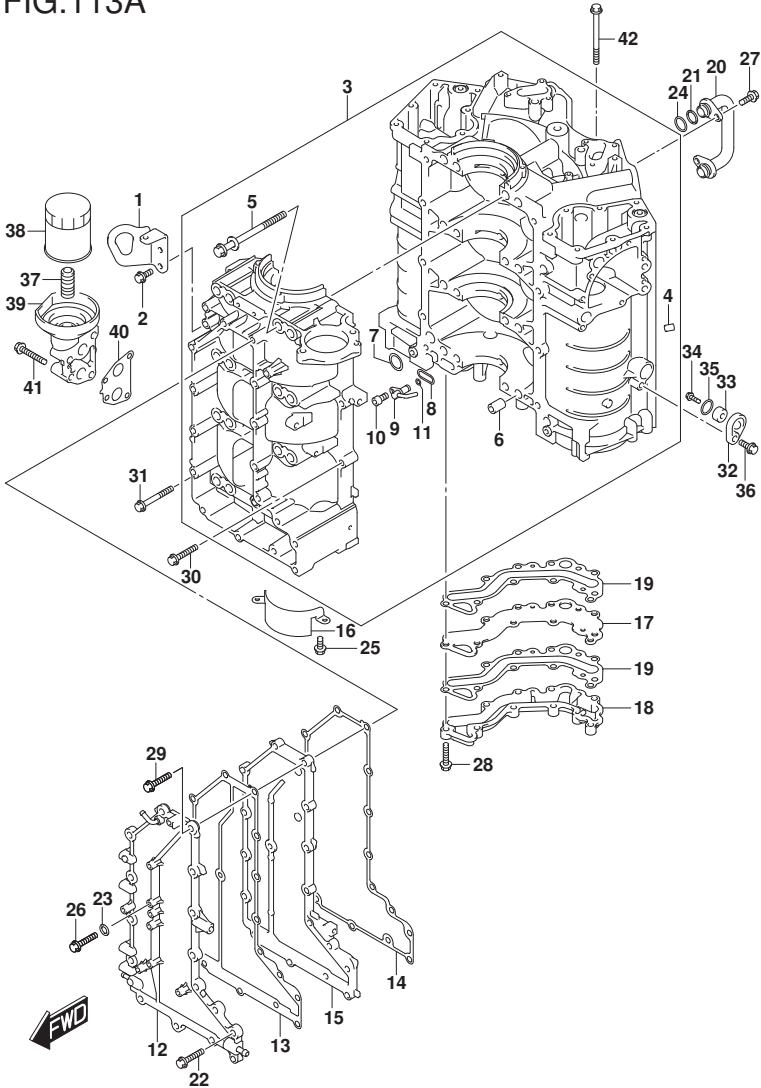


FIG.113A (1-B-4) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11293-98L00	HOOK, ENGINE FRONT	1	
2	01550-0820C	BOLT	2	
3	11301-98L00	BLOCK SET, CYLINDER	1	
4	11112-93J00	.PLUG, OIL VENTURI	2	
5	11117-98L00	.BOLT, CRANKCASE	16	
6	09206-14004	.PIN (14X11.4X23)	5	
7	11318-98L00	.GASKET, OIL GALLERY NO.1	1	
8	11319-98L00	.GASKET, OIL GALLERY NO.2	1	
9	11390-98L00	.JET, PISTON COOLING	6	
10	09106-06075	.BOLT (6X12)	6	
11	09280-05007	.O RING (D:1.2, ID:4.7)	6	
12	11330-98L00	COVER, CRANKCASE WTR JKT	1	
13	11332-98L00	GASKET, WTR JKT COVER	1	
14	11333-98L00	GASKET, CRANKCASE OIL COVER	1	
15	11334-98L00	COVER, OIL GALLERY CRANKCASE	1	
16	12247-98L00	PLATE, OIL GUARD	1	
17	16431-98L00	PLATE, OIL GALLERY	1	
18	16432-98L00	COVER, OIL GALLERY	1	
19	16433-98L00	GASKET, OIL GALLERY	2	
20	16480-98L00	PIPE, OIL GALLERY	1	
21	16485-98L00	RING, BACK UP OIL GALLERY	2	
22	09103-08379	BOLT (8X165)	1	
23	09168-06023	GASKET (5.8X13X1.2)	1	
24	09280-18004	O RING (D:2.4, ID:17.8)	2	
25	01550-0612A	BOLT	2	
26	01550-06357	BOLT	1	
27	01550-0820C	BOLT	2	
28	01550-0835A	BOLT	9	
29	01550-0840C	BOLT	13	
30	01550-08457	BOLT	7	
31	01550-08657	BOLT	1	
32	11261-93J00	COVER, PROTECTION ANODE	2	
33	55321-87J01	ANODE, PROTECTION	2	
34	09103-06281	BOLT (6X14)	2	

FIG.113A


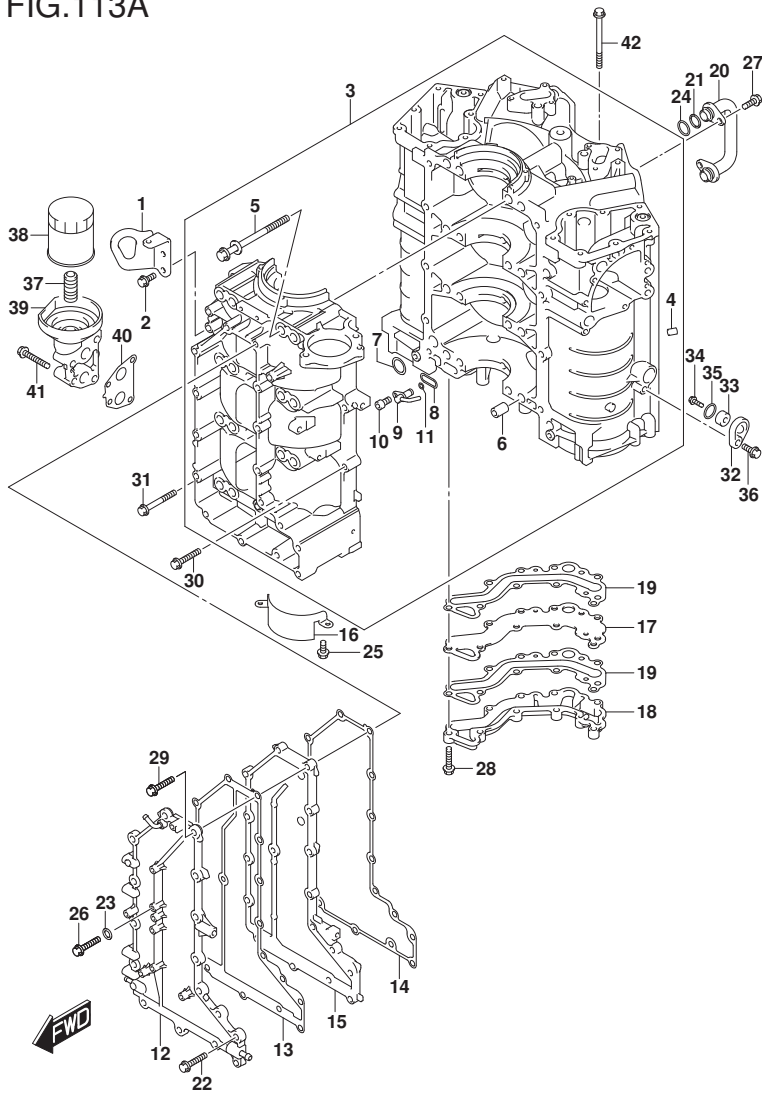


FIG.113A (1-B-5) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09280-22019	O RING (D:1.9, ID:21.8)	2	
36	01550-0820C	BOLT	2	
37	11241-86FA0	STAND, OIL FILTER	1	
38	16510-96J10	FILTER ASSY, OIL	1	
39	16531-98L00	CASE, OIL FILTER ADAPTER	1	
40	16539-98L10	GASKET, CASE	1	
41	01550-08507	BOLT	4	
42	09116-10134	BOLT (10X115)	1	

FIG.116A

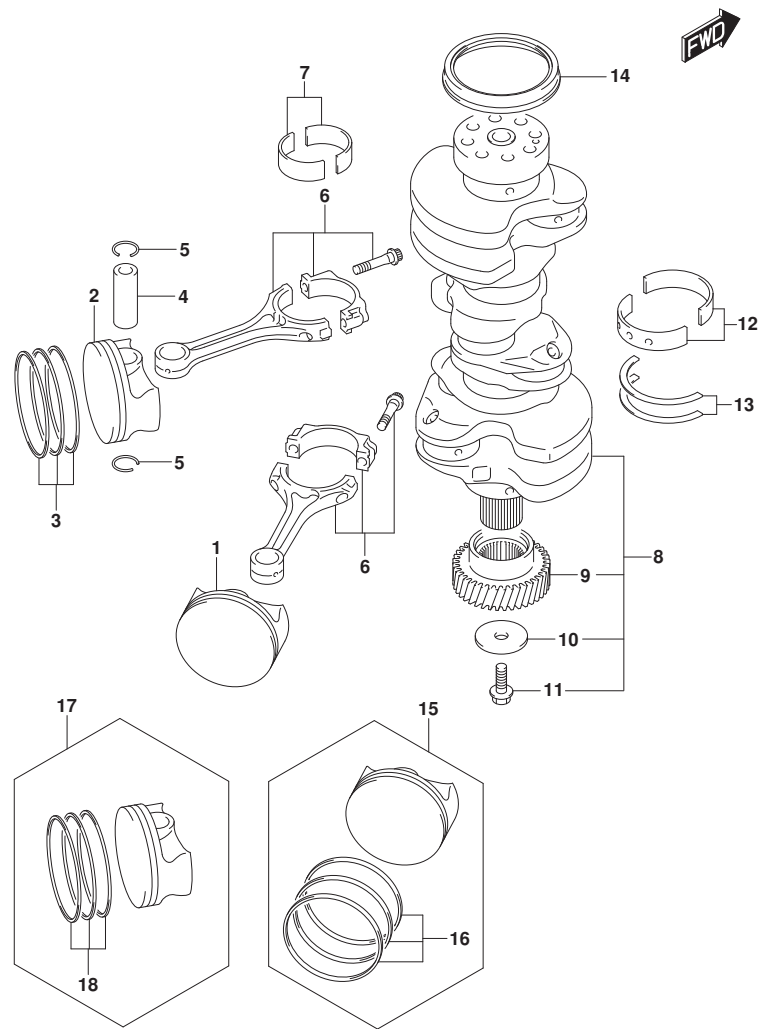

DF350A_E01_019_116A
CRANKSHAFT

FIG.116A (1-B-6) CRANKSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98L00-0B0	PISTON, STBD	3	
2	12121-98L00-0B0	PISTON, PORT	3	
3	12140-98J10	RING SET, PISTON	6	
4	12151-98L00	PIN, PISTON	6	
5	09381-22010	CIRCLIP	12	
6	12160-98L00	CONNROD ASSY	6	
7-1	12100-98810-0A0	BEARING SET, CONNROD	6	GREEN
7-2	12100-98810-025	BEARING SET, CONNROD (US:0.25)	6	OPT
8	12200-98L00	CRANKSHAFT ASSY	1	
9	12242-98J00	.GEAR, DRIVE (NT:32)	1	
10	09160-10104	.WASHER (10.5X50X3.2)	1	
11	01550-1025A	.BOLT	1	
12-1	12340-98L00-0A0	BEARING SET, CRANKSHAFT	4	BLACK
12-2	12340-98L00-0B0	BEARING SET, CRANKSHAFT	4	NON
12-3	12340-98L00-0C0	BEARING SET, CRANKSHAFT	4	YELLOW
12-4	12340-98L00-0D0	BEARING SET, CRANKSHAFT	4	BLUE
12-5	12340-98L00-0E0	BEARING SET, CRANKSHAFT	4	PINK
12-6	12300-98840-0AA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLACK
12-7	12300-98840-0BA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED
12-8	12300-98840-0CA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/YELLOW
12-9	12300-98840-0DA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLUE
12-10	12300-98840-0EA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/PINK
13-1	12300-98830	BEARING SET, CRANK THRUST	1	
13-2	12300-98830-012	BEARING SET, CRANK THRUST	1	OPT OS:0.125

FIG.116A


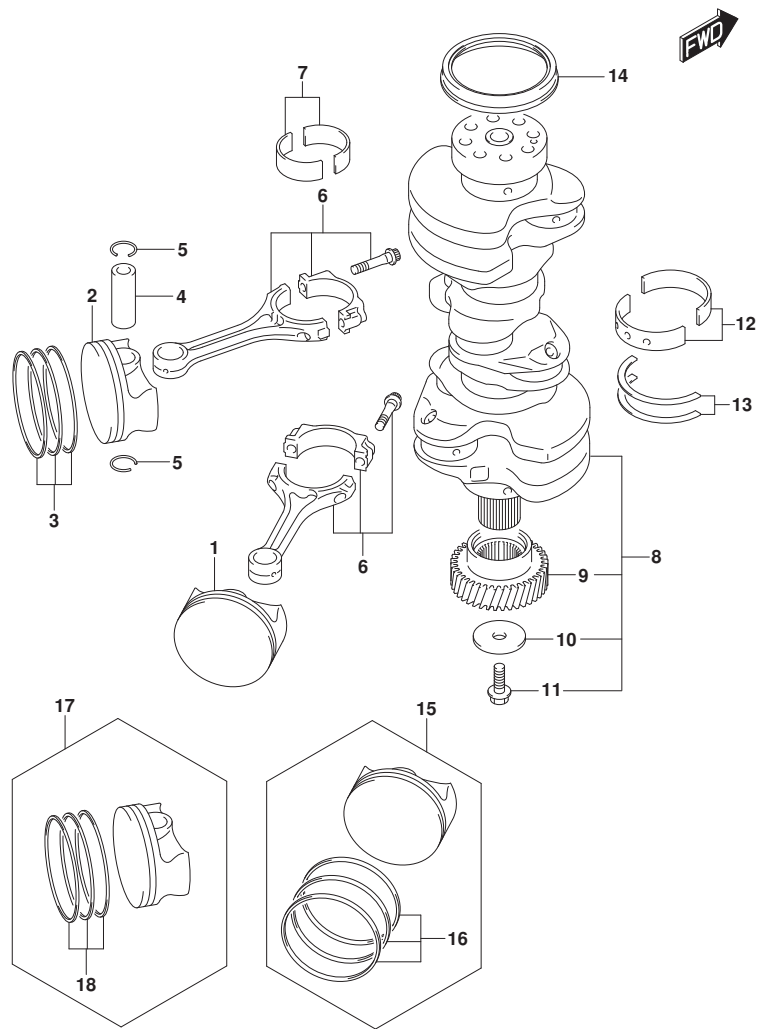


FIG.116A (1-B-7) CRANKSHAFT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
14	09283-91001	OIL SEAL (91X109X10)	1		
15	12101-98L20-050	PISTON SET, STBD (OS:0.50)	3	OPT	
16	12140-98J10-050	.RING SET, PISTON (OS:0.50)	3	OPT	
17	12102-98L20-050	PISTON SET, PORT (OS:0.50)	3	OPT	
18	12140-98J10-050	.RING SET, PISTON (OS:0.50)	3	OPT	

DF350A E01

FIG.116B

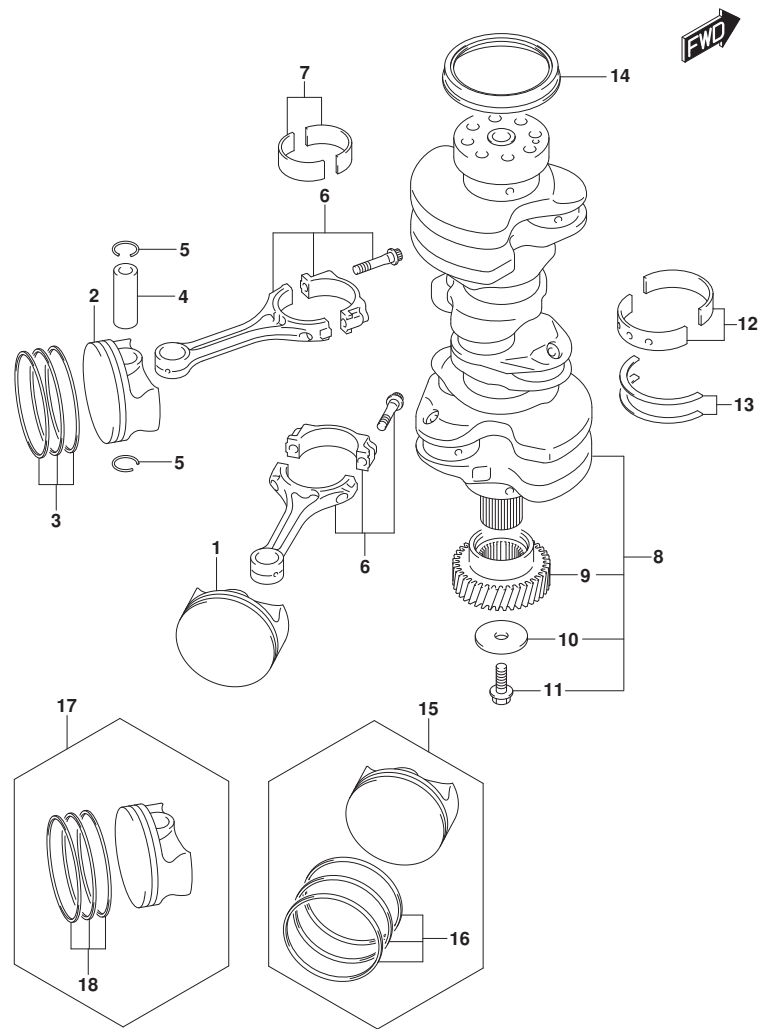

DF350A_E01_019_116B
CRANKSHAFT

FIG.116B (1-B-8) CRANKSHAFT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98L10-0B0	PISTON, STBD	3	
2	12121-98L10-0B0	PISTON, PORT	3	
3	12140-98J10	RING SET, PISTON	6	
4	12151-98L00	PIN, PISTON	6	
5	09381-22010	CIRCLIP	12	
6	12160-98L00	CONNROD ASSY	6	
7-1	12100-98810-0A0	BEARING SET, CONNROD	6	GREEN
7-2	12100-98810-025	BEARING SET, CONNROD (US:0.25)	6	OPT
8	12200-98L00	CRANKSHAFT ASSY	1	
9	12242-98J00	.GEAR, DRIVE (NT:32)	1	
10	09160-10104	.WASHER (10.5X50X3.2)	1	
11	01550-1025A	.BOLT	1	
12-1	12340-98L00-0A0	BEARING SET, CRANKSHAFT	4	BLACK
12-2	12340-98L00-0B0	BEARING SET, CRANKSHAFT	4	NON
12-3	12340-98L00-0C0	BEARING SET, CRANKSHAFT	4	YELLOW
12-4	12340-98L00-0D0	BEARING SET, CRANKSHAFT	4	BLUE
12-5	12340-98L00-0E0	BEARING SET, CRANKSHAFT	4	PINK
12-6	12300-98840-0AA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLACK
12-7	12300-98840-0BA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED
12-8	12300-98840-0CA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/YELLOW
12-9	12300-98840-0DA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/BLUE
12-10	12300-98840-0EA	BEARING SET, CRANKSHAFT	4	OPT US:0.25 RED/PINK
13-1	12300-98830	BEARING SET, CRANK THRUST	1	
13-2	12300-98830-012	BEARING SET, CRANK THRUST	1	OPT OS:0.125

FIG.116B

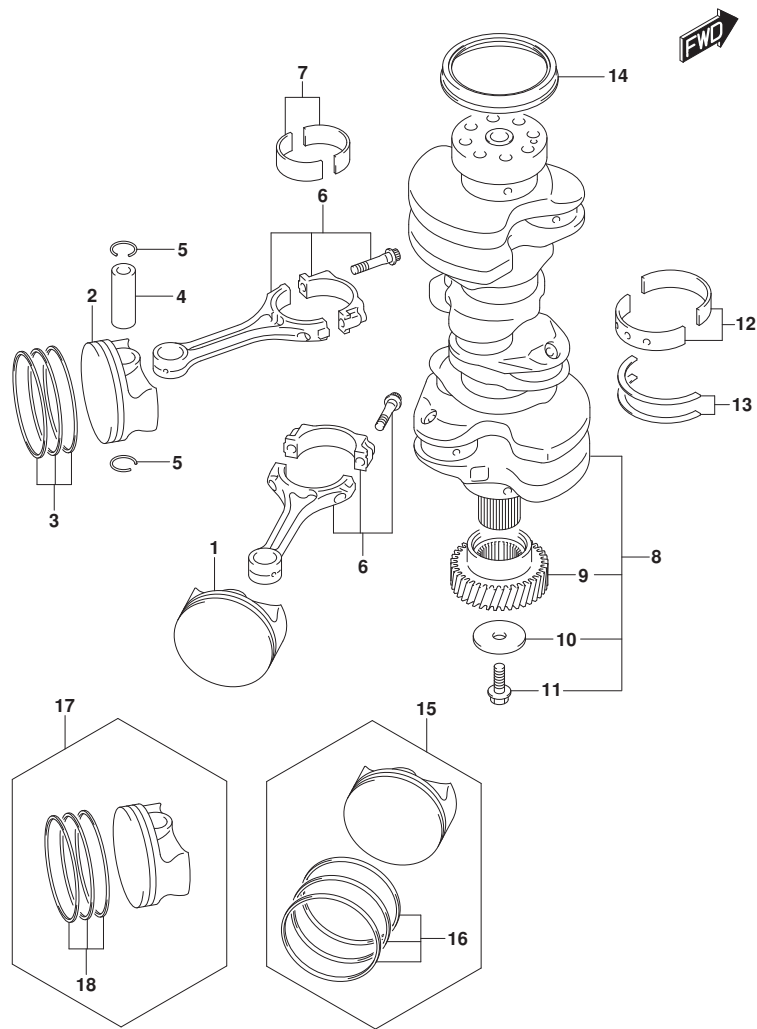


FIG.116B (1-B-9) CRANKSHAFT (DF325A)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
14	09283-91001	OIL SEAL (91X109X10)	1		
15	12101-98L30-050	PISTON SET, STBD (OS:0.50)	3	OPT	
16	12140-98J10-050	.RING SET, PISTON (OS:0.50)	3	OPT	
17	12102-98L30-050	PISTON SET, PORT (OS:0.50)	3	OPT	
18	12140-98J10-050	.RING SET, PISTON (OS:0.50)	3	OPT	

DF325A E01
DF325A E40

FIG.119A

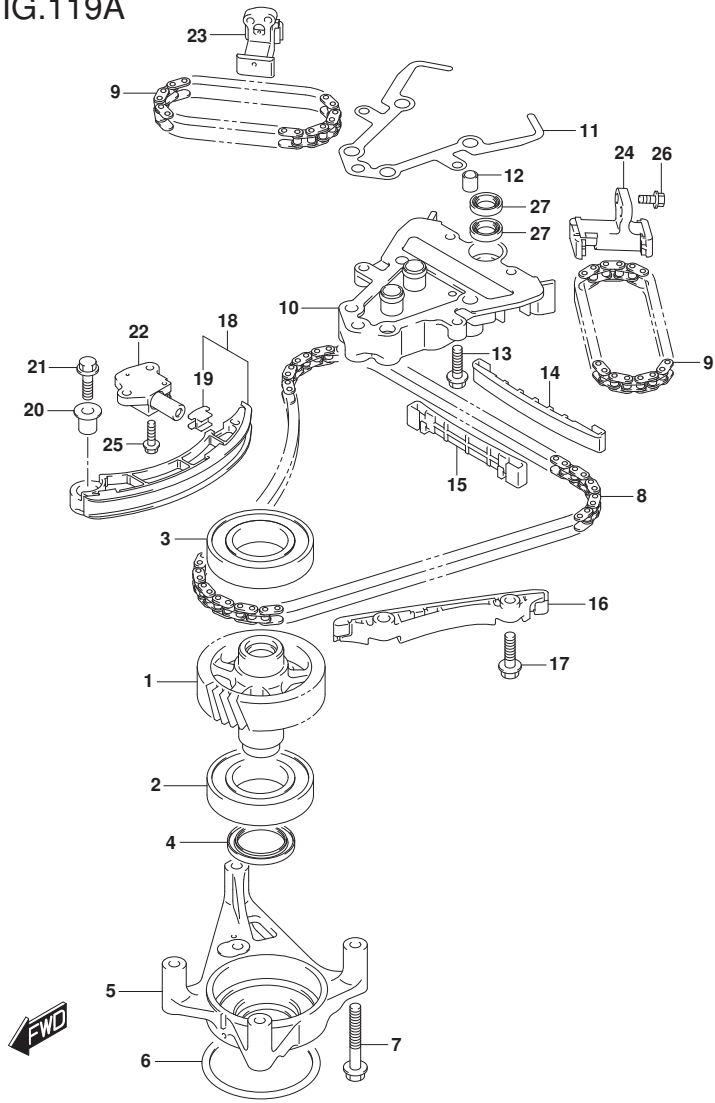


FIG.119A (1-B-10) TIMING CHAIN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12730-98J02	GEAR, DRIVEN (NT:40)	1	
2	09262-40018	BEARING (40X80X18)	1	LOWER
3	09262-40017	BEARING (40X80X18)	1	UPPER
4	09283-32044	OIL SEAL (32X47X6)	1	
5	12734-98L00	HOLDER, DRIVEN GEAR	1	
6	09280-70012	O RING (D:5.7,ID:69.6)	1	
7	01550-0855A	BOLT	4	
8	12761-98L00	CHAIN, TIMING 1ST	1	
9	12762-93J00	CHAIN, TIMING 2ND	2	
10	12770-98L00	BASE, TIMING CHAIN GUIDE NO.1	1	
11	12778-98L00	GASKET, GUIDE BASE	1	
12	04211-13149	PIN	2	
13	01550-0830A	BOLT	2	
14	12771-93J00	SHOE, TIMING CHAIN UPPER	1	
15	12775-93J00	SHOE, TIMING CHAIN LOWER	1	
16	12772-98L00	GUIDE, TIMING CHAIN NO.2	1	
17	01550-0830A	BOLT	2	
18	12810-93J00	TENSIONER ASSY, TIMING CHAIN	1	
19	12813-73G00	.PAD, TIMING CHAIN TENSIONER	1	
20	12812-90J00	SPACER, TIMING CHAIN TENSIONER	1	
21	01550-0830A	BOLT	1	
22	12831-93J01	ADJUSTER ASSY, TENSIONER	1	
23	12832-93J00	TENSIONER ASSY, STBD	1	
24	12833-93J00	TENSIONER ASSY, PORT	1	
25	01550-0620A	BOLT	2	
26	01550-0620A	BOLT	4	
27	09282-17011	SEAL (16.5X28X6)	2	

FIG.121A


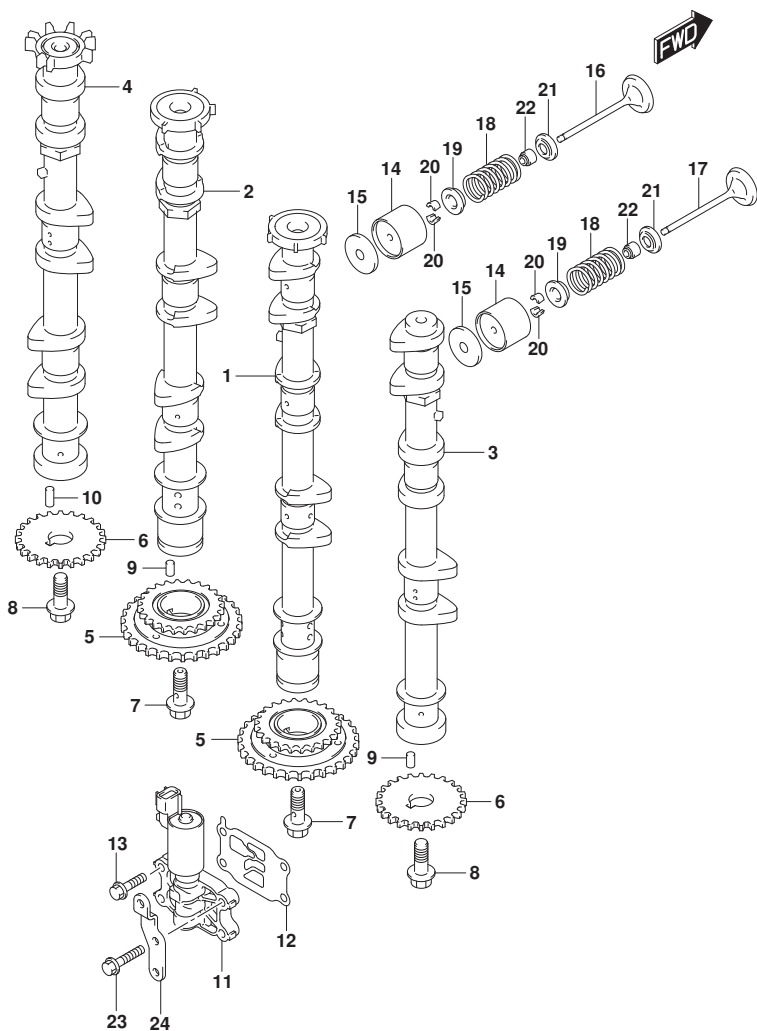


FIG.121A (1-B-11) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98L00	CAMSHAFT, INTAKE STBD	1	
2	12705-98L00	CAMSHAFT, INTAKE PORT	1	
3	12721-98L30	CAMSHAFT, EXH STBD	1	
4	12729-98L30	CAMSHAFT, EXH PORT	1	
5	12740-98L00	SPROCKET ASSY, CAM TIMING (NT:22/32)	2	
6	12748-93J00	SPROCKET, EXH CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT, INTAKE CAMSHAFT	2	
8	12749-93J00	BOLT, CAMSHAFT EXHAUST	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE, OIL CONTROL	2	
12	16555-93J01	GASKET, VALVE	2	
13	01550-0625C	BOLT	6	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM, TAPPET (T:2.175)	AR	
15-2	12892-93J00-220	SHIM, TAPPET (T:2.200)	AR	
15-3	12892-93J00-223	SHIM, TAPPET (T:2.225)	AR	
15-4	12892-93J00-225	SHIM, TAPPET (T:2.250)	AR	
15-5	12892-93J00-228	SHIM, TAPPET (T:2.275)	AR	
15-6	12892-93J00-230	SHIM, TAPPET (T:2.300)	AR	
15-7	12892-93J00-233	SHIM, TAPPET (T:2.325)	AR	
15-8	12892-93J00-235	SHIM, TAPPET (T:2.350)	AR	
15-9	12892-93J00-238	SHIM, TAPPET (T:2.375)	AR	
15-10	12892-93J00-240	SHIM, TAPPET (T:2.400)	AR	
15-11	12892-93J00-243	SHIM, TAPPET (T:2.425)	AR	
15-12	12892-93J00-245	SHIM, TAPPET (T:2.450)	AR	
15-13	12892-93J00-248	SHIM, TAPPET (T:2.475)	AR	
15-14	12892-93J00-250	SHIM, TAPPET (T:2.500)	AR	
15-15	12892-93J00-253	SHIM, TAPPET (T:2.525)	AR	
15-16	12892-93J00-255	SHIM, TAPPET (T:2.550)	AR	
15-17	12892-93J00-258	SHIM, TAPPET (T:2.575)	AR	
15-18	12892-93J00-260	SHIM, TAPPET (T:2.600)	AR	
15-19	12892-93J00-263	SHIM, TAPPET (T:2.625)	AR	

FIG.121A

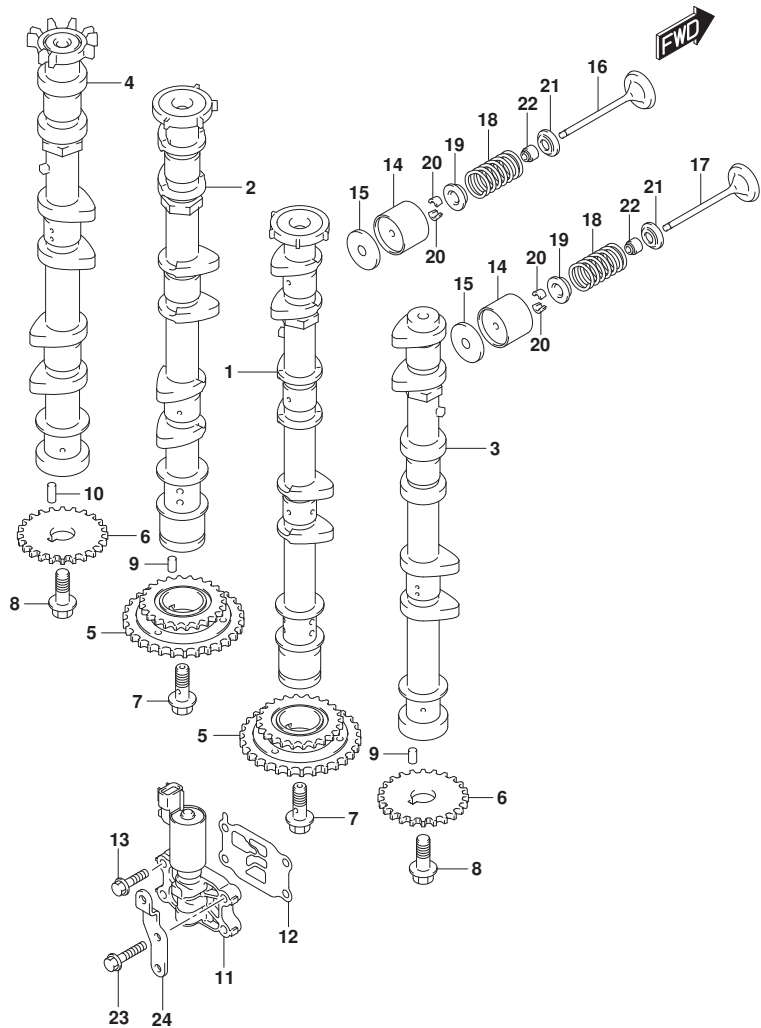

DF350A_E01_019_121A
CAMSHAFT

FIG.121A (1-B-12) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-20	12892-93J00-265	SHIM, TAPPET (T:2.650)	AR	
15-21	12892-93J00-268	SHIM, TAPPET (T:2.675)	AR	
15-22	12892-93J00-270	SHIM, TAPPET (T:2.700)	AR	
15-23	12892-93J00-273	SHIM, TAPPET (T:2.725)	AR	
15-24	12892-93J00-275	SHIM, TAPPET (T:2.750)	AR	
15-25	12892-93J00-278	SHIM, TAPPET (T:2.775)	AR	
15-26	12892-93J00-280	SHIM, TAPPET (T:2.800)	AR	
15-27	12892-93J00-283	SHIM, TAPPET (T:2.825)	AR	
15-28	12892-93J00-285	SHIM, TAPPET (T:2.850)	AR	
15-29	12892-93J00-288	SHIM, TAPPET (T:2.875)	AR	
15-30	12892-93J00-290	SHIM, TAPPET (T:2.900)	AR	
15-31	12892-93J00-293	SHIM, TAPPET (T:2.925)	AR	
15-32	12892-93J00-295	SHIM, TAPPET (T:2.950)	AR	
15-33	12892-93J00-298	SHIM, TAPPET (T:2.975)	AR	
15-34	12892-93J00-300	SHIM, TAPPET (T:3.000)	AR	
16	12911-98L00	VALVE, INTAKE	12	
17	12915-98L00	VALVE, EXHAUST	12	
18	12921-98L00	SPRING, VALVE	24	
19	12931-78G00	RETAINER, VALVE SPRING	24	
20	12932-24400	COTTER, VALVE	48	
21	12933-69G10	SEAT, VALVE SPRING	24	
22	09289-05012	OIL SEAL (5.5X11.5X9.3)	24	
23	01550-0630C	BOLT	2	
24	36617-98L40	BRACKET, HARNESS	1	

DF350A_E01_019

FIG.122A

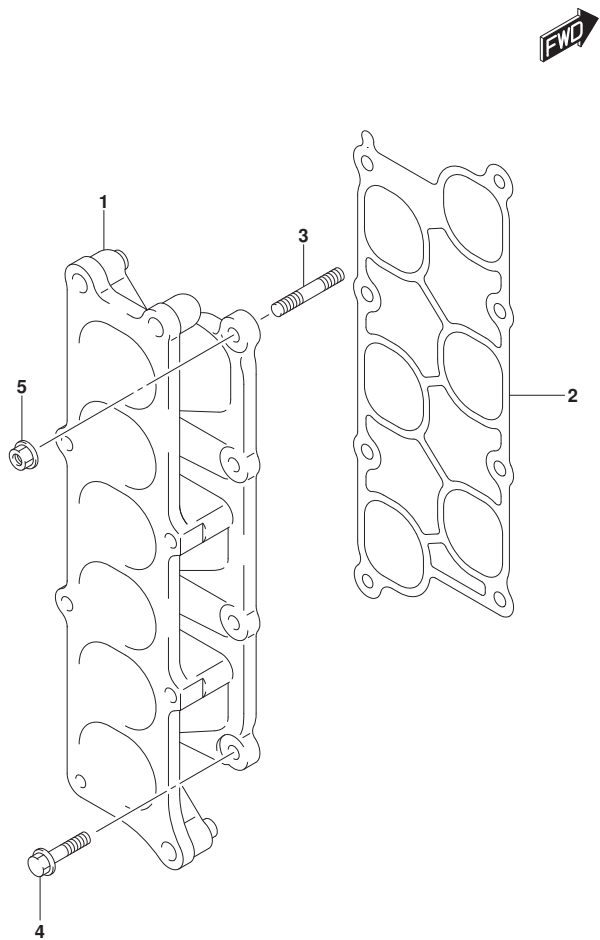


FIG.122A (1-B-13) INTAKE MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13111-98L00	MANIFOLD, INTAKE	1	
2	13119-98L00	GASKET, INTAKE MANIFOLD	1	
3	09108-08143	STUD BOLT	2	
4	09116-08175	BOLT (8X35)	6	
5	08316-1008C	NUT	2	

FIG.136A

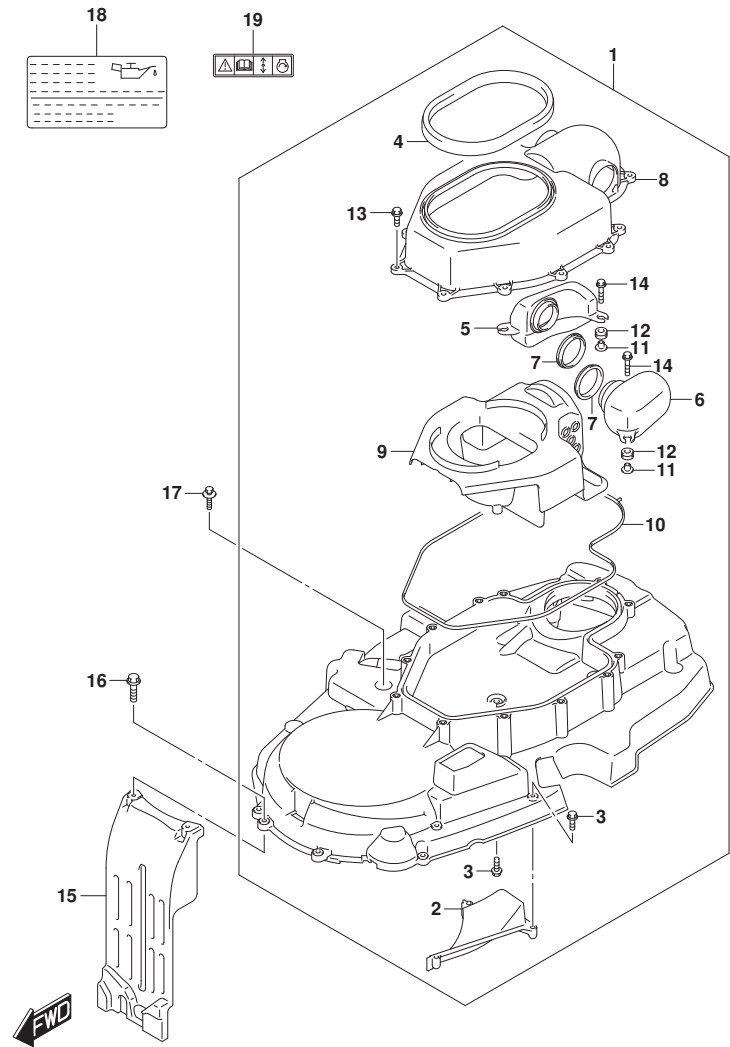


FIG.136A (1-B-14) RING GEAR COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11510-98L01	COVER, RING GEAR	1	
2	11514-98J00	.PLATE, RING GEAR COVER	1	
3	11517-98J00	.SCREW	6	
4	11531-98L00	.SEAL, SILENCER UPPER	1	
5	13761-98L00	.RESONATOR, STBD	1	
6	13762-98L00	.RESONATOR, PORT	1	
7	13766-98L00	.GROMMET, RESONATOR	2	
8	13811-98L00	.SILENCER, UPPER COVER	1	
9	13812-98L00	.SILENCER, INNER	1	
10	13851-98L00	.SEAL, SILENCER	1	
11	09169-06062	.WASHER	4	
12	09320-09016	.CUSHION	4	
13	01550-0620C	.BOLT	8	
14	01550-0630C	.BOLT	4	
15	11522-98L01	COVER, RING GEAR FRONT	1	
16	01550-0625C	BOLT	4	
17	09116-06215	BOLT (6X30)	4	
18	61494-93J00	LABEL, OIL & CLEARANCE	1	
19	69711-93E10	LABEL, S.I.G.P.	1	

FIG.140A

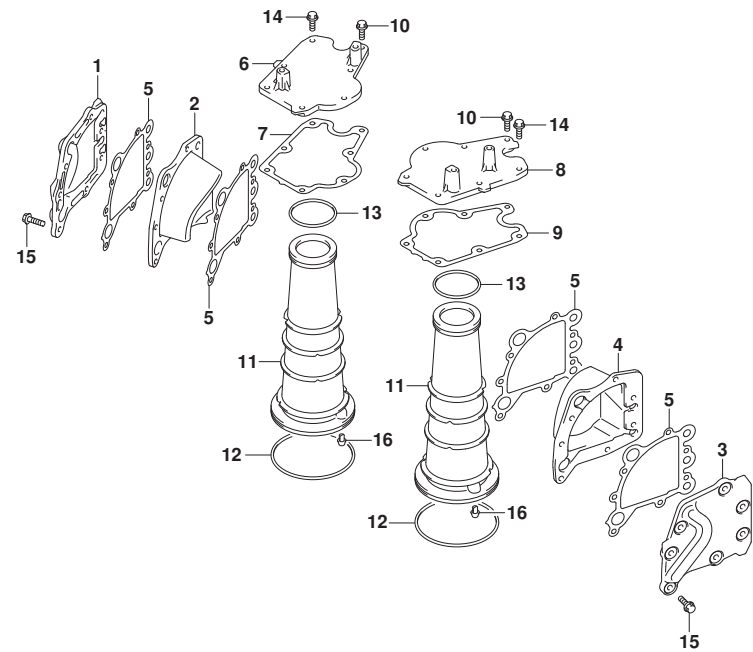


FIG.140A (1-B-15) EXHAUST COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	14141-98L00	COVER, EXHAUST STBD	1	
2	14161-98L00	COVER, EXHAUST INNER STBD	1	
3	14142-98L00	COVER, EXHAUST PORT	1	
4	14162-98L00	COVER, EXHAUST INNER PORT	1	
5	14151-98L00	GASKET, EXHAUST COVER	4	
6	14171-98L00	COVER, EXHAUST UPPER STBD	1	
7	14181-98L00	GASKET, EXH UPPER COVER STBD	1	
8	14172-98L00	COVER, EXHAUST UPPER PORT	1	
9	14182-98L00	GASKET, EXH UPPER COVER PORT	1	
10	09116-06228	BOLT (6X20)	2	
11	14111-98L00	PIPE, EXHAUST INNER	2	
12	09280-00049	O RING (D:3.5,ID:99.6)	2	
13	09280-55001	O RING (D:3.5,ID:54.4)	2	
14	01550-0620C	BOLT	12	
15	01550-0625C	BOLT	14	
16	14112-98L00	CUSHION, EXH PIPE	4	



FIG.144A

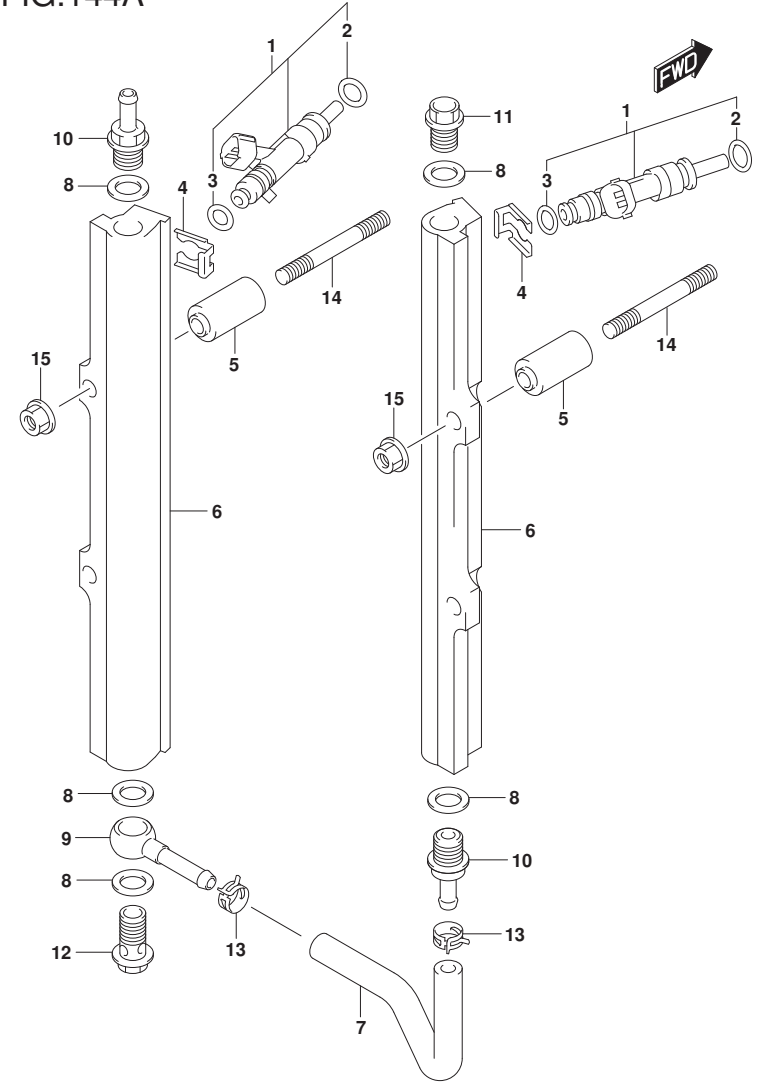


FIG.144A (1-C-2) FUEL INJECTOR (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-98L10	INJECTOR ASSY, FUEL	12	
2	15716-82M00	.O RING, LOWER	12	
3	15717-82M00	.O RING, UPPER	12	
4	15715-98L00	CLIP, INJECTOR	12	
5	15735-98L00	INSULATOR, DELIVERY PIPE	4	
6	15751-98L00	PIPE, DELIVERY	2	
7	15756-98L00	HOSE, FUEL (DLVY TO DLVY)	1	
8	15762-93J00	GASKET, DELIVERY PIPE	5	
9	15830-77EA0	UNION, DELIVERY PIPE	1	
10	15831-93J00	UNION, DELIVERY PIPE	2	
11	09247-14041	PLUG (14X14)	1	
12	09360-14009	UNION	1	
13	09401-11425	CLIP	2	
14	09108-08189	STUD BOLT	4	
15	08316-1008C	NUT	4	

DF350A E01
DF325A E01

FIG.144B


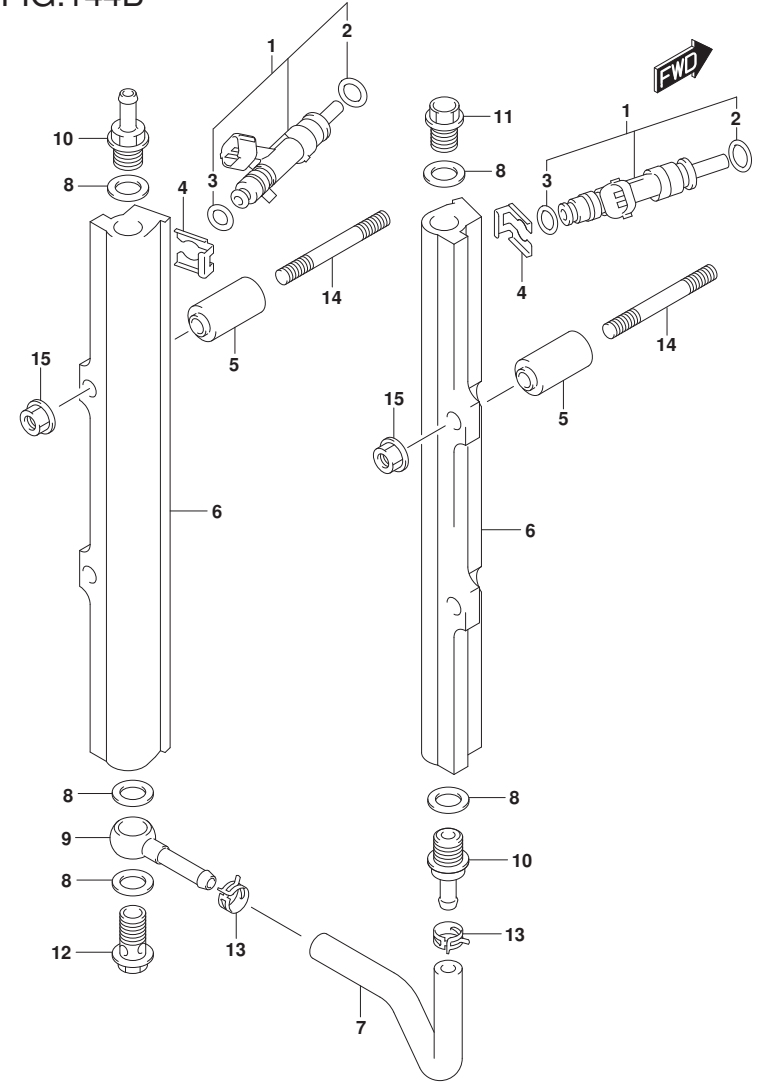


FIG.144B (1-C-3) FUEL INJECTOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15710-98L10	INJECTOR ASSY, FUEL	12	
2	15716-82M00	.O RING, LOWER	12	
3	15717-82M00	.O RING, UPPER	12	
4	15715-98L00	CLIP, INJECTOR	12	
5	15735-98L00	INSULATOR, DELIVERY PIPE	4	
6	15751-98L00	PIPE, DELIVERY	2	
7	15756-98L00	HOSE, FUEL (DLVY TO DLVY)	1	
8	15762-93J10	GASKET, DELIVERY PIPE	5	
9	15832-93J00	UNION, DELIVERY PIPE	1	
10	15831-93J00	UNION, DELIVERY PIPE	2	
11	09247-14042	PLUG (14X14)	1	
12	09360-14014	UNION	1	
13	09401-11425	CLIP	2	
14	09108-08189	STUD BOLT	4	
15	08316-1008C	NUT	4	

DF325A E40

FIG.147A

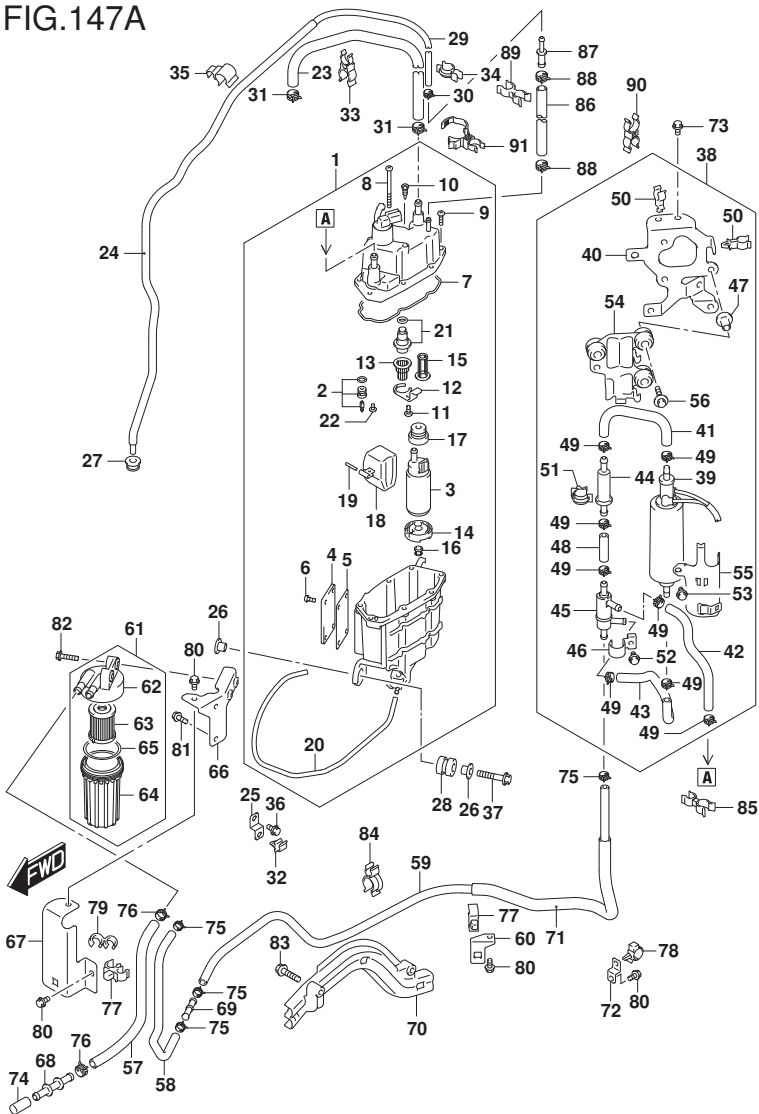


DF350A_E01_019_147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147A (1-C-4) FUEL PUMP/FUEL VAPOR SEPARATOR (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L20	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY, NEEDLE	1	
3	15200-98L00	.PUMP ASSY, FUEL (H)	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J00	.GASKET, SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW, DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L00	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L00	.BUSH, FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE, DRAIN	1	
21	15760-98L00	.REGULATOR, FUEL PRESSURE	1	
22	02142-0408B	.SCREW	1	
23	15681-98L00	HOSE, FUEL (V/S TO DLVY)	1	
24	18498-98L21	PROTECTOR, EVAP HOSE	1	
25	36617-93J10	BRACKET, HOSE CLAMP	1	
26	09169-08042	WASHER	6	
27	09320-08086	CUSHION	1	
28	09320-12072	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP	1	
34	09408-00142	CLIP	1	

DF350A_E01_019

FIG.147A

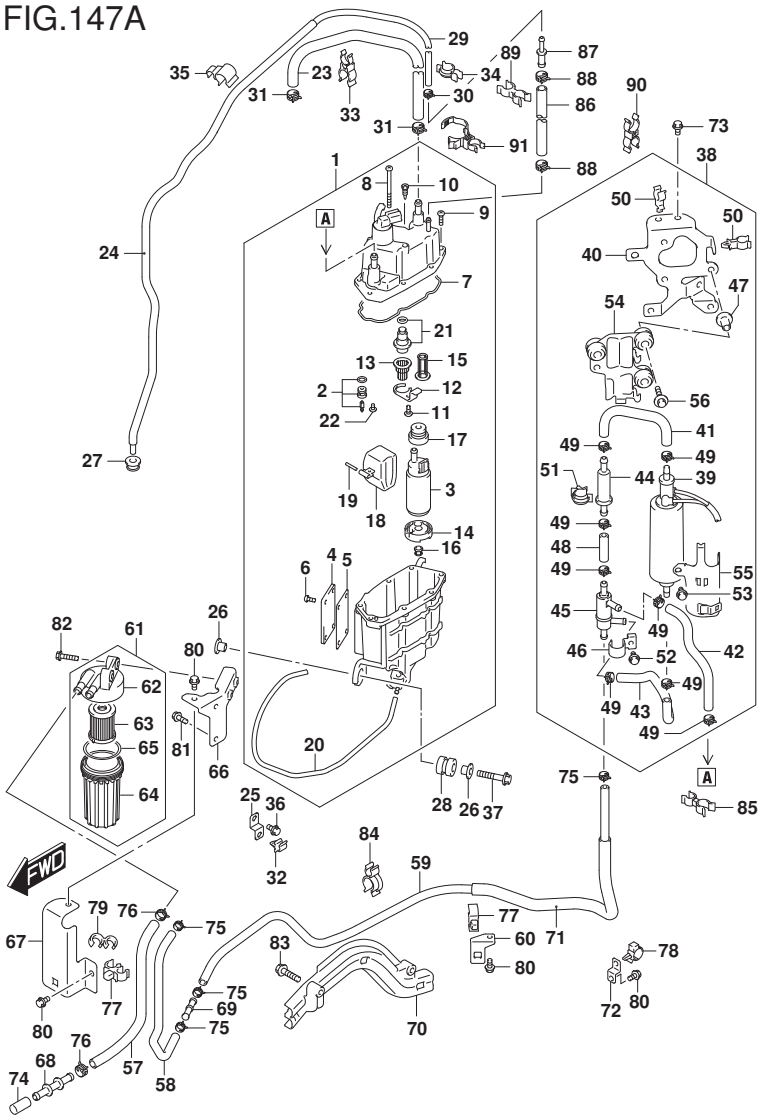

DF350A_E01_019_147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147A (1-C-5) FUEL PUMP/FUEL VAPOR SEPARATOR (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	.CLAMP	3	
36	01550-0612C	.BOLT	1	
37	01550-0840C	.BOLT	3	
38	15100-98L10	PUMP SET, FUEL (L)	1	
39	15100-98J00	.PUMP ASSY, FUEL	1	
40	15116-98L10	.BRACKET, FUEL PUMP (L)	1	
41	15632-98L10	.HOSE, FUEL (PUMP TO FILTER)	1	
42	15635-98L01	.HOSE, FUEL (VALVE TO VST)	1	
43	15637-98L10	.HOSE, FUEL (VALVE TO PUMP)	1	
44	15643-98L00	.FILTER, FUEL (L)	1	
45	15645-93J10	.VALVE, CHECK	1	
46	15674-98L00	.CLIP, CHECK VALVE	1	
47	09169-06093	.WASHER	3	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	8	
50	09403-13310	.CLAMP	2	
51	09403-16307	.CLAMP	1	
52	01550-0612C	.BOLT	1	
53	01570-06127	.BOLT	1	
54	15114-93J00	.BRACKET, FUEL PUMP NO.1	1	
55	15115-93J00	.BRACKET, FUEL PUMP NO.2	1	
56	09116-06524	.BOLT (M6)	3	
57	15191-98L10	HOSE, FUEL (CONN TO FILTER)	1	
58	15192-98L00	HOSE, FUEL (FILTER TO 2WAY)	1	
59	15193-98L00	HOSE, FUEL (2WAY TO 2WAY)	1	
60	15198-98L00	BRACKET, FUEL HOSE	1	
61	15410-98L00	FILTER, FUEL (L)	1	
62	15411-93J10	.CAP, FUEL FILTER	1	
63	15412-93J10	.FILTER ASSY, FUEL	1	
64	15413-98L00	.CASE ASSY, FUEL FILTER	1	
65	15415-93J10	.SEAL, FUEL FILTER NO.1	1	
66	15421-98L00	BRACKET, FUEL FILTER (L)	1	
67	15423-98L00	GUARD, FUEL HOSE	1	
68	15830-98J01	JOINT, FUEL HOSE	1	
69	15831-96J00	UNION, 2 WAY FUEL HOSE	1	
70	15852-98L00	GUIDE, FUEL HOSE	1	

FIG.147A

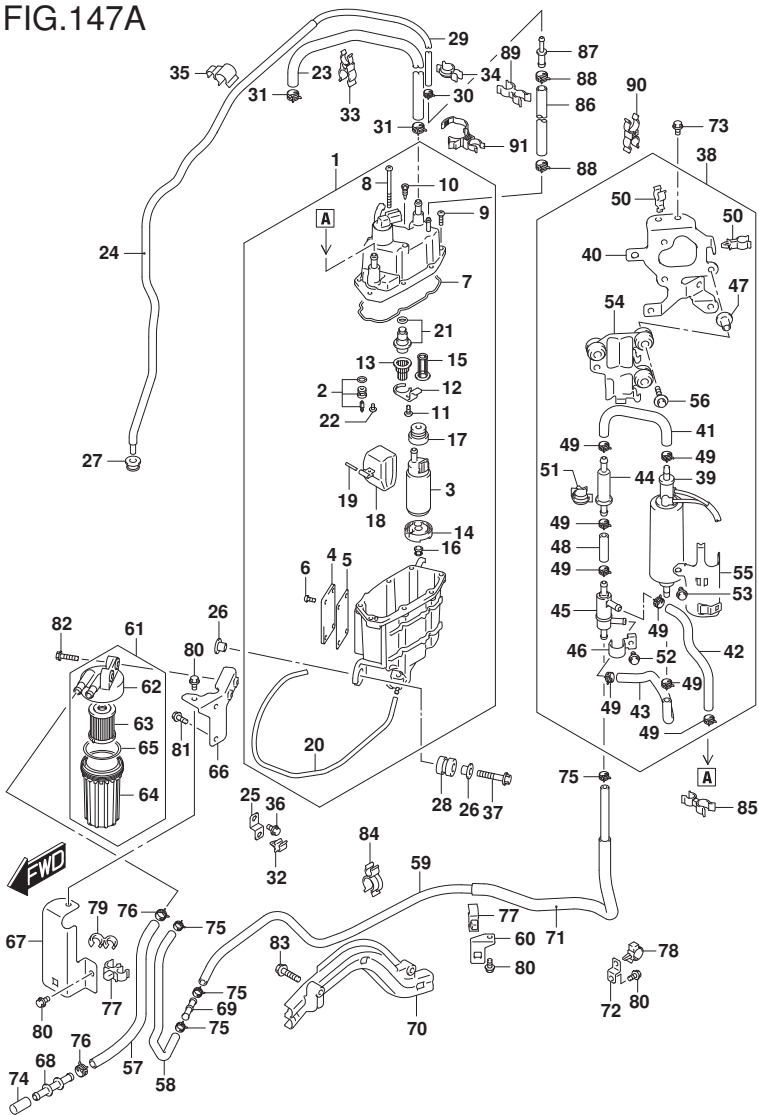


FIG.147A (1-C-6) FUEL PUMP/FUEL VAPOR SEPARATOR (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
71	18498-99E11	PROTECTOR, FUEL HOSE (610)	1	L:610->450
72	36617-93J10	BRACKET, FUEL HOSE	1	
73	09103-06267	BOLT (6X18)	2	
74	09251-09005	CAP	1	
75	09401-11423	CLIP	4	
76	09401-13423	CLIP	2	
77	09403-13308	CLAMP	2	
78	09403-17403	CLAMP	1	
79	09408-00121	CLAMP	1	
80	01550-0612C	BOLT	4	
81	01550-0616C	BOLT	2	
82	01550-0625C	BOLT	2	
83	01550-0630C	BOLT	2	
84	09408-00142	CLIP	1	
85	09408-00054	CLAMP	1	
86	09343-70503-600	HOSE (7X12X600)	1	L:600->240
87	15695-98L00	UNION, EVAPORATION	1	
88	09401-11423	CLIP	2	
89	09408-00050	CLIP	1	
90	09408-00173	CLAMP	2	
91	09408-00337	CLAMP	1	

DF350A E01
DF325A E01

FIG.147B


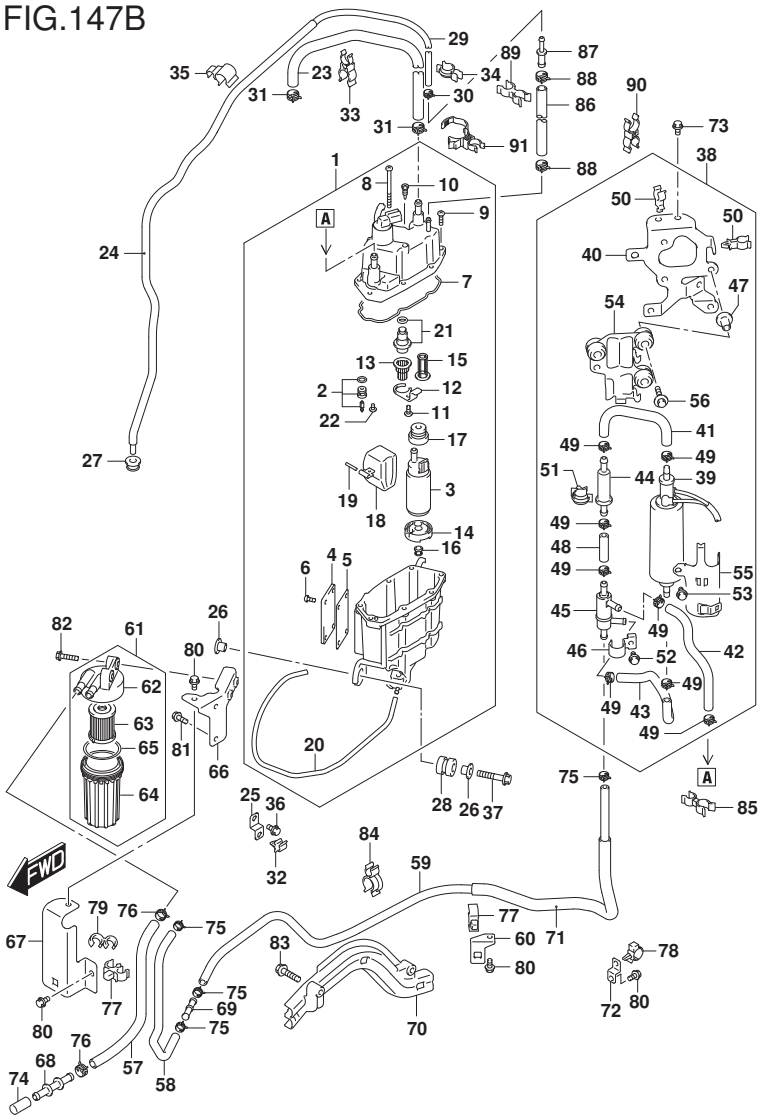


FIG.147B (1-C-7) FUEL PUMP/FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15600-98L10	SEPARATOR ASSY, FUEL VAPOR	1	
2	13370-93J10	.VALVE ASSY, NEEDLE	1	
3	15200-98L10	.PUMP ASSY, FUEL (H)	1	
4	15612-98L00	.COVER	1	
5	15613-98L00	.GASKET	1	
6	15614-98L00	.SCREW	4	
7	15626-93J10	.GASKET, SEPARATOR	1	
8	15627-93J00	.SCREW	1	
9	15628-99E00	.SCREW (L:15)	6	
10	15629-99E10	.SCREW, DRAIN	2	
11	15631-98L00	.SCREW	1	
12	15638-98L00	.PLATE	1	
13	15639-98L00	.COVER	1	
14	15641-98L10	.SPACER	1	
15	15642-88L10	.FILTER	1	
16	15642-90J00	.FILTER	1	
17	15647-98L10	.BUSH, FUEL PUMP	1	
18	15650-93J00	.FLOAT ASSY	1	
19	15654-99E00	.PIN	1	
20	15683-98L00	.HOSE, DRAIN	1	
21	15760-98L00	.REGULATOR, FUEL PRESSURE	1	
22	13614-93J00	.SCREW	1	
23	15681-98L00	HOSE, FUEL (V/S TO DLVY)	1	
24	18498-98L21	PROTECTOR, EVAP HOSE	1	
25	36617-93J10	BRACKET, HOSE CLAMP	1	
26	09169-08042	WASHER	6	
27	09320-08086	CUSHION	1	
28	09320-12072	CUSHION	3	
29	09352-50003-06A	HOSE (5X8.2X1060)	1	
30	09401-08412	CLIP	1	
31	09401-11425	CLIP	2	
32	09403-07323	CLAMP	1	
33	09408-00056	CLIP	1	
34	09408-00142	CLIP	1	

FIG.147B

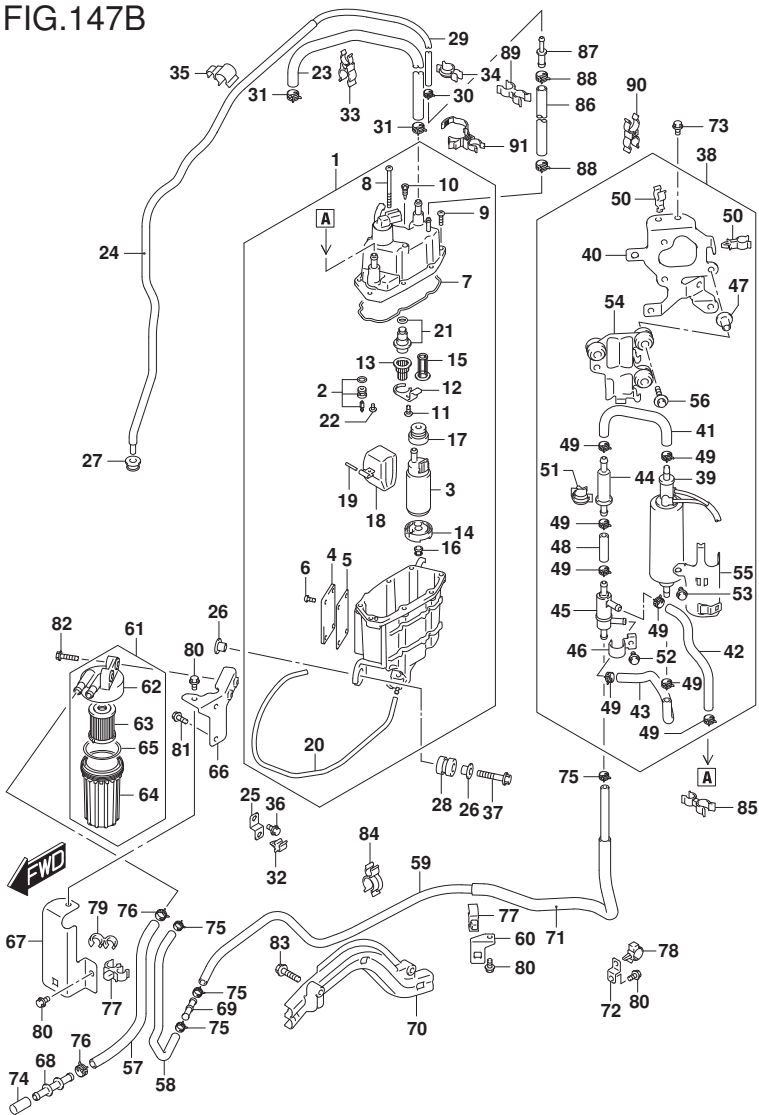

DF350A_E01_019_147B
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147B (1-C-8) FUEL PUMP/FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09408-00198	.CLAMP	3	
36	01550-0612C	.BOLT	1	
37	01550-0840C	.BOLT	3	
38	15100-98L10	PUMP SET, FUEL (L)	1	
39	15100-98J00	.PUMP ASSY, FUEL	1	
40	15116-98L10	.BRACKET, FUEL PUMP (L)	1	
41	15632-98L10	.HOSE, FUEL (PUMP TO FILTER)	1	
42	15635-98L01	.HOSE, FUEL (VALVE TO VST)	1	
43	15637-98L10	.HOSE, FUEL (VALVE TO PUMP)	1	
44	15643-98L00	.FILTER, FUEL (L)	1	
45	15645-93J10	.VALVE, CHECK	1	
46	15674-98L00	.CLIP, CHECK VALVE	1	
47	09169-06093	.WASHER	3	
48	09343-70503-040	.HOSE (7X12X40)	1	FILTER TO VALVE
49	09401-11423	.CLIP	8	
50	09403-13310	.CLAMP	2	
51	09403-16307	.CLAMP	1	
52	01550-0612C	.BOLT	1	
53	01570-06127	.BOLT	1	
54	15114-93J00	.BRACKET, FUEL PUMP NO.1	1	
55	15115-93J00	.BRACKET, FUEL PUMP NO.2	1	
56	09116-06524	.BOLT (M6)	3	
57	15191-98L10	HOSE, FUEL (CONN TO FILTER)	1	
58	15192-98L00	HOSE, FUEL (FILTER TO 2WAY)	1	
59	15193-98L00	HOSE, FUEL (2WAY TO 2WAY)	1	
60	15198-98L00	BRACKET, FUEL HOSE	1	
61	15410-98L00	FILTER, FUEL (L)	1	
62	15411-93J10	.CAP, FUEL FILTER	1	
63	15412-93J10	.FILTER ASSY, FUEL	1	
64	15413-98L00	.CASE ASSY, FUEL FILTER	1	
65	15415-93J10	.SEAL, FUEL FILTER NO.1	1	
66	15421-98L00	BRACKET, FUEL FILTER (L)	1	
67	15423-98L00	GUARD, FUEL HOSE	1	
68	15830-98J01	JOINT, FUEL HOSE	1	
69	15831-96J00	UNION, 2 WAY FUEL HOSE	1	
70	15852-98L00	GUIDE, FUEL HOSE	1	

FIG.147B

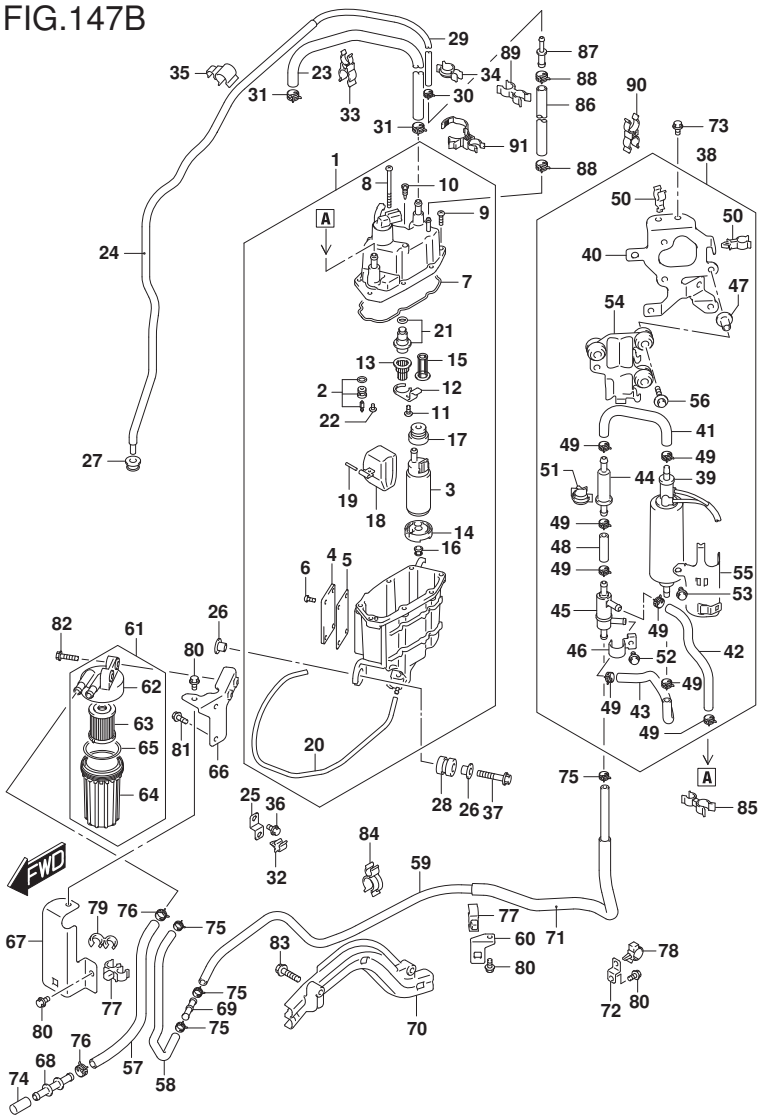


FIG.147B (1-C-9) FUEL PUMP/FUEL VAPOR SEPARATOR (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
71	18498-99E11	PROTECTOR, FUEL HOSE (610)	1	L:610->450
72	36617-93J10	BRACKET, FUEL HOSE	1	
73	09103-06267	BOLT (6X18)	2	
74	09251-09005	CAP	1	
75	09401-11423	CLIP	4	
76	09401-13423	CLIP	2	
77	09403-13308	CLAMP	2	
78	09403-17403	CLAMP	1	
79	09408-00121	CLAMP	1	
80	01550-0612C	BOLT	4	
81	01550-0616C	BOLT	2	
82	01550-0625C	BOLT	2	
83	01550-0630C	BOLT	2	
84	09408-00142	CLIP	1	
85	09408-00054	CLAMP	1	
86	09343-70503-600	HOSE (7X12X600)	1	L:600->240
87	15695-98L00	UNION, EVAPORATION	1	
88	09401-11423	CLIP	2	
89	09408-00050	CLIP	1	
90	09408-00173	CLAMP	2	
91	09408-00337	CLAMP	1	

DF325A E40

FIG.160A

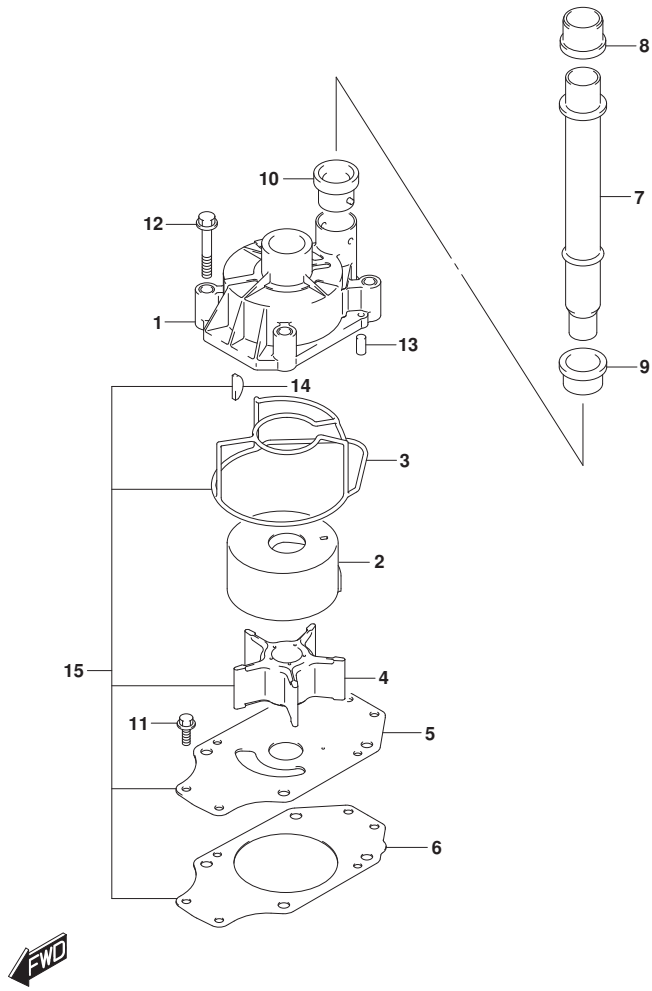


FIG.160A (1-C-10) WATER PUMP (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J02	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98L00	PANEL, PUMP CASE UNDER	1	
6	17472-98L00	GASKET, PUMP CASE PANEL	1	
7-1	17560-98L00	TUBE, WATER (X)	1	W/TRANSOM(X)
7-2	17560-98L10	TUBE, WATER (XX)	1	W/TRANSOM(XX)
8	17562-98L00	BUSH, WATER TUBE UPPER	1	
9	17563-98L00	BUSH, WATER TUBE LOWER	1	
10	17564-93J00	BUSH, WATER PUMP CASE	1	
11	29116-93J00	BOLT, PUMP CASE PANEL	4	
12	09116-08131	BOLT (8X45)	4	
13	09202-06031	PIN (6X12)	2	
14	09420-05009	KEY	1	
15	17400-98L00	WATER PUMP REPAIR KIT	1	OPT

DF350A E01
DF325A E01

FIG.160B

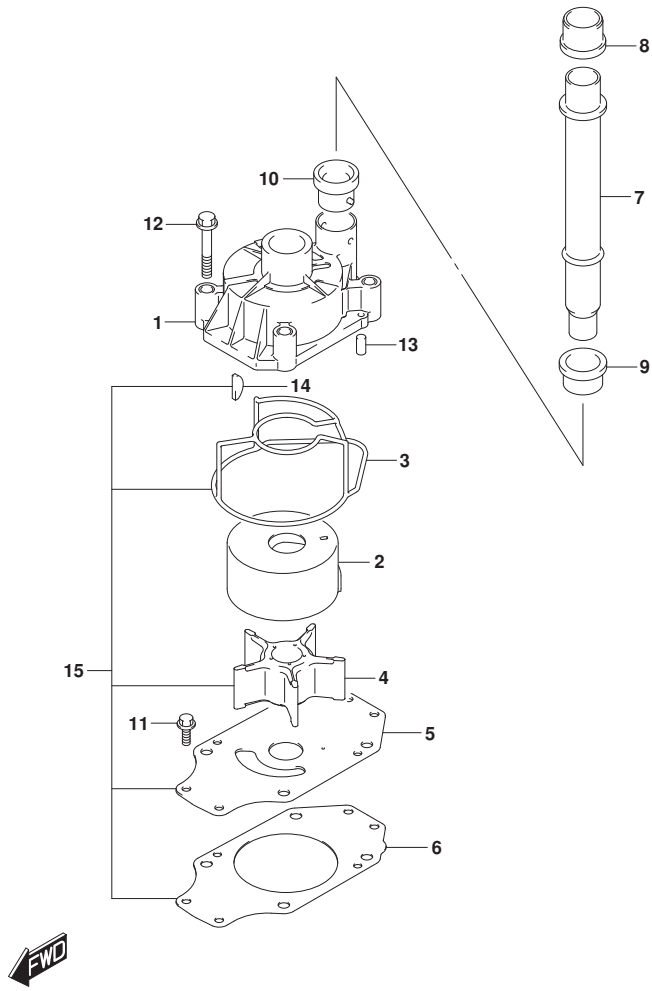


FIG.160B (1-C-11) WATER PUMP (E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J12	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98L10	PANEL, PUMP CASE UNDER	1	
6	17472-98L00	GASKET, PUMP CASE PANEL	1	
7-1	17560-98L00	TUBE, WATER (X)	1	W/TRANSOM(X)
7-2	17560-98L10	TUBE, WATER (XX)	1	W/TRANSOM(XX)
8	17562-98L00	BUSH, WATER TUBE UPPER	1	
9	17563-98L00	BUSH, WATER TUBE LOWER	1	
10	17564-93J00	BUSH, WATER PUMP CASE	1	
11	29116-93J00	BOLT, PUMP CASE PANEL	4	
12	09116-08131	BOLT (8X45)	4	
13	09202-06031	PIN (6X12)	2	
14	09420-05009	KEY	1	
15	17400-98L00	WATER PUMP REPAIR KIT	1	OPT

DF325A E40

FIG.162A

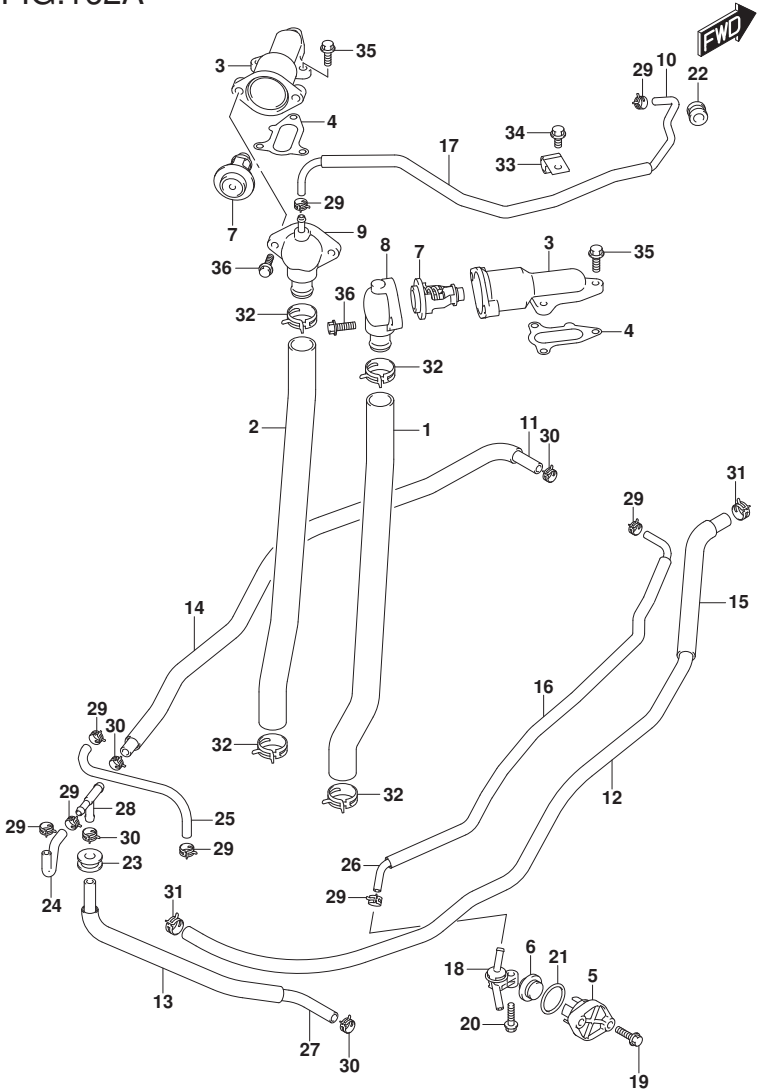


FIG.162A (1-C-12) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11196-98L00	HOSE, WATER RETURN STBD	1	
2	11197-98L00	HOSE, WATER RETURN PORT	1	
3	17581-98L00	PIPE, WATER OUTLET	2	
4	17582-93J00	GASKET, WTR OUTLET PIPE	2	
5-1	17611-90J00-YAY	COVER, WTR PRESSURE VALVE (BLACK)	1	
5-2	17611-90J00-Y5S	COVER, WTR PRESSURE VALVE (WHITE)	1	
6	17660-98L00	VALVE WATER PRESSURE	1	
7-1	17670-98L20	THERMOSTAT, WATER 60 DEG	2	
7-2	17670-98L10	THERMOSTAT, WATER 70 DEG	2	OPT
8	17680-98L00	COVER, THERMOSTAT STBD	1	
9	17680-98L10	COVER, THERMOSTAT PORT	1	
10	17712-98L00	HOSE, WATER (CASE JKT TO THERMO)	1	
11	17714-98L00	HOSE, WATER (3WAY TO CASE JKT)	1	
12	17915-98L00	HOSE, WATER FLUSH	1	
13	18498-99E11	PROTECTOR, WATER HOSE (610)	1	L:610->320
14	18498-99E11	PROTECTOR, WATER HOSE (610)	1	L:610->540
15	18498-87J51	PROTECTOR, WATER HOSE (160)	1	
16	18498-96L50	PROTECTOR, WATER HOSE (520)	1	
17	18498-96L41	PROTECTOR, WATER HOSE (430)	1	
18	51170-98L00	BRACKET WATER INDICATOR	1	
19	09116-06121	BOLT (6X25)	2	
20	09116-06121	BOLT (6X25)	1	
21	09280-26006	O RING (D:3.1,ID:26.4)	1	
22	09320-09039	CUSHION	1	
23	09320-10503	CUSHION	1	
24	09352-50903-600	HOSE (5X9X600)	1	3WAY TO VST L:600->110
25	09352-50903-600	HOSE (5X9X600)	1	VST TO E/H COVER L:600->170
26	09352-50903-600	HOSE (5X9X600)	1	CASE JKT TO W/I L:600->580
27	09352-70113-600	HOSE (7X11X600)	1	OILPAN TO 3WAY L:600->400

FIG.162A


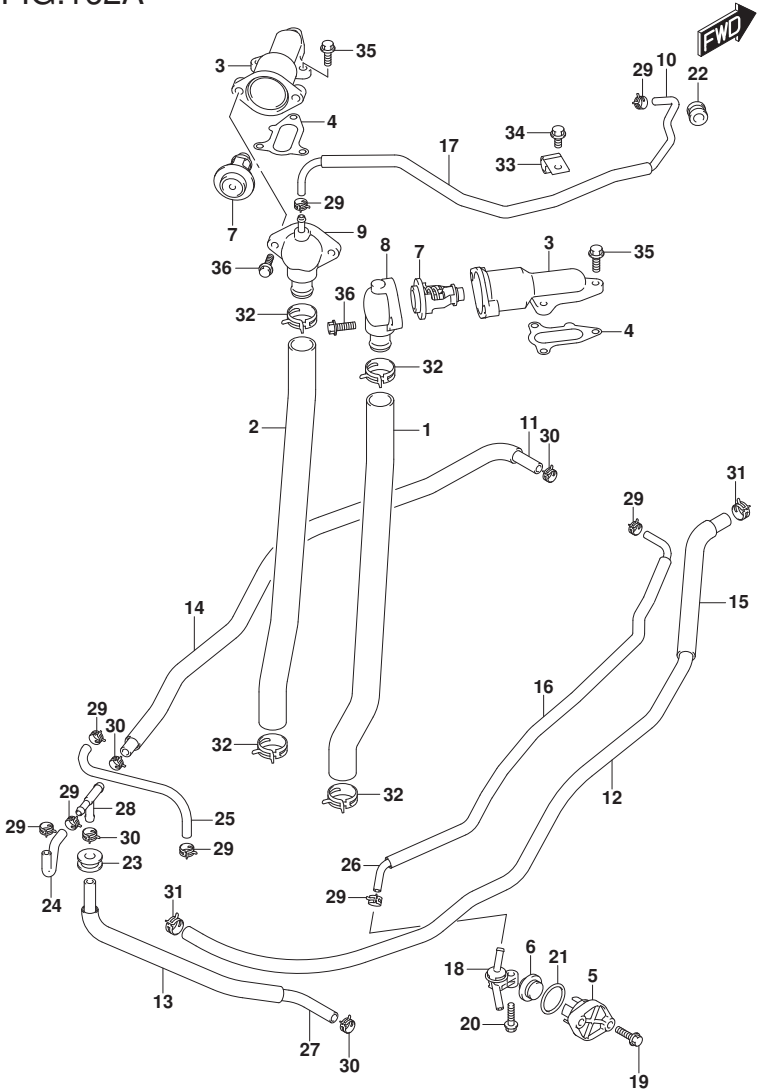


FIG.162A (1-C-13) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	09367-08005	3 WAY	1	
29	09401-08413	CLIP	8	
30	09401-11424	CLIP	4	
31	09401-13425	CLIP	2	
32	09401-25406	CLIP	4	
33	09403-13408	CLAMP	2	
34	01550-0612C	BOLT	2	
35	01550-0620C	BOLT	6	
36	01550-0620C	BOLT	4	

FIG.163A

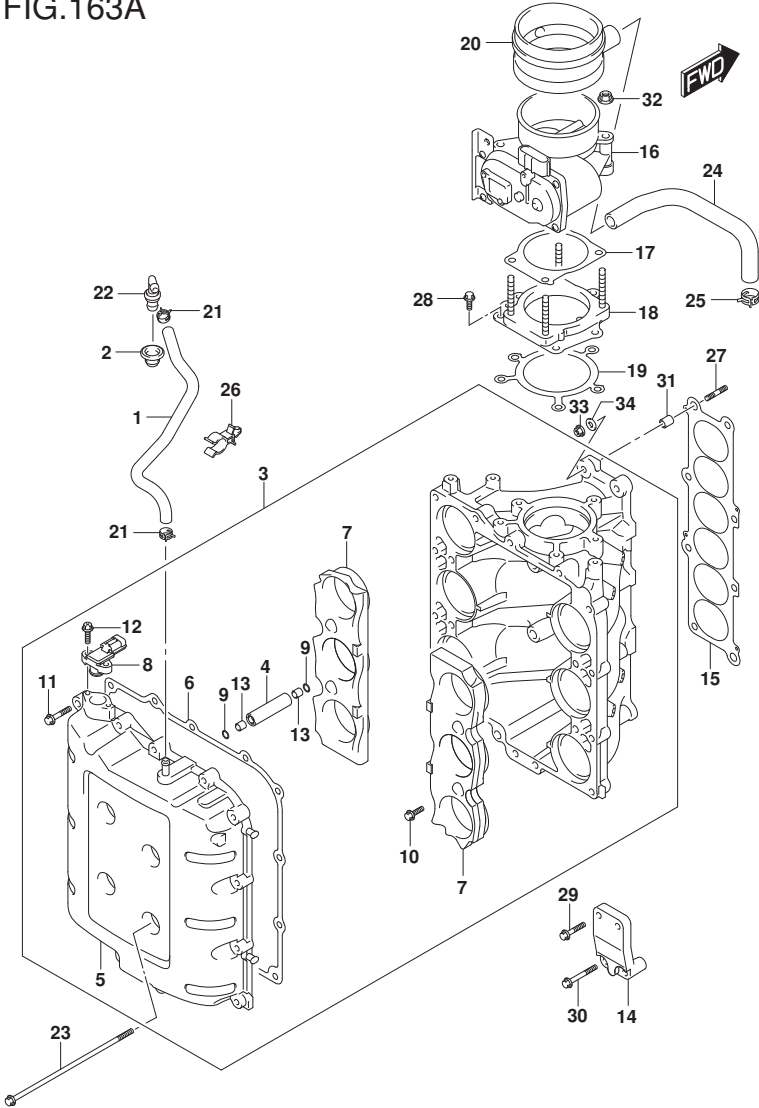

DF350A_E01_019_163A
THROTTLE BODY

FIG.163A (1-C-14) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11193-98J00	HOSE, PCV	1	
2	11198-58B00	SEAL, PCV VALVE	1	
3	13100-98L00	COLLECTOR ASSY	1	
4	13137-98J00	.SPACER, COLLECTOR	4	
5	13140-98L00	.COVER, COLLECTOR	1	
6	13147-98J00	.GASKET, COLLECTOR COVER	1	
7	13180-98J00	.FUNNEL, COLLECTOR	2	
8	18590-68H00	.SENSOR, MAP	1	
9	09280-10009	.O RING (D:1.3,ID:9.8)	8	
10	01550-0816C	.BOLT	4	
11	01550-0835C	.BOLT	10	
12	02162-05207	.SCREW	2	
13	04211-11129	.PIN	8	
14	13134-98J00	BRACKET, COLLECTOR	1	
15	13139-98J01	GASKET, COLLECTOR	1	
16	13300-98L00	BODY ASSY, THROTTLE	1	
17	13343-98J10	GASKET, THROTTLE BODY	1	
18	13315-98J10	DAMPER, THROTTLE BODY	1	
19	13421-98L00	GASKET, THROTTLE BODY	1	
20	13813-98L00	GROMMET, THROTTLE BODY	1	
21	09401-13423	CLIP	2	
22	18118-93J00	VALVE, PCV	1	
23	09103-08370	BOLT (8X250)	6	
24	11174-98L00	HOSE, BREATHER	1	
25	09401-18410	CLIP	1	
26	09403-13310	CLAMP	1	
27	01421-08357	STUD BOLT	2	
28	01550-0816C	BOLT	5	
29	01550-0835C	BOLT	2	
30	01550-08607	BOLT	2	
31	04211-11129	PIN	2	
32	09159-08136	NUT	4	
33	08316-1008C	NUT	2	
34	09160-08161	WASHER (8.2X23X3.2)	2	

FIG.175A


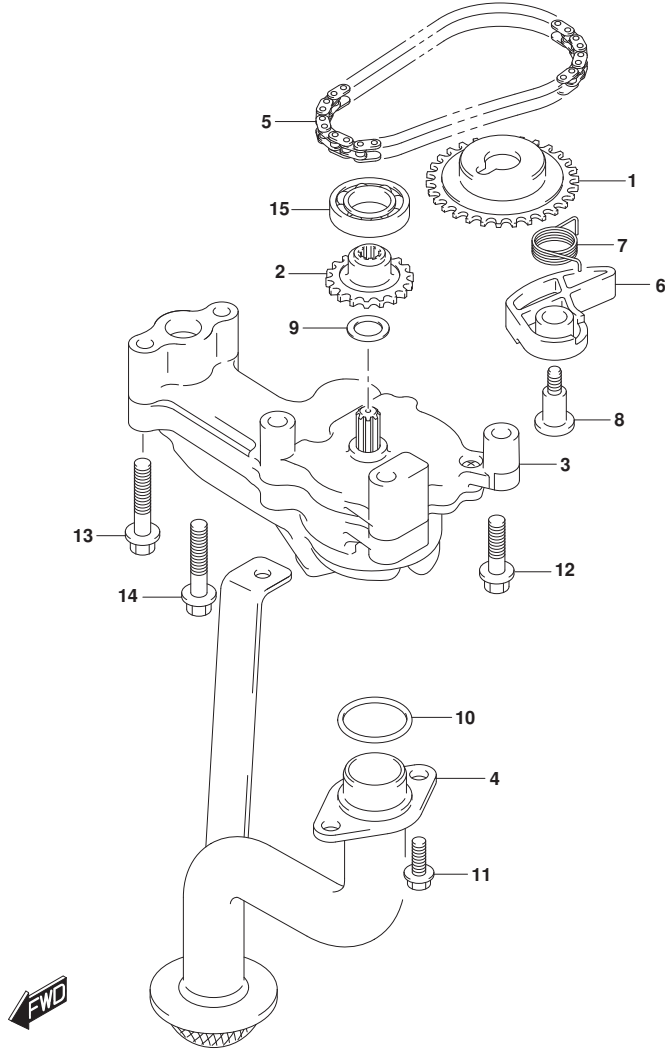


FIG.175A (1-C-15) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12632-93J11	SPROCKET, OIL PUMP DRIVE (NT:32)	1	
2	16113-93J10	SPROCKET, OIL PUMP DRIVEN (NT:18)	1	
3	16400-93J10	PUMP ASSY, OIL	1	
4	16520-93J00	STRAINER, OIL PUMP	1	
5	16760-93J00	CHAIN, OIL PUMP DRIVE	1	
6	16781-93J00	TENSIONER, OIL PUMP CHAIN	1	
7	16782-93J00	SPRING, OIL PUMP TENSIONER	1	
8	16783-93J01	BOLT, OIL PUMP TENSIONER	1	
9	09181-12158	SHIM (12X20X0.5)	1	
10	09280-22020	O RING (D:2.4,ID:21.8)	2	
11	01550-0616A	BOLT	3	
12	01550-0845A	BOLT	1	
13	01550-0865A	BOLT	3	
14	01550-0885A	BOLT	1	
15	08110-60020	BEARING	1	

FIG.180A

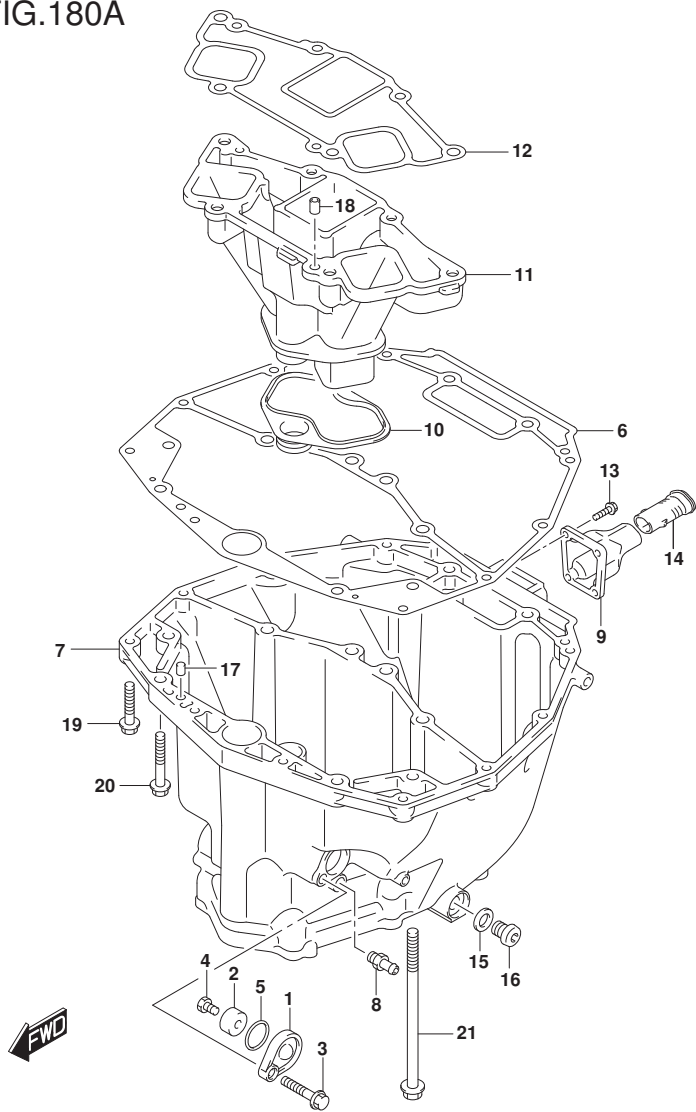

DF350A_E01_019_180A
OIL PAN

FIG.180A (1-D-2) OIL PAN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	11261-93J10-YAY	COVER, PROTECTION ANODE (BLACK)	1	
1-2	11261-93J10-Y5S	COVER, PROTECTION ANODE (WHITE)	1	
2-1	55321-87J01	ANODE, PROTECTION	1	
2-2	55321-87J11	ANODE (MAGNESIUM)	1	OPT
3	29103-93J30	BOLT, ANODE COVER	1	
4	09103-06281	BOLT (6X14)	1	
5	09280-22019	O RING (D:1.9,ID:21.8)	1	
6	11489-98L00	GASKET, OIL PAN	1	
7-1	11501-98L00-YAY	PAN, OIL (BLACK)	1	
7-2	11501-98L00-Y5S	PAN, OIL (WHITE)	1	
8	11591-98L00	UNION, OIL PAN	1	
9	11541-93J00-019	PIPE, EXHAUST (BLACK)	1	
10	14154-93J01	SEAL, EXHAUST TUBE	1	
11	14211-98L00	TUBE, EXHAUST	1	
12	14212-98L00	GASKET, EXHAUST TUBE	1	
13	29116-93J00	BOLT, EXHAUST PIPE	4	
14	11435-98L01	PIPE, EXHAUST RELEASE	1	
15	09168-12012	GASKET (12.5X20X2.5)	1	
16	09248-12009	PLUG (12X18.65)	1	
17	09202-08006	PIN (8X12)	2	
18	09202-08006	PIN (8X12)	2	
19	09116-08128	BOLT (8X40)	10	
20	09116-10176	BOLT (10X44)	4	
21	09116-10184	BOLT (10X200)	2	

DF350A_E01_019

FIG.204A

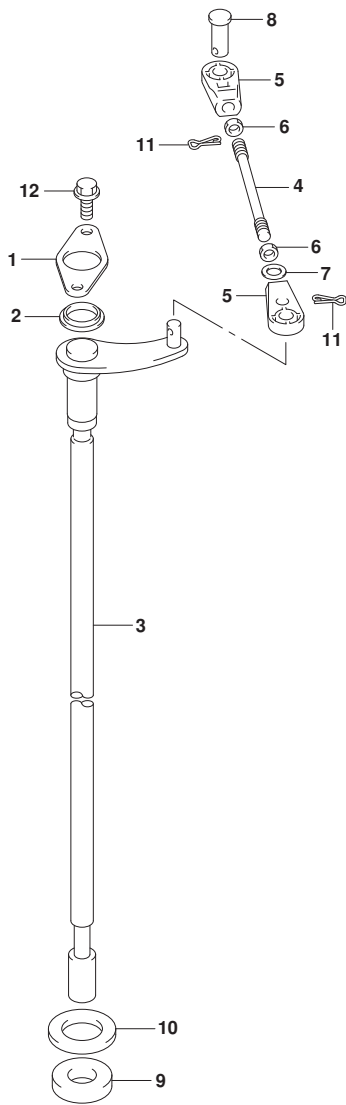


FIG.204A (1-D-3) CLUTCH SHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21152-98L00	PLATE, CLUTCH SFT	1	
2	21153-98L00	BUSH, CLUTCH SFT	1	
3	21210-98L00	SHAFT, CLUTCH	1	
4	21241-98L00	LINK, CLUTCH LEVER	1	
5	67467-98L00	CONNECTOR, CLUTCH LINK	2	
6	09140-06023	NUT	2	
7	09160-08091	WASHER (8.5X14X1.0)	1	
8	09200-08074	PIN (8X17.3)	1	
9	09262-17019	BEARING (17X35X8)	1	
10	09282-22003	OIL SEAL (22X38X6)	1	
11	09385-08004	PIN	2	
12	01550-0616C	BOLT	2	

FIG.206A

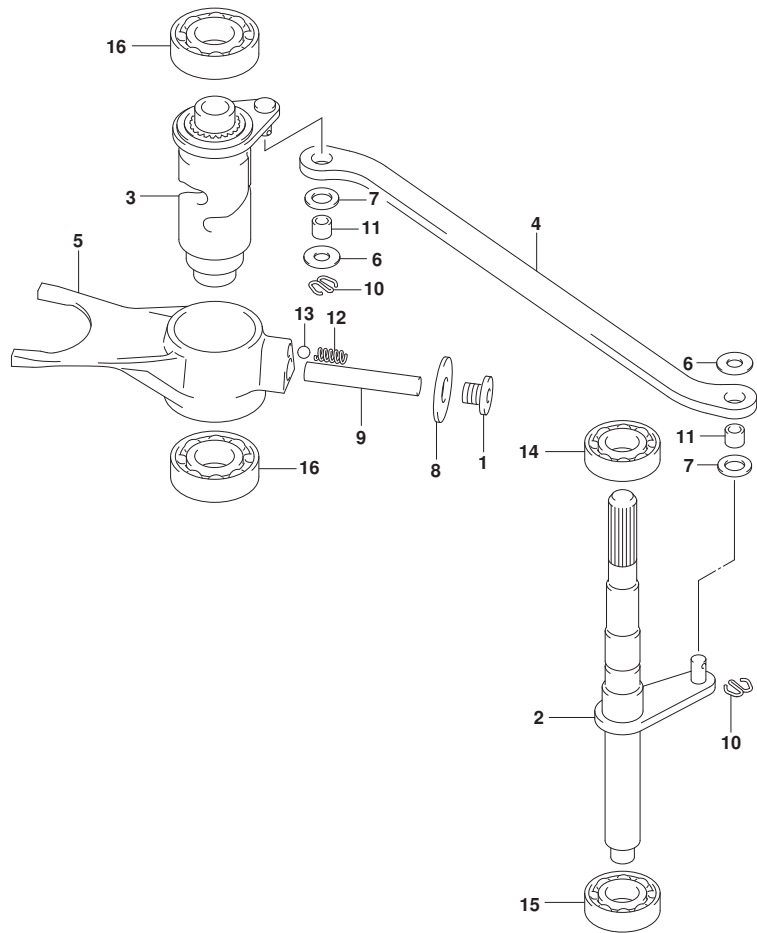


FIG.206A (1-D-4) CLUTCH ROD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11118-93J00	PLUG, SHIFT CAM	1	
2-1	25110-98L00	ROD, SHIFT (X)	1	W/TRANSOM(X)
2-2	25110-98L10	ROD, SHIFT (XX)	1	W/TRANSOM(XX)
3	25300-98L00	CAM, SHIFT	1	
4	25315-98L00	LINK, SHIFT CAM ARM	1	
5	25411-98L00	FORK, SHIFT	1	
6	09160-06094	WASHER (6.5X15X1.0)	2	
7	09160-08091	WASHER (8.5X14X1.0)	2	
8	09160-10129	WASHER (10.5X28X1.6)	1	
9	09202-08007	PIN (8X49)	1	
10	09204-01006	PIN	2	
11	25214-98L00	BUSH, SHIFT LINK	2	
12	09440-05031	SPRING	1	
13	06111-07004	BALL	1	
14	08113-60020	BEARING	1	
15	08113-62000	BEARING	1	
16	08113-69047	BEARING	2	



FIG.220A

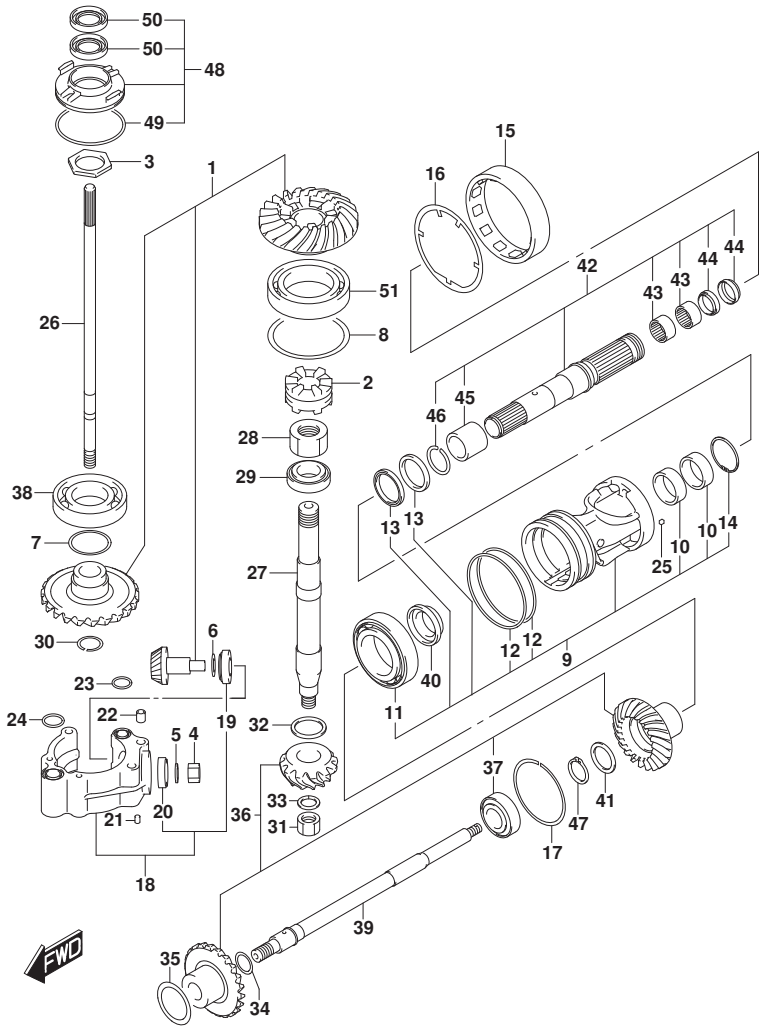


FIG.220A (1-D-5) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	25500-98L00	GEAR SET, REVERSE	1	
2	25711-98L00	SHIFTER, CLUTCH DOG	1	
3	09140-36003	NUT (M36,T:6)	1	
4	09159-16027	NUT (M16)	1	
5	09160-16026	WASHER (16X30X3)	1	
6-1	09181-25051	SHIM (25X34X0.6)	1	
6-2	09181-25052	SHIM (25X34X0.65)	1	
6-3	09181-25160	SHIM (25X34X0.7)	1	
6-4	09181-25054	SHIM (25X34X0.75)	1	
6-5	09181-25162	SHIM (25X34X0.8)	1	
6-6	09181-25056	SHIM (25X34X0.85)	1	
6-7	09181-25057	SHIM (25X34X0.90)	1	
6-8	09181-25058	SHIM (25X34X0.95)	1	
6-9	09181-25059	SHIM (25X34X1)	1	
6-10	09181-25060	SHIM (25X34X1.05)	1	
6-11	09181-25061	SHIM (25X34X1.1)	1	
6-12	09181-25062	SHIM (25X34X1.15)	1	
6-13	09181-25063	SHIM (25X34X1.2)	1	
6-14	09181-25130	SHIM (25X32X0.5)	1	
7-1	09181-40004	SHIM (T:0.60)	1	
7-2	09181-40005	SHIM (T:0.65)	1	
7-3	09181-40006	SHIM (T:0.70)	1	
7-4	09181-40007	SHIM (T:0.75)	1	
7-5	09181-40008	SHIM (T:0.80)	1	
7-6	09181-40009	SHIM (T:0.85)	1	
7-7	09181-40010	SHIM (T:0.90)	1	
7-8	09181-40011	SHIM (T:0.95)	1	
7-9	09181-40012	SHIM (T:1.00)	1	
7-10	09181-40013	SHIM (T:1.05)	1	
7-11	09181-40014	SHIM (T:1.10)	1	
7-12	09181-40015	SHIM (T:1.15)	1	
8-1	09181-77003	SHIM (T:0.5)	1	
8-2	09181-77004	SHIM (T:0.55)	1	
8-3	09181-77005	SHIM (T:0.60)	1	

FIG.220A

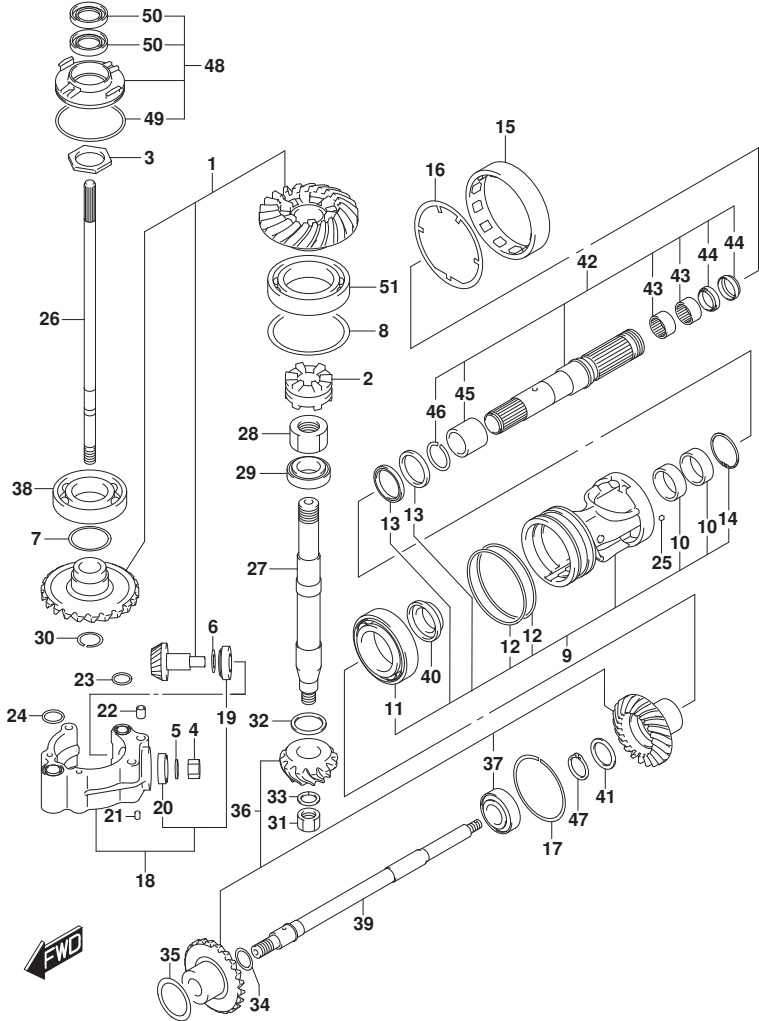


FIG.220A (1-D-6) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
8-4	09181-77006	SHIM (T:0.65)	1	
8-5	09181-77007	SHIM (T:0.70)	1	
8-6	09181-77008	SHIM (T:0.75)	1	
8-7	09181-77009	SHIM (T:0.80)	1	
8-8	09181-77010	SHIM (T:0.85)	1	
8-9	09181-77011	SHIM (T:0.90)	1	
8-10	09181-77012	SHIM (T:0.95)	1	
8-11	09181-77013	SHIM (T:1.00)	1	
8-12	09181-77014	SHIM (T:1.05)	1	
8-13	09181-77015	SHIM (T:1.10)	1	
9	56120-98L00	HOUSING, PROP SHAFT BRG	1	
10	09263-45005	.BEARING (45X55X20)	2	
11	09265-50002	.BEARING (50X90X21.75)	1	
12	09280-00047	.O RING (D:3, ID:109)	2	
13	09282-45001	.SEAL (45X60X8)	2	
14	08331-41559	.CIRCLIP	1	
15	56122-98L00	STOPPER, PROP SHAFT BRG HSG	1	
16	56123-98L00	WASHER, HSG NO.2	1	
17-1	56126-98L00	WASHER, HSG (T:1.9)	1	
17-2	56126-98L10	WASHER, HSG (T:2.0)	1	
17-3	56126-98L20	WASHER, HSG (T:2.1)	1	
17-4	56126-98L30	WASHER, HSG (T:2.2)	1	
17-5	56126-98L40	WASHER, HSG (T:2.3)	1	
17-6	56126-98L50	WASHER, HSG (T:2.4)	1	
17-7	56126-98L60	WASHER, HSG (T:2.5)	1	
17-8	56126-98L70	WASHER, HSG (T:2.6)	1	
18	56150-98L00	HOUSING, REV PINION BRG	1	
19	09265-25024	.BEARING (25X52X16.25)	1	
20	09265-25038	.BEARING (25X47X15)	1	
21	04221-08129	PIN	1	
22	09206-13019	PIN (10.4X13X16)	2	
23	09280-21015	O RING (D:2.7, ID:21.4)	2	
24	09280-26006	O RING (D:3.1, ID:26.4)	2	
25	09421-04008	KEY	1	

FIG.220A

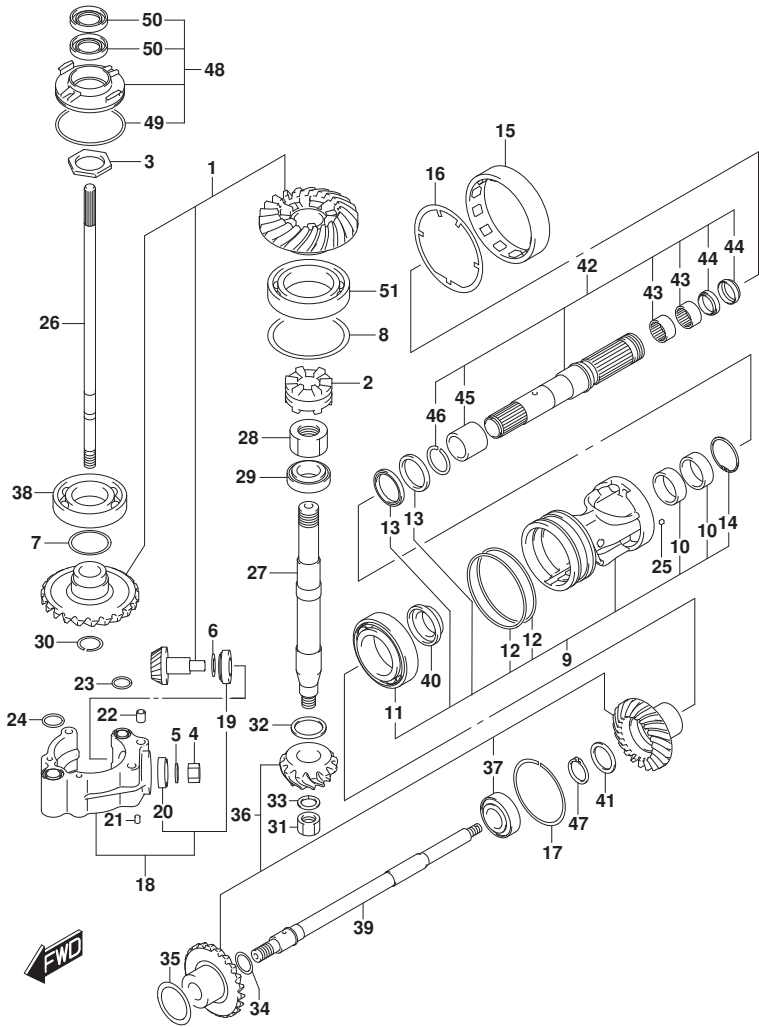


FIG.220A (1-D-7) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26-1	57110-98L00	SHAFT, DRIVE UPPER (X)	1	W/TRANSMOM(X)
26-2	57110-98L10	SHAFT, DRIVE UPPER (XX)	1	W/TRANSMOM(XX)
27	57113-98L00	SHAFT, DRIVE LOWER	1	
28	09159-27001	NUT,DRIVE SHAFT LOWER (M27)	1	
29	09265-28006	BEARING (28X52X16)	1	PART OF FIG.407A REF3
30	09380-24007	CIRCLIP	1	
31	09159-16027	NUT (M16)	1	
32-1	09181-30037	SHIM (T:0.60)	1	
32-2	09181-30038	SHIM (T:0.65)	1	
32-3	09181-30039	SHIM (T:0.70)	1	
32-4	09181-30040	SHIM (T:0.75)	1	
32-5	09181-30041	SHIM (T:0.80)	1	
32-6	09181-30042	SHIM (T:0.85)	1	
32-7	09181-30046	SHIM (T:1.05)	1	
32-8	09181-30158	SHIM (T:0.50)	1	
32-9	09181-30164	SHIM (T:0.90)	1	
32-10	09181-30165	SHIM (T:0.95)	1	
33	08221-16256	SHIM	1	
34-1	09181-25051	SHIM (25X34X0.6)	1	
34-2	09181-25052	SHIM (25X34X0.65)	1	
34-3	09181-25160	SHIM (25X34X0.7)	1	
34-4	09181-25054	SHIM (25X34X0.75)	1	
34-5	09181-25162	SHIM (25X34X0.8)	1	
34-6	09181-25056	SHIM (25X34X0.85)	1	
34-7	09181-25057	SHIM (25X34X0.90)	1	
34-8	09181-25058	SHIM (25X34X0.95)	1	
34-9	09181-25059	SHIM (25X34X1)	1	
34-10	09181-25060	SHIM (25X34X1.05)	1	
34-11	09181-25061	SHIM (25X34X1.1)	1	
34-12	09181-25062	SHIM (25X34X1.15)	1	
34-13	09181-25063	SHIM (25X34X1.2)	1	
34-14	09181-25130	SHIM (25X32X0.5)	1	
35-1	09181-50020	SHIM (T:0.45)	1	
35-2	09181-50021	SHIM (T:0.50)	1	

FIG.220A

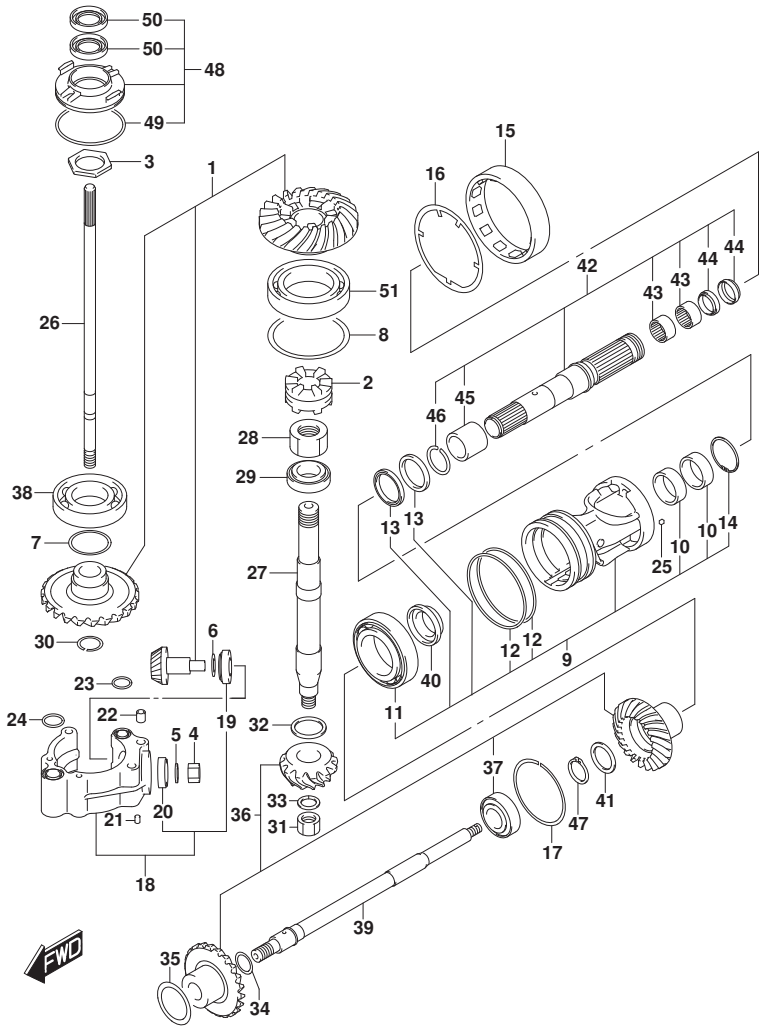


FIG.220A (1-D-8) TRANSMISSION

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35-3	09181-50022	SHIM (T:0.55)	1	
35-4	09181-50023	SHIM (T:0.60)	1	
35-5	09181-50024	SHIM (T:0.65)	1	
35-6	09181-50025	SHIM (T:0.70)	1	
35-7	09181-50026	SHIM (T:0.75)	1	
35-8	09181-50027	SHIM (T:0.80)	1	
35-9	09181-50028	SHIM (T:0.85)	1	
35-10	09181-50029	SHIM (T:0.90)	1	
36	57301-98810	GEAR SET, CONTRA	1	
37	09265-30024	.BEARING (30X62X21.25)	1	
38	09262-40017	BEARING (40X80X18)	1	PART OF FIG.407A REF15
39	57610-98L00	SHAFT, PROPELLER INNER	1	
40	57622-98L00	SPACER, PROP SHAFT	1	
41	09160-36007	WASHER (32X47X2)	1	
42	57600-98820	SHAFT SET, PROPELLER OUTER	1	
43	09263-30064	.BEARING (30X37X20)	2	
44	09282-30009	.SEAL (30X38X10.9)	2	
45	09300-40003	.BUSH (40X45X40)	1	
46	09380-40004	.SNAP RING	1	
47	57635-98L00	STOPPER, PROPELLER SHAFT	1	
48	17450-98L00	HOUSING, WATER INLET	1	
49	09280-69001	.O RING (D:3.1,ID:68.5)	1	
50	09282-24004	.OIL SEAL (24X40X7)	2	
51	09262-55002	BEARING (55X90X18)	1	

FIG.301A

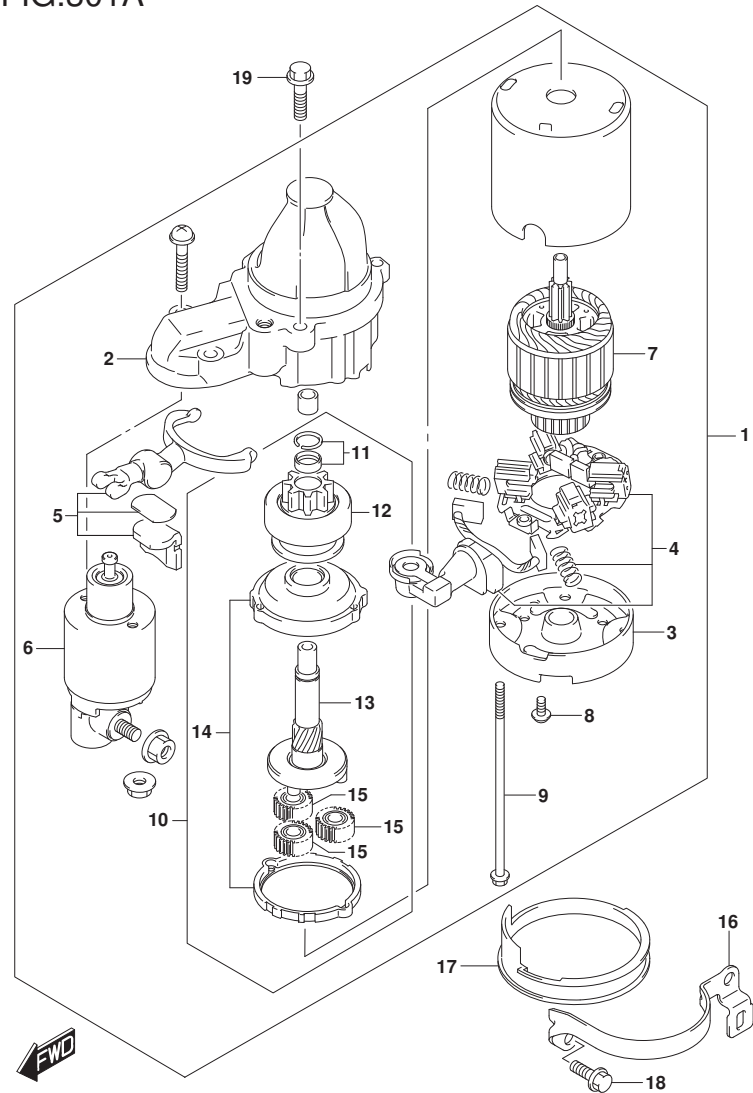


FIG.301A (1-D-9) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-98L10	STARTING MOTOR	1	
2	31150-98L00	.CASE, GEAR	1	
3	31170-92J00	.HOUSING, REAR	1	
4	31173-98L00	.HOLDER ASSY, BRUSH	1	
5	31191-63J00	.LEVER ASSY	1	
6	31220-98L10	.SWITCH ASSY	1	
7	31311-63J00	ARMATURE	1	
8	31192-92J00	.SCREW SET	1	
9	31261-75F10	.BOLT, THROUGH	2	
10	31340-98L00	.CLUTCH SET, STARTER	1	
11	31313-86030	..STOPPER SET	1	
12	31320-98L00	..PINION	1	
13	31341-98L00	..SHAFT, PINION	1	
14	31343-63J00	..INTERNAL GEAR	1	
15	31344-63J00	..GEAR ASSY	3	
16	31912-98L00	BAND, STARTING MOTOR	1	
17	31918-92J01	DAMPER, LOWER	1	
18	01550-0820C	BOLT	2	
19	01550-0830C	BOLT	2	

FIG.303A (1-D-10) MAGNETO

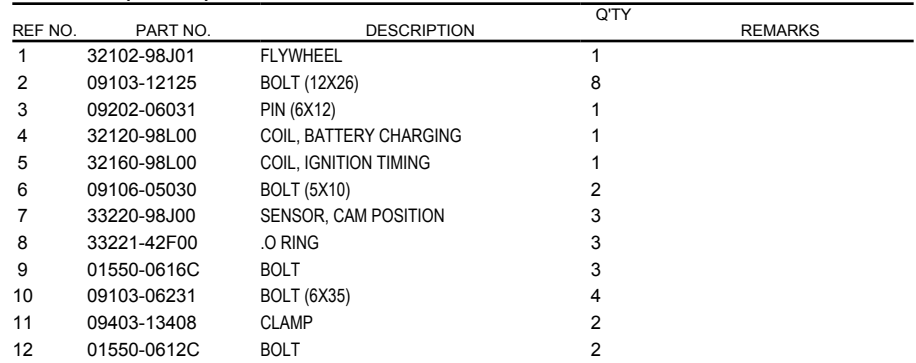


FIG.310A

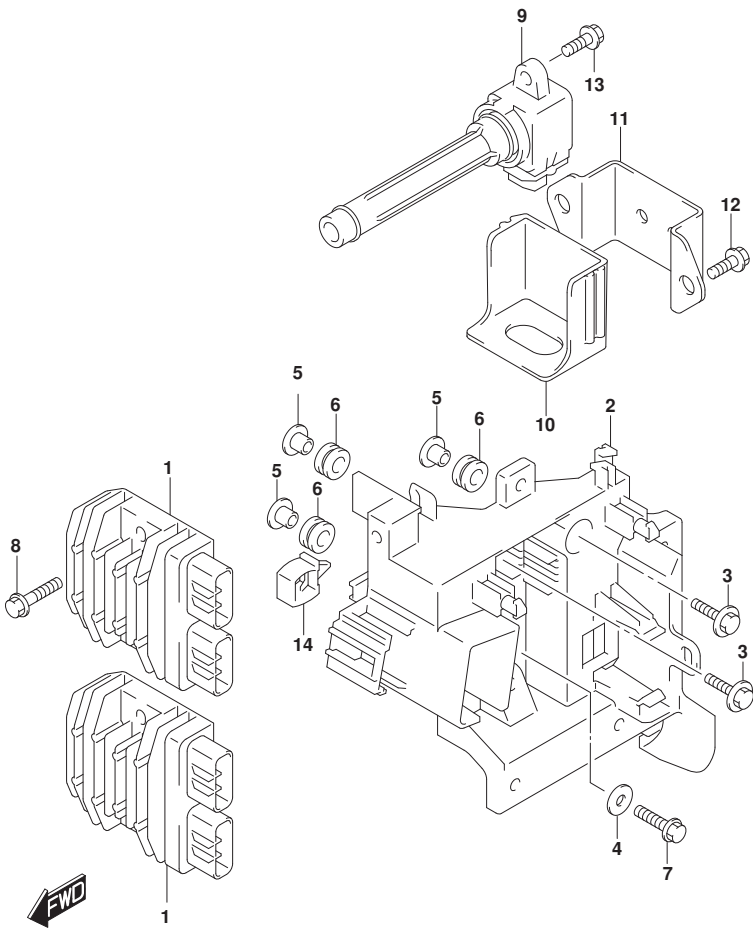


FIG.310A (1-D-11) RECTIFIER/IGNITION COIL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-26J02	RECTIFIER ASSY	2	
2	32890-98L00	HOLDER, ELECTRIC PARTS	1	
3	09116-06202	BOLT (6X25)	3	
4	09160-06084	WASHER (6.5X18X1.6)	1	
5	09169-06062	WASHER	4	
6	09320-09016	CUSHION	4	
7	01550-06257	BOLT	1	
8	01550-0625C	BOLT	4	
9	33410-98L00	COIL ASSY, IGNITION	6	
10	33411-98L10	CUSHION, IGN COIL CONNECTOR	6	
11	33414-98L00	BRACKET, IGNITION COIL	5	
12	01547-06127	BOLT	10	
13	01550-0620C	BOLT	6	
14	09403-12412	CLAMP	1	

FIG.315A

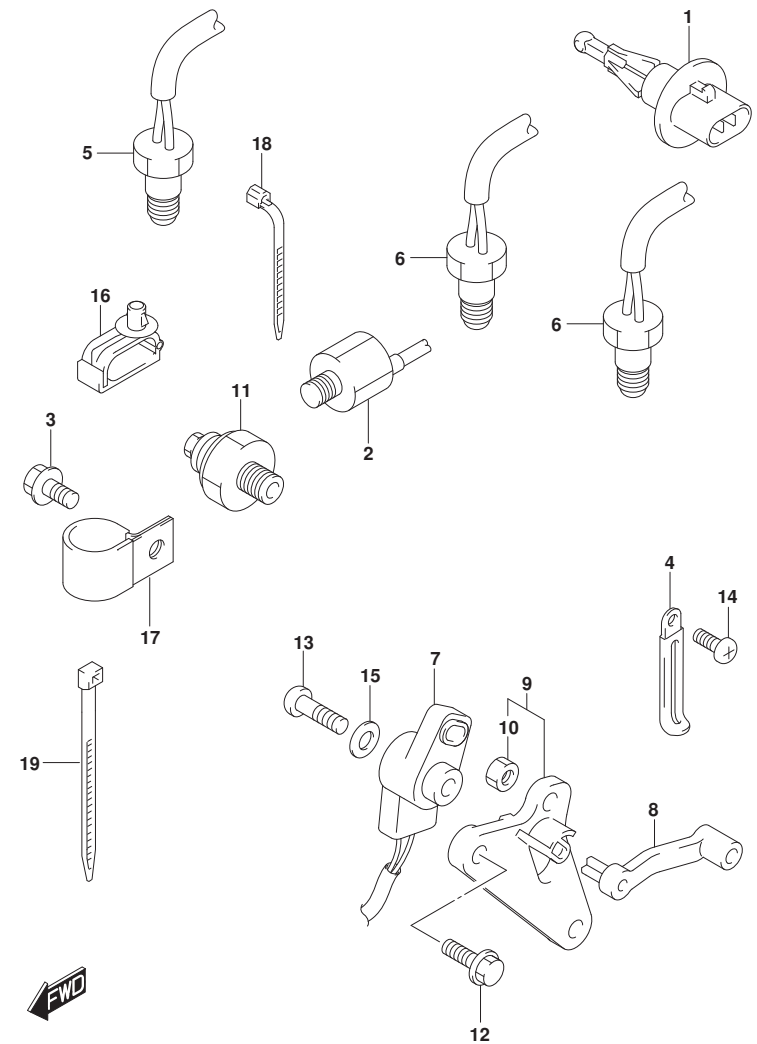


FIG.315A (1-D-12) SENSOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13650-52G00	SENSOR, INLET AIR TEMP	1	
2	18640-98L00	SENSOR ASSY, KNOCK	1	
3	29103-93J00	BOLT, PTT MOTOR LEAD CLAMP	1	
4	29404-93J10	CLAMP, PTT MOTOR LEAD	1	
5	34830-87J20	SENSOR ASSY, EXHAUST TEMP	1	
6	34830-87J20	SENSOR ASSY, CYLINDER TEMP	2	
7	34840-98J03	SENSOR ASSY, TRIM	1	
8	34841-88L00	LEVER, TRIM SENSOR	1	
9	34845-88L01	BRACKET, TRIM SENSOR	1	
10	09140-05005	.NUT	1	
11	37820-99E02	SWITCH ASSY, OIL PRESSURE	1	
12	09103-06093	BOLT (6X20)	2	
13	09125-05048	SCREW (5X16)	1	
14	09125-06063	SCREW (6X10)	1	
15	09160-05029	WASHER (5.5X12X0.8)	1	
16	09403-07340	CLAMP	1	
17	09403-19409	CLAMP	1	
18	09407-14403	CLAMP (L:125)	1	
19	09407-14407	CLAMP (L:145)	2	

FIG.322A

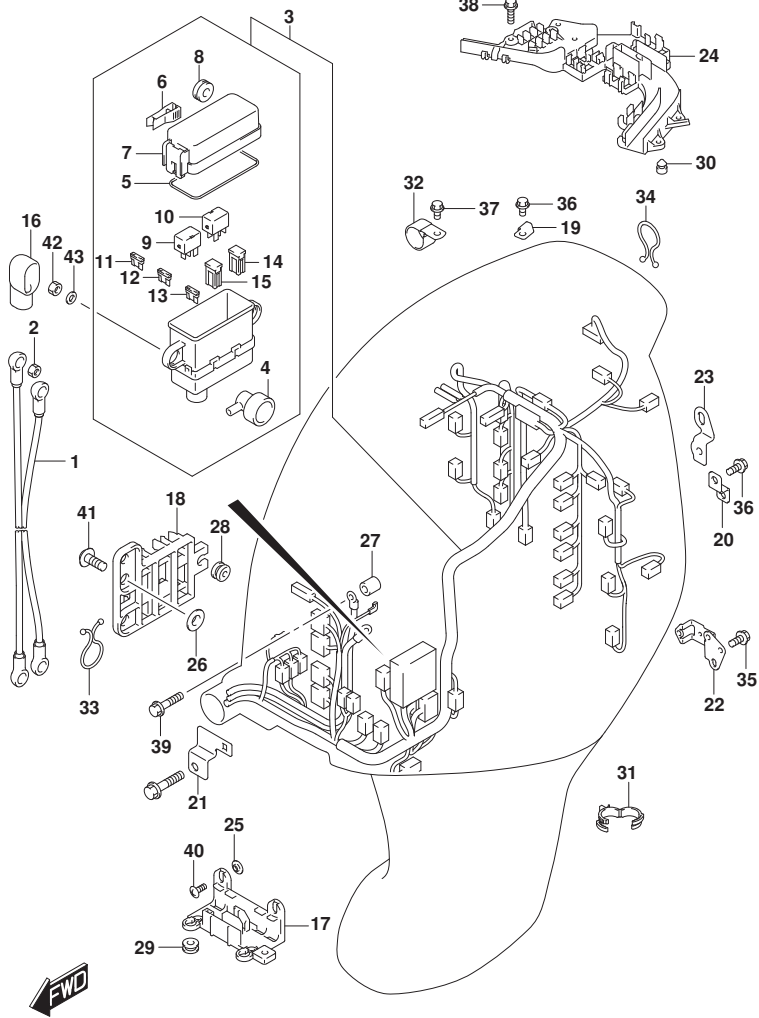


FIG.322A (1-D-13) HARNESS

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98L01	CABLE ASSY, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98L30	HARNESS ASSY, WIRING	1	
4	36618-43410	.CAP, OIL PRESSURE SWITCH	1	
5	36721-98L10	.O RING, UPR COVER	1	
6	36737-98L00	.PULLER, FUSE	1	
7	36738-98L00	.COVER, FUSE CASE UPR	1	
8	09320-08021	.CUSHION	2	
9	38860-76F01	.RELAY ASSY	1	FOR MAIN
10	38860-76F01	.RELAY ASSY	1	FOR START
11	09481-10504	.FUSE (10A)	2	
12	09481-15504	.FUSE (15A)	4	
13	09481-30504	.FUSE (30A)	3	
14	09481-40403	.FUSE (40A)	1	
15	09481-60403	.FUSE (60A)	2	
16	36612-96J00	CAP, TERMINAL	1	
17	36616-98L00	HOLDER, CABLE	1	
18	36616-98L10	HOLDER, CONNECTOR	1	
19	36617-88L00	BRACKET, PTT CABLE CLAMP	1	
20	36617-93J10	BRACKET, HARNESS	5	
21	36617-98L10	BRACKET, HARNESS	1	
22	36617-98L30	BRACKET, HARNESS	1	
23	36617-98L50	BRACKET, HARNESS	2	
24	36626-98L00	HOLDER, MAIN HARNESS	1	
25	09169-06053	WASHER	2	
26	09169-06053	WASHER	2	
27	09180-08229	SPACER (8.1X16X17)	1	
28	09320-04009	BUSH	1	

FIG.322A

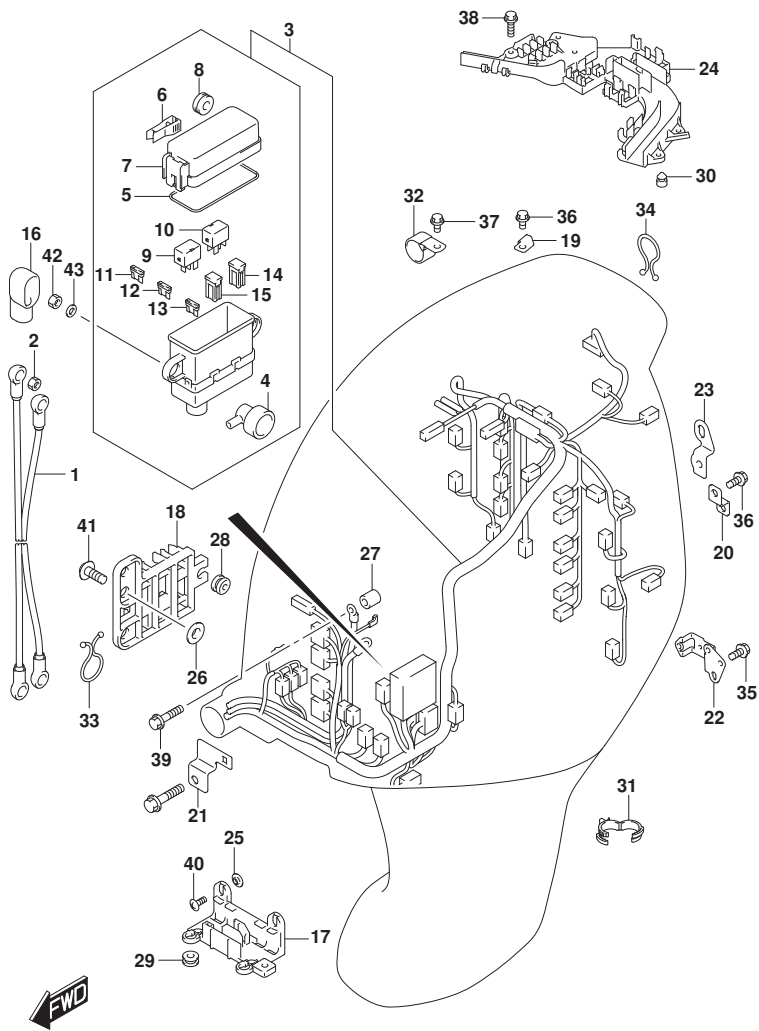


FIG.322A (1-D-14) HARNESS

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09320-08076	GROMMET	2	
30	09321-06013	CUSHION	1	
31	09403-25001	CLAMP	1	
32	09403-26401	CLAMP	1	
33	09408-00008	CLIP (ID:20)	3	
34	09408-00327	CLIP, HARNESS (ID:42)	4	
35	01547-06127	BOLT	2	
36	01550-0612C	BOLT	7	
37	01550-0612C	BOLT	1	
38	01550-0620C	BOLT	4	
39	01550-08357	BOLT	1	
40	02142-06167	SCREW	2	
41	02142-06167	SCREW	2	
42	08310-00067	NUT	1	
43	08321-01067	LOCK WASHER	1	

FIG.326A


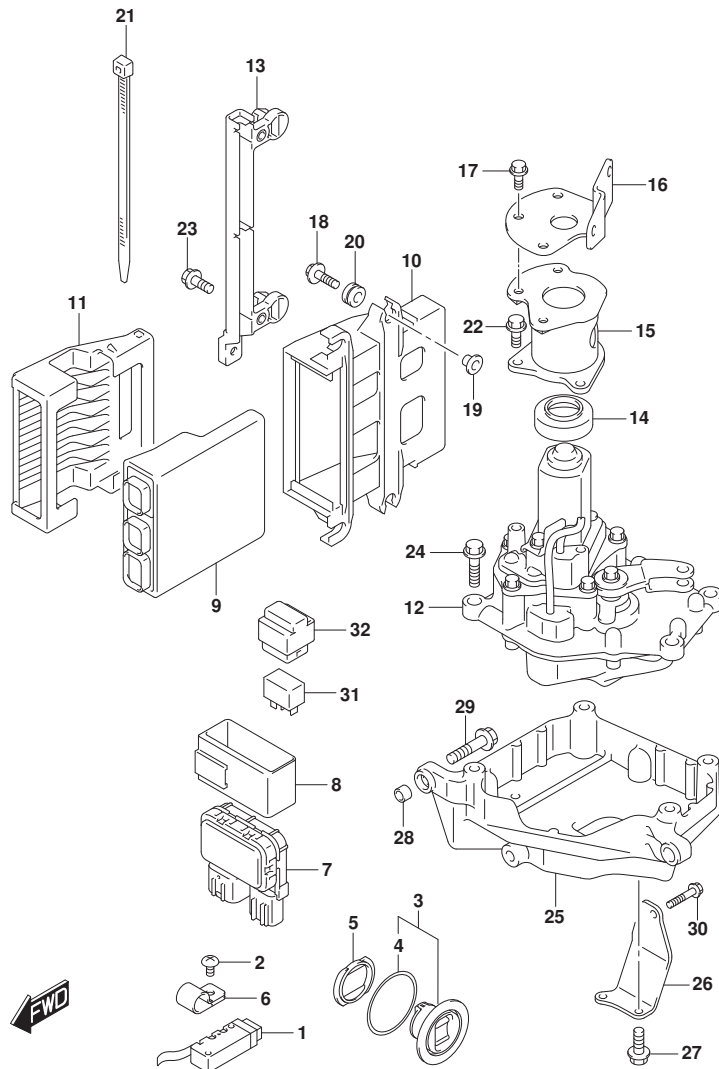


FIG.326A (1-D-15) PTT SWITCH/ENGINE CONTROL UNIT (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J12	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J21	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L50	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET, SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET, ACTE UPPER	1	
17	01550-0612C	BOLT	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER	2	
20	09320-09016	CUSHION	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT	3	
23	01550-0625C	BOLT	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER, ACTUATOR	1	
26	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY, ACTUATOR	2	
32	38915-90J00	HOLDER, RELAY	2	

DF350A E01

FIG.326B

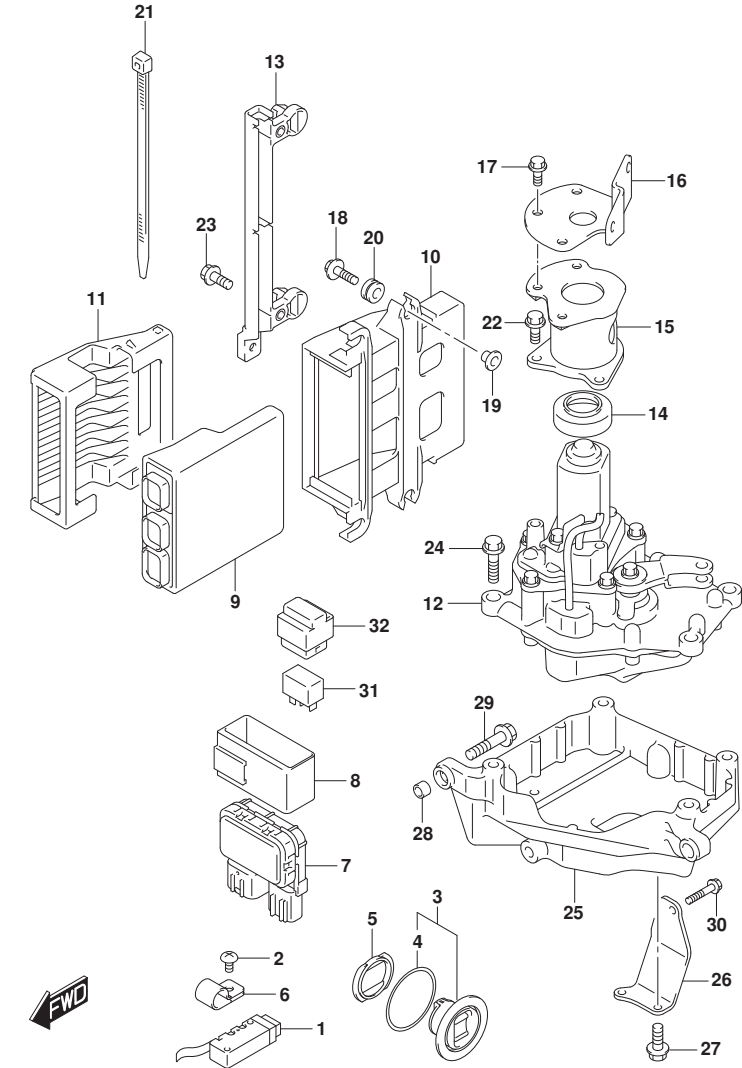


DF350A_E01_019_326B
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326B (1-E-2) PTT SWITCH/ENGINE CONTROL UNIT (DF325A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J12	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J21	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L60	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET, SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET, ACTE UPPER	1	
17	01550-0612C	BOLT	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER	2	
20	09320-09016	CUSHION	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT	3	
23	01550-0625C	BOLT	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER, ACTUATOR	1	
26	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY, ACTUATOR	2	
32	38915-90J00	HOLDER, RELAY	2	

DF325A E01

FIG.326C

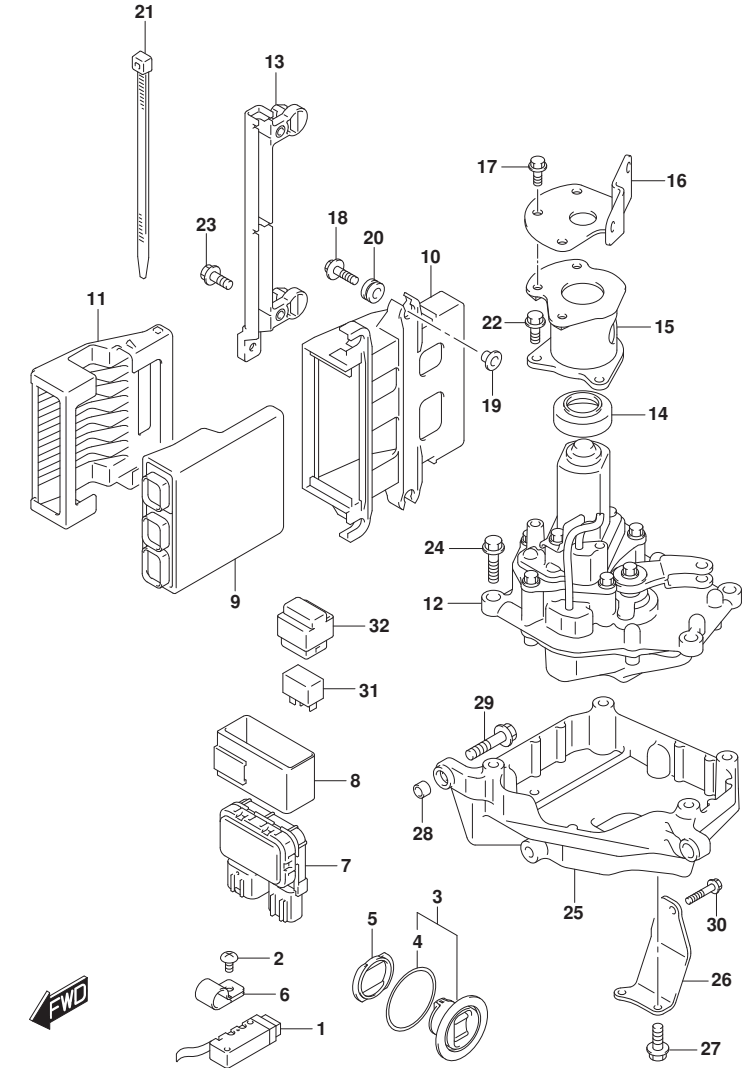

DF350A_E01_019_326C
PTT SWITCH/ENGINE CONTROL UNIT

FIG.326C (1-E-3) PTT SWITCH/ENGINE CONTROL UNIT (DF325A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37722-93J12	SWITCH ASSY, TILT LIMIT	1	
2	29125-93J00	SCREW, TILT LIMIT LEAD CLAMP	1	
3	37850-92J00	SWITCH ASSY, PTT	1	
4	37856-92J00	.TAPE, PTT SWITCH	1	
5	37857-92J00	BUSH, PTT SWITCH	1	
6	09403-09316	CLAMP	1	
7	38410-93J21	RELAY ASSY, PTT	1	
8	38415-93J20	HOLDER, PTT RELAY	1	
9	33920-98L70	UNIT, ENGINE CONTROL	1	
10	33924-98L00	HOLDER, ENGINE CONTROL UNIT	1	
11	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
12	38800-98L00	ACTUATOR ASSY, SHIFT	1	
13	38831-98L00	GUIDE, ACTUATOR CABLE	1	
14	38892-98L00	DAMPER, SHIFT ACTUATOR	1	
15	38895-98L11	BRACKET, SHIFT ACTUATOR	1	
16	38895-98L20	BRACKET, ACTE UPPER	1	
17	01550-0612C	BOLT	3	
18	09116-06215	BOLT (6X30)	2	
19	09169-06062	WASHER	2	
20	09320-09016	CUSHION	4	
21	09407-14407	CLAMP (L:145)	2	
22	01550-0616C	BOLT	3	
23	01550-0625C	BOLT	2	
24	01560-0830C	BOLT	4	
25	19115-98L00	HOLDER, ACTUATOR	1	
26	19116-98L00	BRACKET, ACTUATOR HOLDER	1	
27	09116-08137	BOLT (8X22)	2	
28	09206-11006	PIN (8.4X11X8)	2	
29	01550-0835C	BOLT	3	
30	01550-0840C	BOLT	1	
31	38860-76F01	RELAY, ACTUATOR	2	
32	38915-90J00	HOLDER, RELAY	2	

DF325A E40

FIG.331A

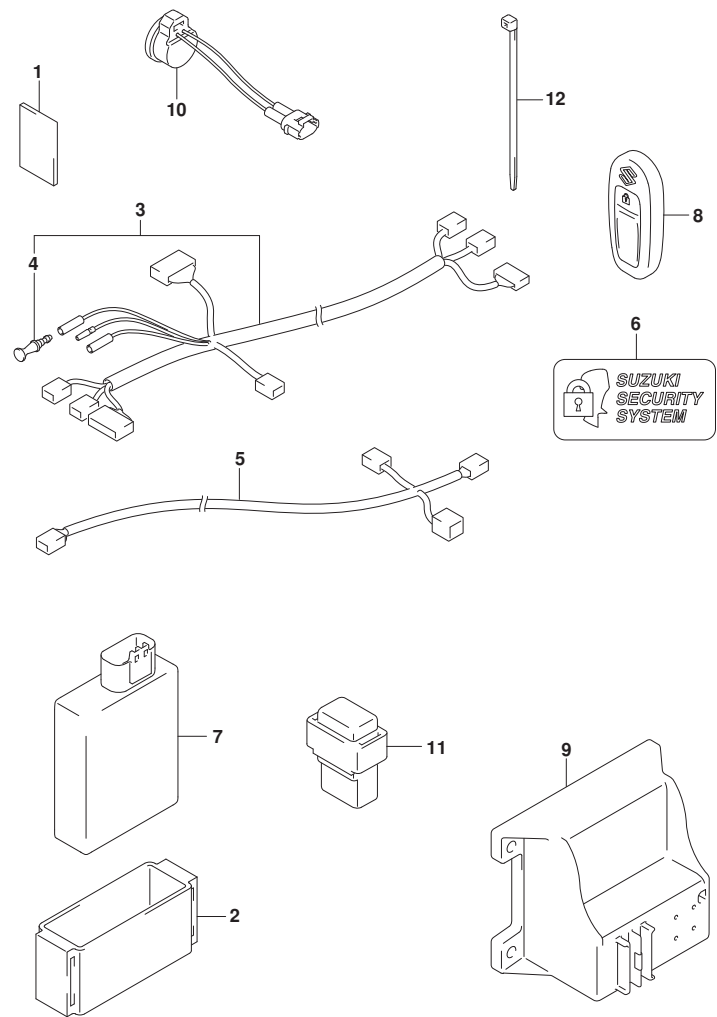


FIG.331A (1-E-4) KEY LESS START (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32851-93J00	CUSHION, KLS CONTROLLER	1	
2	32980-38F00	HOLDER, KLS CONTROLLER	1	
3	36623-96L01	HARNESS ASSY, KLS CONT	1	
4	36615-96300	.TERMINAL, RESIN	1	
5	36662-96L00	HARNESS ASSY, KLS CAN	1	L:6500+110
6	37117-96L00	DECAL, KLS	2	
7	37171-96L02	CONTROLLER ASSY, KLS 433MHZ	1	
8	37172-96L01	REMOCON ASSY, KLS 433MHZ	2	
9	37173-96L10	HOLDER, KLS PARTS	1	
10	38500-93J90	BUZZER ASSY	1	
11	38860-96L01	RELAY ASSY, KLS	1	
12	09407-14407	CLAMP (L:145)	1	

DF350A E01
DF325A E01

FIG.335A


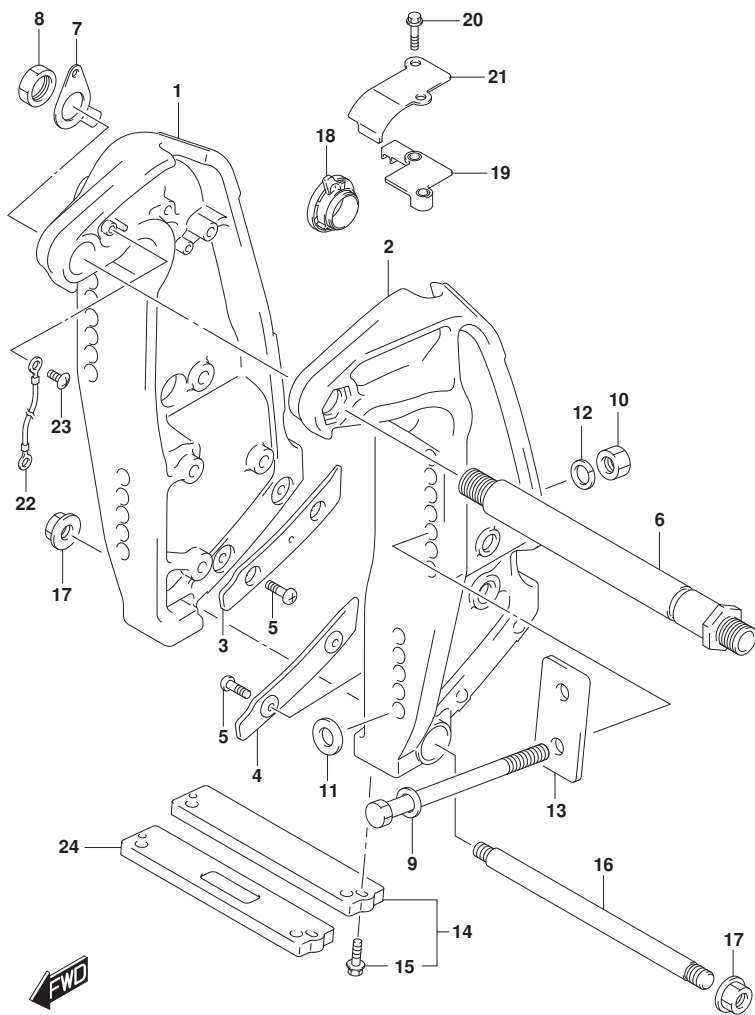


FIG.335A (1-E-5) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-98L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-98L00-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-98L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-98L00-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41117-93J02	PLATE, CLAMP BRKT LOWER STBD	1	
4	41122-93J02	PLATE, CLAMP BRKT LOWER PORT	1	
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT, CLAMP BRKT	1	
7	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT	1	
9-1	09100-12086	BOLT (12.7X150)	6	
9-2	09100-12085	BOLT (12.7X115)	1	OPT
9-3	09100-12092	BOLT (12.7X75)	1	OPT
9-4	09100-12125	BOLT (12.7X170)	1	OPT
9-5	09100-12126	BOLT (12.7X190)	1	OPT
10	09159-12062	NUT	6	
11	09160-13022	WASHER (13.2X45X3)	4	
12	09160-13021	WASHER (13.2X26X3)	6	
13	41155-93J02	PLATE, TRANSOM	2	
14	55320-94900	ANODE SET, PROTECTION	1	
15	09116-06121	.BOLT (6X25)	2	
16	45421-87D03	PIN, TILT LOCK	1	
17	09159-14020	NUT	2	
18	48140-93J01	CAM, TILT LIMIT SWITCH	1	
19	48144-93J00	HOLDER, TILT LIMIT SWITCH	1	
20	09103-06278	BOLT (6X25)	2	
21	48145-93J00	COVER, TILT LIMIT SWITCH	1	
22	36894-87D00	LEAD (CLAMP TO SWIVEL)	1	
23	09125-06063	SCREW (6X10)	2	
24	55321-94910	ANODE (MAGNESIUM)	1	OPT

FIG.336A

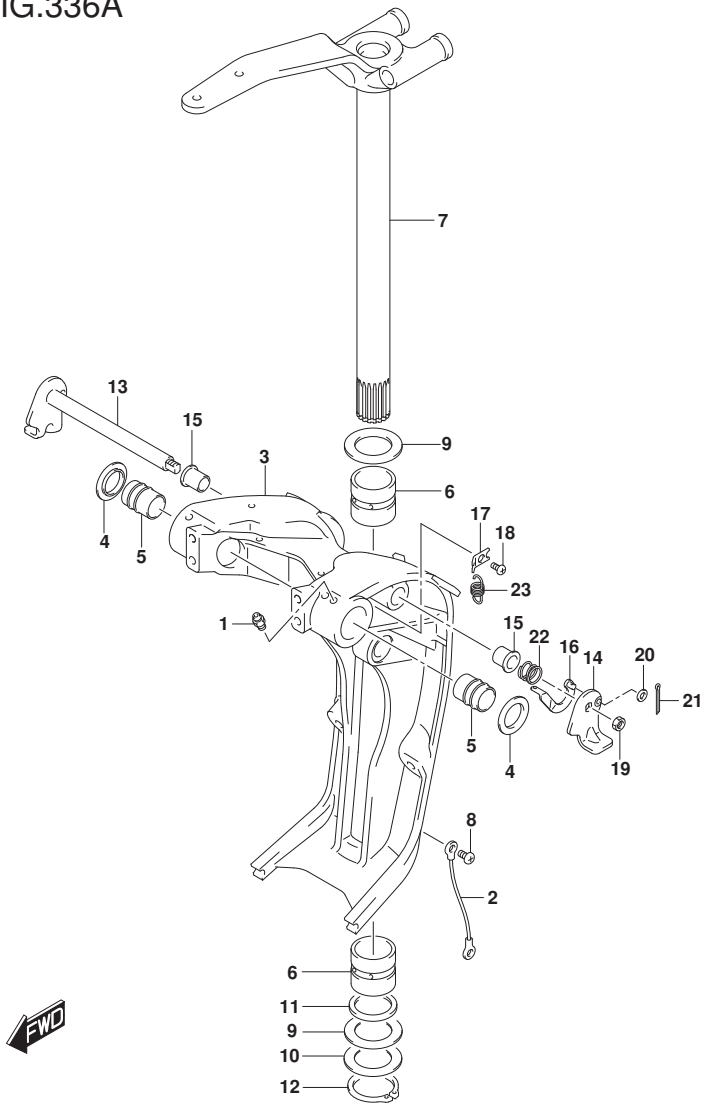

DF350A_E01_019_336A
SWIVEL BRACKET

FIG.336A (1-E-6) SWIVEL BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE SWIVEL BRKT	4	
2	36894-87D00	LEAD (SWIVEL TO MOUNT BRKT)	1	
3-1	43111-93J24-YAY	BRACKET, SWIVEL (BLACK)	1	
3-2	43111-93J24-Y5S	BRACKET, SWIVEL (WHITE)	1	
4	43114-93J00	WASHER, SWIVEL TO CLAMP BRKT	2	
5	43211-93J00	BUSH, CLAMP SHAFT SWIVEL	2	
6	43711-97E01	BUSH, STEERING	2	
7-1	43750-93J21-YAY	BRACKET, STEERING (BLACK)	1	
7-2	43750-93J21-Y5S	BRACKET, STEERING (WHITE)	1	
8	09125-06063	SCREW (6X10)	1	
9	09160-39004	WASHER (39.5X65.5X1)	2	
10	09181-39001	SHIM (39.5X64X0.3)	AR	
11	09282-39001	OIL SEAL (39X51X5)	1	
12	09380-38003	CIRCLIP	1	
13	41220-93J11	LEVER, TILT LOCK	1	
14	41234-93J11	LEVER, TILT LOCK PORT	1	
15	41224-95E01	BUSH, TILT STOPPER ROD	2	
16	41230-96J00	LINK, TILT LOCK LEVER	1	
17	41233-95E10	BRACKET, TILT LOCK SPRING	1	
18	09125-06063	SCREW (6X10)	1	
19	09140-10032	NUT	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09204-01006	PIN	1	
22	09440-19028	SPRING	1	
23	09443-10043	SPRING	1	

FIG.337A

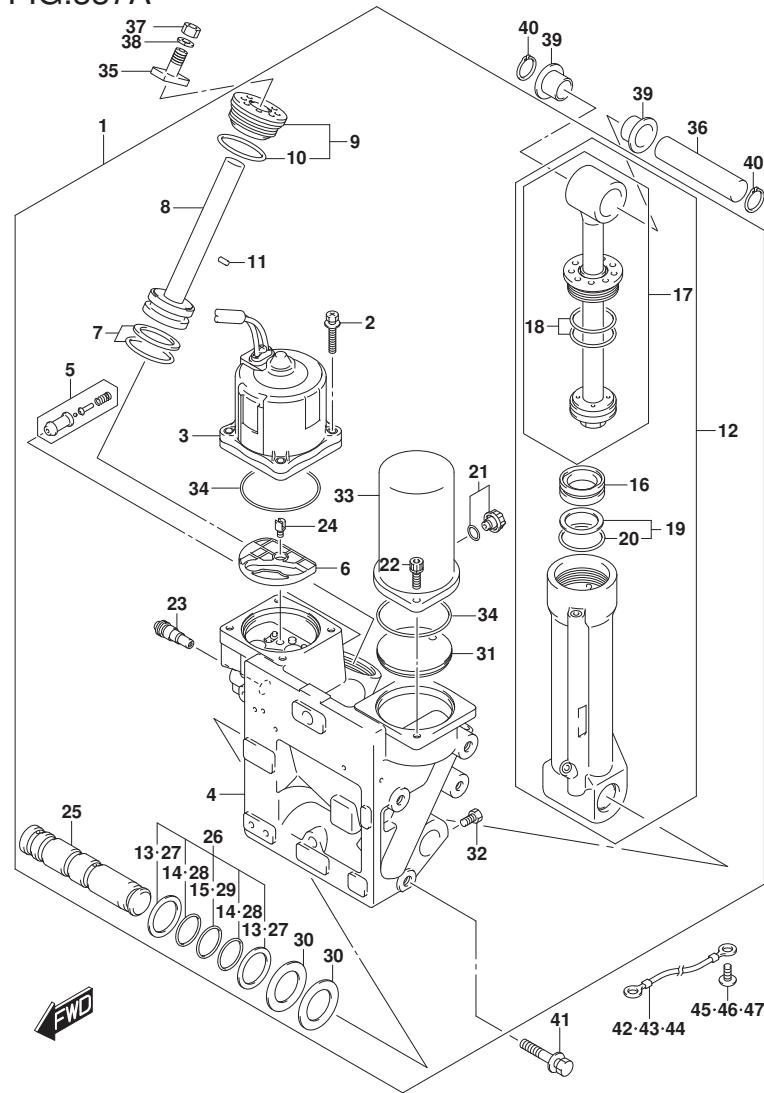


FIG.337A (1-E-7) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-98L01	TRIM ASSY, POWER WITH TILT	1	
2	31281-92J10	..BOLT	4	
3	38100-98L00	..MOTOR ASSY, PTT	1	
4	48500-98L01	..MANIFOLD ASSY	1	
5	48320-93J00	..VALVE SET, UP BLOW	1	
6	48582-95E01	..FILTER	1	
7	48605-93J00	..O RING SET	1	
8	48610-98L00	..PISTON / RAM	2	
9	48630-98L01	..ROD GUIDE	2	
10	48633-93J00	...O RING	2	
11	48691-93J00	..CHECK VALVE	1	
12	48400-98L00	..CYLINDER ASSY	1	
13	48451-93J00	..BACK UP RING	2	
14	48452-93J00	..O RING	2	
15	48452-93J10	..O RING	1	
16	48650-93J00	..PISTON, FREE	1	
17	48401-98L00	..PISTON ROD SUB ASSY	1	
18	48427-87D00	...O RING, PISTON	1	
19	48627-93J00	..O RING SET	1	
20	48427-87D00	...O RING, PISTON	1	
21	48572-87J10	..PLUG	1	
22	48862-87J20	..BOLT, RESERVOIR	2	
23	48864-93J01	..MANUAL VALVE	1	
24	48583-95E00	..JOINT, DRIVE	1	
25	48121-93J20	..SHAFT	1	
26	48125-93J10	..O RING SET	1	
27	48451-93J00	..BACK UP RING	4	
28	48452-93J00	..O RING	4	
29	48452-93J10	..O RING	2	
30	48126-93J00	..WASHER, TILT CYL TO MANIF	2	
31	48573-93J00	..COVER	1	
32	48128-93J11	..BOLT	1	
33	48571-93J00	..RESERVOIR TANK	1	
34	48585-95E00	..O RING	2	

FIG.337A

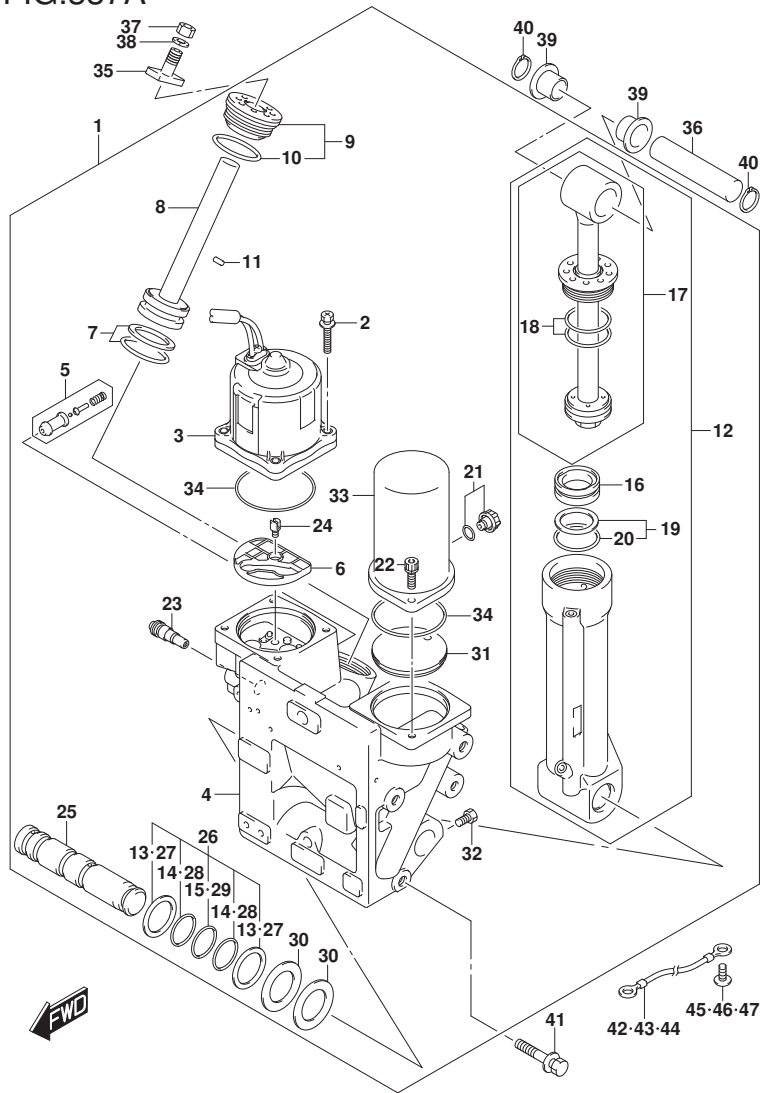


FIG.337A (1-E-8) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	48311-93J01	PAD, TRIM CYL RAM	2	
36	48321-93J00	SHAFT, TILT CYL UPPER	1	
37	09140-10031	NUT	2	
38	09162-10005	LOCK WASHER	2	
39	09306-24001	BUSH	2	
40	09380-21002	CIRCLIP	2	
41	09116-10175	BOLT (10X50)	8	
42	36894-87D00	LEAD, PTT TO ANODE (L:165)	1	
43	36895-87D01	LEAD, PTT TO ANODE (L:230)	1	
44	36895-87D01	LEAD, PTT TO ANODE (L:230)	1	
45	09125-06063	SCREW (6X10)	1	
46	09125-06063	SCREW (6X10)	1	
47	09125-06063	SCREW (6X10)	1	

FIG.340A

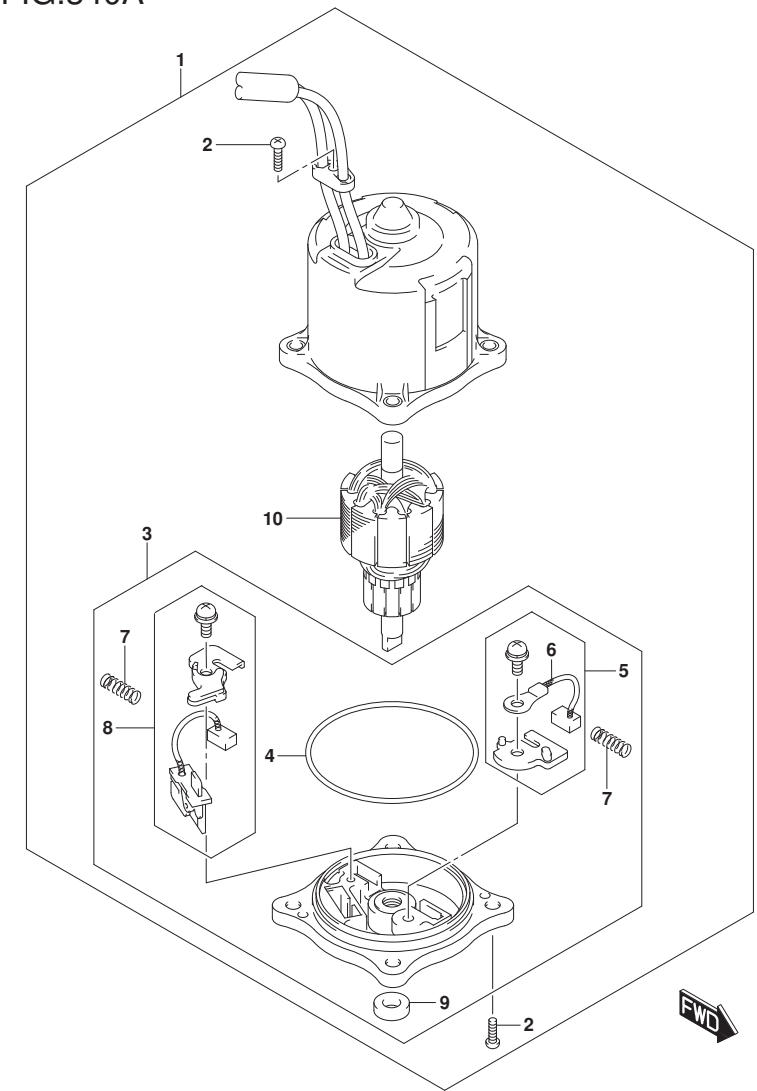


FIG.340A (1-E-9) PTT MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-98L00	MOTOR ASSY, PTT	1	
2	31111-94900	.SCREW, YOKE	3	
3	31173-94920	.HOLDER ASSY, BRUSH	1	
4	31123-94910	..O RING	1	
5	31133-90J10	..BRUSH SET, PLUS	1	
6	31133-94910	...BRUSH	1	
7	31135-94900	..SPRING	2	
8	31136-90J20	..BREAKER	1	
9	33799-97E00	..OIL SEAL	1	
10	31311-93J00	..ARMATURE	1	

FIG.401A

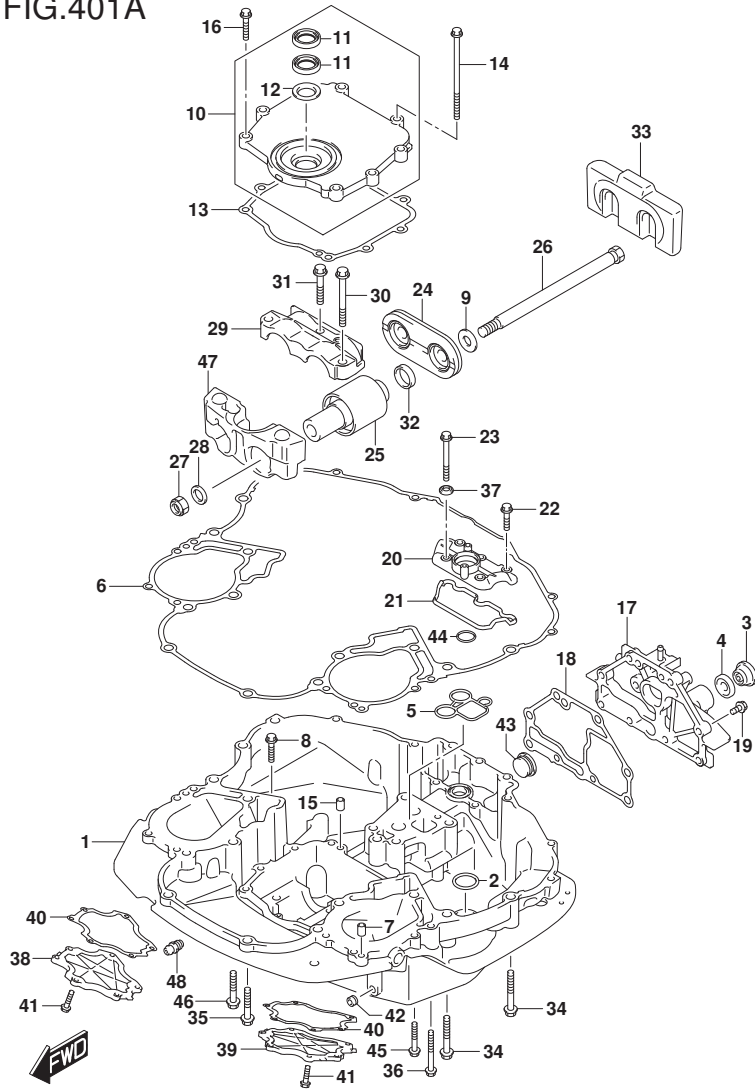


FIG.401A (1-E-10) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	51111-98L00-YAY	HOLDER, ENGINE (BLACK)	1	
1-2	51111-98L00-Y5S	HOLDER, ENGINE (WHITE)	1	
2	16519-93J00	SEAL, ENGINE HOLDER OIL	1	
3	17913-93J00	PLUG, WATER	1	
4	17914-93J00	GASKET, WATER PLUG	1	
5	51116-98L00	SEAL, WATER RETURN	1	
6	51211-98L00	GASKET, ENGINE HOLDER	1	
7	09206-08001	PIN (8X11)	2	
8	01550-1050A	BOLT	4	
9	09160-14076	WASHER (14.5X32X3)	2	
10	51120-98L00	COVER, MOUNT OIL SEAL	1	
11	51124-93J01	.OIL SEAL	2	
12	51125-93J00	.SCRAPER	1	
13	51123-98L00	GASKET, MOUNT OIL SEAL COVER	1	
14	09103-08109	BOLT (8X120)	2	
15	09206-08001	PIN (8X11)	2	
16	01550-0830A	BOLT	6	
17	51140-98L00-019	COVER, ENGINE HOLDER (BLACK)	1	
18	51142-98L00	GASKET, ENGINE HOLDER COVER	1	
19	09116-08122	BOLT (8X30)	8	
20	51151-98L00	COVER, ENGINE HOLDER UPPER	1	
21	51152-98L00	SEAL, ENGINE HOLDER UPPER COV	1	
22	01550-0830C	BOLT	3	
23	01550-08607	BOLT	2	
24	54120-98L00	PLATE, UPPER MOUNT	1	
25	54130-98L01	MOUNT, UPPER	2	
26	54112-93J00	BOLT, UPPER MOUNT	2	
27	29159-93J00	NUT, UPPER MOUNT BOLT	2	
28	09160-15051	WASHER (15X24X3)	2	
29	54137-93J02	COVER, UPPER MOUNT	1	
30	09116-10135	BOLT (10X95)	2	
31	09116-10175	BOLT (10X50)	1	
32	54127-98L00	MOUNT, UPPER SIDE	2	
33	54140-98J10	MOUNT, UPPER THRUST REVERSE	1	

FIG.401A

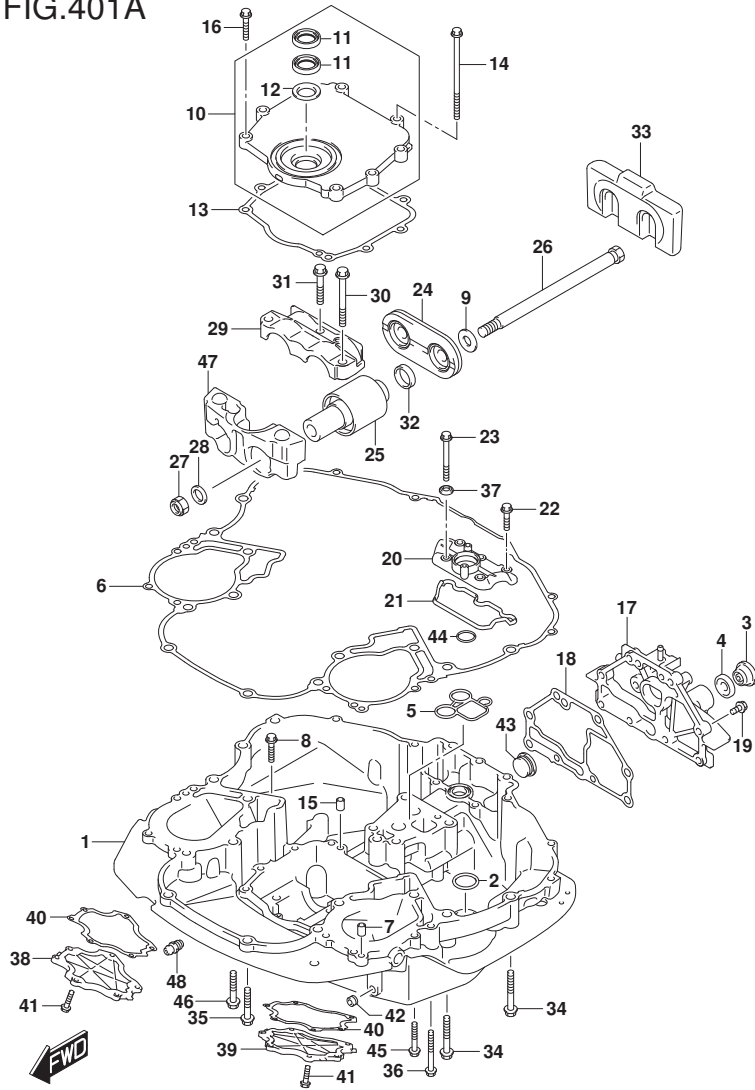


FIG.401A (1-E-11) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	09116-10137	BOLT (10X70)	6	
35	09116-10175	BOLT (10X50)	4	
36	09116-08126	BOLT (8X65)	2	
37	09169-08038	WASHER	2	
38	51161-98L00	COVER, ENG HLDR WATER JKT STBD	1	
39	51165-98L00	COVER, ENG HLDR WATER JKT PORT	1	
40	51162-98L00	GASKET, ENG HLDR WATER JKT COV	2	
41	09116-06516	BOLT (6X25)	12	
42	09246-08006	PLUG	2	
43	09248-26003	PLUG	1	
44	09280-26014	O RING (D:2.4,ID:25.8)	1	
45	09116-08131	BOLT (8X45)	4	
46	09116-10135	BOLT (10X95)	2	
47	54180-98L00	MOUNT, UPPER SIDE	1	
48	22511-99011	NIPPLE, GREASE	1	

FIG.405A

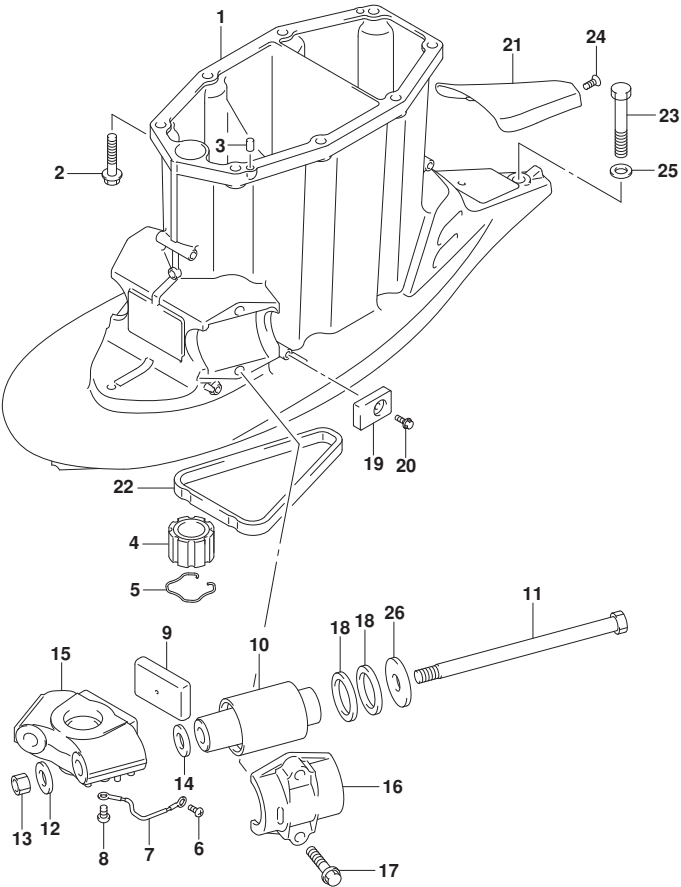


FIG.405A (1-E-12) DRIVE SHAFT HOUSING (X)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	
1-2	52111-98L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD, MT BRKT TO HSG	1	
8	09125-06063	SCREW (6X10)	1	
9	54151-98L00	MOUNT, LOWER THRUST	1	
10	54160-98L00	MOUNT, LOWER	2	
11	54112-93J00	BOLT, LOWER MOUNT	2	
12	09160-14073	WASHER (14.5X34X3)	2	
13	29159-93J00	NUT, LOWER MOUNT BOLT	2	
14	09160-14073	WASHER (14.5X34X3)	2	
15-1	54211-98L00-YAY	BRACKET, LOWER MOUNT (BLACK)	1	
15-2	54211-98L00-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	
16-1	54221-93J00-YAY	COVER, LOWER MOUNT (BLACK)	2	
16-2	54221-93J00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
17	09116-10175	BOLT (10X50)	4	
18	54165-98L00	STOPPER, LOWER THRUST REVERSE	4	
19	55321-93J01	ANODE, PROTECTION	1	
20	09116-06236	BOLT (6X16)	1	
21-1	52115-98L00-YAY	CAP, DRIVE SHAFT HOUSING (BLACK)	1	
21-2	52115-98L00-Y5S	CAP, DRIVE SHAFT HOUSING (WHITE)	1	
22	52118-98L00	SEAL, DRIVE SHAFT HOUSING	1	
23	09100-12124	BOLT (12X75)	2	
24	09120-06016	SCREW (M6)	1	
25	09160-12066	WASHER (12.5X22X2.5)	2	
26	09160-16055	WASHER (16X50X4)	2	

FIG.405B


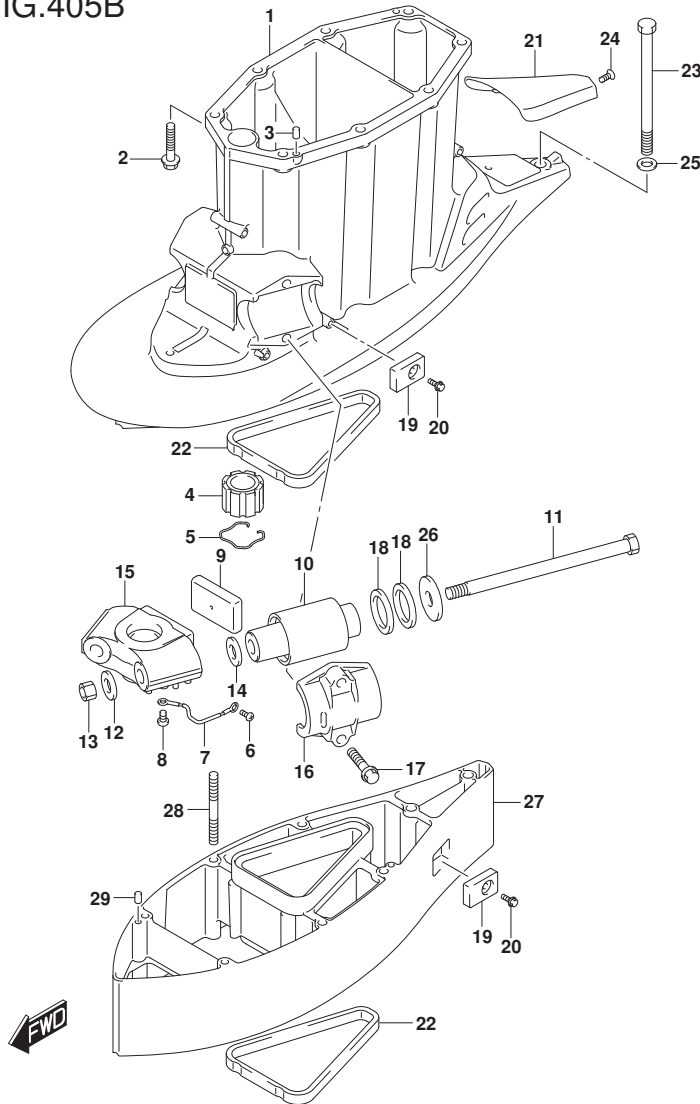


FIG.405B (1-E-13) DRIVE SHAFT HOUSING (XX)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98L00-YAY	HOUSING, DRIVE SHAFT (BLACK)	1	
1-2	52111-98L00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD, MT BRKT TO HSG	1	
8	09125-06063	SCREW (6X10)	1	
9	54151-98L00	MOUNT, LOWER THRUST	1	
10	54160-98L00	MOUNT, LOWER	2	
11	54112-93J00	BOLT, LOWER MOUNT	2	
12	09160-14073	WASHER (14.5X34X3)	2	
13	29159-93J00	NUT, LOWER MOUNT BOLT	2	
14	09160-14073	WASHER (14.5X34X3)	2	
15-1	54211-98L00-YAY	BRACKET, LOWER MOUNT (BLACK)	1	
15-2	54211-98L00-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	
16-1	54221-93J00-YAY	COVER, LOWER MOUNT (BLACK)	2	
16-2	54221-93J00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
17	09116-10175	BOLT (10X50)	4	
18	54165-98L00	STOPPER, LOWER THRUST REVERSE	4	
19	55321-93J01	ANODE, PROTECTION	2	
20	09116-06236	BOLT (6X16)	2	
21-1	52115-98L00-YAY	CAP, DRIVE SHAFT HOUSING (BLACK)	1	
21-2	52115-98L00-Y5S	CAP, DRIVE SHAFT HOUSING (WHITE)	1	
22	52118-98L00	SEAL, DRIVE SHAFT HOUSING	2	
23	54166-95J02	BOLT EXTENSION CASE	2	
24	09120-06016	SCREW (M6)	1	
25	09160-12066	WASHER (12.5X22X2.5)	2	
26	09160-16055	WASHER (16X50X4)	2	
27-1	52131-98L00-YAY	CASE, EXTENSION (XX) (BLACK)	1	
27-2	52131-98L00-Y5S	CASE, EXTENSION (XX) (WHITE)	1	
28	09108-10115	BOLT	6	
29	09202-08006	PIN (8X12)	2	

FIG.407A

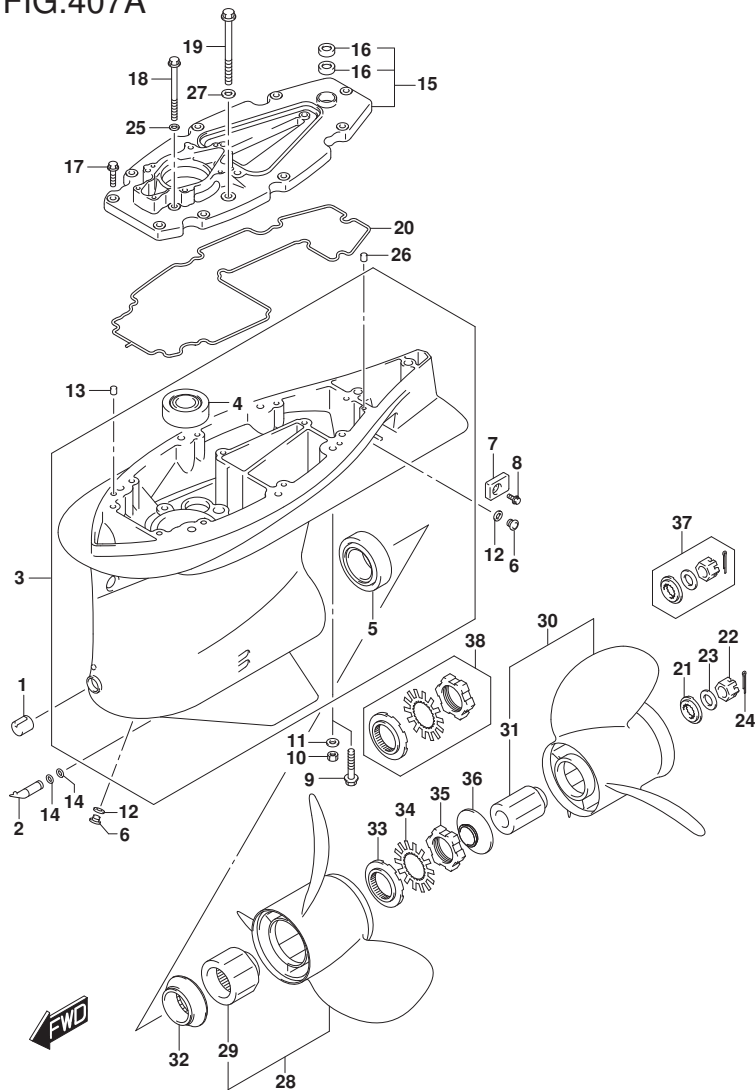

DF350A_E01_019_407A
GEAR CASE

FIG.407A (1-E-14) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17631-98L02	FILTER, WATER	1	
2	17635-98L00	FILTER, SUB WATER	2	
3-1	55100-98850-YAY	CASE SET, GEAR (BLACK)	1	INCLUDE FIG.220A REF29
3-2	55100-98850-Y5S	CASE SET, GEAR (WHITE)	1	INCLUDE FIG.220A REF29
4	57710-98L00	.BEARING ASSY, CONTRA PINION	1	
5	09265-50001	.BEARING (50X90X32)	1	
6	55128-93L00	PLUG, DRAIN	3	
7	55321-93J01	ANODE, PROTECTION	2	
8	09116-06236	BOLT (6X16)	2	
9	09116-10150	BOLT (10X55)	6	W/TRANSOM(X)
10	09140-10031	NUT	6	W/TRANSOM(XX)
11	09160-10141	WASHER (10.5X19X2)	6	W/TRANSOM(XX)
12	09168-10034	GASKET (9.5X16.5X2)	3	
13	09202-08006	PIN (8X12)	2	
14	09280-10012	O RING (D:1.5,ID:10)	2	
15	56130-98L12	HOUSING, DRIVE SFT BRG	1	INCLUDE FIG.220A REF38
16	09282-15010	.OIL SEAL (14.7X25X6.5)	2	
17	29116-93J10	BOLT, DRIVE SHAFT BRG HOUSIN	11	
18	09103-08552	BOLT (8X105)	2	
19	09103-10461	BOLT (10X107)	3	
20	55122-98L00	SEAL, DRIVE SHAFT BRG HSG	1	
21	58641-98L00	SPACER, REAR PROPELLER NUT	1	
22	09141-18005	NUT	1	
23	09160-18019	WASHER (18.5X32X2.5)	1	
24	09204-03003	PIN	1	
25	09169-08038	WASHER	2	
26	09202-06031	PIN (6X12)	1	
27	09169-10023	WASHER	3	
28-1	58500-98L00	PROPELLER, FR (3X15-1/2X21)	1	
28-2	58500-98L10	PROPELLER, FR (3X15-1/2X22.5)	1	
28-3	58500-98L20	PROPELLER, FR (3X15-1/2X24)	1	
28-4	58500-98L30	PROPELLER, FR (3X15-1/2X25.5)	1	
28-5	58500-98L40	PROPELLER, FR (3X15-1/2X27)	1	
28-6	58500-98L50	PROPELLER, FR (3X15-1/2X28.5)	1	

FIG.407A

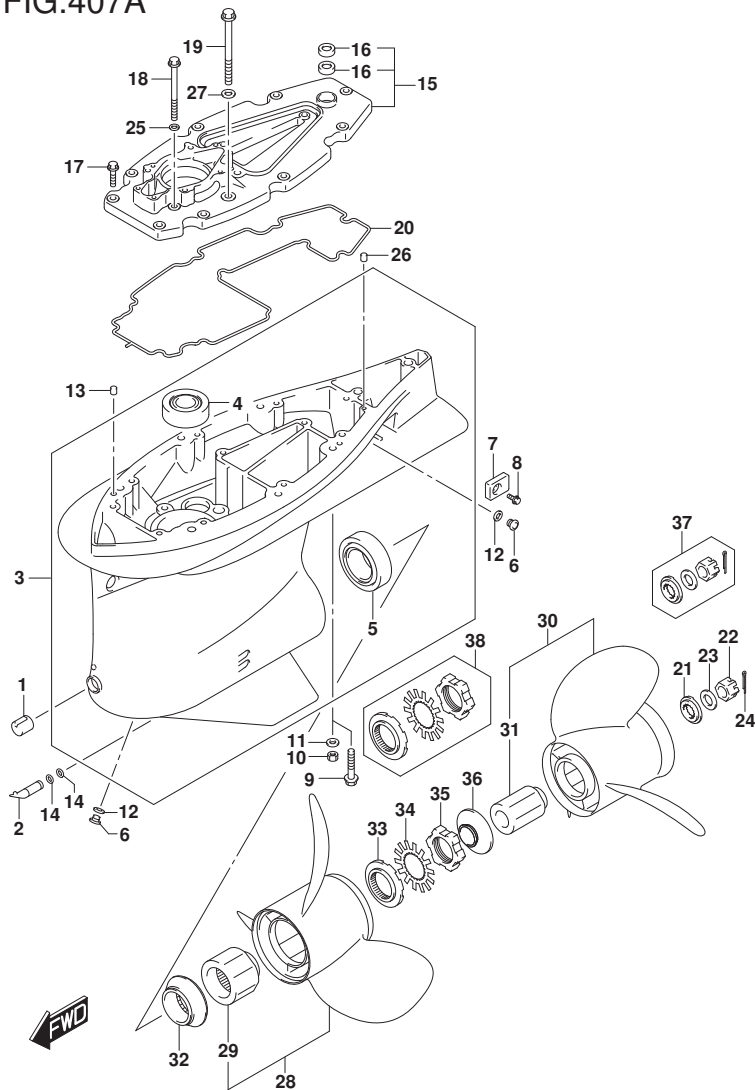


FIG.407A (1-E-15) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28-7	58500-98L60	PROPELLER, FR (3X15-1/2X19.5)	1	
28-8	58500-98L70	PROPELLER, FR (3X15-1/2X30)	1	
28-9	58500-98L80	PROPELLER, FR (3X15-1/2X31.5)	1	
28-10	58500-98L90	PROPELLER, FR (3X15-1/2X18)	1	
28-11	58500-98LA0	PROPELLER, FR (3X15-1/2X12)	1	
28-12	58500-98LB0	PROPELLER, FR (3X15-1/2X15)	1	
28-13	58500-98LC0	PROPELLER, FR (3X15-1/2X16.5)	1	
29	58520-98L00	.BUSH, FRONT PROPELLER	1	
30-1	58600-98L00	PROPELLER, RR (3X15-1/2X21)	1	
30-2	58600-98L10	PROPELLER, RR (3X15-1/2X22.5)	1	
30-3	58600-98L20	PROPELLER, RR (3X15-1/2X24)	1	
30-4	58600-98L30	PROPELLER, RR (3X15-1/2X25.5)	1	
30-5	58600-98L40	PROPELLER, RR (3X15-1/2X27)	1	
30-6	58600-98L50	PROPELLER, RR (3X15-1/2X28.5)	1	
30-7	58600-98L60	PROPELLER, RR (3X15-1/2X19.5)	1	
30-8	58600-98L70	PROPELLER, RR (3X15-1/2X30)	1	
30-9	58600-98L80	PROPELLER, RR (3X15-1/2X31.5)	1	
30-10	58600-98L90	PROPELLER, RR (3X15-1/2X18)	1	
30-11	58600-98LA0	PROPELLER, RR (3X15-1/2X12)	1	
30-12	58600-98LB0	PROPELLER, RR (3X15-1/2X15)	1	
30-13	58600-98LC0	PROPELLER, RR (3X15-1/2X16.5)	1	
31	58620-98L00	.BUSH, REAR PROPELLER	1	
32	58531-98L00	STOPPER, FRONT PROPELLER BUSH	1	
33	58541-98L00	SPACER, FRONT PROPELLER NUT	1	
34	58551-98L00	STOPPER, FRONT PROPELLER NUT	1	
35	58561-98L00	NUT, FRONT PROPELLER	1	
36	58631-98L00	STOPPER, REAR PROPELLER BUSH	1	
37	58640-98L00	KIT, REAR PROPELLER NUT	1	OPT
38	58540-98L00	KIT, FRONT PROPELLER NUT	1	OPT
39	25700-98L01	KIT, GEAR CASE SEALING	1	OPT NOT ILLUSTRATED

FIG.410A

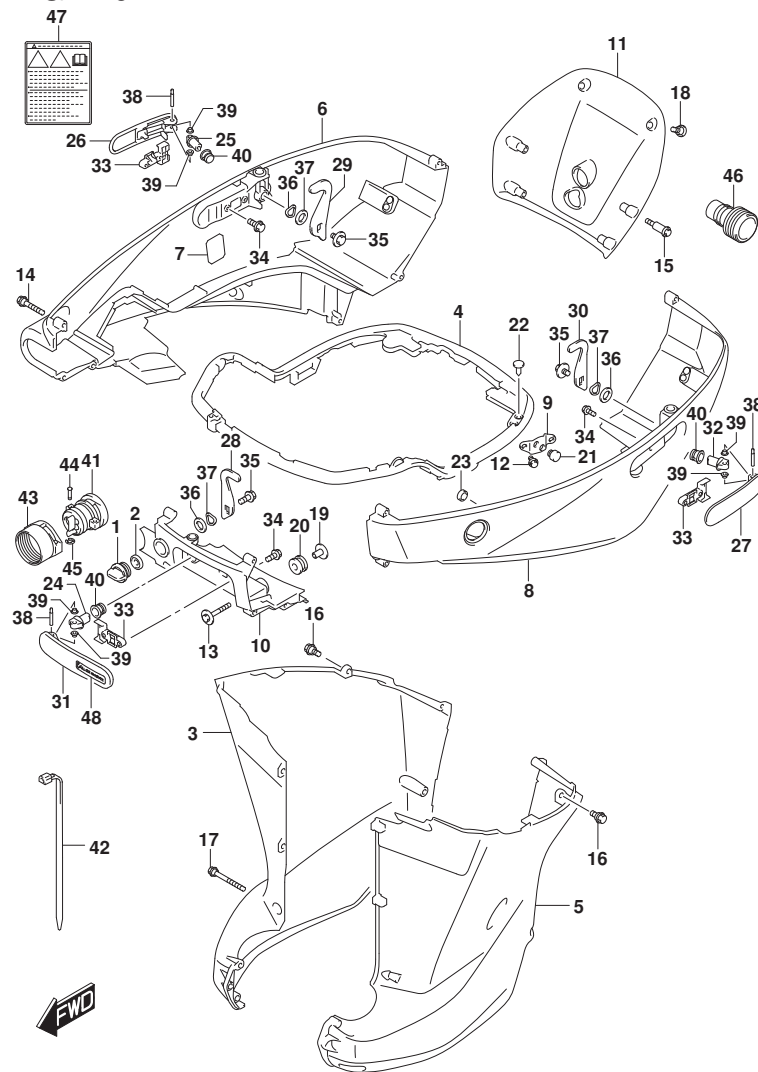


FIG.410A (1-F-2) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17913-93J00	PLUG, WATER	1	
2	17914-93J00	GASKET, WATER PLUG	1	
3-1	61131-98L01-YAY	COVER, OIL PAN STBD (BLACK)	1	UP TO VIN.910017 FOR DF350A UP TO VIN.910004 FOR DF325A
3-2	61131-98L01-Y5S	COVER, OIL PAN STBD (WHITE)	1	UP TO VIN.910017 FOR DF350A UP TO VIN.910004 FOR DF325A
3-3	61131-98L02-YAY	COVER, OIL PAN STBD (BLACK)	1	FROM VIN.910018 FOR DF350A FROM VIN.910005 FOR DF325A
3-4	61131-98L02-Y5S	COVER, OIL PAN STBD (WHITE)	1	FROM VIN.910018 FOR DF350A FROM VIN.910005 FOR DF325A
4	61134-98L00	SEAL, ENGINE HOLDER	1	
5-1	61140-98L01-YAY	COVER, OIL PAN PORT (BLACK)	1	UP TO VIN.910017 FOR DF350A UP TO VIN.910004 FOR DF325A ->61140-98801-YAY COVER SET, OIL PAN STBD/PORT
5-2	61140-98L01-Y5S	COVER, OIL PAN PORT (WHITE)	1	UP TO VIN.910017 FOR DF350A UP TO VIN.910004 FOR DF325A ->61140-98801-Y5S COVER SET, OIL PAN STBD/PORT
5-3	61140-98L02-YAY	COVER, OIL PAN PORT (BLACK)	1	FROM VIN.910018 FOR DF350A FROM VIN.910005 FOR DF325A
5-4	61140-98L02-Y5S	COVER, OIL PAN PORT (WHITE)	1	FROM VIN.910018 FOR DF350A FROM VIN.910005 FOR DF325A
6-1	61810-98L00-YAY	COVER, SIDE STBD (BLACK)	1	
6-2	61810-98L00-Y5S	COVER, SIDE STBD (WHITE)	1	
7	61814-98L00	PROTECTOR, SIDE COVER	2	
8-1	61820-98L00-YAY	COVER, SIDE PORT (BLACK)	1	
8-2	61820-98L00-Y5S	COVER, SIDE PORT (WHITE)	1	
9	61827-98L00	HOLDER, SIDE COVER	1	
10-1	61830-98L00-YAY	PANEL, FRONT (BLACK)	1	
10-2	61830-98L00-Y5S	PANEL, FRONT (WHITE)	1	
11	61861-98L00-20H	PANEL, REAR (SILVER)	1	
12	01550-0816C	BOLT	2	
13	09116-08170	BOLT (8X60)	2	
14	09136-06148	SCREW (6X35)	8	
15	09111-06253	BOLT (M6)	4	

FIG.410A

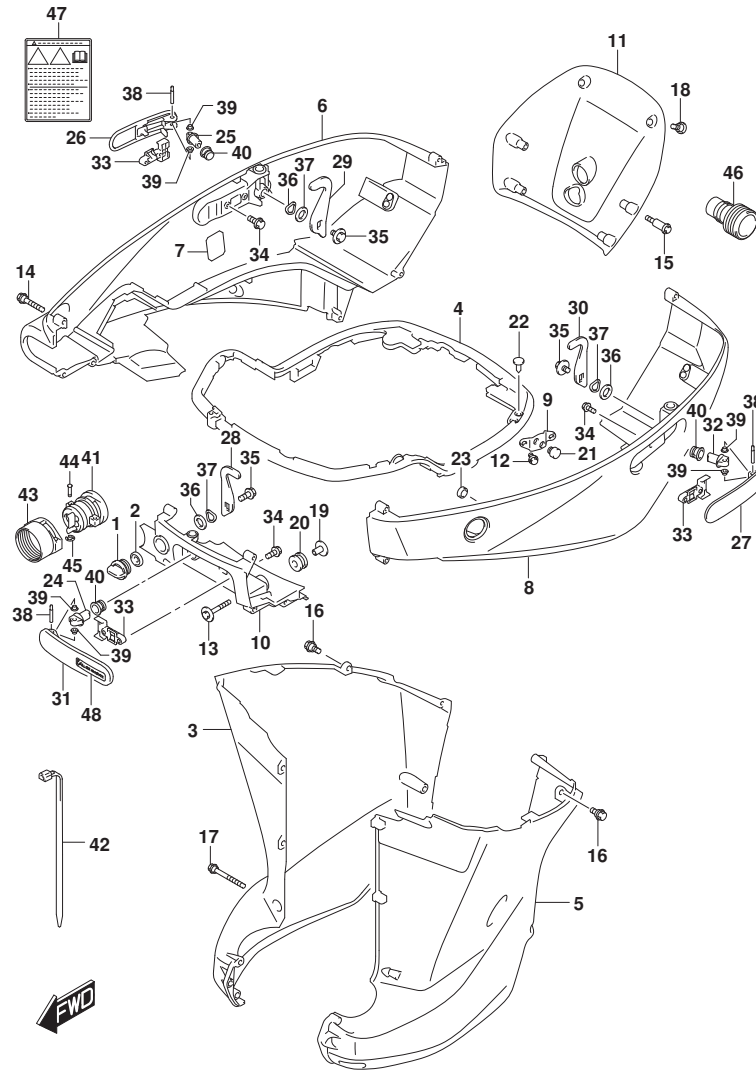


FIG.410A (1-F-3) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
16-1	09139-06135	SCREW (6X17)	8	UP TO VIN.910017 FOR DF350A UP TO VIN.910004 FOR DF325A
16-2	09139-06135	SCREW (6X17)	9	FROM VIN.910018 FOR DF350A FROM VIN.910005 FOR DF325A
17	09139-06136	SCREW (6X65)	2	
18	09139-06135	SCREW (6X17)	2	
19	09169-08050	WASHER, FRONT PANEL (ID:8.5)	2	
20	09320-11013	CUSHION	2	
21	09321-10030	CUSHION	2	
22	09409-05302-5PK	CLIP (BLACK)	2	
23	09329-14002	CUSHION	1	
24	61632-93J00	SHAFT, ENGINE COVER HOOK	1	
25	61632-98L00	SHAFT, ENGINE COVER HOOK STBD	1	
26-1	61633-93J00-YAY	LEVER, HOOK REAR STBD (BLACK)	1	
26-2	61633-93J00-Y5S	LEVER, HOOK REAR STBD (WHITE)	1	
27-1	61634-93J00-YAY	LEVER, HOOK REAR PORT (BLACK)	1	
27-2	61634-93J00-Y5S	LEVER, HOOK REAR PORT (WHITE)	1	
28	61641-93J10	HOOK, ENGINE COVER	1	
29	61641-93J10	HOOK, ENGINE COVER RR STBD	1	
30	61641-93J20	HOOK, ENGINE COVER RR PORT	1	
31-1	61645-93J01-YAY	LEVER, HOOK FRONT (BLACK)	1	
31-2	61645-93J01-Y5S	LEVER, HOOK FRONT (WHITE)	1	
32	61652-98L00	SHAFT, ENGINE COVER HOOK PORT	1	
33	61673-93J01	LATCH, HOOK LEVER	3	
34	09103-05026	BOLT (5X10)	6	
35	09116-06127	BOLT (6X12)	3	
36	09160-13014	WASHER (13.2X25X1)	3	
37	09164-14008	WASHER	3	
38	09202-04022	PIN	3	
39	09306-04005	BUSH	6	
40	09306-13007	BUSH	3	
41	61124-98L20	GROMMET, R/CON HARNESS	1	
42	09407-25402	CLAMP (L:250)	1	
43	67361-90J10	ADAPTER, HOSE (RIGGING)	1	
44	09208-06009	PIN	2	

FIG.410A

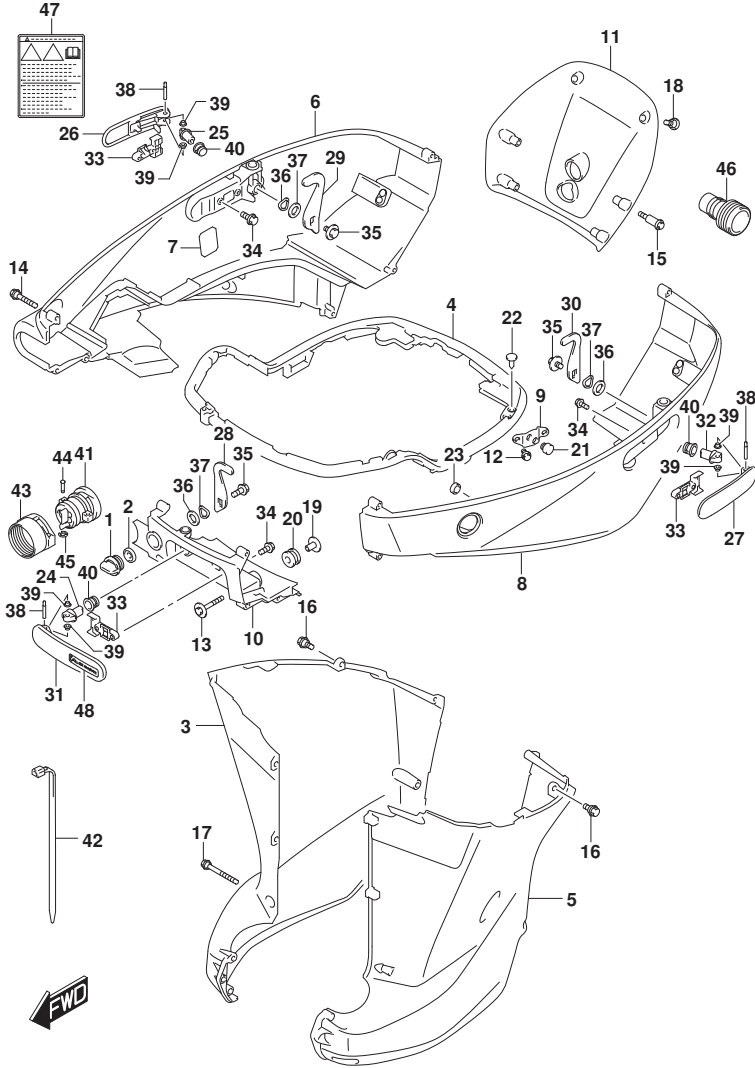


FIG.410A (1-F-4) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
45	09383-04002	E RING	2	
46	17917-87L00	CONNECTOR, FLUSH WATER	1	
47	61458-90J00	LABEL, ENGINE COVER	1	
48-1	61649-93J00	LABEL, HOOK LEVER	1	FOR YAY
48-2	61649-93J10	LABEL, HOOK LEVER	1	FOR Y5S

FIG.420A

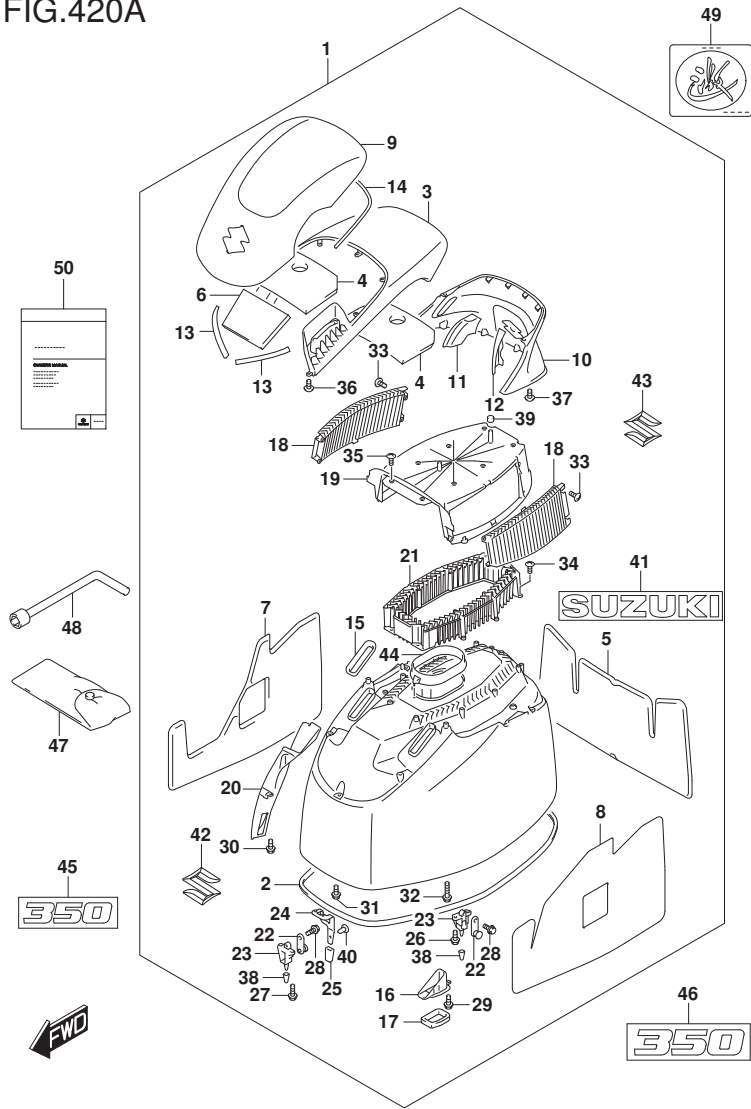


FIG.420A (1-F-5) ENGINE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61420-98821-AML	COVER SET, ENGINE (BLACK/SILVER)	1	FOR YAY
1-2	61420-98821-BBK	COVER SET, ENGINE (WHITE/SILVER)	1	FOR Y5S
2	61414-98L00	.SEAL, ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER, ENGINE TOP RR (BLACK)	1	
3-2	61421-98L00-Y5S	.COVER, ENGINE TOP RR (WHITE)	1	
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER, ENGINE COVER	1	
6	61427-98L00	.SILENCER, ENGINE COVER	1	
7	61428-98L00	.SILENCER, ENGINE COVER STBD	1	
8	61429-98L00	.SILENCER, ENGINE COVER PORT	1	
9	61430-98L00-20H	.COVER, ENGINE TOP FR (SILVER)	1	
10	61432-98L00-20H	.GARNISH, AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER, AIR INTAKE STBD	1	
12	61434-98L00	.COVER, AIR INTAKE PORT	1	
13	61437-98L00	.SEAL, AIR INTAKE	2	
14	61438-98L00	.SEAL, ENGINE COVER TOP	1	
15	61439-98L00	.SEAL, AIR VENT NO.2	2	
16	61475-98L00	.GUIDE, AIR VENT	1	
17	61476-98L00	.SEAL, AIR VENT NO.1	1	
18	61561-98L00	.LOUVER, AIR INTAKE OUTER	2	
19	61562-98L00	.FRAME, AIR INTAKE	1	
20	61565-98L00	.DUCT, AIR INTAKE	1	
21	61591-98L00	.LOUVER, AIR INTAKE INNER	1	
22	61610-98L00	.FASTENER COMP	3	
23	61621-93J01	.BRACKET, FASTENER	3	
24	61682-98L00	.STAND, ENGINE COVER	1	
25	61683-98L00	.CUSHION, ENGINE COVER STAND	1	
26	01547-06167	.BOLT	4	
27	01547-06207	.BOLT	2	
28	01550-0616C	.BOLT	3	
29	01550-0616C	.BOLT	1	
30	01550-0616C	.BOLT	2	
31	01550-0616C	.BOLT	3	

FIG.420A

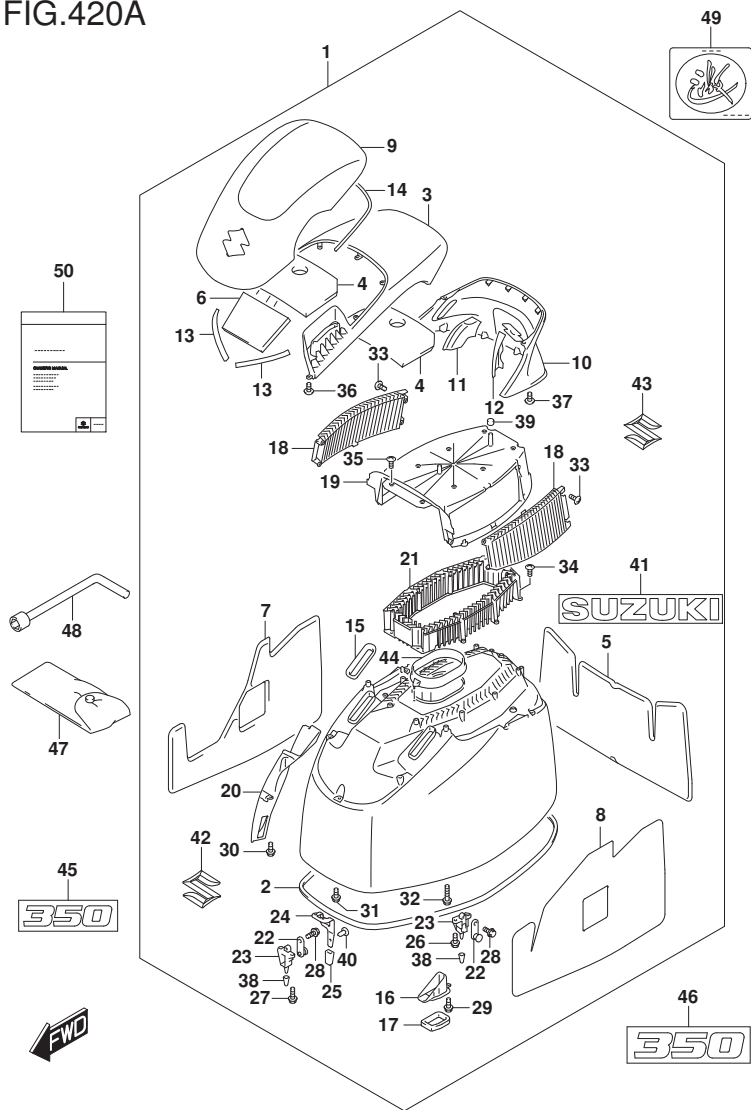


FIG.420A (1-F-6) ENGINE COVER (DF350A)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	01550-0630C	.BOLT	2	
33	03542-06169	.SCREW	8	
34	03542-06169	.SCREW	9	
35	03542-06169	.SCREW	14	
36	03542-06169	.SCREW	7	
37	03542-06169	.SCREW	13	
38	09329-10024	.CUSHION	3	
39	09329-12004	.CUSHION	2	
40	09409-05302-5PK	.CLIP (BLACK)	1	
41	61441-98L00	.MARK, SUZUKI	2	
42	68111-93J00	.EMBLEM, "S"	1	
43	77811-63J00-0PG	.EMBLEM, "S"	1	
44	61416-98L00	.GUARD, AIR INTAKE	1	
45	61422-98L00	MARK, EMBLEM FRONT (350)	1	
46	61435-98L00	MARK, EMBLEM REAR (350)	1	
47	09800-81835	TOOL SET	1	
48	09816-00175	WRENCH, BOX (8)	1	
49-1	61424-98L00	MARK, EMBLEM (GEKI FOR YAY)	1	FOR YAY
49-2	61424-98L10	MARK, EMBLEM (GEKI FOR Y5S)	1	FOR Y5S
50-1	99011-98L30-054	MANUAL, OWNER'S	1	
50-2	99011-98L30-059	MANUAL, OWNER'S	1	

DF350A E01

[illegible]

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61420-98821-AML	COVER SET, ENGINE (BLACK/SILVER)	1	FOR YAY
1-2	61420-98821-BBK	COVER SET, ENGINE (WHITE/SILVER)	1	FOR Y5S
2	61414-98L00	.SEAL, ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER, ENGINE TOP RR (BLACK)	1	
3-2	61421-98L00-Y5S	.COVER, ENGINE TOP RR (WHITE)	1	
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER, ENGINE COVER	1	
6	61427-98L00	.SILENCER, ENGINE COVER	1	
7	61428-98L00	.SILENCER, ENGINE COVER STBD	1	
8	61429-98L00	.SILENCER, ENGINE COVER PORT	1	
9	61430-98L00-20H	.COVER, ENGINE TOP FR (SILVER)	1	
10	61432-98L00-20H	.GARNISH, AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER, AIR INTAKE STBD	1	
12	61434-98L00	.COVER, AIR INTAKE PORT	1	
13	61437-98L00	.SEAL, AIR INTAKE	2	
14	61438-98L00	.SEAL, ENGINE COVER TOP	1	
15	61439-98L00	.SEAL, AIR VENT NO.2	2	
16	61475-98L00	.GUIDE, AIR VENT	1	
17	61476-98L00	.SEAL, AIR VENT NO.1	1	
18	61561-98L00	.LOUVER, AIR INTAKE OUTER	2	
19	61562-98L00	.FRAME, AIR INTAKE	1	
20	61565-98L00	.DUCT, AIR INTAKE	1	
21	61591-98L00	.LOUVER, AIR INTAKE INNER	1	
22	61610-98L00	.FASTENER COMP	3	
23	61621-93J01	.BRACKET, FASTENER	3	
24	61682-98L00	.STAND, ENGINE COVER	1	
25	61683-98L00	.CUSHION, ENGINE COVER STAND	1	
26	01547-06167	.BOLT	4	
27	01547-06207	.BOLT	2	
28	01550-0616C	.BOLT	3	
29	01550-0616C	.BOLT	1	
30	01550-0616C	.BOLT	2	
31	01550-0616C	.BOLT	3	

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
32	01550-0630C	.BOLT	2	
33	03542-06169	.SCREW	8	
34	03542-06169	.SCREW	9	
35	03542-06169	.SCREW	14	
36	03542-06169	.SCREW	7	
37	03542-06169	.SCREW	13	
38	09329-10024	.CUSHION	3	
39	09329-12004	.CUSHION	2	
40	09409-05302-5PK	.CLIP (BLACK)	1	
41	61441-98L00	.MARK, SUZUKI	2	
42	68111-93J00	.EMBLEM, "S"	1	
43	77811-63J00-0PG	.EMBLEM, "S"	1	
44	61416-98L00	.GUARD, AIR INTAKE	1	
45	61422-98L60	MARK, EMBLEM FRONT (325)	1	
46	61435-98L60	MARK, EMBLEM REAR (325)	1	
47	09800-81835	TOOL SET	1	
48	09816-00175	WRENCH, BOX (8)	1	
49-1	61424-98L00	MARK, EMBLEM (GEKI FOR YAY)	1	FOR YAY
49-2	61424-98L10	MARK, EMBLEM (GEKI FOR Y5S)	1	FOR Y5S
50-1	99011-98L30-054	MANUAL, OWNER'S	1	
50-2	99011-98L30-059	MANUAL, OWNER'S	1	

DF350A_E01_019

FIG.420C

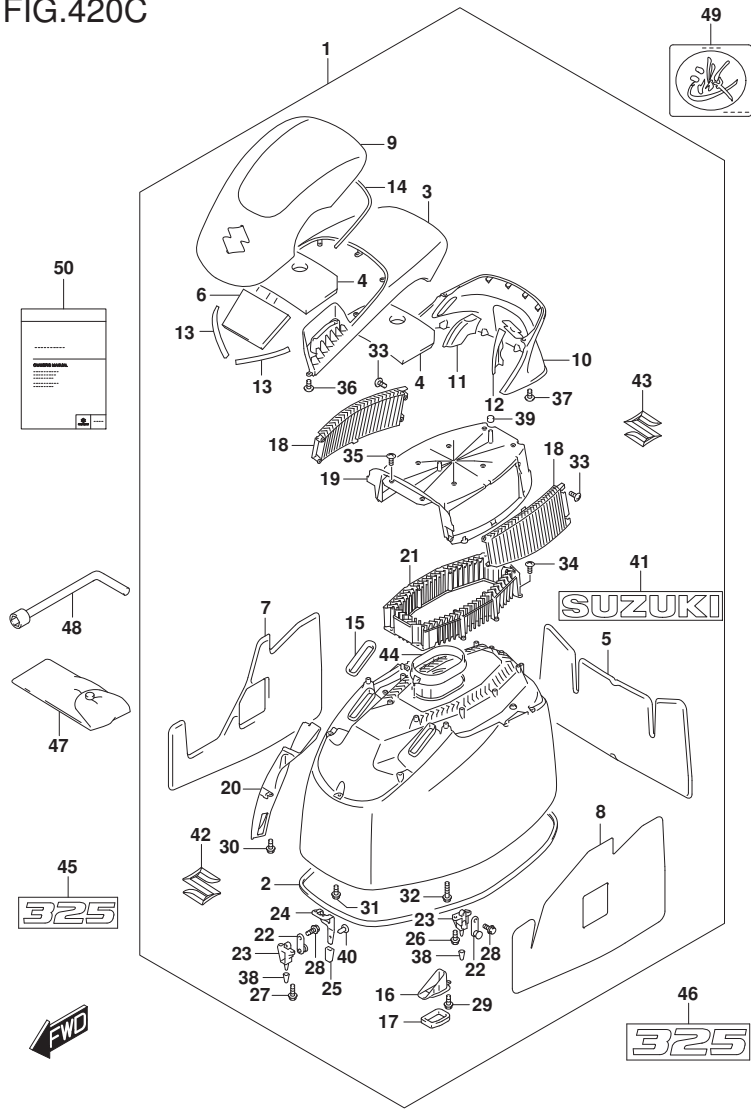


FIG.420C (1-F-9) ENGINE COVER (DF325A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61420-98821-AML	COVER SET, ENGINE (BLACK/SILVER)	1	FOR YAY
1-2	61420-98821-BBK	COVER SET, ENGINE (WHITE/SILVER)	1	FOR Y5S
2	61414-98L00	.SEAL, ENGINE COVER STRIP	1	
3-1	61421-98L00-YAY	.COVER, ENGINE TOP RR (BLACK)	1	
3-2	61421-98L00-Y5S	.COVER, ENGINE TOP RR (WHITE)	1	
4	61425-98L00	.SILENCER, TOP COVER	2	
5	61426-98L10	.SILENCER, ENGINE COVER	1	
6	61427-98L00	.SILENCER, ENGINE COVER	1	
7	61428-98L00	.SILENCER, ENGINE COVER STBD	1	
8	61429-98L00	.SILENCER, ENGINE COVER PORT	1	
9	61430-98L00-20H	.COVER, ENGINE TOP FR (SILVER)	1	
10	61432-98L00-20H	.GARNISH, AIR INTAKE (SILVER)	1	
11	61433-98L00	.COVER, AIR INTAKE STBD	1	
12	61434-98L00	.COVER, AIR INTAKE PORT	1	
13	61437-98L00	.SEAL, AIR INTAKE	2	
14	61438-98L00	.SEAL, ENGINE COVER TOP	1	
15	61439-98L00	.SEAL, AIR VENT NO.2	2	
16	61475-98L00	.GUIDE, AIR VENT	1	
17	61476-98L00	.SEAL, AIR VENT NO.1	1	
18	61561-98L00	.LOUVER, AIR INTAKE OUTER	2	
19	61562-98L00	.FRAME, AIR INTAKE	1	
20	61565-98L00	.DUCT, AIR INTAKE	1	
21	61591-98L00	.LOUVER, AIR INTAKE INNER	1	
22	61610-98L00	.FASTENER COMP	3	
23	61621-93J01	.BRACKET, FASTENER	3	
24	61682-98L00	.STAND, ENGINE COVER	1	
25	61683-98L00	.CUSHION, ENGINE COVER STAND	1	
26	01547-06167	.BOLT	4	
27	01547-06207	.BOLT	2	
28	01550-0616C	.BOLT	3	
29	01550-0616C	.BOLT	1	
30	01550-0616C	.BOLT	2	
31	01550-0616C	.BOLT	3	

FIG.420C

49

1

9

14

3

6

4

13

13

33

36

4

11

10

12

37

39

18

35

19

33

21

34

41

43

48

47

5

7

15

44

20

30

42

2

31

32

24

23

22

28

38

27

25

40

16

17

29

8

46

SUZUKI

325

325

FWD

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
32	01550-0630C	.BOLT	2	
33	03542-06169	.SCREW	8	
34	03542-06169	.SCREW	9	
35	03542-06169	.SCREW	14	
36	03542-06169	.SCREW	7	
37	03542-06169	.SCREW	13	
38	09329-10024	.CUSHION	3	
39	09329-12004	.CUSHION	2	
40	09409-05302-5PK	.CLIP (BLACK)	1	
41	61441-98L00	.MARK, SUZUKI	2	
42	68111-93J00	.EMBLEM, "S"	1	
43	77811-63J00-0PG	.EMBLEM, "S"	1	
44	61416-98L00	.GUARD, AIR INTAKE	1	
45	61422-98L60	MARK, EMBLEM FRONT (325)	1	
46	61435-98L60	MARK, EMBLEM REAR (325)	1	
47	09800-81835	TOOL SET	1	
48	09816-00175	WRENCH, BOX (8)	1	
49-1	61424-98L00	MARK, EMBLEM (GEKI FOR YAY)	1	FOR YAY
49-2	61424-98L10	MARK, EMBLEM (GEKI FOR Y5S)	1	FOR Y5S
50	99011-98L30-059	MANUAL, OWNER'S	1	

DF350A_E01_019

FIG.430A

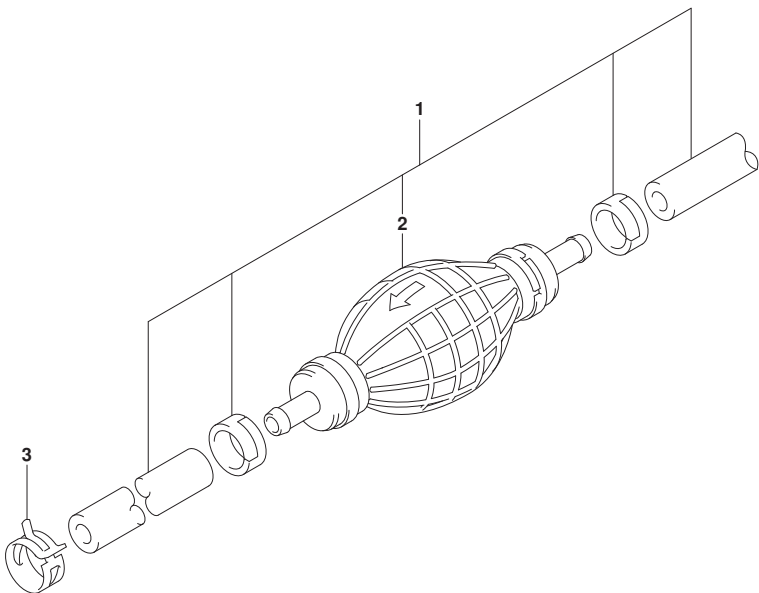


FIG.430A (1-F-11) FUEL HOSE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65700-93J11	HOSE, FUEL (TANK TO ENGINE)	1	
2	65770-93J12	.PUMP, SQUEEZE	1	
3	09401-13423	CLIP	2	

FIG.520A

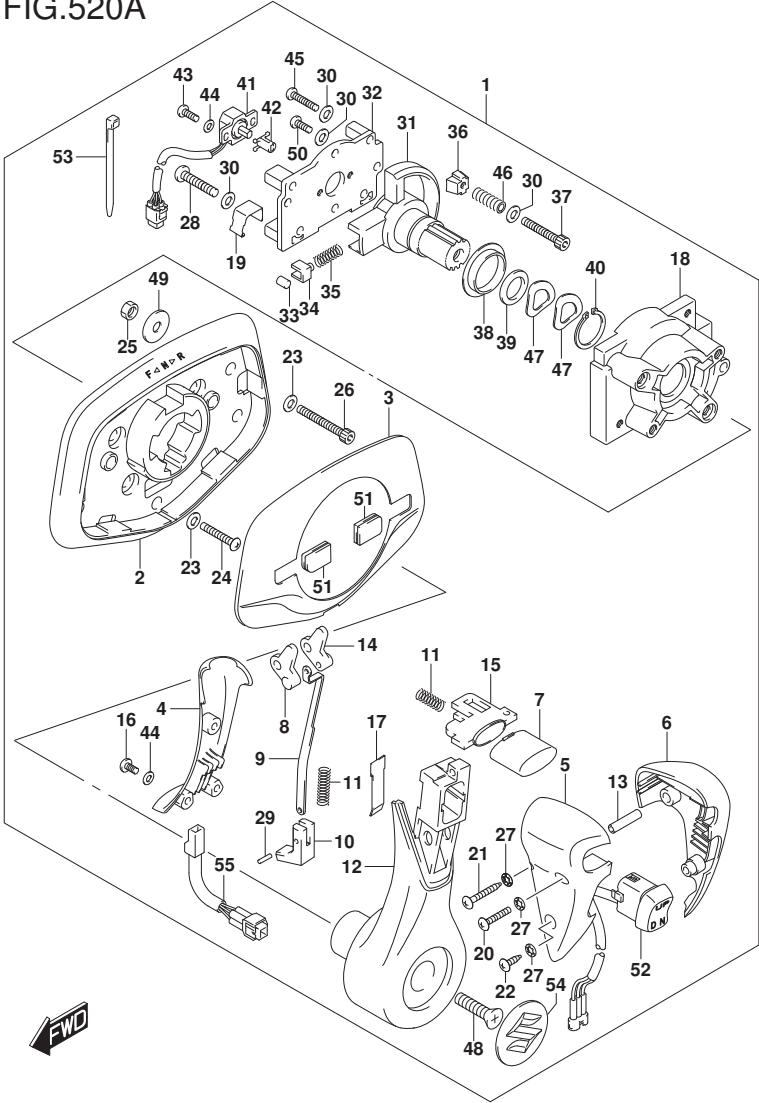


FIG.520A (1-F-12) OPT:FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J23	REMOCON ASSY, FLUSH MOUNT	1	
2	67271-98J20	.COVER, BOTTON BASE	1	
3	67264-98J00	.COVER, TOP BASE	1	
4	67263-98J20	.COVER, LEVER	1	
5	67261-98J20	.GRIP, A	1	
6	67261-98J30	.GRIP, B	1	
7	67265-98J00	.BUTTON, NEUTRAL LOCK	1	
8	67255-98J00	.LINK, NEUTRAL LOCK NO.1	1	
9	67258-98J00	.PLATE, JOINT	1	
10	67256-98J00	.BLOCK, NEUTRAL LOCK	1	
11	67259-98J00	.SPRING	3	
12	67251-98J20	.LEVER, HANDLE	1	
13	67294-98J00	.SPACER	1	
14	67254-98J00	.LINK, NEUTRAL LOCK NO.2	1	
15	67233-98J00	.SLIDER, NEUTRAL BUTTON	1	
16	67296-98JA0	.SCREW (4X10)	3	
17	67234-98J00	.PLATE, LEVER	1	
18	67211-98J20	.HOUSING	1	
19	67269-98J20	.CLAMP, LEAD	1	
20	67296-98JB0	.SCREW (4X30)	1	
21	67227-98J20	.SCREW, TAPPING (4X35)	1	
22	67227-98J30	.SCREW, TAPPING (4X20)	1	
23	67288-98J50	.WASHER, PLANE	8	
24	67296-98JC0	.SCREW (6X40)	4	
25	67287-98J00	.NUT	4	
26	67226-98J10	.BOLT (6X50)	4	
27	67288-98J60	.WASHER	3	
28	67296-98JD0	.SCREW (5X40)	1	
29	67238-98J00	.PIN	2	
30	67288-98J70	.WASHER, PLANE	5	
31	67246-98J00	.SHAFT, DRIVE REMOCON	1	
32	67222-98J00	.PANEL ASSY, BACK	1	
33	67236-98J00	.ROLLER, DETENT	1	
34	67235-98J00	.GUIDE, DETENT ROLLER	1	

FIG.520A

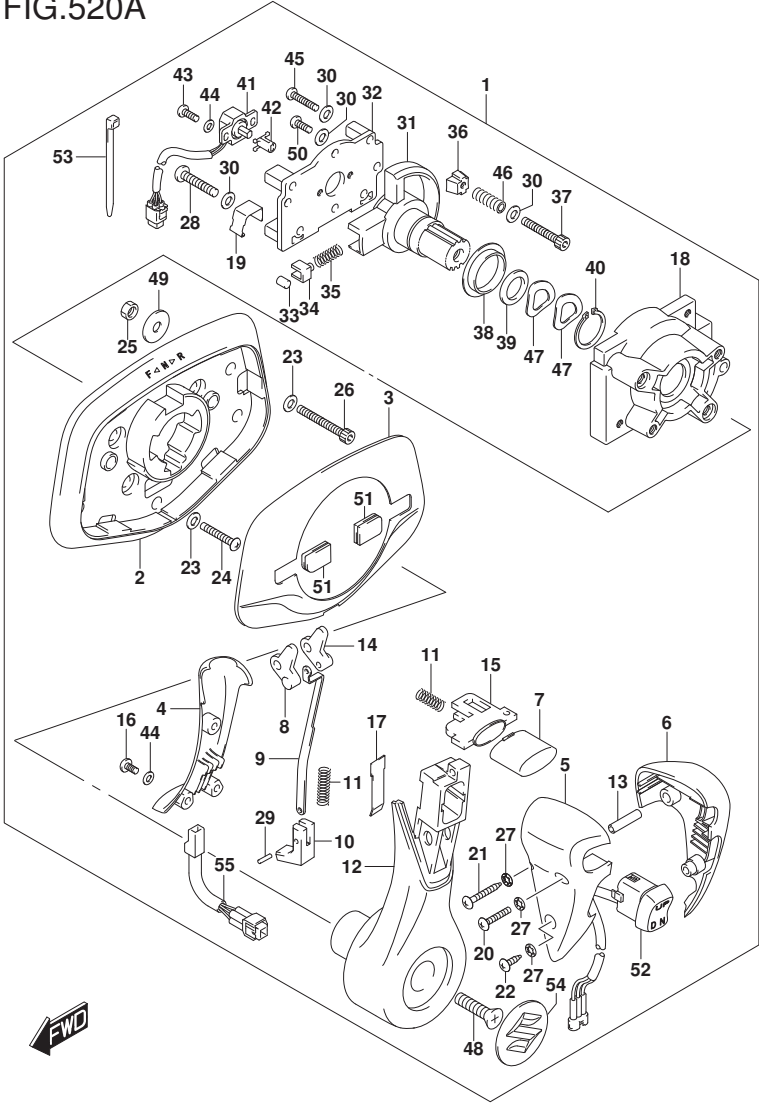


FIG.520A (1-F-13) OPT:FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67237-98J00	.SPRING, DETENT	1	
36	67223-98J00	.PAD, BRAKE	1	
37	67296-98JE0	.SCREW, ADJUST (5X35)	1	
38	67252-98J00	.BUSH, DRIVE	1	
39	67288-98J20	.WASHER, PLANE	1	
40	67292-98J00	.C RING	1	
41	15980-98J00	.POTENTIOMETER	1	
42	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
43	67296-94300	.SCREW (4X10)	2	
44	67288-98J00	.WASHER, PLANE	5	
45	67296-98J10	.SCREW (5X35)	1	
46	67288-98J10	.WASHER, SPRING	8	
47	67228-98J50	.WASHER, WAVE	2	
48	67296-98J60	.SCREW (8X30)	1	
49	09160-06104	.WASHER (6.5X24X2)	4	
50	67296-98J50	.SCREW (5X18)	2	
51	67272-98J00	.GROMMET	2	
52	37850-98J02	.SWITCH ASSY, PTT	1	
53	67269-98J10	.BAND	1	
54	67257-98J00	.MARK, LEVER (S)	1	
55	36890-98J00	.HARNESS, CONDENSER ADAPTER	1	

FIG.522A


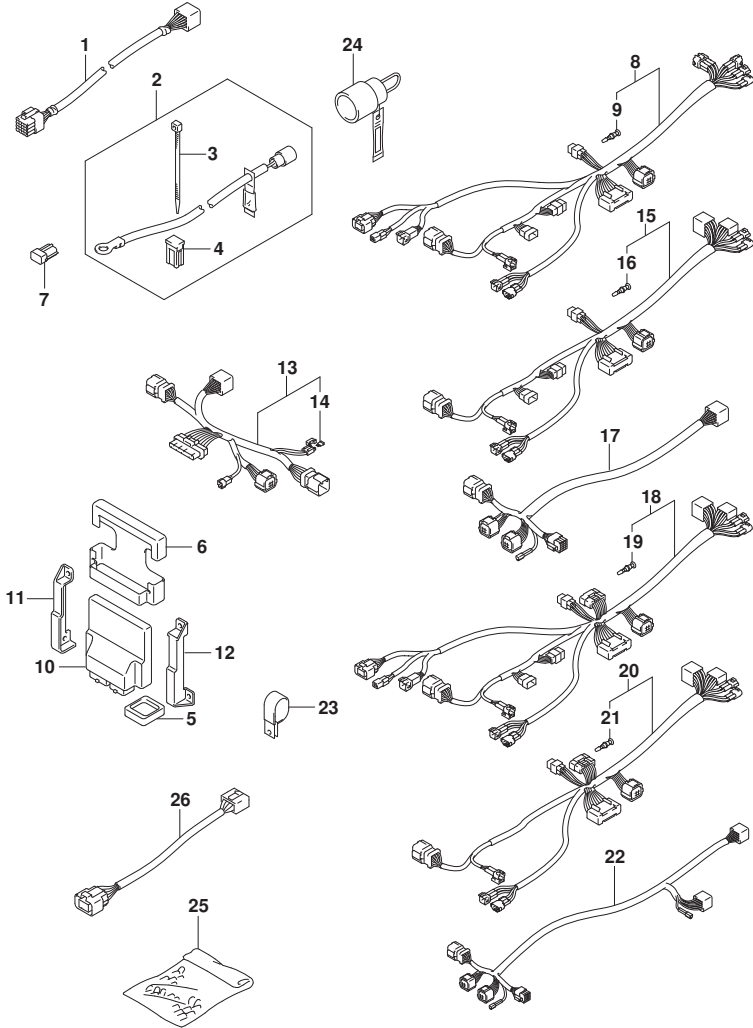


FIG.522A (1-F-14) OPT:HARNESS (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-98J51	WIRE ASSY, REMOCON EXTENSION	1	
2	33830-98J11	SET, BATTERY ISOLATOR LEAD	1	
3	09407-10404	.CLAMP (L:100)	2	
4	09481-40401	.FUSE (40A)	1	
5	33911-88BL0	CAP, BCM CONNECTOR	1	
6	33925-93J00	CUSHION, BCM	AR	
7	33926-98J00	RESISTOR, TERMINAL	AR	
8	36623-98J20	HARNESS ASSY, BCM NO.1 FOR SNGL	1	
9	36615-96300	.TERMINAL RESIN	4	
10-1	36770-98J13	CONTROLLER ASSY, BOAT ELECTRIC	1	
10-2	36770-98J22	CONTROLLER, BOAT ELEC QUADRUPLE	2	
11	36775-98J00	HOLDER, BCM (L)	AR	
12	36776-98J00	HOLDER, BCM (R)	AR	
13	36622-98J00	HARNESS ASSY, DUAL STATION MAIN	AR	
14	09481-10501	.FUSE (10A)	AR	
15	36624-98J02	HARNESS ASSY, BCM NO.2 FOR SNGL	1	
16	36615-96300	.TERMINAL, RESIN	2	
17	36621-98J00	HARNESS ASSY, DUAL ENGINE	AR	
18	36623-98J30	HARNESS ASSY, BCM NO.1 FOR MULT	1	
19	36615-96300	.TERMINAL, RESIN	5	
20	36624-98J11	HARNESS ASSY, BCM NO.2 FOR MULT	1	
21	36615-96300	.TERMINAL, RESIN	2	
22	36621-98J10	HARNESS ASSY, TRIPLE ENGINE	1	
23	09403-13402	CLAMP (ID:13)	AR	
24	36612-98J20	CONNECTOR, COUNTER SELECT (WHITE)	AR	
25	36990-87D00	TERIMINAL SET, WITH SLEEVE	1	
26	36667-96L20	WIRE, GAUGE EXT	1	

FIG.523A

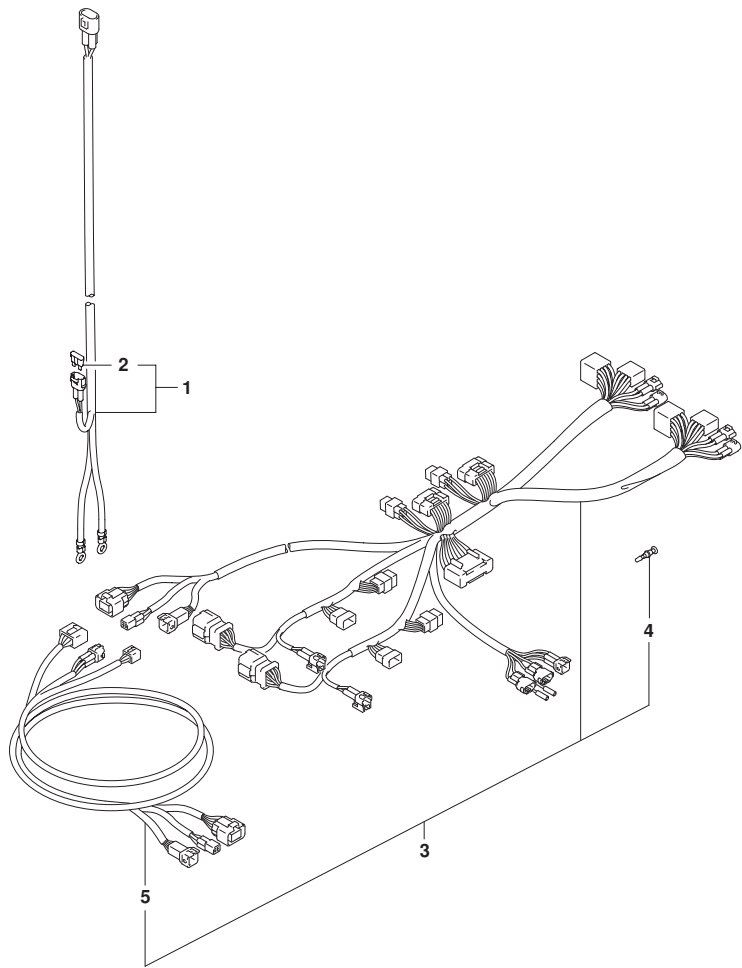

DF350A_E01_019_523A
OPT:HARNESS (2)

FIG.523A (1-F-15) OPT:HARNESS (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36625-98J10	WIRE ASSY, BATTERY	AR	
2	09481-30501	.FUSE (30A)	AR	
3	36623-98J40	HARNESS ASSY, BCM QUADRUPLE	1	
4	36615-96300	.TERMINAL	8	
5	36627-98J00	.HARNESS COMP, R/CON EXTENSION	1	

FIG.530A

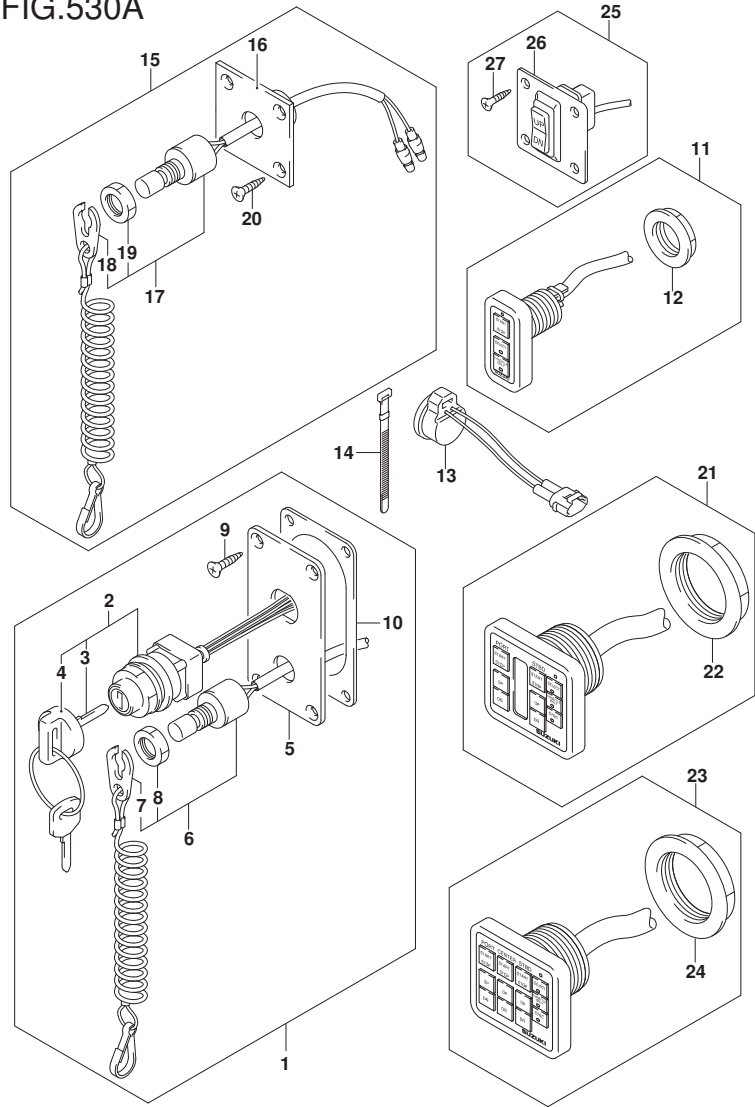


FIG.530A (1-G-2) OPT:SWITCH

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98J05	PANEL ASSY, MAIN SW	1	
2	37110-98J01	..SWITCH ASSY, MAIN	1	
3-1	37141-99EA0	..KEY (941)	1	
3-2	37141-99EB0	..KEY (942)	1	
3-3	37141-99E00	..KEY (931)	1	
3-4	37141-99E10	..KEY (932)	1	
3-5	37141-99E20	..KEY (933)	1	
3-6	37141-99E30	..KEY (934)	1	
3-7	37141-99E40	..KEY (935)	1	
3-8	37141-99E50	..KEY (936)	1	
3-9	37141-99E60	..KEY (937)	1	
3-10	37141-99E70	..KEY (938)	1	
3-11	37141-99E80	..KEY (939)	1	
3-12	37141-99E90	..KEY (940)	1	
4	37143-99E00	..CAP, KEY	1	
5	37139-98J10	..PANEL, MAIN SW	1	
6	37820-93J10	..SWITCH ASSY, EMERGENCY STOP	1	
7	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
8	37826-92J10	..NUT	1	
9	03122-05165	..SCREW	4	
10	37114-98J00	..SHEET, MAIN SW PANEL	1	
11	37100-98J11	PANEL ASSY, SINGLE	1	
12	37112-98J00	..NUT	1	
13	38500-93J90	BUZZER ASSY, WARNING	AR	
14	09407-08401	CLAMP (L:80)	AR	

FIG.530A


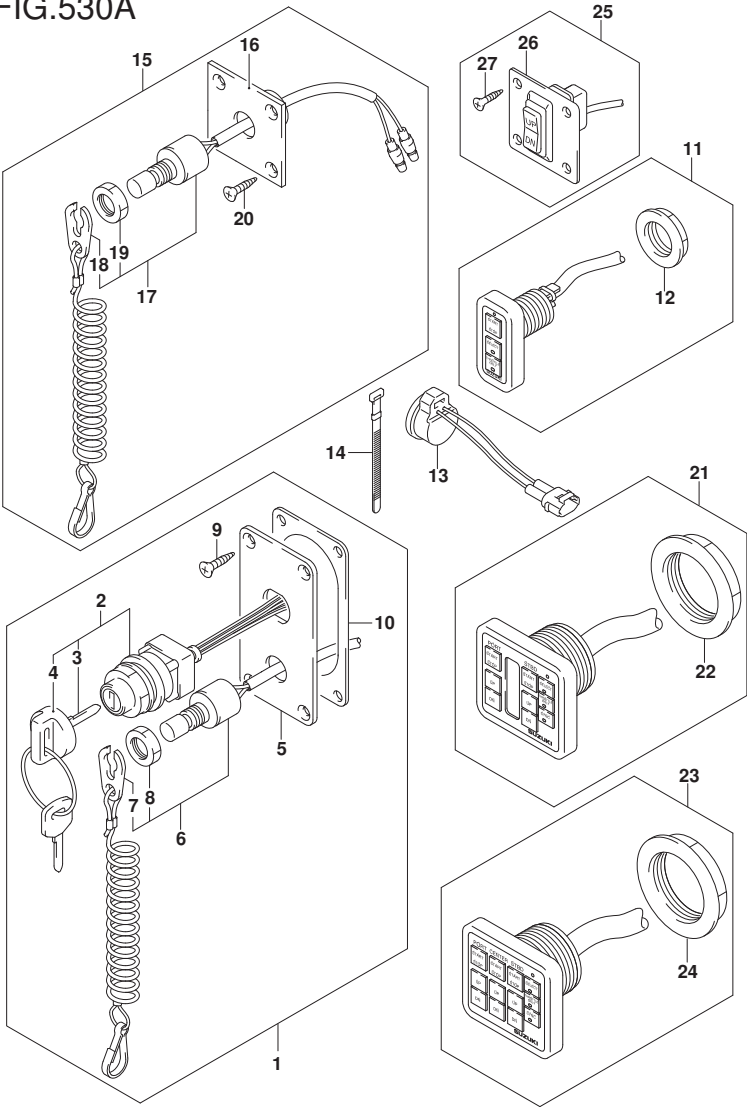


FIG.530A (1-G-3) OPT:SWITCH

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15	37803-93J05	PANEL ASSY, EMERGENCY SW	1	
16	37825-99E10	.PANEL, EMERGENCY STOP SW	1	
17	37820-93J10	.SWITCH ASSY, EMERGENCY STOP	1	
18	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
19	37826-92J10	..NUT	1	
20	03122-05165	.SCREW	4	
21	37100-98J21	PANEL ASSY, DUAL	AR	
22	37112-98J10	.NUT	AR	
23	37100-98J31	PANEL ASSY, TRIPLE	1	
24	37112-98J10	.NUT	1	
25	37860-87L00	PANEL ASSY, TROLLING CTR SW	1	
26	37862-87L00	.PANEL	1	
27	09131-05004	.SCREW (5X16)	4	

FIG.535A

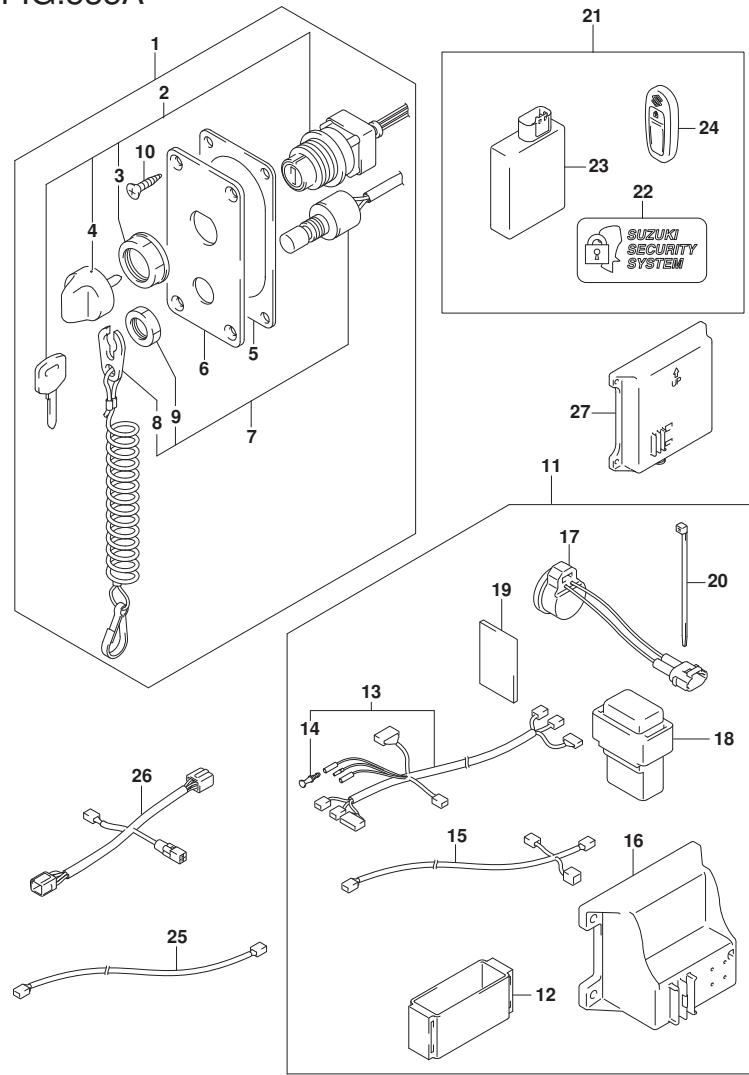

DF350A_E01_019_535A
OPT:KEY LESS START

FIG.535A (1-G-4) OPT:KEY LESS START (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96L01	PANEL ASSY, MAIN SWITCH KLS	1	
2	37110-96L00	..SWITCH ASSY, MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
4	37143-96L00	..KNOB, MAIN SWITCH	1	
5	37114-98J00	..SHEET, MAIN SWITCH PANEL	1	
6	37139-96L30	..PANEL, MAIN SWITCH	1	
7	37820-93J10	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
9	37826-92J10	..NUT	1	
10	03122-05165	..SCREW	4	
11	37105-96L02	HARNESS SET, KLS CONTROLLER	1	
12	32980-38F00	..HOLDER, KLS CONT	1	
13	36623-96L01	..HARNESS ASSY, KLS CONT	1	
14	36615-96300	..TERMINAL, RESIN	1	
15	36662-96L00	..HARNESS ASSY, KLS CAN EXT	1	L:6500+110
16	37173-96L10	..HOLDER, KLS PARTS	1	
17	38500-93J90	..BUZZER ASSY, KLS	1	
18	38860-96L01	..RELAY ASSY, KLS	1	
19	32851-93J00	..CUSHION, LEAD WIRE	1	
20	09407-14407	..CLAMP (L:145)	1	

FIG.535A


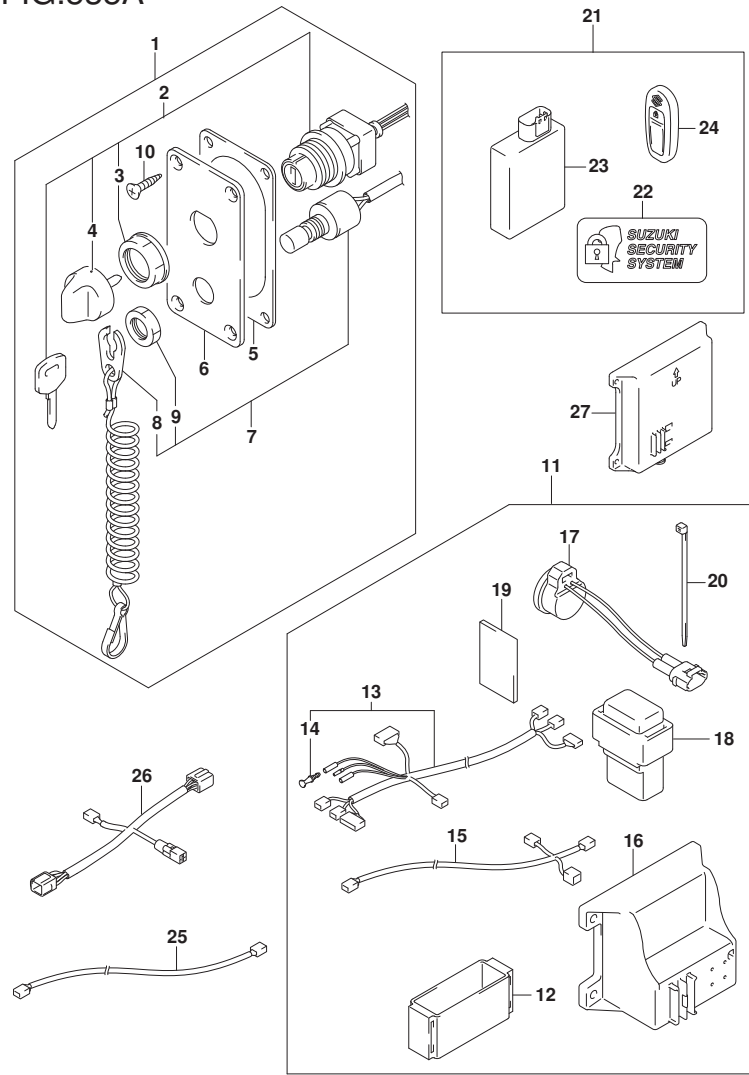


FIG.535A (1-G-5) OPT:KEY LESS START (E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	37170-96L04	CONTROLLER SET, KLS 433MHZ	1	
22	37117-96L00	.DECAL, KLS	2	
23	37171-96L02	.CONTROLLER ASSY, KLS 433MHZ	1	
24	37172-96L01	.REMOCON ASSY, KLS 433MHZ	2	
25	36663-96L00	WIRE, KLS CAN EXT	1	
26	36664-96L00	HARNESS ASSY, KLS CAN	AR	L:810+110
27	37173-96L00	HOLDER, KLS PARTS	1	

DF350A E01
DF325A E01

FIG.540A

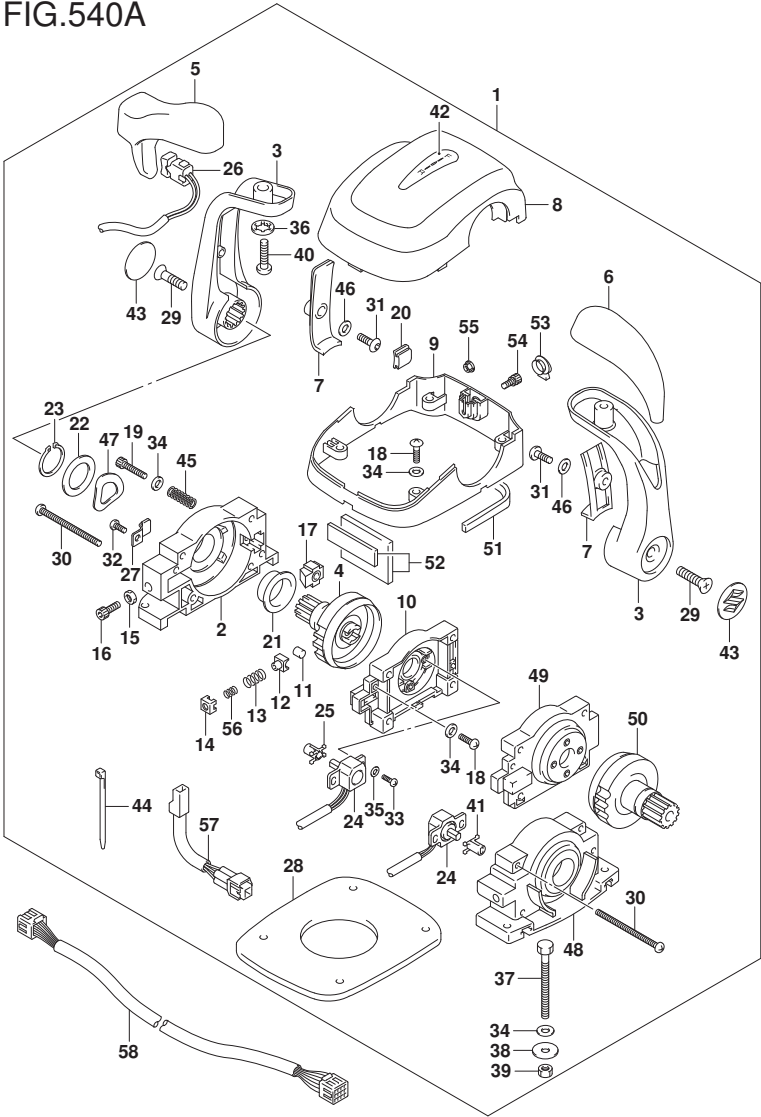


DF350A_E01_019_540A
OPT:REMOTE CONTROL ASSY DUAL

FIG.540A (1-G-6) OPT:REMOTE CONTROL ASSY DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J14	REMOTE CONTROL ASSY	1	
2	67211-98J20	.HOUSING (L)	1	
3	67251-98J00	.LEVER, HANDLE	2	
4	67246-98J10	.SHAFT, DRIVE (L)	1	
5	67261-98J00	.GRIP, NO.1	1	
6	67261-98J10	.GRIP, NO.2	1	
7	67263-98J00	.COVER, LEVER	2	
8	67212-98J30	.COVER, UPPER	1	
9	67271-98J40	.COVER, BOTTOM	1	
10	67222-98J10	.PANEL ASSY, BACK (L)	1	
11	67236-98J10	.ROOLER, DETENT	2	
12	67235-98J10	.GUIDE, DETENT ROOLER	2	
13	67237-98J40	.SPRING, DETENT	2	
14	67233-98J10	.HOLDER, DETENT SPRING	2	
15	67287-92E00	.NUT	2	
16	67239-98J00	.SCREW, DETENT ADJUST	2	
17	67223-98J00	.PAD, BRAKE	2	
18	67296-98J50	.SCREW (5X18)	8	
19	67296-98JA0	.SCREW (4X10)	2	
20	67272-98J10	.GROMMET, COVER	2	
21	67252-98J10	.BUSH, DRIVE SHAFT	2	
22	67288-98J20	.WASHER	2	
23	67292-98J00	.C RING	2	
24	15980-98J00	.POTENTIOMETER	2	
25	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
26	37850-98J02	.SWITCH ASSY, PTT	1	
27	67269-98J00	.CLAMP, LEAD	1	
28	67273-98J20	.PACKING	1	
29	67296-98J60	.SCREW (8X30)	2	
30	67296-98J30	.SCREW (5X70)	4	
31	67296-98JG0	.SCREW (5X14)	2	
32	67296-98J00	.SCREW (5X12)	1	
33	67296-94300	.SCREW (4X10)	4	
34	67288-98J40	.WASHER	14	

FIG.540A

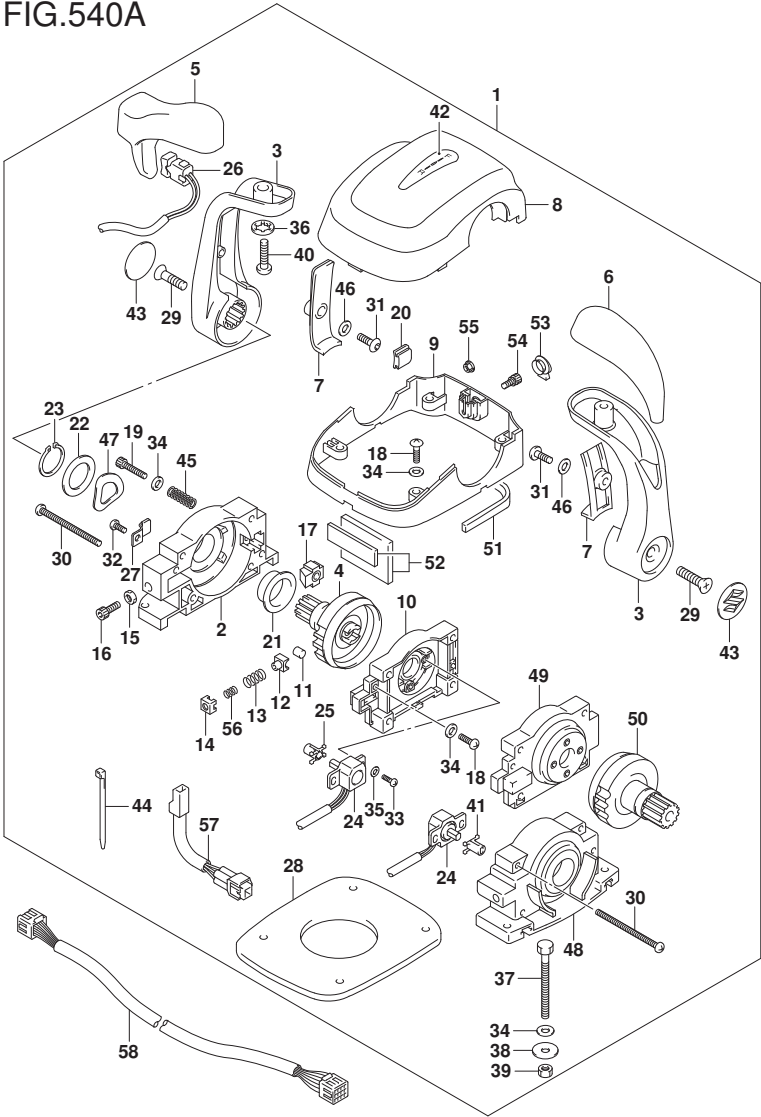

DF350A_E01_019_540A
OPT:REMOTE CONTROL ASSY DUAL

FIG.540A (1-G-7) OPT:REMOTE CONTROL ASSY DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67288-98J00	.WASHER	4	
36	67288-92E20	.WASHER	2	
37	67226-98J00	.BOLT (5X50)	4	
38	09160-05024	.WASHER (5.5X16X1.5)	4	
39	67287-92E00	.NUT	4	
40	67296-98J90	.SCREW	2	
41	67227-98J00	.LEVER, POTENTIOMETER NO.1	1	
42	67284-98J10	.MARK (F-N-R)	1	
43	67257-98J00	.MARK, LEVER (S)	2	
44	67269-98J30	.BAND	1	
45	67288-98J10	.WASHER, SPRING	16	
46	67288-98J30	.WASHER	2	
47	67228-98J50	.WASHER, WAVE	2	
48	67211-98J30	.HOUSING (R)	1	
49	67222-98J20	.PANEL ASSY, BACK (R)	1	
50	67246-98J20	.SHAFT, DRIVE (R)	1	
51	67273-98J10	.PACKING (FRONT)	1	
52	67273-98J30	.PACKING (REAR)	1	
53	67277-98J00	.GROMMET	1	
54	67296-98JF0	.BOLT (5X14)	1	
55	67297-98J00	.NUT	1	
56	67237-98J50	.SPRING, DETENT	2	
57	36890-98J00	.HARNES, CONDENSER ADAPTER	1	
58-1	36620-98J31	WIRE ASSY, REMOTE CONTROL	1	L:6500
58-2	36620-98J41	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.543A

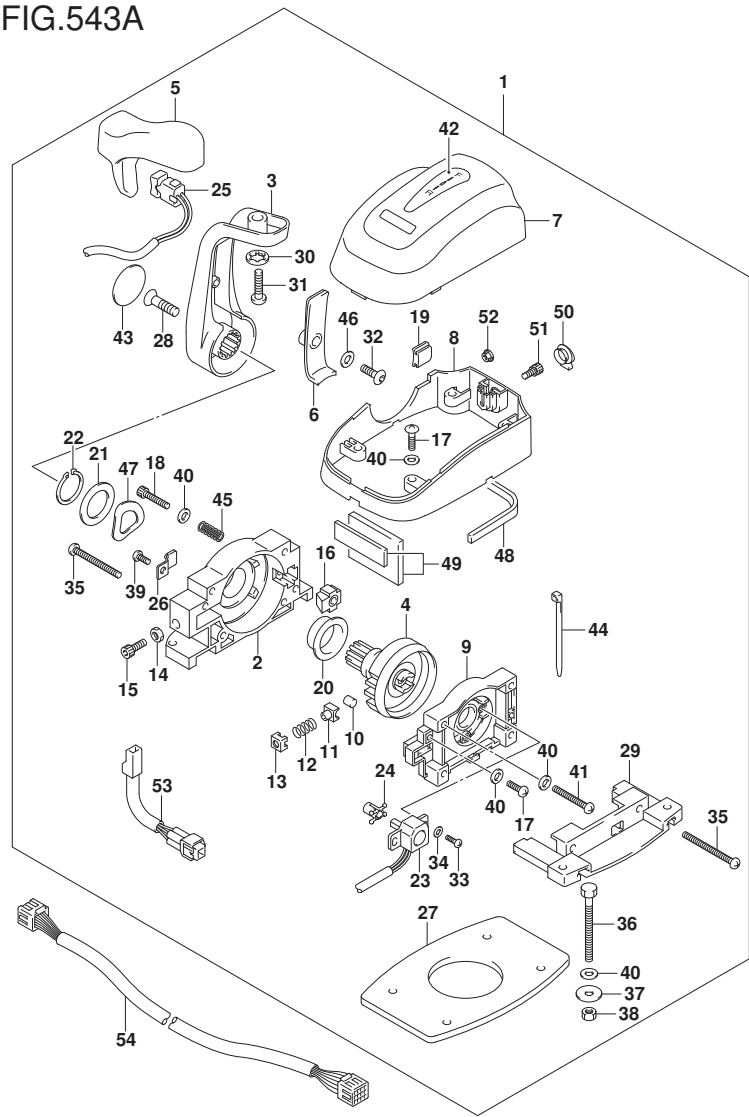


FIG.543A (1-G-8) OPT:REMOTE CONTROL ASSY SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J04	REMOTE CONTROL ASSY	1	
2	67211-98J20	.HOUSING	1	
3	67251-98J00	.LEVER, HANDLE	1	
4	67246-98J10	.SHAFT, DRIVE	1	
5	67261-98J00	.GRIP, NO.1	1	
6	67263-98J00	.COVER, LEVER	1	
7	67212-98J20	.COVER, UPPER	1	
8	67271-98J30	.COVER, BOTTOM	1	
9	67222-98J10	.PANEL ASSY, BACK	1	
10	67236-98J10	.ROLLER, DETENT	1	
11	67235-98J10	.GUIDE, DETENT ROLLER	1	
12	67237-98J30	.SPRING, DETENT	1	
13	67233-98J10	.HOLDER, DETENT SPRING	1	
14	67287-92E00	.NUT	1	
15	67239-98J00	.SCREW, DETENT ADJUST	1	
16	67223-98J00	.PAD, BRAKE	1	
17	67296-98J50	.SCREW (5X18)	6	
18	67296-98JA0	.SCREW (4X10)	1	
19	67272-98J10	.GROMMET, COVER	1	
20	67252-98J10	.BUSH, DRIVE SHAFT	1	
21	67288-98J20	.WASHER	1	
22	67292-98J00	.C RING	1	
23	15980-98J00	.POTENTIOMETER	1	
24	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
25	37850-98J02	.SWITCH ASSY, PTT	1	
26	67269-98J00	.CLAMP, LEAD	1	
27	67273-98J00	.PACKING	1	
28	67296-98J60	.SCREW (8X30)	1	
29	67274-98J00	.FLANGE, BASE	1	
30	67288-92E20	.WASHER	1	
31	67296-98J90	.SCREW	1	
32	67296-98JG0	.SCREW (5X14)	1	
33	67296-94300	.SCREW (4X10)	2	
34	67288-98J00	.WASHER	2	

FIG. 543A

This exploded perspective view illustrates the assembly of a device. The components are numbered as follows: 1 (top housing), 2 (main body), 3 (bracket), 4 (gear), 5 (trigger), 6 (plate), 7 (cover), 8 (small component), 9 (internal mechanism), 10 (small component), 11 (small component), 12 (small component), 13 (small component), 14 (small component), 15 (small component), 16 (small component), 17 (small component), 18 (small component), 19 (small component), 20 (small component), 21 (small component), 22 (small component), 23 (small component), 24 (small component), 25 (small component), 26 (small component), 27 (base plate), 28 (small component), 29 (small component), 30 (small component), 31 (small component), 32 (small component), 33 (small component), 34 (small component), 35 (small component), 36 (small component), 37 (small component), 38 (small component), 39 (small component), 40 (small component), 41 (small component), 42 (small component), 43 (small component), 44 (small component), 45 (small component), 46 (small component), 47 (small component), 48 (small component), 49 (small component), 50 (small component), 51 (small component), 52 (small component), 53 (small component), 54 (small component).

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
35	67296-98J20	.SCREW (5X50)	2	
36	67226-98J00	.BOLT (5X50)	4	
37	09160-05024	.WASHER (5.5X16X1.5)	4	
38	67287-92E00	.NUT	4	
39	67296-98J00	.SCREW (5X12)	1	
40	67288-98J40	.WASHER	12	
41	67296-98J10	.SCREW (5X35)	1	
42	67284-98J10	.MARK (F-N-R)	1	
43	67257-98J00	.MARK, LEVER (S)	1	
44	67269-98J30	.BAND	1	
45	67288-98J10	.WASHER, SPRING	8	
46	67288-98J30	.WASHER	1	
47	67228-98J50	.WASHER, WAVE	1	
48	67273-98J10	.PACKING (FRONT)	1	
49	67273-98J30	.PACKING (REAR)	1	
50	67277-98J00	.GROMMET	1	
51	67296-98JF0	.BOLT (5X14)	1	
52	67297-98J00	.NUT	1	
53	36890-98J00	.HARNES, CONDENSER ADAPTER	1	
54-1	36620-98J31	WIRE ASSY, REMOTE CONTROL	1	L:6500
54-2	36620-98J41	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.585A

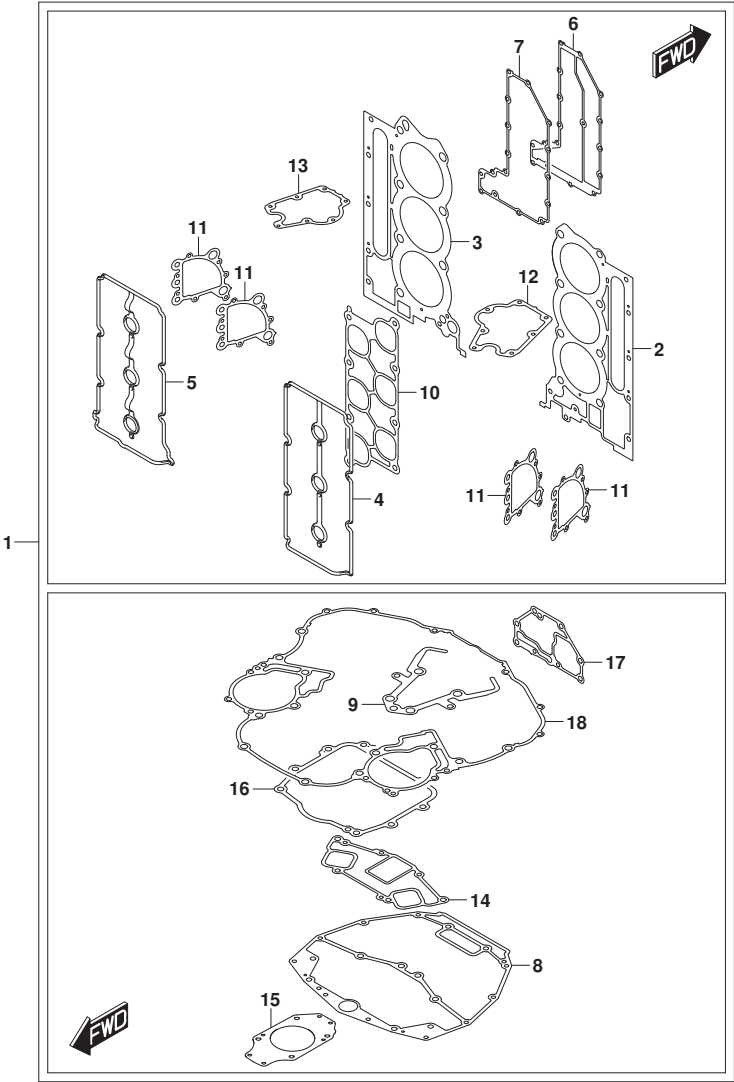


FIG.585A (1-G-10) OPT:GASKET SET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11410-98840	GASKET SET	1	
2	11141-98L00	.GASKET, CYLINDER HEAD STBD	1	
3	11142-98L00	.GASKET, CYLINDER HEAD PORT	1	
4	11179-93J00	.GASKET, CYL HEAD COVER STBD	1	
5	11189-93J00	.GASKET, CYL HEAD COVER PORT	1	
6	11332-98L00	.GASKET, WTR JKT COVER	1	
7	11333-98L00	.GASKET, CRANKCASE OIL COVER	1	
8	11489-98L00	.GASKET, OIL PAN	1	
9	12778-98L00	.GASKET, GUIDE BASE	1	
10	13119-98L00	.GASKET, INTAKE MANIFOLD	1	
11	14151-98L00	.GASKET, EXH COVER	4	
12	14181-98L00	.GASKET, EXH UPPER COVER STBD	1	
13	14182-98L00	.GASKET, EXH UPPER COVER PORT	1	
14	14212-98L00	.GASKET, EXHAUST TUBE	1	
15	17472-98L00	.GASKET, PUMP CASE PANEL	1	
16	51123-98L00	.GASKET, MOUNT OIL SEAL COVER	1	
17	51142-98L00	.GASKET, ENGINE HOLDER COVER	1	
18	51211-98L00	.GASKET, ENGINE HOLDER	1	

FIG.601A



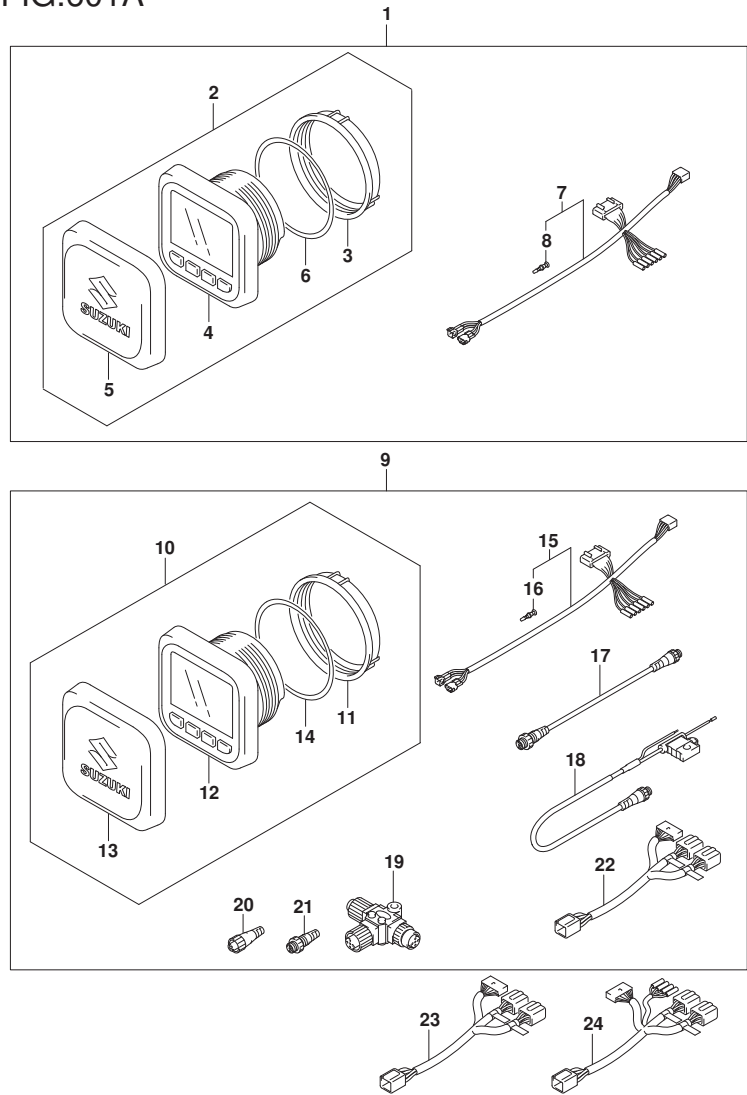


FIG.601A (1-G-11) OPT:MULTI FUNCTION GAUGE (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34000-96L63	KIT, SINGLE GAUGE ELECTRIC	1	
2	34011-96L13	.GAUGE SET, MULTI	1	
3	34112-96L00	..NUT, GAUGE	1	
4	34193-96L00	..BEZEL, GAUGE	1	
5	34211-96L00	..COVER, GAUGE	1	
6	34825-96L00	..PACKING, GAUGE	1	
7	36661-96L20	.ADAPTER, GAUGE	1	
8	36615-96300	..TERMINAL, RESIN	5	
9	34000-96L73	KIT, DUAL GAUGE ELECTRIC	1	
10	34011-96L13	.GAUGE SET, MULTI	2	
11	34112-96L00	..NUT, GAUGE	2	
12	34193-96L00	..BEZEL, GAUGE	2	
13	34211-96L00	..COVER, GAUGE	2	
14	34825-96L00	..PACKING, GAUGE	2	
15	36661-96L20	.ADAPTER, GAUGE	1	
16	36615-96300	..TERMINAL, RESIN	5	
17	36662-88L10	.WIRE, 2 EXTENSION	2	
18	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
19	36664-88L00	.CONNECTOR, BRANCH	2	
20	36665-88L00	.UNIT, RESISTOR FEMALE	1	
21	36665-88L10	.UNIT, RESISTOR MALE	1	
22	36667-96L00	.WIRE, GAUGE ADAPTER	1	
23	36667-96L11	WIRE, DUAL GAUGE ADAPTER	1	
24	36667-96L30	WIRE, GAUGE ADAPTER	1	

1

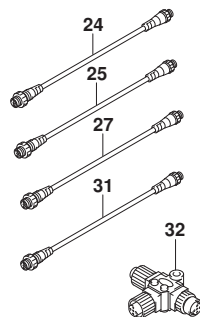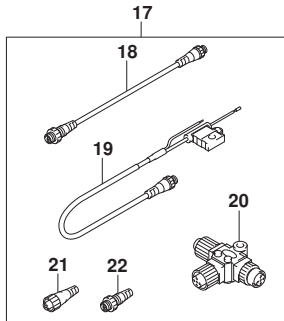

Q'TY

DF350A_E01_019

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11410-98840	585A-1	12300-98840-ODA	116A-12-9
		11435-98L01	180A-14		116B-12-9
		11489-98L00	180A-6	12300-98840-0EA	116A-12-10
			585A-8		116B-12-10
		11501-98L00-Y5S	180A-7-2	12340-98L00-0A0	116A-12-1
11101-98L10	111A-1	11501-98L00-YAY	180A-7-1		116B-12-1
11103-98L10	111A-5	11510-98L01	136A-1	12340-98L00-0B0	116A-12-2
11112-93J00	113A-4	11514-98J00	136A-2		116B-12-2
11115-98L00-001	111A-44	11517-98J00	136A-3	12340-98L00-0C0	116A-12-3
11116-93J01	111A-9	11522-98L01	136A-15		116B-12-3
11117-98L00	113A-5	11531-98L00	136A-4	12340-98L00-0D0	116A-12-4
11118-93J00	206A-1	11541-93J00-019	180A-9		116B-12-4
11119-98L00	111A-36	11591-98L00	180A-8	12340-98L00-0E0	116A-12-5
11141-98L00	111A-10	12100-98810-025	116A-7-2		116B-12-5
	585A-2		116B-7-2	12632-93J11	175A-1
11142-98L00	111A-11	12100-98810-0A0	116A-7-1	12701-98L00	121A-1
	585A-3		116B-7-1	12705-98L00	121A-2
11170-93J01	111A-21	12101-98L20-050	116A-15	12721-98L30	121A-3
11173-93J00	111A-23	12101-98L30-050	116B-15	12729-98L30	121A-4
11174-98L00	163A-24	12102-98L20-050	116A-17	12730-98J02	119A-1
11179-93J00	111A-25	12102-98L30-050	116B-17	12734-98L00	119A-5
	585A-4	12111-98L00-0B0	116A-1	12740-98L00	121A-5
11180-98L00	111A-22	12111-98L10-0B0	116B-1	12748-93J00	121A-6
11183-93J00	111A-24	12121-98L00-0B0	116A-2	12749-93J00	121A-8
11186-15501	111A-37	12121-98L10-0B0	116B-2	12753-93J00	121A-7
11189-93J00	111A-26	12140-98J10	116A-3	12761-98L00	119A-8
	585A-5		116B-3	12762-93J00	119A-9
11193-98J00	163A-1	12140-98J10-050	116A-16	12770-98L00	119A-10
11196-98L00	162A-1		116A-18	12771-93J00	119A-14
11197-98L00	162A-2		116B-16	12772-98L00	119A-16
11198-58B00	163A-2		116B-18	12775-93J00	119A-15
11216-98L10	111A-12	12151-98L00	116A-4	12778-98L00	119A-11
11241-86FA0	113A-37		116B-4		585A-9
11261-93J00	111A-13	12160-98L00	116A-6	12810-93J00	119A-18
	113A-32		116B-6	12812-90J00	119A-20
11261-93J10-Y5S	180A-1-2	12200-98L00	116A-8	12813-73G00	119A-19
11261-93J10-YAY	180A-1-1		116B-8	12831-93J01	119A-22
11291-98L00	111A-34	12242-98J00	116A-9	12832-93J00	119A-23
11293-98L00	113A-1		116B-9	12833-93J00	119A-24
11301-98L00	113A-3	12247-98L00	113A-16	12891-93J00	121A-14
11318-98L00	113A-7	12300-98830	116A-13-1	12892-93J00-218	121A-15-1
11319-98L00	113A-8		116B-13-1	12892-93J00-220	121A-15-2
11330-98L00	113A-12	12300-98830-012	116A-13-2	12892-93J00-223	121A-15-3
11332-98L00	113A-13		116B-13-2	12892-93J00-225	121A-15-4
	585A-6	12300-98840-0AA	116A-12-6	12892-93J00-228	121A-15-5
11333-98L00	113A-14		116B-12-6	12892-93J00-230	121A-15-6
	585A-7	12300-98840-0BA	116A-12-7	12892-93J00-233	121A-15-7
11334-98L00	113A-15		116B-12-7	12892-93J00-235	121A-15-8
11382-93J00	111A-31	12300-98840-0CA	116A-12-8	12892-93J00-238	121A-15-9
11390-98L00	113A-9		116B-12-8	12892-93J00-240	121A-15-10

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12892-93J00-243	121A-15-11	13766-98L00	136A-7		147B-64
12892-93J00-245	121A-15-12	13811-98L00	136A-8	15415-93J10	147A-65
12892-93J00-248	121A-15-13	13812-98L00	136A-9		147B-65
12892-93J00-250	121A-15-14	13813-98L00	163A-20	15421-98L00	147A-66
12892-93J00-253	121A-15-15	13851-98L00	136A-10		147B-66
12892-93J00-255	121A-15-16	14111-98L00	140A-11	15423-98L00	147A-67
12892-93J00-258	121A-15-17	14112-98L00	140A-16		147B-67
12892-93J00-260	121A-15-18	14141-98L00	140A-1	15600-98L10	147B-1
12892-93J00-263	121A-15-19	14142-98L00	140A-3	15600-98L20	147A-1
12892-93J00-265	121A-15-20	14151-98L00	140A-5	15612-98L00	147A-4
12892-93J00-268	121A-15-21		585A-11		147B-4
12892-93J00-270	121A-15-22	14154-93J01	180A-10	15613-98L00	147A-5
12892-93J00-273	121A-15-23	14161-98L00	140A-2		147B-5
12892-93J00-275	121A-15-24	14162-98L00	140A-4	15614-98L00	147A-6
12892-93J00-278	121A-15-25	14171-98L00	140A-6		147B-6
12892-93J00-280	121A-15-26	14172-98L00	140A-8	15626-93J00	147A-7
12892-93J00-283	121A-15-27	14181-98L00	140A-7	15626-93J10	147B-7
12892-93J00-285	121A-15-28		585A-12	15627-93J00	147A-8
12892-93J00-288	121A-15-29	14182-98L00	140A-9		147B-8
12892-93J00-290	121A-15-30		585A-13	15628-99E00	147A-9
12892-93J00-293	121A-15-31	14211-98L00	180A-11		147B-9
12892-93J00-295	121A-15-32	14212-98L00	180A-12	15629-99E10	147A-10
12892-93J00-298	121A-15-33		585A-14		147B-10
12892-93J00-300	121A-15-34	15100-98J00	147A-39	15631-98L00	147A-11
12911-98L00	121A-16		147B-39		147B-11
12915-98L00	121A-17	15100-98L10	147A-38	15632-98L10	147A-41
12921-98L00	121A-18		147B-38		147B-41
12931-78G00	121A-19	15114-93J00	147A-54	15635-98L01	147A-42
12932-24400	121A-20		147B-54		147B-42
12933-69G10	121A-21	15115-93J00	147A-55	15637-98L10	147A-43
13100-98L00	163A-3		147B-55		147B-43
13111-98L00	122A-1	15116-98L10	147A-40	15638-98L00	147A-12
13119-98L00	122A-2		147B-40		147B-12
	585A-10	15191-98L10	147A-57	15639-98L00	147A-13
13134-98J00	163A-14		147B-57		147B-13
13137-98J00	163A-4	15192-98L00	147A-58	15641-98L00	147A-14
13139-98J01	163A-15		147B-58	15641-98L10	147B-14
13140-98L00	163A-5	15193-98L00	147A-59	15642-88L10	147A-15
13147-98J00	163A-6		147B-59		147B-15
13180-98J00	163A-7	15198-98L00	147A-60	15642-90J00	147A-16
13300-98L00	163A-16		147B-60		147B-16
13315-98J10	163A-18	15200-98L00	147A-3	15643-98L00	147A-44
13343-98J10	163A-17	15200-98L10	147B-3		147B-44
13370-93J10	147A-2	15410-98L00	147A-61	15645-93J10	147A-45
	147B-2		147B-61		147B-45
13421-98L00	163A-19	15411-93J10	147A-62	15647-98L00	147A-17
13614-93J00	147B-22		147B-62	15647-98L10	147B-17
13650-52G00	315A-1	15412-93J10	147A-63	15650-93J00	147A-18
13761-98L00	136A-5		147B-63		147B-18
13762-98L00	136A-6	15413-98L00	147A-64	15654-99E00	147A-19

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15674-98L00	147B-19	16531-98L00	113A-39	17913-93J00	401A-3
	147A-46	16539-98L10	113A-40		410A-1
	147B-46	16550-93J00	121A-11	17914-93J00	401A-4
15681-98L00	147A-23	16555-93J01	121A-12		410A-2
	147B-23	16760-93J00	175A-5	17915-98L00	162A-12
15683-98L00	147A-20	16781-93J00	175A-6	17917-87L00	410A-46
	147B-20	16782-93J00	175A-7	18118-93J00	163A-22
	147A-87	16783-93J01	175A-8	18498-87J51	162A-15
15695-98L00	147B-87	16910-98L00	111A-38	18498-96L41	162A-17
	144A-1	16931-98L00	111A-39	18498-96L50	162A-16
15710-98L10	144B-1	16941-98L00	111A-40	18498-98L21	147A-24
	144A-4	17400-98L00	160A-15		147B-24
15715-98L00	144B-4		160B-15	18498-99E11	147A-71
	144A-2	17410-93J01	160A-1		147B-71
15717-82M00	144B-2		160B-1		162A-13
	144A-3	17413-93J02	160A-2		162A-14
15735-98L00	144B-3	17413-93J12	160B-2	18590-68H00	163A-8
	144A-5	17416-93J00	160A-3	18640-98L00	315A-2
	144B-5		160B-3	19115-98L00	326A-25
15751-98L00	144A-6	17450-98L00	220A-48		326B-25
	144B-6	17461-93J00	160A-4		326C-25
15756-98L00	144A-7		160B-4	19116-98L00	326A-26
	144B-7	17471-98L00	160A-5		326B-26
15760-98L00	147A-21	17471-98L10	160B-5		326C-26
	147B-21	17472-98L00	160A-6		
15762-93J00	144A-8		160B-6		
15762-93J10	144B-8		585A-15		
15830-77EA0	144A-9	17560-98L00	160A-7-1	20000	
15830-98J01	147A-68		160B-7-1		
	147B-68	17560-98L10	160A-7-2		
15831-93J00	144A-10		160B-7-2	21152-98L00	204A-1
	144B-10	17562-98L00	160A-8	21153-98L00	204A-2
15831-96J00	147A-69		160B-8	21210-98L00	204A-3
	147B-69	17563-98L00	160A-9	21241-98L00	204A-4
15832-93J00	144B-9		160B-9	22511-99011	336A-1
15852-98L00	147A-70	17564-93J00	160A-10		401A-48
15980-98J00	147B-70		160B-10	25110-98L00	206A-2-1
	520A-41	17581-98L00	162A-3	25110-98L10	206A-2-2
	540A-24	17582-93J00	162A-4	25214-98L00	206A-11
	543A-23	17611-90J00-Y5S	162A-5-2	25300-98L00	206A-3
16113-93J10	175A-2	17611-90J00-YAY	162A-5-1	25315-98L00	206A-4
16400-93J10	175A-3	17631-98L02	407A-1	25411-98L00	206A-5
16431-98L00	113A-17	17635-98L00	407A-2	25500-98L00	220A-1
16432-98L00	113A-18	17660-98L00	162A-6	25700-98L01	407A-39
16433-98L00	113A-19	17670-98L10	162A-7-2	25711-98L00	220A-2
16480-98L00	113A-20	17670-98L20	162A-7-1	29103-93J00	315A-3
16485-98L00	113A-21	17680-98L00	162A-8	29103-93J30	180A-3
16510-96J10	113A-38	17680-98L10	162A-9	29116-93J00	160A-11
16519-93J00	401A-2	17712-98L00	162A-10		160B-11
16520-93J00	175A-4	17714-98L00	162A-11		180A-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
29116-93J10	407A-17	33220-98J00	303A-7	36610-98L30	322A-3
29125-93J00	326A-2	33221-42F00	303A-8	36612-96J00	322A-16
	326B-2	33410-98L00	310A-9	36612-98J20	522A-24
	326C-2	33411-98L10	310A-10	36615-96300	331A-4
29159-93J00	401A-27	33414-98L00	310A-11		522A-9
	405A-13	33799-97E00	340A-9		522A-16
	405B-13	33810-98L01	322A-1		522A-19
29404-93J10	315A-4	33830-98J11	522A-2		522A-21
		33911-88BL0	522A-5		523A-4
		33920-98L50	326A-9		535A-14
30000		33920-98L60	326B-9		601A-8
		33920-98L70	326C-9		601A-16
		33924-98L00	326A-10	36616-98L00	322A-17
			326B-10	36616-98L10	322A-18
			326C-10	36617-88L00	322A-19
31100-98L10	301A-1	33925-93J00	522A-6	36617-93J10	147A-25
31111-94900	340A-2	33925-98J00	326A-11		147A-72
31123-94910	340A-4		326B-11		147B-25
31133-90J10	340A-5		326C-11		147B-72
31133-94910	340A-6	33926-98J00	522A-7		322A-20
31135-94900	340A-7	34000-96L63	601A-1	36617-98L10	322A-21
31136-90J20	340A-8	34000-96L73	601A-9	36617-98L30	322A-22
31150-98L00	301A-2	34002-96L13	602A-1	36617-98L40	121A-24
31170-92J00	301A-3	34011-96L13	601A-2	36617-98L50	322A-23
31173-94920	340A-3		601A-10	36618-43410	322A-4
31173-98L00	301A-4		602A-2	36620-98J31	540A-58-1
31191-63J00	301A-5		602A-12		543A-54-1
31192-92J00	301A-8	34112-96L00	601A-3	36620-98J41	540A-58-2
31220-98L10	301A-6		601A-11		543A-54-2
31261-75F10	301A-9		602A-3	36620-98J51	522A-1
31281-92J10	337A-2		602A-13	36621-98J00	522A-17
31311-63J00	301A-7	34190-88L00	602A-23	36621-98J10	522A-22
31311-93J00	340A-10	34193-96L00	601A-4	36622-98J00	522A-13
31313-86030	301A-11		601A-12	36623-96L01	331A-3
31320-98L00	301A-12		602A-4		535A-13
31340-98L00	301A-10		602A-14	36623-98J20	522A-8
31341-98L00	301A-13	34211-96L00	601A-5	36623-98J30	522A-18
31343-63J00	301A-14		601A-13	36623-98J40	523A-3
31344-63J00	301A-15		602A-5	36624-98J02	522A-15
31912-98L00	301A-16		602A-15	36624-98J11	522A-20
31918-92J01	301A-17	34825-96L00	601A-6	36625-98J10	523A-1
32102-98J01	303A-1		601A-14	36626-98L00	322A-24
32120-98L00	303A-4		602A-6	36627-98J00	523A-5
32160-98L00	303A-5		602A-16	36661-96L20	601A-7
32800-26J02	310A-1	34830-87J20	315A-5		601A-15
32851-93J00	331A-1		315A-6	36662-88L00	602A-27
	535A-19	34840-98J03	315A-7	36662-88L10	601A-17
32890-98L00	310A-2	34841-88L00	315A-8		602A-7
32980-38F00	331A-2	34845-88L01	315A-9		602A-18
	535A-12	36001-88L00	602A-17		602A-31

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
36662-88L20	602A-24	37110-96L00	535A-2	37825-99E10	530A-16
36662-88L30	602A-25	37110-98J01	530A-2	37826-92J10	530A-8
36662-96L00	331A-5	37112-98J00	530A-12		530A-19
	535A-15	37112-98J10	530A-22		535A-9
36663-88L00	601A-18		530A-24	37850-92J00	326A-3
	602A-19	37114-98J00	530A-10		326B-3
	602A-28		535A-5		326C-3
36663-96L00	535A-25	37117-96L00	331A-6	37850-98J02	520A-52
36664-88L00	601A-19		535A-22		540A-26
	602A-8	37139-96L30	535A-6		543A-25
	602A-20	37139-98J10	530A-5	37856-92J00	326A-4
	602A-32	37141-99E00	530A-3-3		326B-4
36664-96L00	535A-26		535A-3-1		326C-4
36665-88L00	601A-20	37141-99E10	530A-3-4	37857-92J00	326A-5
	602A-21		535A-3-2		326B-5
	602A-29	37141-99E20	530A-3-5		326C-5
36665-88L10	601A-21		535A-3-3	37860-87L00	530A-25
	602A-22	37141-99E30	530A-3-6	37862-87L00	530A-26
	602A-30		535A-3-4	38100-98L00	337A-3
36665-96L00	602A-9	37141-99E40	530A-3-7		340A-1
36666-96L00	602A-10		535A-3-5	38410-93J21	326A-7
36667-96L00	601A-22	37141-99E50	530A-3-8		326B-7
36667-96L11	601A-23		535A-3-6		326C-7
36667-96L20	522A-26	37141-99E60	530A-3-9	38415-93J20	326A-8
36667-96L30	601A-24	37141-99E70	530A-3-10		326B-8
36682-92E00	602A-11	37141-99E80	530A-3-11		326C-8
36721-98L10	322A-5	37141-99E90	530A-3-12	38500-93J90	331A-10
36737-98L00	322A-6	37141-99EA0	530A-3-1		530A-13
36738-98L00	322A-7	37141-99EB0	530A-3-2		535A-17
36770-98J13	522A-10-1	37143-96L00	535A-4	38800-98L00	326A-12
36770-98J22	522A-10-2	37143-99E00	530A-4		326B-12
36775-98J00	522A-11	37170-96L00	535A-21		326C-12
36776-98J00	522A-12	37171-96L02	331A-7	38831-98L00	326A-13
36890-98J00	520A-55		535A-23		326B-13
	540A-57	37172-96L01	331A-8		326C-13
	543A-53		535A-24	38860-76F01	322A-9
36894-87D00	335A-22	37173-96L00	535A-27		322A-10
	336A-2	37173-96L10	331A-9		326A-31
	337A-42		535A-16		326B-31
	405A-7	37722-93J12	326A-1		326C-31
	405B-7		326B-1	38860-96L01	331A-11
36895-87D01	337A-43		326C-1		535A-18
	337A-44	37803-93J05	530A-15	38892-98L00	326A-14
36990-87D00	522A-25	37820-93J10	530A-6		326B-14
37100-96L01	535A-1		530A-17		326C-14
37100-98J05	530A-1		535A-7	38895-98L11	326A-15
37100-98J11	530A-11	37820-99E02	315A-11		326B-15
37100-98J21	530A-21	37823-92E01	530A-7		326C-15
37100-98J31	530A-23		530A-18	38895-98L20	326A-16
37105-96L02	535A-11		535A-8		326B-16

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	326C-16		337A-28	52115-98L00-YAY	405A-21-1
38915-90J00	326A-32	48452-93J10	337A-15		405B-21-1
	326B-32		337A-29	52118-98L00	405A-22
	326C-32	48500-98L01	337A-4		405B-22
39950-88L02	602A-26	48571-93J00	337A-33	52131-98L00-Y5S	405B-27-2
		48572-87J10	337A-21	52131-98L00-YAY	405B-27-1
		48573-93J00	337A-31	54112-93J00	401A-26
		48582-95E01	337A-6		405A-11
		48583-95E00	337A-24		405B-11
		48585-95E00	337A-34	54120-98L00	401A-24
		48605-93J00	337A-7	54127-98L00	401A-32
41111-98L00-Y5S	335A-1-2	48610-98L00	337A-8	54130-98L01	401A-25
41111-98L00-YAY	335A-1-1	48627-93J00	337A-19	54137-93J02	401A-29
41117-93J02	335A-3	48630-98L01	337A-9	54140-98J10	401A-33
41121-98L00-Y5S	335A-2-2	48633-93J00	337A-10	54151-98L00	405A-9
41121-98L00-YAY	335A-2-1	48650-93J00	337A-16		405B-9
41122-93J02	335A-4	48691-93J00	337A-11	54160-98L00	405A-10
41130-93J12	335A-6	48662-87J20	337A-22		405B-10
41135-93J11	335A-7	48864-93J01	337A-23	54165-98L00	405A-18
41155-93J02	335A-13				405B-18
41220-93J11	336A-13			54166-95J02	405B-23
41224-95E01	336A-15			54180-98L00	401A-47
41230-96J00	336A-16			54211-98L00-Y5S	405A-15-2
41233-95E10	336A-17				405B-15-2
41234-93J11	336A-14			54211-98L00-YAY	405A-15-1
43111-93J24-Y5S	336A-3-2	51111-98L00-Y5S	401A-1-2		405B-15-1
43111-93J24-YAY	336A-3-1	51111-98L00-YAY	401A-1-1	54221-93J00-Y5S	405A-16-2
43114-93J00	336A-4	51116-98L00	401A-5		405B-16-2
43211-93J00	336A-5	51120-98L00	401A-10	54221-93J00-YAY	405A-16-1
43711-97E01	336A-6	51123-98L00	401A-13		405B-16-1
43750-93J21-Y5S	336A-7-2	585A-16	401A-11	55100-98850-Y5S	407A-3-2
43750-93J21-YAY	336A-7-1	51124-93J01	401A-11	55100-98850-YAY	407A-3-1
45421-87D03	335A-16	51125-93J00	401A-12	55122-98L00	407A-20
48000-98L01	337A-1	51140-98L00-019	401A-17	55128-93L00	407A-6
48121-93J20	337A-25	51142-98L00	401A-18	55320-94900	335A-14
48125-93J10	337A-26		585A-17	55321-87J01	111A-15
48126-93J00	337A-30		401A-20		113A-33
48128-93J11	337A-32	51151-98L00	401A-21		180A-2-1
48140-93J01	335A-18	51152-98L00	401A-21	55321-87J11	180A-2-2
48144-93J00	335A-19	51161-98L00	401A-38	55321-93J01	405A-19
48145-93J00	335A-21	51162-98L00	401A-40		405B-19
48311-93J01	337A-35	51165-98L00	401A-39		407A-7
48320-93J00	337A-5	51170-98L00	162A-18		335A-24
48321-93J00	337A-36	51211-98L00	401A-6	55321-94910	220A-9
48400-98L00	337A-12		585A-18	56120-98L00	220A-9
48401-98L00	337A-17	52111-98L00-Y5S	405A-1-2	56122-98L00	220A-15
	337A-18		405B-1-2	56123-98L00	220A-16
48427-87D00	337A-20	52111-98L00-YAY	405A-1-1	56126-98L00	220A-17-1
	337A-13		405B-1-1	56126-98L10	220A-17-2
48451-93J00	337A-27	52115-98L00-Y5S	405A-21-2	56126-98L20	220A-17-3
	337A-14		405B-21-2	56126-98L30	220A-17-4

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
56126-98L40	220A-17-5	58631-98L00	407A-36	61426-98L10	420A-5
56126-98L50	220A-17-6	58640-98L00	407A-37		420B-5
56126-98L60	220A-17-7	58641-98L00	407A-21		420C-5
56126-98L70	220A-17-8			61427-98L00	420A-6
56130-98L12	407A-15				420B-6
56150-98L00	220A-18				420C-6
57110-98L00	220A-26-1	60000		61428-98L00	420A-7
57110-98L10	220A-26-2				420B-7
57113-98L00	220A-27				420C-7
57130-87D10	405A-4			61429-98L00	420A-8
	405B-4				420B-8
57301-98810	220A-36	61124-98L20	410A-41		420C-8
57600-98820	220A-42	61131-98L01-Y5S	410A-3-2	61430-98L00-20H	420A-9
57610-98L00	220A-39	61131-98L01-YAY	410A-3-1		420B-9
57622-98L00	220A-40	61131-98L02-Y5S	410A-3-4		420C-9
57635-98L00	220A-47	61131-98L02-YAY	410A-3-3		420A-10
57710-98L00	407A-4	61134-98L00	410A-4	61432-98L00-20H	420B-10
58500-98L00	407A-28-1	61140-98L01-Y5S	410A-5-2		420C-10
58500-98L10	407A-28-2	61140-98L01-YAY	410A-5-1		420A-11
58500-98L20	407A-28-3	61140-98L02-Y5S	410A-5-4	61433-98L00	420B-11
58500-98L30	407A-28-4	61140-98L02-YAY	410A-5-3		420C-11
58500-98L40	407A-28-5	61414-98L00	420A-2	61434-98L00	420A-12
58500-98L50	407A-28-6		420B-2		420B-12
58500-98L60	407A-28-7	61416-98L00	420C-2		420C-12
58500-98L70	407A-28-8		420A-44	61435-98L00	420A-46
58500-98L80	407A-28-9		420B-44	61435-98L60	420A-46
58500-98L90	407A-28-10	61420-98821-AML	420C-44		420C-46
58500-98LA0	407A-28-11		420A-1-1	61437-98L00	420C-46
58500-98LB0	407A-28-12		420B-1-1		420A-13
58500-98LC0	407A-28-13		420C-1-1		420B-13
58520-98L00	407A-29	61420-98821-BBK	420A-1-2		420C-13
58531-98L00	407A-32		420B-1-2	61438-98L00	420A-14
58540-98L00	407A-38		420C-1-2		420B-14
58541-98L00	407A-33	61421-98L00-Y5S	420A-3-2		420C-14
58551-98L00	407A-34		420A-3-2	61439-98L00	420A-15
			420B-3-2		420A-15
58561-98L00	407A-35	61421-98L00-YAY	420C-3-2		420B-15
58600-98L00	407A-30-1		420A-3-1		420C-15
58600-98L10	407A-30-2		420B-3-1	61441-98L00	420A-41
58600-98L20	407A-30-3		420C-3-1		420B-41
58600-98L30	407A-30-4	61422-98L00	420A-45		420C-41
58600-98L40	407A-30-5	61422-98L60	420A-45	61458-90J00	410A-47
58600-98L50	407A-30-6		420B-45	61475-98L00	420A-16
58600-98L60	407A-30-7	61424-98L00	420C-45		420B-16
58600-98L70	407A-30-8		420A-49-1		420C-16
58600-98L80	407A-30-9		420B-49-1	61476-98L00	420A-17
		61424-98L10	420C-49-1		420B-17
58600-98L90	407A-30-10		420A-49-2		420C-17
58600-98LA0	407A-30-11		420B-49-2	61494-93J00	136A-18
58600-98LB0	407A-30-12	61425-98L00	420C-49-2		
58600-98LC0	407A-30-13		420A-4	61561-98L00	420A-18
58620-98L00	407A-31		420B-4		420B-18
			420C-4		420C-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61562-98L00	420A-19	67211-98J20	520A-18	67252-98J10	540A-21
	420B-19		540A-2		543A-20
	420C-19		543A-2	67254-98J00	520A-14
61565-98L00	420A-20	67211-98J30	540A-48	67255-98J00	520A-8
	420B-20	67212-98J20	543A-7	67256-98J00	520A-10
	420C-20	67212-98J30	540A-8	67257-98J00	520A-54
61591-98L00	420A-21	67222-98J00	520A-32		540A-43
	420B-21	67222-98J10	540A-10		543A-43
	420C-21		543A-9	67258-98J00	520A-9
61610-98L00	420A-22	67222-98J20	540A-49	67259-98J00	520A-11
	420B-22	67223-98J00	520A-36	67261-98J00	540A-5
	420C-22		540A-17		543A-5
61621-93J01	420A-23		543A-16	67261-98J10	540A-6
	420B-23	67226-98J00	540A-37	67261-98J20	520A-5
	420C-23		543A-36	67261-98J30	520A-6
61632-93J00	410A-24	67226-98J10	520A-26	67263-98J00	540A-7
61632-98L00	410A-25		540A-41		543A-6
61633-93J00-Y5S	410A-26-2	67227-98J00	520A-42	67263-98J20	520A-4
61633-93J00-YAY	410A-26-1	67227-98J10	540A-25	67264-98J00	520A-3
61634-93J00-Y5S	410A-27-2		543A-24	67265-98J00	520A-7
61634-93J00-YAY	410A-27-1	67227-98J20	520A-21	67269-98J00	540A-27
61641-93J10	410A-28	67227-98J30	520A-22		543A-26
	410A-29	67228-98J50	520A-47	67269-98J10	520A-53
61641-93J20	410A-30		540A-47	67269-98J20	520A-19
61645-93J01-Y5S	410A-31-2		543A-47	67269-98J30	540A-44
61645-93J01-YAY	410A-31-1	67233-98J00	520A-15		543A-44
61649-93J00	410A-48-1	67233-98J10	540A-14	67271-98J20	520A-2
61649-93J10	410A-48-2		543A-13	67271-98J30	543A-8
61652-98L00	410A-32	67234-98J00	520A-17	67271-98J40	540A-9
61673-93J01	410A-33	67235-98J00	520A-34	67272-98J00	520A-51
61682-98L00	420A-24	67235-98J10	540A-12	67272-98J10	540A-20
	420B-24		543A-11		543A-19
61683-98L00	420C-24	67236-98J00	520A-33	67273-98J00	543A-27
	420A-25	67236-98J10	540A-11	67273-98J10	540A-51
	420B-25		543A-10		543A-48
	420C-25	67237-98J00	520A-35	67273-98J20	540A-28
61810-98L00-Y5S	410A-6-2	67237-98J30	543A-12	67273-98J30	540A-52
61810-98L00-YAY	410A-6-1	67237-98J40	540A-13		543A-49
61814-98L00	410A-7	67237-98J50	540A-56	67274-98J00	543A-29
61820-98L00-Y5S	410A-8-2	67238-98J00	520A-29	67277-98J00	540A-53
61820-98L00-YAY	410A-8-1	67239-98J00	540A-16		543A-50
61827-98L00	410A-9		543A-15	67284-98J10	540A-42
61830-98L00-Y5S	410A-10-2	67246-98J00	520A-31		543A-42
61830-98L00-YAY	410A-10-1	67246-98J10	540A-4	67287-92E00	540A-15
61861-98L00-20H	410A-11		543A-4		540A-39
65700-93J11	430A-1	67246-98J20	540A-50		543A-14
65770-93J12	430A-2	67251-98J00	540A-3		543A-38
67200-98J04	543A-1		543A-3	67287-98J00	520A-25
67200-98J14	540A-1	67251-98J20	520A-12	67288-92E20	540A-36
67200-98J23	520A-1	67252-98J00	520A-38		543A-30

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67288-98J00	520A-44 540A-35 543A-34	67361-90J10 67467-98L00 68111-93J00	410A-43 204A-5 420A-42		147A-52 147A-80 147B-36
67288-98J10	520A-46 540A-45 543A-45		420B-42 420C-42 136A-19		147B-52 147B-80 162A-34
67288-98J20	520A-39 540A-22 543A-21	69711-93E10			303A-12 322A-36 322A-37
67288-98J30	540A-46 543A-46				326A-17 326B-17
67288-98J40	540A-34 543A-40	70000		01550-0616A 01550-0616C	326C-17 175A-11 147A-81
67288-98J50	520A-23				147B-81
67288-98J60	520A-27				204A-12
67288-98J70	520A-30		420A-43		303A-9
67292-98J00	520A-40 540A-23 543A-22		420B-43 420C-43		326A-22 326B-22
67294-98J00	520A-13				326C-22
67296-94300	520A-43 540A-33 543A-33				420A-28 420A-29
67296-98J00	540A-32 543A-39	90000			420A-30 420A-31
67296-98J10	520A-45 543A-41		99011-98L30-054	420A-50-1 420B-50-1	420B-28 420B-29
67296-98J20	543A-35		99011-98L30-059	420A-50-2	420B-30
67296-98J30	540A-30			420B-50-2	420B-31
67296-98J50	520A-50 540A-18 543A-17		420C-50		420C-28 420C-29
67296-98J60	520A-48 540A-29 543A-28	00000			420C-30 420C-31
67296-98J90	540A-40 543A-31		01421-08357 01547-06127	163A-27 310A-12	119A-25 119A-26
67296-98JA0	520A-16 540A-19 543A-18		01547-06167	322A-35 420A-26 420B-26	136A-13 140A-14 162A-35
67296-98JB0	520A-20			420C-26	162A-36
67296-98JC0	520A-24	01547-06207	111A-4	01550-06257	310A-7
67296-98JD0	520A-28		111A-8	01550-0625C	111A-41
67296-98JE0	520A-37		420A-27		121A-13
67296-98JF0	540A-54 543A-51		420B-27 420C-27		136A-16 140A-15
67296-98JG0	540A-31 543A-32	01547-0625C 01547-06507	111A-29 111A-30		147A-82 147B-82
67297-98J00	540A-55 543A-52	01550-0612A 01550-0612C	113A-25 147A-36		310A-8 326A-23 326B-23

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	326C-23 121A-23 136A-14		116B-11 401A-8 326A-24	09100-12092 09100-12124 09100-12125	335A-9-3 405A-23 335A-9-4
01550-0630C	147A-83 147B-83	01550-1050A 01560-0830C	326B-24 326C-24	09100-12126 09103-05026	335A-9-5 410A-34
	420A-32 420B-32	01570-06127	147A-53 147B-53	09103-06093 09103-06231	315A-12 303A-10
01550-06357	420C-32	02142-0408B	147A-22	09103-06266	111A-2
01550-0816C	113A-26 163A-10	02142-0612A 02142-06167	111A-28 322A-40		111A-6
	163A-28		322A-41	09103-06267	147A-73
01550-0820C	410A-12 111A-17 111A-35	02162-05207 03122-05165	163A-12 530A-9 530A-20	09103-06278 09103-06281	147B-73 335A-20 111A-16 113A-34
	113A-2 113A-27	03542-06169	535A-10 420A-33		180A-4 401A-14
01550-0830A	113A-36 420A-35 119A-13		420A-34 420A-35 420A-36	09103-08109 09103-08370 09103-08379	163A-23 113A-22 407A-18
	119A-17 119A-21		420A-37 420B-33	09103-10461 09103-12125	407A-19 303A-2
01550-0830C	401A-16 111A-43 301A-19		420B-34 420B-35 420B-36	09106-05030 09106-06075 09108-08143	303A-6 113A-10 122A-3
	401A-22 322A-39		420B-37 420C-33	09108-08189	144A-14 144B-14
01550-08357 01550-0835A 01550-0835C	113A-28 163A-11 163A-29		420C-34 420C-35 420C-36	09108-10115 09111-06253 09116-06121	405B-28 410A-15 162A-19
	326A-29 326B-29 326C-29	04211-11129	420C-37 163A-13 163A-31		162A-20 335A-15 410A-35
01550-0840C	113A-29 147A-37 147B-37	04211-13149 04221-08129 06111-07004	119A-12 220A-21 206A-13	09116-06127 09116-06202 09116-06215	310A-3 136A-17 326A-18
	326A-30 326B-30 326C-30	08110-60020 08113-60020 08113-62000	175A-15 206A-14 206A-15		326B-18 326C-18 140A-10
01550-08457 01550-0845A 01550-08507 01550-0855A 01550-08607	113A-30 175A-12 113A-41 119A-7 111A-18 111A-19	08113-69047 08221-16256 08310-00067 08316-10087 08316-1008C	206A-16 220A-33 322A-42 322A-2 122A-5 144A-15	09116-06228 09116-06236 09116-06516 09116-06524	405A-20 405B-20 407A-8 401A-41 147A-56
	163A-30 401A-23		144B-15 163A-33	09116-08122	147B-56 401A-19 401A-36
01550-08657 01550-0865A 01550-0885A 01550-1025A	113A-31 175A-13 175A-14 116A-11	08321-01067 08331-41559 09100-12085 09100-12086	322A-43 220A-14 335A-9-2 335A-9-1	09116-08128 09116-08131	180A-19 160A-12 160B-12 401A-45

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09116-08137	326A-27	09159-14020	335A-17	09169-08038	401A-37
	326B-27	09159-16027	220A-4		407A-25
	326C-27		220A-31	09169-08042	147A-26
09116-08170	410A-13	09159-22006	335A-8		147B-26
09116-08175	122A-4	09159-27001	220A-28	09169-08050	410A-19
09116-10134	113A-42	09160-05024	540A-38	09169-10023	407A-27
09116-10135	401A-30		543A-37	09180-08229	322A-27
	401A-46	09160-05029	315A-15	09181-12158	175A-9
09116-10137	401A-34	09160-06082	336A-20	09181-25051	220A-6-1
09116-10146	111A-42	09160-06084	310A-4		220A-34-1
09116-10150	407A-9	09160-06094	206A-6	09181-25052	220A-6-2
09116-10175	337A-41	09160-06104	520A-49		220A-34-2
	401A-31	09160-08091	204A-7	09181-25054	220A-6-4
	401A-35		206A-7		220A-34-4
	405A-17	09160-08161	163A-34	09181-25056	220A-6-6
	405B-17	09160-10104	116A-10		220A-34-6
09116-10176	180A-20		116B-10	09181-25057	220A-6-7
	405A-2	09160-10129	206A-8		220A-34-7
	405B-2	09160-10141	407A-11	09181-25058	220A-6-8
09116-10184	180A-21	09160-12066	405A-25		220A-34-8
09120-06016	405A-24		405B-25	09181-25059	220A-6-9
	405B-24	09160-13014	410A-36		220A-34-9
09125-05048	315A-13	09160-13021	335A-12	09181-25060	220A-6-10
09125-06063	315A-14	09160-13022	335A-11		220A-34-10
	335A-5	09160-14073	405A-12	09181-25061	220A-6-11
	335A-23		405A-14		220A-34-11
	336A-8		405B-12	09181-25062	220A-6-12
	336A-18		405B-14		220A-34-12
	337A-45	09160-14076	401A-9	09181-25063	220A-6-13
	337A-46	09160-15051	401A-28		220A-34-13
	337A-47	09160-16026	220A-5	09181-25130	220A-6-14
	405A-6	09160-16055	405A-26		220A-34-14
	405A-8		405B-26	09181-25160	220A-6-3
	405B-6	09160-18019	407A-23		220A-34-3
	405B-8	09160-36007	220A-41	09181-25162	220A-6-5
09131-05004	530A-27	09160-39004	336A-9		220A-34-5
09136-06148	410A-14	09162-10005	337A-38	09181-30037	220A-32-1
09139-06135	410A-16-1	09164-14008	410A-37	09181-30038	220A-32-2
	410A-16-2	09168-06023	113A-23	09181-30039	220A-32-3
	410A-18	09168-10034	407A-12	09181-30040	220A-32-4
09139-06136	410A-17	09168-12012	180A-15	09181-30041	220A-32-5
09140-05005	315A-10	09169-06053	322A-25	09181-30042	220A-32-6
09140-06023	204A-6		322A-26	09181-30046	220A-32-7
09140-10031	337A-37	09169-06062	136A-11	09181-30158	220A-32-8
	407A-10		310A-5	09181-30164	220A-32-9
09140-10032	336A-19		326A-19	09181-30165	220A-32-10
09140-36003	220A-3		326B-19	09181-39001	336A-10
09141-18005	407A-22		326C-19	09181-40004	220A-7-1
09159-08136	163A-32	09169-06093	147A-47	09181-40005	220A-7-2
09159-12062	335A-10		147B-47	09181-40006	220A-7-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-40007	220A-7-4		111A-7	09282-15010	407A-16
09181-40008	220A-7-5		111A-27	09282-17011	119A-27
09181-40009	220A-7-6		401A-7	09282-22003	204A-10
09181-40010	220A-7-7		401A-15	09282-24004	220A-50
09181-40011	220A-7-8	09206-11006	326A-28	09282-30009	220A-44
09181-40012	220A-7-9		326B-28	09282-39001	336A-11
09181-40013	220A-7-10		326C-28	09282-45001	220A-13
09181-40014	220A-7-11	09206-13019	220A-22	09283-32044	119A-4
09181-40015	220A-7-12	09206-14004	113A-6	09283-91001	116A-14
09181-50020	220A-35-1	09206-15001	111A-20		116B-14
09181-50021	220A-35-2	09208-06009	410A-44	09289-05012	121A-22
09181-50022	220A-35-3	09246-08006	401A-42	09300-40003	220A-45
09181-50023	220A-35-4	09247-14041	144A-11	09306-04005	410A-39
09181-50024	220A-35-5	09247-14042	144B-11	09306-13007	410A-40
09181-50025	220A-35-6	09248-12009	180A-16	09306-24001	337A-39
09181-50026	220A-35-7	09248-26003	401A-43	09320-04009	322A-28
09181-50027	220A-35-8		147A-74	09320-08021	322A-8
09181-50028	220A-35-9		147B-74	09320-08076	322A-29
09181-50029	220A-35-10	09261-05006	121A-10	09320-08086	147A-27
09181-77003	220A-8-1	09262-17019	204A-9		147B-27
09181-77004	220A-8-2	09262-40017	119A-3	09320-09016	136A-12
09181-77005	220A-8-3		220A-38		310A-6
09181-77006	220A-8-4	09262-40018	119A-2		326A-20
09181-77007	220A-8-5	09262-55002	220A-51		326B-20
09181-77008	220A-8-6	09263-30064	220A-43		326C-20
09181-77009	220A-8-7	09263-45005	220A-10	09320-09039	162A-22
09181-77010	220A-8-8	09265-25024	220A-19	09320-10503	162A-23
09181-77011	220A-8-9	09265-25038	220A-20	09320-11013	410A-20
09181-77012	220A-8-10	09265-28006	220A-29	09320-12072	147A-28
09181-77013	220A-8-11	09265-30024	220A-37		147B-28
09181-77014	220A-8-12	09265-50001	407A-5	09321-06013	322A-30
09181-77015	220A-8-13	09265-50002	220A-11	09321-10030	410A-21
09200-08074	204A-8	09280-00047	220A-12	09329-10024	420A-38
09202-04022	410A-38	09280-00049	140A-12		420B-38
09202-05032	121A-9	09280-05007	113A-11		420C-38
09202-06031	160A-13	09280-10009	163A-9	09329-12004	420A-39
	160B-13	09280-10012	407A-14		420B-39
	303A-3	09280-18004	113A-24		420C-39
	407A-26	09280-21015	220A-23	09329-14002	410A-23
09202-08006	180A-17	09280-22019	111A-14	09343-70503-040	147A-48
	180A-18		113A-35		147B-48
	405A-3		180A-5	09343-70503-600	147A-86
	405B-3	09280-22020	175A-10		147B-86
	405B-29	09280-26006	111A-32	09352-50003-06A	147A-29
	407A-13		162A-21		147B-29
09202-08007	206A-9		220A-24	09352-50903-600	162A-24
09204-01006	206A-10	09280-26014	401A-44		162A-25
	336A-21	09280-55001	140A-13		162A-26
09204-03003	407A-24	09280-69001	220A-49	09352-70113-600	162A-27
09206-08001	111A-3	09280-70012	119A-6	09360-14009	144A-12

SUZUKI DF350A/325A PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Service Engineering Department
300 Takatsuka, Minami, Hamamatsu, Japan

Copyright © SUZUKI MOTOR CORPORATION 2018 All Rights Reserved

SUZUKI MOTOR CORPORATION