

SUZUKI

PARTS CATALOGUE

DF300AP/250AP

DF300AP

DF250AP



OUTBOARD MOTOR

E01/E40

2016-2

2ND EDITION

This part catalogue supersedes all the following part catalogue with immediate effect

Model of catalogue	Parts catalogue No.
DF300AP/250AP	9900B-45331

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DF250A/300A production start 2015.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	X, XX	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 30002P-123456	PTT	: Power trim and tilt
123456~	: From E. NO. 30002P-123456		
12 x 34 x 5.6	 Figures in the description column		
	show the dimensions of parts.		
ID OD T(or W, L)			

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	COLOR	ENGINE No.
DF250AP	E01, E40	25003P	X, XX	0EP, Y5S	25003P-610001~
DF300AP	E01, E40	30002P	X, XX	0EP, Y5S	30002P-610001~

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.111A

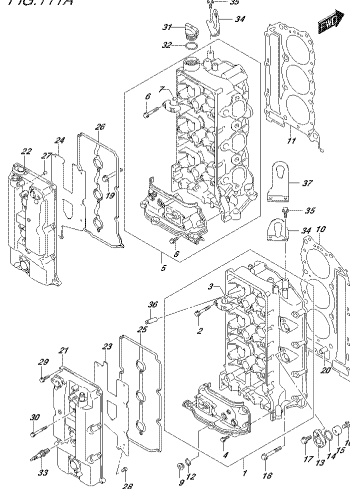


DCRDA_EPL_016_1114
CYLINDER HEAD

FIG.113A

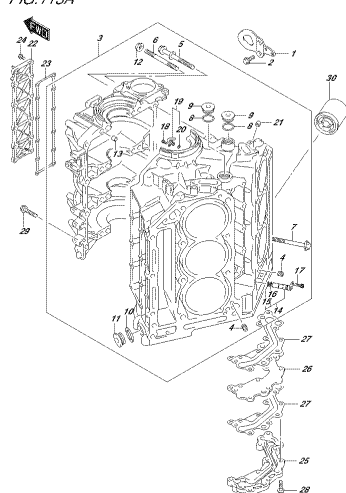


DCRDA_EPL_016_1134
CYLINDER BODY

FIG.116A

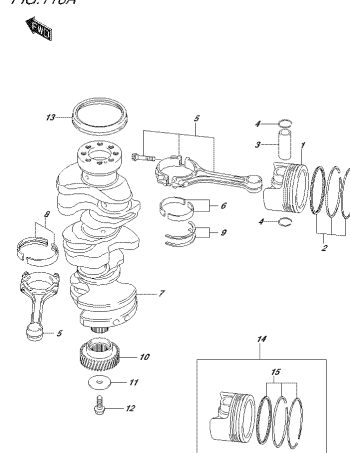


DCRDA_EPL_016_1164
CRANKSHAFT

FIG.119A

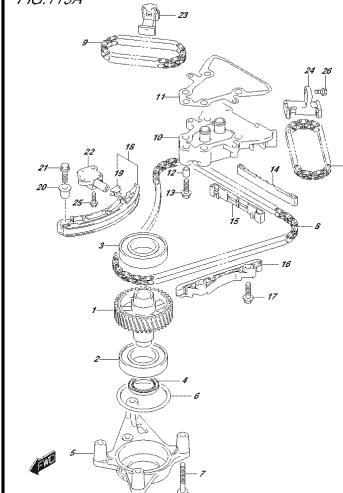


DCRDA_EPL_016_1194
CRANKSHAFT

FIG.121A

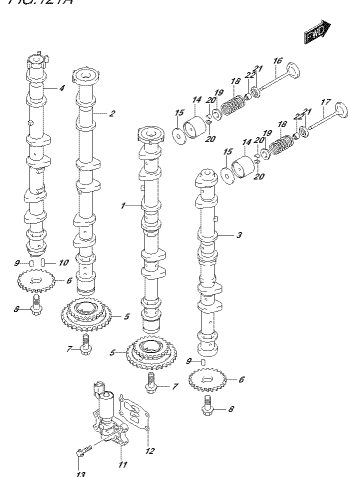


DCRDA_EPL_016_1214
CRANKSHAFT

FIG.122A

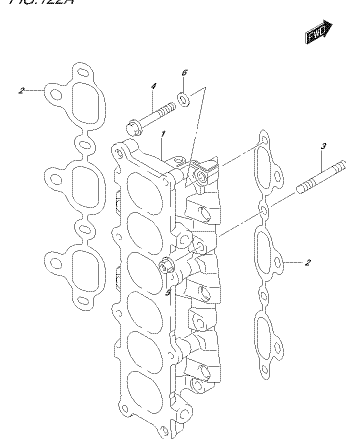


DCRDA_EPL_016_1224
PISTON AND RING

FIG.136A

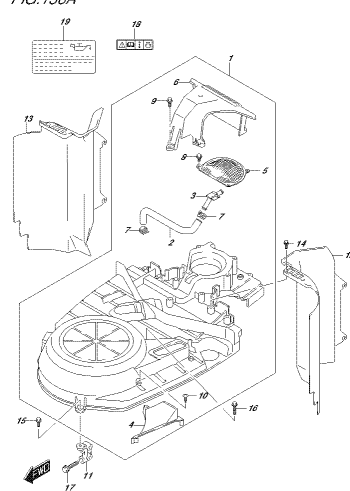


DCRDA_EPL_016_1364
RING GEAR COVER

FIG.140A

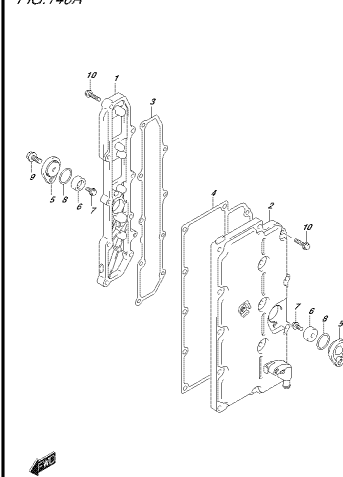


DCRDA_EPL_016_1404
RING GEAR COVER

FIG.144A

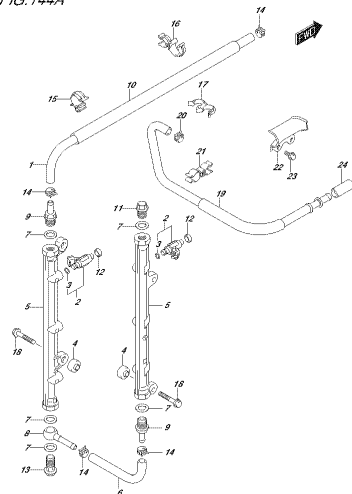


DKBDA.EP1.016.144A
FUEL PUMP/NOZZLE

FIG.144B

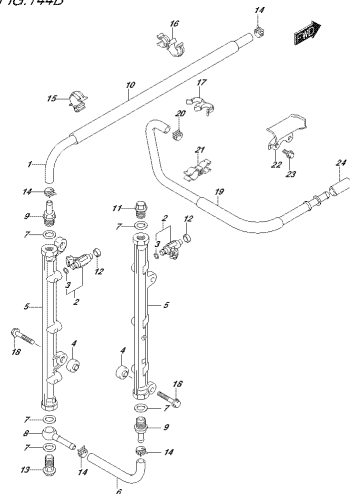


DKBDA.EP1.016.144B
FUEL PUMP/NOZZLE

FIG.144C

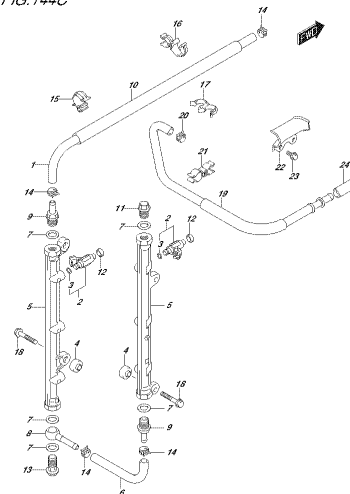


DKBDA.EP1.016.144C
FUEL PUMP/NOZZLE

FIG.144D

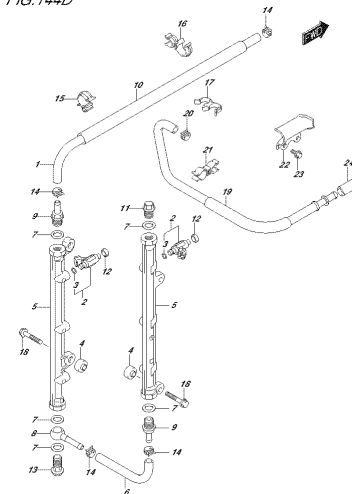


DKBDA.EP1.016.144D
FUEL PUMP/NOZZLE

FIG.147A

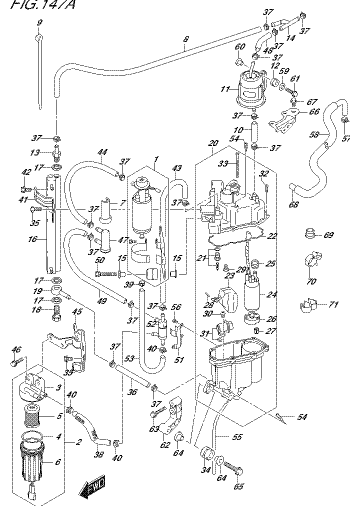


DKBDA.EP1.016.147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147B

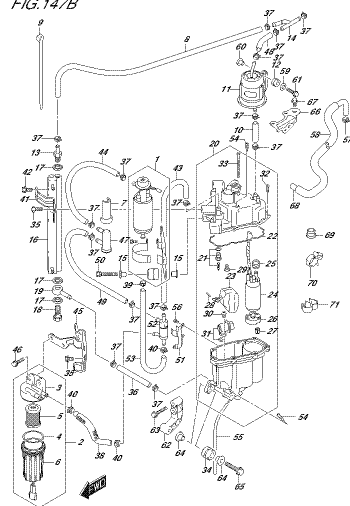


DKBDA.EP1.016.147B
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147C

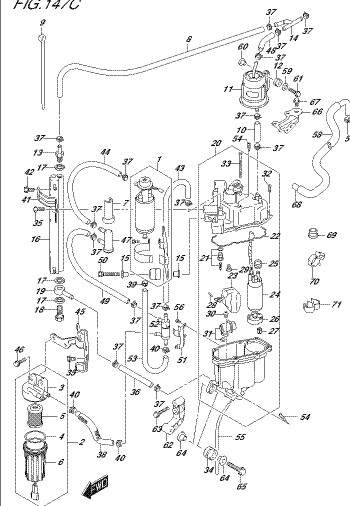


DKBDA.EP1.016.147C
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147D

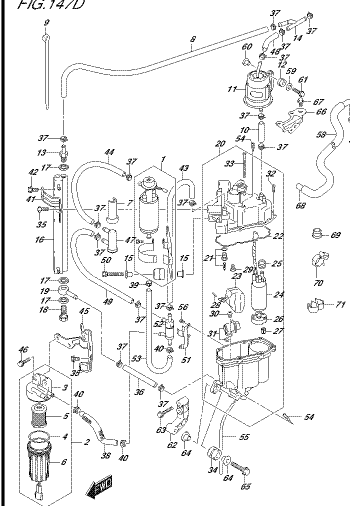


DKBDA.EP1.016.147D
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.160A

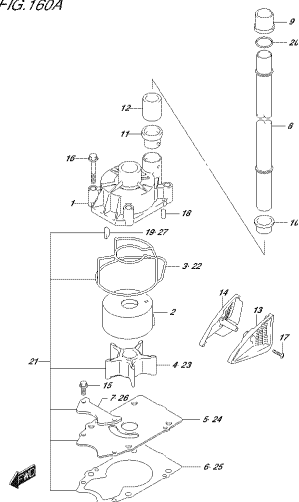


DEKRA, EPT, 016, 160A
SW LEO PUMP

FIG.160B

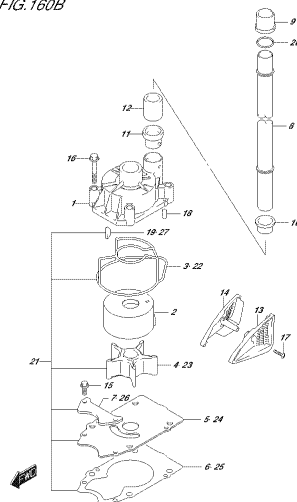


DEKRA, EPT, 016, 160B
SW LEO PUMP

FIG.160C

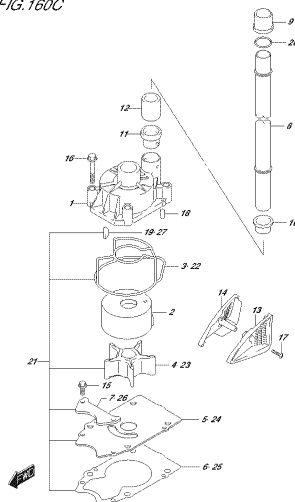


DEKRA, EPT, 016, 160C
SW LEO PUMP

FIG.160D

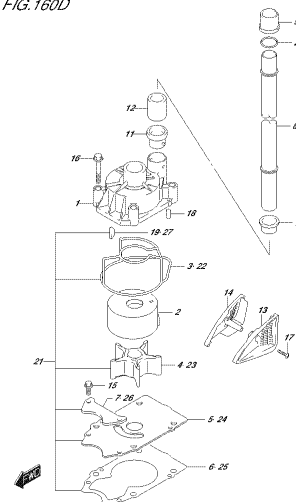


DEKRA, EPT, 016, 160D
SW LEO PUMP

FIG.162A

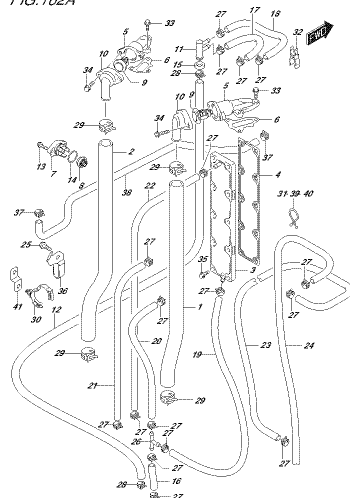


DEKRA, EPT, 016, 162A
THERMOSTAT

FIG.163A

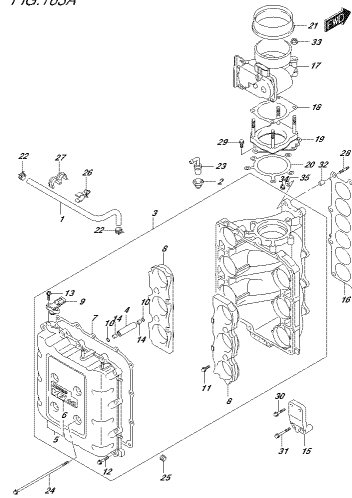


DEKRA, EPT, 016, 163A
THROTTLE BODY

FIG.175A

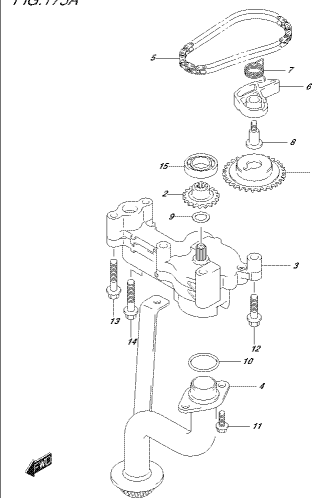


DEKRA, EPT, 016, 175A
OIL PUMP

FIG.180A

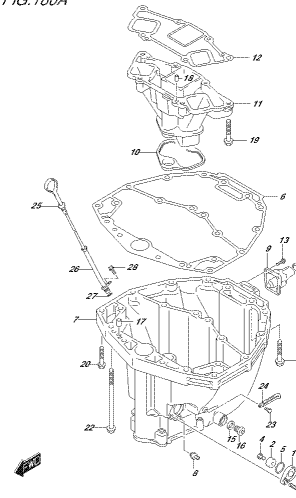


DEKRA, EPT, 016, 180A
OIL PAK

FIG.204A

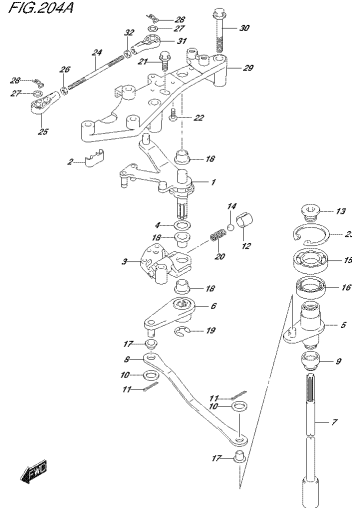


DCRDA, EPT, 016, 3044
CLUTCH SHIFT

FIG.206A

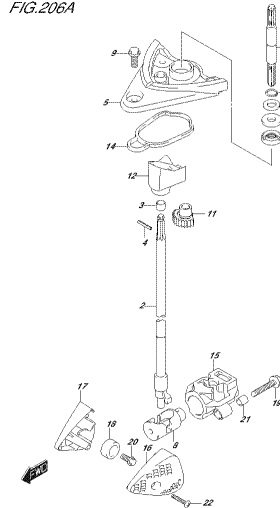


DCRDA, EPT, 016, 3044
CLUTCH SHIFT

FIG.206B

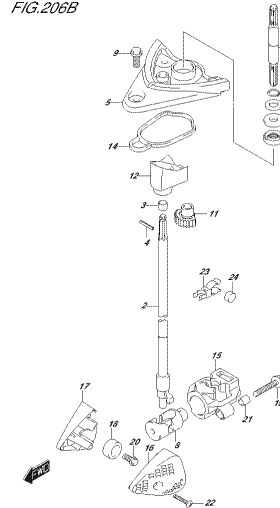


DCRDA, EPT, 016, 3045
CLUTCH SHIFT

FIG.220A

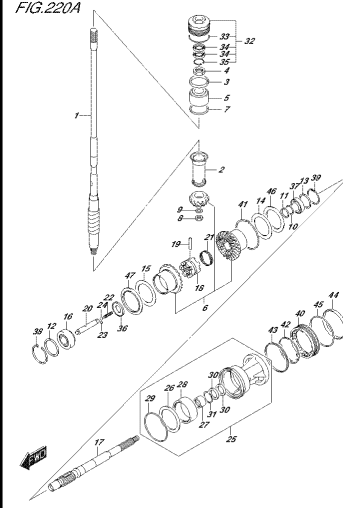


DCRDA, EPT, 016, 3034
FRONT REFRIGERATION COOL

FIG.220B

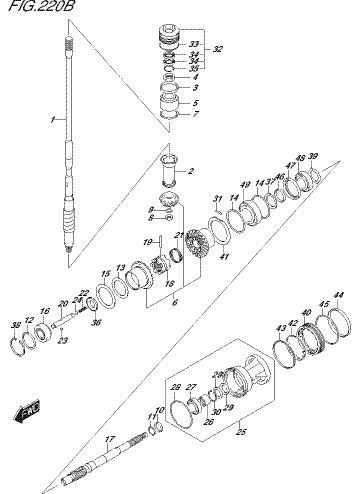


DCRDA, EPT, 016, 3039
TRANSMISSION

FIG.301A

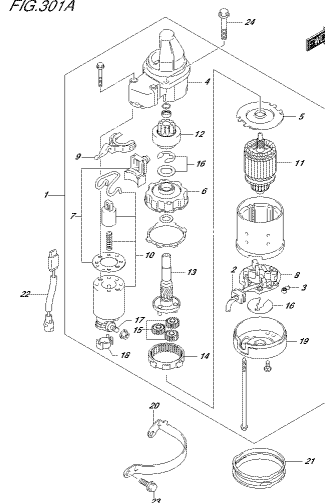


DCRDA, EPT, 016, 3014
STARTING MOTOR

FIG.303A

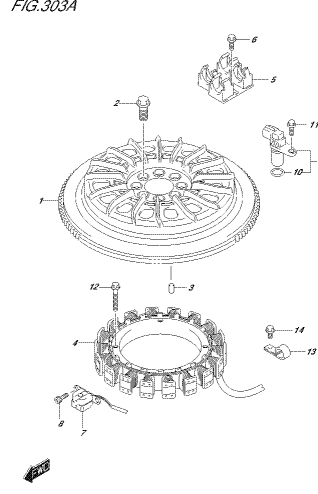


DCRDA, EPT, 016, 3034
MAGNET

FIG.310A

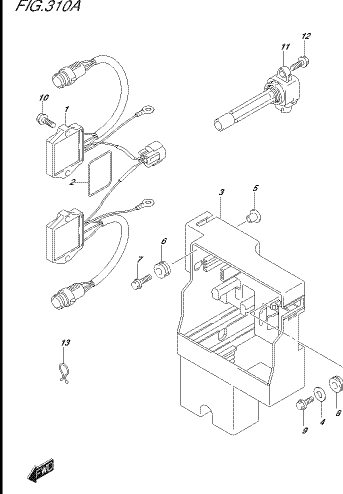


DCRDA, EPT, 016, 3104
REFRIGERATION COOL

FIG.315A

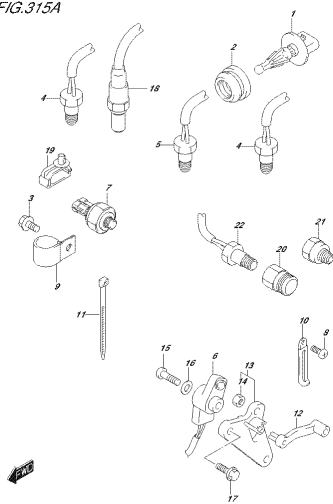


DCR04A_EPT1_016_315A
SS3020

FIG.322A

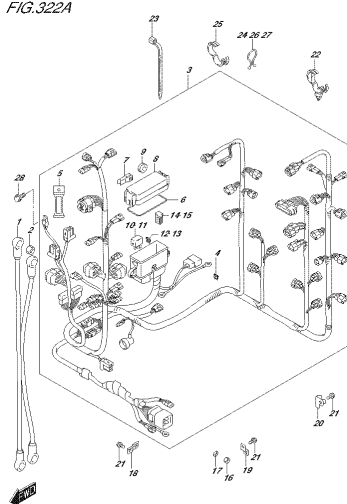


DCR04A_EPT1_016_322A
04606533

FIG.326A

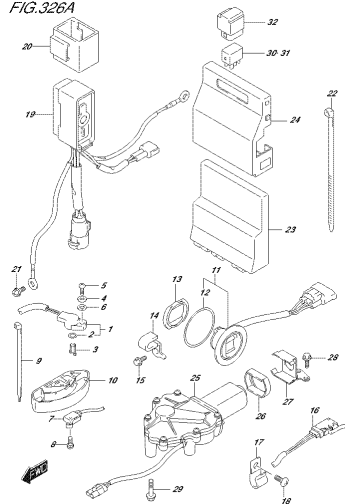


DCR04A_EPT1_016_326A
PIT SWITCH/MORE CONTROL UNIT

FIG.326B

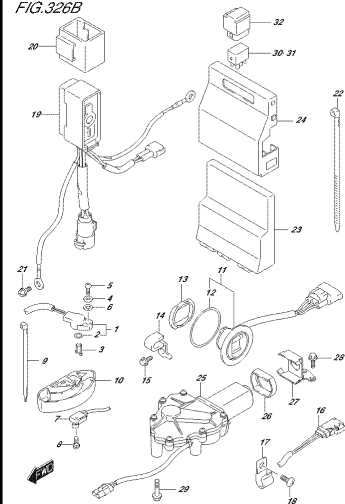


DCR04A_EPT1_016_326B
PIT SWITCH/MORE CONTROL UNIT

FIG.326C

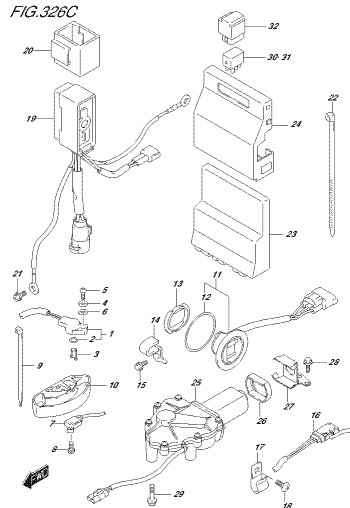


DCR04A_EPT1_016_326C
PIT SWITCH/MORE CONTROL UNIT

FIG.326D

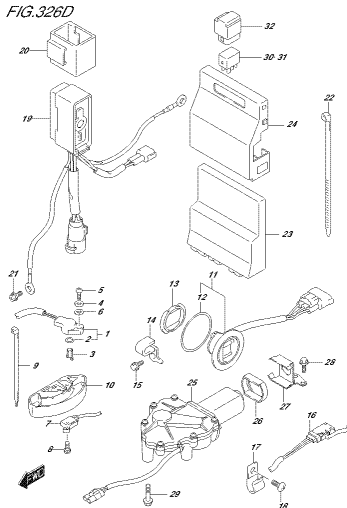


DCR04A_EPT1_016_326D
PIT SWITCH/MORE CONTROL UNIT

FIG.331A

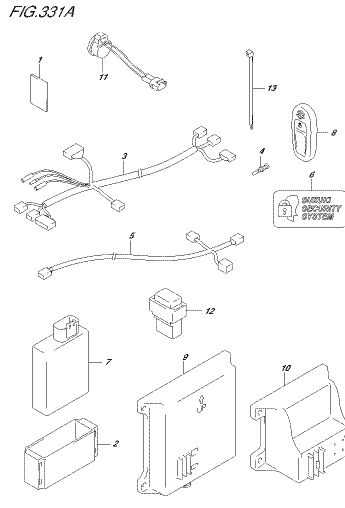


DCR04A_EPT1_016_331A
KEY LESS START

FIG.331B

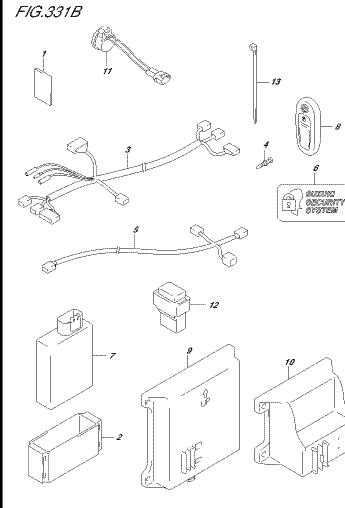


DCR04A_EPT1_016_331B
KEY LESS START

FIG.335A

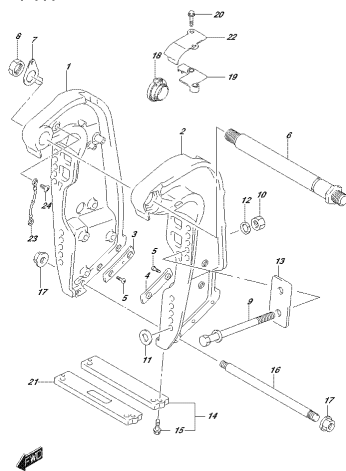


DCRDA EPTL 016.335A
LOWER BRACKET

FIG.336A

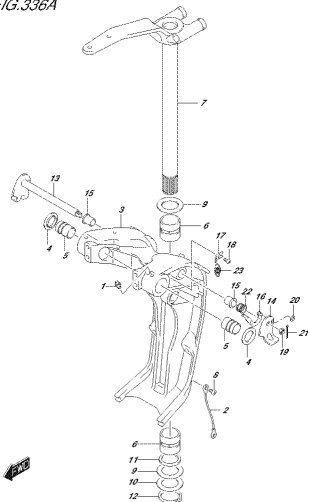


DCRDA EPTL 016.336A
LOWER BRACKET

FIG.337A

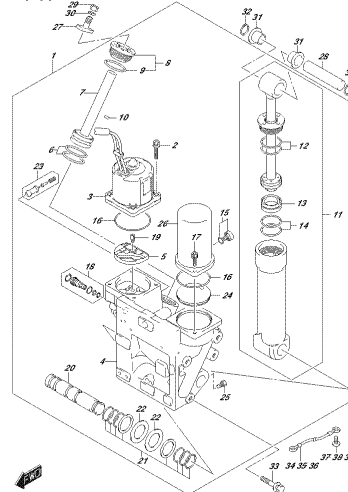


DCRDA EPTL 016.337A
TORSION LUNGS

FIG.340A

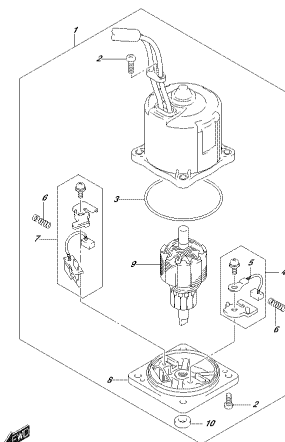


DCRDA EPTL 016.340A
PTT 60032

FIG.401A

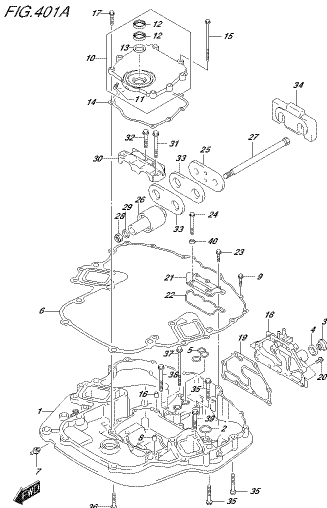


DCRDA EPTL 016.401A
ENGINE HOUSING

FIG.405A

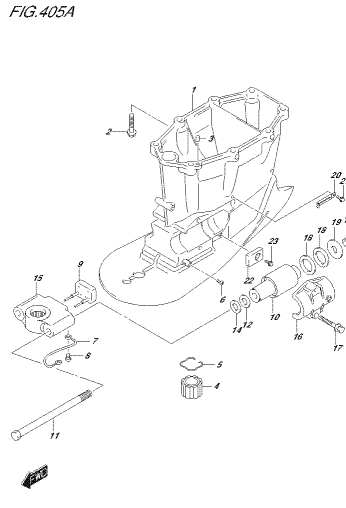


DCRDA EPTL 016.405A
DRIVE SHAFT HOLDING

FIG.405B

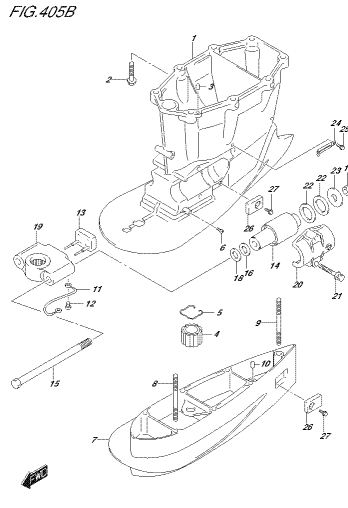


DCRDA EPTL 016.405B
DRIVE SHAFT HOLDING

FIG.407A

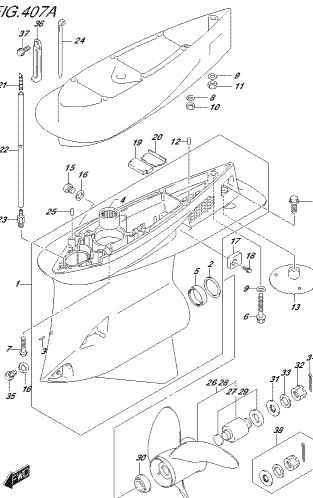


DCRDA EPTL 016.407A
GEAR CASE

FIG.407B

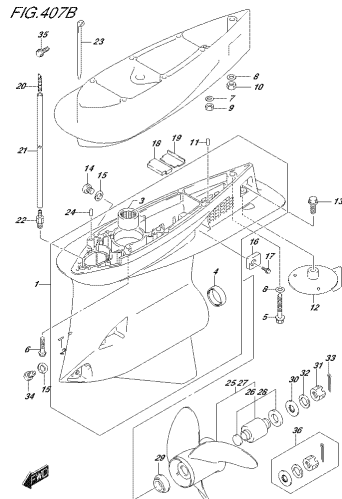


DCRDA, EPL, 016, 407B
SEA COUSE

FIG.410A

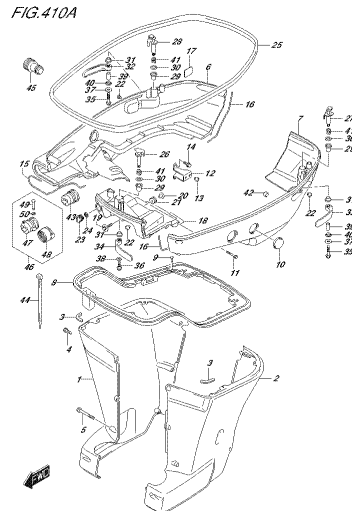


DCRDA, EPL, 016, 410A
SEA COUSE

FIG.420A

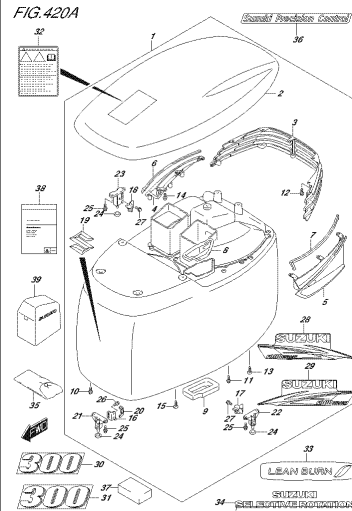


DCRDA, EPL, 016, 420A
ENGINE COVER

FIG.420B

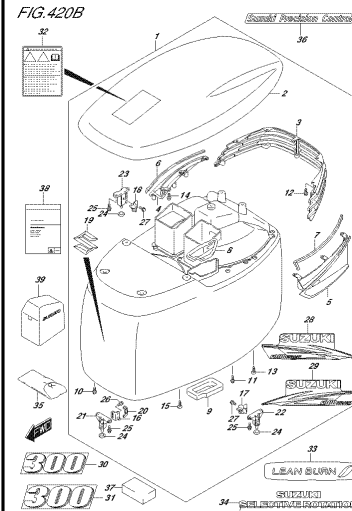


DCRDA, EPL, 016, 420B
ENGINE COVER

FIG.420C

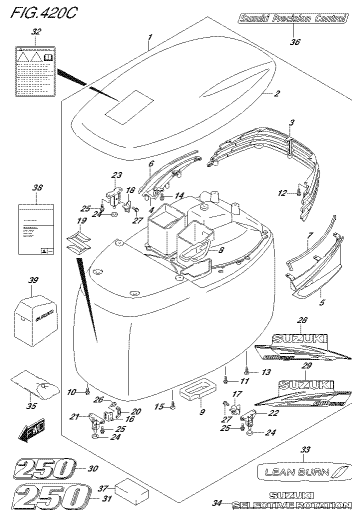


DCRDA, EPL, 016, 420C
ENGINE COVER

FIG.420D

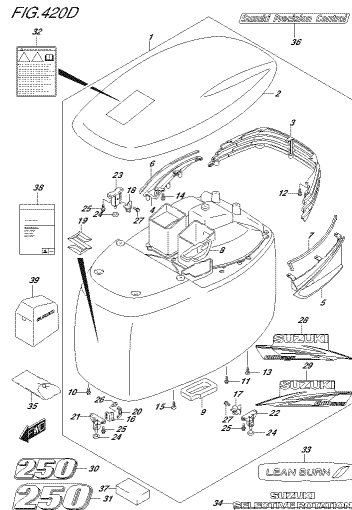


DCRDA, EPL, 016, 420D
ENGINE COVER

FIG.430A

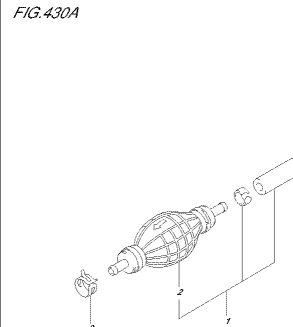


DCRDA, EPL, 016, 430A
FUEL NOSE

FIG.430B

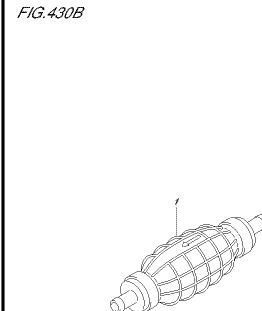


DCRDA, EPL, 016, 430B
FUEL NOSE

FIG.430C

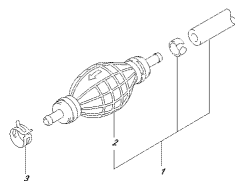


DCR00A_F01_016_430C
CUE: 102E

FIG.430D




DCR00A_F01_016_430D
CUE: 102E

FIG.502A

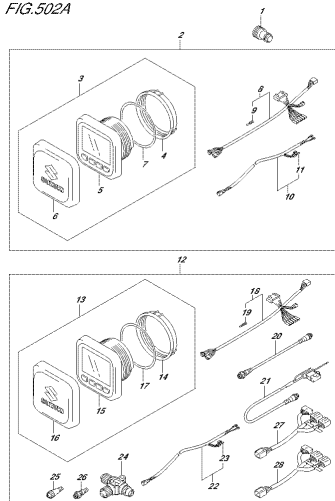


DCR00A_F01_016_S004
OPT:46700P (1)

FIG.503A

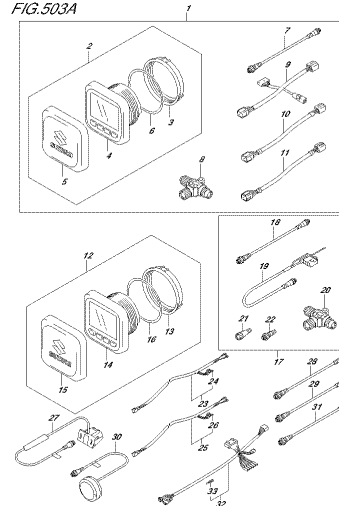


DCR00A_F01_016_S004
OPT:46700P (2)

FIG.520A

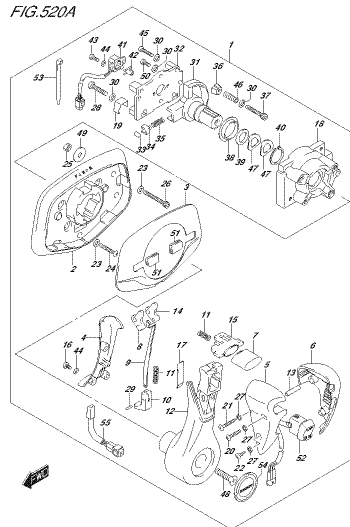


DCR00A_F01_016_S004
OPT:FLUSH MOUNT REACTION

FIG.522A

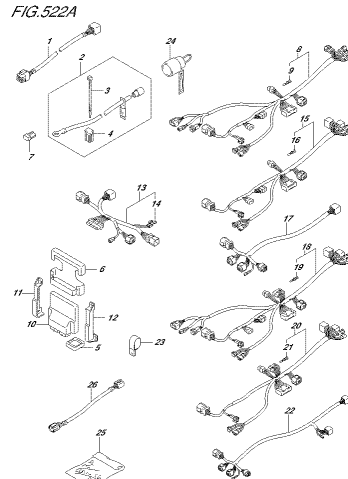


DCR00A_F01_016_S004
OPT:HARNESS (1)

FIG.523A

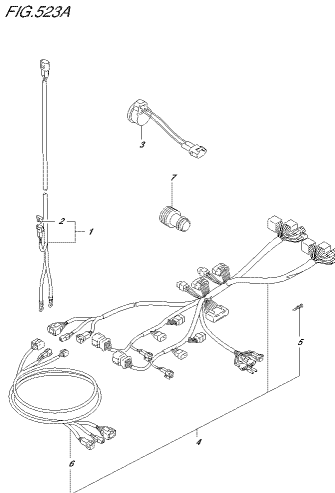


DCR00A_F01_016_S004
OPT:HARNESS (2)

FIG.530A

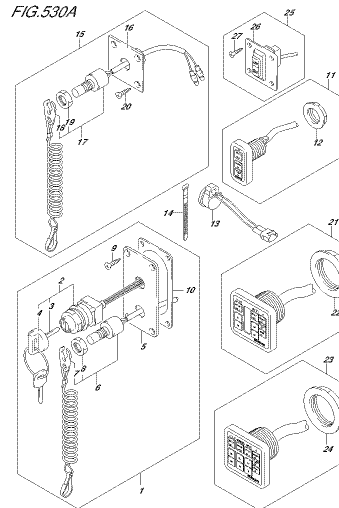


DCR00A_F01_016_S004
OPT:SWITCH

FIG.535A

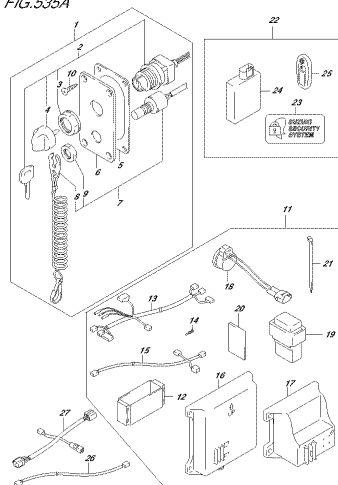


DCRDA, EST, 016, 535A
OPT. NOT LESS READY

FIG.535B

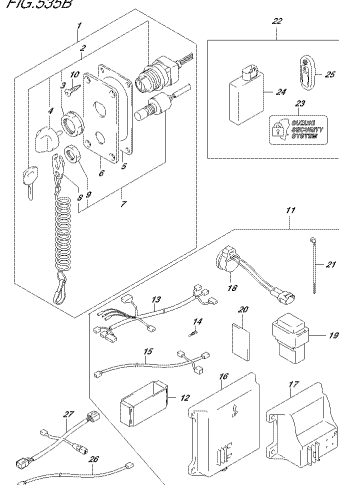


DCRDA, EST, 016, 535B
OPT. NOT LESS READY

FIG.540A

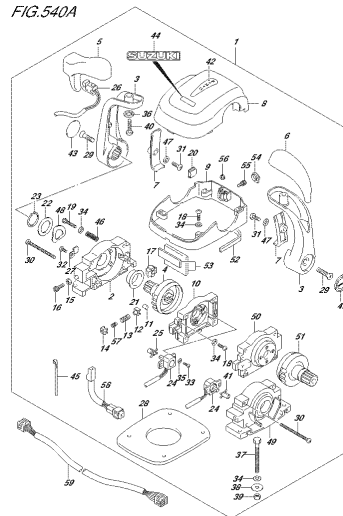


DCRDA, EST, 016, 540A
OPT. REMOTE CONTROL ASSY DUAL

FIG.543A

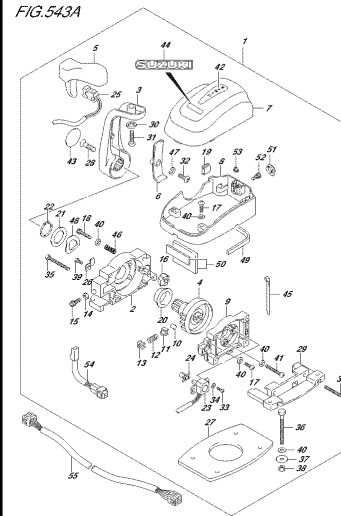

DCRDA, EST, 016, 543A
OPT. REMOTE CONTROL ASSY SHIELD

FIG.585A

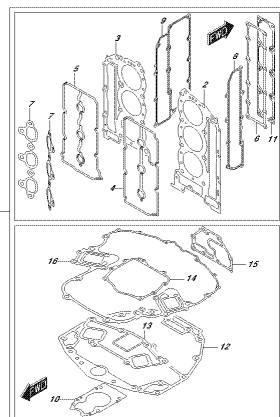

DCRDA, EST, 016, 585A
OPT. GAINSET SET

FIG.111A

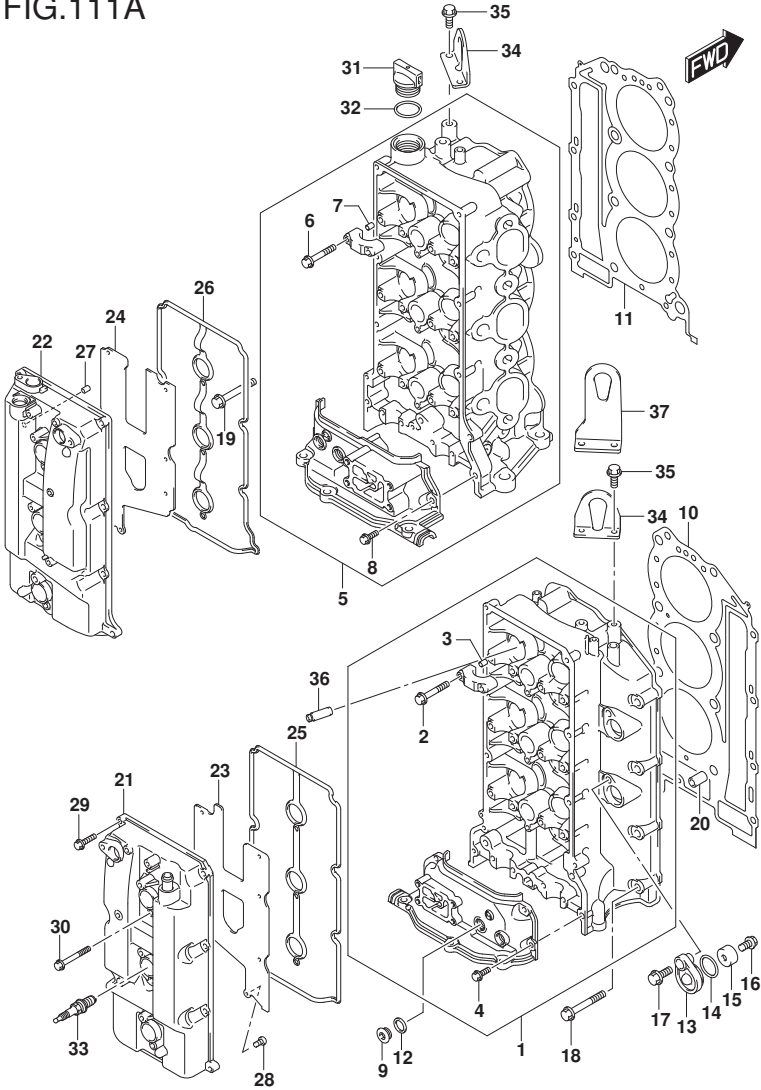


FIG.111A (1-B-2) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11101-98J03	HEAD ASSY, CYLINDER STBD	1	
2	11128-90J00	.BOLT, CAM SHAFT HOUSING	16	
3	09206-08001	.PIN (8X11)	14	
4	01550-06207	.BOLT	4	
5	11103-98J03	HEAD ASSY, CYLINDER PORT	1	
6	11128-90J00	.BOLT, CAM SHAFT HOUSING	16	
7	09206-08001	.PIN (8X11)	14	
8	01550-06207	.BOLT	2	
9	11116-93J01	PLUG	4	
10	11141-98J10	GASKET, CYL HEAD STBD	1	
11	11142-98J10	GASKET, CYL HEAD PORT	1	
12	09168-16009	GASKET (16X22X0.8)	4	
13	11261-93J00	COVER, PROTECTION ANODE	4	
14	09280-22019	O RING (D:1.9,ID:21.8)	4	
15	55321-87J01	ANODE, PROTECTION	4	
16	09103-06281	BOLT (6X14)	4	
17	01550-08207	BOLT	4	
18	01550-08607	BOLT	5	
19	01550-08607	BOLT	4	
20	09206-14004	PIN (14X11.4X23)	4	
21	11170-93J01	COVER, CYL HEAD STBD	1	
22	11180-98J01	COVER, CYLINDER HEAD PORT	1	
23	11173-93J00	PLATE, BREATHER STBD	1	
24	11183-93J00	PLATE, BREATHER PORT	1	
25	11179-93J00	GASKET, CYL HEAD COVER STBD	1	
26	11189-93J00	GASKET, CYL HEAD COVER PORT	1	
27	09206-08001	PIN (8X11)	1	
28	02112-0612A	SCREW	14	
29	01547-06257	BOLT	16	
30	01547-06507	BOLT	6	
31	11382-93J00	CAP, OIL FILLER	1	
32	09280-26006	O RING (D:3.1,ID:26.4)	1	
33	09482-00427	SPARK PLUG (BKR6E)	6	NGK
34	11291-93J00	HOOK, ENGINE	2	

FIG.111A


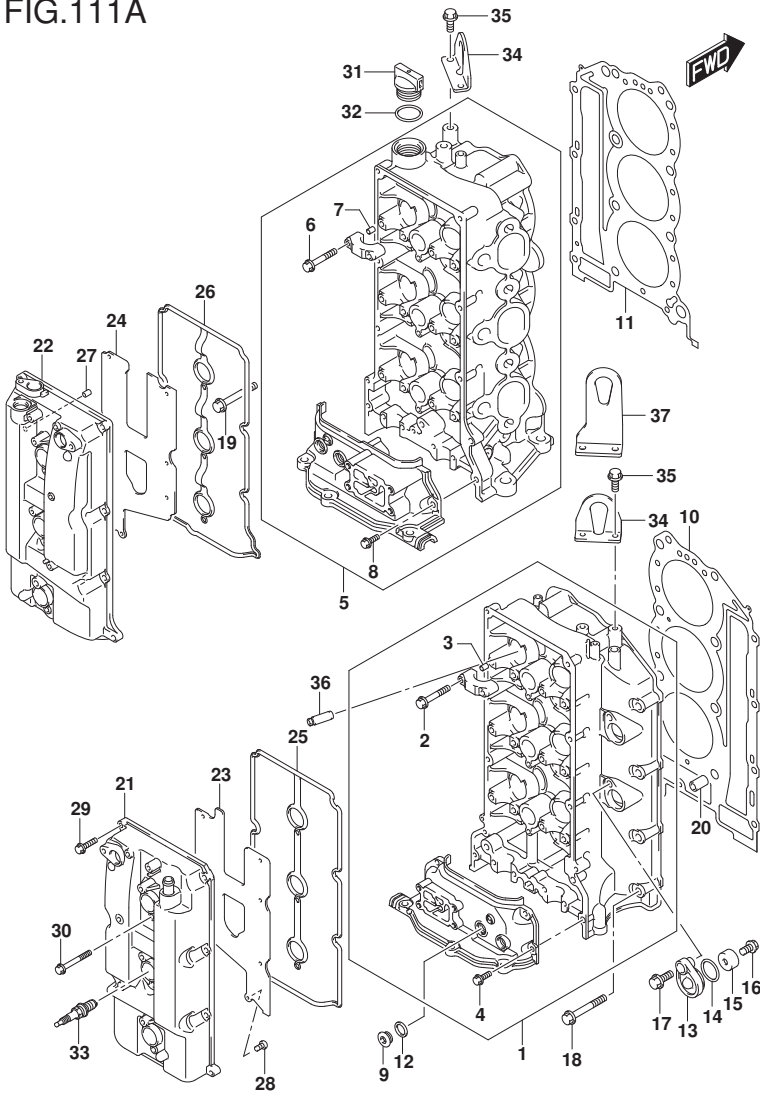


FIG.111A (1-B-3) CYLINDER HEAD

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
35	01550-08207	BOLT	4		
36	11115-93J10-001	GUIDE, VALVE (OS:0.5)	24	OPT	
37	11291-98J00	HOOK, ENGINE	1	OPT	

FIG.113A

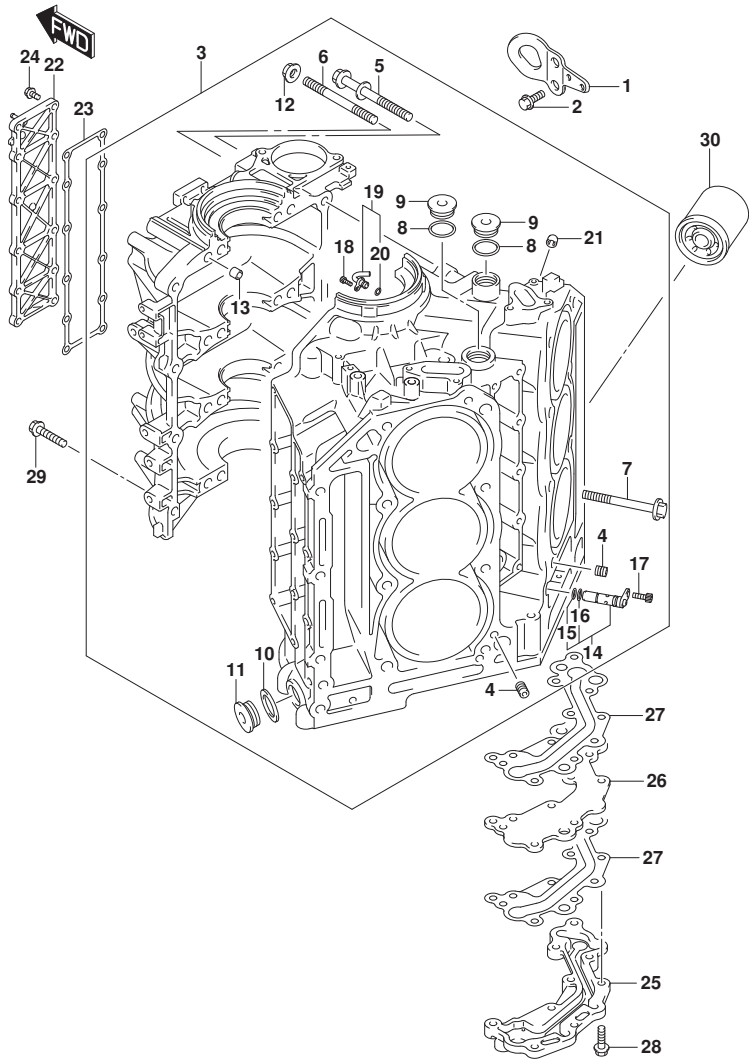

DF300A_E01_016_113A
CYLINDER BLOCK

FIG.113A (1-B-4) CYLINDER BLOCK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11293-98J00	HOOK, ENGINE FRONT	1	
2	01550-08207	BOLT	2	
3	11301-98J30	BLOCK SET, CYLINDER	1	
4	11112-93J00	.PLUG, OIL VENTURI	2	
5	11117-93J10	.BOLT, CRANKCASE	12	
6	11117-98J10	.BOLT, CRANKCASE STUD	4	
7	11119-93J00	.BOLT, CYLINDER HEAD	16	
8	11217-85FA0	.GASKET, M26 PLUG	3	
9	09248-26001	.PLUG (26X11)	3	
10	09160-18031	.WASHER (18.5X28X2.6)	2	
11	09248-18006	.PLUG (18X8)	2	
12	09159-10116	.NUT	4	
13	09206-13019	.PIN (10.4X13X16)	5	
14	16700-93J00	.VALVE, PISTON JET	1	
15	09280-10009	..O RING (D:1.3,ID:9.8)	1	
16	09280-10016	..O RING (D:1.9,ID:9.8)	1	
17	07130-0616A	.BOLT	1	
18	07130-0510A	.BOLT	6	
19	11390-98J00	.JET, PISTON COOLING	6	
20	09280-06005	..O RING (D:1.9,ID:5.7)	6	
21	09246-05006	.PLUG (1/8PT,H:5.5)	1	
22	11330-93J01	COVER, CRANKCASE WTR JKT	1	
23	11332-93J00	GASKET, CRANKCASE WTR JKT COV	1	
24	01550-06207	BOLT	12	
25	16430-93J00	COVER, OIL GALLERY	1	
26	16431-93J00	PLATE, OIL GALLERY	1	
27	16433-93J00	GASKET, OIL GALLERY	2	
28	01550-0835A	BOLT	9	
29	01550-08457	BOLT	8	
30	16510-96J00	FILTER ASSY, OIL	1	

DF300A_E01_016

FIG.116A

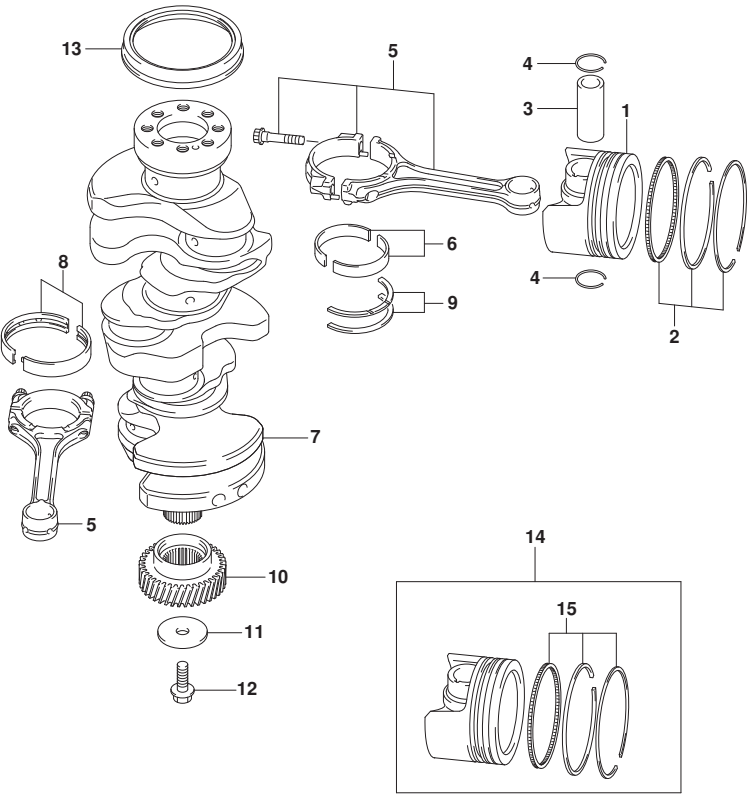


FIG.116A (1-B-5) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12111-98J00-0B0	PISTON	6	
2	12140-98J00	RING SET, PISTON	6	
3	12151-02F00	PIN, PISTON	6	
4	09381-22010	CIRCLIP	12	
5	12160-98J00	CONNROD ASSY	6	
6-1	12100-98810-0A0	BEARING SET, CONNROD	6	GREEN
6-2	12100-98810-025	BEARING SET, CONNROD (US:0.25)	6	OPT
7	12220-98J00	CRANKSHAFT	1	
8-1	12340-98J00-0A0	BEARING SET, CRANKSHAFT	4	BLACK
8-2	12340-98J00-0B0	BEARING SET, CRANKSHAFT	4	NON
8-3	12340-98J00-0C0	BEARING SET, CRANKSHAFT	4	YELLOW
8-4	12340-98J00-0D0	BEARING SET, CRANKSHAFT	4	BLUE
8-5	12340-98J00-0E0	BEARING SET, CRANKSHAFT	4	PINK
8-6	12300-98810-0AA	BEARING SET, CRANKSHAFT	4	OPT
				US:0.25
				RED/BLACK
8-7	12300-98810-0BA	BEARING SET, CRANKSHAFT	4	OPT
				US:0.25
				RED
8-8	12300-98810-0CA	BEARING SET, CRANKSHAFT	4	OPT
				US:0.25
				RED/YELLOW
8-9	12300-98810-0DA	BEARING SET, CRANKSHAFT	4	OPT
				US:0.25
				RED/BLUE
8-10	12300-98810-0EA	BEARING SET, CRANKSHAFT	4	OPT
				US:0.25
				RED/PINK

FIG.116A

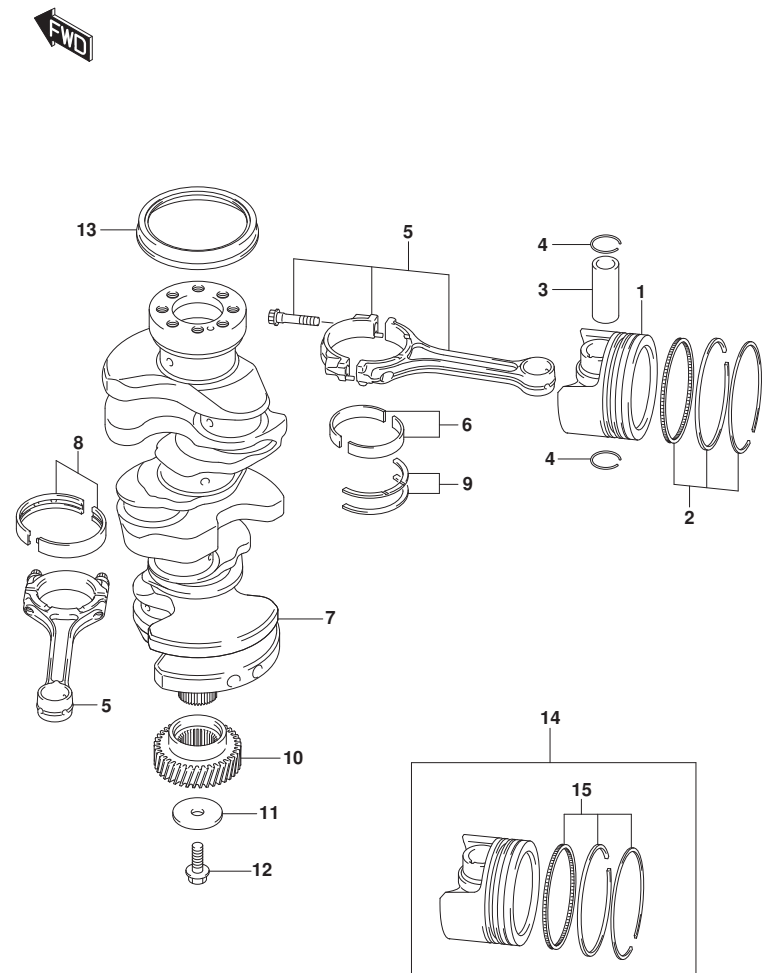


FIG.116A (1-B-6) CRANKSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
9-1	12300-98821	BEARING SET, CRANK THRUST	1	
9-2	12300-98821-012	BEARING SET, CRANK THRUST	1	OPT OS:0.12
10	12242-98J00	GEAR, DRIVE (NT:32)	1	
11	09160-10104	WASHER (10.5X50X3.2)	1	
12	01550-1025A	BOLT	1	
13	09283-91001	OIL SEAL (91X109X10)	1	
14	12100-98J00-050	PISTON SET (OS:0.50)	6	OPT
15	12140-98J00-050	.RING SET, PISTON (OS:0.50)	6	OPT

FIG.119A

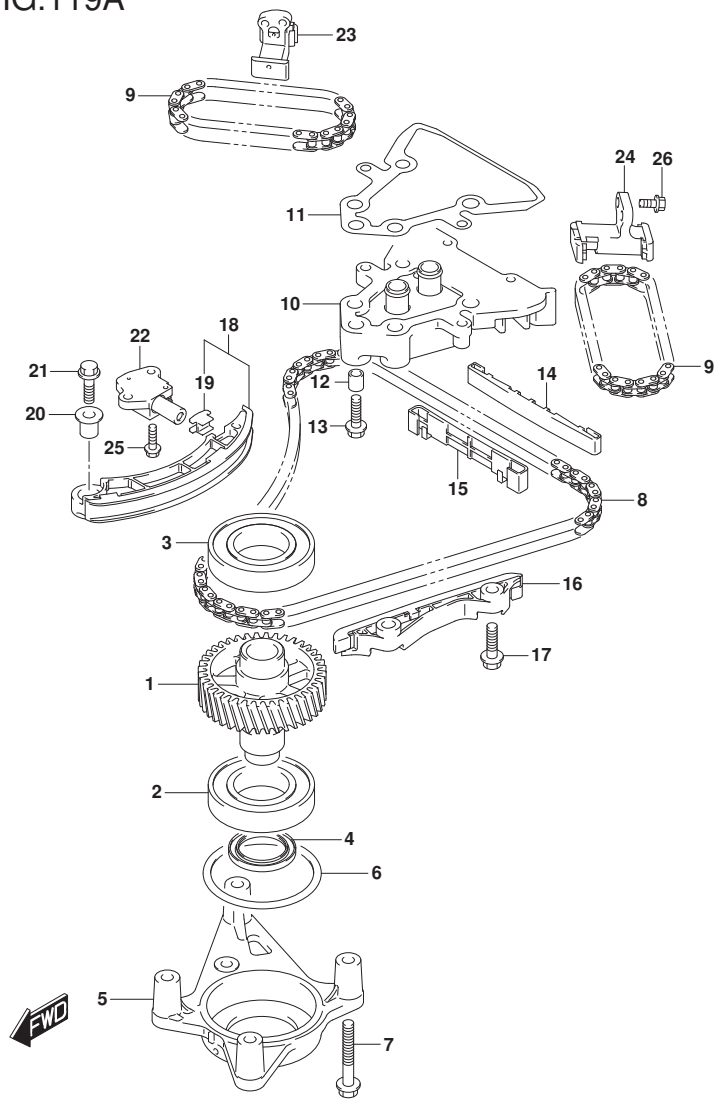


FIG.119A (1-B-7) TIMING CHAIN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12730-98J02	GEAR, DRIVEN (NT:40)	1	
2	09262-40018	BEARING (40X80X18)	1	LOWER
3	09262-40017	BEARING (40X80X18)	1	UPPER
4	09283-32044	OIL SEAL (32X47X6)	1	
5	12734-93J00	HOLDER, DRIVEN GEAR	1	
6	09280-70012	O RING (D:5.7,ID:69.6)	1	
7	01550-0855A	BOLT	4	
8	12761-93J00	CHAIN, TIMING 1ST	1	
9	12762-93J00	CHAIN, TIMING 2ND	2	
10	12770-93J00	BASE, TIMING CHAIN GUIDE NO.1	1	
11	12778-93J00	GASKET, GUIDE BASE	1	
12	04211-13149	PIN	2	
13	01550-0830A	BOLT	2	
14	12771-93J00	SHOE, TIMING CHAIN UPPER	1	
15	12775-93J00	SHOE, TIMING CHAIN LOWER	1	
16	12772-93J00	GUIDE, TIMING CHAIN NO.2	1	
17	01550-0830A	BOLT	2	
18	12810-93J00	TENSIONER ASSY, TIMING CHAIN	1	
19	12813-73G00	.PAD, TIMING CHAIN TENSIONER	1	
20	12812-90J00	SPACER, TIMING CHAIN TENSIONER	1	
21	01550-0830A	BOLT	1	
22	12831-93J01	ADJUSTER ASSY, TENSIONER	1	
23	12832-93J00	TENSIONER ASSY, STBD	1	
24	12833-93J00	TENSIONER ASSY, PORT	1	
25	01550-0620A	BOLT	2	
26	01550-0620A	BOLT	4	

FIG.121A

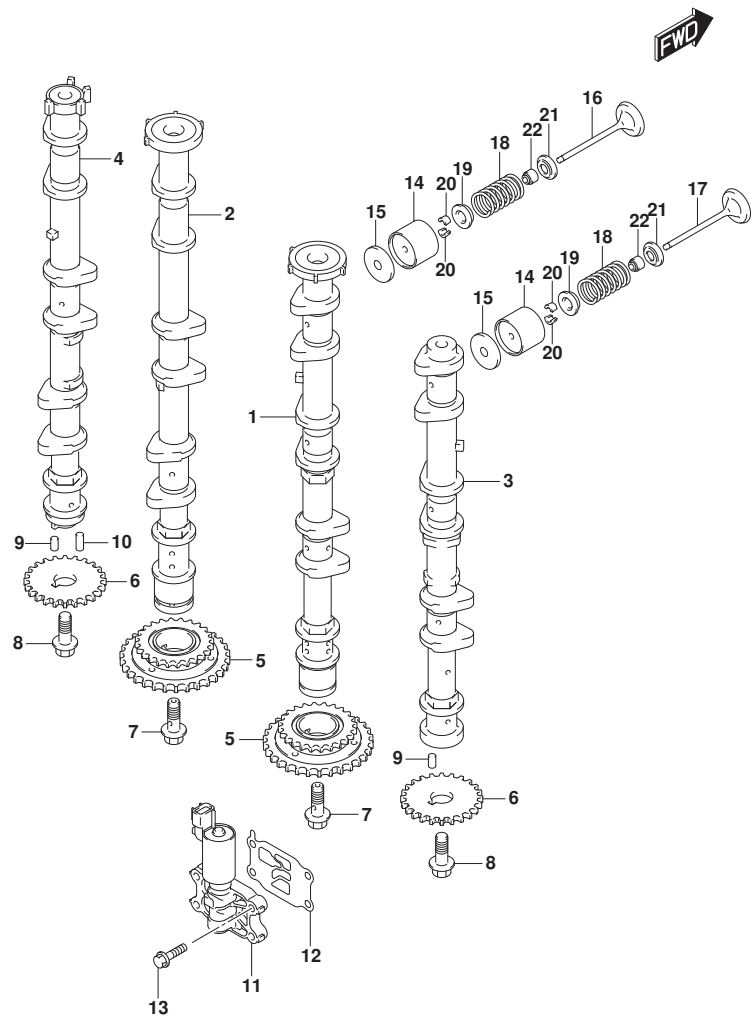


FIG.121A (1-B-8) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12701-98J10	CAMSHAFT, INTAKE STBD	1	
2	12705-98J10	CAMSHAFT, INTAKE PORT	1	
3	12721-98J10	CAMSHAFT, EXH STBD	1	
4	12729-98J20	CAMSHAFT, EXH PORT	1	
5	12740-93J00	SPROCKET ASSY, CAM TIMING (NT:22/32)	2	
6	12748-93J00	SPROCKET, EXH CAMSHAFT (NT:22)	2	
7	12753-93J00	BOLT, INTAKE CAMSHAFT	2	
8	12749-93J00	BOLT, CAMSHAFT EXHAUST	2	
9	09202-05032	PIN (5X12)	3	
10	09261-05006	PIN (5X18)	1	
11	16550-93J00	VALVE, OIL CONTROL	2	
12	16555-93J00	GASKET, VALVE	2	
13	01550-06257	BOLT	8	
14	12891-93J00	TAPPET	24	
15-1	12892-93J00-218	SHIM, TAPPET (T:2.175)	AR	
15-2	12892-93J00-220	SHIM, TAPPET (T:2.200)	AR	
15-3	12892-93J00-223	SHIM, TAPPET (T:2.225)	AR	
15-4	12892-93J00-225	SHIM, TAPPET (T:2.250)	AR	
15-5	12892-93J00-228	SHIM, TAPPET (T:2.275)	AR	
15-6	12892-93J00-230	SHIM, TAPPET (T:2.300)	AR	
15-7	12892-93J00-233	SHIM, TAPPET (T:2.325)	AR	
15-8	12892-93J00-235	SHIM, TAPPET (T:2.350)	AR	
15-9	12892-93J00-238	SHIM, TAPPET (T:2.375)	AR	
15-10	12892-93J00-240	SHIM, TAPPET (T:2.400)	AR	
15-11	12892-93J00-243	SHIM, TAPPET (T:2.425)	AR	
15-12	12892-93J00-245	SHIM, TAPPET (T:2.450)	AR	
15-13	12892-93J00-248	SHIM, TAPPET (T:2.475)	AR	
15-14	12892-93J00-250	SHIM, TAPPET (T:2.500)	AR	
15-15	12892-93J00-253	SHIM, TAPPET (T:2.525)	AR	
15-16	12892-93J00-255	SHIM, TAPPET (T:2.550)	AR	
15-17	12892-93J00-258	SHIM, TAPPET (T:2.575)	AR	
15-18	12892-93J00-260	SHIM, TAPPET (T:2.600)	AR	
15-19	12892-93J00-263	SHIM, TAPPET (T:2.625)	AR	

FIG.121A

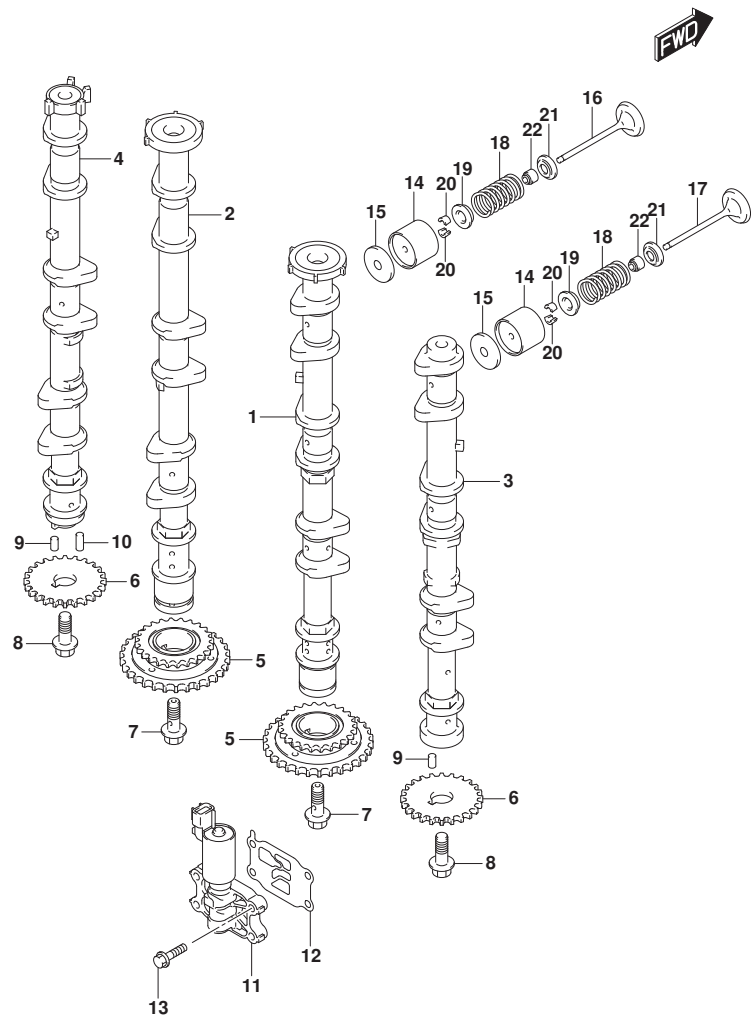


FIG.121A (1-B-9) CAMSHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
15-20	12892-93J00-265	SHIM, TAPPET (T:2.650)	AR	
15-21	12892-93J00-268	SHIM, TAPPET (T:2.675)	AR	
15-22	12892-93J00-270	SHIM, TAPPET (T:2.700)	AR	
15-23	12892-93J00-273	SHIM, TAPPET (T:2.725)	AR	
15-24	12892-93J00-275	SHIM, TAPPET (T:2.750)	AR	
15-25	12892-93J00-278	SHIM, TAPPET (T:2.775)	AR	
15-26	12892-93J00-280	SHIM, TAPPET (T:2.800)	AR	
15-27	12892-93J00-283	SHIM, TAPPET (T:2.825)	AR	
15-28	12892-93J00-285	SHIM, TAPPET (T:2.850)	AR	
15-29	12892-93J00-288	SHIM, TAPPET (T:2.875)	AR	
15-30	12892-93J00-290	SHIM, TAPPET (T:2.900)	AR	
15-31	12892-93J00-293	SHIM, TAPPET (T:2.925)	AR	
15-32	12892-93J00-295	SHIM, TAPPET (T:2.950)	AR	
15-33	12892-93J00-298	SHIM, TAPPET (T:2.975)	AR	
15-34	12892-93J00-300	SHIM, TAPPET (T:3.000)	AR	
16	12911-98J00	VALVE, INTAKE	12	
17	12915-93J50	VALVE, EXHAUST	12	
18	12921-93J10	SPRING, VALVE	24	
19	12931-78G00	RETAINER, VALVE SPRING	24	
20	12932-24400	COTTER, VALVE	48	
21	12933-69G10	SEAT, VALVE SPRING	24	
22	09289-05012	OIL SEAL (5.5X11.5X9.3)	24	

FIG.122A

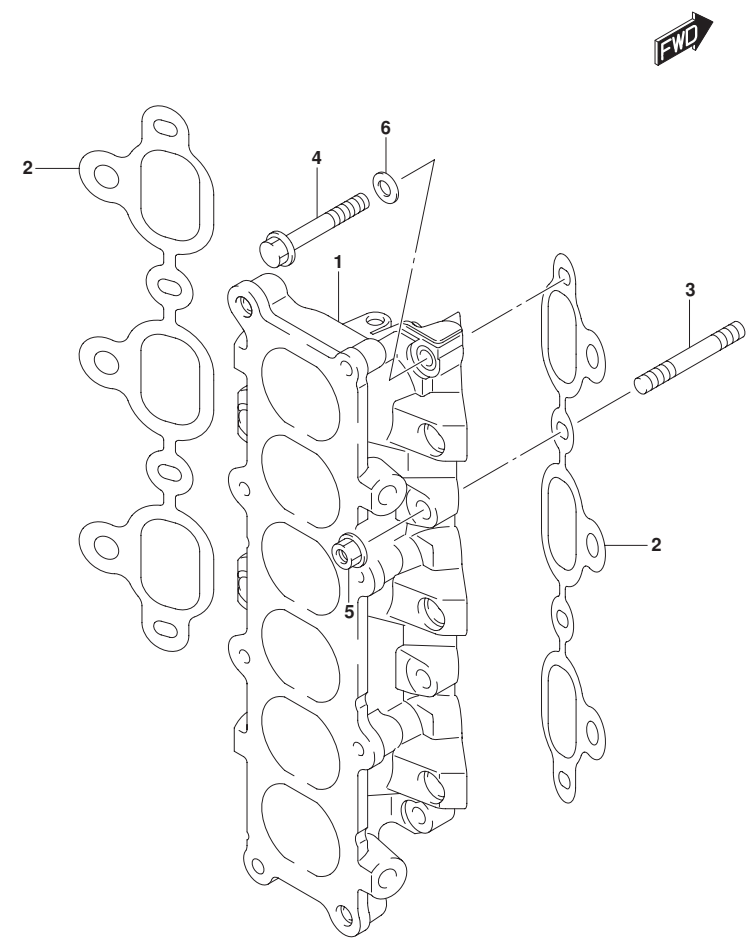


FIG.122A (1-B-10) INTAKE MANIFOLD

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13110-98J10	MANIFOLD, INTAKE	1	
2	13119-98J00	GASKET, INTAKE MANIFOLD	2	
3	09108-08282	STUD BOLT	4	
4	09103-08437	BOLT (8X65)	4	
5	09159-08136	NUT	4	
6	09160-08161	WASHER (8.2X23X3.2)	8	

FIG.136A

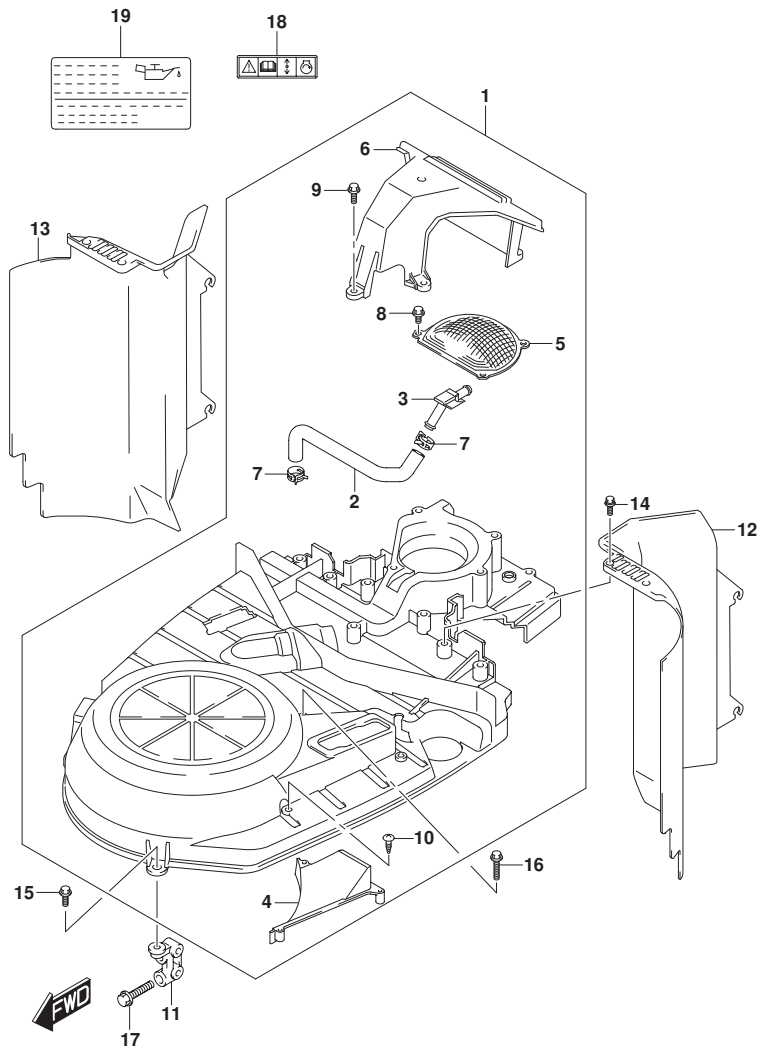


FIG.136A (1-B-11) RING GEAR COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11510-98J02	COVER, RING GEAR	1	
2	11174-98J00	.HOSE, BREATHER	1	
3	11176-98J00	.UNION, BREATHER	1	
4	11514-98J00	.PLATE, RING GEAR COVER	1	
5	13710-98J00	.ARRESTER, FLAME	1	
6	13811-98J00	.SILENCER, UPPER COVER	1	
7	09401-18410	.CLIP	2	
8	01550-06127	.BOLT	4	
9	01550-06207	.BOLT	5	
10	11517-98J00	.SCREW	3	
11	11515-93J00	BRACE, RING GEAR COVER	1	
12	13841-98J10	GUARD, AIR DUCT STBD	1	
13	13851-98J10	GUARD, AIR DUCT PORT	1	
14	01550-06207	BOLT	4	
15	01550-06207	BOLT	2	
16	01550-06407	BOLT	1	
17	01550-08357	BOLT	2	
18	69711-93E10	LABEL (S.I.G.P)	1	
19	61494-93J00	LABEL, OIL & CLEARANCE	1	

FIG.140A

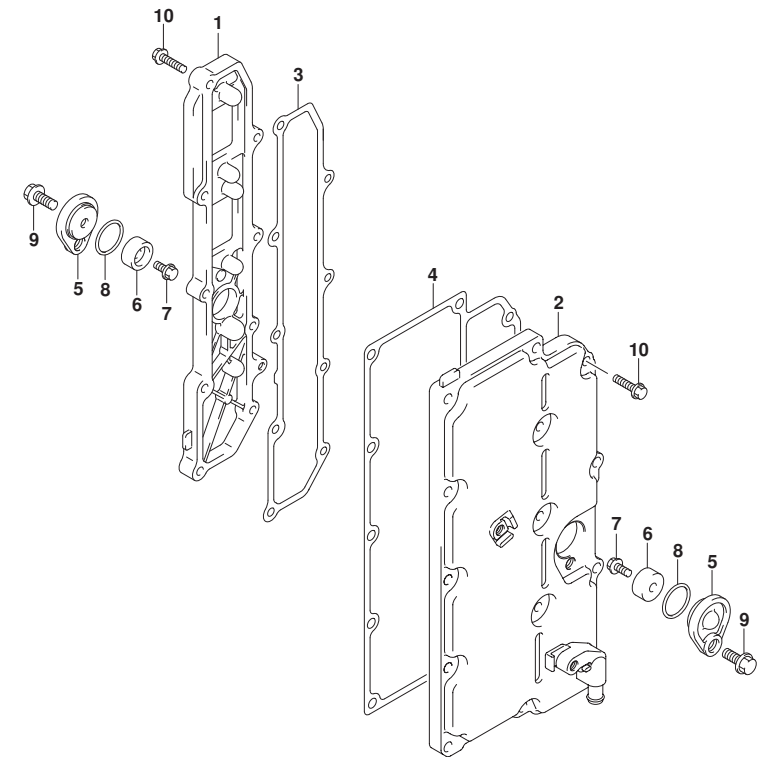


FIG.140A (1-B-12) EXHAUST COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	14141-93J01	COVER, EXHAUST STBD	1	
2	14140-98J01	COVER, EXHAUST PORT	1	
3	14151-93J00	GASKET, EXHAUST COVER STBD	1	
4	14152-93J00	GASKET, EXHAUST COVER PORT	1	
5	11261-93J00	COVER, PROTECTION ANODE	2	
6	55321-87J01	ANODE, PROTECTION	2	
7	09103-06281	BOLT (6X14)	2	
8	09280-22019	O RING (D:1.9,ID:21.8)	2	
9	01550-08207	BOLT	2	
10	01550-06257	BOLT	23	



FIG.144A

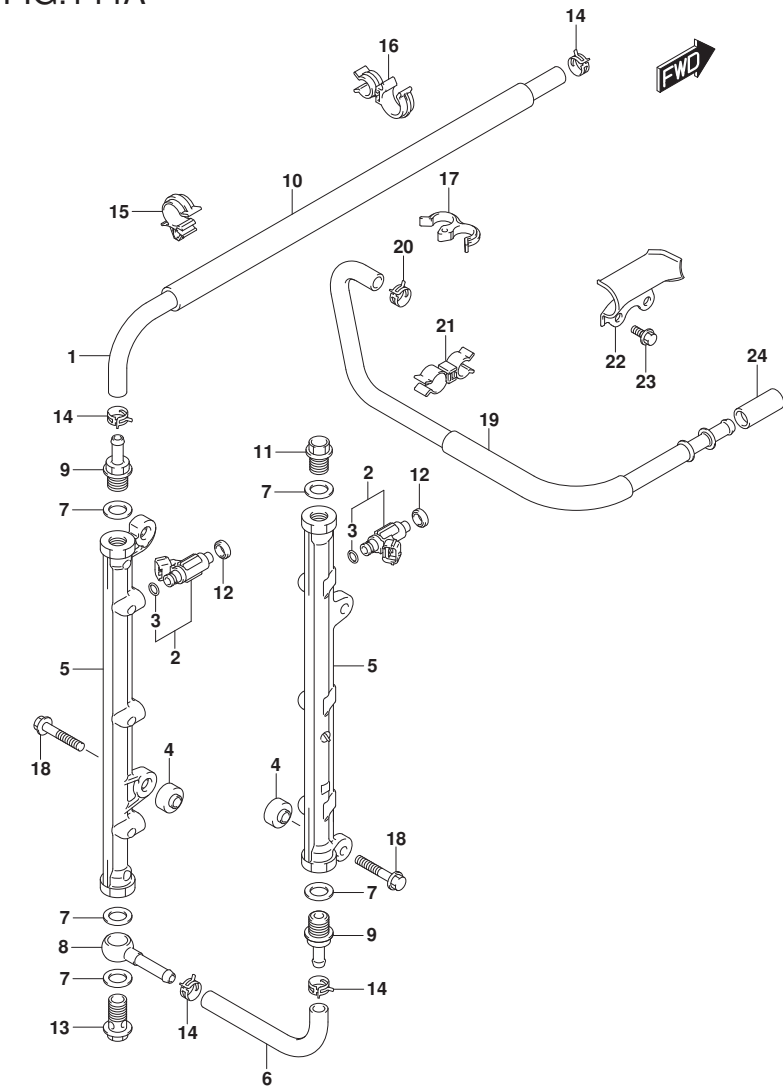


FIG.144A (1-B-13) FUEL INJECTOR (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-93J01	HOSE, FUEL (3WAY TO DLVY PIPE)	1	
2	15710-96J00	INJECTOR ASSY, FUEL	6	
3	15717-16G00	.O RING	6	
4	15735-58B00	INSULATOR, DELIVERY PIPE	4	
5	15751-93J00	PIPE, DELIVERY	2	
6	15756-93J01	HOSE, FUEL (DLVY TO DLVY)	1	
7	15762-93J00	GASKET, DELIVERY PIPE	5	
8	15830-77EA0	UNION, DELIVERY PIPE	1	
9	15831-93J00	UNION, DELIVERY PIPE	2	
10	18498-93J00	PROTECTOR, FUEL HOSE (L:340)	1	
11	09247-14041	PLUG (14X14)	1	
12	09320-08062	CUSHION	6	
13	09360-14009	UNION	1	
14	09401-11425	CLIP	4	
15	09403-16307	CLAMP	1	
16	09408-00105	CLAMP	1	
17	09408-00155	CLAMP	1	
18	01550-08407	BOLT	4	
19	15680-93J30	HOSE, FUEL (PUMP TO FILTER)	1	
20	09401-13423	CLIP	1	
21	09408-00135	CLIP	2	
22	15684-98J00	GUIDE, FUEL HOSE	1	
23	01550-06127	BOLT	2	
24	09251-09005	CAP (OD:13.6)	1	

FIG.144B

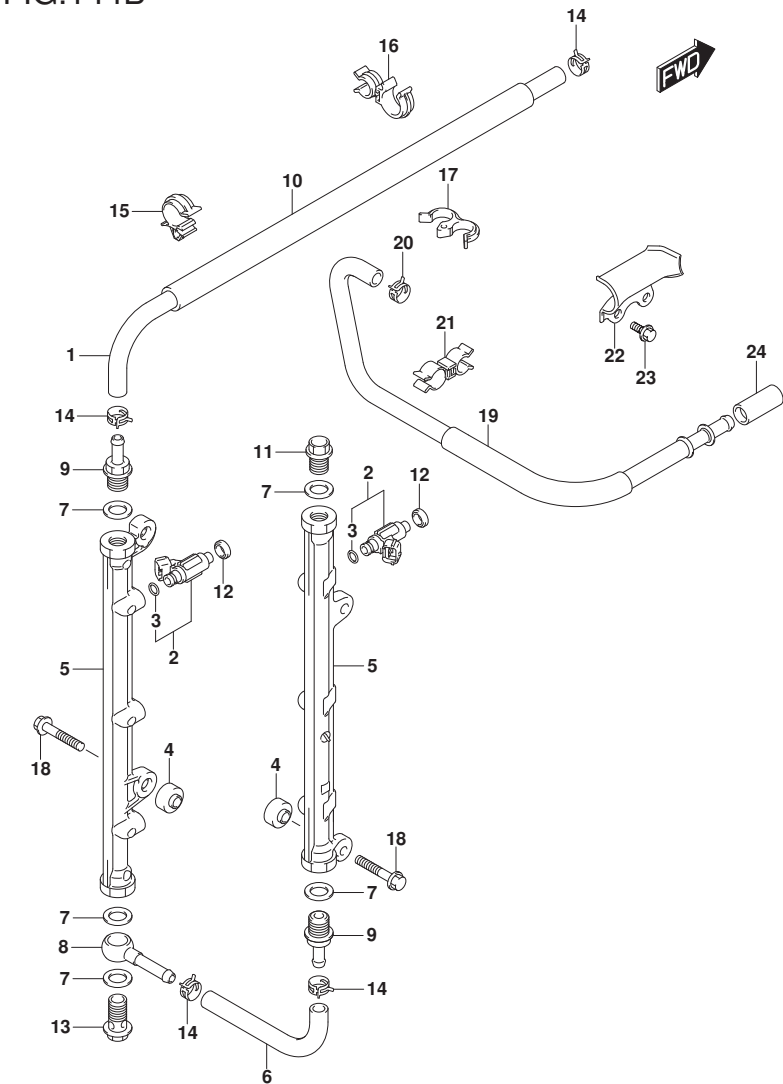


FIG.144B (1-B-14) FUEL INJECTOR (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-93J01	HOSE, FUEL (3WAY TO DLVY PIPE)	1	
2	15710-96J00	INJECTOR ASSY, FUEL	6	
3	15717-16G00	.O RING	6	
4	15735-58B00	INSULATOR, DELIVERY PIPE	4	
5	15751-93J00	PIPE, DELIVERY	2	
6	15756-93J01	HOSE, FUEL (DLVY TO DLVY)	1	
7	15762-93J10	GASKET, DELIVERY PIPE	5	
8	15832-93J00	UNION, DELIVERY PIPE	1	
9	15831-93J00	UNION, DELIVERY PIPE	2	
10	18498-93J00	PROTECTOR, FUEL HOSE (L:340)	1	
11	09247-14042	PLUG (14X14)	1	
12	09320-08062	CUSHION	6	
13	09360-14014	UNION	1	
14	09401-11425	CLIP	4	
15	09403-16307	CLAMP	1	
16	09408-00105	CLAMP	1	
17	09408-00155	CLAMP	1	
18	01550-08407	BOLT	4	
19	15680-93J30	HOSE, FUEL (PUMP TO FILTER)	1	
20	09401-13423	CLIP	1	
21	09408-00135	CLIP	2	
22	15684-98J00	GUIDE, FUEL HOSE	1	
23	01550-06127	BOLT	2	
24	09251-09005	CAP (OD:13.6)	1	

FIG.144C

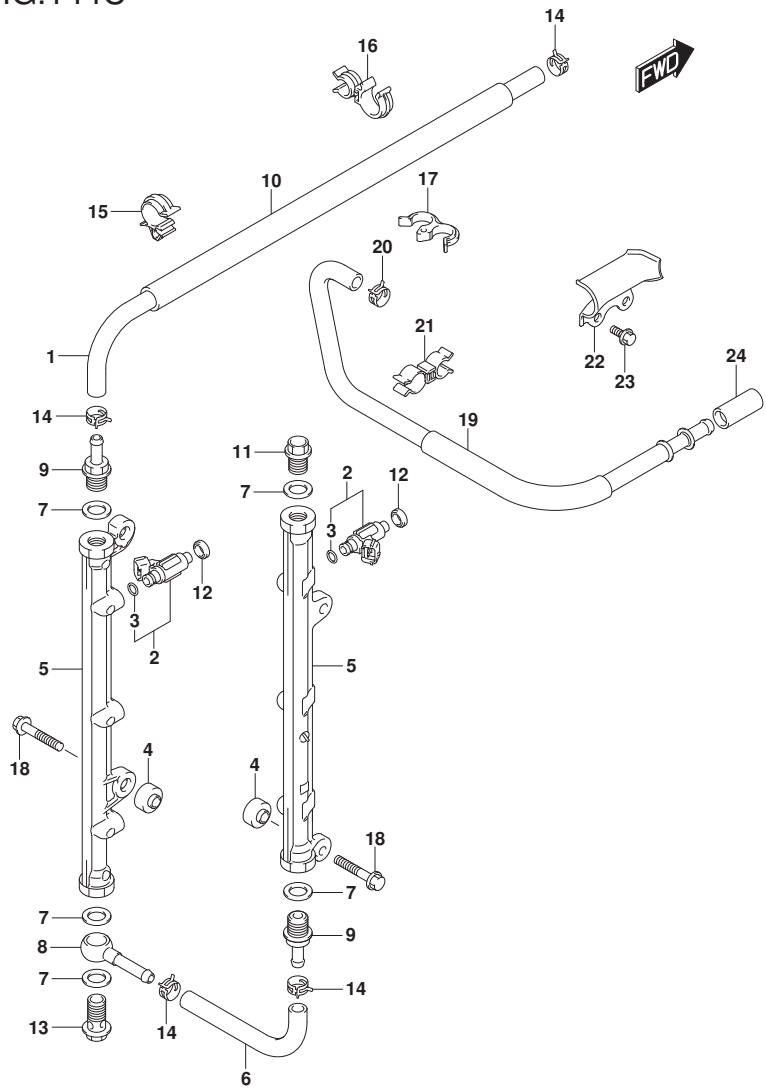


FIG.144C (1-B-15) FUEL INJECTOR (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-93J01	HOSE, FUEL (3WAY TO DLVY PIPE)	1	
2	15710-96J00	INJECTOR ASSY, FUEL	6	
3	15717-16G00	.O RING	6	
4	15735-58B00	INSULATOR, DELIVERY PIPE	4	
5	15751-93J00	PIPE, DELIVERY	2	
6	15756-93J01	HOSE, FUEL (DLVY TO DLVY)	1	
7	15762-93J00	GASKET, DELIVERY PIPE	5	
8	15830-77EA0	UNION, DELIVERY PIPE	1	
9	15831-93J00	UNION, DELIVERY PIPE	2	
10	18498-93J00	PROTECTOR, FUEL HOSE (L:340)	1	
11	09247-14041	PLUG (14X14)	1	
12	09320-08062	CUSHION	6	
13	09360-14009	UNION	1	
14	09401-11425	CLIP	4	
15	09403-16307	CLAMP	1	
16	09408-00105	CLAMP	1	
17	09408-00155	CLAMP	1	
18	01550-08407	BOLT	4	
19	15680-93J30	HOSE, FUEL (PUMP TO FILTER)	1	
20	09401-13423	CLIP	1	
21	09408-00135	CLIP	2	
22	15684-98J00	GUIDE, FUEL HOSE	1	
23	01550-06127	BOLT	2	
24	09251-09005	CAP (OD:13.6)	1	

FIG.144D

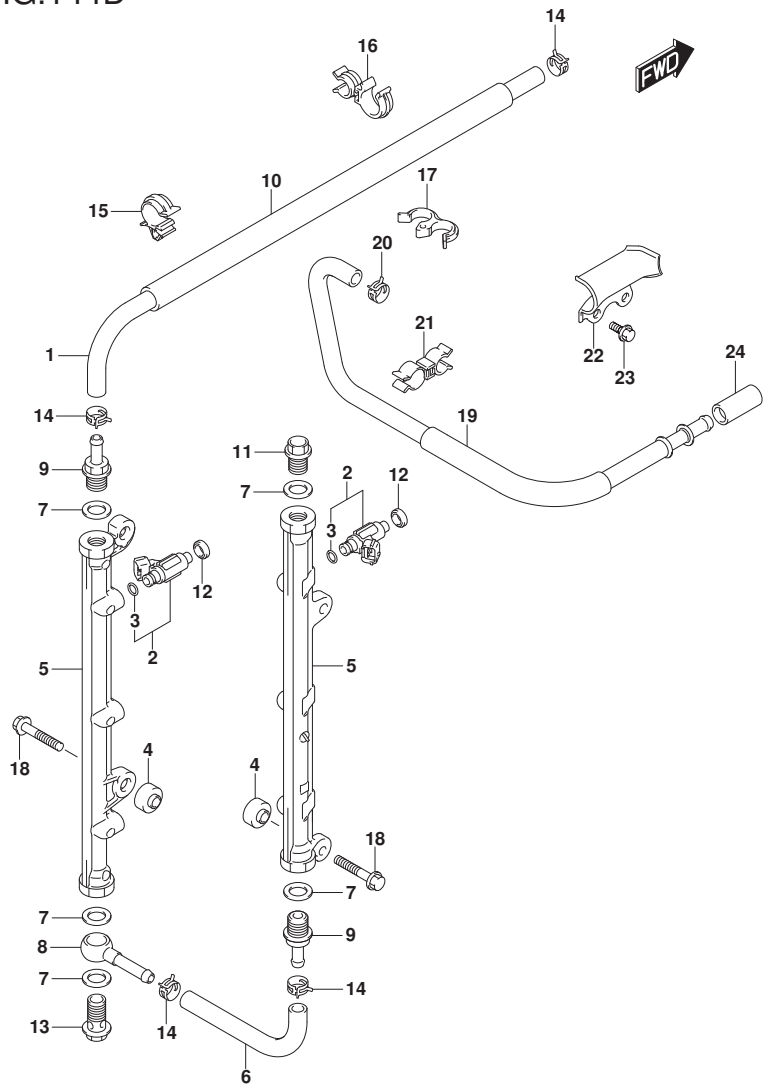


FIG.144D (1-C-2) FUEL INJECTOR (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15681-93J01	HOSE, FUEL (3WAY TO DLVY PIPE)	1	
2	15710-96J00	INJECTOR ASSY, FUEL	6	
3	15717-16G00	.O RING	6	
4	15735-58B00	INSULATOR, DELIVERY PIPE	4	
5	15751-93J00	PIPE, DELIVERY	2	
6	15756-93J01	HOSE, FUEL (DLVY TO DLVY)	1	
7	15762-93J10	GASKET, DELIVERY PIPE	5	
8	15832-93J00	UNION, DELIVERY PIPE	1	
9	15831-93J00	UNION, DELIVERY PIPE	2	
10	18498-93J00	PROTECTOR, FUEL HOSE (L:340)	1	
11	09247-14042	PLUG (14X14)	1	
12	09320-08062	CUSHION	6	
13	09360-14014	UNION	1	
14	09401-11425	CLIP	4	
15	09403-16307	CLAMP	1	
16	09408-00105	CLAMP	1	
17	09408-00155	CLAMP	1	
18	01550-08407	BOLT	4	
19	15680-93J30	HOSE, FUEL (PUMP TO FILTER)	1	
20	09401-13423	CLIP	1	
21	09408-00135	CLIP	2	
22	15684-98J00	GUIDE, FUEL HOSE	1	
23	01550-06127	BOLT	2	
24	09251-09005	CAP (OD:13.6)	1	

FIG.147A


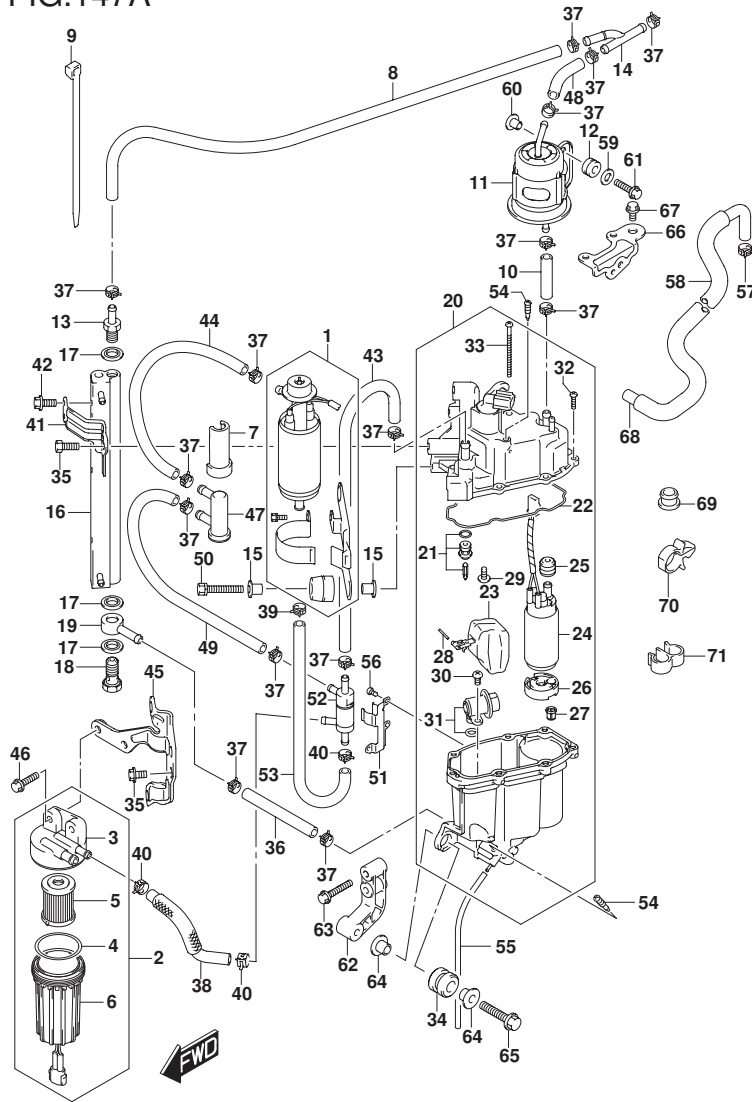


FIG.147A (1-C-3) FUEL PUMP/FUEL VAPOR SEPARATOR (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94900	PUMP ASSY, FUEL (L)	1	
2	15410-93J10	FILTER, FUEL (L)	1	
3	15411-93J10	.CAP, FILTER	1	
4	15415-93J10	.SEAL, NO.1	1	
5	15412-93J10	.FILTER ASSY, FUEL	1	
6	15413-93J10	.CASE ASSY, FILTER	1	
7	15644-93J00	COVER, FUEL FILTER	3	
8	15633-93J20	HOSE, FUEL (H)	1	
9	15646-93J00	CLAMP, FUEL FILTER	1	
10	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
11	15440-93J00	FILTER, FUEL (EPI)	1	
12	09320-08501	CUSHION	2	
13	15773-90J00	UNION, FUEL HOSE (H)	1	
14	15830-93J00	UNION, 3 WAY	1	
15	09169-06062	WASHER	4	
16	15770-93J00	COOLER, FUEL	1	
17	09168-12013	GASKET (11.8X22X1.2)	3	
18	09360-12008	UNION	1	
19	09363-08004	UNION	1	
20	15600-98J00	SEPARATOR ASSY, FUEL VAPOR	1	
21	13370-93J00	.VALVE ASSY, NEEDLE	1	
22	15626-93J00	.GASKET, SEPARATOR	1	
23	15650-93J00	.FLOAT ASSY	1	
24	15200-98J00	.PUMP ASSY, FUEL (H)	1	
25	15647-93J00	.BUSH, FUEL PUMP	1	
26	15641-90J00	.SPACER, FUEL PUMP	1	
27	15642-90J00	.FILTER, FUEL PUMP	1	
28	15654-99E00	.PIN, FLOAT	1	
29	02142-0408B	.SCREW	1	
30	02112-05107	.SCREW	1	
31	15760-93J00	.REGULATOR, FUEL PRESSURE	1	
32	15628-99E00	.SCREW	6	
33	15627-93J00	.SCREW	1	
34	09320-12072	CUSHION	3	

FIG.147A

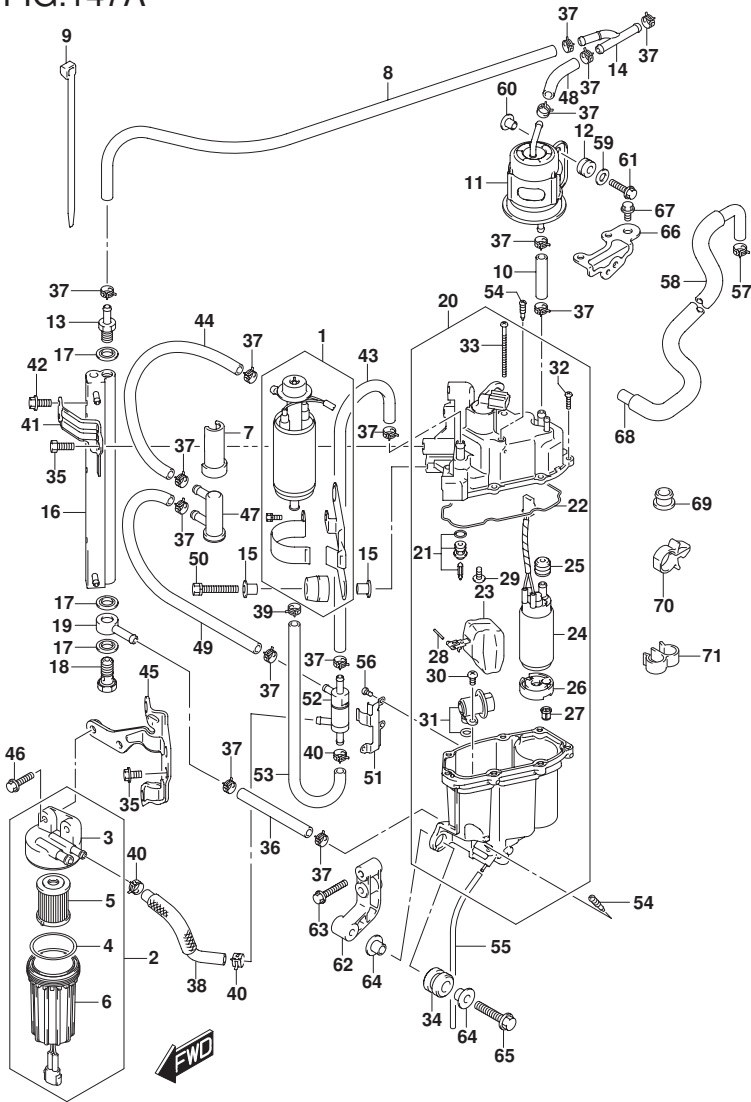


DF300A_E01_016_147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147A (1-C-4) FUEL PUMP/FUEL VAPOR SEPARATOR (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	15675-93J00	BOLT, COOLER BRACKET	3	
36	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->50
37	09401-11414	CLIP (ID:11.5)	14	
38	15636-98J20	HOSE, FUEL (L)	1	
39	15686-93J00	CLIP	1	
40	15685-93J00	CLIP	3	
41	15672-93J00	BRACKET, FUEL COOLER	1	
42	01500-06167	BOLT	4	
43	15635-93J20	HOSE, FUEL (H)	1	
44	15632-93J20	HOSE, FUEL (H)	1	
45	15673-98J00	BRACKET, FUEL FILTER	1	
46	01550-06257	BOLT	2	
47	15643-93J00	FILTER, FUEL (L)	1	
48	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
49	15634-93J20	HOSE, FUEL (H)	1	
50	01570-06357	BOLT	2	
51	15674-93J00	BRACKET, CHECK VALVE	1	
52	15645-93J00	VALVE, CHECK	1	
53	15637-93J20	HOSE, FUEL (L)	1	
54	15629-99E10	SCREW, DRAIN	2	
55	15683-87J00	HOSE, DRAIN	1	
56	02112-0406B	SCREW	3	
57	09401-08412	CLIP	1	
58	18498-93J10	PROTECTOR, EVAP HOSE (L:1130)	1	
59	09160-06084	WASHER (6.5X18X1.6)	2	
60	09169-06062	WASHER	2	
61	01500-06257	BOLT	2	
62	15671-93J00	BRACKET, VAPOR SEPARATOR	1	
63	01550-06357	BOLT	2	
64	09169-08042	WASHER	6	
65	01550-08407	BOLT	3	
66	18417-93J00	BRACKET, PURGE VALVE	1	
67	01550-06127	BOLT	2	

FIG.147A

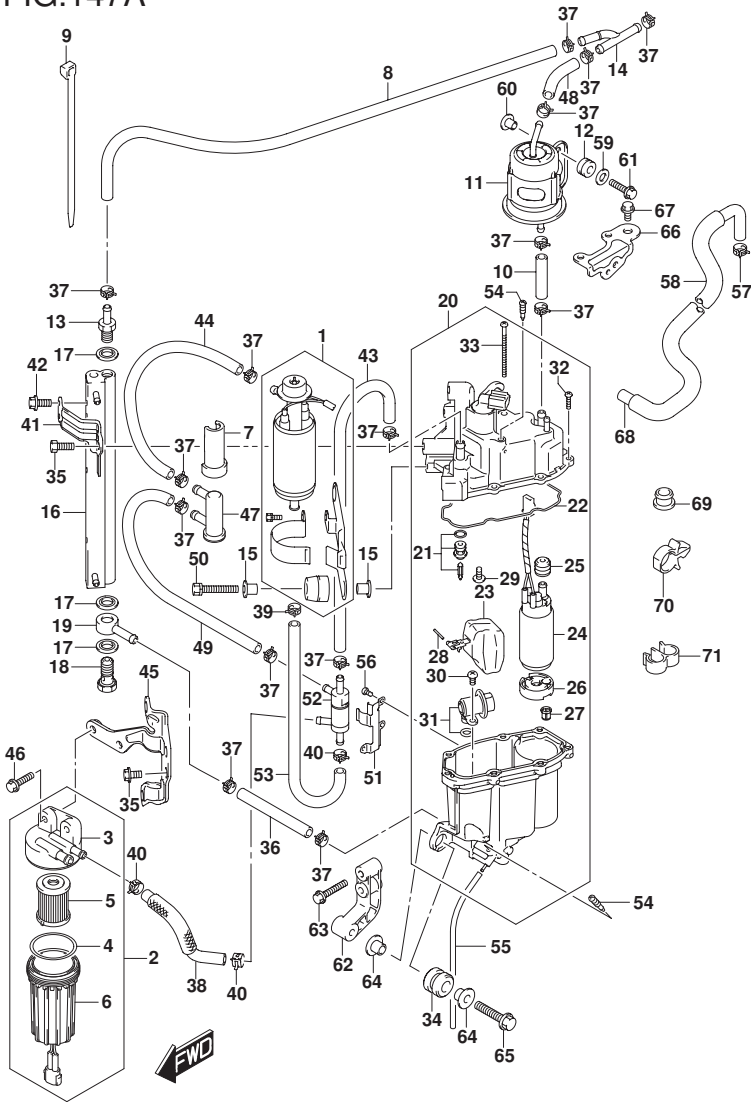

DF300A_E01_016_147A
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147A (1-C-5) FUEL PUMP/FUEL VAPOR SEPARATOR (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
68-1	09352-50823-00B	HOSE (5X8.2X2000)	1	L:2000->1230 UP TO VIN.611849
68-2	09352-50002-23A	HOSE (5X8.2X1230)	1	FROM VIN.611850
69	09320-08086	CUSHION	1	
70	09403-14304	CLAMP	1	
71	09408-00043	CLAMP	1	

FIG.147B


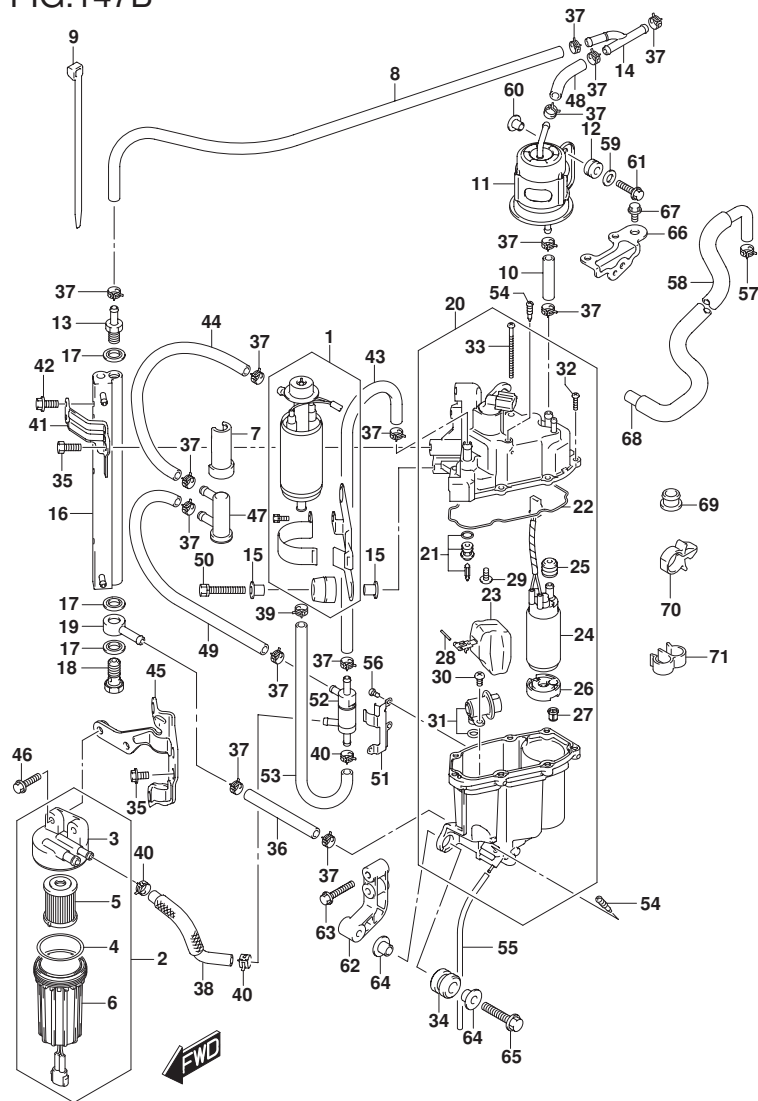


FIG.147B (1-C-6) FUEL PUMP/FUEL VAPOR SEPARATOR (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94900	PUMP ASSY, FUEL (L)	1	
2	15410-93J10	FILTER, FUEL (L)	1	
3	15411-93J10	.CAP, FILTER	1	
4	15415-93J10	.SEAL, NO.1	1	
5	15412-93J10	.FILTER ASSY, FUEL	1	
6	15413-93J10	.CASE ASSY, FILTER	1	
7	15644-93J00	COVER, FUEL FILTER	3	
8	15633-93J20	HOSE, FUEL (H)	1	
9	15646-93J00	CLAMP, FUEL FILTER	1	
10	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
11	15440-93J10	FILTER, FUEL (EPI)	1	
12	09320-08501	CUSHION	2	
13	15773-90J00	UNION, FUEL HOSE	1	
14	15830-93J00	UNION, 3 WAY	1	
15	09169-06062	WASHER	4	
16	15770-93J00	COOLER, FUEL	1	
17	15762-90J00	GASKET, FUEL COOLER UNION	3	
18	09360-12013	UNION	1	
19	15830-90J00	UNION, FUEL COOLER	1	
20	15600-98J10	SEPARATOR ASSY, FUEL VAPOR	1	
21	13370-93J00	.VALVE ASSY, NEEDLE	1	
22	15626-93J10	.GASKET, SEPARATOR	1	
23	15650-93J00	.FLOAT ASSY	1	
24	15200-98J10	.PUMP ASSY, FUEL (H)	1	
25	15647-93J10	.BUSH, FUEL PUMP	1	
26	15641-90J10	.SPACER, FUEL PUMP	1	
27	15642-90J00	.FILTER, FUEL PUMP	1	
28	15654-99E00	.PIN, FLOAT	1	
29	13614-93J00	.SCREW	1	
30	15631-99E10	.SCREW, REGULATOR	1	
31	15760-93J00	.REGULATOR, FUEL PRESSURE	1	
32	15628-99E00	.SCREW	6	
33	15627-93J00	.SCREW	1	
34	09320-12072	CUSHION	3	

FIG.147B

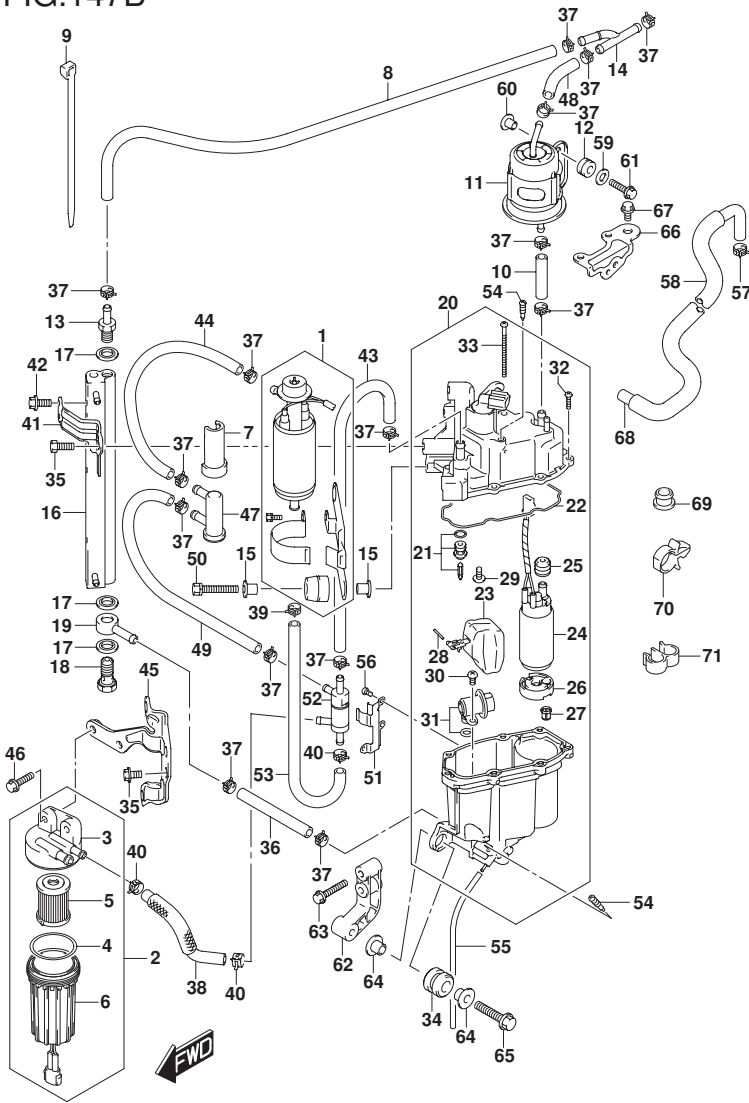

DF300A_E01_016_147B
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147B (1-C-7) FUEL PUMP/FUEL VAPOR SEPARATOR (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	15675-93J00	BOLT, COOLER BRACKET	3	
36	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->50
37	09401-11414	CLIP (ID:11.5)	14	
38	15636-98J20	HOSE, FUEL (L)	1	
39	15686-93J00	CLIP	1	
40	15685-93J00	CLIP	3	
41	15672-93J00	BRACKET, FUEL COOLER	1	
42	01500-06167	BOLT	4	
43	15635-93J20	HOSE, FUEL (H)	1	
44	15632-93J20	HOSE, FUEL (H)	1	
45	15673-98J00	BRACKET, FUEL FILTER	1	
46	01550-06257	BOLT	2	
47	15643-93J00	FILTER, FUEL (L)	1	
48	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
49	15634-93J20	HOSE, FUEL (H)	1	
50	01570-06357	BOLT	2	
51	15674-93J00	BRACKET, CHECK VALVE	1	
52	15645-93J10	VALVE, CHECK	1	
53	15637-93J20	HOSE, FUEL (L)	1	
54	15629-99E10	SCREW, DRAIN	2	
55	15683-87J00	HOSE, DRAIN	1	
56	02112-0406B	SCREW	3	
57	09401-08412	CLIP	1	
58	18498-93J10	PROTECTOR, EVAP HOSE (L:1130)	1	
59	09160-06084	WASHER (6.5X18X1.6)	2	
60	09169-06062	WASHER	2	
61	01500-06257	BOLT	2	
62	15671-93J00	BRACKET, VAPOR SEPARATOR	1	
63	01550-06357	BOLT	2	
64	09169-08042	WASHER	6	
65	01550-08407	BOLT	3	
66	18417-93J00	BRACKET, PURGE VALVE	1	
67	01550-06127	BOLT	2	

FIG.147B

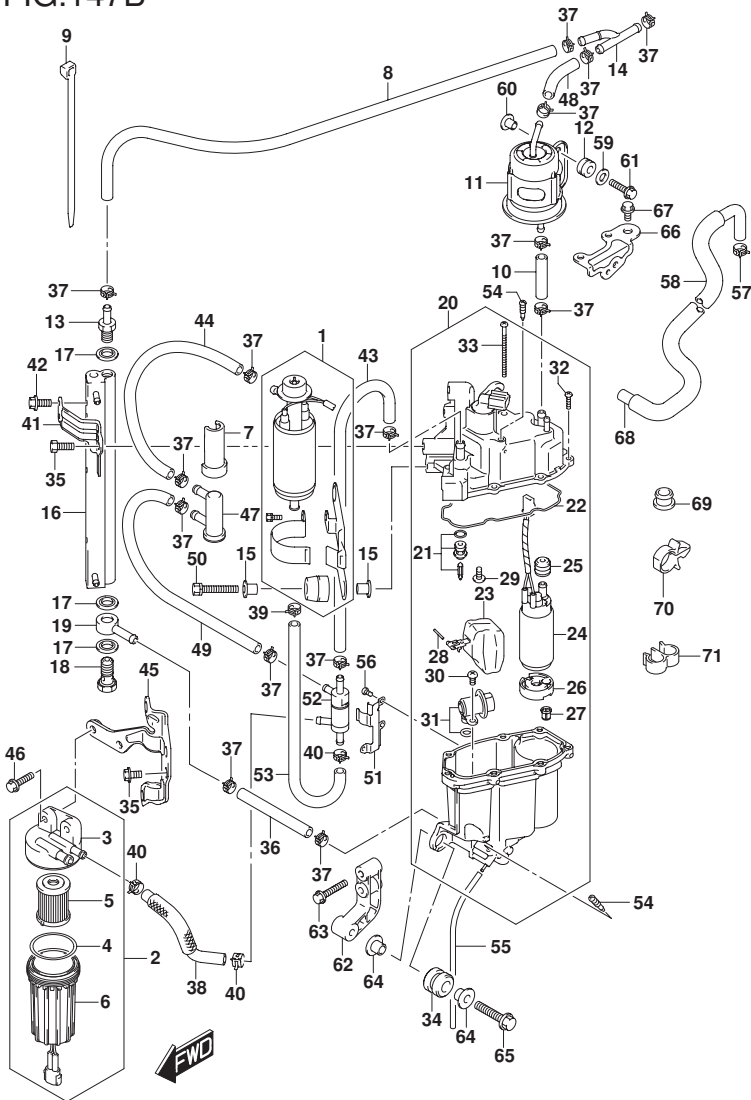


FIG.147B (1-C-8) FUEL PUMP/FUEL VAPOR SEPARATOR (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
68-1	09352-50823-00B	HOSE (5X8.2X2000)	1	L:2000->1230 UP TO VIN.611849
68-2	09352-50002-23A	HOSE (5X8.2X1230)	1	FROM VIN.611850
69	09320-08086	CUSHION	1	
70	09403-14304	CLAMP	1	
71	09408-00043	CLAMP	1	

FIG.147C


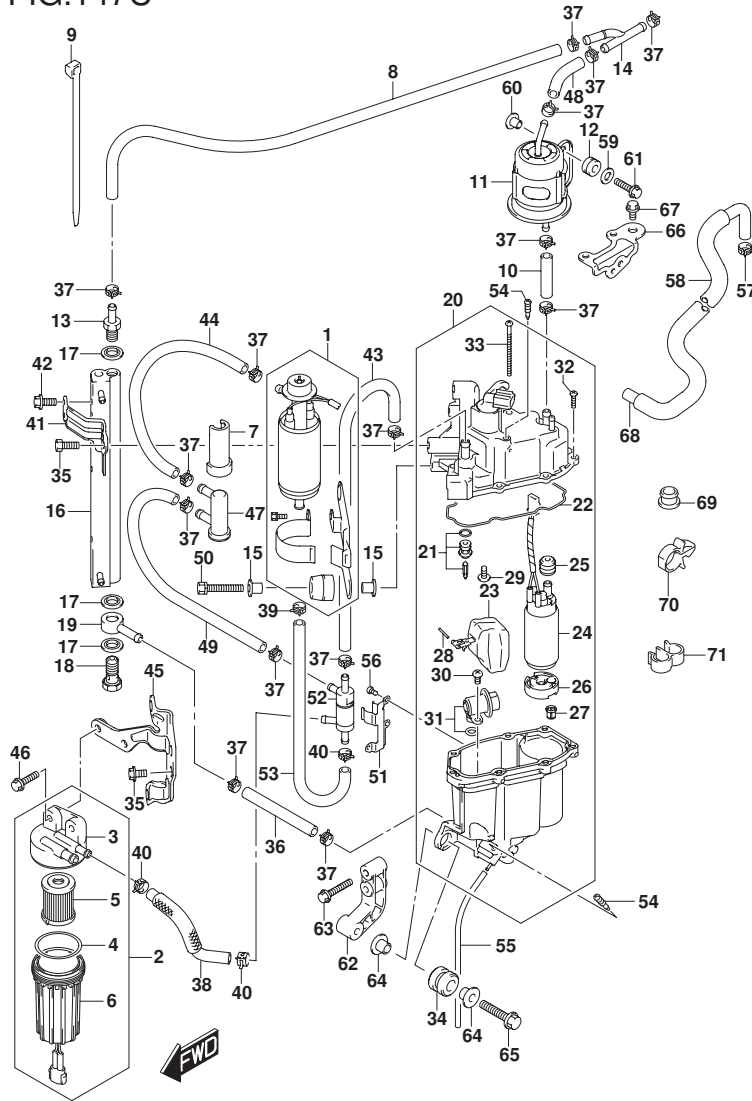


FIG.147C (1-C-9) FUEL PUMP/FUEL VAPOR SEPARATOR (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94900	PUMP ASSY, FUEL (L)	1	
2	15410-93J10	FILTER, FUEL (L)	1	
3	15411-93J10	.CAP, FILTER	1	
4	15415-93J10	.SEAL, NO.1	1	
5	15412-93J10	.FILTER ASSY, FUEL	1	
6	15413-93J10	.CASE ASSY, FILTER	1	
7	15644-93J00	COVER, FUEL FILTER	3	
8	15633-93J20	HOSE, FUEL (H)	1	
9	15646-93J00	CLAMP, FUEL FILTER	1	
10	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
11	15440-93J00	FILTER, FUEL (EPI)	1	
12	09320-08501	CUSHION	2	
13	15773-90J00	UNION, FUEL HOSE (H)	1	
14	15830-93J00	UNION, 3 WAY	1	
15	09169-06062	WASHER	4	
16	15770-93J00	COOLER, FUEL	1	
17	09168-12013	GASKET (11.8X22X1.2)	3	
18	09360-12008	UNION	1	
19	09363-08004	UNION	1	
20	15600-98J00	SEPARATOR ASSY, FUEL VAPOR	1	
21	13370-93J00	.VALVE ASSY, NEEDLE	1	
22	15626-93J00	.GASKET, SEPARATOR	1	
23	15650-93J00	.FLOAT ASSY	1	
24	15200-98J00	.PUMP ASSY, FUEL (H)	1	
25	15647-93J00	.BUSH, FUEL PUMP	1	
26	15641-90J00	.SPACER, FUEL PUMP	1	
27	15642-90J00	.FILTER, FUEL PUMP	1	
28	15654-99E00	.PIN, FLOAT	1	
29	02142-0408B	.SCREW	1	
30	02112-05107	.SCREW	1	
31	15760-93J00	.REGULATOR, FUEL PRESSURE	1	
32	15628-99E00	.SCREW	6	
33	15627-93J00	.SCREW	1	
34	09320-12072	CUSHION	3	

FIG.147C

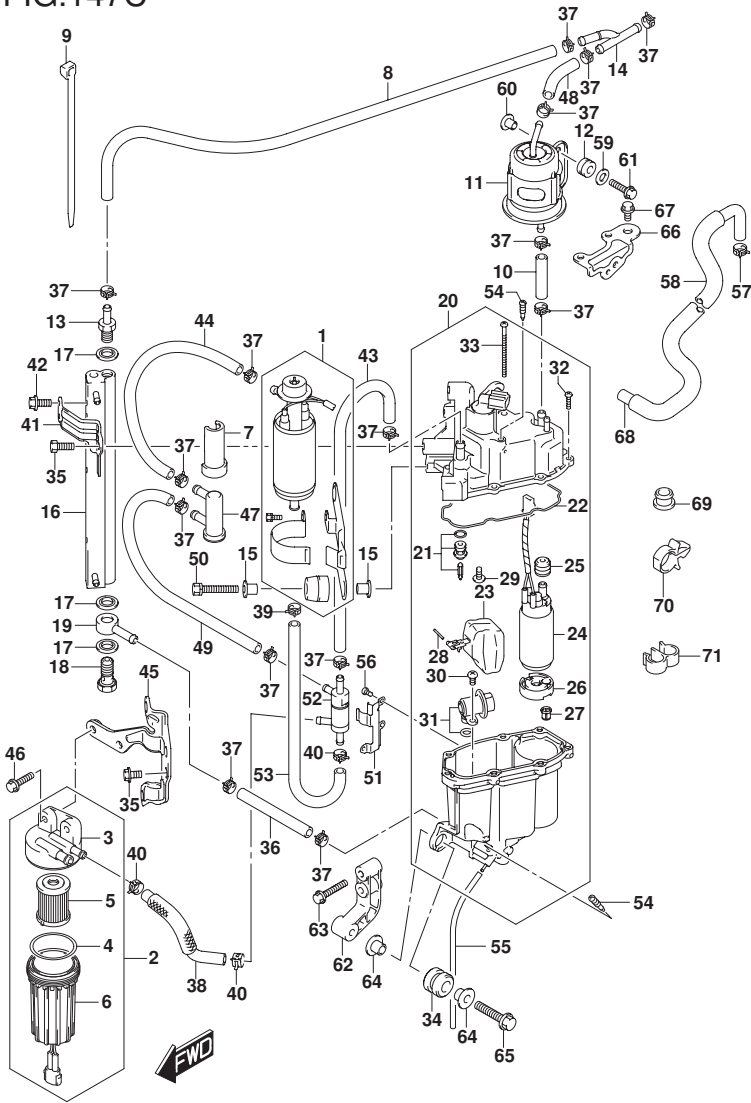


DF300A_E01_016_147C
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147C (1-C-10) FUEL PUMP/FUEL VAPOR SEPARATOR (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	15675-93J00	BOLT, COOLER BRACKET	3	
36	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->50
37	09401-11414	CLIP (ID:11.5)	14	
38	15636-98J20	HOSE, FUEL (L)	1	
39	15686-93J00	CLIP	1	
40	15685-93J00	CLIP	3	
41	15672-93J00	BRACKET, FUEL COOLER	1	
42	01500-06167	BOLT	4	
43	15635-93J20	HOSE, FUEL (H)	1	
44	15632-93J20	HOSE, FUEL (H)	1	
45	15673-98J00	BRACKET, FUEL FILTER	1	
46	01550-06257	BOLT	2	
47	15643-93J00	FILTER, FUEL (L)	1	
48	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
49	15634-93J20	HOSE, FUEL (H)	1	
50	01570-06357	BOLT	2	
51	15674-93J00	BRACKET, CHECK VALVE	1	
52	15645-93J00	VALVE, CHECK	1	
53	15637-93J20	HOSE, FUEL (L)	1	
54	15629-99E10	SCREW, DRAIN	2	
55	15683-87J00	HOSE, DRAIN	1	
56	02112-0406B	SCREW	3	
57	09401-08412	CLIP	1	
58	18498-93J10	PROTECTOR, EVAP HOSE (L:1130)	1	
59	09160-06084	WASHER (6.5X18X1.6)	2	
60	09169-06062	WASHER	2	
61	01500-06257	BOLT	2	
62	15671-93J00	BRACKET, VAPOR SEPARATOR	1	
63	01550-06357	BOLT	2	
64	09169-08042	WASHER	6	
65	01550-08407	BOLT	3	
66	18417-93J00	BRACKET, PURGE VALVE	1	
67	01550-06127	BOLT	2	

DF300A_E01_016

FIG.147C

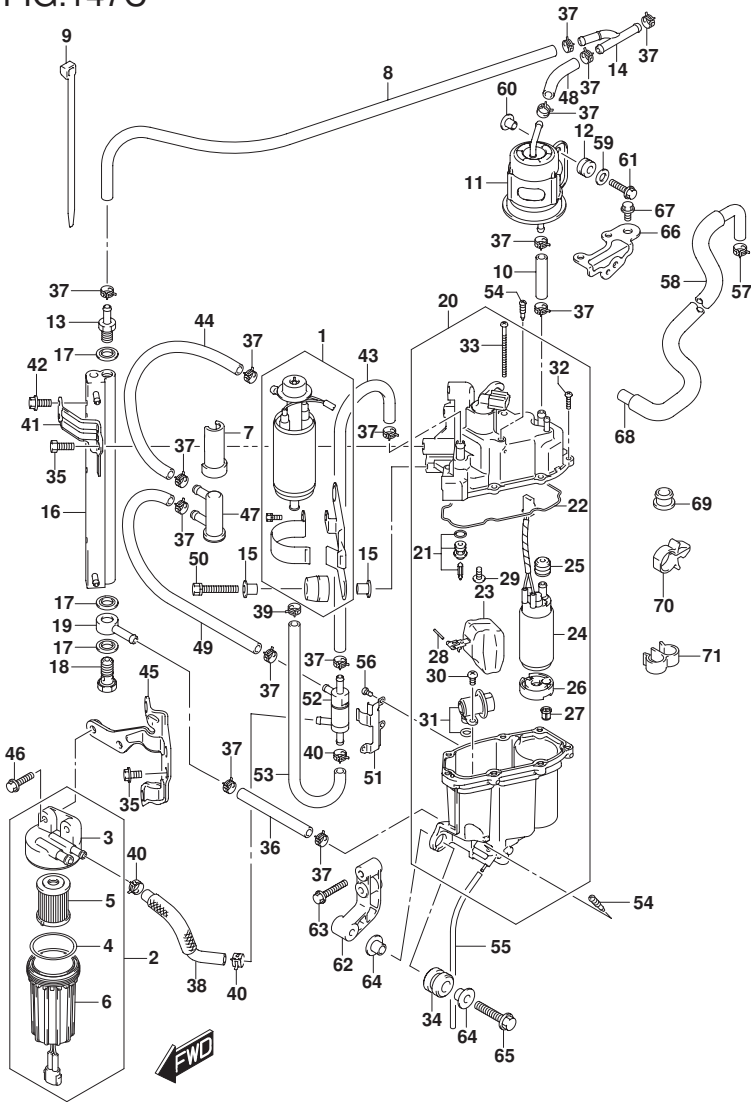

DF300A_E01_016_147C
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147C (1-C-11) FUEL PUMP/FUEL VAPOR SEPARATOR (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
68-1	09352-50823-00B	HOSE (5X8.2X2000)	1	L:2000->1230 UP TO VIN.610512
68-2	09352-50002-23A	HOSE (5X8.2X1230)	1	FROM VIN.610513
69	09320-08086	CUSHION	1	
70	09403-14304	CLAMP	1	
71	09408-00043	CLAMP	1	

FIG.147D


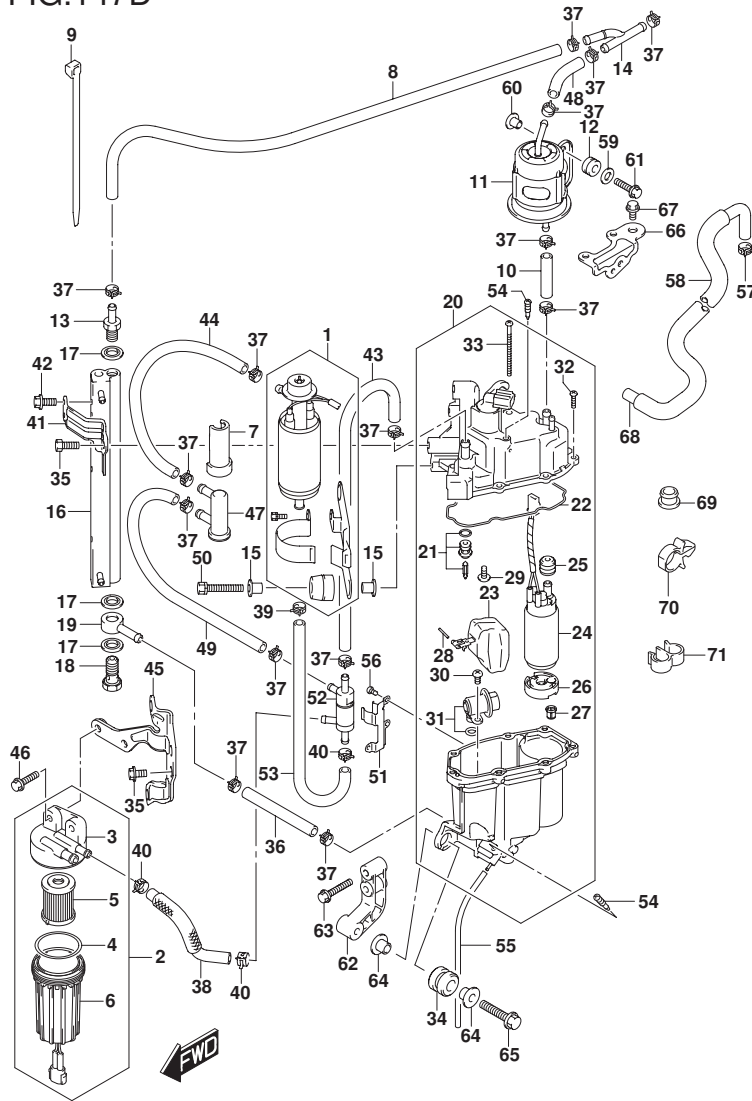


FIG.147D (1-C-12) FUEL PUMP/FUEL VAPOR SEPARATOR (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94900	PUMP ASSY, FUEL (L)	1	
2	15410-93J10	FILTER, FUEL (L)	1	
3	15411-93J10	.CAP, FILTER	1	
4	15415-93J10	.SEAL, NO.1	1	
5	15412-93J10	.FILTER ASSY, FUEL	1	
6	15413-93J10	.CASE ASSY, FILTER	1	
7	15644-93J00	COVER, FUEL FILTER	3	
8	15633-93J20	HOSE, FUEL (H)	1	
9	15646-93J00	CLAMP, FUEL FILTER	1	
10	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
11	15440-93J10	FILTER, FUEL (EPI)	1	
12	09320-08501	CUSHION	2	
13	15773-90J00	UNION, FUEL HOSE	1	
14	15830-93J00	UNION, 3 WAY	1	
15	09169-06062	WASHER	4	
16	15770-93J00	COOLER, FUEL	1	
17	15762-90J00	GASKET, FUEL COOLER UNION	3	
18	09360-12013	UNION	1	
19	15830-90J00	UNION, FUEL COOLER	1	
20	15600-98J10	SEPARATOR ASSY, FUEL VAPOR	1	
21	13370-93J00	.VALVE ASSY, NEEDLE	1	
22	15626-93J10	.GASKET, SEPARATOR	1	
23	15650-93J00	.FLOAT ASSY	1	
24	15200-98J10	.PUMP ASSY, FUEL (H)	1	
25	15647-93J10	.BUSH, FUEL PUMP	1	
26	15641-90J10	.SPACER, FUEL PUMP	1	
27	15642-90J00	.FILTER, FUEL PUMP	1	
28	15654-99E00	.PIN, FLOAT	1	
29	13614-93J00	.SCREW	1	
30	15631-99E10	.SCREW, REGULATOR	1	
31	15760-93J00	.REGULATOR, FUEL PRESSURE	1	
32	15628-99E00	.SCREW	6	
33	15627-93J00	.SCREW	1	
34	09320-12072	CUSHION	3	

FIG.147D

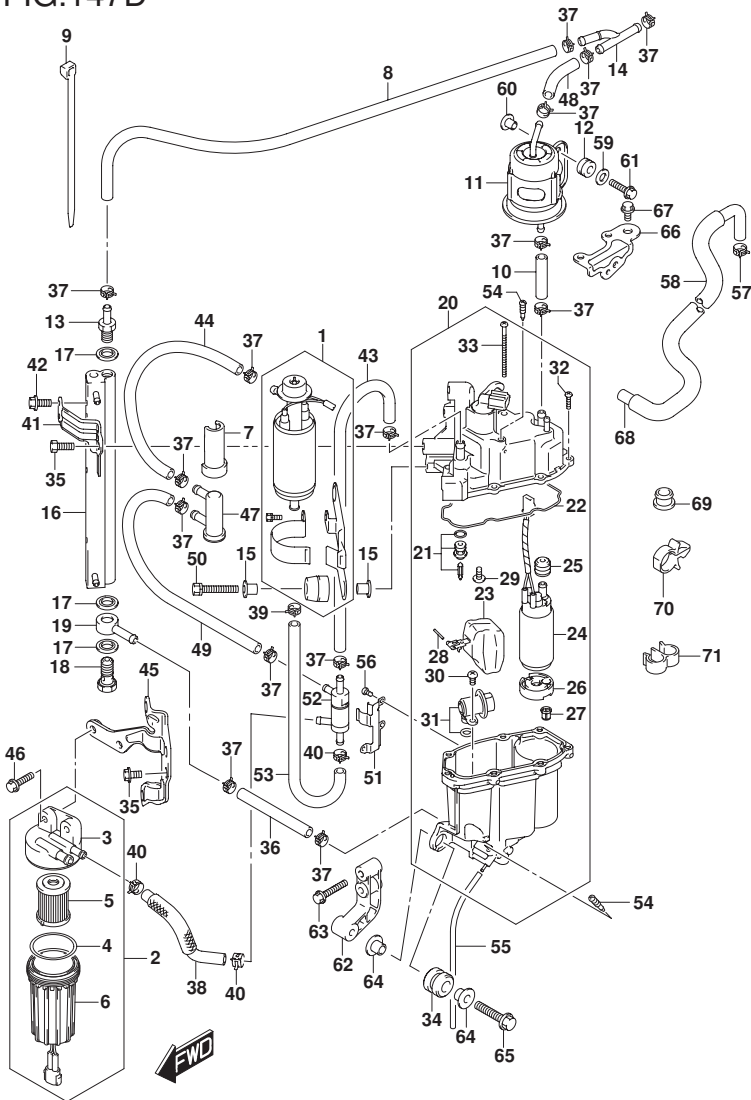

DF300A_E01_016_147D
FUEL PUMP/FUEL VAPOR SEPARATOR

FIG.147D (1-C-13) FUEL PUMP/FUEL VAPOR SEPARATOR (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	15675-93J00	BOLT, COOLER BRACKET	3	
36	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->50
37	09401-11414	CLIP (ID:11.5)	14	
38	15636-98J20	HOSE, FUEL (L)	1	
39	15686-93J00	CLIP	1	
40	15685-93J00	CLIP	3	
41	15672-93J00	BRACKET, FUEL COOLER	1	
42	01500-06167	BOLT	4	
43	15635-93J20	HOSE, FUEL (H)	1	
44	15632-93J20	HOSE, FUEL (H)	1	
45	15673-98J00	BRACKET, FUEL FILTER	1	
46	01550-06257	BOLT	2	
47	15643-93J00	FILTER, FUEL (L)	1	
48	09343-75001-600	HOSE (7.5X13.5X600)	1	L:600->65
49	15634-93J20	HOSE, FUEL (H)	1	
50	01570-06357	BOLT	2	
51	15674-93J00	BRACKET, CHECK VALVE	1	
52	15645-93J10	VALVE, CHECK	1	
53	15637-93J20	HOSE, FUEL (L)	1	
54	15629-99E10	SCREW, DRAIN	2	
55	15683-87J00	HOSE, DRAIN	1	
56	02112-0406B	SCREW	3	
57	09401-08412	CLIP	1	
58	18498-93J10	PROTECTOR, EVAP HOSE (L:1130)	1	
59	09160-06084	WASHER (6.5X18X1.6)	2	
60	09169-06062	WASHER	2	
61	01500-06257	BOLT	2	
62	15671-93J00	BRACKET, VAPOR SEPARATOR	1	
63	01550-06357	BOLT	2	
64	09169-08042	WASHER	6	
65	01550-08407	BOLT	3	
66	18417-93J00	BRACKET, PURGE VALVE	1	
67	01550-06127	BOLT	2	

DF300A_E01_016

FIG.147D

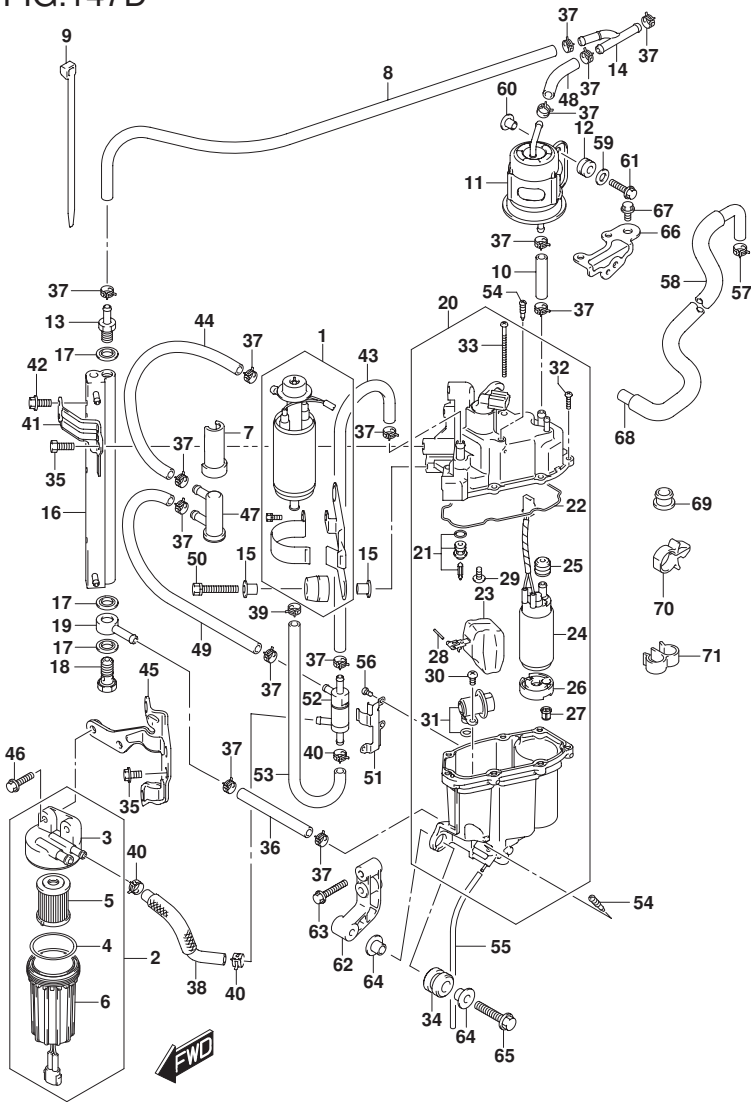


FIG.147D (1-C-14) FUEL PUMP/FUEL VAPOR SEPARATOR (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
68-1	09352-50823-00B	HOSE (5X8.2X2000)	1	L:2000->1230 UP TO VIN.610512
68-2	09352-50002-23A	HOSE (5X8.2X1230)	1	FROM VIN.610513
69	09320-08086	CUSHION	1	
70	09403-14304	CLAMP	1	
71	09408-00043	CLAMP	1	

FIG.160A


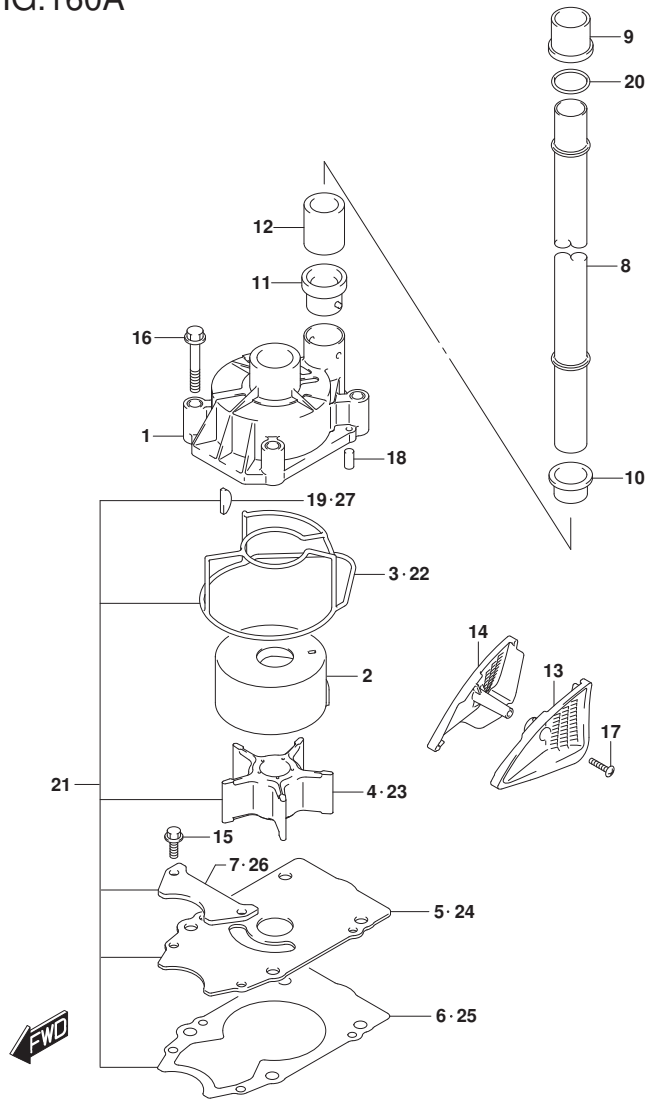


FIG.160A (1-C-15) WATER PUMP (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J02	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98J01	PANEL, PUMP CASE UNDER	1	
6	17472-98J00	GASKET, PUMP CASE PANEL	1	
7	17473-98J00	PANEL, WATER PUMP NO.2	1	
8-1	17561-93J03	TUBE, WATER (UL)	1	W/TRANSOM(X)
8-2	17561-93J13	TUBE, WATER (XX)	1	W/TRANSOM(XX)
9	17562-93J01	BUSH, WATER TUBE UPPER	1	
10	17563-93J00	BUSH, WATER TUBE LOWER	1	
11	17564-93J00	BUSH, WATER PUMP CASE	1	
12	17612-93J00	SPACER, WATER TUBE	1	
13	17631-93L00	FILTER, WATER PORT SIDE	1	
14	17632-93L00	FILTER, WATER STBD SIDE	1	
15	29116-93J00	BOLT, PUMP CASE PANEL	2	
16	09116-08131	BOLT (8X45)	4	
17	09132-04034	SCREW (4X18)	1	
18	09202-06031	PIN (6X12)	2	
19	09420-05009	KEY	1	
20	09168-20002	GASKET	1	WATER TUBE UPPER
21	17400-98J01	WATER PUMP REPAIR KIT	1	OPT
22	17416-93J00	.SEALING, CASE	1	OPT
23	17461-93J00	.IMPELLER, WATER PUMP	1	OPT
24	17471-98J01	.PANEL, PUMP CASE UNDER	1	OPT
25	17472-98J00	.GASKET, PUMP CASE PANEL	1	OPT
26	17473-98J00	.PANEL, WATER PUMP NO.2	1	OPT
27	09420-05009	.KEY	1	OPT

FIG.160B

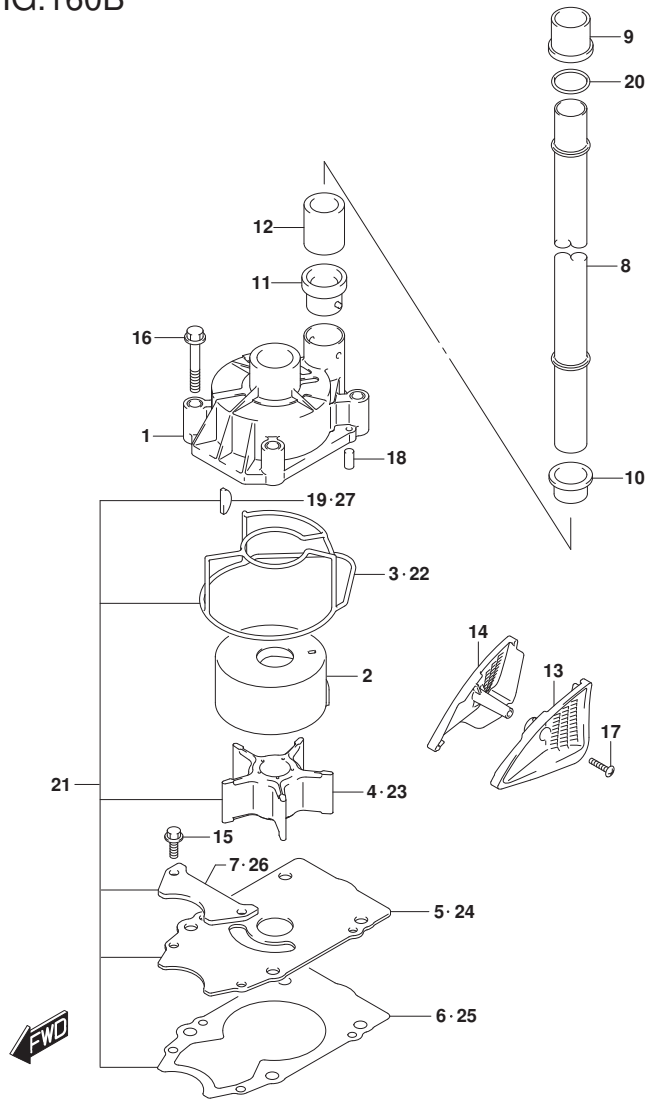

DF300A_E01_016_160B
WATER PUMP

FIG.160B (1-D-2) WATER PUMP (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J12	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98J11	PANEL, PUMP CASE UNDER	1	
6	17472-98J00	GASKET, PUMP CASE PANEL	1	
7	17473-98J00	PANEL, WATER PUMP NO.2	1	
8-1	17561-93J03	TUBE, WATER (UL)	1	W/TRANSOM(X)
8-2	17561-93J13	TUBE, WATER (XX)	1	W/TRANSOM(XX)
9	17562-93J01	BUSH, WATER TUBE UPPER	1	
10	17563-93J00	BUSH, WATER TUBE LOWER	1	
11	17564-93J00	BUSH, WATER PUMP CASE	1	
12	17612-93J00	SPACER, WATER TUBE	1	
13	17631-93L00	FILTER, WATER PORT SIDE	1	
14	17632-93L00	FILTER, WATER STBD SIDE	1	
15	29116-93J00	BOLT, PUMP CASE PANEL	2	
16	09116-08131	BOLT (8X45)	4	
17	09132-04034	SCREW (4X18)	1	
18	09202-06031	PIN (6X12)	2	
19	09420-05009	KEY	1	
20	09168-20002	GASKET	1	WATER TUBE UPPER
21	17400-98J01	WATER PUMP REPAIR KIT	1	OPT
22	17416-93J00	.SEALING, CASE	1	OPT
23	17461-93J00	.IMPELLER, WATER PUMP	1	OPT
24	17471-98J01	.PANEL, PUMP CASE UNDER	1	OPT
25	17472-98J00	.GASKET, PUMP CASE PANEL	1	OPT
26	17473-98J00	.PANEL, WATER PUMP NO.2	1	OPT
27	09420-05009	.KEY	1	OPT

FIG.160C

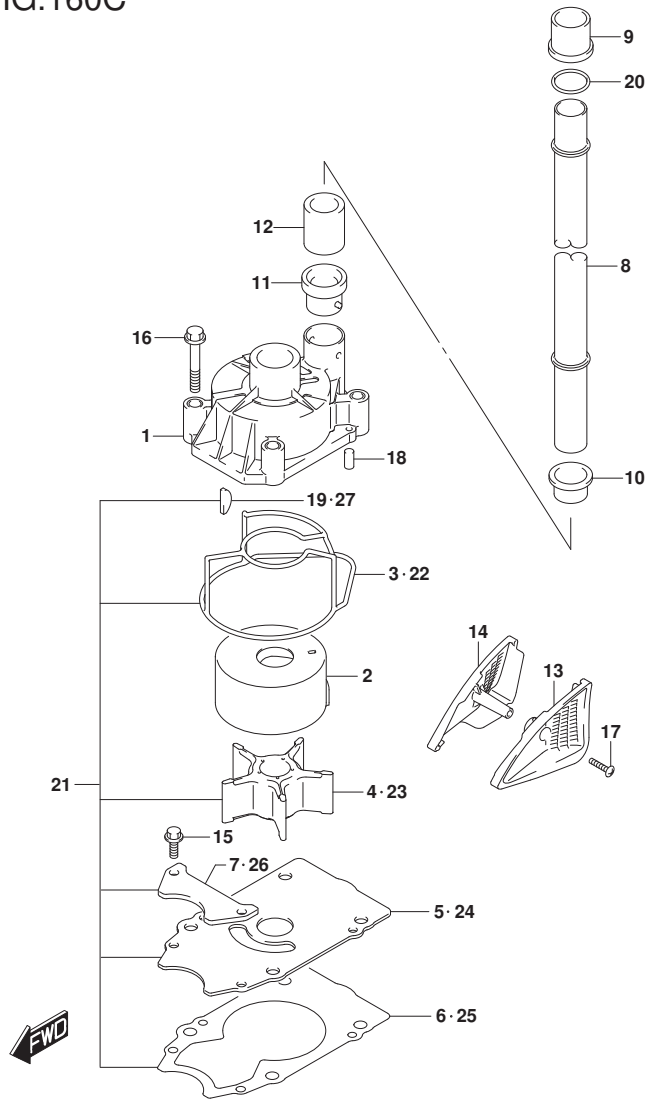


FIG.160C (1-D-3) WATER PUMP (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J02	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98J01	PANEL, PUMP CASE UNDER	1	
6	17472-98J00	GASKET, PUMP CASE PANEL	1	
7	17473-98J00	PANEL, WATER PUMP NO.2	1	
8-1	17561-93J03	TUBE, WATER (UL)	1	W/TRANSOM(X)
8-2	17561-93J13	TUBE, WATER (XX)	1	W/TRANSOM(XX)
9	17562-93J01	BUSH, WATER TUBE UPPER	1	
10	17563-93J00	BUSH, WATER TUBE LOWER	1	
11	17564-93J00	BUSH, WATER PUMP CASE	1	
12	17612-93J00	SPACER, WATER TUBE	1	
13	17631-93L00	FILTER, WATER PORT SIDE	1	
14	17632-93L00	FILTER, WATER STBD SIDE	1	
15	29116-93J00	BOLT, PUMP CASE PANEL	2	
16	09116-08131	BOLT (8X45)	4	
17	09132-04034	SCREW (4X18)	1	
18	09202-06031	PIN (6X12)	2	
19	09420-05009	KEY	1	
20	09168-20002	GASKET	1	WATER TUBE UPPER
21	17400-98J01	WATER PUMP REPAIR KIT	1	OPT
22	17416-93J00	.SEALING, CASE	1	OPT
23	17461-93J00	.IMPELLER, WATER PUMP	1	OPT
24	17471-98J01	.PANEL, PUMP CASE UNDER	1	OPT
25	17472-98J00	.GASKET, PUMP CASE PANEL	1	OPT
26	17473-98J00	.PANEL, WATER PUMP NO.2	1	OPT
27	09420-05009	.KEY	1	OPT

FIG.160D

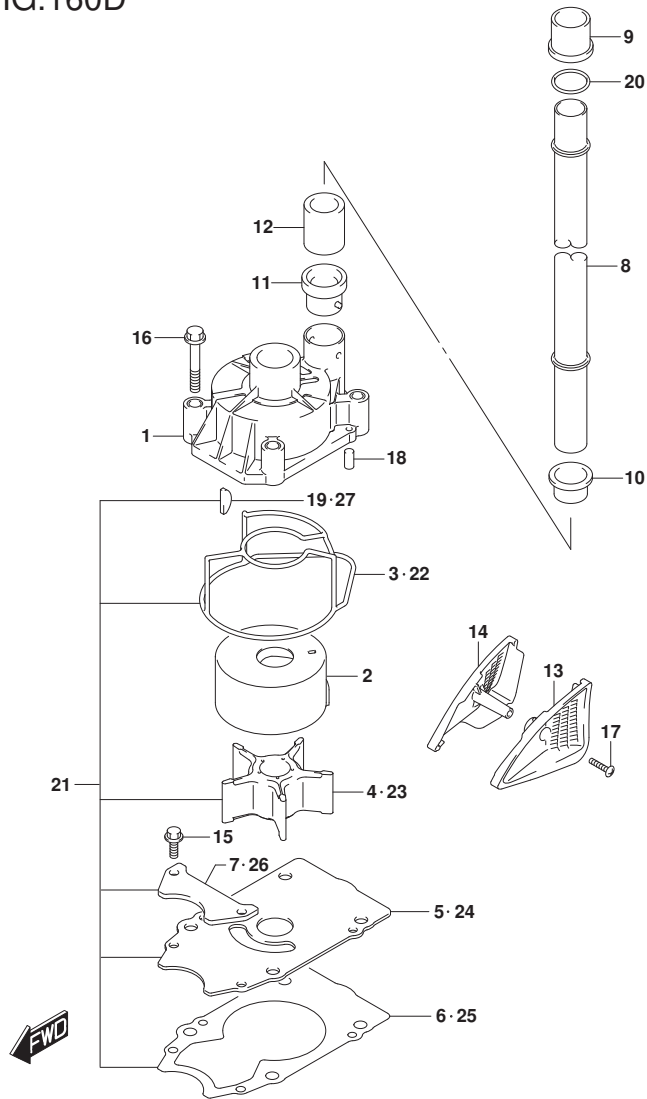


FIG.160D (1-D-4) WATER PUMP (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-93J01	CASE, WATER PUMP	1	
2	17413-93J12	SLEEVE, CASE	1	
3	17416-93J00	SEALING, CASE	1	
4	17461-93J00	IMPELLER, WATER PUMP	1	
5	17471-98J11	PANEL, PUMP CASE UNDER	1	
6	17472-98J00	GASKET, PUMP CASE PANEL	1	
7	17473-98J00	PANEL, WATER PUMP NO.2	1	
8-1	17561-93J03	TUBE, WATER (UL)	1	W/TRANSOM(X)
8-2	17561-93J13	TUBE, WATER (XX)	1	W/TRANSOM(XX)
9	17562-93J01	BUSH, WATER TUBE UPPER	1	
10	17563-93J00	BUSH, WATER TUBE LOWER	1	
11	17564-93J00	BUSH, WATER PUMP CASE	1	
12	17612-93J00	SPACER, WATER TUBE	1	
13	17631-93L00	FILTER, WATER PORT SIDE	1	
14	17632-93L00	FILTER, WATER STBD SIDE	1	
15	29116-93J00	BOLT, PUMP CASE PANEL	2	
16	09116-08131	BOLT (8X45)	4	
17	09132-04034	SCREW (4X18)	1	
18	09202-06031	PIN (6X12)	2	
19	09420-05009	KEY	1	
20	09168-20002	GASKET	1	WATER TUBE UPPER
21	17400-98J01	WATER PUMP REPAIR KIT	1	OPT
22	17416-93J00	.SEALING, CASE	1	OPT
23	17461-93J00	.IMPELLER, WATER PUMP	1	OPT
24	17471-98J01	.PANEL, PUMP CASE UNDER	1	OPT
25	17472-98J00	.GASKET, PUMP CASE PANEL	1	OPT
26	17473-98J00	.PANEL, WATER PUMP NO.2	1	OPT
27	09420-05009	.KEY	1	OPT

FIG.162A

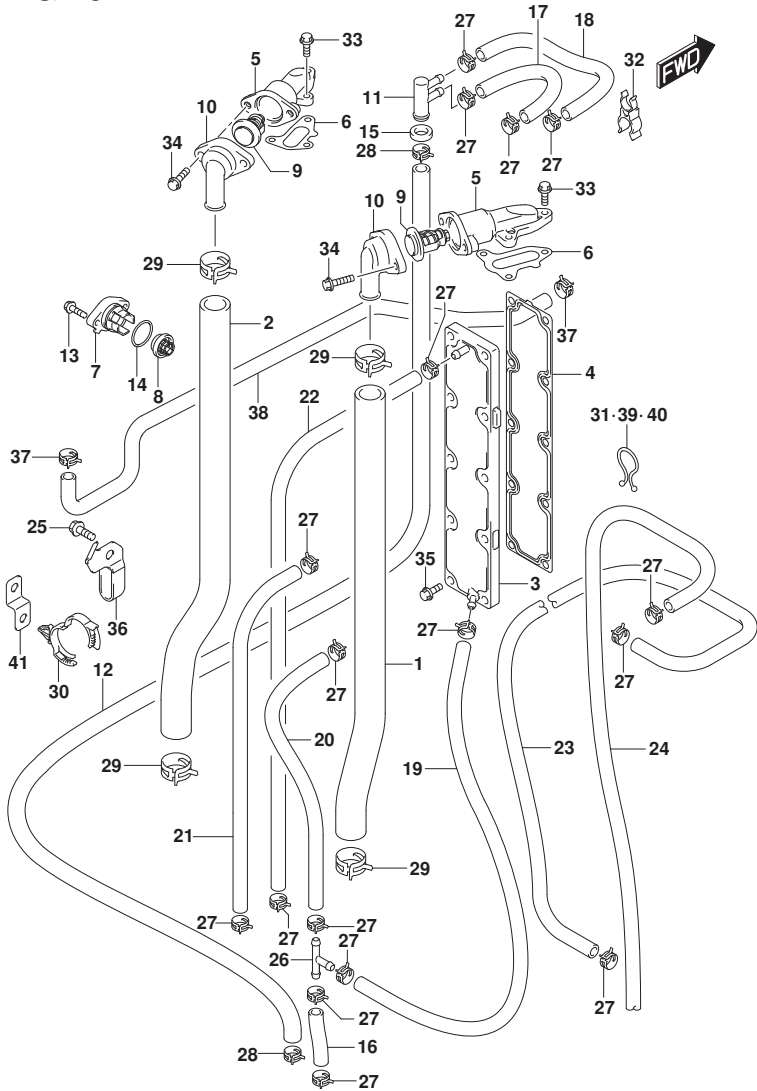


FIG.162A (1-D-5) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11196-93J00	HOSE, WATER RETURN STBD	1	
2	11197-93J00	HOSE, WATER RETURN PORT	1	
3	11270-93J00	PLATE, CYL BLOCK WTR JKT	1	
4	11272-93J00	GASKET, CYL BLOCK PLATE	1	
5	17581-93J00	PIPE, OUTLET	2	
6	17582-93J00	GASKET, OUTLET PIPE	2	
7-1	17611-90J00-0EP	COVER, WATER PRESS VALVE (BLACK)	1	
7-2	17611-90J00-Y5S	COVER, WATER PRESS VALVE (WHITE)	1	
8	17660-99E01	VALVE, WATER PRESSURE	1	
9-1	17670-90J20	THERMOSTAT (50 DEG)	2	OPT
9-2	17670-90J10	THERMOSTAT (71 DEG)	1	
10	17681-93J00	COVER, THERMOSTAT	2	
11	17711-90J00	3 WAY, WATER HOSE	1	
12	17712-93J00	HOSE (3 WAY TO E/H COV)	1	
13	09116-06121	BOLT (6X25)	2	
14	09280-26006	O RING (D:3.1,ID:26.4)	1	
15	09320-12014	CUSHION	1	
16	09352-50903-600	HOSE (5X9X600)	1	L:600->60
17	09352-50903-600	HOSE (5X9X600)	1	L:600->120
18	09352-50903-600	HOSE (5X9X600)	1	L:600->190
19	09352-50903-600	HOSE (5X9X600)	1	L:600->300
20	09352-50903-600	HOSE (5X9X600)	1	L:600->330
21	09352-50903-600	HOSE (5X9X600)	1	
22	09352-50903-600	HOSE (5X9X600)	1	
23	09352-50903-00B	HOSE (5X9X2000)	1	L:2000->850
24	09352-50903-00B	HOSE (5X9X2000)	1	L:2000->1010
25	01550-08127	BOLT	1	
26	09367-06002	JOINT, 3 WAY	1	
27	09401-08413	CLIP	18	
28	09401-14409	CLIP	2	
29	09401-25406	CLIP	4	
30	09403-25304	CLAMP	1	
31	09408-00008	CLIP (ID:20)	1	

FIG.162A

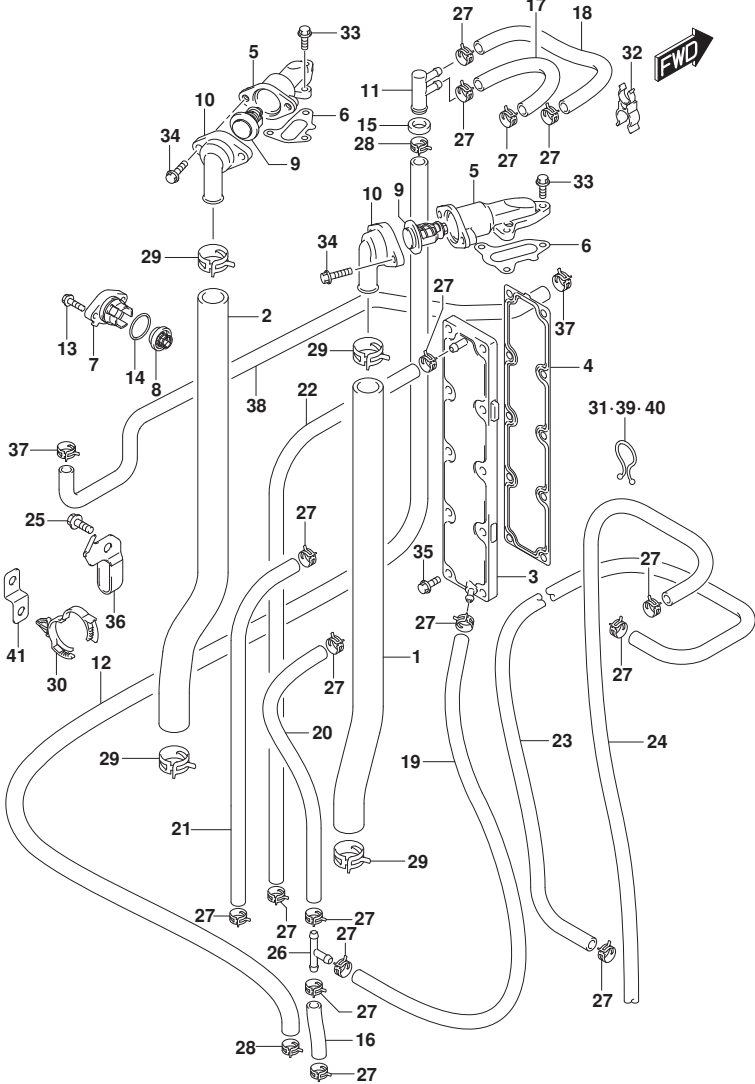


FIG.162A (1-D-6) THERMOSTAT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
32	09408-00056	CLIP	1	
33	01550-06207	BOLT	6	
34	01550-06207	BOLT	4	
35	01550-06257	BOLT	10	
36	17713-98J00	HOLDER, WATER HOSE	1	
37	09401-15414	CLIP	2	
38	17915-98J01	HOSE, WATER FLUSH	1	
39	09408-00024	CLIP (ID:23)	1	
40	09408-00021	CLIP (ID:16)	1	
41	36617-93J10	BRACKET, HOSE CLAMP	1	

FIG.163A

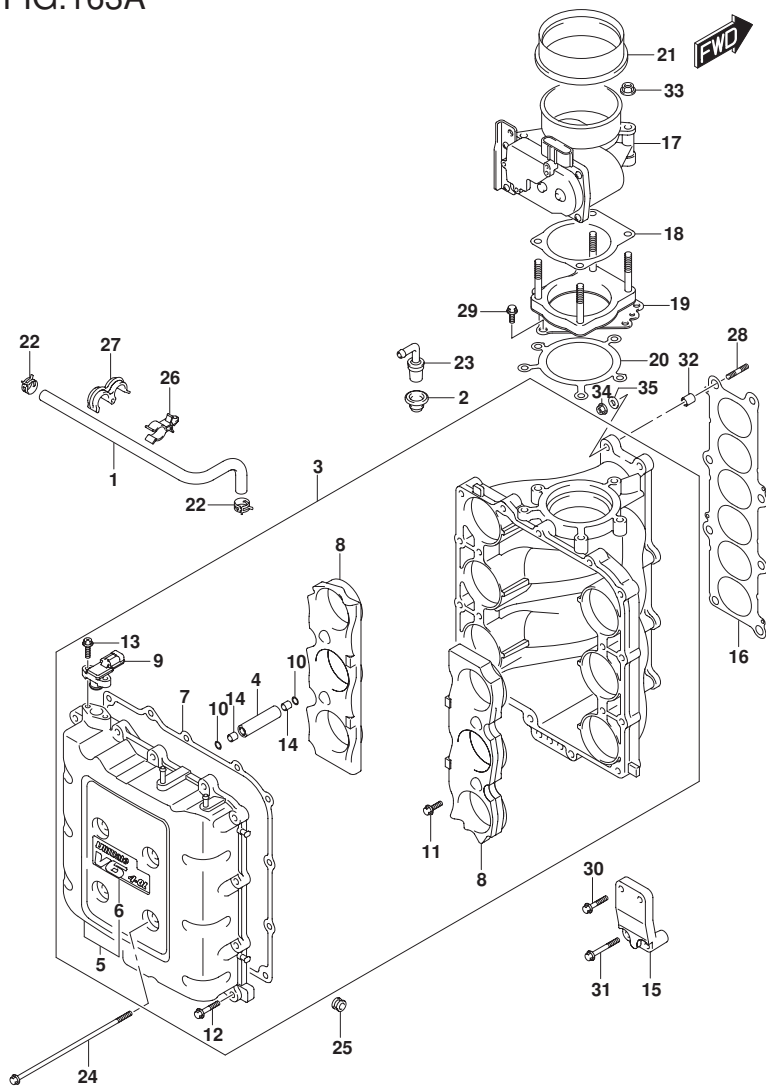


FIG.163A (1-D-7) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11193-98J00	HOSE, PCV	1	
2	11198-58B00	SEAL, PCV VALVE	1	
3	13100-98J01	COLLECTOR ASSY	1	
4	13137-98J00	.SPACER, COLLECTOR	4	
5	13140-98J01	.COVER, COLLECTOR	1	
6	61436-98J00	..MARK, EMBLEM V6 (4.0L)	1	
7	13147-98J00	.GASKET, COLLECTOR COVER	1	
8	13180-98J00	.FUNNEL, COLLECTOR	2	
9	18590-68H00	.SENSOR, MAP	1	
10	09280-10009	.O RING (D:1.3,ID:9.8)	8	
11	01550-08167	.BOLT	4	
12	01550-08357	.BOLT	11	
13	02162-05207	.SCREW	2	
14	04211-11129	.PIN	8	
15	13134-98J00	BRACKET, COLLECTOR	1	
16	13139-98J01	GASKET, COLLECTOR	1	
17	13310-98J00	BODY ASSY, THROTTLE	1	
18	13343-98J10	GASKET, THROTTLE BODY	1	
19	13315-98J00	DAMPER, THROTTLE BODY	1	
20	13421-98J00	GASKET, THROTTLE BODY	1	
21	13813-98J00	GROMMET, THROTTLE BODY	1	
22	09401-13423	CLIP	2	
23	18118-93J00	VALVE, PCV	1	
24	09103-08370	BOLT (8X250)	6	
25	09320-08076	GROMMET	4	
26	09403-13310	CLAMP	1	
27	09408-00155	CLAMP	1	

FIG.163A

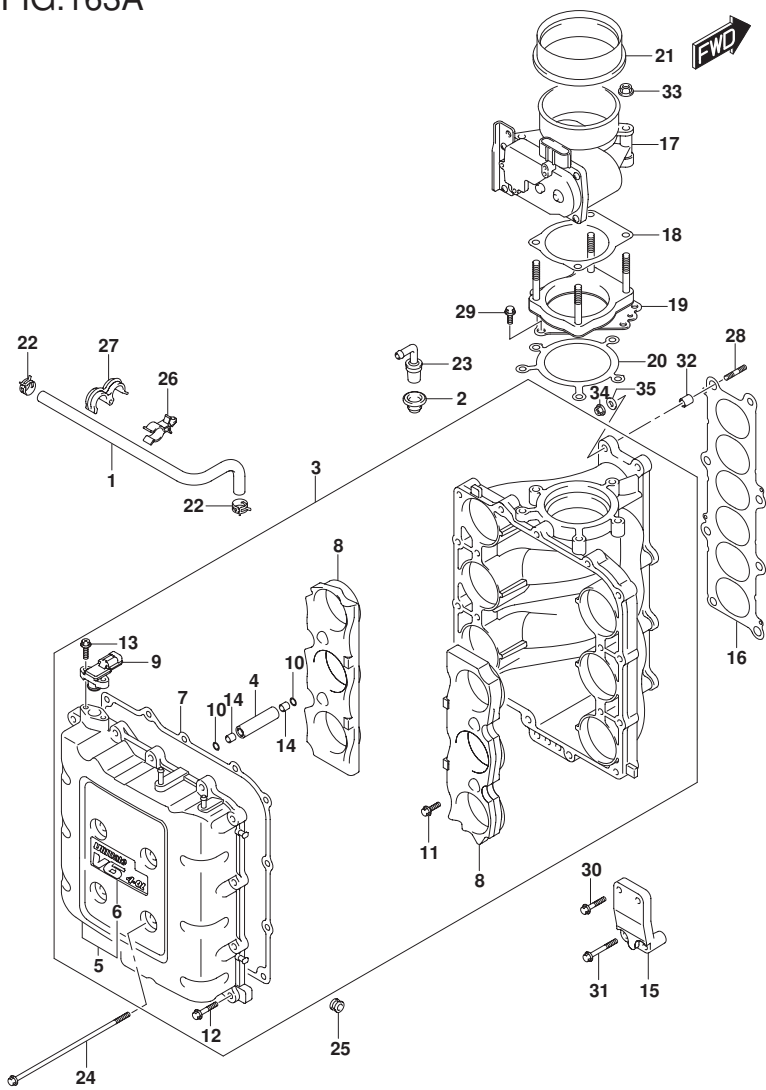


FIG.163A (1-D-8) THROTTLE BODY

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28	01421-08357	BOLT	2	
29	01550-08167	BOLT	5	
30	01550-08357	BOLT	2	
31	01550-08607	BOLT	2	
32	04211-11129	PIN	2	
33	09159-08136	NUT	4	
34	08316-10087	NUT	2	
35	09160-08161	WASHER (8.2X23X3.2)	2	

FIG.175A


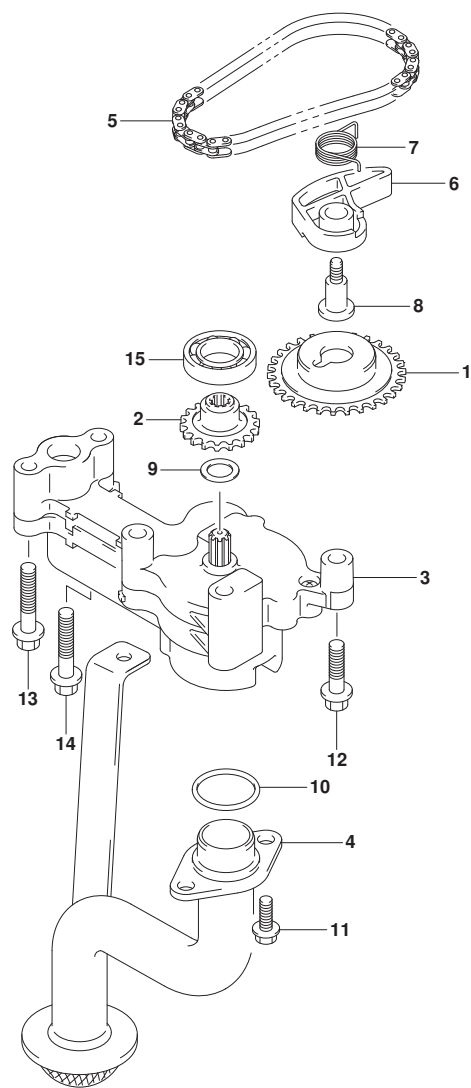


FIG.175A (1-D-9) OIL PUMP

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12632-93J11	SPROCKET, OIL PUMP DRIVE (NT:32)	1	
2	16113-93J10	SPROCKET, OIL PUMP DRIVEN (NT:18)	1	
3	16400-93J02	PUMP ASSY, OIL	1	
4	16520-93J00	STRAINER, OIL PUMP	1	
5	16760-93J00	CHAIN, OIL PUMP DRIVE	1	
6	16781-93J00	TENSIONER, OIL PUMP CHAIN	1	
7	16782-93J00	SPRING, OIL PUMP TENSIONER	1	
8	16783-93J01	BOLT, OIL PUMP TENSIONER	1	
9	09181-12158	SHIM (12X20X0.5)	1	
10	09280-22020	O RING (D:2.4,ID:21.8)	2	
11	01550-0616A	BOLT	3	
12	01550-0845A	BOLT	1	
13	01550-0865A	BOLT	3	
14	01550-0885A	BOLT	1	
15	08110-60020	BEARING	1	

FIG.180A

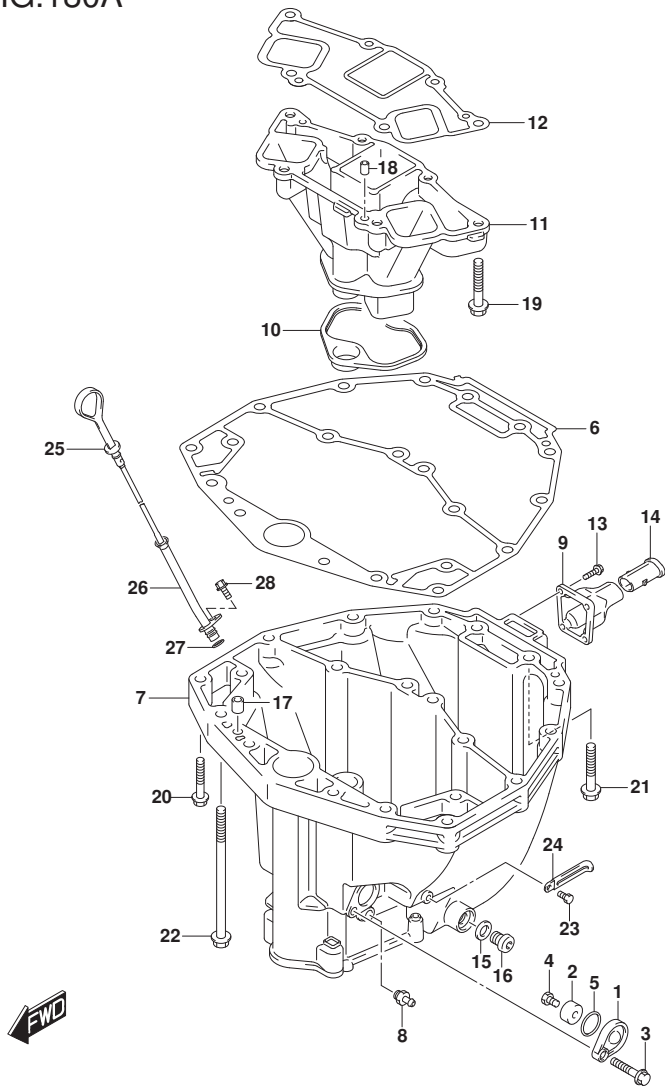

DF300A_E01_016_180A
OIL PAN

FIG.180A (1-D-10) OIL PAN

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	11261-93J10-0EP	COVER, PROTECTION ANODE (BLACK)	1	
1-2	11261-93J10-Y5S	COVER, PROTECTION ANODE (WHITE)	1	
2-1	55321-87J01	ANODE, PROTECTION	1	OPT
2-2	55321-87J11	ANODE (MAGNESIUM)	1	
3	29103-93J30	BOLT, ANODE COVER	1	
4	09103-06281	BOLT (6X14)	1	
5	09280-22019	O RING (D:1.9,ID:21.8)	1	
6	11489-93J00	GASKET, OIL PAN	1	
7-1	11501-93J02-0EP	PAN, OIL (BLACK)	1	
7-2	11501-93J02-Y5S	PAN, OIL (WHITE)	1	
8	11591-93J10	UNION, OIL PAN	1	
9-1	11541-93J00-0EP	PIPE, EXHAUST (BLACK)	1	
9-2	11541-93J00-Y5S	PIPE, EXHAUST (WHITE)	1	
10	14154-93J01	SEAL, EXHAUST TUBE	1	
11	14211-98J00	TUBE, EXHAUST	1	
12	14212-93J00	GASKET, EXHAUST TUBE	1	
13	29116-93J00	BOLT, EXHAUST PIPE	4	
14	11435-93J00	PIPE, EXHAUST RELEASE	1	
15	09168-12012	GASKET (12.5X20X2.5)	1	
16	09248-12009	PLUG (12X18.65)	1	
17	09202-08006	PIN (8X12)	2	
18	09202-08006	PIN (8X12)	2	
19	01550-1050A	BOLT	4	
20	09116-08128	BOLT (8X40)	10	
21	09116-10175	BOLT (10X50)	2	
22	09116-10146	BOLT (10X195)	4	
23	29103-93J00	BOLT, SPEEDOMETER HOSE CLAMP	1	
24	29404-93J10	CLAMP, SPEEDOMETER HOSE	1	
25	16910-93J00	GAUGE, OIL LEVEL	1	
26	16930-93J00	GUIDE, OIL LEVEL GAUGE	1	
27	09280-09008	O RING (D:2.1,ID:8.8)	1	
28	01550-06127	BOLT	1	

DF300A_E01_016

FIG.204A


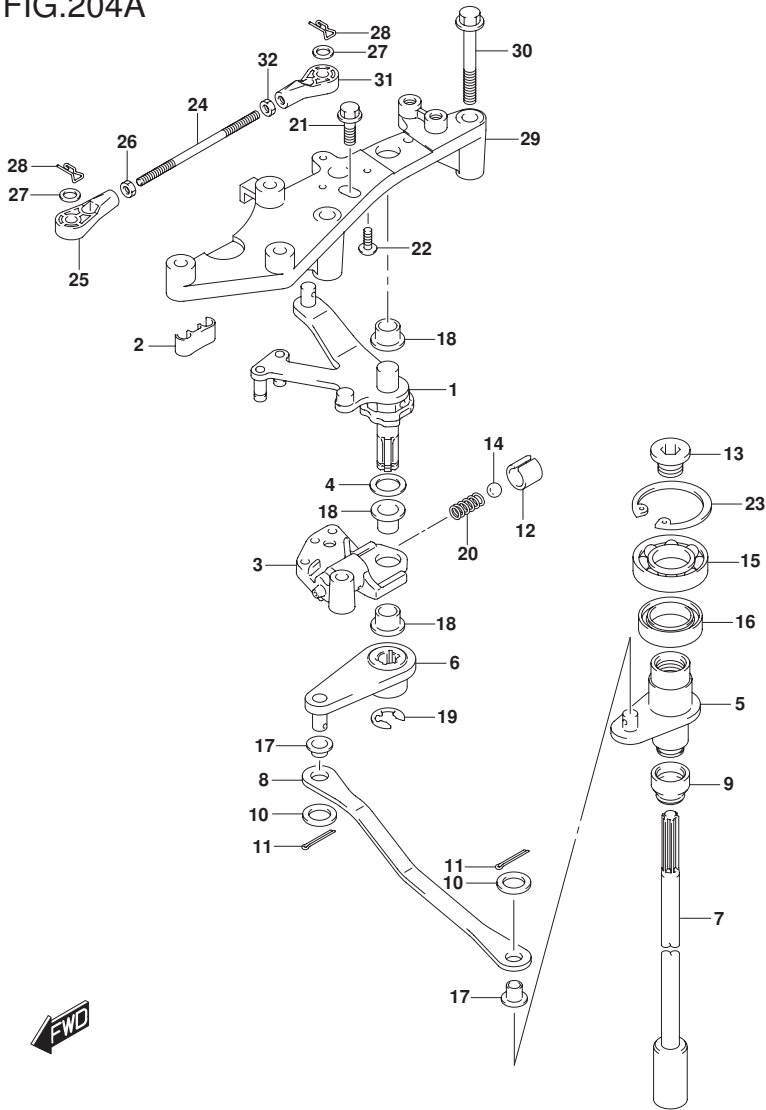


FIG.204A (1-D-11) CLUTCH SHAFT

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21110-98J00	LEVER, CLUTCH	1	
2	21131-93J00	BUSH, CLUTCH LEVER	1	
3	21151-93J00	HOLDER, CLUTCH LEVER	1	
4	09160-10148	WASHER (10X20X3)	1	
5	21210-98J01	SHAFT, CLUTCH	1	
6	21230-98J01	ARM, CLUTCH SHAFT	1	
7	23111-93J00	ROD, CLUTCH (UL)	1	
8	23115-98J00	LINK, CLUTCH LEVER	1	
9	25223-94400	COVER, CLUTCH ROD	1	
10	09160-06094	WASHER (6.5X15X1.5)	2	
11	09204-01006	PIN	2	
12	09205-10006	SPRING PIN (10.2X10)	1	
13	09248-12011	PLUG (12X9)	1	
14	09260-10005	BALL	1	
15	09262-17019	BEARING (17X35X8)	1	
16	09289-18001	OIL SEAL (18X30X8)	1	
17	09306-06005	BUSH	2	
18	09306-10001	BUSH	3	
19	09383-08004	E RING	1	
20	09440-07051	SPRING	1	
21	01550-06207	BOLT	1	
22	02142-05107	SCREW	2	
23	08331-41359	CIRCLIP	1	
24	21241-98J10	LINK, CLUTCH LEVER NO.2	1	
25	67467-89J01	CONNECTOR, REMOCON CABLE	1	
26	67471-99E00	NUT, REMOCON CABLE	1	
27	09160-06055	WASHER (7X12X1)	2	
28	09385-06012	CLIP	2	
29	19115-98J10	HOLDER, CLUTCH LEVER	1	
30	01550-08557	BOLT	2	
31	67467-89J10	CONNECTOR, REMOCON CABLE NO.2	1	
32	67471-99E10	NUT, REMOCON CABLE NO.2	1	

FIG.206A

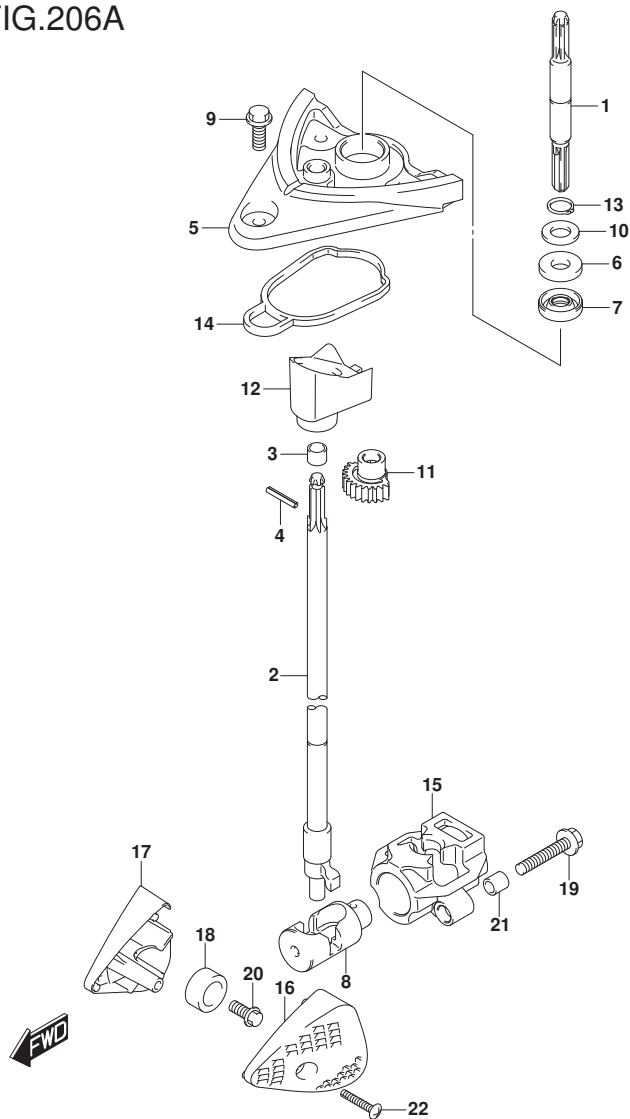


DF300A_E01_016_206A
CLUTCH ROD

FIG.206A (1-D-12) CLUTCH ROD (DF300A UP TO VIN.612132, DF250A UP TO VIN.610591)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	25112-93L00	ROD, SHIFT DRIVE (X)	1	W/TRANSOM(X)
1-2	25112-93L10	ROD, SHIFT DRIVE (XX)	1	W/TRANSOM(XX)
2	25130-93L00	YOKE, SHIFTER	1	
3	25232-90J00	MAGNET, GEAR CASE	2	
4	09205-03004	SPRING PIN (3X20)	1	
5-1	25141-93L00-0EP	HOUSING, SHIFT ROD GUIDE (BLACK)	1	
5-2	25141-93L00-Y5S	HOUSING, SHIFT ROD GUIDE (WHITE)	1	
6	25222-90J00	COVER, SFT GUIDE HSG OIL SEAL	1	
7	09283-10011	OIL SEAL (10X22X8)	1	
8	25321-93L00	SLIDER, SHIFT HORIZONTAL	1	
9	29116-93J00	BOLT, SHIFT ROD HOUSING	3	
10	09160-10082	WASHER (10.5X19X2)	1	
11	25113-93L00	GEAR, SHIFT ROD (NT:13)	2	
12	25215-93L00	HOUSING, MAGNET	1	
13	09383-07003	E RING	3	
14	55122-93L00	SEALING, SHIFT ROD GUIDE HSG	1	
15	56141-93L00	HOUSING, SHIFT SLIDER	1	
16	17637-93L00	FILTER, WATER PORT FRONT SIDE	1	
17	17638-93L00	FILTER, WATER STBD FRONT SIDE	1	
18	55321-87J01	ANODE, PROTECTION	1	
19	01550-06357	BOLT	2	
20	09103-06281	BOLT (6X14)	1	
21	09206-09012	PIN (7.4X9X10)	2	
22	09132-04034	SCREW (4X18)	1	

DF300A_E01_016

FIG.206B

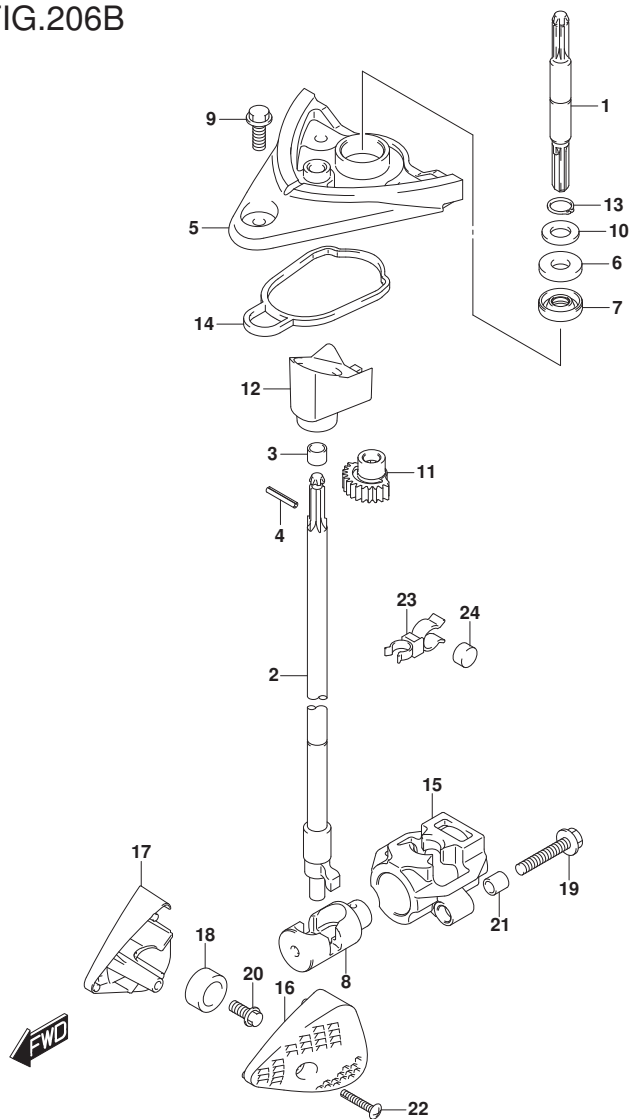

DF300A_E01_016_206B
CLUTCH ROD

FIG.206B (1-D-13) CLUTCH ROD (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	25112-93L00	ROD, SHIFT DRIVE (X)	1	W/TRANSOM(X)
1-2	25112-93L10	ROD, SHIFT DRIVE (XX)	1	W/TRANSOM(XX)
2	25130-93L00	YOKE, SHIFTER	1	
3	25232-90J00	MAGNET, GEAR CASE	1	
4	09205-03004	SPRING PIN (3X20)	1	
5-1	25141-93L00-0EP	HOUSING, SHIFT ROD GUIDE (BLACK)	1	
5-2	25141-93L00-Y5S	HOUSING, SHIFT ROD GUIDE (WHITE)	1	
6	25222-90J00	COVER, SFT GUIDE HSG OIL SEAL	1	
7	09283-10011	OIL SEAL (10X22X8)	1	
8	25321-93L00	SLIDER, SHIFT HORIZONTAL	1	
9	29116-93J00	BOLT, SHIFT ROD HOUSING	3	
10	09160-10082	WASHER (10.5X19X2)	1	
11	25113-93L00	GEAR, SHIFT ROD (NT:13)	2	
12	25215-93L00	HOUSING, MAGNET	1	
13	09383-07003	E RING	3	
14	55122-93L00	SEALING, SHIFT ROD GUIDE HSG	1	
15	56141-93L00	HOUSING, SHIFT SLIDER	1	
16	17637-93L00	FILTER, WATER PORT FRONT SIDE	1	
17	17638-93L00	FILTER, WATER STBD FRONT SIDE	1	
18	55321-87J01	ANODE, PROTECTION	1	
19	01550-06357	BOLT	2	
20	09103-06281	BOLT (6X14)	1	
21	09206-09012	PIN (7.4X9X10)	2	
22	09132-04034	SCREW (4X18)	1	
23	25231-93L00	HOLDER, MAGNET	2	
24	25232-94300	MAGNET, GEAR CASE	2	

DF300A_E01_016

FIG.220A

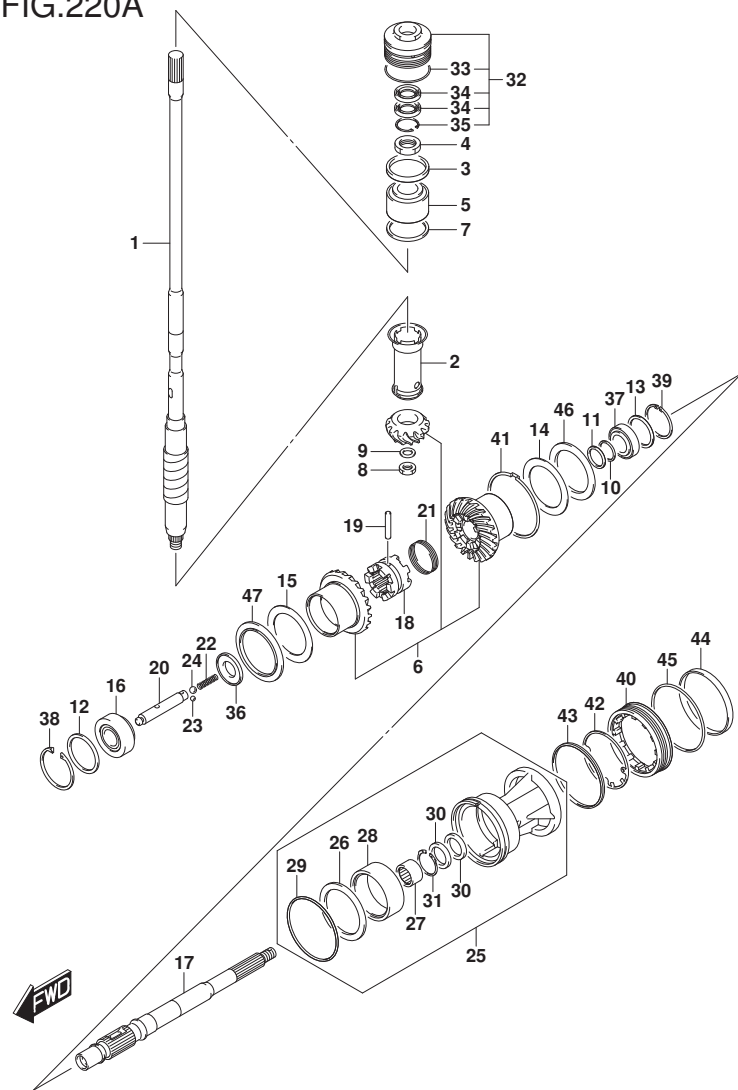


FIG.220A (1-D-14) TRANSMISSION (DF300A UP TO VIN.612132, DF250A UP TO VIN.6105)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-93L12	SHAFT, DRIVE (X)	1	W/TRANSOM(X)
1-2	57110-93L22	SHAFT, DRIVE (XX)	1	W/TRANSOM(XX)
2	57133-93L00	COLLAR, DRIVE SHAFT	1	
3	57134-93J00	SPACER, DRIVE SHAFT BEARING	1	
4	09159-28003	NUT	1	
5	09269-32002	BEARING (32X66X49)	1	
6	57300-93L03	SET GEAR	1	
7-1	09181-60004	SHIM (T:0.45)	1	
7-2	09181-60005	SHIM (T:0.50)	1	
7-3	09181-60006	SHIM (T:0.55)	1	
7-4	09181-60007	SHIM (T:0.60)	1	
7-5	09181-60008	SHIM (T:0.65)	1	
7-6	09181-60009	SHIM (T:0.70)	1	
7-7	09181-60010	SHIM (T:0.75)	1	
7-8	09181-60011	SHIM (T:0.80)	1	
7-9	09181-60012	SHIM (T:0.85)	1	
7-10	09181-60013	SHIM (T:0.90)	1	
8	09140-16026	NUT	1	
9	08221-16256	WASHER	1	
10	09180-32006	SPACER (32.4X40X3)	1	REAR GEAR
11-1	09181-32035	SHIM (T:0.50)	1	REAR GEAR
11-2	09181-32036	SHIM (T:0.55)	1	REAR GEAR
11-3	09181-32037	SHIM (T:0.60)	1	REAR GEAR
11-4	09181-32038	SHIM (T:0.65)	1	REAR GEAR
11-5	09181-32039	SHIM (T:0.70)	1	REAR GEAR
11-6	09181-32040	SHIM (T:0.75)	1	REAR GEAR
11-7	09181-32041	SHIM (T:0.80)	1	REAR GEAR
11-8	09181-32042	SHIM (T:0.85)	1	REAR GEAR
11-9	09181-32043	SHIM (T:0.90)	1	REAR GEAR
11-10	09181-32044	SHIM (T:0.95)	1	REAR GEAR
12	09160-60012	WASHER (60X72X3)	1	FRONT GEAR
13	09160-50006	WASHER (50X58X3)	1	REAR GEAR

FIG.220A

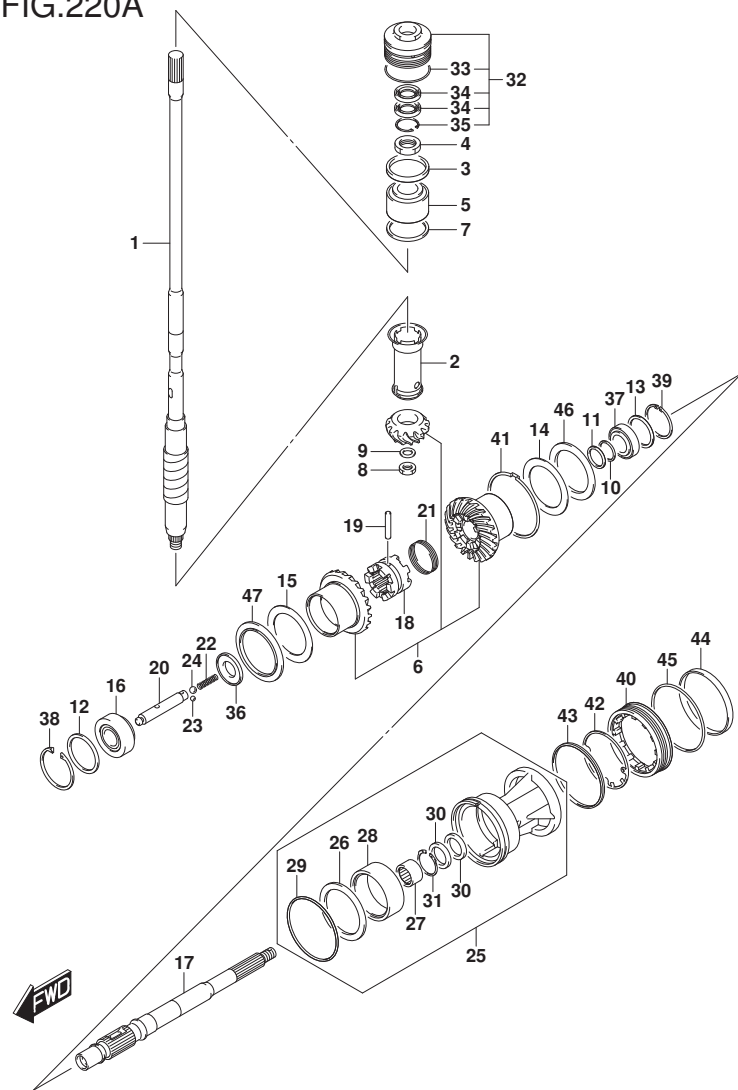


FIG.220A (1-D-15) TRANSMISSION (DF300A UP TO VIN.612132, DF250A UP TO VIN.6105

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
14-1	09181-78001	SHIM (T:0.50)	1	REAR GEAR
14-2	09181-78002	SHIM (T:0.55)	1	REAR GEAR
14-3	09181-78003	SHIM (T:0.60)	1	REAR GEAR
14-4	09181-78004	SHIM (T:0.65)	1	REAR GEAR
14-5	09181-78005	SHIM (T:0.70)	1	REAR GEAR
14-6	09181-78006	SHIM (T:0.75)	1	REAR GEAR
14-7	09181-78007	SHIM (T:0.80)	1	REAR GEAR
14-8	09181-78008	SHIM (T:0.85)	1	REAR GEAR
14-9	09181-78009	SHIM (T:0.90)	1	REAR GEAR
14-10	09181-78010	SHIM (T:0.95)	1	REAR GEAR
15-1	09181-84001	SHIM (T:0.50)	1	FRONT GEAR
15-2	09181-84002	SHIM (T:0.55)	1	FRONT GEAR
15-3	09181-84003	SHIM (T:0.60)	1	FRONT GEAR
15-4	09181-84004	SHIM (T:0.65)	1	FRONT GEAR
15-5	09181-84005	SHIM (T:0.70)	1	FRONT GEAR
15-6	09181-84006	SHIM (T:0.75)	1	FRONT GEAR
15-7	09181-84007	SHIM (T:0.80)	1	FRONT GEAR
15-8	09181-84008	SHIM (T:0.85)	1	FRONT GEAR
15-9	09181-84009	SHIM (T:0.90)	1	FRONT GEAR
15-10	09181-84010	SHIM (T:0.95)	1	FRONT GEAR
16	09265-30033	BEARING (30X72X28.75)	1	
17	57610-93L00	SHAFT, PROPELLER	1	
18	57621-93L00	SHIFTER, CLUTCH DOG	1	
19	09202-08013	PIN (8X55)	1	
20	57631-93L01	PIN, CONNECTOR	1	
21	09440-58001	SPRING	1	
22	57617-93L00	SPRING, DETENT	1	
23	06111-07004	BALL	2	DETENT NO.1
24	06111-11004	BALL	2	DETENT NO.2
25	56120-93L11	HOUSING, PROP SFT BRG	1	
26	56124-93L00	.WASHER, REVERSE GEAR THRUST	1	
27	09263-30063	.BEARING (30X40X25)	1	
28	09263-72001	.BEARING (72X90X34)	1	

FIG.220A

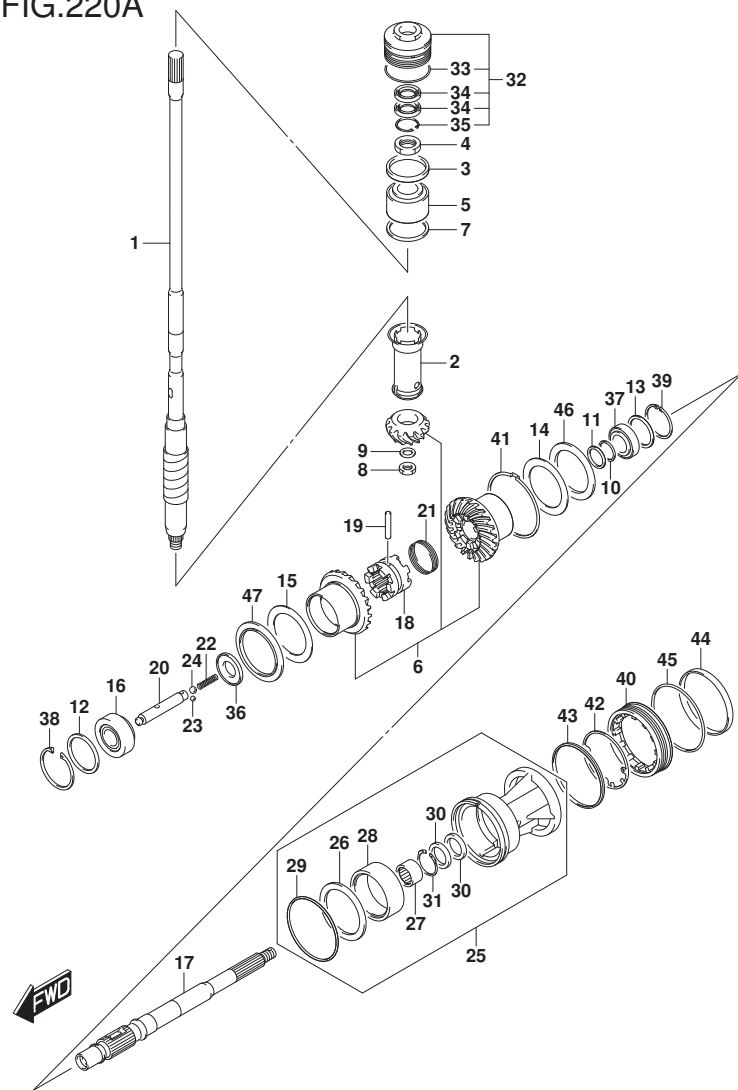


FIG.220A (1-E-2) TRANSMISSION (DF300A UP TO VIN.612132, DF250A UP TO VIN.61059)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	09280-00047	.O RING (D:3,ID:109)	1	
30	09282-30006	.OIL SEAL (30X45X6)	2	
31	09381-40003	.CIRCLIP	1	
32	56130-93J02	HOUSING, DRIVE SHAFT BRG	1	
33	09280-66004	.O RING (D:3.1,ID:65.4)	1	
34	09282-24004	.OIL SEAL (24X40X7)	2	
35	09381-40003	.CIRCLIP	1	
36	57622-93L00	SPACER, FORWARD THRUST	1	
37	09265-32003	BEARING (32X58X17)	1	
38	09381-72001	SNAP RING	1	FRONT
39	08331-4158A	CIRCLIP	1	REAR
40	56122-93L00	STOPPER, PROP SFT BRG HSG	1	
41	56126-93L00	WASHER, PROP SFT BRG HSG NO.1	1	
42	56127-93L00	WASHER, PROP SFT BRG HSG NO.2	1	
43	56128-93L00	SEAL, PROP SFT BRG HSG	1	
44	56129-93L00	BUSH, STOPPER	1	
45	09280-00030	O RING (D:1.8,ID:117.6)	1	
46	09263-78001	BEARING (78.26X105X5.45)	1	REAR
47	09263-83001	BEARING (83.26X110X5.45)	1	FRONT

FIG.220B

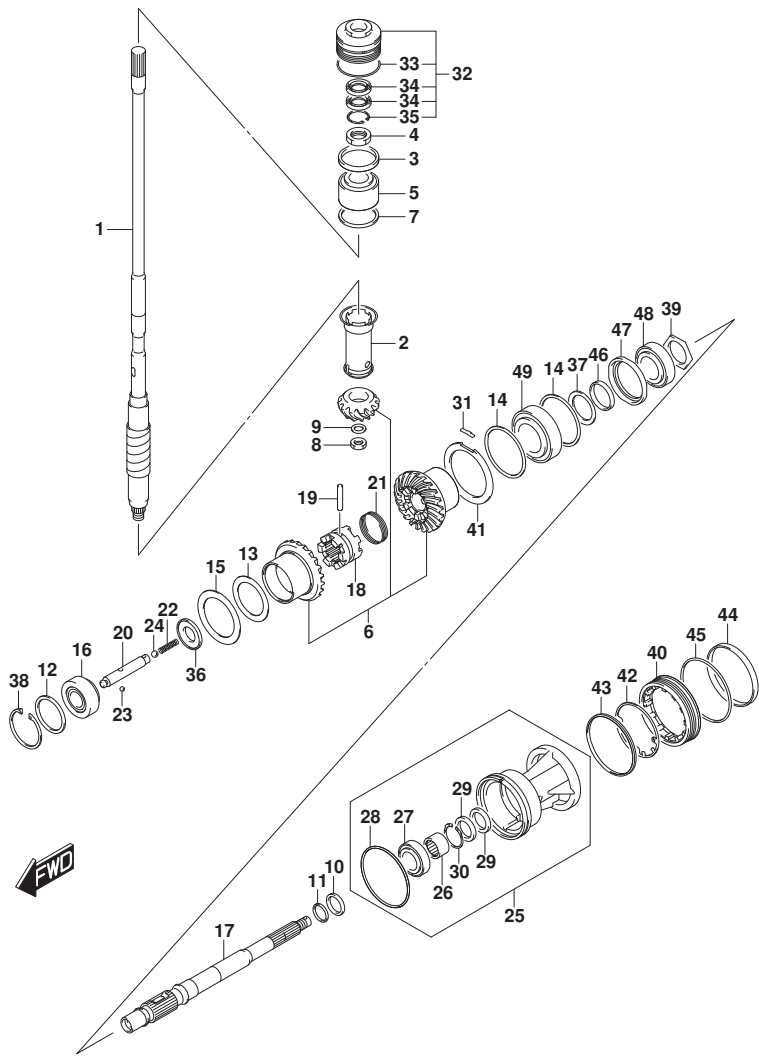


FIG.220B (1-E-3) TRANSMISSION (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-93L12	SHAFT, DRIVE (X)	1	W/TRANSOM(X)
1-2	57110-93L22	SHAFT, DRIVE (XX)	1	W/TRANSOM(XX)
2	57133-93L00	COLLAR, DRIVE SHAFT	1	
3	57134-93J00	SPACER, DRIVE SHAFT BEARING	1	
4	09159-28003	NUT	1	
5	09269-32002	BEARING (32X66X49)	1	
6	57300-93L20	SET, GEAR	1	
7-1	09181-60004	SHIM (T:0.45)	1	
7-2	09181-60005	SHIM (T:0.50)	1	
7-3	09181-60006	SHIM (T:0.55)	1	
7-4	09181-60007	SHIM (T:0.60)	1	
7-5	09181-60008	SHIM (T:0.65)	1	
7-6	09181-60009	SHIM (T:0.70)	1	
7-7	09181-60010	SHIM (T:0.75)	1	
7-8	09181-60011	SHIM (T:0.80)	1	
7-9	09181-60012	SHIM (T:0.85)	1	
7-10	09181-60013	SHIM (T:0.90)	1	
8	09140-16026	NUT	1	
9	08221-16256	WASHER	1	
10	09180-32006	SPACER (32.4X40X3)	1	REAR GEAR
11-1	09181-32035	SHIM (T:0.50)	1	REAR GEAR
11-2	09181-32036	SHIM (T:0.55)	1	REAR GEAR
11-3	09181-32037	SHIM (T:0.60)	1	REAR GEAR
11-4	09181-32038	SHIM (T:0.65)	1	REAR GEAR
11-5	09181-32039	SHIM (T:0.70)	1	REAR GEAR
11-6	09181-32040	SHIM (T:0.75)	1	REAR GEAR
11-7	09181-32041	SHIM (T:0.80)	1	REAR GEAR
11-8	09181-32042	SHIM (T:0.85)	1	REAR GEAR
11-9	09181-32043	SHIM (T:0.90)	1	REAR GEAR
11-10	09181-32044	SHIM (T:0.95)	1	REAR GEAR
12	09160-60012	WASHER (60X72X3)	1	FRONT GEAR
13	09263-80002	BEARING (80X105X4)	1	FRONT GEAR

Exploded view diagram of a mechanical assembly, showing various components numbered 1 through 50. The diagram illustrates the assembly structure, including a central shaft assembly, gears, bearings, and seals. A 'FWD' arrow indicates the forward direction.

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
14-1	09181-93101	SHIM (T:0.50)	2	REAR GEAR
14-2	09181-93102	SHIM (T:0.55)	2	REAR GEAR
14-3	09181-93103	SHIM (T:0.60)	2	REAR GEAR
14-4	09181-93104	SHIM (T:0.65)	2	REAR GEAR
14-5	09181-93105	SHIM (T:0.70)	2	REAR GEAR
14-6	09181-93106	SHIM (T:0.75)	2	REAR GEAR
14-7	09181-93107	SHIM (T:0.80)	2	REAR GEAR
14-8	09181-93108	SHIM (T:0.85)	2	REAR GEAR
14-9	09181-93109	SHIM (T:0.90)	2	REAR GEAR
14-10	09181-93110	SHIM (T:0.95)	2	REAR GEAR
14-11	09181-93111	SHIM (T:1.00)	2	REAR GEAR
14-12	09181-93112	SHIM (T:1.05)	2	REAR GEAR
14-13	09181-93113	SHIM (T:1.10)	2	REAR GEAR
15-1	59171-93L00	SHIM (T:3.50)	1	FRONT GEAR
15-2	59171-93L10	SHIM (T:3.55)	1	FRONT GEAR
15-3	59171-93L20	SHIM (T:3.60)	1	FRONT GEAR
15-4	59171-93L30	SHIM (T:3.65)	1	FRONT GEAR
15-5	59171-93L40	SHIM (T:3.70)	1	FRONT GEAR
15-6	59171-93L50	SHIM (T:3.75)	1	FRONT GEAR
15-7	59171-93L60	SHIM (T:3.80)	1	FRONT GEAR
15-8	59171-93L70	SHIM (T:3.85)	1	FRONT GEAR
15-9	59171-93L80	SHIM (T:3.90)	1	FRONT GEAR
15-10	59171-93L90	SHIM (T:3.95)	1	FRONT GEAR
15-11	59171-93LA0	SHIM (T:4.00)	1	FRONT GEAR
15-12	59171-93LB0	SHIM (T:4.05)	1	FRONT GEAR
15-13	59171-93LC0	SHIM (T:4.10)	1	FRONT GEAR
16	09265-30033	BEARING (30X72X28.75)	1	
17	57610-93L10	SHAFT, PROPELLER	1	
18	57621-93L00	SHIFTER, CLUTCH DOG	1	
19	09202-08013	PIN (8X55)	1	
20	57631-93L01	PIN, CONNECTOR	1	
21	09440-58001	SPRING	1	
22	57617-93L00	SPRING, DETENT	1	

FIG.220B

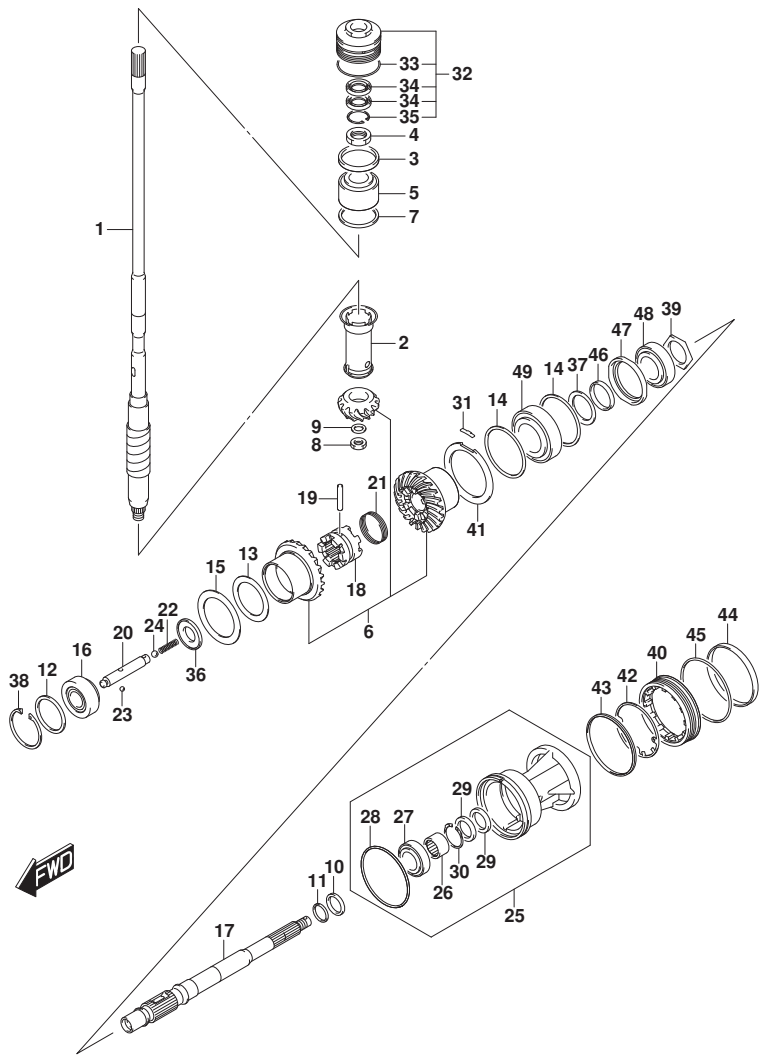


FIG.220B (1-E-5) TRANSMISSION (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
23	06111-07004	BALL	2	DETENT NO.1
24	06111-11004	BALL	2	DETENT NO.2
25	56120-93L20	HOUSING, PROP SFT BRG	1	
26	09263-30063	.BEARING (30X40X25)	1	
27	09265-32003	.BEARING (32X58X17)	1	
28	09280-00047	.O RING (D:3,ID:109)	1	
29	09282-30006	.OIL SEAL (30X45X6)	2	
30	09381-40003	.CIRCLIP	1	
31	56147-93L00	SPACER, PROP SFT BRG HSG	1	
32	56130-93J02	HOUSING, DRIVE SHAFT BRG	1	
33	09280-66004	.O RING (D:3.1,ID:65.4)	1	
34	09282-24004	.OIL SEAL (24X40X7)	2	
35	09381-40003	.CIRCLIP	1	
36	57622-93L00	SPACER, THRUST	1	FRONT
37	09164-50002	WASHER, WAVE	1	
38	09381-72003	SNAP RING	1	FRONT
39	09140-48001	NUT (M48,T:6.0)	1	REAR GEAR
40	56122-93L00	STOPPER, PROP SFT BRG HSG	1	
41	56126-93L10	WASHER, PROP SFT BRG HSG NO.1	1	
42	56127-93L00	WASHER, PROP SFT BRG HSG NO.2	1	
43	56128-93L00	SEAL, PROP SFT BRG HSG	1	
44	56129-93L00	BUSH, STOPPER	1	
45	09280-00030	O RING (D:1.8,ID:117.6)	1	
46	57527-93L00	SPACER, BEARING INNER	1	
47	57541-93L00	SPACER, BEARING OUTER	1	
48	09265-50004	BEARING (50X80X20)	1	REAR GEAR R
49	09265-55001	BEARING (55X100X22.75)	1	REAR GEAR F

FIG.301A

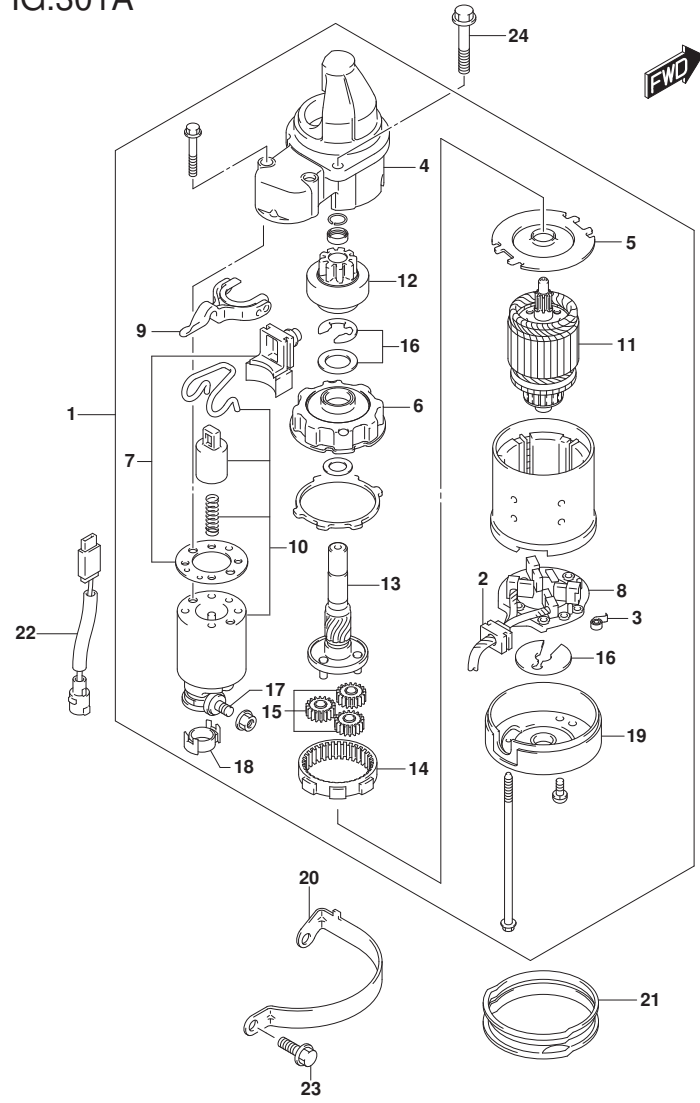


FIG.301A (1-E-6) STARTING MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-96J02	STARTING MOTOR	1	
2	31131-90J01	.BRUSH SET, PLUS	1	
3	31135-90J00	.SPRING	4	
4	31151-94J01	.CASE, GEAR	1	
5	31152-90J00	.PLATE, CENTER	1	
6	31153-90J00	.BRACKET, PLANET GEAR	1	
7	31171-96J00	.COVER KIT, DUST	1	
8	31173-90J02	.HOLDER, BRUSH	1	
9	31191-96J00	.LEVER, SHIFT	1	
10	31220-94J00	.SWITCH, MAGNET	1	
11	31310-90J00	.ARMATURE	1	
12	31320-93J00	.PINION	1	
13	31341-93J00	.SHAFT, PINION	1	
14	31343-90J00	.INTERNAL GEAR	1	
15	31344-90J00	.GEAR, PLANETARY	3	
16	31360-93J01	.WASHER SET	1	
17	31913-93J00	.TERMINAL	1	
18	31914-93J00	.CAP, TERMINAL	1	
19	31170-90J00	.COVER ASSY, REAR	1	
20	31912-98J00	BAND, STARTING MOTOR	1	
21	31918-90J10	DAMPER, LOWER	1	
22	36645-93J00	LEAD WIRE	1	
23	01550-08207	BOLT	2	LOWER
24	01550-08307	BOLT	2	UPPER

FIG.303A

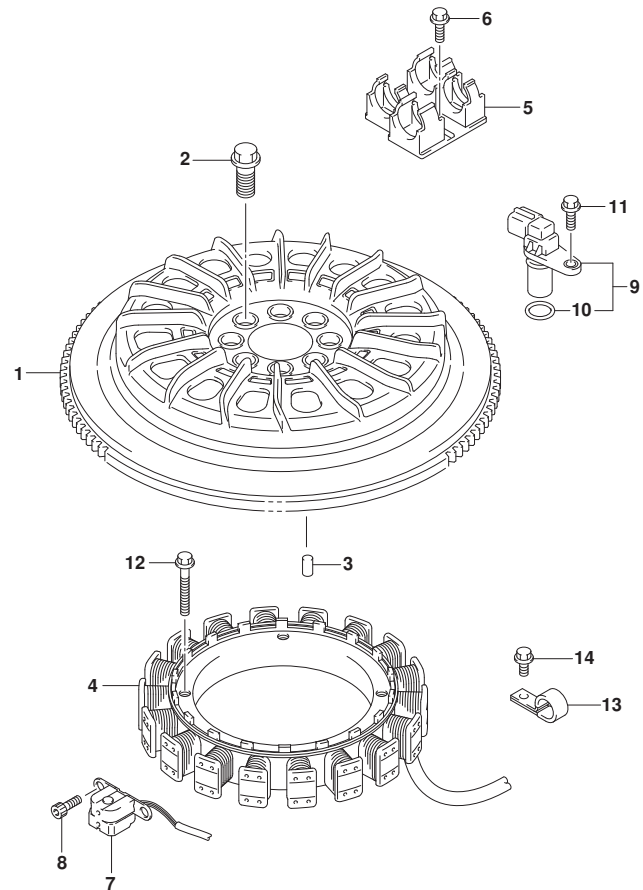


FIG.303A (1-E-7) MAGNETO

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32102-98J01	FLYWHEEL	1	
2	09103-12125	BOLT (12X26)	8	
3	09202-06031	PIN (6X12)	1	
4	32120-93J00	COIL, BATTERY CHARGING	1	
5	32131-93J00	HOLDER, STATOR CONNECTING	1	
6	01550-06167	BOLT	2	
7	32160-88L00	COIL, IGNITION TIMING	1	
8	09106-05030	BOLT (5X10)	2	
9	33220-69J00	SENSOR, CAM POSITION	3	
10	33221-42F00	.O RING	3	
11	01550-06167	BOLT	3	
12	09103-06231	BOLT (6X35)	4	
13	09403-13408	CLAMP	2	
14	01550-06127	BOLT	2	

FIG.310A

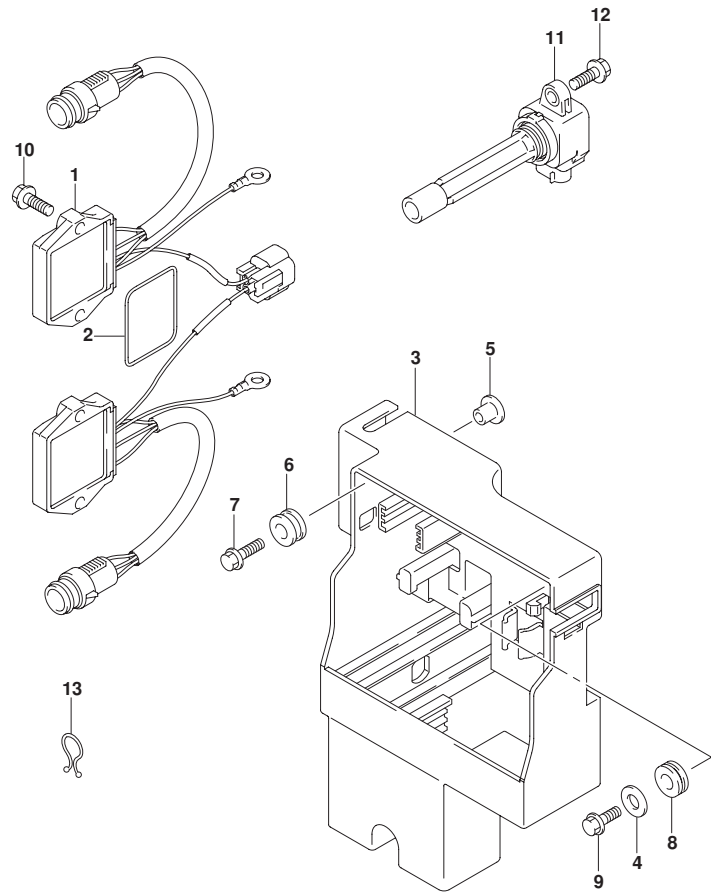


FIG.310A (1-E-8) RECTIFIER/IGNITION COIL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-98J01	RECTIFIER & REGULATOR	1	
2	32805-93J00	O RING, RECTIFIER & REGULATOR	2	
3	32890-98J01	HOLDER, ELECTRIC PARTS	1	
4	09160-06134	WASHER (6.5X24X1.6)	1	
5	09169-06062	WASHER	3	
6	09320-09016	CUSHION	3	
7	09116-06202	BOLT (6X25)	3	
8	09320-12076	CUSHION	1	
9	01550-06127	BOLT	1	
10	01550-06257	BOLT	4	
11	33410-93J00	COIL ASSY, IGNITION	6	
12	01547-06207	BOLT	6	
13	09408-00021	CLIP (ID:16)	1	

FIG.315A


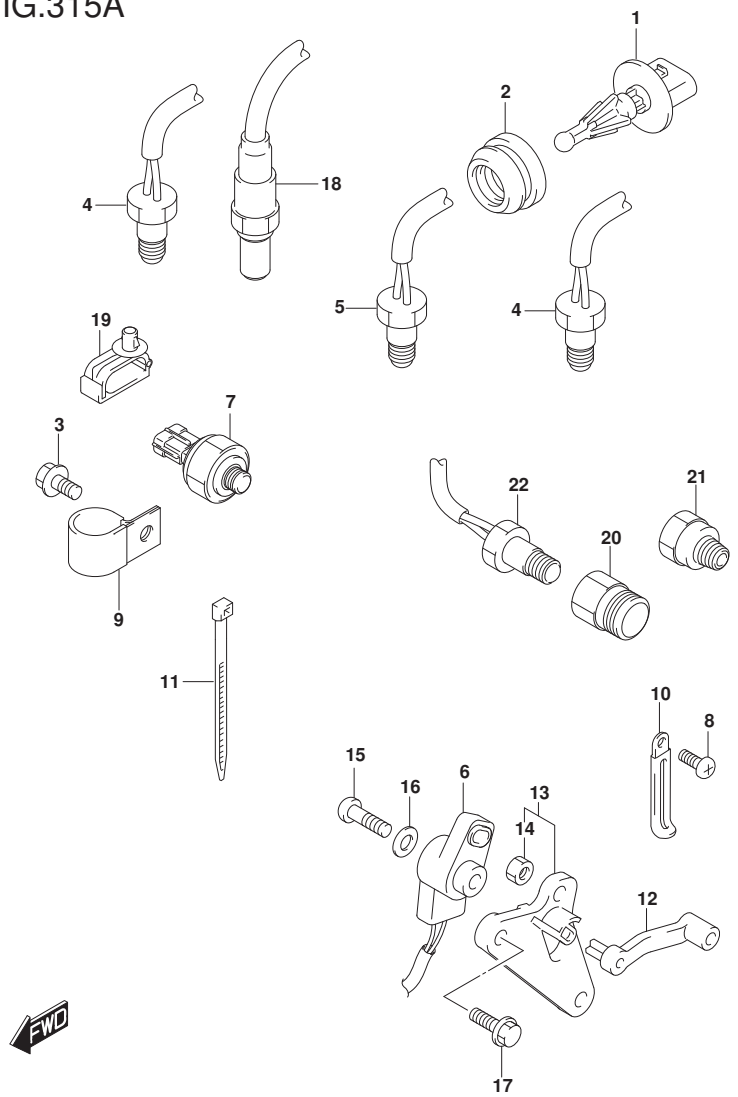


FIG.315A (1-E-9) SENSOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13650-52G00	SENSOR, INLET AIR TEMP	1	
2	13655-87J00	GROMMET, AIR TEMP SENSOR	1	
3	29103-93J00	BOLT, PTT MOTOR LEAD CLAMP	1	
4	34830-87J20	SENSOR ASSY, EXHAUST TEMP	2	
5	34830-87J20	SENSOR ASSY, CYLINDER TEMP	1	
6	34840-98J03	SENSOR ASSY, TRIM	1	
7	37820-98J00	SWITCH ASSY, OIL PRESSURE	1	
8	09125-06063	SCREW (6X10)	1	
9	09403-19409	CLAMP	1	
10	29404-93J10	CLAMP, PTT MOTOR LEAD	1	
11	09407-14407	CLAMP (L:145)	2	
12	34841-88L00	LEVER, TRIM SENSOR	1	
13	34845-88L01	BRACKET, TRIM SENSOR	1	
14	09140-05005	.NUT	1	
15	09125-05048	SCREW (5X16)	1	
16	09160-05029	WASHER (5.5X12X0.8)	1	
17	09103-06093	BOLT (6X20)	2	
18	18213-98J20	SENSOR, OXYGEN	1	
19	09403-07340	CLAMP	1	
20	11218-98J02	HOLDER, TEMP SENSOR	1	
21	11219-98J00	HOLDER, OIL SENSOR	1	
22	34830-98J00	SENSOR ASSY, OIL TEMP	1	

FIG.322A

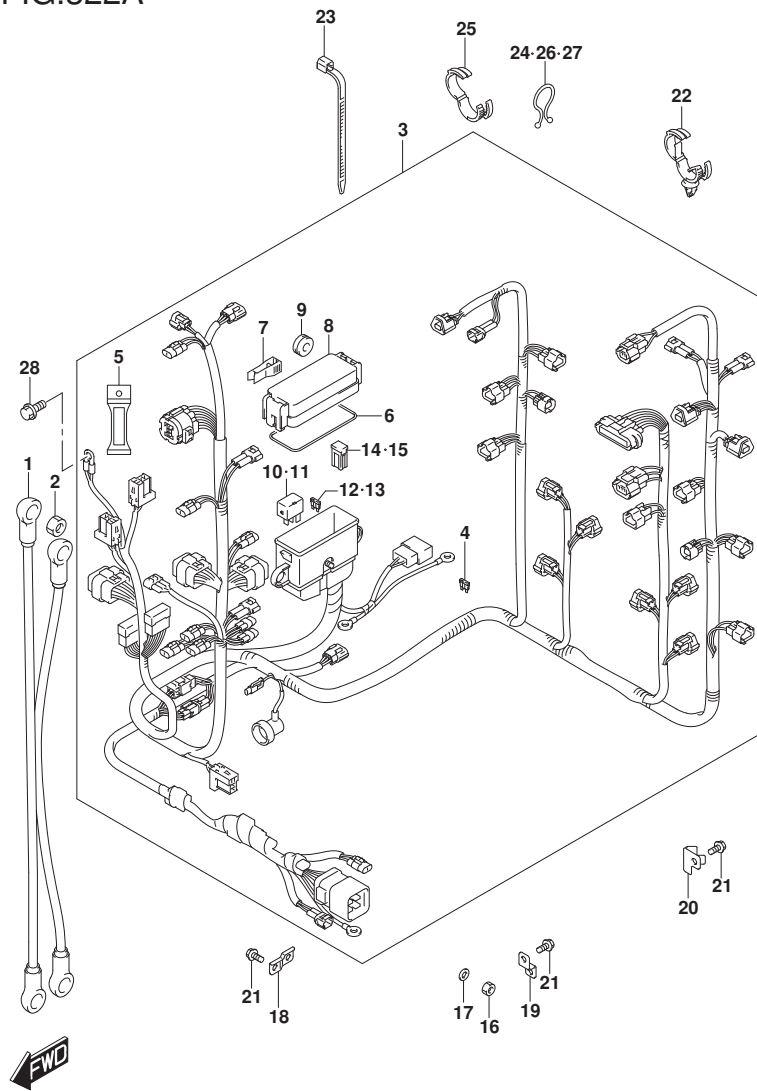

DF300A_E01_016_322A
HARNESS

FIG.322A (1-E-10) HARNESS

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33810-98J00	CABLE, STARTER MOTOR	1	
2	08316-10087	NUT	1	
3	36610-98J60	HARNESS ASSY, WIRING	1	
4	09481-10501	.FUSE (10A)	2	
5	36612-98J10	.CONNECTOR, SELECT TERMINAL	1	
6	36721-96J00	.O RING, UPPER COVER	1	
7	36737-96J00	.PULLER, FUSE	1	
8	36738-98J00	.COVER, FUSE CASE UPPER	1	
9	09320-08021	.CUSHION	2	
10	38860-76F01	.RELAY	1	FOR ENG CONTROL UNIT FOR STARTER MOTOR
11	38860-76F01	.RELAY	1	
12	09481-15501	.FUSE (15A)	5	
13	09481-30501	.FUSE (30A)	3	
14	09481-40401	.FUSE (40A)	1	
15	09481-60401	.FUSE (60A)	2	
16	08310-00067	NUT	1	
17	08321-01067	WASHER	1	
18	36617-93J00	BRACKET, HARNESS	3	
19	36617-93J10	BRACKET, HARNESS	8	
20	36617-98J00	BRACKET, HARNESS	1	
21	01550-06127	BOLT	12	
22	09403-20308	CLAMP	1	
23	09407-14407	CLAMP (L:145)	4	
24	09408-00008	CLIP (ID:20)	2	
25	09408-00184	CLAMP	3	
26	09408-00012	CLIP (ID:11.5)	1	
27	09408-00008	CLIP (ID:20)	1	
28	01550-06127	BOLT	1	

FIG.326A

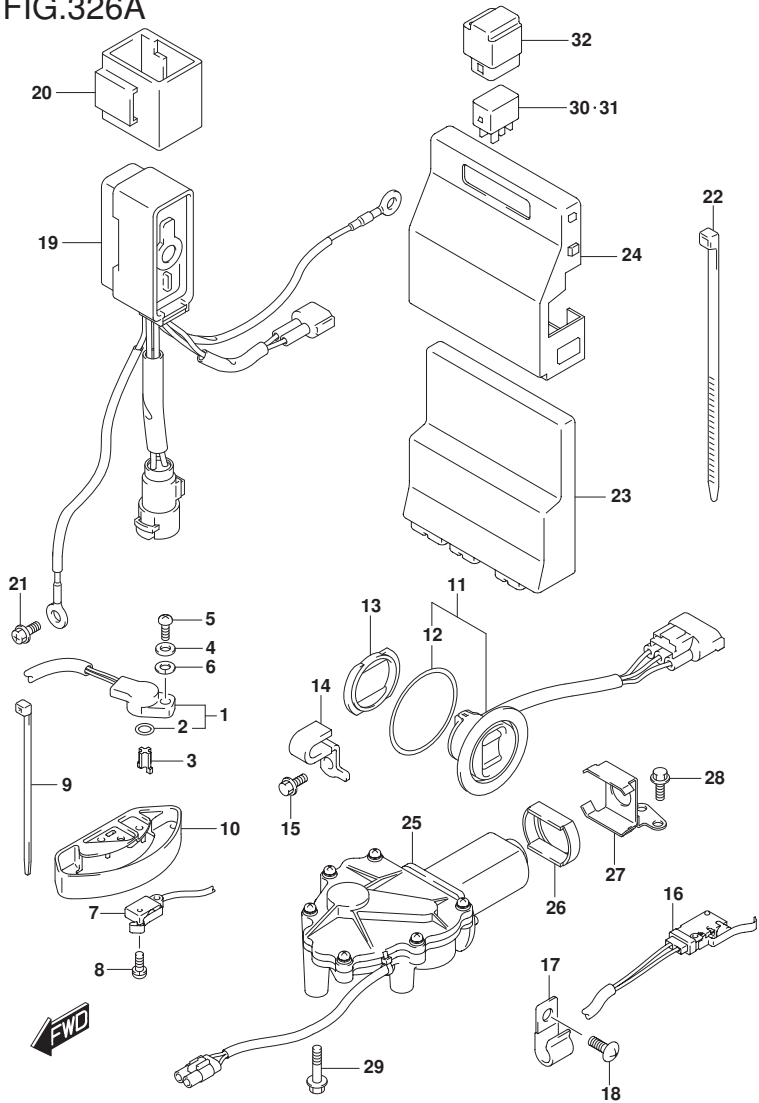


FIG.326A (1-E-11) PTT SWITCH/ENGINE CONTROL UNIT (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13580-98J02	SENSOR ASSY, SHIFT POSITION	1	
2	13575-40F00	.O RING	1	
3	37729-98J00	LEVER, SHIFT SENSOR	1	
4	09160-05029	WASHER (5.5X12X0.8)	1	
5	07130-05167	BOLT	1	
6	08321-0105A	WASHER	1	
7	37721-93J00	SWITCH ASSY, NEUTRAL	1	
8	09137-04004	SCREW (4X16)	2	
9	09407-10404	CLAMP (L:100)	2	
10	37725-93J11	COVER, SWITCH ASSY	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J00	BUSH, PTT SWITCH	1	
14	09403-11315	CLAMP	1	
15	01550-06127	BOLT	1	
16	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
17	09403-09316	CLAMP	1	
18	29125-93J00	SCREW, TILT LIMIT CLAMP	1	
19	38410-93J12	RELAY, PTT	1	
20	38415-93J00	HOLDER, PTT RELAY	1	
21	01550-06127	BOLT	1	
22	09407-30401	CLAMP (L:300)	1	
23	33920-98JG1	UNIT, ENGINE CONTROL	1	
24	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
25	38890-98J10	ACTUATOR, SHIFT	1	
26	38892-98J00	DAMPER, SHIFT ACTUATOR	1	
27	38895-98J00	BRACKET, SHIFT ACTUATOR	1	
28	01550-06167	BOLT	2	
29	01550-06357	BOLT	3	
30	38860-76F01	RELAY, ACTUATOR	2	
31	38860-76F01	RELAY, OXYGEN SENSOR HEATER	1	
32	38915-90J00	HOLDER, RELAY	3	

FIG.326B

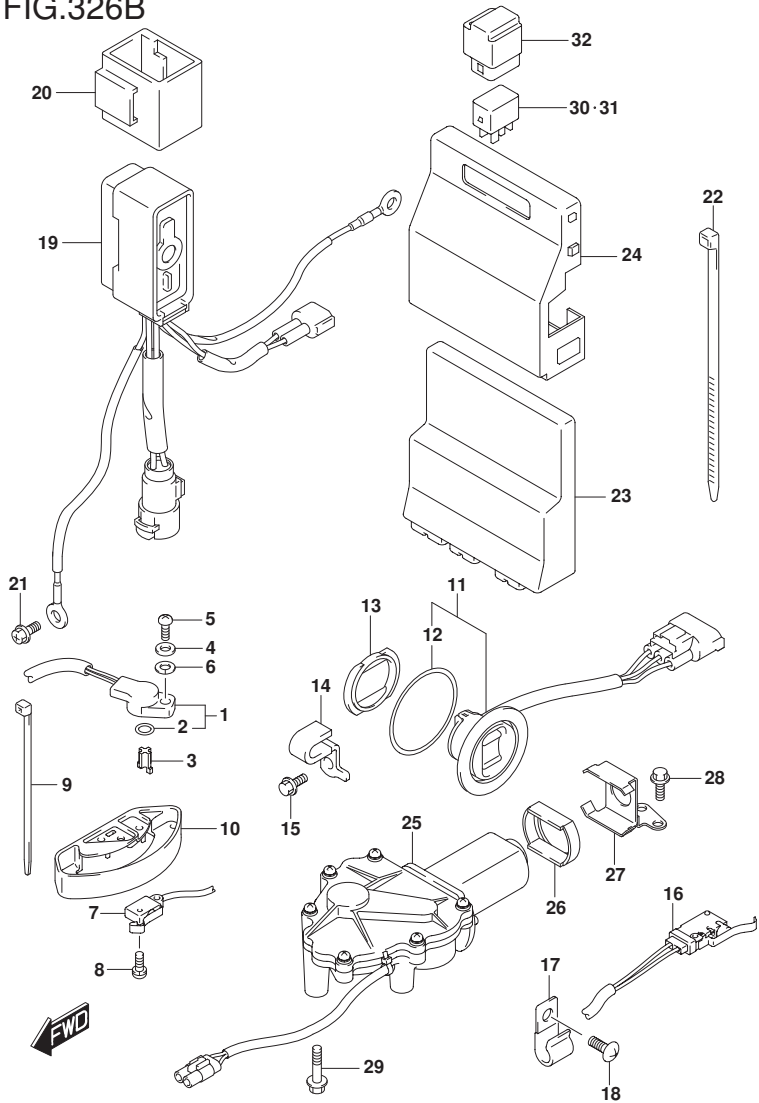


FIG.326B (1-E-12) PTT SWITCH/ENGINE CONTROL UNIT (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13580-98J02	SENSOR ASSY, SHIFT POSITION	1	
2	13575-40F00	.O RING	1	
3	37729-98J00	LEVER, SHIFT SENSOR	1	
4	09160-05029	WASHER (5.5X12X0.8)	1	
5	07130-05167	BOLT	1	
6	08321-0105A	WASHER	1	
7	37721-93J00	SWITCH ASSY, NEUTRAL	1	
8	09137-04004	SCREW (4X16)	2	
9	09407-10404	CLAMP (L:100)	2	
10	37725-93J11	COVER, SWITCH ASSY	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J00	BUSH, PTT SWITCH	1	
14	09403-11315	CLAMP	1	
15	01550-06127	BOLT	1	
16	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
17	09403-09316	CLAMP	1	
18	29125-93J00	SCREW, TILT LIMIT CLAMP	1	
19	38410-93J12	RELAY, PTT	1	
20	38415-93J00	HOLDER, PTT RELAY	1	
21	01550-06127	BOLT	1	
22	09407-30401	CLAMP (L:300)	1	
23	33920-98JG1	UNIT, ENGINE CONTROL	1	
24	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
25	38890-98J10	ACTUATOR, SHIFT	1	
26	38892-98J00	DAMPER, SHIFT ACTUATOR	1	
27	38895-98J00	BRACKET, SHIFT ACTUATOR	1	
28	01550-06167	BOLT	2	
29	01550-06357	BOLT	3	
30	38860-76F01	RELAY, ACTUATOR	2	
31	38860-76F01	RELAY, OXYGEN SENSOR HEATER	1	
32	38915-90J00	HOLDER, RELAY	3	

FIG.326C

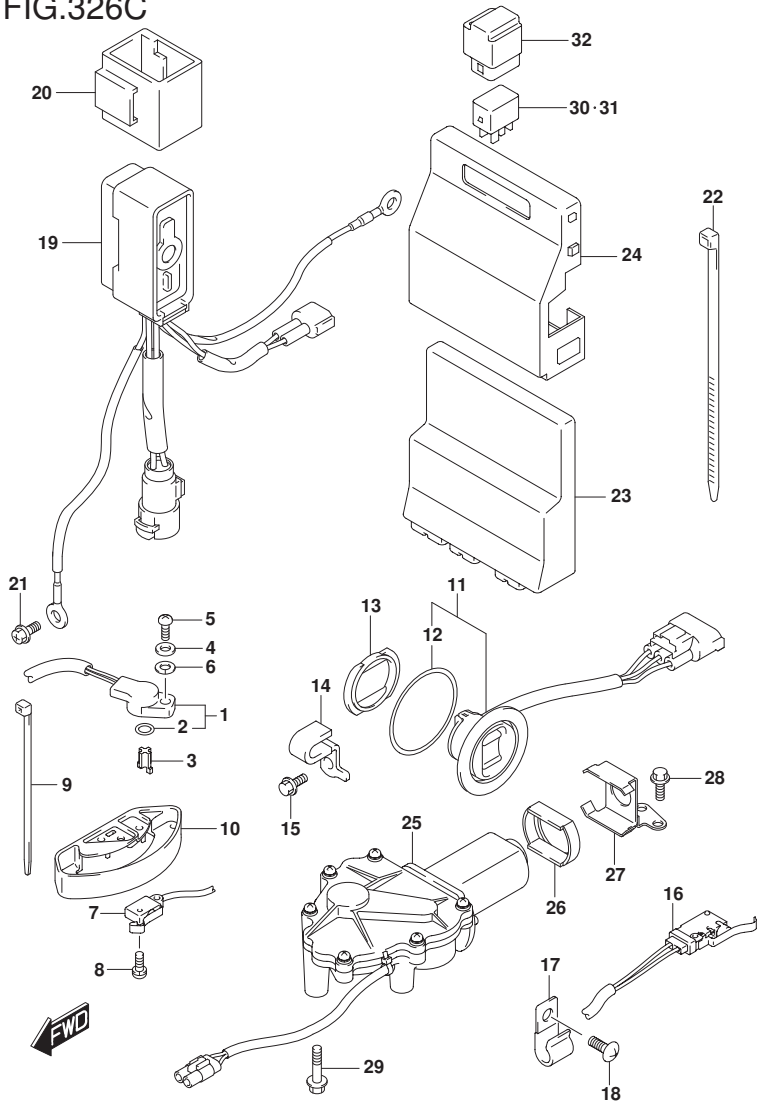


FIG.326C (1-E-13) PTT SWITCH/ENGINE CONTROL UNIT (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13580-98J02	SENSOR ASSY, SHIFT POSITION	1	
2	13575-40F00	.O RING	1	
3	37729-98J00	LEVER, SHIFT SENSOR	1	
4	09160-05029	WASHER (5.5X12X0.8)	1	
5	07130-05167	BOLT	1	
6	08321-0105A	WASHER	1	
7	37721-93J00	SWITCH ASSY, NEUTRAL	1	
8	09137-04004	SCREW (4X16)	2	
9	09407-10404	CLAMP (L:100)	2	
10	37725-93J11	COVER, SWITCH ASSY	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J00	BUSH, PTT SWITCH	1	
14	09403-11315	CLAMP	1	
15	01550-06127	BOLT	1	
16	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
17	09403-09316	CLAMP	1	
18	29125-93J00	SCREW, TILT LIMIT CLAMP	1	
19	38410-93J12	RELAY, PTT	1	
20	38415-93J00	HOLDER, PTT RELAY	1	
21	01550-06127	BOLT	1	
22	09407-30401	CLAMP (L:300)	1	
23	33920-98JH1	UNIT, ENGINE CONTROL	1	
24	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
25	38890-98J10	ACTUATOR, SHIFT	1	
26	38892-98J00	DAMPER, SHIFT ACTUATOR	1	
27	38895-98J00	BRACKET, SHIFT ACTUATOR	1	
28	01550-06167	BOLT	2	
29	01550-06357	BOLT	3	
30	38860-76F01	RELAY, ACTUATOR	2	
31	38860-76F01	RELAY, OXYGEN SENSOR HEATER	1	
32	38915-90J00	HOLDER, RELAY	3	

FIG.326D


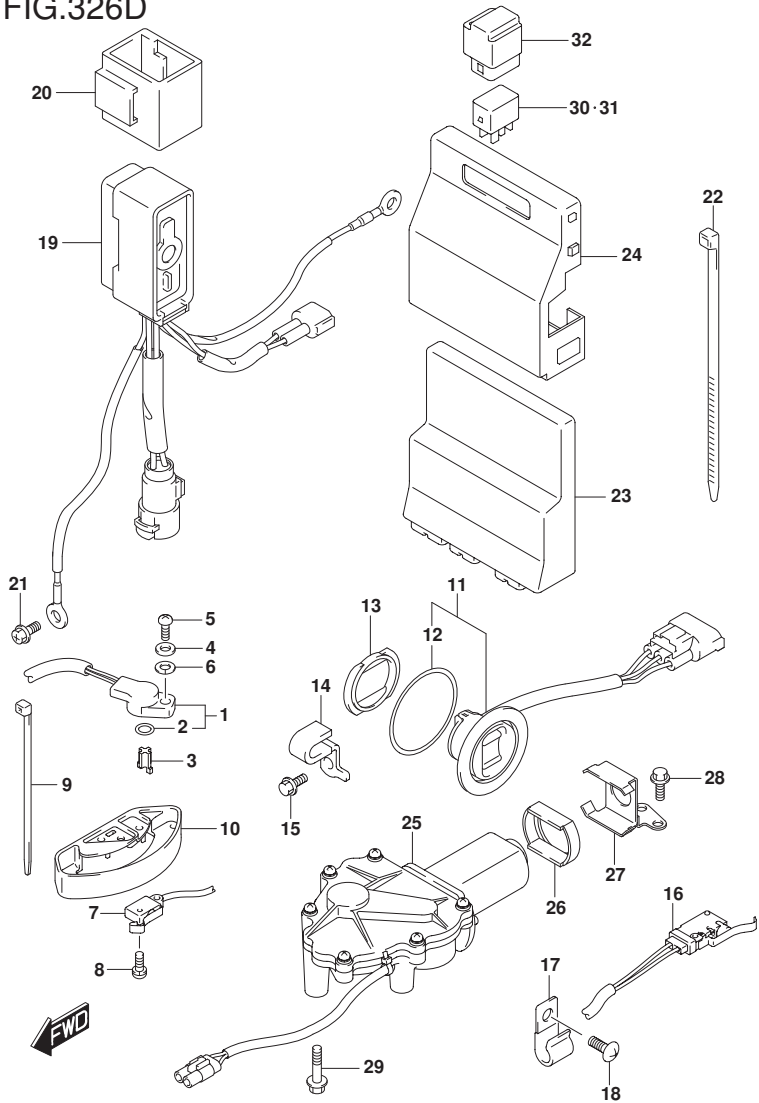


FIG.326D (1-E-14) PTT SWITCH/ENGINE CONTROL UNIT (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13580-98J02	SENSOR ASSY, SHIFT POSITION	1	
2	13575-40F00	.O RING	1	
3	37729-98J00	LEVER, SHIFT SENSOR	1	
4	09160-05029	WASHER (5.5X12X0.8)	1	
5	07130-05167	BOLT	1	
6	08321-0105A	WASHER	1	
7	37721-93J00	SWITCH ASSY, NEUTRAL	1	
8	09137-04004	SCREW (4X16)	2	
9	09407-10404	CLAMP (L:100)	2	
10	37725-93J11	COVER, SWITCH ASSY	1	
11	37850-92J00	SWITCH ASSY, PTT	1	
12	37856-92J00	.TAPE, PTT SWITCH	1	
13	37857-92J00	BUSH, PTT SWITCH	1	
14	09403-11315	CLAMP	1	
15	01550-06127	BOLT	1	
16	37722-93J11	SWITCH ASSY, TILT LIMIT	1	
17	09403-09316	CLAMP	1	
18	29125-93J00	SCREW, TILT LIMIT CLAMP	1	
19	38410-93J12	RELAY, PTT	1	
20	38415-93J00	HOLDER, PTT RELAY	1	
21	01550-06127	BOLT	1	
22	09407-30401	CLAMP (L:300)	1	
23	33920-98JH1	UNIT, ENGINE CONTROL	1	
24	33925-98J00	CUSHION, ENGINE CONTROL UNIT	1	
25	38890-98J10	ACTUATOR, SHIFT	1	
26	38892-98J00	DAMPER, SHIFT ACTUATOR	1	
27	38895-98J00	BRACKET, SHIFT ACTUATOR	1	
28	01550-06167	BOLT	2	
29	01550-06357	BOLT	3	
30	38860-76F01	RELAY, ACTUATOR	2	
31	38860-76F01	RELAY, OXYGEN SENSOR HEATER	1	
32	38915-90J00	HOLDER, RELAY	3	

FIG.331A

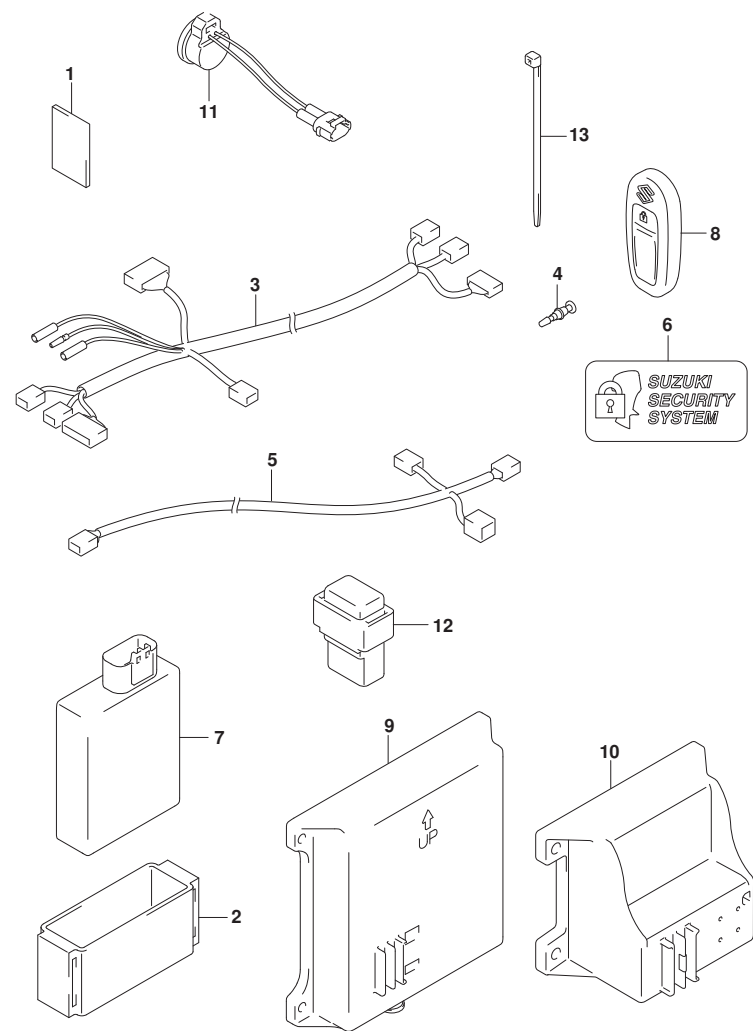

DF300A_E01_016_331A
KEY LESS START

FIG.331A (1-E-15) KEY LESS START (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32851-93J00	CUSHION, KLS CONTROLLER	2	UP TO VIN.610519
1-2	32851-93J00	CUSHION, KLS CONTROLLER	1	FROM VIN.610520
2	32980-38F00	HOLDER, KLS CONTROLLER	1	
3	36623-96L00	HARNESS ASSY, KLS CONT	1	
4	36615-96300	TERMINAL, RESIN	1	
5	36662-96L00	HARNESSASSY, KLS CAN	1	L:6500+110
6	37117-96L00	DECAL, KLS	2	
7-1	37171-96L00	CONTROLLER ASSY, KLS 433MHZ	1	UP TO VIN.610519
7-2	37171-96L01	CONTROLLER ASSY, KLS 433MHZ	1	FROM VIN.610520
8	37172-96L00	REMOCON ASSY, KLS 433MHZ	2	
9	37173-96L00	HOLDER, KLS PARTS	1	LARGE TYPE
10	37173-96L10	HOLDER, KLS PARTS	1	UP TO VIN.610519
				SMALL TYPE
				FROM VIN.610520
11	38500-93J90	BUZZER ASSY	1	
12	38860-96L00	RELAY ASSY, KLS	1	
13	09407-14407	CLAMP (L:145)	1	

FIG.331B

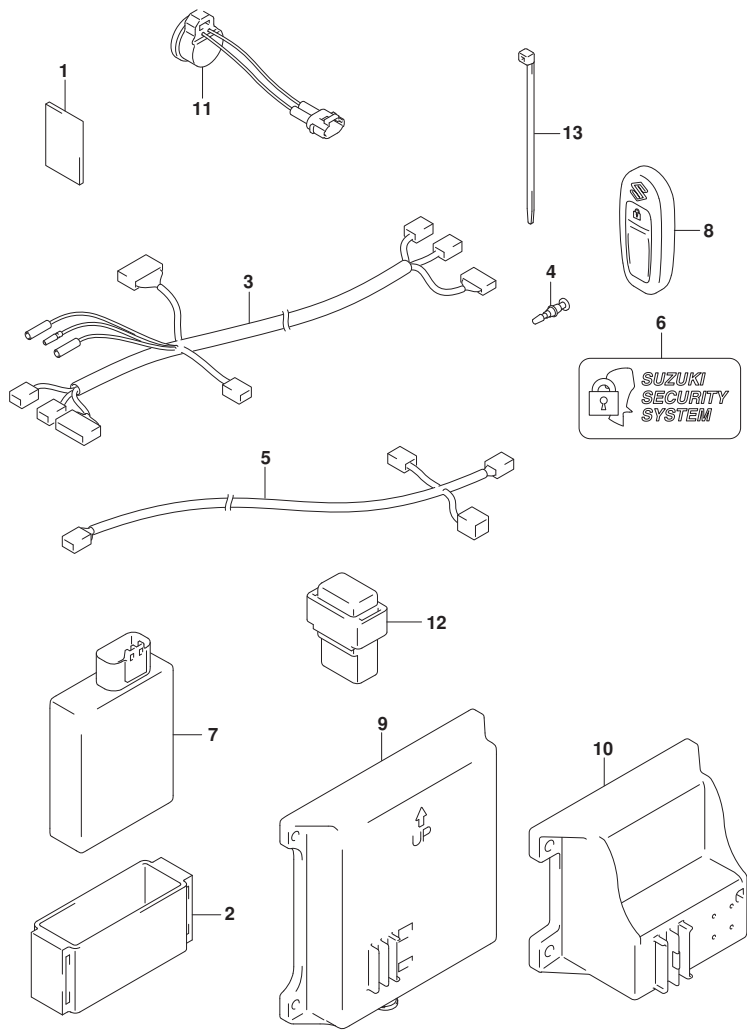


FIG.331B (1-F-2) KEY LESS START (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32851-93J00	CUSHION, KLS CONTROLLER	2	UP TO VIN.610164
1-2	32851-93J00	CUSHION, KLS CONTROLLER	1	FROM VIN.610165
2	32980-38F00	HOLDER, KLS CONTROLLER	1	
3	36623-96L00	HARNESS ASSY, KLS CONT	1	
4	36615-96300	TERMINAL, RESIN	1	
5	36662-96L00	HARNESSASSY, KLS CAN	1	L:6500+110
6	37117-96L00	DECAL, KLS	2	
7-1	37171-96L00	CONTROLLER ASSY, KLS 433MHZ	1	UP TO VIN.610164
7-2	37171-96L01	CONTROLLER ASSY, KLS 433MHZ	1	FROM VIN.610165
8	37172-96L00	REMOCON ASSY, KLS 433MHZ	2	
9	37173-96L00	HOLDER, KLS PARTS	1	LARGE TYPE UP TO VIN.610164
10	37173-96L10	HOLDER, KLS PARTS	1	SMALL TYPE FROM VIN.610165
11	38500-93J90	BUZZER ASSY	1	
12	38860-96L00	RELAY ASSY, KLS	1	
13	09407-14407	CLAMP (L:145)	1	

FIG.335A


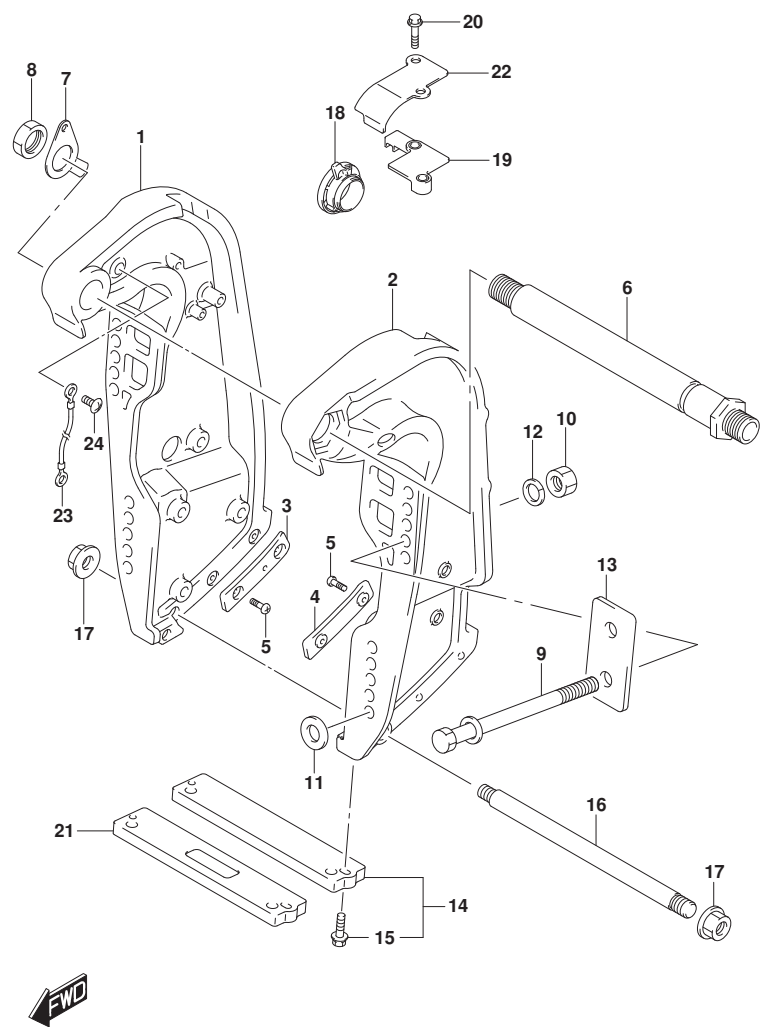


FIG.335A (1-F-3) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	41111-93J14-0EP	BRACKET, CLAMP STBD (BLACK)	1	
1-2	41111-93J14-Y5S	BRACKET, CLAMP STBD (WHITE)	1	
2-1	41121-93J06-0EP	BRACKET, CLAMP PORT (BLACK)	1	
2-2	41121-93J06-Y5S	BRACKET, CLAMP PORT (WHITE)	1	
3	41117-93J01	PLATE, CLAMP BRKT LOWER STBD	1	
4	41122-93J01	PLATE, CLAMP BRKT LOWER PORT	1	
5	09125-06063	SCREW (6X10)	4	
6	41130-93J12	SHAFT, CLAMP BRKT	1	
7	41135-93J11	WASHER, CLAMP BRACKET SHAFT	1	
8	09159-22006	NUT	1	
9-1	09100-12086	BOLT (12.7X150)	6	
9-2	09100-12085	BOLT (12.7X115)	1	OPT
9-3	09100-12092	BOLT (12.7X75)	1	OPT
10	09159-12062	NUT	6	
11	09160-13022	WASHER	4	
12	09160-13021	WASHER	6	
13	41155-93J02	PLATE, TRANSOM	2	
14	55320-94900	ZINC SET, PROTECTION	1	
15	09116-06121	.BOLT (6X25)	2	
16	45421-87D02	PIN, TILT LOCK	1	
17	09159-14020	NUT	2	
18	48140-93J01	CAM, TILT LIMIT SWITCH	1	
19	48144-93J00	HOLDER, TILT LIMIT SWITCH	1	
20	09103-06278	BOLT (6X25)	2	
21	55321-94910	ANODE (MAGNESIUM)	1	OPT
22	48145-93J00	COVER, TILT LIMIT SWITCH	1	
23	36894-87D00	LEAD (CLAMP TO SWIVEL)	1	
24	09125-06063	SCREW (6X10)	2	

FIG.336A

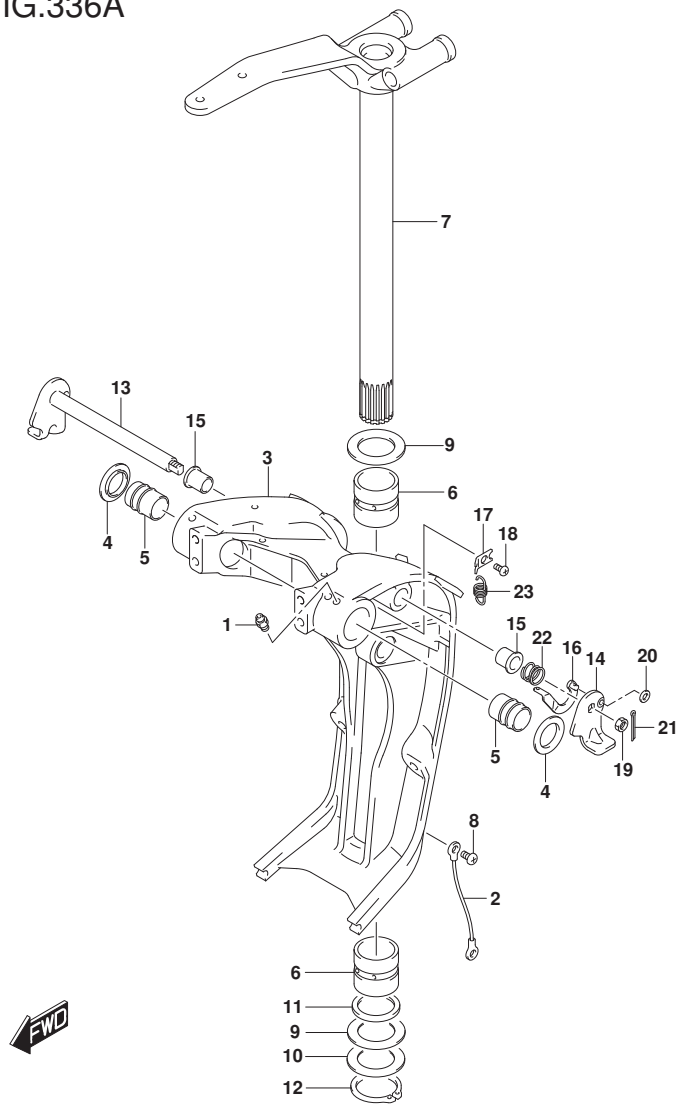

DF300A_E01_016_336A
SWIVEL BRACKET

FIG.336A (1-F-4) SWIVEL BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE SWIVEL BRKT	4	
2	36894-87D00	LEAD (SWIVEL TO MOUNT BRKT)	1	
3-1	43111-93J23-0EP	BRACKET, SWIVEL (BLACK)	1	
3-2	43111-93J23-Y5S	BRACKET, SWIVEL (WHITE)	1	
4	43114-93J00	WASHER, SWIVEL TO CLAMP BRKT	2	
5	43211-93J00	BUSH, CLAMP SHAFT SWIVEL	2	
6	43711-97E01	BUSH, STEERING	2	
7-1	43750-93J02-0EP	BRACKET, STEERING (BLACK)	1	
7-2	43750-93J02-Y5S	BRACKET, STEERING (WHITE)	1	
8	09125-06063	SCREW (6X10)	1	
9	09160-39001	WASHER (39.5X64X1)	2	
10	09181-39001	SHIM (39.5X64X0.3)	AR	
11	09282-39001	OIL SEAL (39X51X5)	1	
12	09380-38003	CIRCLIP	1	
13	41220-93J11	LEVER, TILT LOCK	1	
14	41234-93J11	LEVER, TILT LOCK PORT	1	
15	41224-95E01	BUSH, TILT STOPPER ROD	2	
16	41230-96J00	LINK, TILT LOCK LEVER	1	
17	41233-95E10	BRACKET, TILT LOCK SPRING	1	
18	09125-06063	SCREW (6X10)	1	
19	09140-10032	NUT	1	
20	09160-06082	WASHER (6.5X13X1.0)	1	
21	09204-01006	PIN	1	
22	09440-19028	SPRING	1	
23	09443-10043	SPRING	1	

FIG.337A

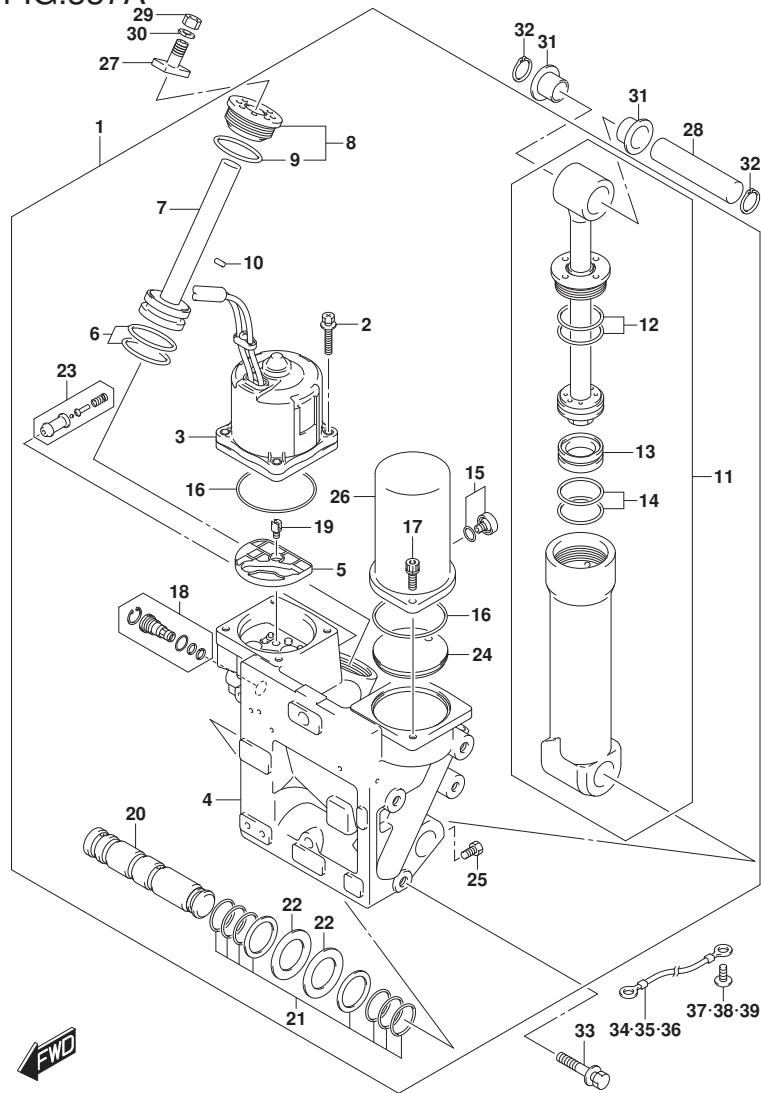


FIG.337A (1-F-5) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	48000-98J06	TRIM ASSY, POWER WITH TILT	1	
2	31281-92J10	.BOLT	4	
3	38100-93J03	.MOTOR ASSY, PTT	1	
4	48500-98J03	.MANIFOLD ASSY	1	
5	48582-95E01	..FILTER	1	
6	48605-93J00	..O RING SET	2	
7	48610-93J01	..PISTON / RAM	2	
8	48630-98J01	..ROD GUIDE	2	
9	48633-93J00	...O RING	4	
10	48691-93J00	..CHECK VALVE	1	
11	48400-98J02	.CYLINDER ASSY	1	
12	48405-93J00	..O RING SET	1	
13	48650-93J00	..PISTON, FREE	1	
14	48627-93J00	..O RING SET	1	
15	48572-87J10	.PLUG	1	
16	48585-95E00	.O RING	2	
17	48862-87J20	.BOLT, RESERVOIR	2	
18	48864-93J01	.MANUAL VALVE	1	
19	48583-95E00	.JOINT, DRIVE	1	
20	48121-93J13	.SHAFT	1	
21	48125-93J00	.O RING SET	1	
22	48126-93J00	.WASHER, TILT CYL TO MANIF	2	
23	48320-93J00	.VALVE SET, UP BLOW	1	
24	48573-93J00	.COVER	1	
25	48128-93J11	.BOLT	1	
26	48571-93J00	.RESERVOIR TANK	1	
27	48311-96J10	PAD, TRIM CYL RAM	2	
28	48321-93J00	SHAFT, TILT CYL UPPER	1	
29	29141-93J20	NUT, TRIM CYL RAM	2	
30	09162-10005	LOCK WASHER	2	
31	09306-24001	BUSH	2	
32	09380-21002	CIRCLIP	2	
33	09116-10175	BOLT (10X50)	8	

FIG.337A

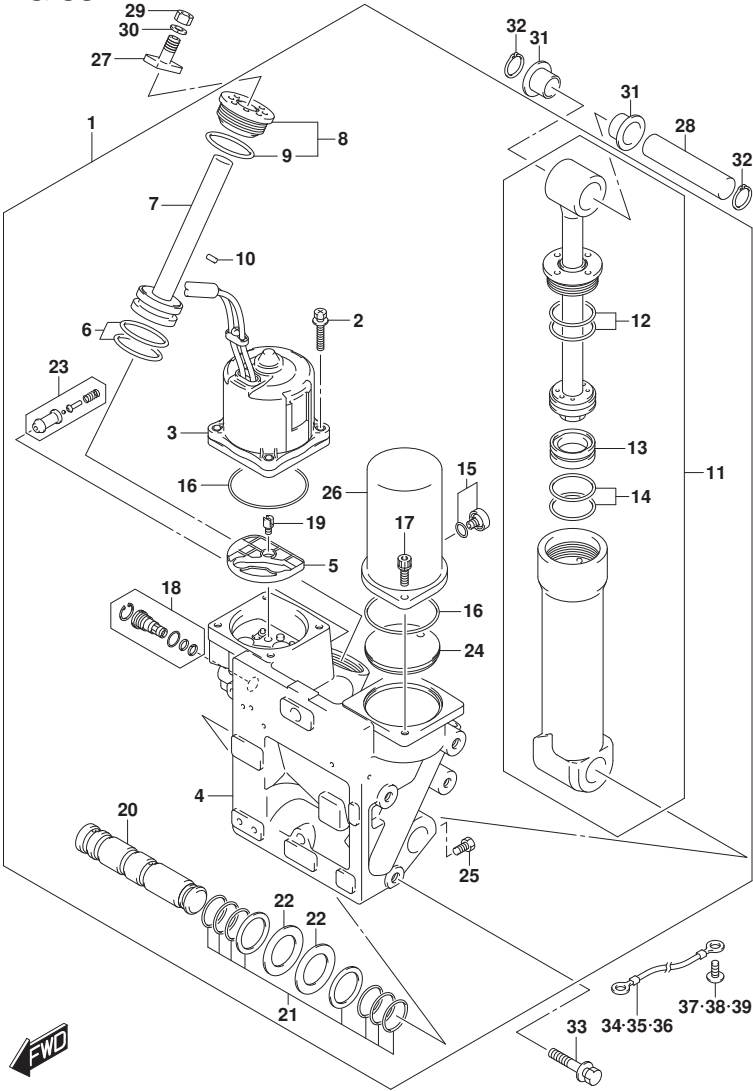


FIG.337A (1-F-6) TRIM CYLINDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	36894-87D00	LEAD, PTT TO ANODE	1	
35	36895-87D01	LEAD, PTT TO ANODE	1	
36	36895-87D01	LEAD, PTT TO ANODE	1	
37	09125-06063	SCREW (6X10)	1	
38	09125-06063	SCREW (6X10)	1	
39	09125-06063	SCREW (6X10)	1	

FIG.340A

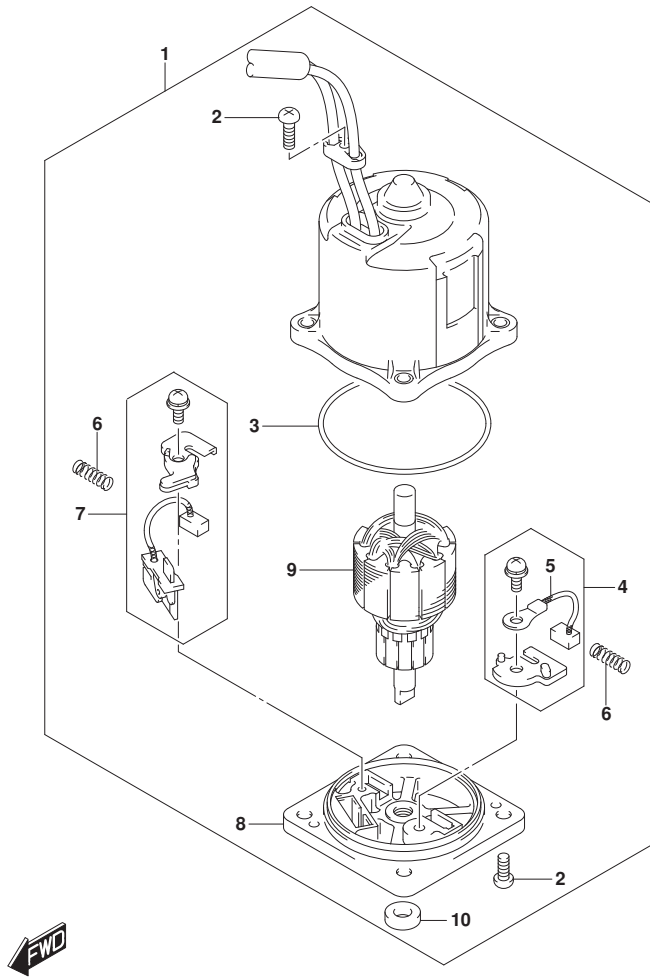


FIG.340A (1-F-7) PTT MOTOR

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38100-93J03	MOTOR ASSY, PTT	1	
2	31111-94900	.SCREW, YOKE	3	
3	31123-94910	.O RING	1	
4	31133-90J00	.BRUSH SET, PLUS	1	
5	31133-94900	..BRUSH	1	
6	31135-94900	.SPRING	2	
7	31136-90J10	.BREAKER	1	
8	31173-94910	.HOLDER, BRUSH	1	
9	31311-93J00	.ARMATURE	1	
10	33799-97E00	.OIL SEAL	1	

FIG.401A

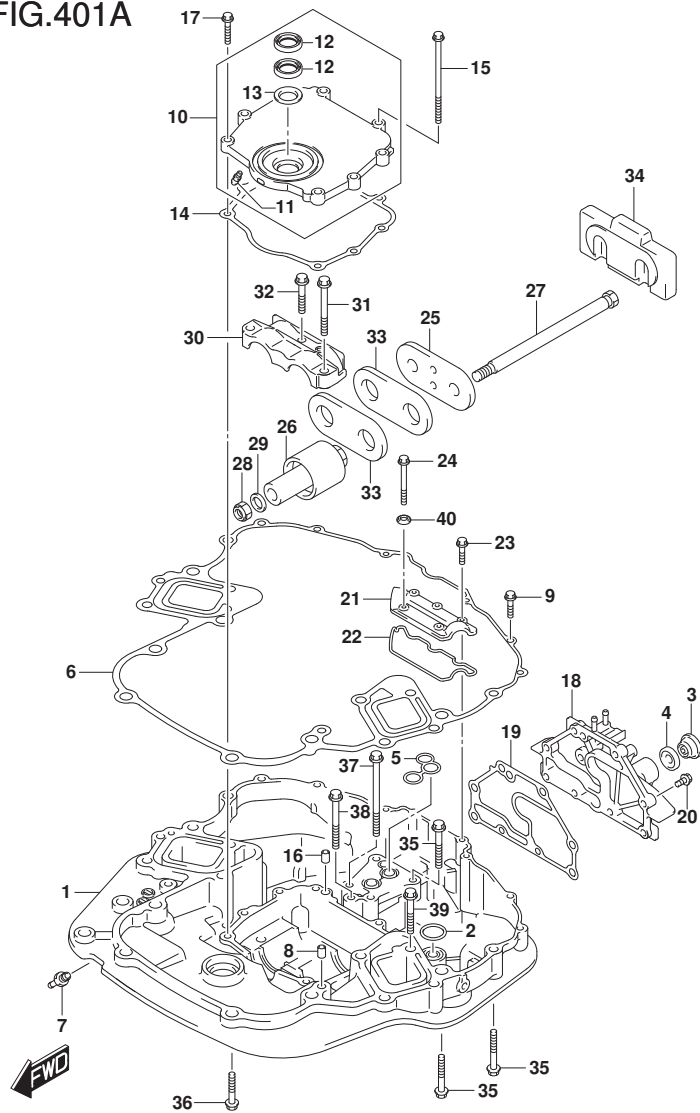


FIG.401A (1-F-8) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	51111-93J20-0EP	HOLDER, ENGINE (BLACK)	1	
1-2	51111-93J20-Y5S	HOLDER, ENGINE (WHITE)	1	
2	16519-93J00	SEAL, ENGINE HOLDER OIL	1	
3	17913-93J00	PLUG, WATER	1	
4	17914-93J00	GASKET, WATER PLUG	1	
5	51116-93J00	SEAL, WATER RETURN	1	
6	51211-93J00	GASKET, ENGINE HOLDER	1	
7	61155-93J20	UNION, WATER INDICATOR	1	
8	09206-08001	PIN (8X11)	2	
9	01550-08307	BOLT	6	
10	51120-93J02	COVER, MOUNT OIL SEAL	1	
11	22511-99011	.NIPPLE,GREASE	1	
12	51124-93J01	.OIL SEAL	2	
13	51125-93J00	.SCRAPER	1	
14	51123-93J00	GASKET, MOUNT OIL SEAL COVER	1	
15	09103-08109	BOLT (8X120)	2	
16	09206-08001	PIN (8X11)	2	
17	01550-0830A	BOLT	6	
18-1	51140-98J00-0EP	COVER, ENGINE HOLDER (BLACK)	1	
18-2	51140-98J00-Y5S	COVER, ENGINE HOLDER (WHITE)	1	
19	51142-93J00	GASKET, ENGINE HOLDER COVER	1	
20	09116-08122	BOLT (8X30)	8	
21	51151-93J00	COVER, ENGINE HOLDER UPPER	1	
22	51152-93J00	SEAL, ENGINE HOLDER UPPER COV	1	
23	01550-08307	BOLT	3	
24	01550-08607	BOLT	2	
25	54123-93J02	PLATE, UPPER MOUNT	1	
26	54130-93J01	MOUNT, UPPER	2	
27	09100-14004	BOLT (14X220)	2	
28	09159-14026	NUT	2	
29	09160-15051	WASHER (15X24X3)	2	
30	54137-93J02	COVER, UPPER MOUNT	1	
31	09116-10135	BOLT (10X95)	2	
32	09116-10175	BOLT (10X50)	1	

FIG.401A

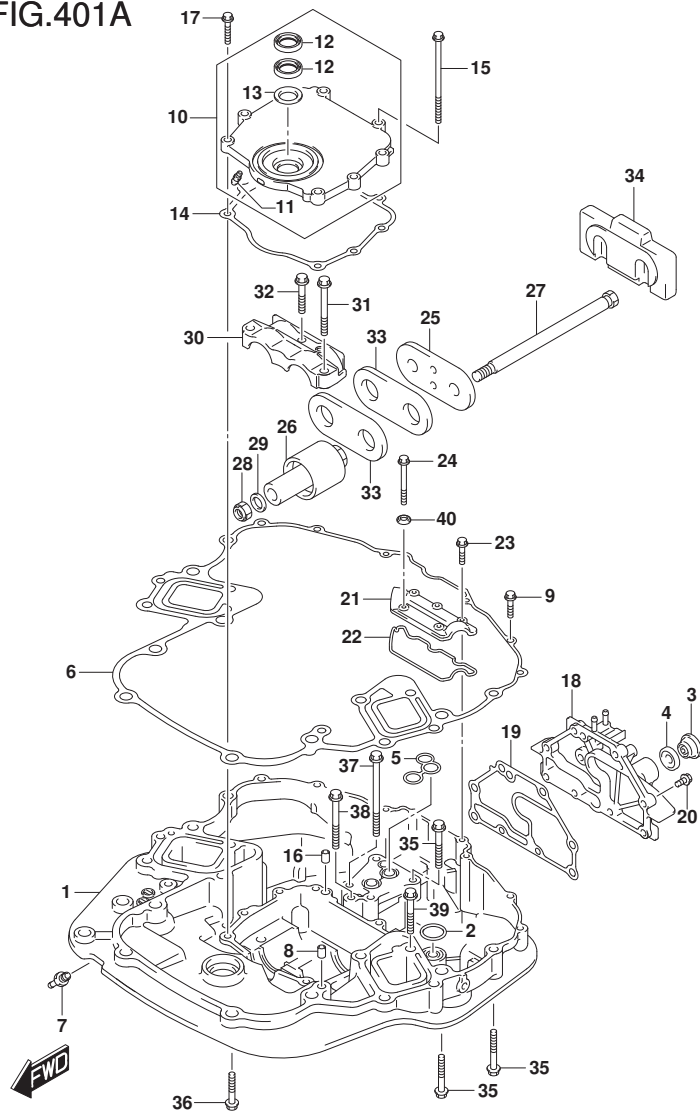


FIG.401A (1-F-9) ENGINE HOLDER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
33	54121-98J00	STOPPER, UPPER THRUST	2	
34	54140-98J00	MOUNT, UPPER THRUST REVERSE	1	
35	09116-10137	BOLT (10X70)	6	
36	09116-10175	BOLT (10X50)	4	
37	09116-10146	BOLT (10X195)	2	
38	09116-10134	BOLT (10X115)	1	
39	09116-08126	BOLT (8X65)	4	
40	09169-08038	WASHER (8.3X15X3)	2	

FIG.405A

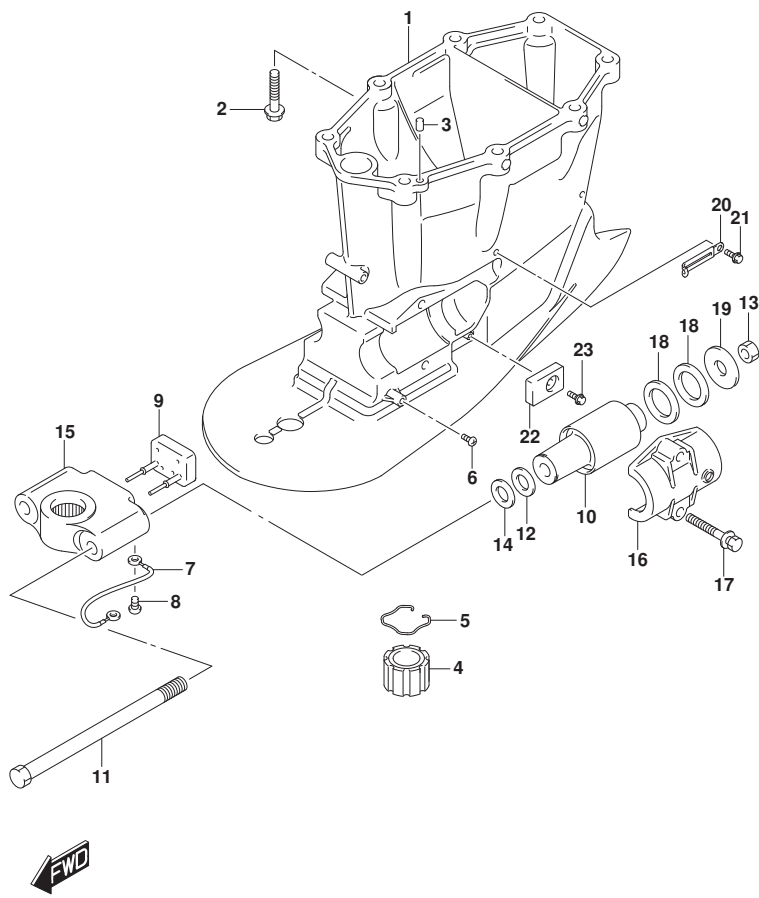


FIG.405A (1-F-10) DRIVE SHAFT HOUSING (X)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98J00-0EP	HOUSING, DRIVE SHAFT (BLACK)	1	
1-2	52111-98J00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7	36894-87D00	LEAD, MT BRKT TO HSG	1	
8	09125-06063	SCREW (6X10)	1	
9	54150-98J00	MOUNT, LOWER THRUST	1	
10	54160-98J00	MOUNT, LOWER	2	
11	09100-14004	BOLT (14X220)	2	
12	09160-16050	WASHER (16X32X3)	2	
13	09159-14026	NUT	2	
14	09160-16050	WASHER (16X32X3)	2	
15-1	54211-93J00-0EP	BRACKET, LOWER MOUNT (BLACK)	1	
15-2	54211-93J00-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	
16-1	54221-93J00-0EP	COVER, LOWER MOUNT (BLACK)	2	
16-2	54221-93J00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
17	09116-10175	BOLT (10X50)	4	
18	54165-98J00	DAMPER, REVERSE STOPPER LOWER	4	
19	09160-14066	WASHER (14X50X4)	2	
20	29404-93J10	CLAMP, SPEEDOMETER HOSE	1	UP TO VIN.610277 FOR DF250A UP TO VIN.610691 FOR DF300A
21	29103-93J00	BOLT, CLAMP (6X12)	1	UP TO VIN.610277 FOR DF250A UP TO VIN.610691 FOR DF300A
22	55321-93J01	ANODE, PROTECTION	1	
23	09116-06236	BOLT (6X16)	1	

FIG.405B

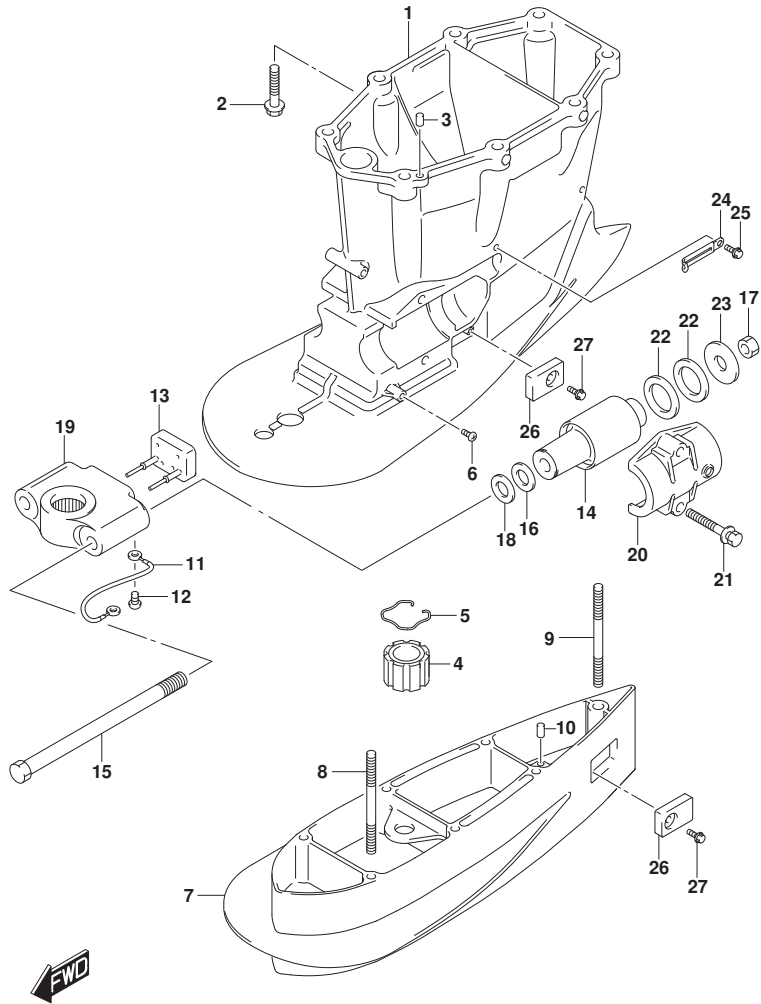


FIG.405B (1-F-11) DRIVE SHAFT HOUSING (XX)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	52111-98J00-0EP	HOUSING, DRIVE SHAFT (BLACK)	1	
1-2	52111-98J00-Y5S	HOUSING, DRIVE SHAFT (WHITE)	1	
2	09116-10176	BOLT (10X44)	8	
3	09202-08006	PIN (8X12)	2	
4	57130-87D10	BUSH, DRIVE SHAFT	1	
5	09387-38002	RING	1	
6	09125-06063	SCREW (6X10)	1	
7-1	52131-93J00-0EP	CASE, EXTENSION (BLACK)	1	
7-2	52131-93J00-Y5S	CASE, EXTENSION (WHITE)	1	
8	09108-10115	STUD BOLT	6	
9	09108-12013	STUD BOLT	1	
10	09202-08006	PIN (8X12)	2	
11	36894-87D00	LEAD, MT BRKT TO HSG	1	
12	09125-06063	SCREW (6X10)	1	
13	54150-98J00	MOUNT, LOWER THRUST	1	
14	54160-98J00	MOUNT, LOWER	2	
15	09100-14004	BOLT (14X220)	2	
16	09160-16050	WASHER (16X32X3)	2	
17	09159-14026	NUT	2	
18	09160-16050	WASHER (16X32X3)	2	
19-1	54211-93J00-0EP	BRACKET, LOWER MOUNT (BLACK)	1	
19-2	54211-93J00-Y5S	BRACKET, LOWER MOUNT (WHITE)	1	
20-1	54221-93J00-0EP	COVER, LOWER MOUNT (BLACK)	2	
20-2	54221-93J00-Y5S	COVER, LOWER MOUNT (WHITE)	2	
21	09116-10175	BOLT (10X50)	4	
22	54165-98J00	DAMPER, REVERSE STOPPER LOWER	4	
23	09160-14066	WASHER (14X50X4)	2	
24	29404-93J10	CLAMP, SPEEDOMETER HOSE	1	UP TO VIN.610277 FOR DF250A UP TO VIN.610691 FOR DF300A UP TO VIN.610277 FOR DF250A UP TO VIN.610691 FOR DF300A
25	29103-93J00	BOLT, CLAMP (6X12)	1	
26	55321-93J01	ANODE, PROTECTION	2	
27	09116-06236	BOLT (6X16)	2	

FIG.407A

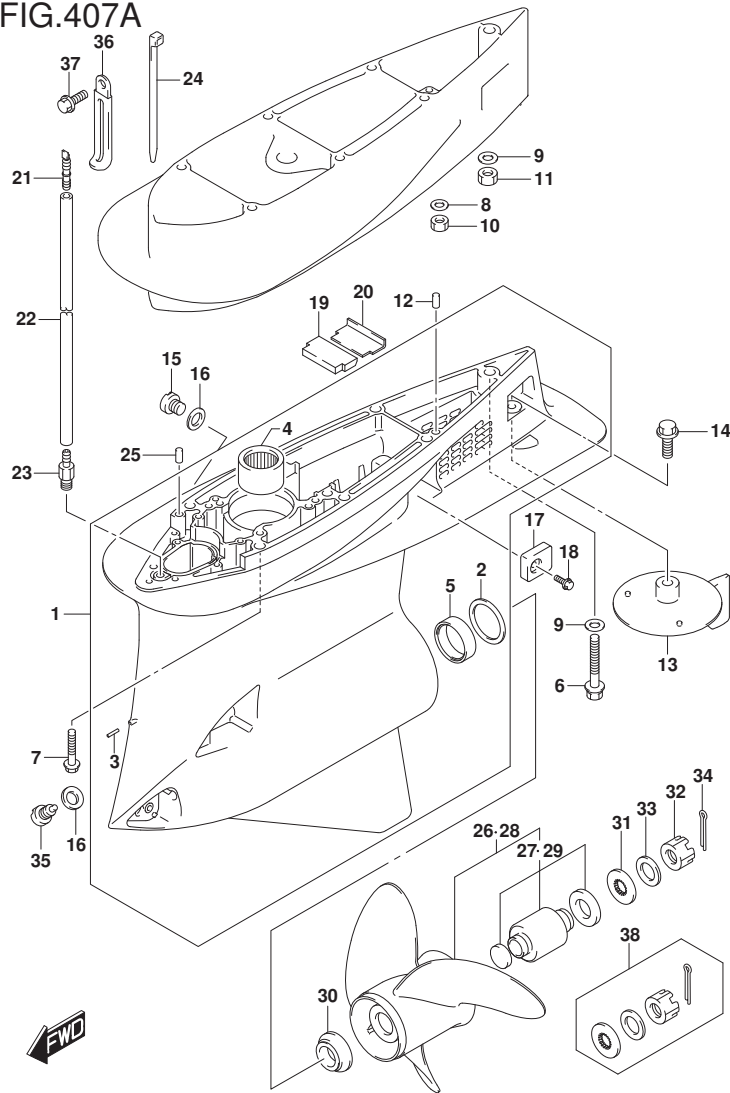


FIG.407A (1-F-12) GEAR CASE (DF300A UP TO VIN.612132, DF250A UP TO VIN.610591)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55110-93L00-0EP	CASE, GEAR (BLACK)	1	
1-2	55110-93L00-Y5S	CASE, GEAR (WHITE)	1	
2	55118-93L00	.WASHER, FORWARD GEAR THRUST	1	
3	09206-03001	.BUSH (2X3X11)	1	
4	09263-35048	.BEARING (35X56X37)	1	
5	09263-80001	.BEARING (80X100X30)	1	
6	09100-12052	BOLT (12X70)	1	W/TRANSOM(X)
7	09116-10150	BOLT (10X55)	6	W/TRANSOM(X)
8	09160-10141	WASHER (10.5X19X2)	6	W/TRANSOM(XX)
9	09160-12066	WASHER (12.5X22X2.5)	1	
10	29141-93J20	NUT, EXTENSION BOLT NO.1	6	W/TRANSOM(XX)
11	09159-12014	NUT	1	W/TRANSOM(XX)
12	09202-08006	PIN (8X12)	2	
13-1	55125-93L00-0EP	TAB, TRIM (BLACK)	1	
13-2	55125-93L00-Y5S	TAB, TRIM (WHITE)	1	
14	09116-08137	BOLT (8X22)	1	
15	55128-93J10	PLUG, DRAIN	1	
16	09168-10034	GASKET (9.5X16.5X2)	2	
17	55321-93J01	ANODE, PROTECTION	2	
18	09116-06236	BOLT (6X16)	2	
19	55332-98J00	RUBBER, EXHAUST SEAL	1	
20	55333-98J00	PLATE, EXHAUST SEAL	1	
21	55127-87D00	UNION, SPEEDOMETER HOSE	1	
22-1	09355-40805-00B	HOSE (4X8X2000)	1	L:2000->1300 UP TO VIN.610277 FOR DF250A UP TO VIN.610691 FOR DF300A
22-2	09355-40805-600	HOSE (4X8X600)	1	L:600->50 W/TRANSOM(X) L:600->180 W/TRANSOM(XX) FROM VIN.610278 FOR DF250A FROM VIN.610692 FOR DF300A
23	09362-09008	UNION	1	
24	09407-10404	CLAMP (L:100)	2	
25	09202-06031	PIN (6X12)	2	

FIG.407A

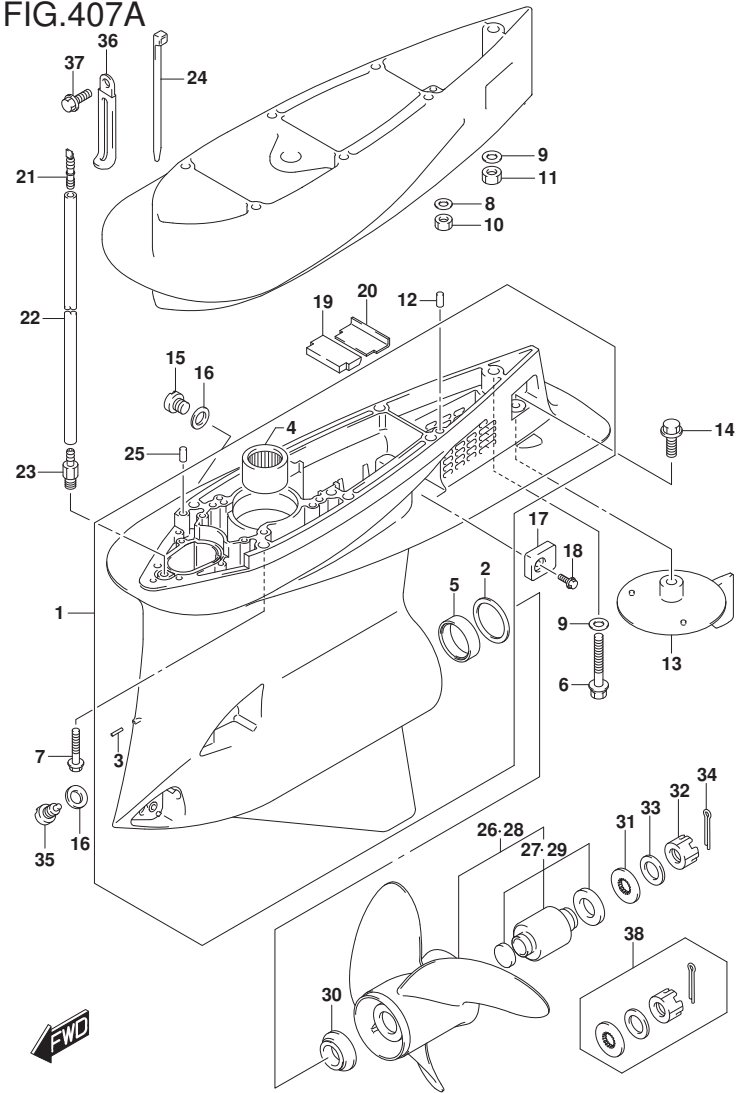


FIG.407A (1-F-13) GEAR CASE (DF300A UP TO VIN.612132, DF250A UP TO VIN.610591)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26-1	58200-93L00	PROPELLER (3X16X17)	1	W/REGULAR ROTATION
26-2	58200-93L10	PROPELLER (3X16X18.5)	1	W/REGULAR ROTATION
26-3	58200-93L20	PROPELLER (3X16X20)	1	W/REGULAR ROTATION
26-4	58200-93L30	PROPELLER (3X16X21.5)	1	W/REGULAR ROTATION
26-5	58200-93L40	PROPELLER (3X16X23)	1	W/REGULAR ROTATION
26-6	58200-93L50	PROPELLER (3X16X24.5)	1	W/REGULAR ROTATION
26-7	58200-93L80	PROPELLER (3X16X15)	1	W/REGULAR ROTATION
26-8	58200-93L60	PROPELLER (3X16X26)	1	OPT W/REGULAR ROTATION
26-9	58200-93L70	PROPELLER (3X16X27.5)	1	OPT W/REGULAR ROTATION
26-10	58300-93J00	PROPELLER (4X15.25X18)	1	OPT W/REGULAR ROTATION
26-11	58300-93J10	PROPELLER (4X15.25X20)	1	OPT W/REGULAR ROTATION
26-12	58300-93J20	PROPELLER (4X15.25X22)	1	OPT W/REGULAR ROTATION
26-13	58300-93J30	PROPELLER (4X15.25X24)	1	OPT W/REGULAR ROTATION
26-14	58300-93J40	PROPELLER (4X15.25X26)	1	OPT W/REGULAR ROTATION
26-15	58200-93LA0	PROPELLER (3X16X18.5)	1	W/COUNTER ROTATION
26-16	58200-93LB0	PROPELLER (3X16X20)	1	W/COUNTER ROTATION
26-17	58200-93LC0	PROPELLER (3X16X21.5)	1	W/COUNTER ROTATION
26-18	58200-93LD0	PROPELLER (3X16X23)	1	W/COUNTER ROTATION
26-19	58200-93LE0	PROPELLER (3X16X17)	1	W/COUNTER ROTATION

FIG.407A


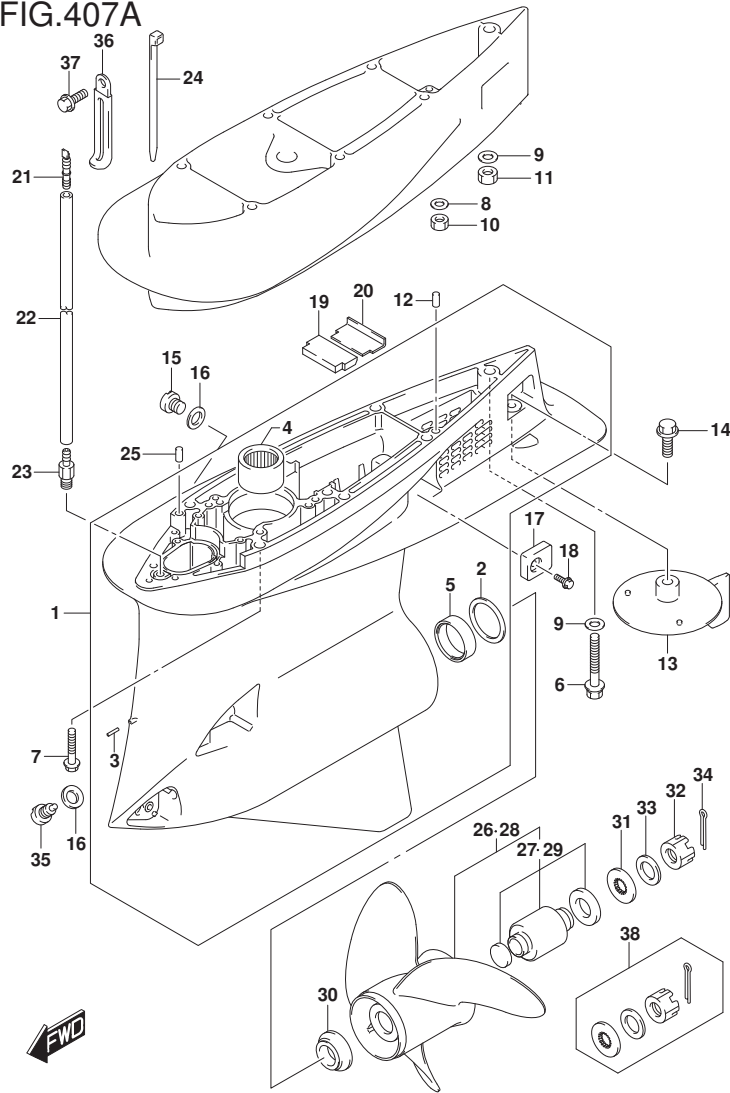


FIG.407A (1-F-14) GEAR CASE (DF300A UP TO VIN.612132, DF250A UP TO VIN.610591)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
26-20	58200-93LF0	PROPELLER (3X16X24.5)	1	OPT W/COUNTER ROTATION
26-21	58200-93LG0	PROPELLER (3X16X26)	1	OPT W/COUNTER ROTATION
26-22	58300-93JA0	PROPELLER (4X15.25X20)	1	OPT W/COUNTER ROTATION
26-23	58300-93JB0	PROPELLER (4X15.25X22)	1	OPT W/COUNTER ROTATION
26-24	58300-93JC0	PROPELLER (4X15.25X24)	1	OPT W/COUNTER ROTATION
26-25	58300-93JD0	PROPELLER (4X15.25X26)	1	OPT W/COUNTER ROTATION
27	58105-93J10	.BUSH SET, PROPELLER	1	
28-1	58200-96J00	PROPELLER (3X15.5X17)	1	OPT W/REGULAR ROTATION
28-2	58200-96J10	PROPELLER (3X15.25X19)	1	OPT W/REGULAR ROTATION
28-3	58200-96J20	PROPELLER (3X14.75X21)	1	OPT W/REGULAR ROTATION
28-4	58200-96J30	PROPELLER (3X14.75X23)	1	OPT W/REGULAR ROTATION
28-5	58200-96J40	PROPELLER (3X14.5X25)	1	OPT W/REGULAR ROTATION
28-6	58200-96J50	PROPELLER (3X14.5X27)	1	OPT W/REGULAR ROTATION
28-7	58200-96JA0	PROPELLER (3X15.5X17)	1	OPT W/COUNTER ROTATION
28-8	58200-96JB0	PROPELLER (3X15.25X19)	1	OPT W/COUNTER ROTATION
28-9	58200-96JC0	PROPELLER (3X14.75X21)	1	OPT W/COUNTER ROTATION
28-10	58200-96JD0	PROPELLER (3X14.75X23)	1	OPT W/COUNTER ROTATION
28-11	58200-96JE0	PROPELLER (3X14.5X25)	1	OPT W/COUNTER ROTATION
28-12	58200-96JF0	PROPELLER (3X14.5X27)	1	OPT W/COUNTER ROTATION
29	58105-93J10	.BUSH SET, PROPELLER	1	

FIG.407A

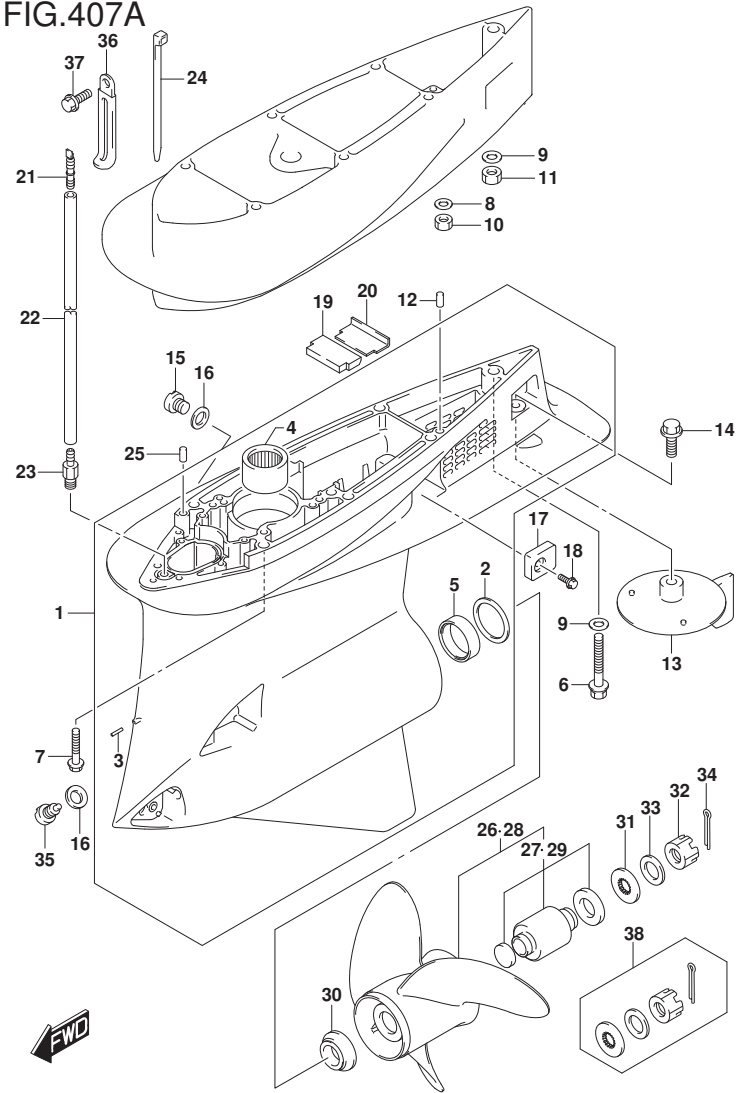

DF300A_E01_016_407A
GEAR CASE

FIG.407A (1-F-15) GEAR CASE (DF300A UP TO VIN.612132, DF250A UP TO VIN.610591)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	57632-93L01	STOPPER, PROPELLER BUSH	1	
31	57633-87D30	SPACER, PROPELLER NUT	1	
32	09141-18005	NUT	1	
33	09160-18028	WASHER (18.5X31X1)	1	
34	09204-03003	COTTER PIN (D:3.6,L:25)	1	
35	55128-93L00	PLUG, DRAIN	1	
36	29404-93J10	CLAMP	1	UP TO VIN.610277 FOR DF250A UP TO VIN.610691 FOR DF300A
37	01550-06127	BOLT	1	
38	57630-92E00	KIT, PROPELLER NUT	1	OPT
39	25700-93L00	KIT, GEAR CASE SEALING	1	OPT NOT ILLUSTRATED

FIG.407B

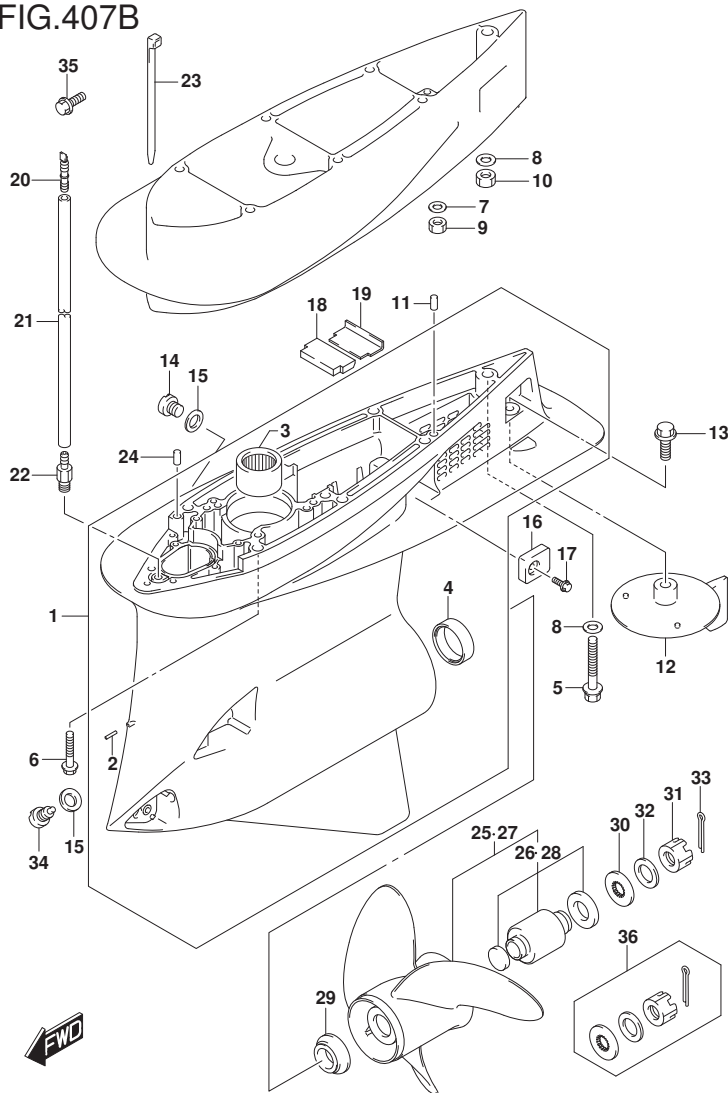


FIG.407B (1-G-2) GEAR CASE (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	55110-93L10-0EP	CASE, GEAR (BLACK)	1	
1-2	55110-93L10-Y5S	CASE, GEAR (WHITE)	1	
2	09206-03001	.BUSH (2X3X11)	1	
3	09263-35048	.BEARING (35X56X37)	1	
4	09263-80001	.BEARING (80X100X30)	1	
5	09100-12052	BOLT (12X70)	1	W/TRANSOM(X)
6	09116-10150	BOLT (10X55)	6	W/TRANSOM(X)
7	09160-10141	WASHER (10.5X19X2)	6	W/TRANSOM(XX)
8	09160-12066	WASHER (12.5X22X2.5)	1	
9	29141-93J20	NUT, EXTENSION BOLT NO.1	6	W/TRANSOM(XX)
10	09159-12014	NUT	1	W/TRANSOM(XX)
11	09202-08006	PIN (8X12)	2	
12-1	55125-93L00-0EP	TAB, TRIM (BLACK)	1	
12-2	55125-93L00-Y5S	TAB, TRIM (WHITE)	1	
13	09116-08137	BOLT (8X22)	1	
14	55128-93J10	PLUG, DRAIN	1	
15	09168-10034	GASKET (9.5X16.5X2)	2	
16	55321-93J01	ANODE, PROTECTION	2	
17	09116-06236	BOLT (6X16)	2	
18	55332-98J00	RUBBER, EXHAUST SEAL	1	
19	55333-98J00	PLATE, EXHAUST SEAL	1	
20	55127-87D00	UNION, SPEEDOMETER HOSE	1	
21	09355-40805-600	HOSE (4X8X600)	1	L:600->50 W/TRANSOM(X) L:600->180 W/TRANSOM(XX)
22	09362-09008	UNION	1	
23	09407-10404	CLAMP (L:100)	2	
24	09202-06031	PIN (6X12)	2	

FIG.407B


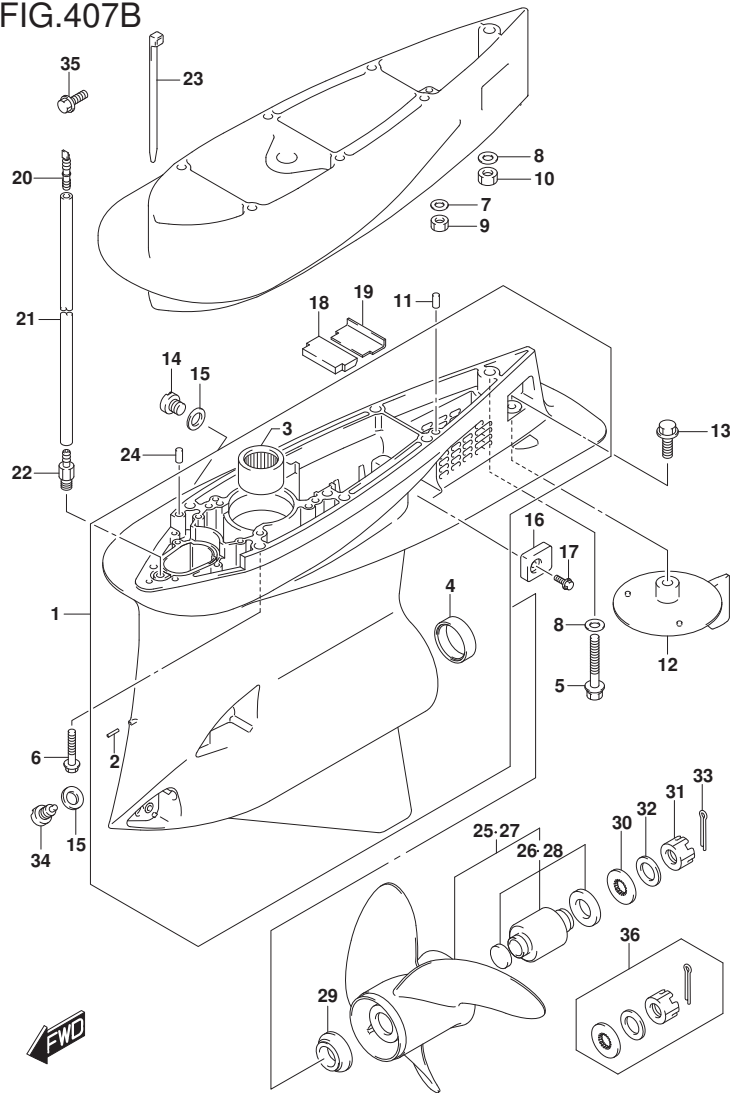


FIG.407B (1-G-3) GEAR CASE (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
25-1	58200-93L00	PROPELLER (3X16X17)	1	W/REGULAR ROTATION
25-2	58200-93L10	PROPELLER (3X16X18.5)	1	W/REGULAR ROTATION
25-3	58200-93L20	PROPELLER (3X16X20)	1	W/REGULAR ROTATION
25-4	58200-93L30	PROPELLER (3X16X21.5)	1	W/REGULAR ROTATION
25-5	58200-93L40	PROPELLER (3X16X23)	1	W/REGULAR ROTATION
25-6	58200-93L50	PROPELLER (3X16X24.5)	1	W/REGULAR ROTATION
25-7	58200-93L80	PROPELLER (3X16X15)	1	W/REGULAR ROTATION
25-8	58200-93L60	PROPELLER (3X16X26)	1	OPT W/REGULAR ROTATION
25-9	58200-93L70	PROPELLER (3X16X27.5)	1	OPT W/REGULAR ROTATION
25-10	58300-93J00	PROPELLER (4X15.25X18)	1	OPT W/REGULAR ROTATION
25-11	58300-93J10	PROPELLER (4X15.25X20)	1	OPT W/REGULAR ROTATION
25-12	58300-93J20	PROPELLER (4X15.25X22)	1	OPT W/REGULAR ROTATION
25-13	58300-93J30	PROPELLER (4X15.25X24)	1	OPT W/REGULAR ROTATION
25-14	58300-93J40	PROPELLER (4X15.25X26)	1	OPT W/REGULAR ROTATION
25-15	58200-93LA0	PROPELLER (3X16X18.5)	1	W/COUNTER ROTATION
25-16	58200-93LB0	PROPELLER (3X16X20)	1	W/COUNTER ROTATION
25-17	58200-93LC0	PROPELLER (3X16X21.5)	1	W/COUNTER ROTATION
25-18	58200-93LD0	PROPELLER (3X16X23)	1	W/COUNTER ROTATION
25-19	58200-93LE0	PROPELLER (3X16X17)	1	W/COUNTER ROTATION
25-20	58200-93LF0	PROPELLER (3X16X24.5)	1	OPT W/COUNTER ROTATION
25-21	58200-93LG0	PROPELLER (3X16X26)	1	OPT W/COUNTER ROTATION
25-22	58300-93JA0	PROPELLER (4X15.25X20)	1	OPT W/COUNTER ROTATION
25-23	58300-93JB0	PROPELLER (4X15.25X22)	1	OPT W/COUNTER ROTATION
25-24	58300-93JC0	PROPELLER (4X15.25X24)	1	OPT W/COUNTER ROTATION
25-25	58300-93JD0	PROPELLER (4X15.25X26)	1	OPT W/COUNTER ROTATION
26	58105-93J10	.BUSH SET, PROPELLER	1	

FIG.407B

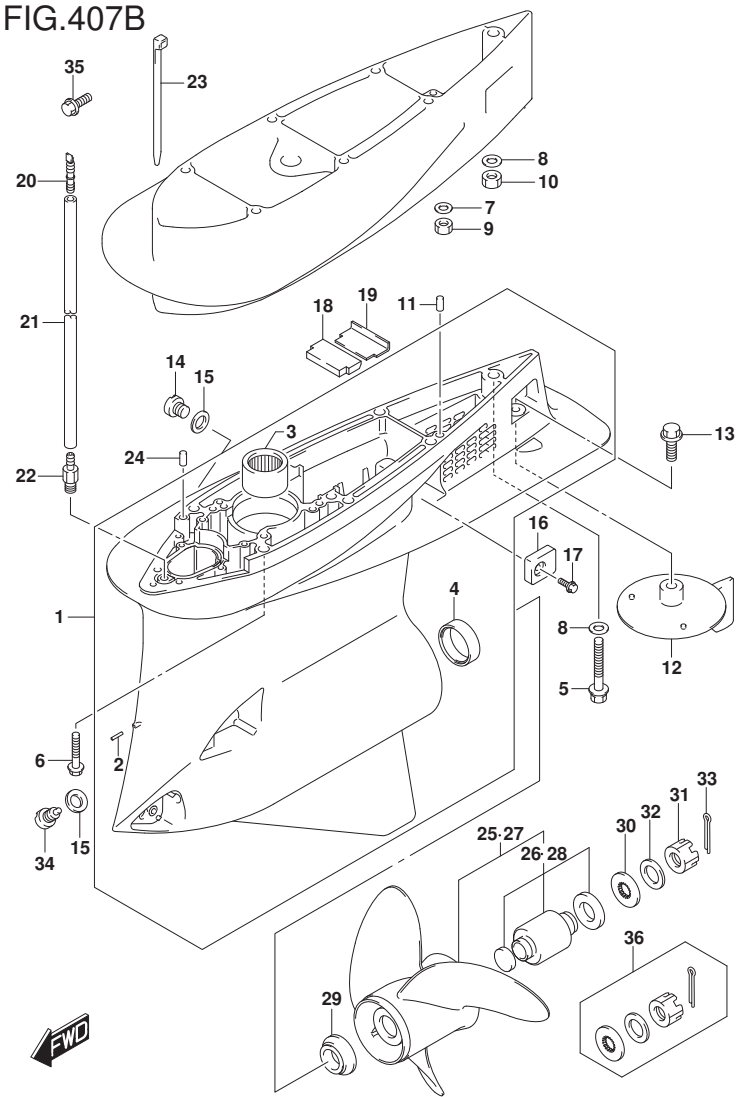

DF300A_E01_016_407B
GEAR CASE

FIG.407B (1-G-4) GEAR CASE (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27-1	58200-96J00	PROPELLER (3X15.5X17)	1	OPT W/REGULAR ROTATION
27-2	58200-96J10	PROPELLER (3X15.25X19)	1	OPT W/REGULAR ROTATION
27-3	58200-96J20	PROPELLER (3X14.75X21)	1	OPT W/REGULAR ROTATION
27-4	58200-96J30	PROPELLER (3X14.75X23)	1	OPT W/REGULAR ROTATION
27-5	58200-96J40	PROPELLER (3X14.5X25)	1	OPT W/REGULAR ROTATION
27-6	58200-96J50	PROPELLER (3X14.5X27)	1	OPT W/REGULAR ROTATION
27-7	58200-96JA0	PROPELLER (3X15.5X17)	1	OPT W/COUNTER ROTATION
27-8	58200-96JB0	PROPELLER (3X15.25X19)	1	OPT W/COUNTER ROTATION
27-9	58200-96JC0	PROPELLER (3X14.75X21)	1	OPT W/COUNTER ROTATION
27-10	58200-96JD0	PROPELLER (3X14.75X23)	1	OPT W/COUNTER ROTATION
27-11	58200-96JE0	PROPELLER (3X14.5X25)	1	OPT W/COUNTER ROTATION
27-12	58200-96JF0	PROPELLER (3X14.5X27)	1	OPT W/COUNTER ROTATION
28	58105-93J10	.BUSH SET, PROPELLER	1	
29	57632-93L01	STOPPER, PROPELLER BUSH	1	
30	57633-87D30	SPACER, PROPELLER NUT	1	
31	09141-18005	NUT	1	
32	09160-18028	WASHER (18.5X31X1)	1	
33	09204-03003	COTTER PIN (D:3.6,L:25)	1	
34	55128-93L00	PLUG, DRAIN	1	
35	01550-06127	BOLT	1	

DF300A_E01_016

FIG.407B

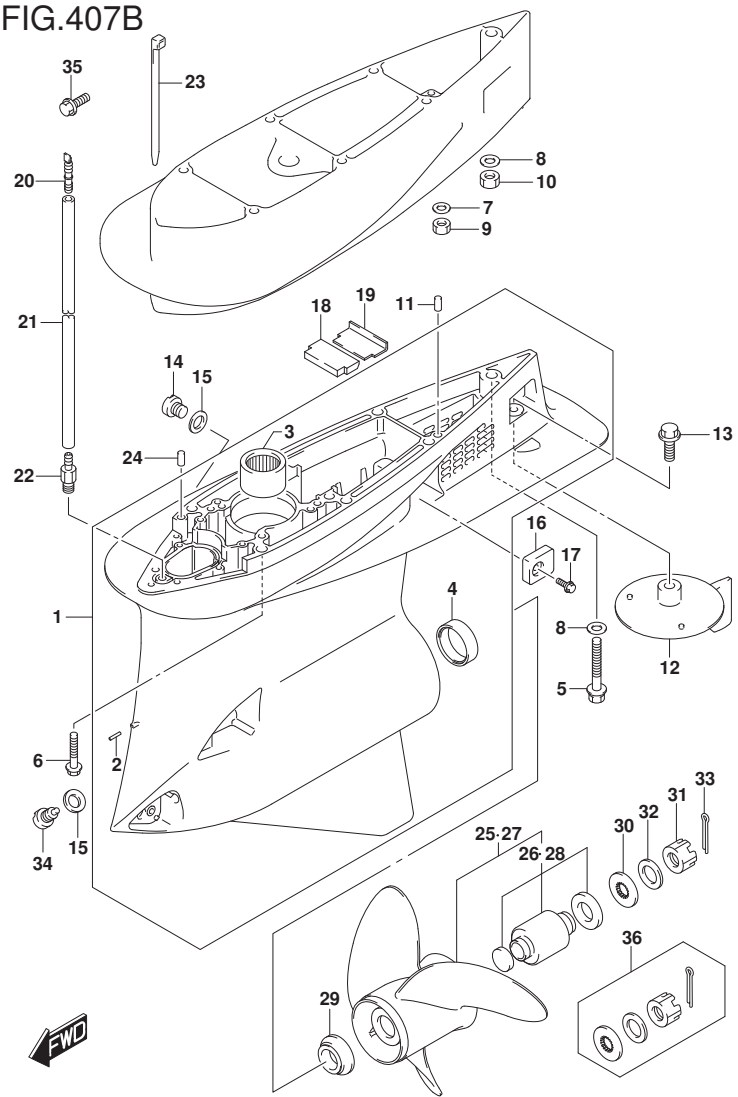


FIG.407B (1-G-5) GEAR CASE (DF300A FROM VIN.612133, DF250A FROM VIN.610592)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
36	57630-92E00	KIT, PROPELLER NUT	1	OPT
37	25700-93L00	KIT, GEAR CASE SEALING	1	OPT
				NOT ILLUSTRATED

FIG.410A

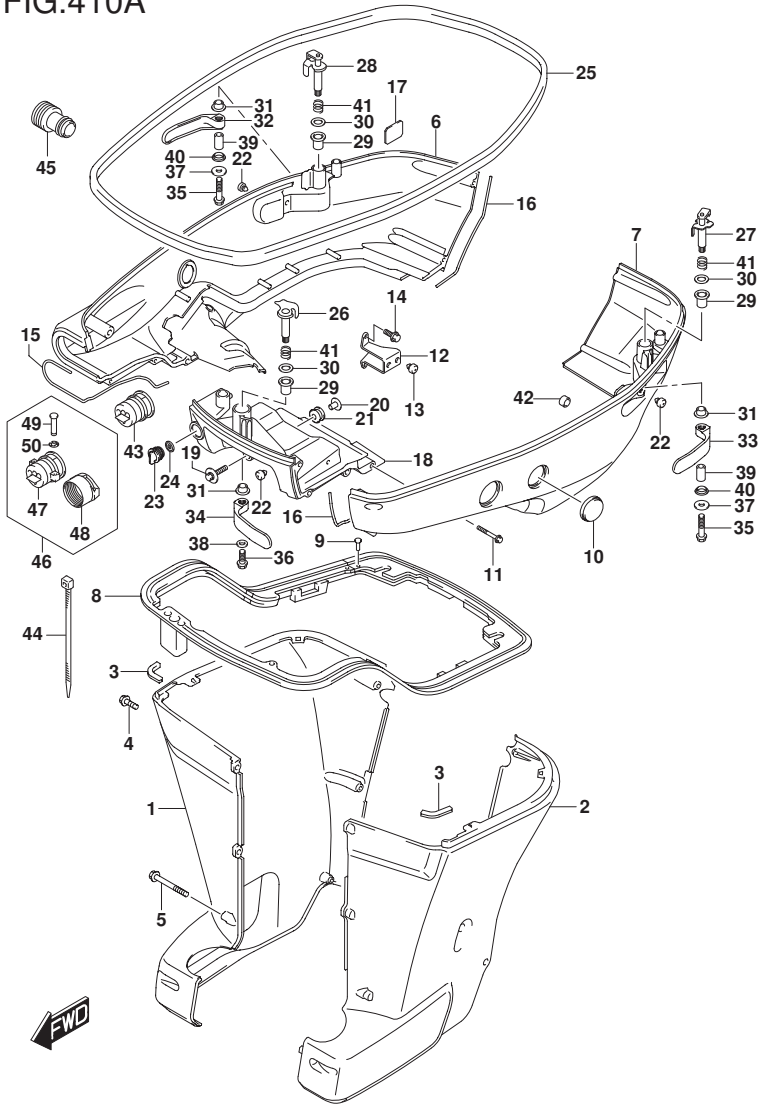


FIG.410A (1-G-6) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61131-93J01-0EP	COVER, OIL PAN STBD (BLACK)	1	
1-2	61131-93J01-Y5S	COVER, OIL PAN STBD (WHITE)	1	
2-1	61141-93J01-0EP	COVER, OIL PAN PORT (BLACK)	1	
2-2	61141-93J01-Y5S	COVER, OIL PAN PORT (WHITE)	1	
3	61137-93J00	CUSHION, OIL PAN COV UPPER	2	
4	09139-06135	SCREW (6X17)	5	
5	09139-06136	SCREW (6X65)	3	
6-1	61811-98J20-0EP	COVER, SIDE STBD (BLACK)	1	
6-2	61811-98J20-Y5S	COVER, SIDE STBD (WHITE)	1	
7-1	61821-98J10-0EP	COVER, SIDE PORT (BLACK)	1	
7-2	61821-98J10-Y5S	COVER, SIDE PORT (WHITE)	1	
8	61134-93J20	SEAL, SIDE COVER	1	
9	09409-05302-5PK	CLIP (BLACK)	2	
10	61817-93J00	PLUG, SIDE COVER	2	
11	09136-06148	SCREW (6X35)	10	
12	61827-93J02	HOLDER, SIDE COVER	1	
13	09321-10030	CUSHION	2	
14	01550-08167	BOLT	2	
15	61832-98J00	SEAL, FRONT PANEL STBD	1	
16	61812-98J00	SEAL, SIDE COVER	1	
17	61814-98J00	PROTECTOR, SIDE COVER	1	
18-1	61831-98J02-0EP	PANEL, FRONT (BLACK)	1	
18-2	61831-98J02-Y5S	PANEL, FRONT (WHITE)	1	
19	09116-08163	BOLT (8X38)	2	
20	09169-08039	WASHER	2	
21	09320-11013	CUSHION	2	
22	09321-10030	CUSHION	3	
23	17913-93J00	PLUG, WATER	1	
24	17914-93J00	GASKET, WATER PLUG	1	
25	61112-98J00	RUBBER, SIDE COVER	1	
26	61630-98J00	SHAFT, COVER HOOK (FRONT)	1	
27	63632-98J20	SHAFT, COVER HOOK (PORT)	1	
28	63632-98J30	SHAFT, COVER HOOK (STBD)	1	
29	09306-17002	BUSH	3	

FIG.410A


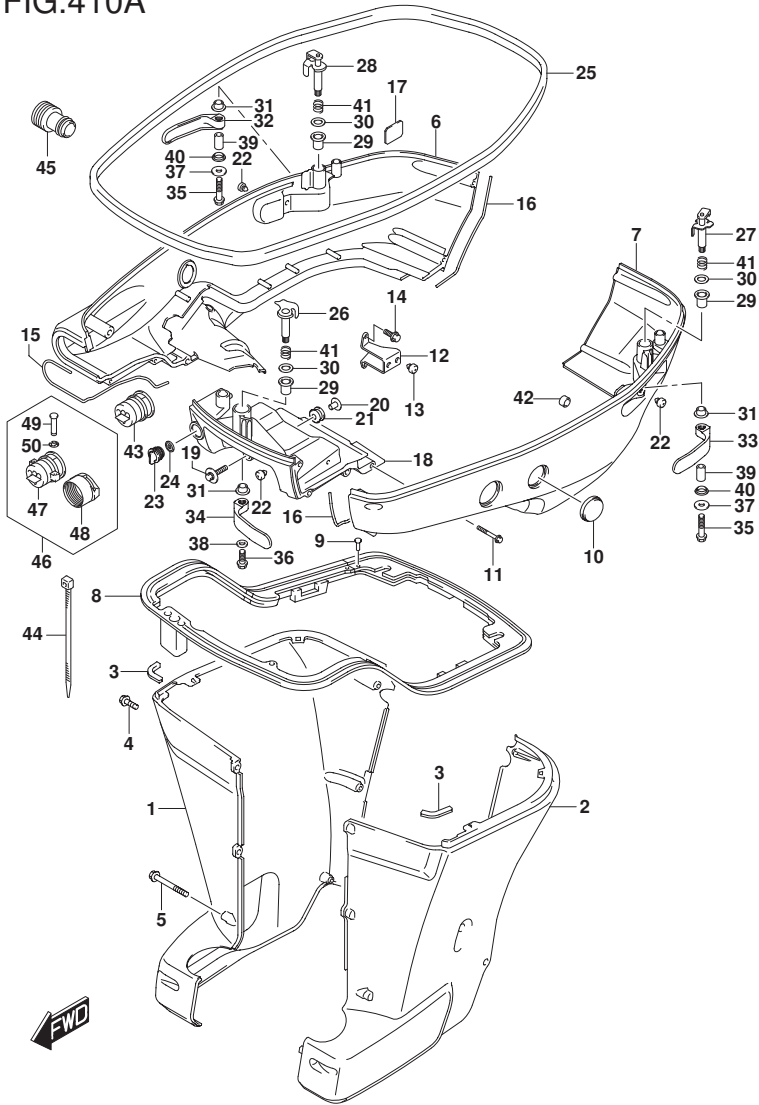


FIG.410A (1-G-7) SIDE COVER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	09160-17052	WASHER (17X30X3)	3	
31	61636-98J00	BUSH	3	
32-1	61633-98J10-0EP	LEVER, HOOK RR STBD (BLACK)	1	
32-2	61633-98J10-Y5S	LEVER, HOOK RR STBD (WHITE)	1	
33-1	61634-98J10-0EP	LEVER, HOOK RR PORT (BLACK)	1	
33-2	61634-98J10-Y5S	LEVER, HOOK RR PORT (WHITE)	1	
34-1	61645-98J00-0EP	LEVER, HOOK FRONT (BLACK)	1	
34-2	61645-98J00-Y5S	LEVER, HOOK FRONT (WHITE)	1	
35	29103-93J20	BOLT, HOOK LEVER (8X45) (STBD / PORT)	2	
36	29103-93J30	BOLT, HOOK LEVER (8X25) (FRONT)	1	
37	09160-08152	WASHER (8.5X28X1.5)	2	
38	09160-08082	WASHER (8.5X16X1.2)	1	
39	61635-98J00	SPACER	2	
40	61643-98J00	BUSH	2	
41	61658-98J00	SPRING, HOOK SHAFT	3	
42	09329-14002	CUSHION	1	
43-1	61124-98J10	GROMMET, REMOCON CABLE	1	UP TO VIN.610512 FOR DF250A UP TO VIN.611849 FOR DF300A
43-2	61124-98J20	GROMMET, REMOCON CABLE	1	FROM VIN.610513 FOR DF250A FROM VIN.611850 FOR DF300A
44	09407-25402	CLAMP (L:250)	1	
45	17917-87L00	CONNECTOR, FLUSH WATER	1	
46-1	67300-98J00	KIT, HOSE ADAPTER	1	OPT UP TO VIN.610512 FOR DF250A UP TO VIN.611849 FOR DF300A
46-2	67300-98J10	KIT, HOSE ADAPTER	1	OPT FROM VIN.610513 FOR DF250A FROM VIN.611850 FOR DF300A
47	61124-98J20	.GROMMET, R/CON CABLE	1	OPT UP TO VIN.610512 FOR DF250A UP TO VIN.611849 FOR DF300A
48	67361-90J10	.ADAPTER, HOSE (RIGGING)	1	OPT
49	09208-06009	.PIN	1	OPT
50	09383-04002	.E RING	1	OPT

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61400-98Y61-0EP	COVER SET, ENGINE (BLACK)	1	
1-2	61400-98Y71-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-98J10-0EP	.COVER, TOP (BLACK)	1	
2-2	61431-98J10-Y5S	.COVER, TOP (WHITE)	1	
3	61432-98J01	.LOUVER, AIR INTAKE	1	
4	61433-98J01	.GRIP, UPPER COVER STBD	1	
5	61434-98J02	.GRIP, UPPER COVER PORT	1	
6	61439-98J00	.SEAL, GRIP STBD	1	
7	61439-98J10	.SEAL, GRIP PORT	1	
8	61439-98J21	.SEAL, AIR VENT NO.2	1	
9	61476-98J00	.SEAL, AIR VENT NO.1	1	
10	01550-06167	.BOLT	2	
11	01550-06207	.BOLT	3	
12	01550-06167	.BOLT	3	
13	03542-06169	.BOLT	5	
14	01550-06167	.BOLT	4	
15	03542-06169	.BOLT	4	
16	61610-98J00	.FASTENER (FRONT)	1	
17	61610-98J30	.FASTENER (PORT)	1	
18	61610-98J40	.FASTENER (STBD)	1	
19	77811-54GC0-0PG	.EMBLEM "S" (CHROME)	1	
20	61614-98J00	.PROTECTOR, FASTENER	1	
21	61621-98J01	.BRACKET, FASTENER FRONT	1	
22	61624-98J10	.BRACKET, FASTENER PORT	1	
23	61625-98J10	.BRACKET, FASTENER STBD	1	
24	61619-98J00	.CUSHION, ENG COV FASTENER	3	
25	01547-06167	.BOLT	6	
26	01550-06127	.BOLT	1	
27	01550-06127	.BOLT	2	

Suzuki Precision Control



DF300A_E01_016

[illegible]

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	61400-98Y61-0EP	COVER SET, ENGINE (BLACK)	1	
1-2	61400-98Y71-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-98J10-0EP	.COVER, TOP (BLACK)	1	
2-2	61431-98J10-Y5S	.COVER, TOP (WHITE)	1	
3	61432-98J01	.LOUVER, AIR INTAKE	1	
4	61433-98J01	.GRIP, UPPER COVER STBD	1	
5	61434-98J02	.GRIP, UPPER COVER PORT	1	
6	61439-98J00	.SEAL, GRIP STBD	1	
7	61439-98J10	.SEAL, GRIP PORT	1	
8	61439-98J21	.SEAL, AIR VENT NO.2	1	
9	61476-98J00	.SEAL, AIR VENT NO.1	1	
10	01550-06167	.BOLT	2	
11	01550-06207	.BOLT	3	
12	01550-06167	.BOLT	3	
13	03542-06169	.BOLT	5	
14	01550-06167	.BOLT	4	
15	03542-06169	.BOLT	4	
16	61610-98J00	.FASTENER (FRONT)	1	
17	61610-98J30	.FASTENER (PORT)	1	
18	61610-98J40	.FASTENER (STBD)	1	
19	77811-54GC0-0PG	.EMBLEM "S" (CHROME)	1	
20	61614-98J00	.PROTECTOR, FASTENER	1	
21	61621-98J01	.BRACKET, FASTENER FRONT	1	
22	61624-98J10	.BRACKET, FASTENER PORT	1	
23	61625-98J10	.BRACKET, FASTENER STBD	1	
24	61619-98J00	.CUSHION, ENG COV FASTENER	3	
25	01547-06167	.BOLT	6	
26	01550-06127	.BOLT	1	
27	01550-06127	.BOLT	2	

FIG.420B


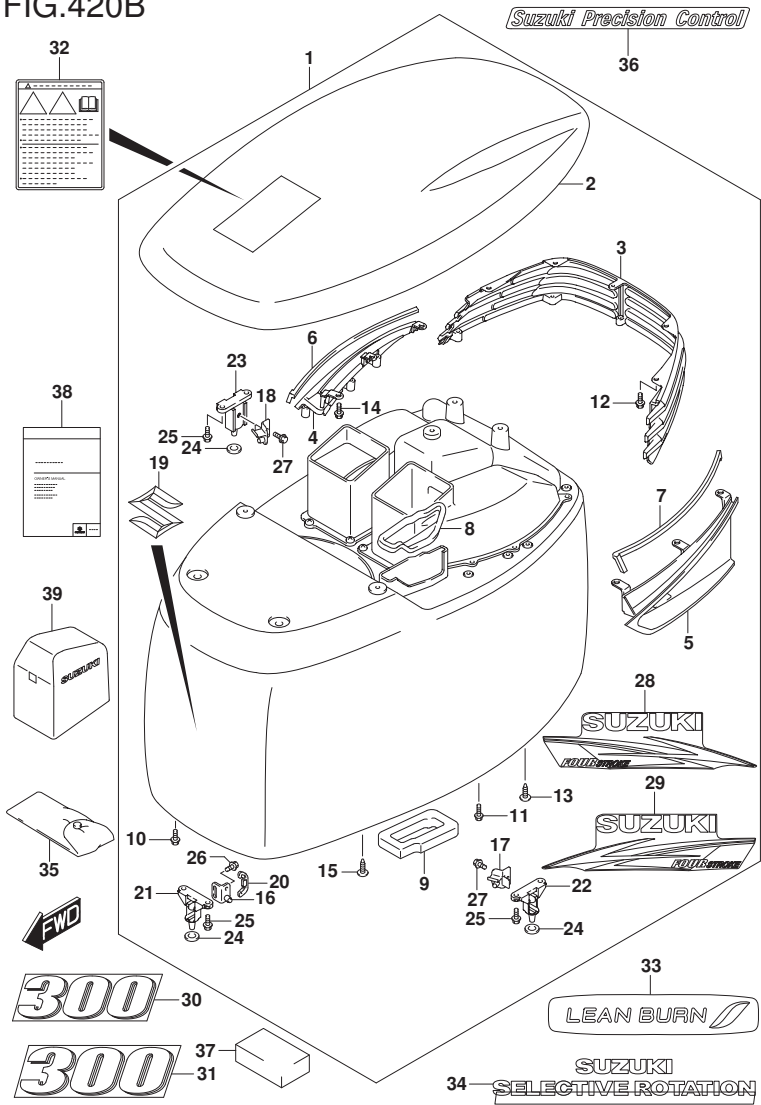


FIG.420B (1-G-11) ENGINE COVER (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28-1	61443-93J32	.STRIPE, ENGINE COVER STBD	1	
28-2	61443-93J40	.STRIPE, ENGINE COVER STBD (WHITE)	1	
29-1	61453-93J32	.STRIPE, ENGINE COVER PORT	1	
29-2	61453-93J40	.STRIPE, ENGINE COVER PORT (WHITE)	1	
30-1	61422-98J12	MARK, EMBLEM FRONT (300)	1	
30-2	61422-98J20	MARK, EMBLEM FRONT (300) (WHITE)	1	
31-1	61435-98J12	MARK, EMBLEM REAR (300)	1	
31-2	61435-98J20	MARK, EMBLEM REAR (300) (WHITE)	1	
32	61458-90J00	LABEL, ENGINE COVER	1	
33	61471-98J00	DECAL, LEAN BURN	1	
34-1	61473-98J00	DECAL (S.S.R.)	1	
34-2	61473-98J10	DECAL (S.S.R.) (WHITE)	1	
35	09800-81834	TOOL SET	1	
36-1	61446-96J20	DECAL (S.P.C.)	1	
36-2	61446-96J30	DECAL (S.P.C.) (WHITE)	1	
37	61425-98J00	CUSHION, ENGINE COVER	1	
38	99011-98J50-059	MANUAL, OWNER'S	1	
39	68110-98J00	COVER, WEATHER	1	OPT

FIG.420C

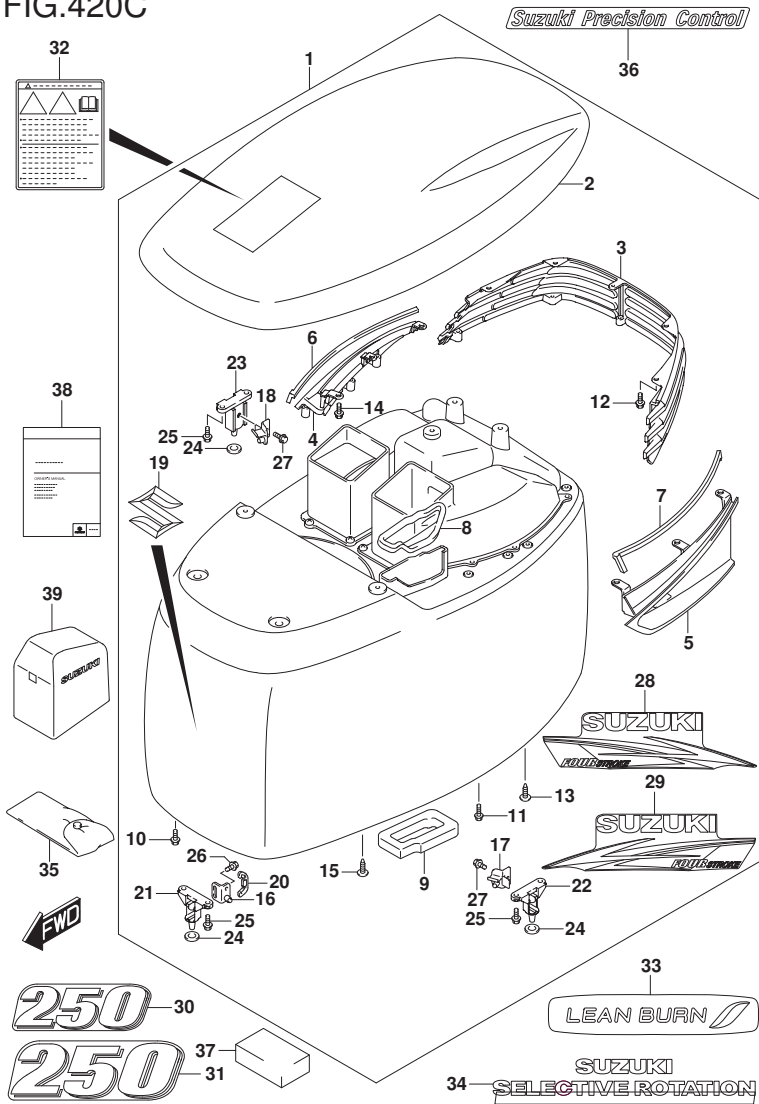

DF300A_E01_016_420C
ENGINE COVER

FIG.420C (1-G-12) ENGINE COVER (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-98Y61-0EP	COVER SET, ENGINE (BLACK)	1	
1-2	61400-98Y71-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-98J10-0EP	.COVER, TOP (BLACK)	1	
2-2	61431-98J10-Y5S	.COVER, TOP (WHITE)	1	
3	61432-98J01	.LOUVER, AIR INTAKE	1	
4	61433-98J01	.GRIP, UPPER COVER STBD	1	
5	61434-98J02	.GRIP, UPPER COVER PORT	1	
6	61439-98J00	.SEAL, GRIP STBD	1	
7	61439-98J10	.SEAL, GRIP PORT	1	
8	61439-98J21	.SEAL, AIR VENT NO.2	1	
9	61476-98J00	.SEAL, AIR VENT NO.1	1	
10	01550-06167	.BOLT	2	
11	01550-06207	.BOLT	3	
12	01550-06167	.BOLT	3	
13	03542-06169	.BOLT	5	
14	01550-06167	.BOLT	4	
15	03542-06169	.BOLT	4	
16	61610-98J00	.FASTENER (FRONT)	1	
17	61610-98J30	.FASTENER (PORT)	1	
18	61610-98J40	.FASTENER (STBD)	1	
19	77811-54GC0-0PG	.EMBLEM "S" (CHROME)	1	
20	61614-98J00	.PROTECTOR, FASTENER	1	
21	61621-98J01	.BRACKET, FASTENER FRONT	1	
22	61624-98J10	.BRACKET, FASTENER PORT	1	
23	61625-98J10	.BRACKET, FASTENER STBD	1	
24	61619-98J00	.CUSHION, ENG COV FASTENER	3	
25	01547-06167	.BOLT	6	
26	01550-06127	.BOLT	1	
27	01550-06127	.BOLT	2	

FIG.420C

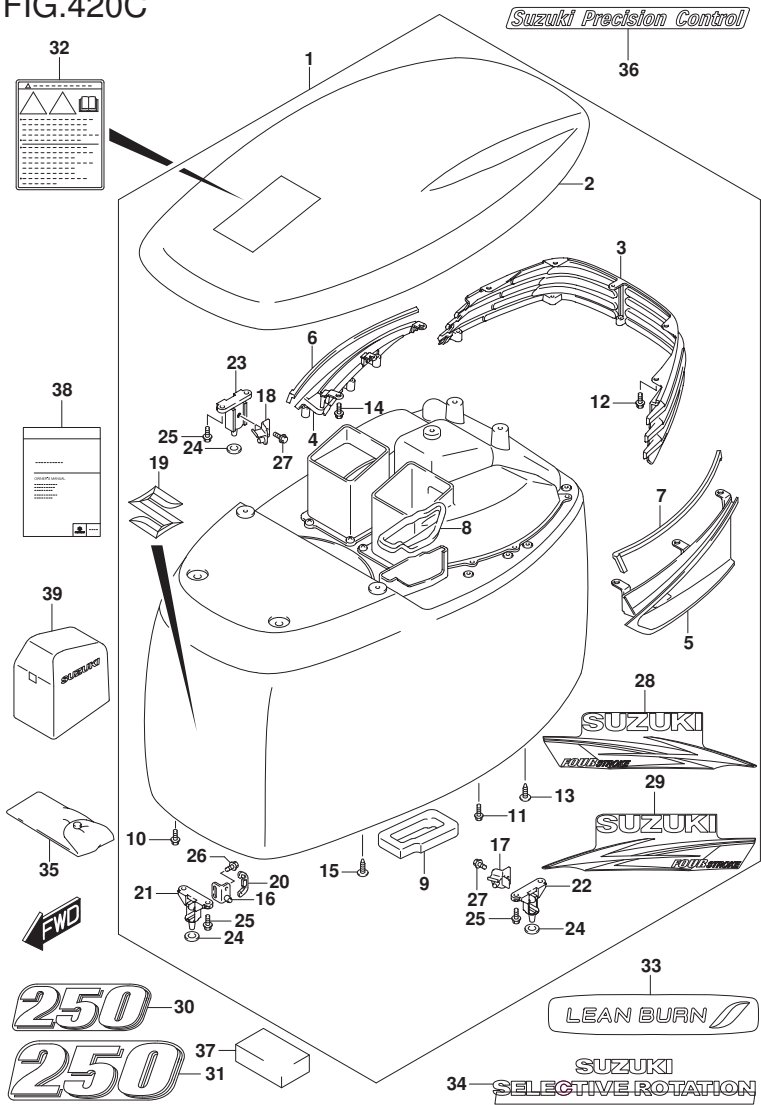


FIG.420C (1-G-13) ENGINE COVER (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28-1	61443-93J32	.STRIPE, ENGINE COVER STBD	1	
28-2	61443-93J40	.STRIPE, ENGINE COVER STBD (WHITE)	1	
29-1	61453-93J32	.STRIPE, ENGINE COVER PORT	1	
29-2	61453-93J40	.STRIPE, ENGINE COVER PORT (WHITE)	1	
30-1	61422-93J72	MARK, EMBLEM FRONT (250)	1	
30-2	61422-93J80	MARK, EMBLEM FRONT (250) (WHITE)	1	
31-1	61435-93J52	MARK, EMBLEM REAR (250)	1	
31-2	61435-93J60	MARK, EMBLEM REAR (250) (WHITE)	1	
32	61458-90J00	LABEL, ENGINE COVER	1	
33	61471-98J00	DECAL, LEAN BURN	1	
34-1	61473-98J00	DECAL (S.S.R.)	1	
34-2	61473-98J10	DECAL (S.S.R.) (WHITE)	1	
35	09800-81834	TOOL SET	1	
36-1	61446-96J20	DECAL (S.P.C.)	1	
36-2	61446-96J30	DECAL (S.P.C.) (WHITE)	1	
37	61425-98J00	CUSHION, ENGINE COVER	1	
38-1	99011-98J50-054	MANUAL, OWNER'S	1	
38-2	99011-98J50-059	MANUAL, OWNER'S	1	
39	68110-98J00	COVER, WEATHER	1	OPT

FIG.420D

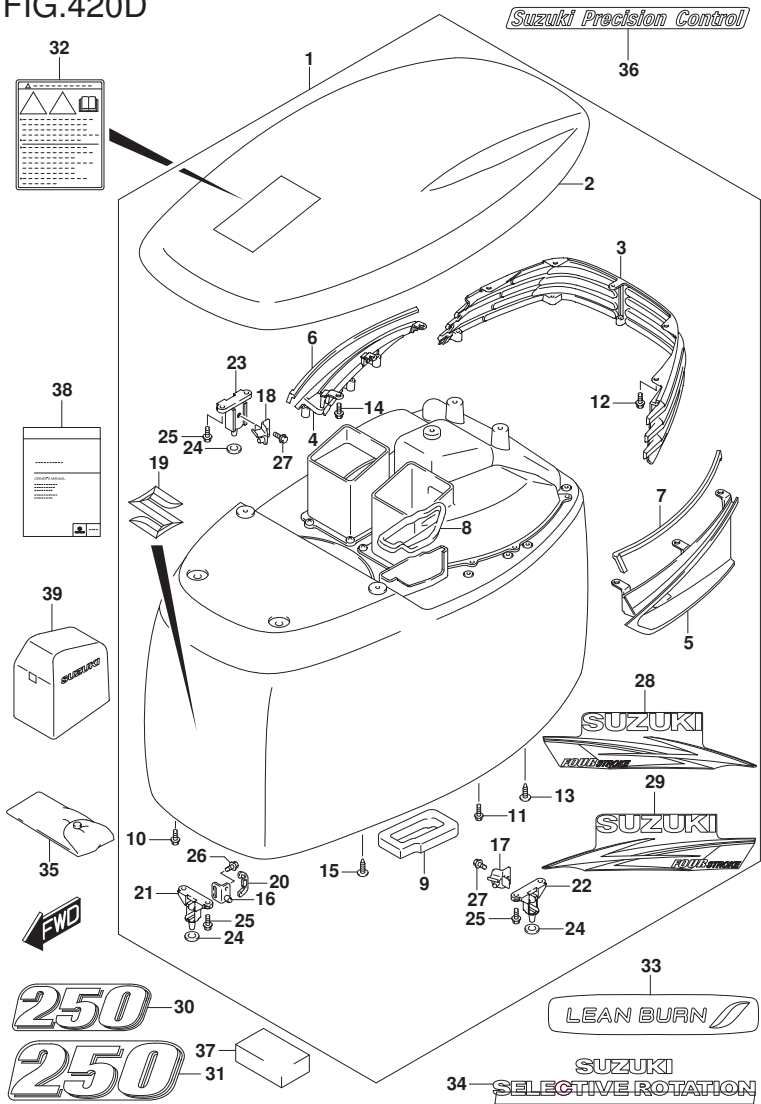


FIG.420D (1-G-14) ENGINE COVER (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	61400-98Y61-0EP	COVER SET, ENGINE (BLACK)	1	
1-2	61400-98Y71-Y5S	COVER SET, ENGINE (WHITE)	1	
2-1	61431-98J10-0EP	.COVER, TOP (BLACK)	1	
2-2	61431-98J10-Y5S	.COVER, TOP (WHITE)	1	
3	61432-98J01	.LOUVER, AIR INTAKE	1	
4	61433-98J01	.GRIP, UPPER COVER STBD	1	
5	61434-98J02	.GRIP, UPPER COVER PORT	1	
6	61439-98J00	.SEAL, GRIP STBD	1	
7	61439-98J10	.SEAL, GRIP PORT	1	
8	61439-98J21	.SEAL, AIR VENT NO.2	1	
9	61476-98J00	.SEAL, AIR VENT NO.1	1	
10	01550-06167	.BOLT	2	
11	01550-06207	.BOLT	3	
12	01550-06167	.BOLT	3	
13	03542-06169	.BOLT	5	
14	01550-06167	.BOLT	4	
15	03542-06169	.BOLT	4	
16	61610-98J00	.FASTENER (FRONT)	1	
17	61610-98J30	.FASTENER (PORT)	1	
18	61610-98J40	.FASTENER (STBD)	1	
19	77811-54GC0-0PG	.EMBLEM "S" (CHROME)	1	
20	61614-98J00	.PROTECTOR, FASTENER	1	
21	61621-98J01	.BRACKET, FASTENER FRONT	1	
22	61624-98J10	.BRACKET, FASTENER PORT	1	
23	61625-98J10	.BRACKET, FASTENER STBD	1	
24	61619-98J00	.CUSHION, ENG COV FASTENER	3	
25	01547-06167	.BOLT	6	
26	01550-06127	.BOLT	1	
27	01550-06127	.BOLT	2	

FIG.420D

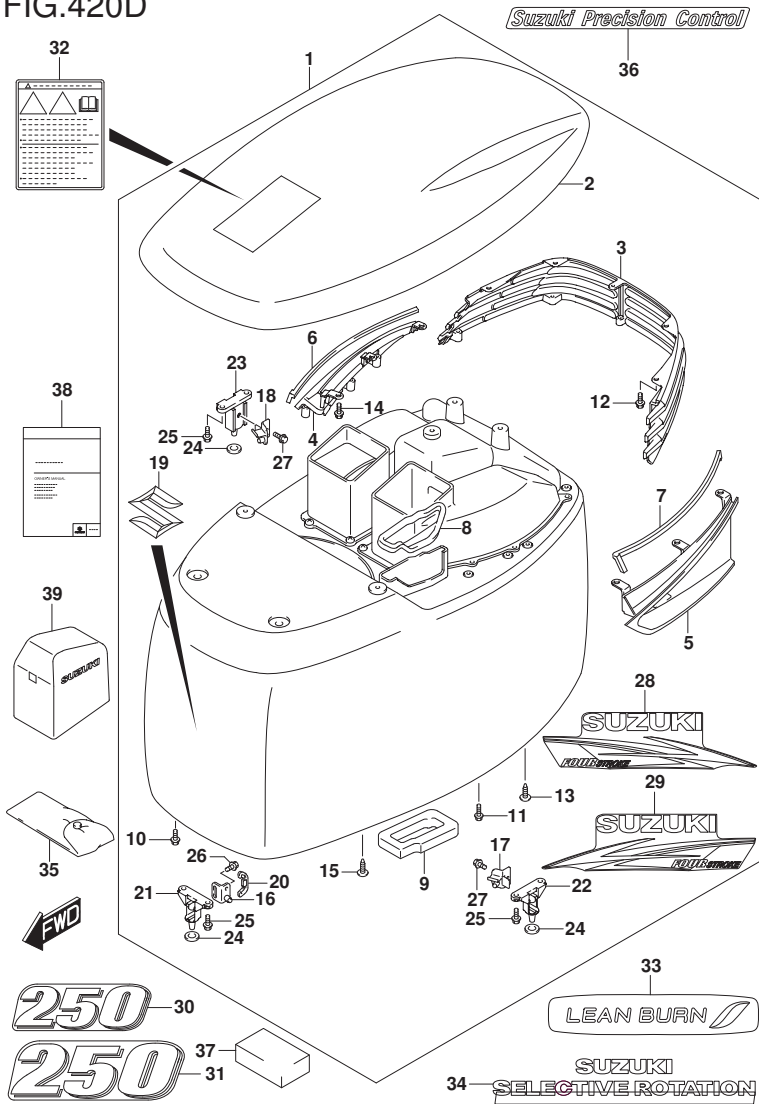


FIG.420D (1-G-15) ENGINE COVER (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
28-1	61443-93J32	.STRIPE, ENGINE COVER STBD	1	
28-2	61443-93J40	.STRIPE, ENGINE COVER STBD (WHITE)	1	
29-1	61453-93J32	.STRIPE, ENGINE COVER PORT	1	
29-2	61453-93J40	.STRIPE, ENGINE COVER PORT (WHITE)	1	
30-1	61422-93J72	MARK, EMBLEM FRONT (250)	1	
30-2	61422-93J80	MARK, EMBLEM FRONT (250) (WHITE)	1	
31-1	61435-93J52	MARK, EMBLEM REAR (250)	1	
31-2	61435-93J60	MARK, EMBLEM REAR (250) (WHITE)	1	
32	61458-90J00	LABEL, ENGINE COVER	1	
33	61471-98J00	DECAL, LEAN BURN	1	
34-1	61473-98J00	DECAL (S.S.R.)	1	
34-2	61473-98J10	DECAL (S.S.R.) (WHITE)	1	
35	09800-81834	TOOL SET	1	
36-1	61446-96J20	DECAL (S.P.C.)	1	
36-2	61446-96J30	DECAL (S.P.C.) (WHITE)	1	
37	61425-98J00	CUSHION, ENGINE COVER	1	
38	99011-98J50-059	MANUAL, OWNER'S	1	
39	68110-98J00	COVER, WEATHER	1	OPT

FIG.430A

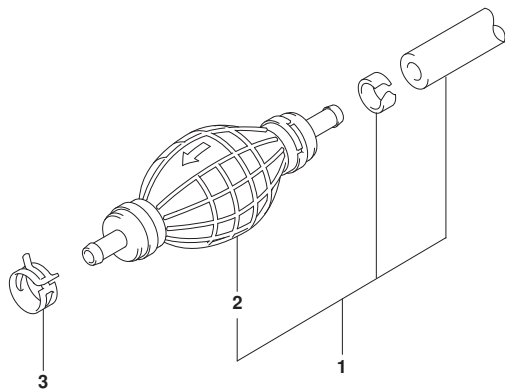


FIG.430A (1-H-2) FUEL HOSE (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65700-93J10	HOSE, FUEL (TANK TO ENGINE)	1	
2	65770-93J11	.PUMP, SQUEEZE	1	
3	09401-13423	CLIP	1	

FIG.430B

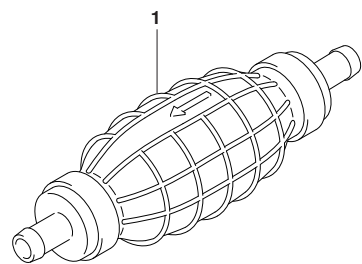


FIG.430B (1-H-3) FUEL HOSE (DF300A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65770-93J11	PUMP, SQUEEZE	1	

FIG.430C

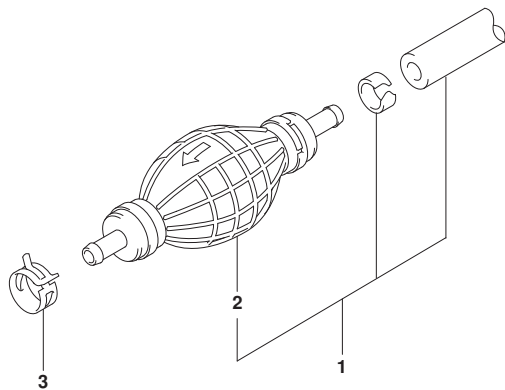


FIG.430C (1-H-4) FUEL HOSE (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65700-93J10	HOSE, FUEL (TANK TO ENGINE)	1	
2	65770-93J11	.PUMP, SQUEEZE	1	
3	09401-13423	CLIP	1	

FIG.430D

FIG.430D (1-H-5) FUEL HOSE (DF250A E40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65770-93J11	PUMP, SQUEEZE	1	


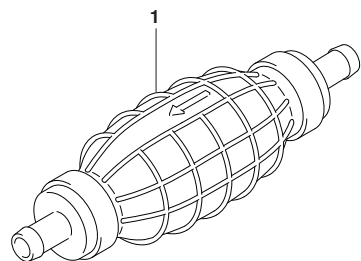


FIG.502A

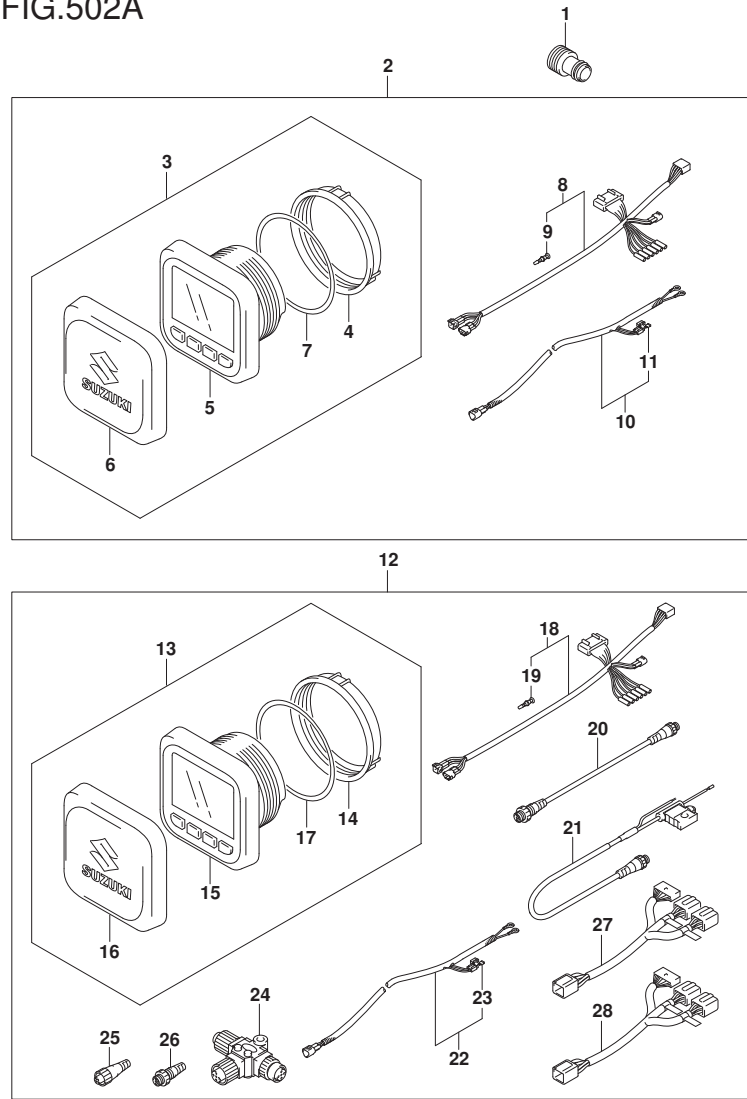

DF300A_E01_016_502A
OPT:METER (1)

FIG.502A (1-H-6) OPT:METER (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17917-87L00	CONNECTOR, FLUSH WATER	1	
2	34000-96L20	KIT, SINGLE GAUGE ELECTRIC	1	
3	34011-96L00	.GAUGE ASSY, MULTI	1	
4	34112-96L00	..NUT, GAUGE	1	
5	34193-96L00	..BEZEL, GAUGE	1	
6	34211-96L00	..COVER, GAUGE	1	
7	34825-96L00	..PACKING, GAUGE	1	
8	36661-96L00	..ADAPTER, GAUGE	1	
9	36615-96300	..TERMINAL, RESIN	5	
10	36663-98J10	.WIRE, GAUGE POWER	1	
11	09481-05501	..FUSE (5A)	1	
12	34000-96L30	KIT, DUAL GAUGE ELECTRIC	1	
13	34011-96L00	.GAUGE ASSY, MULTI	1	
14	34112-96L00	..NUT, GAUGE	1	
15	34193-96L00	..BEZEL, GAUGE	1	
16	34211-96L00	..COVER, GAUGE	1	
17	34825-96L00	..PACKING, GAUGE	1	
18	36661-96L00	..ADAPTER, GAUGE	1	
19	36615-96300	..TERMINAL, RESIN	5	
20	36662-88L10	.WIRE, 2 EXTENSION	2	
21	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
22	36663-98J10	.WIRE, GAUGE POWER	1	
23	09481-05501	..FUSE (5A)	1	
24	36664-88L00	.CONNECTOR, BRANCH	2	
25	36665-88L00	.UNIT, RESISTOR FEMALE	1	
26	36665-88L10	.UNIT, RESISTOR MALE	1	
27	36667-96L00	.WIRE, GAUGE ADAPTER	1	
28	36667-96L10	WIRE, DUAL GAUGE ADAPTER	1	

DF300A_E01_016

FIG.503A


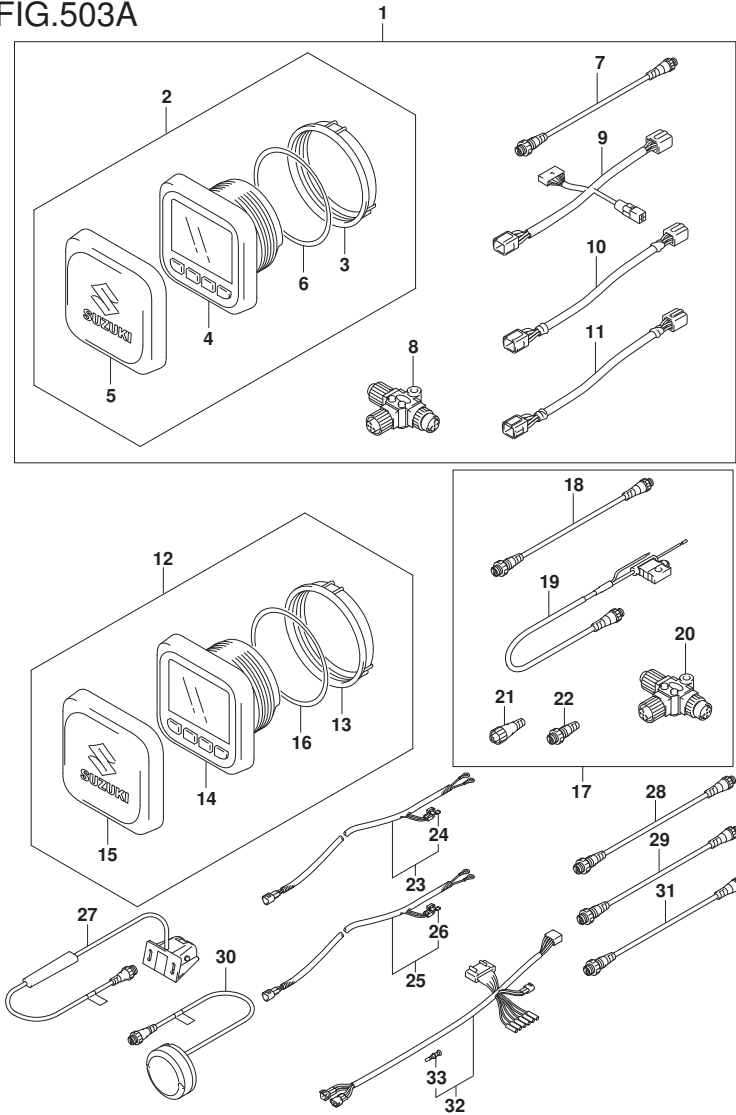


FIG.503A (1-H-7) OPT:METER (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	34002-96L00	KIT, DUAL STATION	1	
2	34011-96L00	.SET, MULTI GAUGE	1	
3	34112-96L00	.NUT, GAUGE	1	
4	34193-96L00	.BEZEL, GAUGE	1	
5	34211-96L00	.COVER, GAUGE	1	
6	34825-96L00	.PACKING, GAUGE	1	
7	36662-88L10	.WIRE, 2 EXTENSION	1	
8	36664-88L00	.CONNECTOR, BRANCH	1	
9	36665-96L00	ADAPTER, DUAL STATION	1	
10	36666-96L00	ADAPTER, GAUGE POWER	1	
11	36682-92E00	.WIRE, GAUGE EXT	1	
12	34011-96L00	SET, MULTI GAUGE	1	
13	34112-96L00	.NUT, GAUGE	1	
14	34193-96L00	.BEZEL, GAUGE	1	
15	34211-96L00	.COVER, GAUGE	1	
16	34825-96L00	.PACKING, GAUGE	1	
17	36001-88L00	SET, WIRE	1	
18	36662-88L10	.WIRE, 2 EXTENSION	1	
19	36663-88L00	.HARNESS ASSY, NETWORK POWER	1	
20	36664-88L00	.CONNECTOR, BRANCH	1	
21	36665-88L00	.UNIT, RESISTOR FEMALE	1	
22	36665-88L10	.UNIT, RESISTOR MALE	1	
23	36663-98J00	WIRE, GAUGE POWER	1	L:2500
24	09481-05501	.FUSE (5A)	1	
25	36663-98J10	WIRE, GAUGE POWER	1	L:6000
26	09481-05501	.FUSE (5A)	1	
27	34190-88L00	SENSOR ASSY, PAD WHEEL	1	
28	36662-88L20	WIRE, 6 EXTENSION	1	
29	36662-88L30	WIRE, 15 EXTENSION	1	
30	39950-88L01	MODULE ASSY, GPS RECEIVER	1	
31	36662-88L00	WIRE, 25 EXTENSION	1	
32	36661-96L00	ADAPTER, GAUGE	1	
33	36615-96300	.TERMINAL, RESIN	5	

FIG.520A

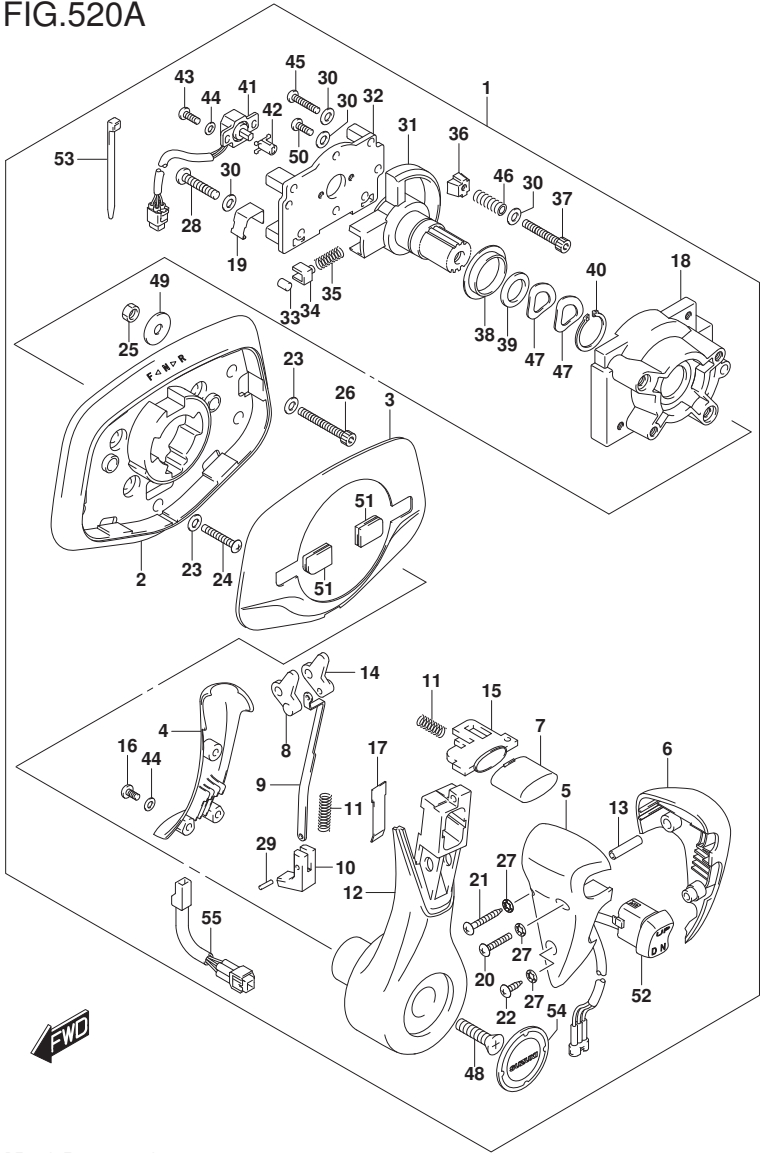

DF300A_E01_016_520A
OPT:FLUSH MOUNT REMOCON

FIG.520A (1-H-8) OPT:FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J22	REMOCON ASSY, FLUSH MOUNT	1	
2	67271-98J20	.COVER, BOTTON BASE	1	
3	67264-98J00	.COVER, TOP BASE	1	
4	67263-98J20	.COVER, LEVER	1	
5	67261-98J20	.GRIP, A	1	
6	67261-98J30	.GRIP, B	1	
7	67265-98J00	.BUTTON, NEUTRAL LOCK	1	
8	67255-98J00	.LINK, NEUTRAL LOCK NO.1	1	
9	67258-98J00	.PLATE, JOINT	1	
10	67256-98J00	.BLOCK, NEUTRAL LOCK	1	
11	67259-98J00	.SPRING	3	
12	67251-98J20	.LEVER, HANDLE	1	
13	67294-98J00	.SPACER	1	
14	67254-98J00	.LINK, NEUTRAL LOCK NO.2	1	
15	67233-98J00	.SLIDER, NEUTRAL BUTTON	1	
16	67296-98JA0	.SCREW (4X10)	3	
17	67234-98J00	.PLATE, LEVER	1	
18	67211-98J20	.HOUSING	1	
19	67269-98J20	.CLAMP, LEAD	1	
20	67296-98JB0	.SCREW (4X30)	1	
21	67227-98J20	.SCREW, TAPPING (4X35)	1	
22	67227-98J30	.SCREW, TAPPING (4X20)	1	
23	67288-98J50	.WASHER, PLANE	8	
24	67296-98JC0	.SCREW (6X40)	4	
25	67287-98J00	.NUT	4	
26	67226-98J10	.BOLT (6X50)	4	
27	67288-98J60	.WASHER, ININTERNAL TOOTH (M4)	3	
28	67296-98JD0	.SCREW (5X40)	1	
29	67238-98J00	.PIN	2	
30	67288-98J70	.WASHER, PLANE	5	
31	67246-98J00	.SHAFT, DRIVE REMOCON	1	
32	67222-98J00	.PANEL ASSY, BACK	1	
33	67236-98J00	.ROLLER, DETENT	1	
34	67235-98J00	.GUIDE, DETENT ROLLER	1	

FIG.520A

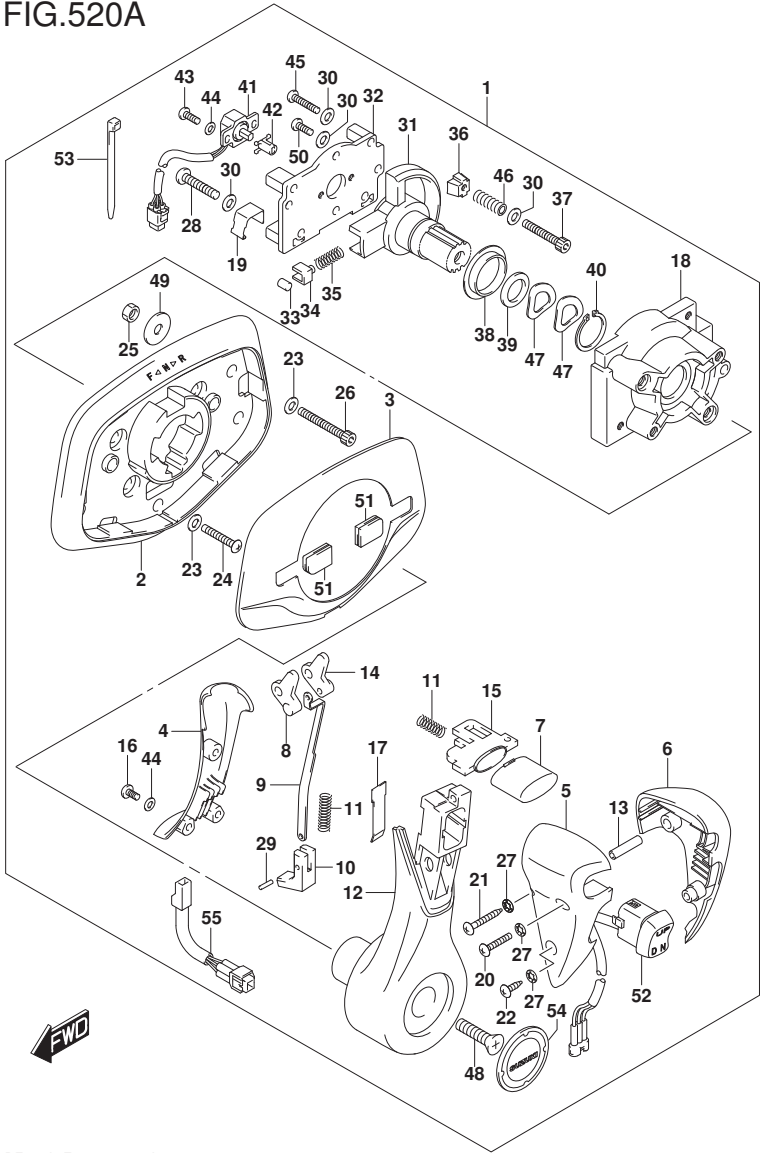


FIG.520A (1-H-9) OPT:FLUSH MOUNT REMOCON

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67237-98J00	.SPRING, DETENT	1	
36	67223-98J00	.PAD, BRAKE	1	
37	67296-98JE0	.SCREW, ADJUST (5X35)	1	
38	67252-98J00	.BUSH, DRIVE	1	
39	67288-98J20	.WASHER, PLANE	1	
40	67292-98J00	.C RING	1	
41	15980-98J00	.POTENTIOMETER	1	
42	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
43	67296-94300	.SCREW (4X10)	2	
44	67288-98J00	.WASHER, PLANE	5	
45	67296-98J10	.SCREW (5X35)	1	
46	67288-98J10	.WASHER, SPRING	8	
47	67228-98J50	.WASHER, WAVE	2	
48	67296-98J60	.SCREW (8X30)	1	
49	09160-06104	.WASHER (6.5X24X2)	4	
50	67296-98J50	.SCREW (5X18)	2	
51	67272-98J00	.GROMMET	2	
52	37850-98J02	.SWITCH ASSY, PTT	1	
53	67269-98J10	.BAND	1	
54	68165-98J00	.MARK, LEVER (SUZUKI)	1	
55	36890-98J00	.CONDENSER, ADAPTER HARNESS	1	

FIG.522A

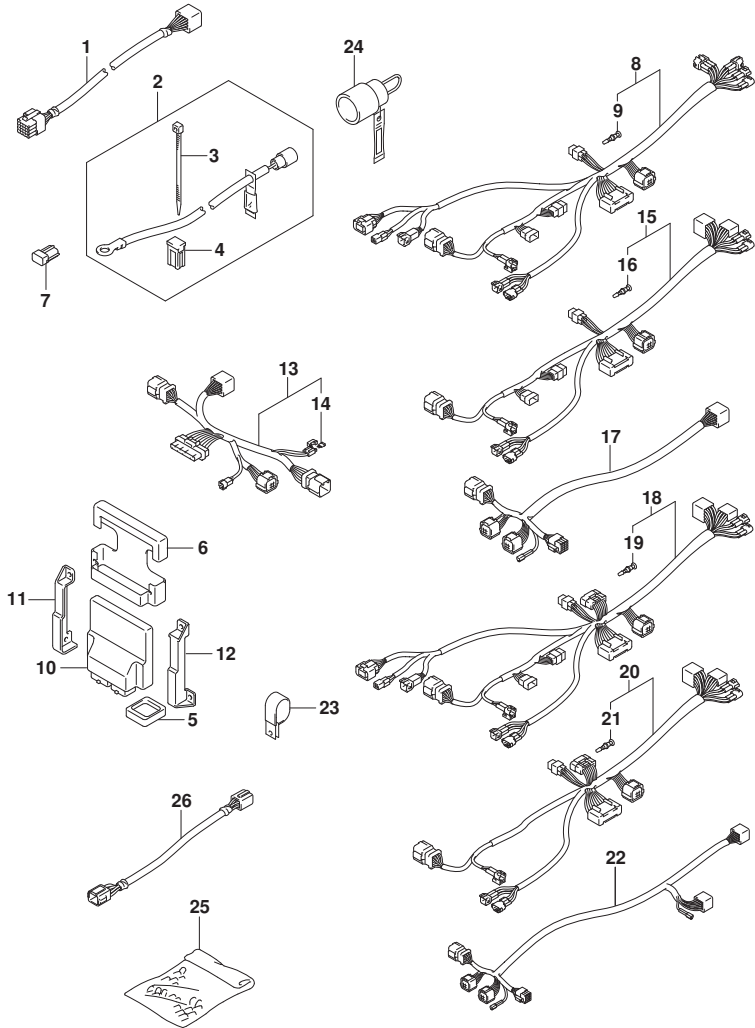


FIG.522A (1-H-10) OPT:HARNESS (1)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36620-98J50	WIRE ASSY, REMOCON EXTENSION	1	
2	33830-98J11	SET, BATTERY ISOLATOR LEAD	1	
3	09407-10404	.CLAMP (L:100)	2	
4	09481-40401	.FUSE (40A)	1	
5	33911-88BL0	CAP, BCM CONNECTOR	1	
6	33925-93J00	CUSHION, BCM	1	
7	33926-98J00	RESISTOR, TERMINAL	2	
8	36623-98J20	HARNESS ASSY, BCM NO.1 FOR SNGL	1	
9	36615-96300	.TERMINAL RESIN	4	
10-1	36770-98J10	CONTROLLER ASSY, BOAT ELECTRIC	1	
10-2	36770-98J20	CONTROLLER, BOAT ELEC QUADRUPL	2	
11	36775-98J00	HOLDER, BCM (L)	AR	
12	36776-98J00	HOLDER, BCM (R)	AR	
13	36622-98J00	HARNESS ASSY, DUAL STATION MAIN	AR	
14	09481-10501	.FUSE (10A)	1	
15	36624-98J02	HARNESS ASSY, BCM NO.2 FOR SNGL	1	
16	36615-96300	.TERMINAL, RESIN	2	
17	36621-98J00	HARNESS ASSY, DUAL ENGINE	1	
18	36623-98J30	HARNESS ASSY, BCM NO.1 FOR MULT	1	
19	36615-96300	.TERMINAL, RESIN	5	
20	36624-98J11	HARNESS ASSY, BCM NO.2 FOR MULT	1	
21	36615-96300	.TERMINAL, RESIN	2	
22	36621-98J10	HARNESS ASSY, TRIPLE ENGINE	1	
23	09403-13402	CLAMP (ID:13)	AR	
24-1	36612-98J01	CONNECTOR, COUNTER SELECT (GREEN)	1	
24-2	36612-98J20	CONNECTOR, COUNTER SELECT (WHITE)	1	
25	36990-87D00	TERIMINAL SET, WITH SLEEVE	1	
26	36682-92E00	WIRE, TRIM METER EXT (L:6500)	1	

FIG.523A


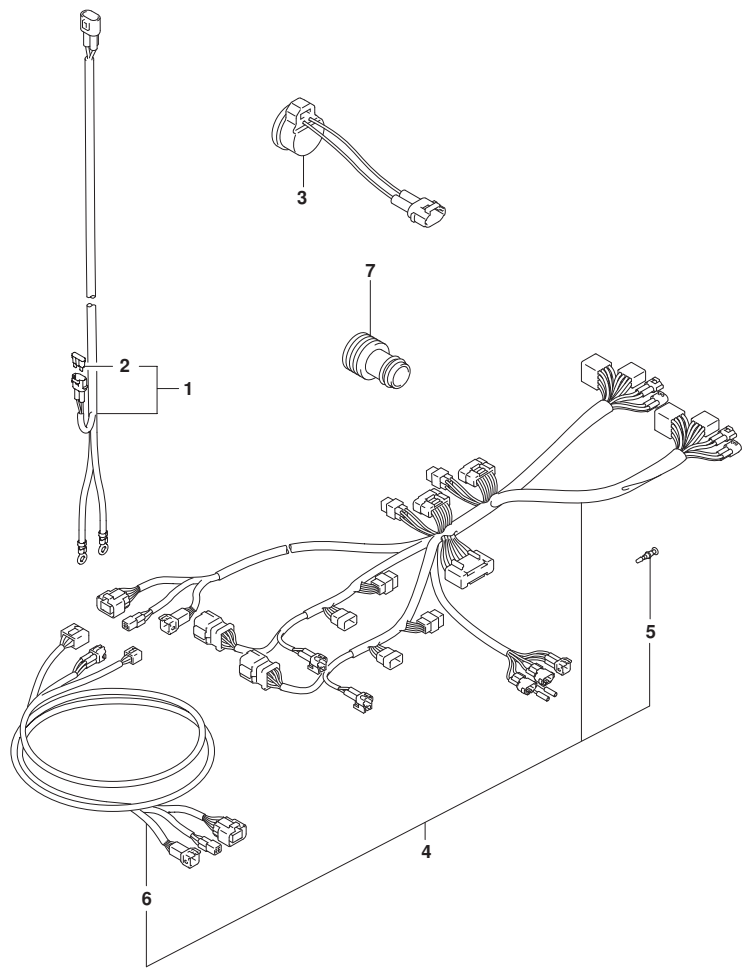


FIG.523A (1-H-11) OPT:HARNESS (2)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36625-98J10	WIRE ASSY, BATTERY	2	
2	09481-30501	.FUSE (30A)	2	
3	38500-93J90	BUZZER, WARNING	1	
4	36623-98J40	HARNESS ASSY, BCM QUADRUPLE	1	
5	36615-96300	.TERMINAL	8	
6	36627-98J00	.HARNESS COMP, R/CON EXTENSION	1	
7	17917-87L00	CONNECTOR, FLUSH WATER	1	

FIG.530A

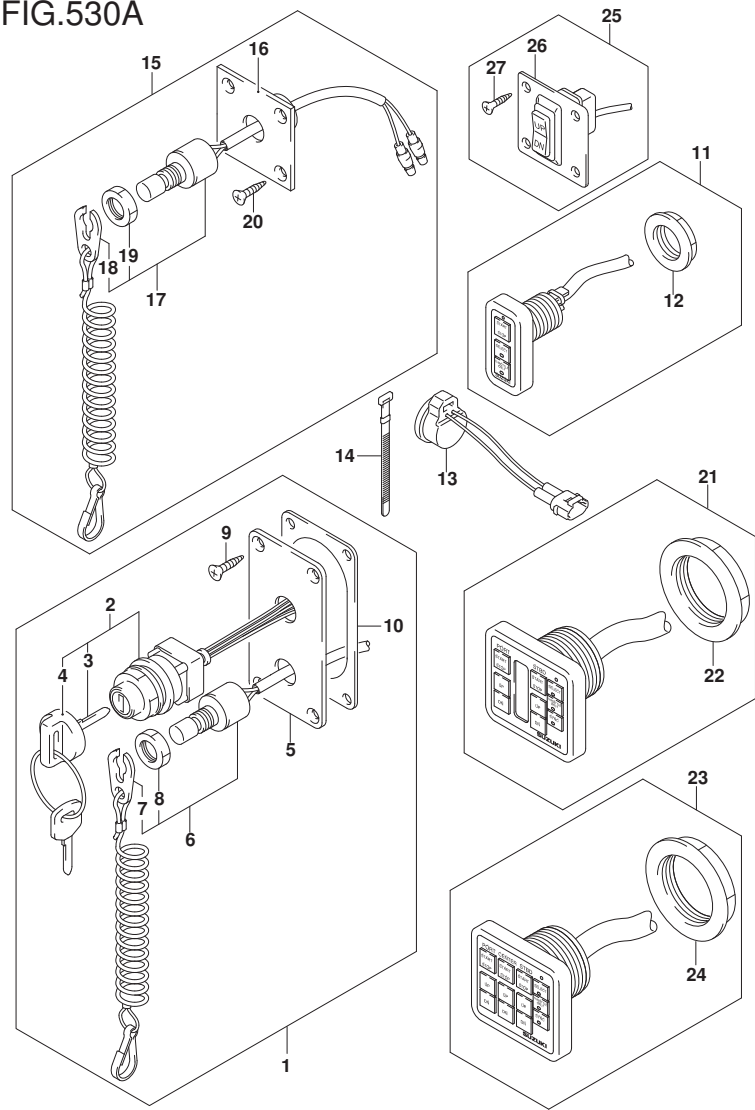


DF300A_E01_016_530A
OPT:SWITCH

FIG.530A (1-H-12) OPT:SWITCH

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-98J04	PANEL ASSY, MAIN SW	1	
2	37110-98J01	..SWITCH ASSY, MAIN	1	
3-1	37141-99EA0	..KEY (941)	1	
3-2	37141-99EB0	..KEY (942)	1	
3-3	37141-99E00	..KEY (931)	1	
3-4	37141-99E10	..KEY (932)	1	
3-5	37141-99E20	..KEY (933)	1	
3-6	37141-99E30	..KEY (934)	1	
3-7	37141-99E40	..KEY (935)	1	
3-8	37141-99E50	..KEY (936)	1	
3-9	37141-99E60	..KEY (937)	1	
3-10	37141-99E70	..KEY (938)	1	
3-11	37141-99E80	..KEY (939)	1	
3-12	37141-99E90	..KEY (940)	1	
4	37143-99E00	..CAP, KEY	1	
5	37139-98J00	..PANEL, MAIN SW	1	
6	37820-93J04	..SWITCH ASSY, EMERGENCY STOP	1	
7	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
8	37826-92J00	..NUT	1	
9	03122-05165	..SCREW	4	
10	37114-98J00	..SHEET, MAIN SW PANEL	1	
11	37100-98J11	PANEL ASSY, SINGLE	1	
12	37112-98J00	..NUT	1	
13	38500-93J90	BUZZER ASSY, WARNING	1	
14	09407-08401	CLAMP (L:80)	AR	
15	37803-93J04	PANEL ASSY, EMERGENCY SW	1	
16	37825-99E00	..PANEL, EMERGENCY STOP SW	1	
17	37820-93J04	..SWITCH ASSY, EMERGENCY STOP	1	
18	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
19	37826-92J00	..NUT	1	
20	03122-05165	..SCREW	4	

FIG.530A

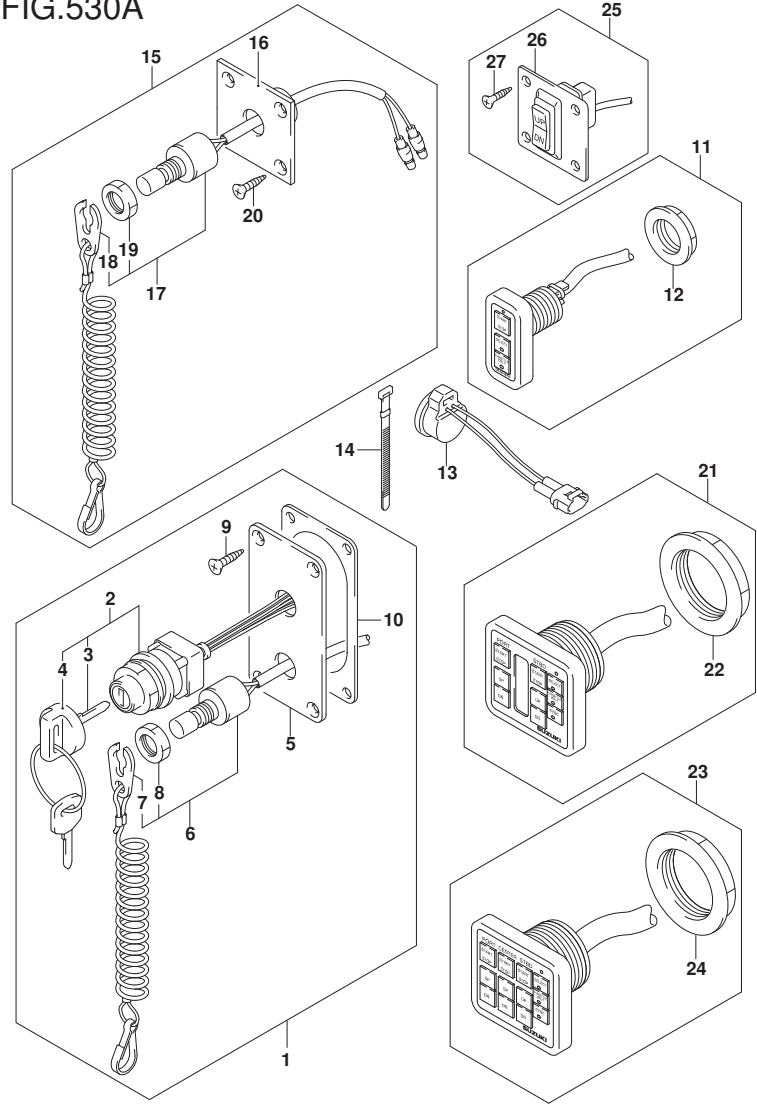

DF300A_E01_016_530A
OPT:SWITCH

FIG.530A (1-H-13) OPT:SWITCH

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	37100-98J21	PANEL ASSY, DUAL	1	
22	37112-98J10	.NUT	1	
23	37100-98J31	PANEL ASSY, TRIPLE	1	
24	37112-98J10	.NUT	1	
25	37860-87L00	PANEL ASSY, TROLLING CTR SW	1	
26	37862-87L00	.PANEL	1	
27	09131-05004	.SCREW (5X16)	4	

FIG.535A

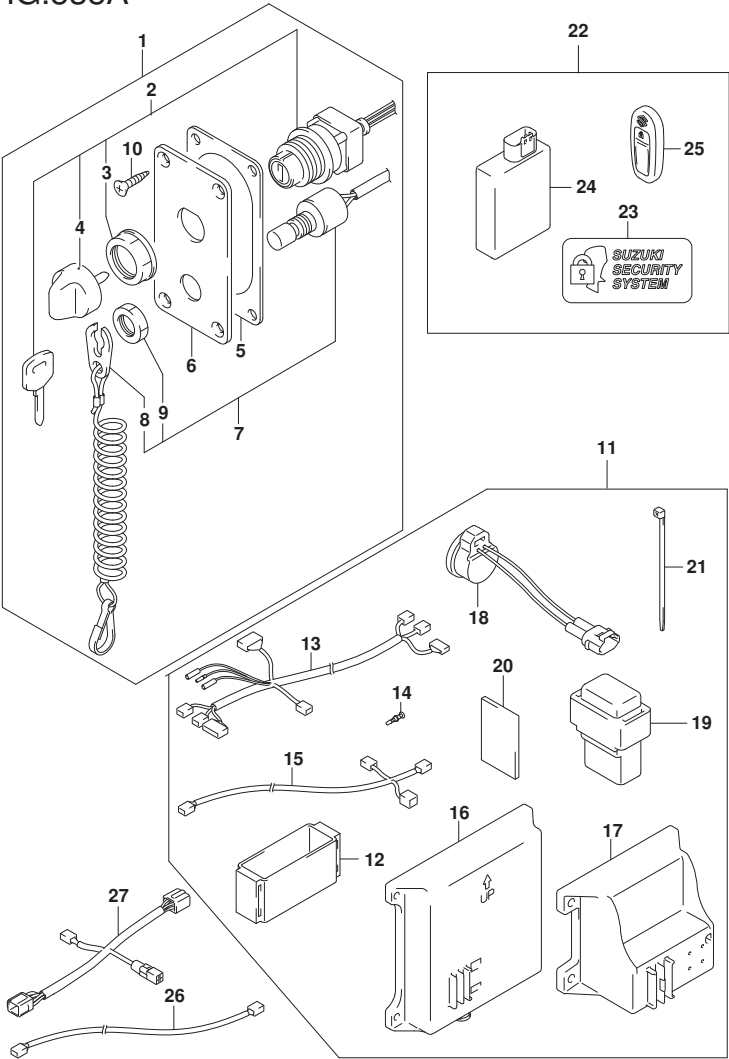


FIG.535A (1-H-14) OPT:KEY LESS START (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37100-96L00	PANEL ASSY, MAIN SWITCH KLS	1	
2	37110-96L00	..SWITCH ASSY, MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
4	37143-96L00	..KNOB, MAIN SWITCH	1	
5	37114-98J00	..SHEET, MAIN SWITCH PANEL	1	
6	37139-96L00	..PANEL, MAIN SWITCH	1	
7	37820-93J04	..SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
9	37826-92J00	..NUT	1	
10	03122-05165	..SCREW	4	
11-1	37105-96L00	HARNESS SET, KLS CONTROLLER	1	UP TO VIN.610519
11-2	37105-96L01	HARNESS SET, KLS CONTROLLER	1	FROM VIN.610520
12	32980-38F00	..HOLDER, KLS CONT	1	
13-1	36623-96L00	..HARNESS ASSY, KLS CONT	1	UP TO VIN.610519
13-2	36623-96L01	..HARNESS ASSY, KLS CONT	1	FROM VIN.610520
14	36615-96300	..TERMINAL, RESIN	1	
15	36662-96L00	..HARNESS ASSY, KLS CAN EXT	1	L:6500+110
16	37173-96L00	..HOLDER, KLS PARTS	1	LARGE TYPE
17	37173-96L10	..HOLDER, KLS PARTS	1	UP TO VIN.610519
18	38500-93J90	..BUZZER ASSY, KLS	1	SMALL TYPE
19	38860-96L00	..RELAY ASSY, KLS	1	FROM VIN.610520
20-1	32851-93J00	..CUSHION, LEAD WIRE	2	UP TO VIN.610519
20-2	32851-93J00	..CUSHION, LEAD WIRE	1	FROM VIN.610520
21	09407-14407	..CLAMP (L:145)	1	

FIG.535A


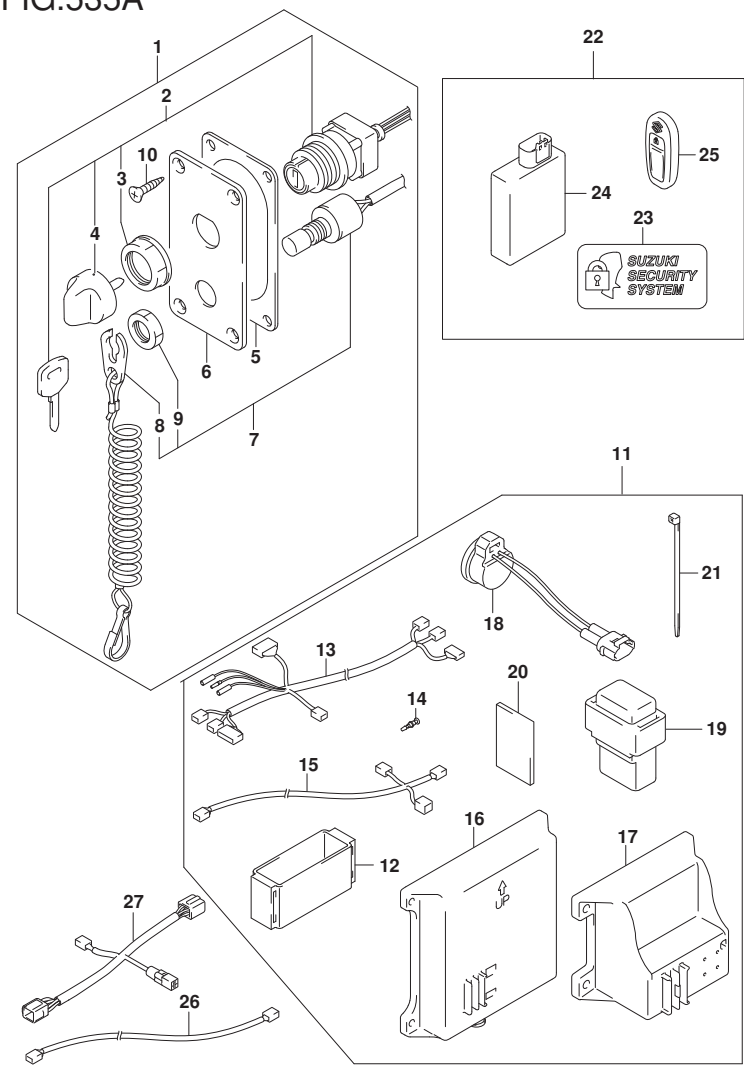


FIG.535A (1-H-15) OPT:KEY LESS START (DF300A E01)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
22-1	37170-96L00	CONTROLLER SET, KLS 433MHZ	1	UP TO VIN.610519
22-2	37170-96L01	CONTROLLER SET, KLS 433MHZ	1	FROM VIN.610520
23	37117-96L00	.DECAL, KLS	2	
24-1	37171-96L00	.CONTROLLER ASSY, KLS 433MHZ	1	UP TO VIN.610519
24-2	37171-96L01	.CONTROLLER ASSY, KLS 433MHZ	1	FROM VIN.610520
25	37172-96L00	.REMOCON ASSY, KLS 433MHZ	2	
26	36663-96L00	WIRE, KLS CAN EXT	1	
27	36664-96L00	HARNESS ASSY, KLS CAN	1	L:810+110

FIG.535B

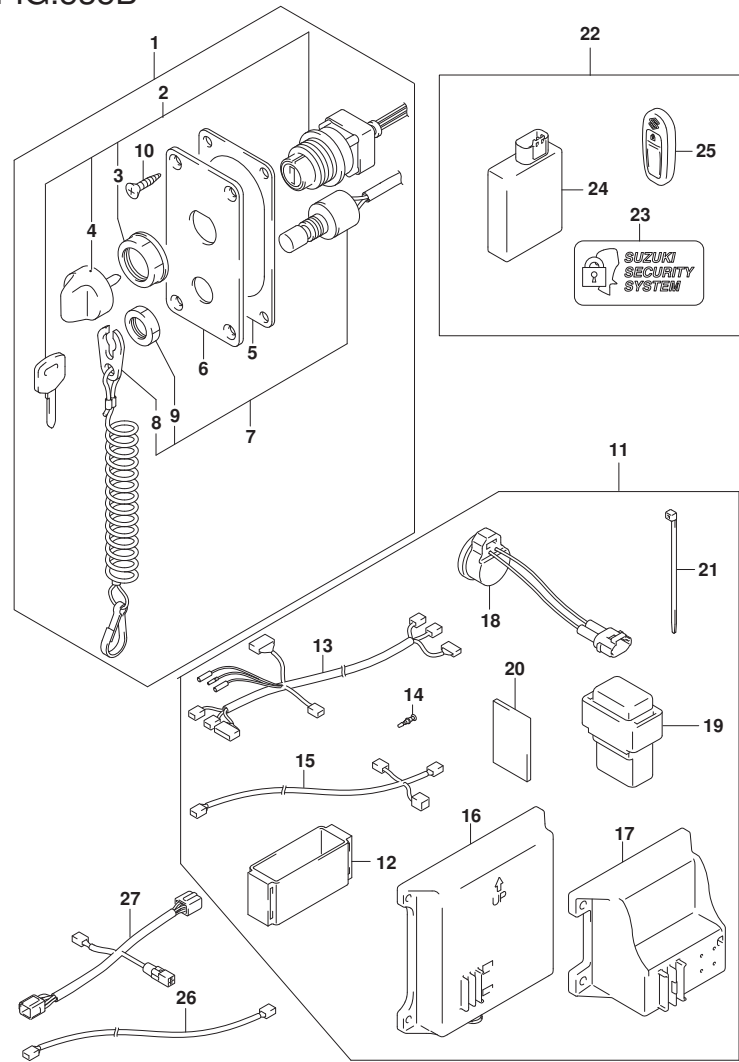

DF300A_E01_016_535B
OPT:KEY LESS START

FIG.535B (1-I-2) OPT:KEY LESS START (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	37100-96L00	PANEL ASSY, MAIN SWITCH KLS	1	
2	37110-96L00	.SWITCH ASSY, MAIN	1	
3-1	37141-99E00	..KEY (931)	1	
3-2	37141-99E10	..KEY (932)	1	
3-3	37141-99E20	..KEY (933)	1	
3-4	37141-99E30	..KEY (934)	1	
3-5	37141-99E40	..KEY (935)	1	
3-6	37141-99E50	..KEY (936)	1	
4	37143-96L00	..KNOB, MAIN SWITCH	1	
5	37114-98J00	.SHEET, MAIN SWITCH PANEL	1	
6	37139-96L00	.PANEL, MAIN SWITCH	1	
7	37820-93J04	.SWITCH ASSY, EMERGENCY	1	
8	37823-92E01	..PLATE ASSY, EMERGENCY SW LOCK	1	
9	37826-92J00	..NUT	1	
10	03122-05165	.SCREW	4	
11-1	37105-96L00	HARNESS SET, KLS CONTROLLER	1	UP TO VIN.610164
11-2	37105-96L01	HARNESS SET, KLS CONTROLLER	1	FROM VIN.610165
12	32980-38F00	.HOLDER, KLS CONT	1	
13-1	36623-96L00	.HARNESS ASSY, KLS CONT	1	UP TO VIN.610164
13-2	36623-96L01	.HARNESS ASSY, KLS CONT	1	FROM VIN.610165
14	36615-96300	..TERMINAL, RESIN	1	
15	36662-96L00	.HARNESS ASSY, KLS CAN EXT	1	L:6500+110
16	37173-96L00	.HOLDER, KLS PARTS	1	LARGE TYPE UP TO VIN.610164
17	37173-96L10	.HOLDER, KLS PARTS	1	SMALL TYEPE FROM VIN.610165
18	38500-93J90	.BUZZER ASSY, KLS	1	
19	38860-96L00	.RELAY ASSY, KLS	1	
20-1	32851-93J00	.CUSHION, LEAD WIRE	2	UP TO VIN.610164
20-2	32851-93J00	.CUSHION, LEAD WIRE	1	FROM VIN.610165
21	09407-14407	.CLAMP (L:145)	1	

FIG.535B


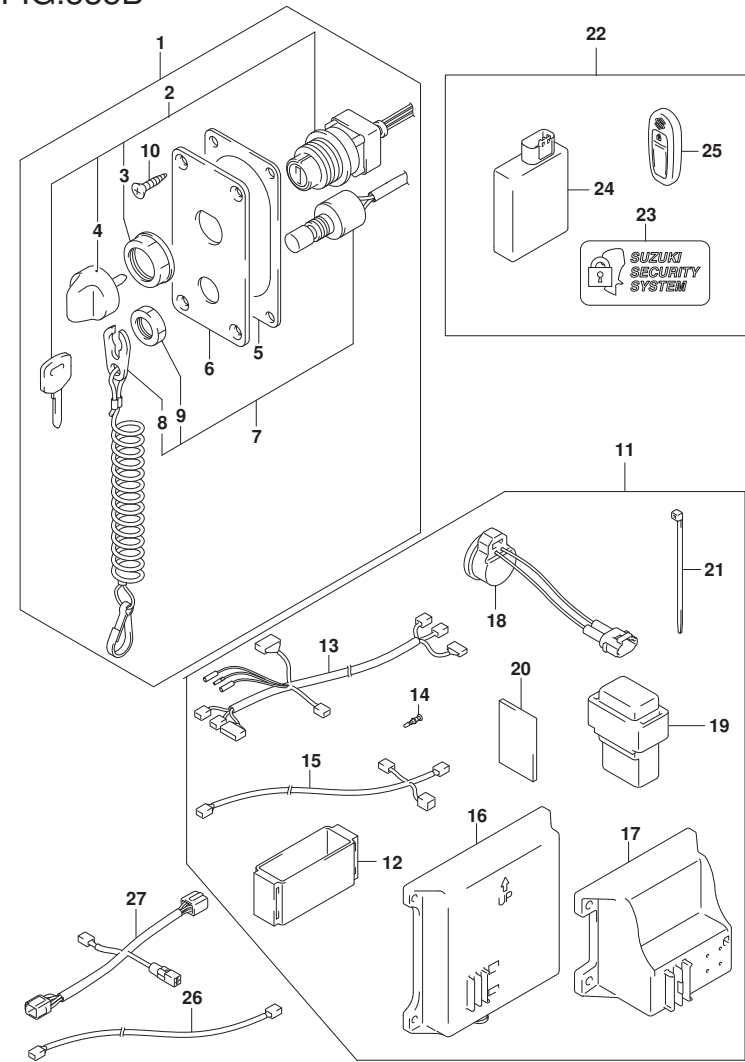


FIG.535B (1-1-3) OPT:KEY LESS START (DF250A E01)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
22-1	37170-96L00	CONTROLLER SET, KLS 433MHZ	1	UP TO VIN.610164
22-2	37170-96L01	CONTROLLER SET, KLS 433MHZ	1	FROM VIN.610165
23	37117-96L00	.DECAL, KLS	2	
24-1	37171-96L00	.CONTROLLER ASSY, KLS 433MHZ	1	UP TO VIN.610164
24-2	37171-96L01	.CONTROLLER ASSY, KLS 433MHZ	1	FROM VIN.610165
25	37172-96L00	.REMOCON ASSY, KLS 433MHZ	2	
26	36663-96L00	WIRE, KLS CAN EXT	1	
27	36664-96L00	HARNESS ASSY, KLS CAN	1	L:810+110

FIG.540A

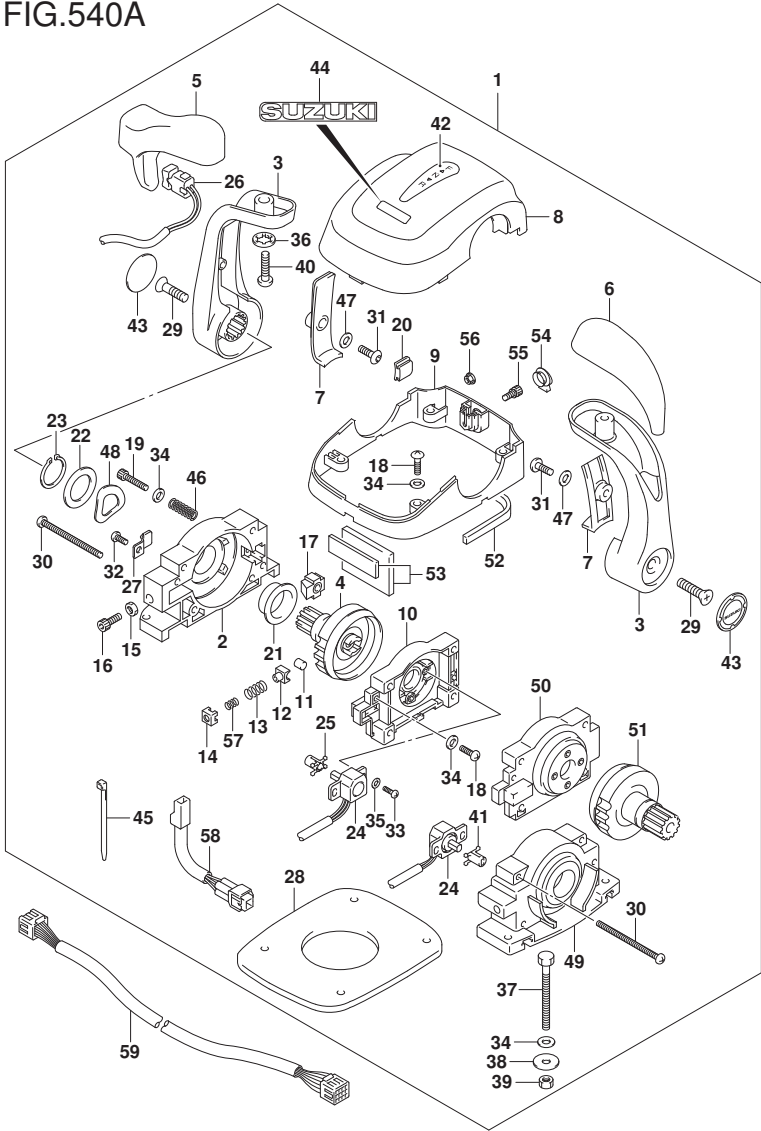


DF300A_E01_016_540A
OPT:REMOTE CONTROL ASSY DUAL

FIG.540A (1-I-4) OPT:REMOTE CONTROL ASSY DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J13	REMOTE CONTROL ASSY	1	
2	67211-98J20	.HOUSING (L)	1	
3	67251-98J00	.LEVER, HANDLE	2	
4	67246-98J10	.SHAFT, DRIVE (L)	1	
5	67261-98J00	.GRIP, NO.1	1	
6	67261-98J10	.GRIP, NO.2	1	
7	67263-98J00	.COVER, LEVER	2	
8	67212-98J30	.COVER, UPPER	1	
9	67271-98J40	.COVER, BOTTOM	1	
10	67222-98J10	.PANEL ASSY, BACK (L)	1	
11	67236-98J10	.ROOLER, DETENT	2	
12	67235-98J10	.GUIDE, DETENT ROOLER	2	
13	67237-98J40	.SPRING, DETENT	2	
14	67233-98J10	.HOLDER, DETENT SPRING	2	
15	67287-92E00	.NUT (M5)	2	
16	67239-98J00	.SCREW, DETENT ADJUST (5X14)	2	
17	67223-98J00	.PAD, BRAKE	2	
18	67296-98J50	.SCREW (5X18)	8	
19	67296-98JA0	.SCREW, BRAKE ADJUST (5X30)	2	
20	67272-98J10	.GROMMET, COVER	2	
21	67252-98J10	.BUSH, DRIVE SHAFT	2	
22	67288-98J20	.WASHER	2	
23	67292-98J00	.C-RING	2	
24	15980-98J00	.POTENTIOMETER	2	
25	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
26	37850-98J02	.SWITCH ASSY, PTT	1	
27	67269-98J00	.CLAMP, LEAD	1	
28	67273-98J20	.PACKING	1	
29	67296-98J60	.SCREW (8X30)	2	
30	67296-98J30	.SCREW (5X65)	4	
31	67296-98J80	.SCREW (5X14)	2	
32	67296-98J00	.SCREW (5X12)	1	
33	67296-94300	.SCREW (4X10)	4	
34	67288-98J40	.WASHER	14	

DF300A_E01_016

FIG.540A

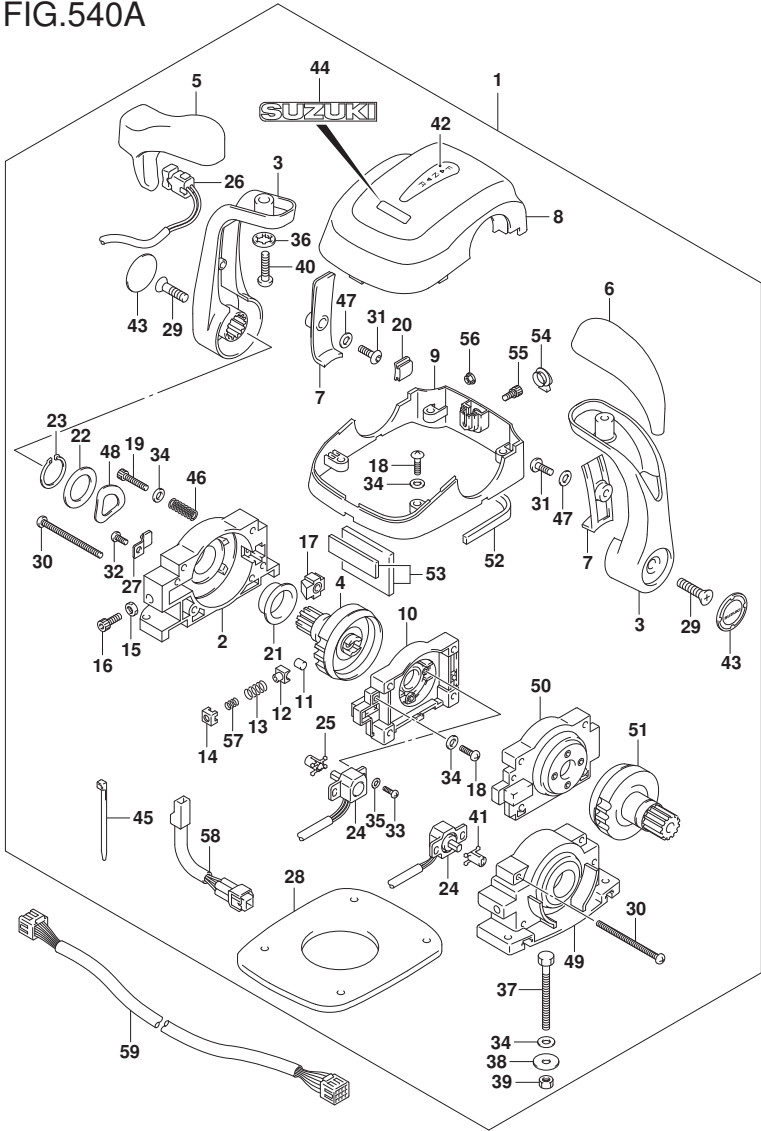


DF300A_E01_016_540A
OPT:REMOTE CONTROL ASSY DUAL

FIG.540A (1-I-5) OPT:REMOTE CONTROL ASSY DUAL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67288-98J00	.WASHER	4	
36	67288-92E20	.WASHER	2	
37	67226-98J00	.BOLT (5X50)	4	
38	09160-05024	.WASHER (5.5X16X1.5)	4	
39	67287-92E00	.NUT	4	
40	67296-98J90	.SCREW	2	
41	67227-98J00	.LEVER, POTENTIOMETER NO.1	1	
42	67284-98J00	.MARK (F-N-R)	1	
43	68165-98J00	.MARK, LEVER (SUZUKI)	2	
44	68165-98J10	.EMBLEM (SUZUKI)	1	
45	67269-98J30	.BAND	1	
46	67288-98J10	.WASHER, SPRING	16	
47	67288-98J30	.WASHER	2	
48	67228-98J50	.WASHER, WAVE	2	
49	67211-98J30	.HOUSING (R)	1	
50	67222-98J20	.PANEL ASSY, BACK (R)	1	
51	67246-98J20	.SHAFT, DRIVE (R)	1	
52	67273-98J10	.PACKING (FRONT)	1	
53	67273-98J30	.PACKING (REAR)	1	
54	67277-98J00	.GROMMET	1	
55	67296-98JF0	.BOLT (5X14)	1	
56	67297-98J00	.NUT	1	
57	67237-98J50	.SPRING, DETENT	2	
58	36890-98J00	.CONDENSER, ADAPTER HARNESS	1	
59-1	36620-98J30	WIRE ASSY, REMOTE CONTROL	1	L:6500
59-2	36620-98J40	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.543A

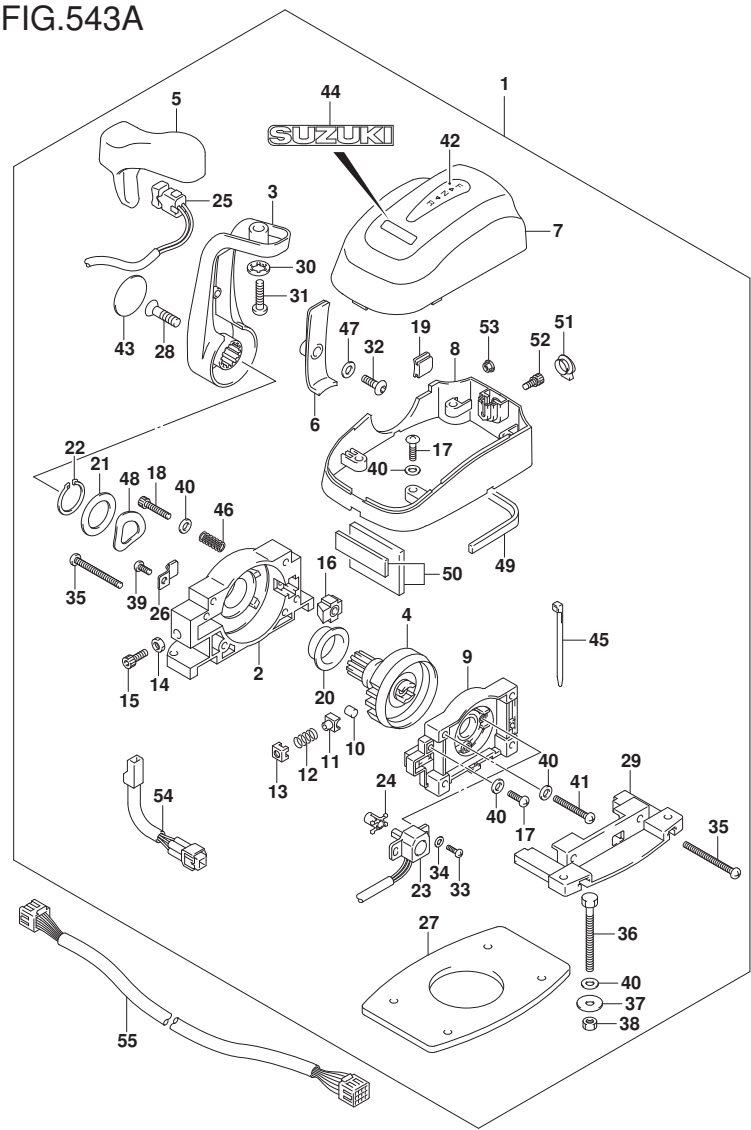


DF300A_E01_016_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG.543A (1-I-6) OPT:REMOTE CONTROL ASSY SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-98J03	REMOTE CONTROL ASSY	1	
2	67211-98J20	.HOUSING	1	
3	67251-98J00	.LEVER, HANDLE	1	
4	67246-98J10	.SHAFT, DRIVE	1	
5	67261-98J00	.GRIP, NO.1	1	
6	67263-98J00	.COVER, LEVER	1	
7	67212-98J20	.COVER, UPPER	1	
8	67271-98J30	.COVER, BOTTOM	1	
9	67222-98J10	.PANEL ASSY, BACK	1	
10	67236-98J00	.ROLLER, DETENT	1	
11	67235-98J10	.GUIDE, DETENT ROLLER	1	
12	67237-98J30	.SPRING, DETENT	1	
13	67233-98J10	.HOLDER, DETENT SPRING	1	
14	67287-92E00	.NUT	1	
15	67239-98J00	.SCREW, DETENT ADJUST (5X14)	1	
16	67223-98J00	.PAD, BRAKE	1	
17	67296-98J50	.SCREW (5X18)	6	
18	67296-98JA0	.SCREW, BRAKE ADJUST (5X30)	1	
19	67272-98J10	.GROMMET, COVER	1	
20	67252-98J10	.BUSH, DRIVE SHAFT	1	
21	67288-98J20	.WASHER	1	
22	67292-98J00	.C-RING	1	
23	15980-98J00	.POTENTIOMETER	1	
24	67227-98J10	.LEVER, POTENTIOMETER NO.2	1	
25	37850-98J02	.SWITCH ASSY, PTT	1	
26	67269-98J00	.CLAMP, LEAD	1	
27	67273-98J00	.PACKING	1	
28	67296-98J60	.SCREW (8X30)	1	
29	67274-98J00	.FLANGE, BASE	1	
30	67288-92E20	.WASHER	1	
31	67296-98J90	.SCREW	1	
32	67296-98J80	.SCREW (5X14)	1	
33	67296-94300	.SCREW (4X10)	2	
34	67288-98J00	.WASHER	2	

FIG.543A

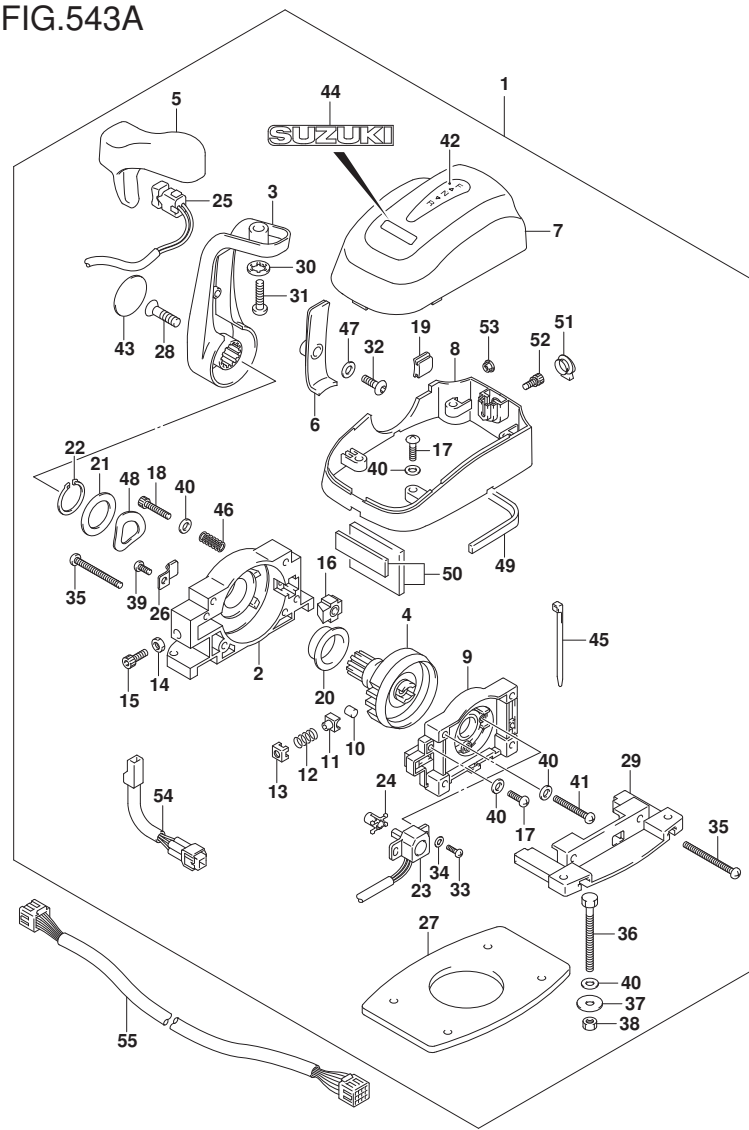

DF300A_E01_016_543A
OPT:REMOTE CONTROL ASSY SINGLE

FIG.543A (1-I-7) OPT:REMOTE CONTROL ASSY SINGLE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67296-98J20	.SCREW (5X50)	2	
36	67226-98J00	.BOLT (5X50)	4	
37	09160-05024	.WASHER (5.5X16X1.5)	4	
38	67287-92E00	.NUT	4	
39	67296-98J00	.SCREW (5X12)	1	
40	67288-98J40	.WASHER	12	
41	67296-98J10	.SCREW (5X35)	1	
42	67284-98J00	.MARK (F-N-R)	1	
43	68165-98J00	.MARK, LEVER (SUZUKI)	1	
44	68165-98J10	.EMBLEM (SUZUKI)	1	
45	67269-98J30	.BAND	1	
46	67288-98J10	.WASHER, SPRING	8	
47	67288-98J30	.WASHER	1	
48	67228-98J50	.WASHER, WAVE	1	
49	67273-98J10	.PACKING (FRONT)	1	
50	67273-98J30	.PACKING (REAR)	1	
51	67277-98J00	.GROMMET	1	
52	67296-98JF0	.BOLT (5X14)	1	
53	67297-98J00	.NUT	1	
54	36890-98J00	.CONDENSER, ADAPTER HARNESS	1	
55-1	36620-98J30	WIRE ASSY, REMOTE CONTROL	1	L:6500
55-2	36620-98J40	WIRE ASSY, REMOTE CONTROL	1	L:9500

FIG.585A

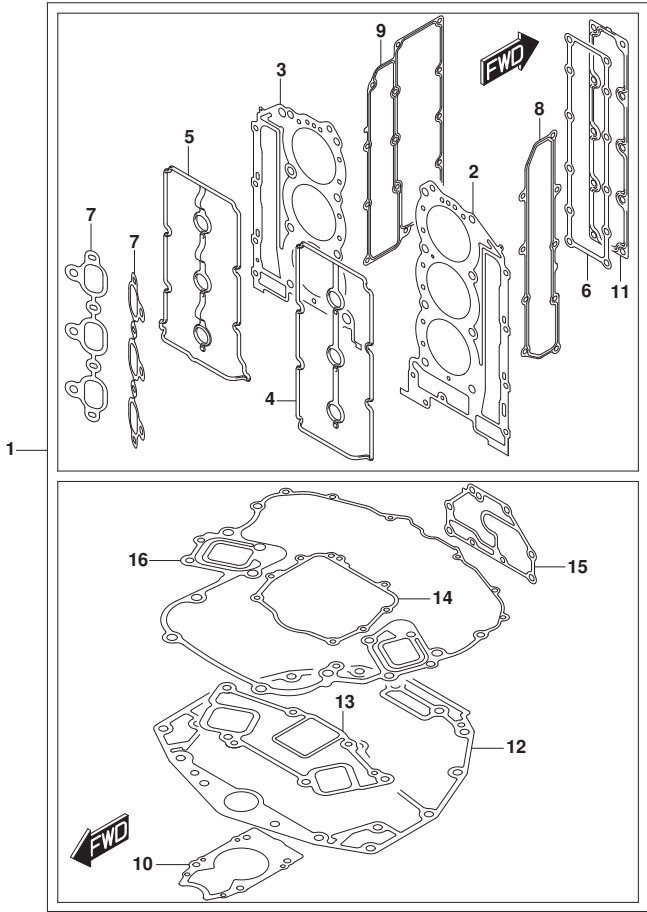


FIG.585A (1-1-8) OPT:GASKET SET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11410-98830	GASKET SET	1	
2	11141-98J10	.GASKET, CYL HEAD STBD	1	
3	11142-98J10	.GASKET, CYL HEAD PORT	1	
4	11179-93J00	.GASKET, CYL HEAD COVER STBD	1	
5	11189-93J00	.GASKET, CYL HEAD COVER PORT	1	
6	11332-93J00	.GASKET, CRANKCASE WTR JKT COV	1	
7	13119-98J00	.GASKET, INTAKE MANIFOLD	2	
8	14151-93J00	.GASKET, EXH COVER STBD	1	
9	14152-93J00	.GASKET, EXH COVER PORT	1	
10	17472-98J00	.GASKET, PUMP CASE PANEL	1	
11	11272-93J00	.GASKET, CYL BLOCK PLATE	1	
12	11489-93J00	.GASKET, OIL PAN	1	
13	14212-93J00	.GASKET, EXHAUST TUBE	1	
14	51123-93J00	.GASKET, MOUNT OIL SEAL COVER	1	
15	51142-93J00	.GASKET, ENGINE HOLDER COVER	1	
16	51211-93J00	.GASKET, ENGINE HOLDER	1	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11382-93J00	111A-31	12770-93J00	119A-10
		11390-98J00	113A-19	12771-93J00	119A-14
		11410-98830	585A-1	12772-93J00	119A-16
		11435-93J00	180A-14	12775-93J00	119A-15
		11489-93J00	180A-6	12778-93J00	119A-11
11101-98J03	111A-1		585A-12	12810-93J00	119A-18
11103-98J03	111A-5	11501-93J02-0EP	180A-7-1	12812-90J00	119A-20
11112-93J00	113A-4	11501-93J02-Y5S	180A-7-2	12813-73G00	119A-19
11115-93J10-001	111A-36	11510-98J02	136A-1	12831-93J01	119A-22
11116-93J01	111A-9	11514-98J00	136A-4	12832-93J00	119A-23
11117-93J10	113A-5	11515-93J00	136A-11	12833-93J00	119A-24
11117-98J10	113A-6	11517-98J00	136A-10	12891-93J00	121A-14
11119-93J00	113A-7	11541-93J00-0EP	180A-9-1	12892-93J00-218	121A-15-1
11128-90J00	111A-2	11541-93J00-Y5S	180A-9-2	12892-93J00-220	121A-15-2
11141-98J10	111A-6	11591-93J10	180A-8	12892-93J00-223	121A-15-3
	111A-10	12100-98810-025	116A-6-2	12892-93J00-225	121A-15-4
	585A-2	12100-98810-0A0	116A-6-1	12892-93J00-228	121A-15-5
	111A-11	12100-98J00-050	116A-14	12892-93J00-230	121A-15-6
	585A-3	12111-98J00-0B0	116A-1	12892-93J00-233	121A-15-7
11170-93J01	111A-21	12140-98J00	116A-2	12892-93J00-235	121A-15-8
11173-93J00	111A-23	12140-98J00-050	116A-15	12892-93J00-238	121A-15-9
11174-98J00	136A-2	12151-02F00	116A-3	12892-93J00-240	121A-15-10
11176-98J00	136A-3	12160-98J00	116A-5	12892-93J00-243	121A-15-11
11179-93J00	111A-25	12220-98J00	116A-7	12892-93J00-245	121A-15-12
11180-98J01	585A-4	12242-98J00	116A-10	12892-93J00-248	121A-15-13
	111A-22	12300-98810-0AA	116A-8-6	12892-93J00-250	121A-15-14
	111A-24	12300-98810-0BA	116A-8-7	12892-93J00-253	121A-15-15
	111A-26	12300-98810-0CA	116A-8-8	12892-93J00-255	121A-15-16
	585A-5	12300-98810-0DA	116A-8-9	12892-93J00-258	121A-15-17
11193-98J00	163A-1	12300-98810-0EA	116A-8-10	12892-93J00-260	121A-15-18
11196-93J00	162A-1	12300-98821	116A-9-1	12892-93J00-263	121A-15-19
11197-93J00	162A-2	12300-98821-012	116A-9-2	12892-93J00-265	121A-15-20
11198-58B00	163A-2	12340-98J00-0A0	116A-8-1	12892-93J00-268	121A-15-21
11217-85FA0	113A-8	12340-98J00-0B0	116A-8-2	12892-93J00-270	121A-15-22
11218-98J02	315A-20	12340-98J00-0C0	116A-8-3	12892-93J00-273	121A-15-23
11219-98J00	315A-21	12340-98J00-0D0	116A-8-4	12892-93J00-275	121A-15-24
11261-93J00	111A-13	12340-98J00-0E0	116A-8-5	12892-93J00-278	121A-15-25
11261-93J10-0EP	140A-5	12632-93J11	175A-1	12892-93J00-280	121A-15-26
	180A-1-1	12701-98J10	121A-1	12892-93J00-283	121A-15-27
	180A-1-2	12705-98J10	121A-2	12892-93J00-285	121A-15-28
	162A-3	12721-98J10	121A-3	12892-93J00-288	121A-15-29
	162A-4	12729-98J20	121A-4	12892-93J00-290	121A-15-30
11291-93J00	585A-11	12730-98J02	119A-1	12892-93J00-293	121A-15-31
	111A-34	12734-93J00	119A-5	12892-93J00-295	121A-15-32
	111A-37	12740-93J00	121A-5	12892-93J00-298	121A-15-33
	11293-98J00	12748-93J00	121A-6	12892-93J00-300	121A-15-34
	11301-98J30	12749-93J00	121A-8	12911-98J00	121A-16
11330-93J01	113A-22	12753-93J00	121A-7	12915-93J50	121A-17
11332-93J00	113A-23	12761-93J00	119A-8	12921-93J10	121A-18
	585A-6	12762-93J00	119A-9	12931-78G00	121A-19

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
12932-24400	121A-20		147D-1		147D-30
12933-69G10	121A-21		147A-24	15632-93J20	147A-44
13100-98J01	163A-3		147C-24		147B-44
13110-98J10	122A-1	15200-98J10	147B-24		147C-44
13119-98J00	122A-2		147D-24		147D-44
	585A-7	15410-93J10	147A-2	15633-93J20	147A-8
13134-98J00	163A-15		147B-2		147B-8
13137-98J00	163A-4		147C-2		147C-8
13139-98J01	163A-16		147D-2		147D-8
13140-98J01	163A-5	15411-93J10	147A-3	15634-93J20	147A-49
13147-98J00	163A-7		147B-3		147B-49
13180-98J00	163A-8		147C-3		147C-49
13310-98J00	163A-17		147D-3		147D-49
13315-98J00	163A-19	15412-93J10	147A-5	15635-93J20	147A-43
13343-98J10	163A-18		147B-5		147B-43
13370-93J00	147A-21		147C-5		147C-43
	147B-21		147D-5		147D-43
13421-98J00	147C-21	15413-93J10	147A-6	15636-98J20	147A-38
	147D-21		147B-6		147B-38
	163A-20		147C-6		147C-38
	326A-2		147D-6		147D-38
	326B-2	15415-93J10	147A-4	15637-93J20	147A-53
	326C-2		147B-4		147B-53
	326D-2		147C-4		147C-53
13580-98J02	326A-1		147D-4		147D-53
	326B-1	15440-93J00	147A-11	15641-90J00	147A-26
	326C-1		147C-11		147C-26
	326D-1	15440-93J10	147B-11	15641-90J10	147B-26
	147B-29		147D-11		147D-26
13614-93J00	147D-29	15600-98J00	147A-20	15642-90J00	147A-27
	13650-52G00		147C-20		147B-27
	13655-87J00	15600-98J10	147B-20		147C-27
13710-98J00	136A-5		147D-20		147D-27
13811-98J00	136A-6	15626-93J00	147A-22	15643-93J00	147A-47
13813-98J00	163A-21		147C-22		147B-47
13841-98J10	136A-12	15626-93J10	147B-22		147C-47
13851-98J10	136A-13		147D-22		147D-47
14140-98J01	140A-2	15627-93J00	147A-33	15644-93J00	147A-7
14141-93J01	140A-1		147B-33		147B-7
14151-93J00	140A-3		147C-33		147C-7
	585A-8		147D-33		147D-7
14152-93J00	140A-4	15628-99E00	147A-32	15645-93J00	147A-52
	585A-9		147B-32		147C-52
14154-93J01	180A-10		147C-32	15645-93J10	147B-52
14211-98J00	180A-11		147D-32		147D-52
14212-93J00	180A-12	15629-99E10	147A-54	15646-93J00	147A-9
	585A-13		147B-54		147B-9
15100-94900	147A-1		147C-54		147C-9
	147B-1		147D-54		147D-9
	147C-1	15631-99E10	147B-30	15647-93J00	147A-25

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15647-93J10	147C-25	15686-93J00	147D-40	15831-93J00	147D-14
	147B-25		147A-39		144A-9
	147D-25		147B-39		144B-9
15650-93J00	147A-23	15710-96J00	147C-39	15832-93J00	144C-9
	147B-23		147D-39		144D-9
15654-99E00	147C-23	15717-16G00	144A-2	15980-98J00	144B-8
	147D-23		144B-2		144D-8
	147A-28		144C-2		520A-41
	147B-28		144D-2		540A-24
	147C-28		144A-3		543A-23
15671-93J00	147D-28	15735-58B00	144B-3	15751-93J00	16113-93J10
	147A-62		144C-3		175A-2
	147B-62		144D-3		175A-3
	147C-62		144A-4		113A-25
15672-93J00	147D-62	15751-93J00	144B-4	15751-93J00	16431-93J00
	147A-41		144C-4		113A-26
	147B-41		144D-4		113A-27
15673-98J00	147C-41	15756-93J01	144A-5	15760-93J00	16433-93J00
	147D-41		144B-5		113A-30
	147A-45		144C-5		16510-96J00
15674-93J00	147B-45	15762-90J00	144D-5	15762-93J00	16519-93J00
	147C-45		144A-6		401A-2
	147D-45		144B-6		16520-93J00
	147A-51		144C-6		175A-4
	147B-51		144D-6		121A-11
15675-93J00	147C-51	15762-90J00	147A-31	15762-93J00	16555-93J00
	147D-51		147B-31		121A-12
	147A-35		147C-31		113A-14
	147B-35		147D-31		16700-93J00
15680-93J30	147C-35	15762-93J00	147B-17	15762-93J10	175A-5
	147D-35		147D-17		175A-6
	144A-19		144A-7		175A-7
	144B-19		144C-7		175A-8
15681-93J01	144C-19	15770-93J00	144B-7	15770-93J00	16782-93J00
	144D-19		144D-7		16783-93J01
	144A-1		147A-16		175A-8
	144B-1		147B-16		180A-25
15683-87J00	144C-1	15773-90J00	147C-16	15773-90J00	16910-93J00
	144D-1		147D-16		180A-26
	147A-55		147A-13		160A-21
	147B-55		147B-13		160B-21
15684-98J00	147C-55	15830-77EA0	147C-13	15830-90J00	160C-21
	147D-55		147D-13		160D-21
	144A-22		144A-8		160A-1
	144B-22		144C-8		160B-1
15685-93J00	144C-22	15830-93J00	147B-19	15830-93J00	160C-1
	144D-22		147D-19		160D-1
	147A-40		147A-14		160A-2
	147B-40		147B-14		160C-2
	147C-40		147C-14		160B-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15647-93J10	160B-23	17581-93J00	162A-5	19115-98J10	204A-29
	160C-4		162A-6		
	160C-23		17611-90J00-0EP		
15650-93J00	160D-4	17611-90J00-Y5S	162A-7-1	17611-90J00-Y5S	162A-7-2
	160D-23		162A-12		160A-12
17471-98J01	160A-5	17631-93L00	160B-12	20000	
	160A-24		160C-12		
	160B-24		160D-12		
	160C-5		160A-13		
	160C-24		160B-13		
17471-98J11	160D-24	17632-93L00	160C-13	21110-98J00	204A-1
	160B-5		160D-13		204A-2
	160D-5		160A-14		204A-3
17472-98J00	160A-6	17637-93L00	160B-14	21151-93J00	204A-4
	160A-25		160C-14		204A-5
	160B-6		160D-14		204A-6
17473-98J00	160B-25	17638-93L00	206A-16	21210-98J01	204A-24
	160C-6		206B-16		22511-99011
	160C-25		206A-17		336A-1
	160D-6		206B-17		401A-11
	160D-25		17660-99E01		204A-7
17473-98J00	585A-10	17660-99E01	162A-8	25112-93L00	206A-1-1
	160A-7		17670-90J10		206B-1-1
	160A-26		17670-90J20		206A-1-2
	160B-7		17681-93J00		206B-1-2
	160B-26		17711-90J00		206A-11
17561-93J03	160C-7	17712-93J00	162A-11	25113-93L00	206B-11
	160C-26		162A-12		206A-2
	160D-7		17713-98J00		206B-2
	160D-26		17913-93J00		206A-5-1
	160A-8-1		17914-93J00		206B-5-1
17561-93J13	160A-8-1	17915-98J01	410A-24	25141-93L00-Y5S	206A-5-2
	160C-8-1		162A-38		206B-5-2
	160D-8-1		410A-45		206A-12
	160A-8-2		502A-1		206B-12
	160B-8-2		523A-7		206A-6
17562-93J01	160B-8-2	18118-93J00	163A-23	25222-90J00	206B-6
	160C-8-2		315A-18		204A-9
	160D-8-2		18213-98J20		206B-23
	160A-9		18417-93J00		206A-3
	160B-9		147B-66		206B-3
17563-93J00	160C-9	18498-93J00	147C-66	25232-90J00	206B-24
	160D-9		147D-66		206B-24
	160A-10		144A-10		206A-8
	160B-10		144B-10		206B-8
	160C-10		144C-10		407A-39
17564-93J00	160D-10	18498-93J10	144D-10	29103-93J00	407B-37
	160A-11		147A-58		180A-23
	160B-11		147B-58		315A-3
	160C-11		147C-58		405A-21
	160D-11		147D-58		405B-25
		18590-68H00	163A-9	29103-93J20	410A-35

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
29103-93J30	180A-3	31311-93J00	340A-9		502A-13
	410A-36	31320-93J00	301A-12		503A-2
29116-93J00	160A-15	31341-93J00	301A-13		503A-12
	160B-15	31343-90J00	301A-14	34112-96L00	502A-4
	160C-15	31344-90J00	301A-15		502A-14
	160D-15	31360-93J01	301A-16		503A-3
	180A-13	31912-98J00	301A-20		503A-13
	206A-9	31913-93J00	301A-17	34190-88L00	503A-27
	206B-9	31914-93J00	301A-18	34193-96L00	502A-5
29125-93J00	326A-18	31918-90J10	301A-21		502A-15
	326B-18	32102-98J01	303A-1		503A-4
	326C-18	32120-93J00	303A-4		503A-14
	326D-18	32131-93J00	303A-5	34211-96L00	502A-6
29141-93J20	337A-29	32160-88L00	303A-7		502A-16
	407A-10	32800-98J01	310A-1		503A-5
	407B-9	32805-93J00	310A-2		503A-15
29404-93J10	180A-24	32851-93J00	331A-1-1	34825-96L00	502A-7
	315A-10		331A-1-2		502A-17
	405A-20		331B-1-1		503A-6
	405B-24		331B-1-2		503A-16
	407A-36		535A-20-1	34830-87J20	315A-4
			535A-20-2		315A-5
			535B-20-1	34830-98J00	315A-22
			535B-20-2	34840-98J03	315A-6
		32890-98J01	310A-3	34841-88L00	315A-12
		32980-38F00	331A-2	34845-88L01	315A-13
			331B-2	36001-88L00	503A-17
			535A-12	36610-98J60	322A-3
			535B-12	36612-98J01	522A-24-1
		33220-69J00	303A-9	36612-98J10	322A-5
		33221-42F00	303A-10	36612-98J20	522A-24-2
31100-96J02	301A-1	33410-93J00	310A-11	36615-96300	331A-4
31111-94900	340A-2	33799-97E00	340A-10		331B-4
31123-94910	340A-3	33810-98J00	322A-1		502A-9
31131-90J01	301A-2	33830-98J11	522A-2		502A-19
31133-90J00	340A-4	33911-88BL0	522A-5		503A-33
31133-94900	340A-5	33920-98JG1	326A-23		522A-9
31135-90J00	301A-3		326B-23		522A-16
31135-94900	340A-6		326C-23		522A-19
31136-90J10	340A-7	33920-98JH1	326D-23		522A-21
31151-94J01	301A-4		522A-6		523A-5
31152-90J00	301A-5	33925-93J00	326A-24		535A-14
31153-90J00	301A-6	33925-98J00	326B-24		535B-14
31170-90J00	301A-19		326C-24	36617-93J00	322A-18
31171-96J00	301A-7		326D-24	36617-93J10	162A-41
31173-90J02	301A-8				322A-19
31173-94910	340A-8	33926-98J00	502A-7		322A-20
31191-96J00	301A-9	34000-96L20	502A-2	36617-98J00	540A-59-1
31220-94J00	301A-10	34000-96L30	502A-12	36620-98J30	543A-55-1
31281-92J10	337A-2	34002-96L00	503A-1		543A-55-2
31310-90J00	301A-11	34011-96L00	502A-3	36620-98J40	540A-59-2

30000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	543A-55-2	36666-96L00	503A-10		535A-3-1
36620-98J50	522A-1	36667-96L00	502A-27		535B-3-1
36621-98J00	522A-17	36667-96L10	502A-28	37141-99E10	530A-3-4
36621-98J10	522A-22	36682-92E00	503A-11		535A-3-2
36622-98J00	522A-13		522A-26		535B-3-2
36623-96L00	331A-3	36721-96J00	322A-6	37141-99E20	530A-3-5
	331B-3	36737-96J00	322A-7		535A-3-3
	535A-13-1	36738-98J00	322A-8		535B-3-3
	535B-13-1	36770-98J10	522A-10-1	37141-99E30	530A-3-6
36623-96L01	535A-13-2	36770-98J20	522A-10-2		535A-3-4
	535B-13-2	36775-98J00	522A-11		535B-3-4
36623-98J20	522A-8	36776-98J00	522A-12	37141-99E40	530A-3-7
36623-98J30	522A-18	36890-98J00	520A-55		535A-3-5
36623-98J40	523A-4		540A-58		535B-3-5
36624-98J02	522A-15		543A-54	37141-99E50	530A-3-8
36624-98J11	522A-20	36894-87D00	335A-23		535A-3-6
36625-98J10	523A-1		336A-2		535B-3-6
36627-98J00	523A-6		337A-34	37141-99E60	530A-3-9
36645-93J00	301A-22		405A-7	37141-99E70	530A-3-10
36661-96L00	502A-8		405B-11	37141-99E80	530A-3-11
	502A-18	36895-87D01	337A-35		530A-3-12
	503A-32		337A-36	37141-99EA0	530A-3-1
36662-88L00	503A-31	36990-87D00	522A-25	37141-99EB0	530A-3-2
36662-88L10	502A-20	37100-96L00	535A-1	37143-96L00	535A-4
	503A-7		535B-1		535B-4
	503A-18	37100-98J04	530A-1	37143-99E00	530A-4
36662-88L20	503A-28	37100-98J11	530A-11	37170-96L00	535A-22-1
36662-88L30	503A-29	37100-98J21	530A-21		535B-22-1
36662-96L00	331A-5	37100-98J31	530A-23	37170-96L01	535A-22-2
	331B-5	37105-96L00	535A-11-1		535B-22-2
	535A-15		535B-11-1	37171-96L00	331A-7-1
	535B-15	37105-96L01	535A-11-2		331B-7-1
36663-88L00	502A-21		535B-11-2		535A-24-1
	503A-19	37110-96L00	535A-2		535B-24-1
36663-96L00	535A-26		535B-2	37171-96L01	331A-7-2
	535B-26	37110-98J01	530A-2		331B-7-2
36663-98J00	503A-23	37112-98J00	530A-12		535A-24-2
36663-98J10	502A-10	37112-98J10	530A-22		535B-24-2
	502A-22		530A-24	37172-96L00	331A-8
	503A-25	37114-98J00	530A-10		331B-8
36664-88L00	502A-24		535A-5		535A-25
	503A-8		535B-5		535B-25
	503A-20	37117-96L00	331A-6	37173-96L00	331A-9
36664-96L00	535A-27		331B-6		331B-9
	535B-27		535A-23		535A-16
36665-88L00	502A-25		535B-23		535B-16
	503A-21	37139-96L00	535A-6	37173-96L10	331A-10
36665-88L10	502A-26		535B-6		331B-10
	503A-22	37139-98J00	530A-5		535A-17
36665-96L00	503A-9	37141-99E00	530A-3-3		535B-17

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37721-93J00	326A-7 326B-7 326C-7 326D-7	38410-93J12	326A-19 326B-19 326C-19 326D-19	41111-93J14-0EP 41111-93J14-Y5S 41117-93J01 41121-93J06-0EP	335A-1-1 335A-1-2 335A-3 335A-2-1
37722-93J11	326A-16 326B-16 326C-16 326D-16	38415-93J00	326A-20 326B-20 326C-20 326D-20	41121-93J06-Y5S 41122-93J01 41130-93J12 41135-93J11	335A-2-2 335A-4 335A-6 335A-7
37725-93J11	326A-10 326B-10 326C-10 326D-10	38500-93J90	331A-11 331B-11 523A-3 530A-13	41155-93J02 41220-93J11 41224-95E01 41230-96J00	335A-13 336A-13 336A-15 336A-16
37729-98J00	326A-3 326B-3 326C-3 326D-3	38860-76F01	535A-18 535B-18 322A-10 322A-11	41233-95E10 41234-93J11 43111-93J23-0EP 43111-93J23-Y5S	336A-17 336A-14 336A-3-1 336A-3-2
37803-93J04 37820-93J04	530A-15 530A-6 530A-17 535A-7		326A-30 326A-31 326B-30 326B-31	43114-93J00 43211-93J00 43711-97E01 43750-93J02-0EP	336A-4 336A-5 336A-6 336A-7-1
37820-98J00 37823-92E01	535B-7 315A-7 530A-7 530A-18		326C-30 326C-31 326D-30 326D-31	43750-93J02-Y5S 45421-87D02 48000-98J06 48121-93J13	336A-7-2 335A-16 337A-1 337A-20
37825-99E00 37826-92J00	535A-8 535B-8 530A-16 530A-8	38860-96L00	331A-12 331B-12 535A-19 535B-19	48125-93J00 48126-93J00 48128-93J11 48140-93J01	337A-21 337A-22 337A-25 335A-18
	530A-19 535A-9 535B-9	38890-98J10	326A-25 326B-25 326C-25	48144-93J00 48145-93J00 48311-96J10	335A-19 335A-22 337A-27
37850-92J00	326A-11 326B-11 326C-11 326D-11	38892-98J00	326D-25 326A-26 326B-26 326C-26	48320-93J00 48321-93J00 48400-98J02 48405-93J00	337A-23 337A-28 337A-11 337A-12
37850-98J02	520A-52 540A-26 543A-25	38895-98J00	326D-26 326A-27 326B-27	48500-98J03 48571-93J00 48572-87J10	337A-4 337A-26 337A-15
37856-92J00	326A-12 326B-12 326C-12		326C-27 326D-27 326A-32	48573-93J00 48582-95E01 48583-95E00	337A-24 337A-5 337A-19
37857-92J00	326D-12 326A-13 326B-13 326C-13	38915-90J00	326B-32 326C-32 326D-32	48585-95E00 48605-93J00 48610-93J01	337A-16 337A-6 337A-7
	326D-13	39950-88L01	503A-30	48627-93J00 48630-98J01	337A-14 337A-8
37860-87L00 37862-87L00 38100-93J03	530A-25 530A-26 337A-3 340A-1	40000	48633-93J00 48650-93J00 48691-93J00 48862-87J20	337A-9 337A-13 337A-10 337A-17	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
48864-93J01	337A-18		405B-20-2 407A-1-1 407A-1-2 407B-1-1	55110-93L00-0EP 55110-93L00-Y5S 55110-93L10-0EP	206B-15 220B-31 220A-1-1 220B-1-1
			407B-1-2 407A-2 206A-14 206B-14	55110-93L10-Y5S 55118-93L00 55122-93L00	220A-1-2 220B-1-2 405A-4 405B-4
	50000		407A-13-1 407B-12-1	55125-93L00-0EP	220A-2 220B-2
51111-93J20-0EP 51111-93J20-Y5S 51116-93J00 51120-93J02 51123-93J00	401A-1-1 401A-1-2 401A-5 401A-10 401A-14	55125-93L00-Y5S 55127-87D00 55128-93J10	407A-13-2 407B-12-2 407A-21 407B-20 407A-15	57134-93J00 57300-93L03 57300-93L20 57527-93L00 57541-93L00	220A-3 220B-3 220A-6 220B-6 220B-46 220B-47
51124-93J01 51125-93J00 51140-98J00-0EP 51140-98J00-Y5S 51142-93J00	401A-12 401A-13 401A-18-1 401A-18-2 401A-19	55128-93L00 55320-94900 55321-87J01	407A-35 407B-34 335A-14 111A-15 140A-6	57610-93L00 57610-93L10 57617-93L00 57621-93L00	220A-17 220B-17 220A-22 220B-22 220A-18
51151-93J00 51152-93J00 51211-93J00	401A-21 401A-22 401A-6	55321-87J11 55321-93J01	180A-2-1 405A-22 405B-26 407A-17	57622-93L00 57630-92E00 57631-93L01	220B-18 220A-36 220B-36 407A-38 407B-36
52111-98J00-0EP 52111-98J00-Y5S	405A-1-1 405B-1-1 405A-1-2 405B-1-2	55321-94910 55332-98J00	407A-19 407B-18 407A-20 407B-19	57632-93L01	220A-20 220B-20 407A-30
52131-93J00-0EP 52131-93J00-Y5S 54121-98J00 54123-93J02 54130-93J01	405B-7-1 405B-7-2 401A-33 401A-25 401A-26	55333-98J00 56120-93L11 56120-93L20 56122-93L00	407B-18 220A-25 220B-25 220A-40	58105-93J10	407B-29 407A-31 407B-30 407A-27 407A-29
54137-93J02 54140-98J00 54150-98J00	401A-30 401A-34 405A-9	56126-93L00 56126-93L10 56127-93L00	220B-25 220A-40 220A-26 220B-41	58200-93L00 58200-93L10	407B-26 407A-26-1 407B-25-1 407A-26-2
54160-98J00	405A-10 405B-14 405A-18	56128-93L00	220A-41 220B-41 220A-42	58200-93L20	407B-25-2 407A-26-3 407B-25-3
54165-98J00	405B-22 405A-15-1 405B-19-1	56129-93L00	220B-42 220A-43 220B-43	58200-93L30	407A-26-4 407B-25-4 407A-26-5
54211-93J00-0EP 54211-93J00-Y5S	405A-16-1 405B-20-1 405A-16-2	56130-93J02 56141-93L00	220A-32 220B-32 206A-15	58200-93L50 58200-93L60	407B-25-5 407A-26-6 407B-25-6 407A-26-8 407B-25-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
58200-93L70	407A-26-9 407B-25-9	58300-93J40	407A-26-14 407B-25-14	61422-93J80	420D-30-1 420C-30-2
58200-93L80	407A-26-7 407B-25-7	58300-93JA0	407A-26-22 407B-25-22	61422-98J12	420D-30-2 420A-30-1
58200-93LA0	407A-26-15 407B-25-15	58300-93JB0	407A-26-23 407B-25-23	61422-98J20	420B-30-1 420A-30-2
58200-93LB0	407A-26-16 407B-25-16	58300-93JC0	407A-26-24 407B-25-24	61425-98J00	420B-30-2 420A-37
58200-93LC0	407A-26-17 407B-25-17	58300-93JD0	407A-26-25 407B-25-25		420B-37 420C-37
58200-93LD0	407A-26-18 407B-25-18	59171-93L00	220B-15-1 220B-15-2	61431-98J10-0EP	420D-37 420A-2-1
58200-93LE0	407A-26-19 407B-25-19	59171-93L20	220B-15-3 220B-15-4		420B-2-1 420C-2-1
58200-93LF0	407A-26-20 407B-25-20	59171-93L40	220B-15-5 220B-15-6	61431-98J10-Y5S	420D-2-1 420A-2-2
58200-93LG0	407A-26-21 407B-25-21	59171-93L60	220B-15-7 220B-15-8		420B-2-2 420C-2-2
58200-96J00	407A-28-1 407B-27-1	59171-93L80	220B-15-9 220B-15-10	61432-98J01	420D-2-2 420A-3
58200-96J10	407A-28-2 407B-27-2	59171-93LA0	220B-15-11 220B-15-12		420B-3 420C-3
58200-96J20	407A-28-3 407B-27-3	59171-93LB0	220B-15-13	61433-98J01	420D-3 420A-4
58200-96J30	407A-28-4 407B-27-4				420B-4 420C-4
58200-96J40	407A-28-5 407B-27-5	60000		61434-98J02	420D-4 420A-5
58200-96J50	407A-28-6 407B-27-6				420B-5 420C-5
58200-96JA0	407A-28-7 407B-27-7	61112-98J00	410A-25 410A-43-1	61435-93J52	420D-5 420C-31-1
58200-96JB0	407A-28-8 407B-27-8	61124-98J20	410A-43-2 410A-47	61435-93J60	420D-31-1 420C-31-2
58200-96JC0	407A-28-9 407B-27-9	61131-93J01-0EP	410A-1-1 410A-1-2	61435-98J12	420D-31-2 420A-31-1
58200-96JD0	407A-28-10 407B-27-10	61134-93J20	410A-8 410A-3	61435-98J20	420B-31-1 420A-31-2
58200-96JE0	407A-28-11 407B-27-11	61141-93J01-0EP	410A-2-1 410A-2-2	61436-98J00	420B-31-2 163A-6
58200-96JF0	407A-28-12 407B-27-12	61155-93J20	401A-7 420A-1-1	61439-98J00	420A-6 420B-6
58300-93J00	407A-26-10 407B-25-10	61400-98Y61-0EP	420A-1-1 420B-1-1		420C-6 420D-6
58300-93J10	407A-26-11 407B-25-11		420D-1-1 420A-1-2	61439-98J10	420A-7 420B-7
58300-93J20	407A-26-12 407B-25-12	61400-98Y71-Y5S	420B-1-2 420C-1-2		420C-7 420D-7
58300-93J30	407A-26-13 407B-25-13	61422-93J72	420D-1-2 420C-30-1	61439-98J21	420A-8 420B-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
61443-93J32	420C-8 420D-8	61610-98J30	420D-16 420A-17	61832-98J00	410A-15 410A-27
	420A-28-1 420B-28-1		420B-17 420C-17	63632-98J20	410A-28 430A-1
	420C-28-1 420D-28-1	61610-98J40	420D-17 420A-18	65700-93J10	430C-1 430A-2
61443-93J40	420A-28-2 420B-28-2		420B-18 420C-18	65770-93J11	430B-1 430C-2
	420C-28-2 420D-28-2	61614-98J00	420D-18 420A-20		430D-1 543A-1
61446-96J20	420A-36-1 420B-36-1		420B-20 420C-20	67200-98J03	540A-1 520A-1
	420C-36-1 420D-36-1	61619-98J00	420D-20 420A-24	67211-98J20	520A-18 540A-2
61446-96J30	420A-36-2 420B-36-2		420B-24 420C-24		543A-2 540A-49
	420C-36-2 420D-36-2	61621-98J01	420D-24 420A-21	67212-98J20	543A-7 540A-8
61453-93J32	420A-29-1 420B-29-1		420B-21 420C-21	67212-98J30	520A-32 540A-10
	420D-29-1 420A-29-2	61624-98J10	67222-98J00	67222-98J10	540A-9 540A-50
61453-93J40	420B-29-2 420C-29-2		420D-21 420A-22	67223-98J20	520A-36 540A-17
	420D-29-2 420A-32	61625-98J10	420C-22 420D-22		543A-16 540A-37
61458-90J00	420B-32 420C-32		420A-23 420B-23	67226-98J00	520A-26 540A-41
	420D-32 420A-33	61630-98J00	67227-98J10		520A-42 540A-25
61471-98J00	420B-33 420C-33	61633-98J10-0EP	410A-32-1 410A-32-2	67227-98J20	543A-24 520A-21
	420D-33 420A-34-1	61634-98J10-0EP	410A-33-1 410A-33-2	67227-98J30	520A-22 520A-47
61473-98J00	420B-34-1 420C-34-1	61634-98J10-Y5S	410A-39 410A-31	67228-98J50	540A-48 543A-48
	420D-34-1 420A-34-2	61635-98J00	410A-40 410A-34-1		540A-15 540A-14
61473-98J10	420B-34-2 420C-34-2	61645-98J00-0EP	410A-41 410A-6-1	67233-98J00	543A-13 520A-17
	420D-34-2 420A-9	61645-98J00-Y5S	61811-98J20-0EP	67233-98J10	520A-34 540A-12
61476-98J00	420B-9 420C-9	61658-98J00	410A-6-2 410A-16	67235-98J00	540A-11 543A-11
	420D-9 136A-19	61812-98J00	410A-17 410A-10	67235-98J10	520A-33 543A-10
61494-93J00	420A-16 420B-16	61817-93J00	410A-7-1 410A-7-2	67236-98J00	520A-35 543A-12
61610-98J00	420C-16	61821-98J10-0EP	61827-93J02	67237-98J00	540A-11 520A-35
		61831-98J02-0EP	410A-18-1 410A-18-2	67237-98J30	543A-12 540A-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67237-98J50	540A-57	67284-98J00	540A-42	67296-98JB0	543A-18
67238-98J00	520A-29		543A-42	67296-98JC0	520A-20
67239-98J00	540A-16	67287-92E00	540A-15	67296-98JD0	520A-24
	543A-15		540A-39	67296-98JE0	520A-28
67246-98J00	520A-31		543A-14	67296-98JF0	520A-37
67246-98J10	540A-4		543A-38		540A-55
	543A-4	67287-98J00	520A-25		543A-52
67246-98J20	540A-51	67288-92E20	540A-36	67297-98J00	540A-56
67251-98J00	540A-3		543A-30		543A-53
	543A-3	67288-98J00	520A-44	67300-98J00	410A-46-1
67251-98J20	520A-12		540A-35	67300-98J10	410A-46-2
67252-98J00	520A-38		543A-34	67361-90J10	410A-48
67252-98J10	540A-21	67288-98J10	520A-46	67467-89J01	204A-25
	543A-20		540A-46	67467-89J10	204A-31
67254-98J00	520A-14		543A-46	67471-99E00	204A-26
67255-98J00	520A-8	67288-98J20	520A-39	67471-99E10	204A-32
67256-98J00	520A-10		540A-22	68110-98J00	420A-39
67258-98J00	520A-9		543A-21		420B-39
67259-98J00	520A-11	67288-98J30	540A-47		420C-39
67261-98J00	540A-5		543A-47		420D-39
	543A-5	67288-98J40	540A-34	68165-98J00	520A-54
	540A-6		543A-40		540A-43
67261-98J10	520A-5	67288-98J50	520A-23		543A-43
67261-98J20	520A-6	67288-98J60	520A-27	68165-98J10	540A-44
67261-98J30	540A-7	67288-98J70	520A-30		543A-44
67263-98J00	543A-6	67292-98J00	520A-40	69711-93E10	136A-18
	520A-4		540A-23		
67264-98J00	520A-3		543A-22		
67265-98J00	520A-7	67294-98J00	520A-13		
67269-98J00	540A-27	67296-94300	520A-43		
	543A-26		540A-33		
67269-98J10	520A-53		543A-33		
67269-98J20	520A-19	67296-98J00	540A-32		
67269-98J30	540A-45		543A-39		
	543A-45	67296-98J10	520A-45		
67271-98J20	520A-2		543A-41	77811-54GC0-0PG	420A-19
67271-98J30	543A-8	67296-98J20	543A-35		420B-19
67271-98J40	540A-9	67296-98J30	540A-30		420C-19
67272-98J00	520A-51	67296-98J50	520A-50		420D-19
67272-98J10	540A-20		540A-18		
	543A-19		543A-17		
67273-98J00	543A-27	67296-98J60	520A-48		
67273-98J10	540A-52		540A-29		
	543A-49		543A-28		
67273-98J20	540A-28	67296-98J80	540A-31		
67273-98J30	540A-53		543A-32	99011-98J50-054	420A-38-1
	543A-50	67296-98J90	540A-40		420C-38-1
67274-98J00	543A-29		543A-31	99011-98J50-059	420A-38-2
67277-98J00	540A-54	67296-98JA0	520A-16		420B-38
	543A-51		540A-19		420C-38-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	420D-38		420A-26	01550-06357	147A-63
			420A-27		147B-63
			420B-26		147C-63
			420B-27		147D-63
			420C-26		206A-19
			420C-27		206B-19
			420D-26		326A-29
			420D-27		326B-29
			303A-6		326C-29
			303A-11		326D-29
			326A-28	01550-06407	136A-16
01421-08357	163A-28		326B-28	01550-08127	162A-25
01500-06167	147A-42		326C-28	01550-08167	163A-11
	147B-42		326D-28		163A-29
	147C-42		420A-10		410A-14
	147D-42		420A-12	01550-08207	111A-17
01500-06257	147A-61		420A-14		111A-35
	147B-61		420B-10		113A-2
	147C-61		420B-12		140A-9
	147D-61		420B-14		301A-23
01547-06167	420A-25		420C-10	01550-08307	301A-24
	420B-25		420C-12		401A-9
	420C-25		420C-14		401A-23
	420D-25		420D-10	01550-0830A	119A-13
01547-06207	310A-12		420D-12		119A-17
01547-06257	111A-29		420D-14		119A-21
01547-06507	111A-30		175A-11		401A-17
01550-06127	136A-8	01550-0616A	111A-4	01550-08357	136A-17
	144A-23	01550-06207	111A-8		163A-12
	144B-23		113A-24		163A-30
	144C-23		136A-9	01550-0835A	113A-28
	144D-23		136A-14	01550-08407	144A-18
	147A-67		136A-15		144B-18
	147B-67		162A-33		144C-18
	147C-67		162A-34		144D-18
	147D-67		204A-21		147A-65
	180A-28		420A-11		147B-65
	303A-14		420B-11		147C-65
	310A-9		420C-11		147D-65
	322A-21		420D-11	01550-08457	113A-29
	322A-28		119A-25	01550-0845A	175A-12
	326A-15	01550-0620A	119A-26	01550-08557	204A-30
	326A-21		121A-13	01550-0855A	119A-7
	326B-15	01550-06257	140A-10	01550-08607	111A-18
	326B-21		147A-46		111A-19
	326C-15		147B-46		163A-31
	326C-21		147C-46		401A-24
	326D-15		147D-46	01550-0865A	175A-13
	326D-21		162A-35	01550-0885A	175A-14
	407A-37		310A-10	01550-1025A	116A-12
	407B-35				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-1050A	180A-19		326D-6	09116-10150	407A-7	09159-14020	335A-17	09160-60012	220A-12	09181-32044	220A-11-10
01570-06357	147A-50	08321-01067	322A-17		407B-6	09159-14026	401A-28		220B-12		220B-11-10
	147B-50	08331-41359	204A-23	09116-10175	180A-21		405A-13	09162-10005	337A-30	09181-39001	336A-10
	147C-50	08331-4158A	220A-39		337A-33		405B-17	09164-50002	220B-37	09181-60004	220A-7-1
	147D-50	09100-12052	407A-6		401A-32	09159-22006	335A-8	09168-10034	407A-16		220B-7-1
02112-0406B	147A-56		407B-5		401A-36	09159-28003	220A-4		407B-15	09181-60005	220A-7-2
	147B-56	09100-12085	335A-9-2		405A-17		220B-4	09168-12012	180A-15		220B-7-2
	147C-56	09100-12086	335A-9-1		405B-21	09160-05024	540A-38	09168-12013	147A-17	09181-60006	220A-7-3
	147D-56	09100-12092	335A-9-3	09116-10176	405A-2		543A-37		147C-17		220B-7-3
02112-05107	147A-30	09100-14004	401A-27		405B-2	09160-05029	315A-16	09168-16009	111A-12	09181-60007	220A-7-4
	147C-30		405A-11	09125-05048	315A-15		326A-4	09168-20002	160A-20		220B-7-4
02112-0612A	111A-28		405B-15	09125-06063	315A-8		326B-4		160B-20	09181-60008	220A-7-5
02142-0408B	147A-29	09103-06093	315A-17		335A-5		326C-4		160C-20		220B-7-5
	147C-29	09103-06231	303A-12		335A-24		326D-4		160D-20	09181-60009	220A-7-6
02142-05107	204A-22	09103-06278	335A-20		336A-8	09160-06055	204A-27	09169-06062	147A-15		220B-7-6
02162-05207	163A-13	09103-06281	111A-16		336A-18	09160-06082	336A-20		147A-60	09181-60010	220A-7-7
03122-05165	530A-9		140A-7		337A-37	09160-06084	147A-59		147B-15		220B-7-7
	530A-20		180A-4		337A-38		147B-59		147B-60	09181-60011	220A-7-8
	535A-10		206A-20		337A-39		147C-59		147C-15		220B-7-8
	535B-10		206B-20		405A-6		147D-59		147C-60	09181-60012	220A-7-9
03542-06169	420A-13	09103-08109	401A-15		405A-8	09160-06094	204A-10		147D-15		220B-7-9
	420A-15	09103-08370	163A-24		405B-6	09160-06104	520A-49		147D-60	09181-60013	220A-7-10
	420B-13	09103-08437	122A-4		405B-12	09160-06134	310A-4		310A-5		220B-7-10
	420B-15	09103-12125	303A-2	09131-05004	530A-27	09160-08082	410A-38	09169-08038	401A-40	09181-78001	220A-14-1
	420C-13	09106-05030	303A-8	09132-04034	160A-17	09160-08152	410A-37	09169-08039	410A-20	09181-78002	220A-14-2
	420C-15	09108-08282	122A-3		160B-17	09160-08161	122A-6	09169-08042	147A-64	09181-78003	220A-14-3
	420D-13	09108-10115	405B-8		160C-17		163A-35		147B-64	09181-78004	220A-14-4
	420D-15	09108-12013	405B-9		160D-17		206A-10		147C-64	09181-78005	220A-14-5
04211-11129	163A-14	09116-06121	162A-13		206A-22	09160-10082	206B-10		147D-64	09181-78006	220A-14-6
	163A-32		335A-15		206B-22	09160-10104	116A-11	09180-32006	220A-10	09181-78007	220A-14-7
04211-13149	119A-12	09116-06202	310A-7	09136-06148	410A-11	09160-10141	407A-8		220B-10	09181-78008	220A-14-8
06111-07004	220A-23	09116-06236	405A-23	09137-04004	326A-8		407B-7	09181-12158	175A-9	09181-78009	220A-14-9
	220B-23		405B-27		326B-8	09160-10148	204A-4	09181-32035	220A-11-1	09181-78010	220A-14-10
06111-11004	220A-24		407A-18		326C-8	09160-12066	407A-9		220B-11-1	09181-84001	220A-15-1
	220B-24		407B-17		326D-8		407B-8	09181-32036	220A-11-2	09181-84002	220A-15-2
07130-0510A	113A-18	09116-08122	401A-20	09139-06135	410A-4	09160-13021	335A-12		220B-11-2	09181-84003	220A-15-3
07130-05167	326A-5	09116-08126	401A-39	09139-06136	410A-5	09160-13022	335A-11	09181-32037	220A-11-3	09181-84004	220A-15-4
	326B-5	09116-08128	180A-20	09140-05005	315A-14	09160-14066	405A-19		220B-11-3	09181-84005	220A-15-5
	326C-5	09116-08131	160A-16	09140-10032	336A-19		405B-23	09181-32038	220A-11-4	09181-84006	220A-15-6
	326D-5		160B-16	09140-16026	220A-8		401A-29		220B-11-4	09181-84007	220A-15-7
07130-0616A	113A-17		160C-16		220B-8	09160-15051	405A-12	09181-32039	220A-11-5	09181-84008	220A-15-8
08110-60020	175A-15		160D-16	09140-48001	220B-39	09160-16050	405A-14		220B-11-5	09181-84009	220A-15-9
08221-16256	220A-9	09116-08137	407A-14	09141-18005	407A-32		405B-16	09181-32040	220A-11-6	09181-84010	220A-15-10
	220B-9		407B-13		407B-31		405B-18		220B-11-6	09181-93101	220B-14-1
08310-00067	322A-16	09116-08163	410A-19	09159-08136	122A-5	09160-17052	410A-30	09181-32041	220A-11-7	09181-93102	220B-14-2
08316-10087	163A-34	09116-10134	401A-38		163A-33	09160-18028	407A-33		220B-11-7	09181-93103	220B-14-3
	322A-2	09116-10135	401A-31	09159-10116	113A-12		407B-32	09181-32042	220A-11-8	09181-93104	220B-14-4
08321-0105A	326A-6	09116-10137	401A-35	09159-12014	407A-11	09160-18031	113A-10		220B-11-8	09181-93105	220B-14-5
	326B-6	09116-10146	180A-22		407B-10	09160-39001	336A-9	09181-32043	220A-11-9	09181-93106	220B-14-6
	326C-6		401A-37	09159-12062	335A-10	09160-50006	220A-13		220B-11-9	09181-93107	220B-14-7

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-93108	220B-14-8	09248-26001	113A-9	09282-39001	336A-11
09181-93109	220B-14-9	09251-09005	144A-24	09283-10011	206A-7
09181-93110	220B-14-10		144B-24		206B-7
09181-93111	220B-14-11		144C-24	09283-32044	119A-4
09181-93112	220B-14-12		144D-24	09283-91001	116A-13
09181-93113	220B-14-13	09260-10005	204A-14	09289-05012	121A-22
09202-05032	121A-9	09261-05006	121A-10	09289-18001	204A-16
09202-06031	160A-18	09262-17019	204A-15	09306-06005	204A-17
	160B-18	09262-40017	119A-3	09306-10001	204A-18
	160C-18	09262-40018	119A-2	09306-17002	410A-29
	160D-18	09263-30063	220A-27	09306-24001	337A-31
	303A-3		220B-26	09320-08021	322A-9
	407A-25	09263-35048	407A-4	09320-08062	144A-12
	407B-24		407B-3		144B-12
09202-08006	180A-17	09263-72001	220A-28		144C-12
	180A-18	09263-78001	220A-46		144D-12
	405A-3	09263-80001	407A-5	09320-08076	163A-25
	405B-3		407B-4	09320-08086	147A-69
	405B-10	09263-80002	220B-13		147B-69
	407A-12	09263-83001	220A-47		147C-69
	407B-11	09265-30033	220A-16		147D-69
09202-08013	220A-19		220B-16	09320-08501	147A-12
	220B-19	09265-32003	220A-37		147B-12
09204-01006	204A-11		220B-27		147C-12
	336A-21	09265-50004	220B-48		147D-12
09204-03003	407A-34	09265-55001	220B-49	09320-09016	310A-6
	407B-33	09269-32002	220A-5	09320-11013	410A-21
09205-03004	206A-4		220B-5	09320-12014	162A-15
	206B-4	09280-00030	220A-45	09320-12072	147A-34
09205-10006	204A-12		220B-45		147B-34
09206-03001	407A-3	09280-00047	220A-29		147C-34
	407B-2		220B-28		147D-34
09206-08001	111A-3	09280-06005	113A-20	09320-12076	310A-8
	111A-7	09280-09008	180A-27	09321-10030	410A-13
	111A-27	09280-10009	113A-15		410A-22
	401A-8		163A-10	09329-14002	410A-42
09206-09012	401A-16	09280-10016	113A-16	09343-75001-600	147A-10
	206A-21	09280-22019	111A-14		147A-36
	206B-21		140A-8		147A-48
09206-13019	113A-13		180A-5		147B-10
09206-14004	111A-20	09280-22020	175A-10		147B-36
09208-06009	410A-49	09280-26006	111A-32		147B-48
09246-05006	113A-21		162A-14		147C-10
09247-14041	144A-11	09280-66004	220A-33		147C-36
	144C-11		220B-33		147C-48
09247-14042	144B-11	09280-70012	119A-6		147D-10
	144D-11	09282-24004	220A-34		147D-36
09248-12009	180A-16		220B-34		147D-48
09248-12011	204A-13	09282-30006	220A-30	09352-50002-23A	147A-68-2
09248-18006	113A-11		220B-29		147B-68-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	147C-68-2		147D-57		407B-23
09352-50823-00B	147D-68-2	09401-08413	162A-27		522A-3
	147A-68-1	09401-11414	147A-37	09407-14407	315A-11
	147B-68-1		147B-37		322A-23
	147C-68-1		147C-37		331A-13
	147D-68-1		147D-37		331B-13
09352-50903-00B	162A-23	09401-11425	144A-14		535A-21
	162A-24		144B-14		535B-21
09352-50903-600	162A-16		144C-14	09407-25402	410A-44
	162A-17		144D-14	09407-30401	326A-22
	162A-18	09401-13423	144A-20		326B-22
	162A-19		144B-20		326C-22
	162A-20		144C-20		326D-22
	162A-21		144D-20	09408-00008	162A-31
	162A-22		163A-22		322A-24
09355-40805-00B	407A-22-1		430A-3		322A-27
09355-40805-600	407A-22-2		430C-3	09408-00012	322A-26
	407B-21	09401-14409	162A-28	09408-00021	162A-40
09360-12008	147A-18	09401-15414	162A-37		310A-13
	147C-18	09401-18410	136A-7	09408-00024	162A-39
09360-12013	147B-18	09401-25406	162A-29	09408-00043	147A-71
	147D-18	09403-07340	315A-19		147B-71
09360-14009	144A-13	09403-09316	326A-17		147C-71
	144C-13		326B-17		147D-71
09360-14014	144B-13		326C-17	09408-00056	162A-32
	144D-13		326D-17	09408-00105	144A-16
09362-09008	407A-23	09403-11315	326A-14		144B-16
	407B-22		326B-14		144C-16
09363-08004	147A-19		326C-14		144D-16
	147C-19		326D-14	09408-00135	144A-21
09367-06002	162A-26	09403-13310	163A-26		144B-21
09380-21002	337A-32	09403-13402	522A-23		144C-21
09380-38003	336A-12	09403-13408	303A-13		144D-21
09381-22010	116A-4	09403-14304	147A-70	09408-00155	144A-17
09381-40003	220A-31		147B-70		144B-17
	220A-35		147C-70		144C-17
	220B-30		147D-70		144D-17
	220B-35	09403-16307	144A-15		163A-27
09381-72001	220A-38		144B-15	09408-00184	322A-25
09381-72003	220B-38		144C-15	09409-05302-5PK	410A-9
09383-04002	410A-50		144D-15	09420-05009	160A-19
09383-07003	206A-13	09403-19409	315A-9		160A-27
	206B-13	09403-20308	322A-22		160B-19
09383-08004	204A-19	09403-25304	162A-30		160B-27
09385-06012	204A-28	09407-08401	530A-14		160C-19
09387-38002	405A-5	09407-10404	326A-9		160C-27
	405B-5		326B-9		160D-19
	147A-57		326C-9		160D-27
09401-08412	147B-57		326D-9	09440-07051	204A-20
	147C-57		407A-24	09440-19028	336A-22

SUZUKI DF300AP/250AP PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Technical Readiness Group, Quality Administration Department

300 Takatsuka, Minami, Hamamatsu, Japan

Reprint Prohibited

SUZUKI MOTOR CORPORATION

PRINTED IN JAPAN

9900B-45331-001