

SUZUKI

PARTS CATALOGUE

DT25/30

DT25K

DT30

DT30R



OUTBOARD MOTOR

P40/P36

2017-8

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DT25/30 production start 2017.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	S, L	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 03005-123456		
123456~	: From E. NO. 03005-123456		
12 x 34 x 5.6.....	Figures in the description column		
	show the dimensions of parts.		
ID OD T(or W, L)			

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec.:

spec. code : DT25K : P36
DT30 : P40
DT30R : P40

7. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE No.
DT25K	P36	02503K	L	02503K-810001~
DT30	P40	03005	S, L	03005-810001~
DT30R	P40	03005	S, L	03005-810001~

MILLIMETER → INCH CONVERSION CHART


	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.112A

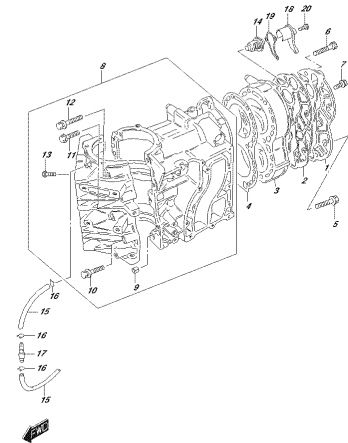


DT26,30,PAH,616,1164
ETENDER

FIG.112B

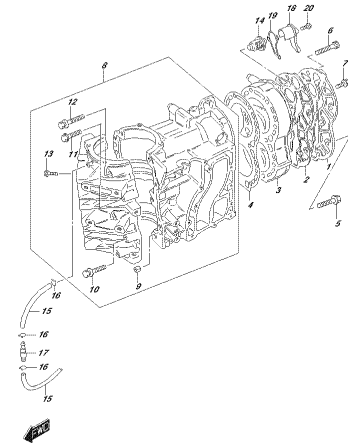


DT26,30,PAH,616,1169
ETENDER

FIG.116A

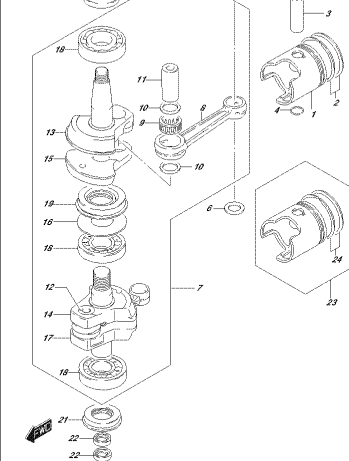


DT26,30,PAH,616,1164
CGRANDNET

FIG.116B

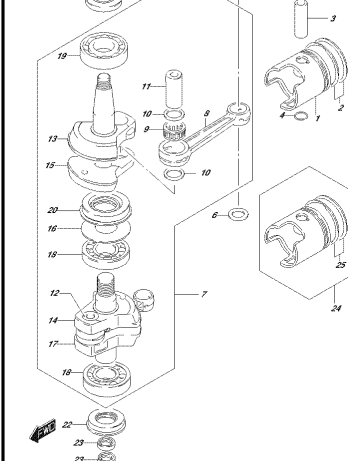


DT26,30,PAH,616,1169
CGRANDNET

FIG.125A

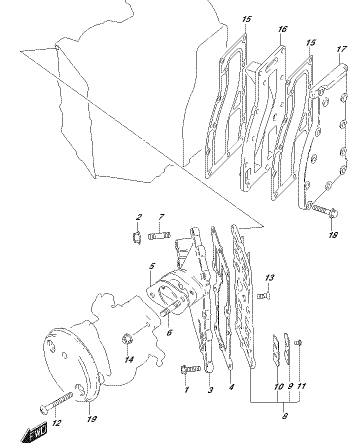


DT26,30,PAH,616,1254
PILET CASE

FIG.125B

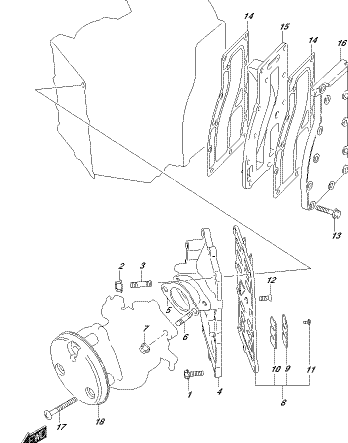


DT26,30,PAH,616,1259
PILET CASE

FIG.128A

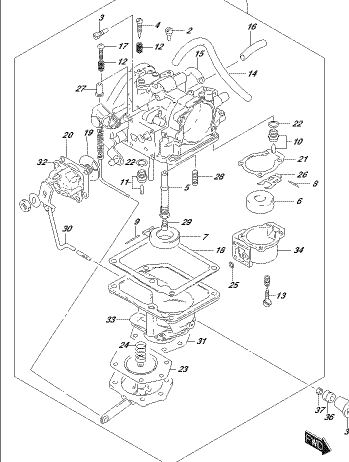


DT26,30,PAH,616,1284
CARBURNETOR

FIG.128B

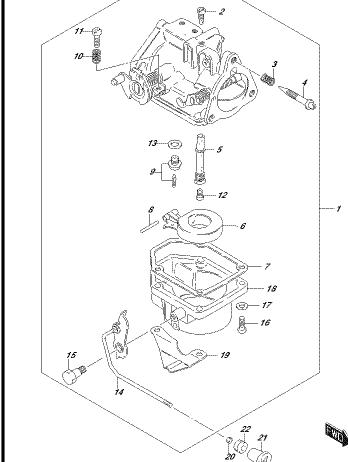


DT26,30,PAH,616,1289
CARBURNETOR

FIG. 130A

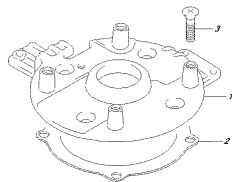


DT20E, 30, PAUL 0108, 10204
DSE, 0034, HOLDING

FIG. 130B

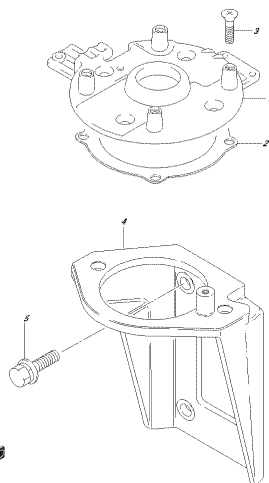


DT20E, 30, PAUL 0108, 10205
DSE, 0034, HOLDING

FIG. 141A

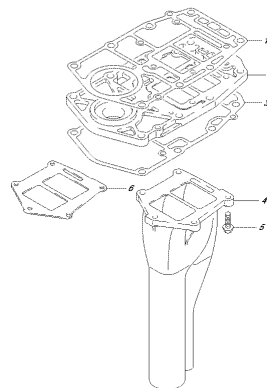


DT20E, 30, PAUL 0108, 14114
EF0403ST TUBE

FIG. 141B

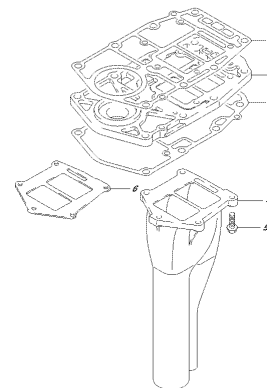


DT20E, 30, PAUL 0108, 14119
EF0403ST TUBE

FIG. 146A

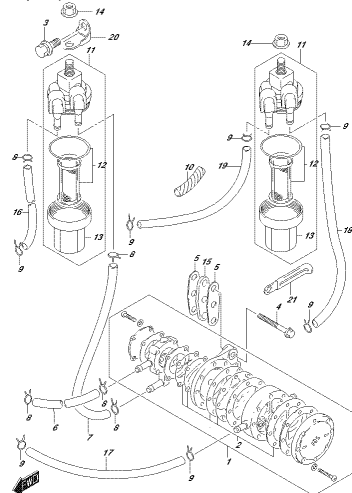


DT20E, 30, PAUL 0108, 14604
FUEL PUMP

FIG. 146B

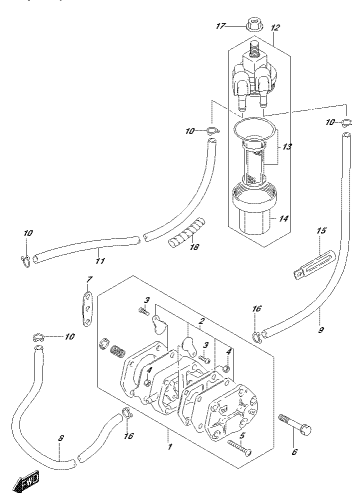


DT20E, 30, PAUL 0108, 14605
FUEL PUMP

FIG. 160A

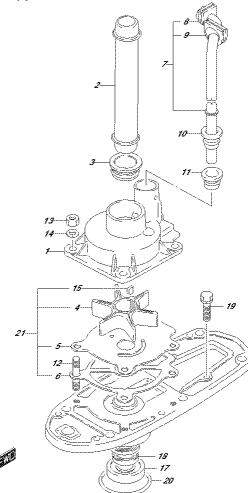


DT20E, 30, PAUL 0108, 16004
BATTERY PUMP

FIG. 160B

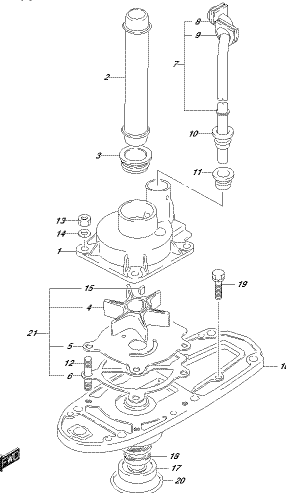


DT20E, 30, PAUL 0108, 16005
BATTERY PUMP

FIG.166A

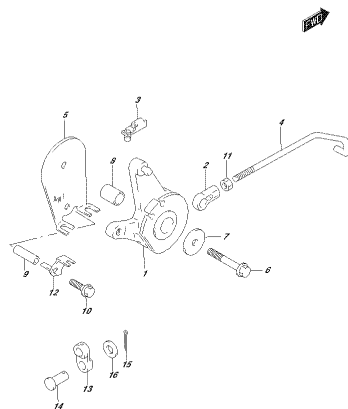


DT28, 30, PAUL, 018, 1004
THROTTLE CONTROL

FIG.166B

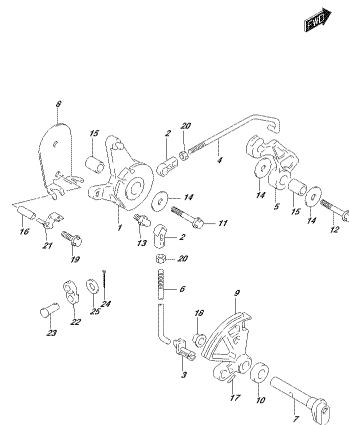


DT28, 30, PAUL, 018, 1008
THROTTLE CONTROL

FIG.167A

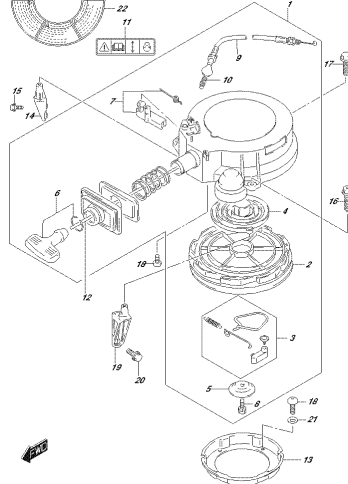


DT28, 30, PAUL, 018, 1074
REGOL. STARTER

FIG.167B

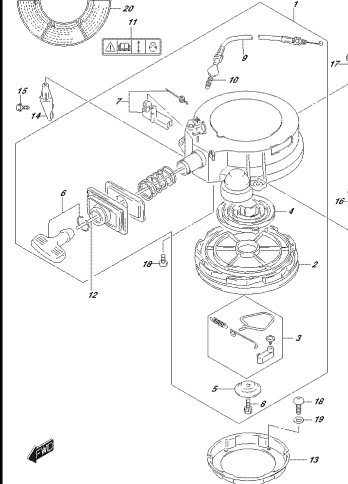


DT28, 30, PAUL, 018, 1079
REGOL. STARTER

FIG.201A

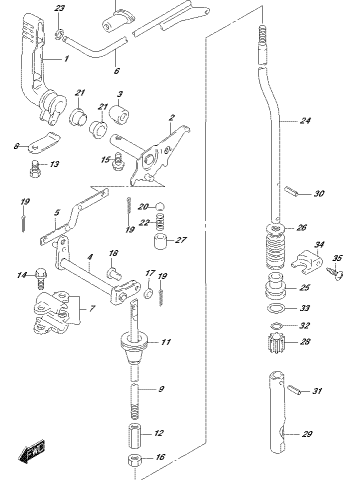


DT28, 30, PAUL, 018, 2014
CLUTCH

FIG.201B

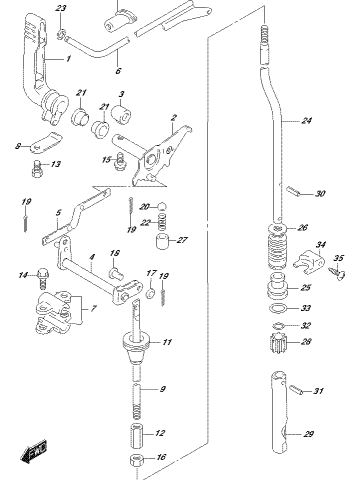


DT28, 30, PAUL, 018, 2019
CLUTCH

FIG.201C

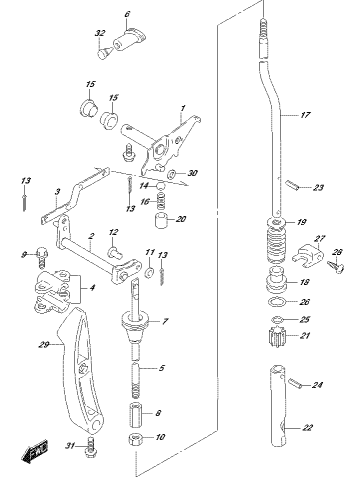


DT28, 30, PAUL, 018, 201C
CLUTCH

FIG.220A

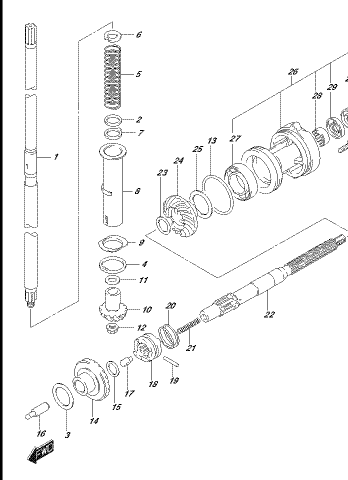


DT28, 30, PAUL, 018, 220A
TRANSMISSION

FIG.220B

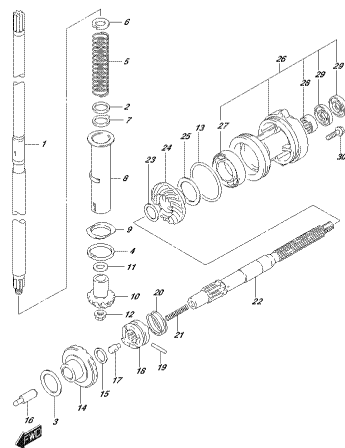


DT28_02_P4H_018_3028
STAGNOLMAGNETO

FIG.301A

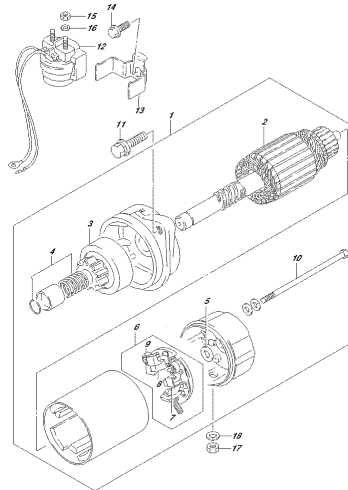


DT28_02_P4H_018_3014
STAGNOLMAGNETO

FIG.303A

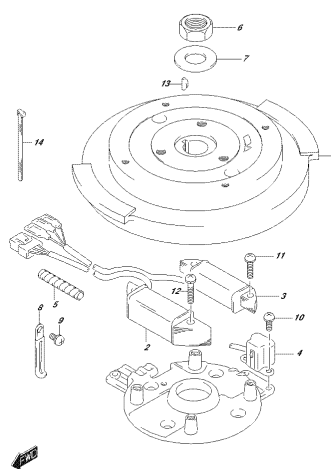


DT28_02_P4H_018_3034
MAGNETO

FIG.303B

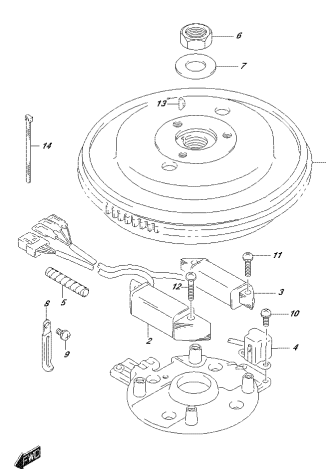


DT28_02_P4H_018_3038
MAGNETO

FIG.303C

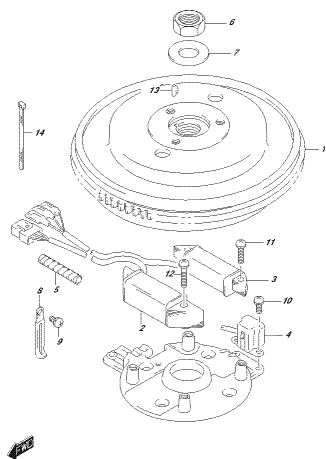


DT28_02_P4H_018_303C
MAGNETO

FIG.308A

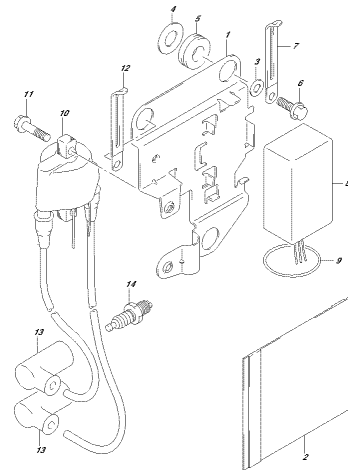


DT28_02_P4H_018_308A
IGNITION

FIG.308B

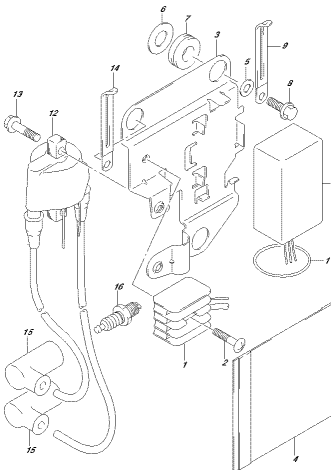


DT28_02_P4H_018_308B
IGNITION

FIG.308C

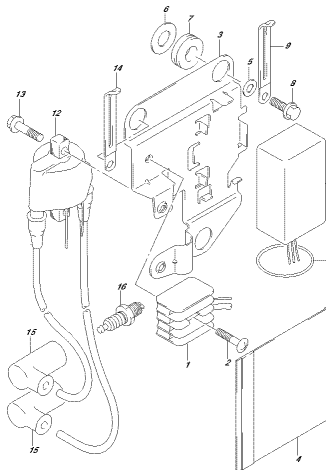


DT28_02_P4H_018_308C
IGNITION

FIG.322A

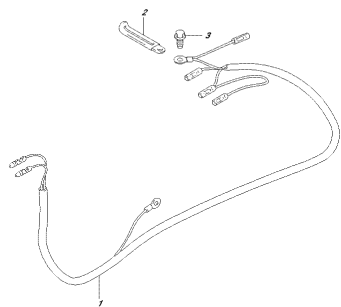


DT28,AL PAUL,616,3324
WARGESS

FIG.322B

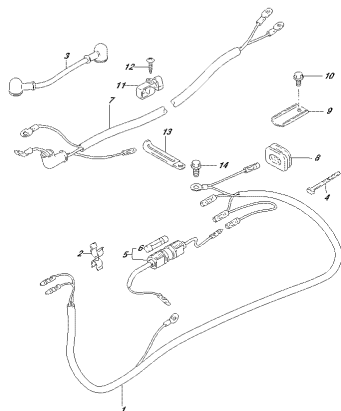


DT28,AL PAUL,616,3329
WARGESS

FIG.322C

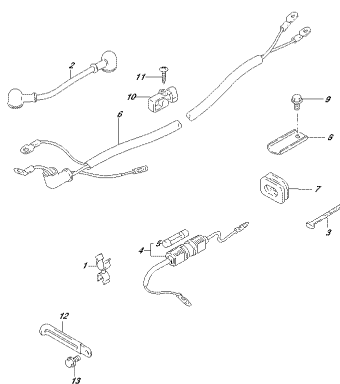


DT28,AL PAUL,616,3326
WARGESS

FIG.324A

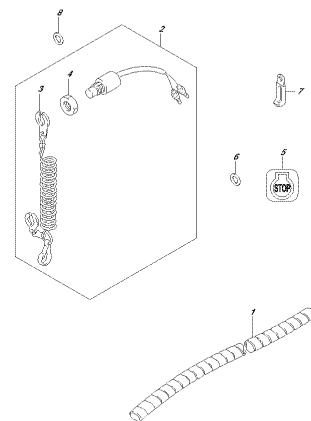


DT28,AL PAUL,616,3344
SWITCH

FIG.324B

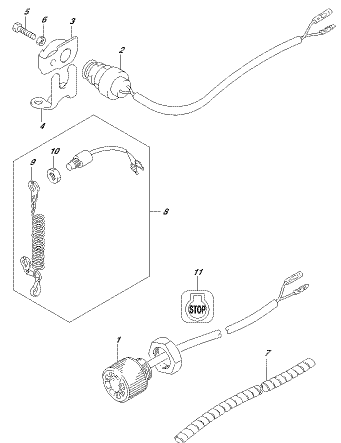


DT28,AL PAUL,616,3349
SWITCH

FIG.324C

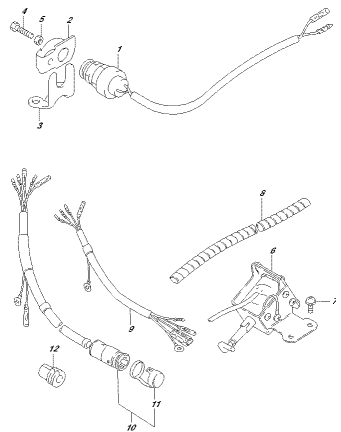


DT28,AL PAUL,616,3346
SWITCH

FIG.335A

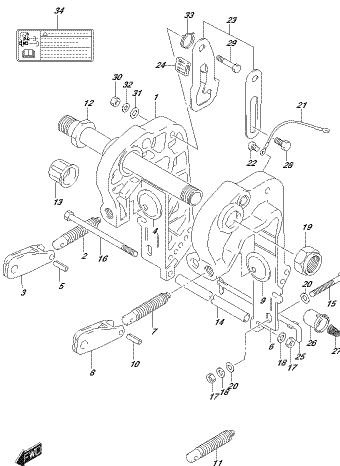


DT28,AL PAUL,616,3354
CLAMP BRACKET

FIG.336A

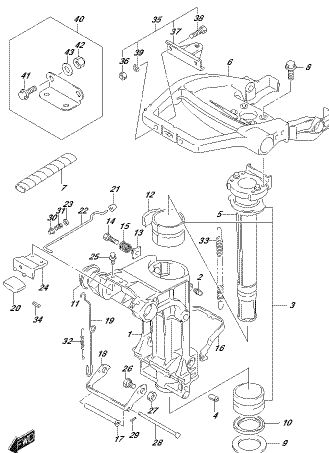


DT28,AL PAUL,616,3364
SWING BRACKET

FIG.336B

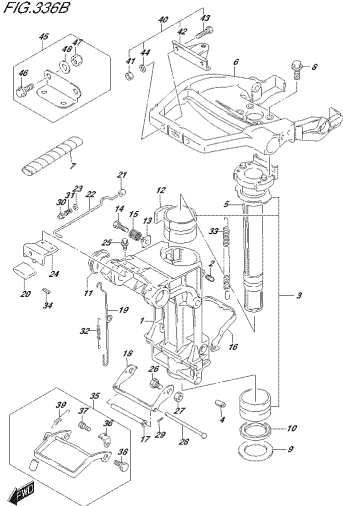

DT28, 30, PAUL, 418, 438B
COVER/SHROTT

FIG.336C

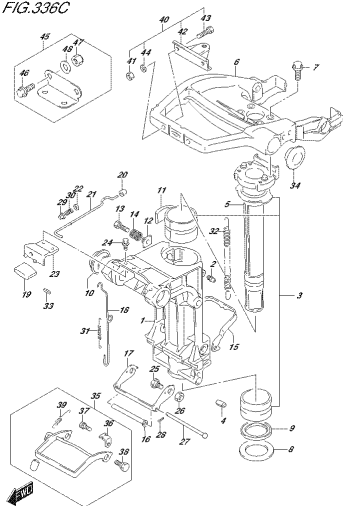

DT28, 30, PAUL, 418, 438C
COVER/SHROTT

FIG.405A



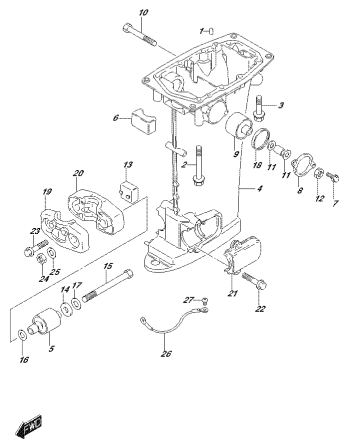


FIG.420A

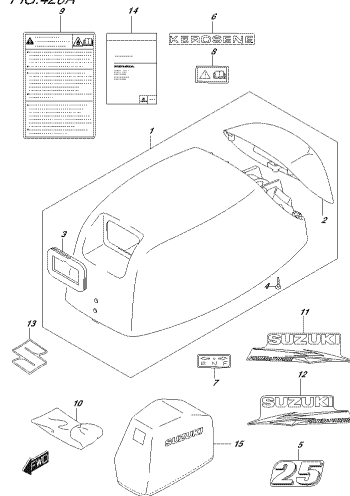


DT10E, 30, PAH, 61H, 420A
ENGINE COVER

FIG.420B

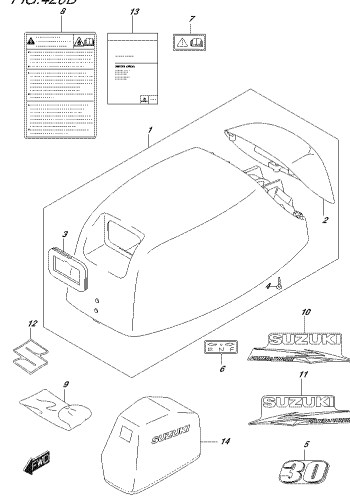


DT10E, 30, PAH, 61H, 420B
ENGINE COVER

FIG.420C

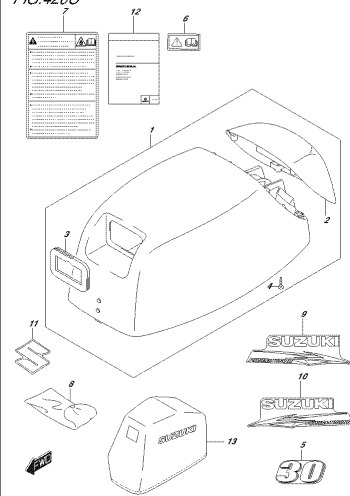


DT10E, 30, PAH, 61H, 420C
ENGINE COVER

FIG.432A

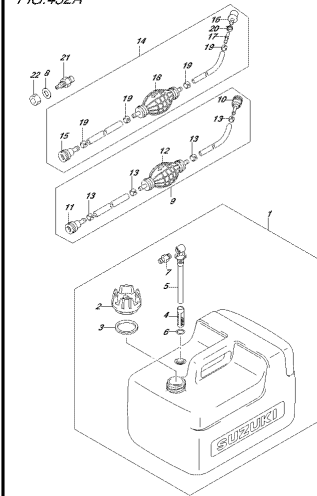


DT10E, 30, PAH, 61H, 432A
FUEL TANK

FIG.432B

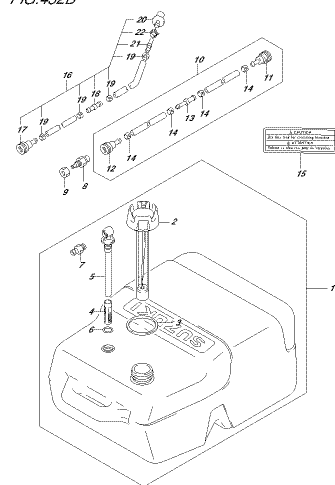


DT10E, 30, PAH, 61H, 432B
FUEL TANK

FIG.432C

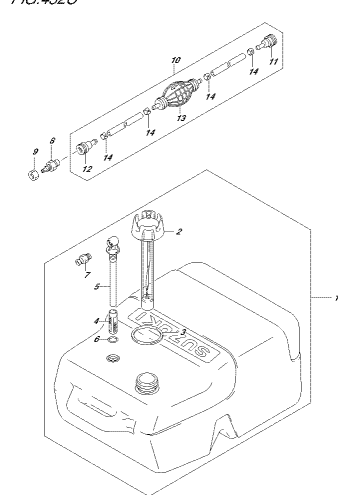


DT10E, 30, PAH, 61H, 432C
FUEL TANK

FIG.432D

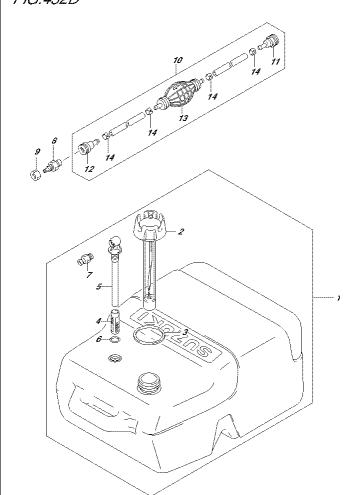


DT10E, 30, PAH, 61H, 432D
FUEL TANK

FIG.442A

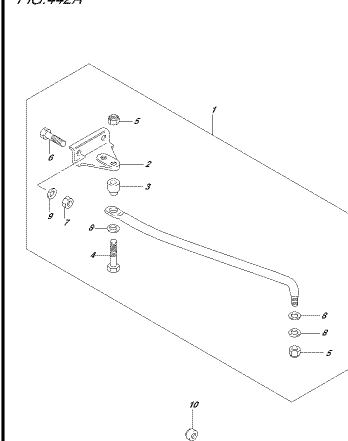


DT10E, 30, PAH, 61H, 442A
FUEL TANK

FIG.444A

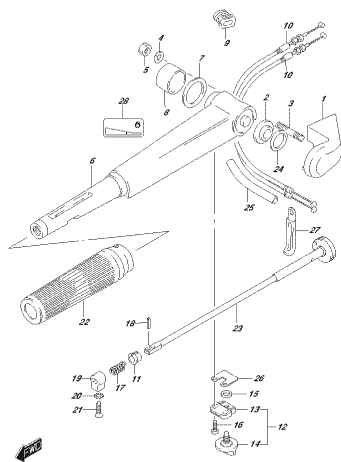


DT28_30_P04_016_444A
TELECOM-VALEO

FIG.444B

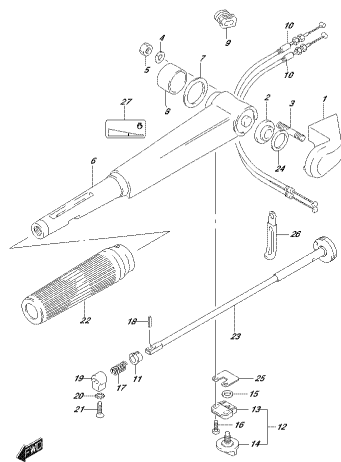


DT28_30_P04_016_444B
TELECOM-VALEO

FIG.450A

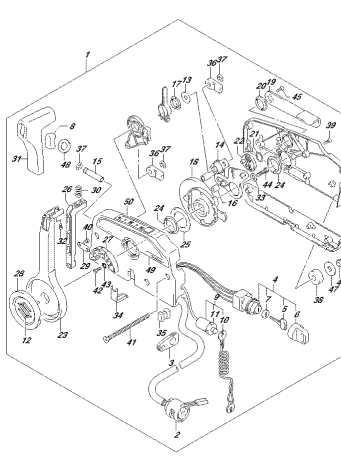


DT28_30_P04_016_450A
REMOIE-CONTRON

FIG.451A

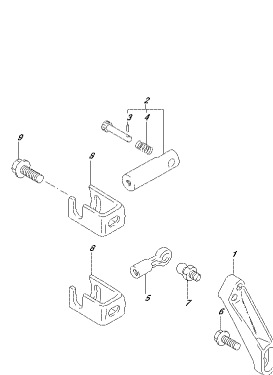


DT28_30_P04_016_451A
REAGCON-PAFOT

FIG.501A

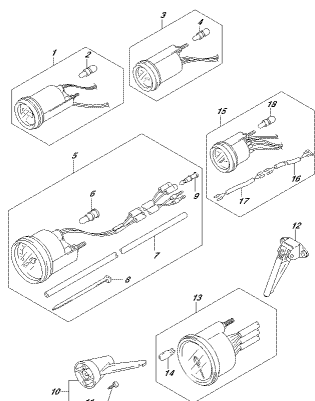


DT28_30_P04_016_501A
OPT-METEX

FIG.508A

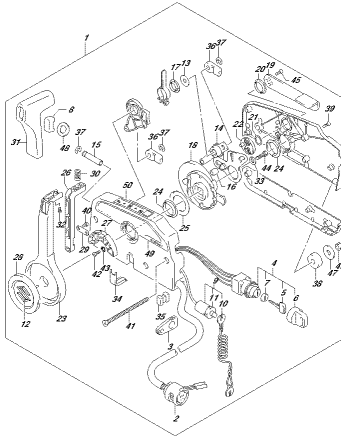


DT28_30_P04_016_508A
OPT-REMOIE-CONTRON

FIG.514A

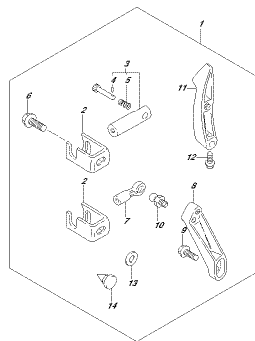


DT28_30_P04_016_514A
OPT-REAGCON-PAFOT

FIG.533A

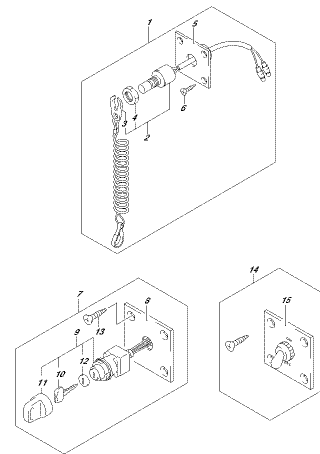


DT28_30_P04_016_533A
OPT-SWITCH-PANAL

FIG.533B

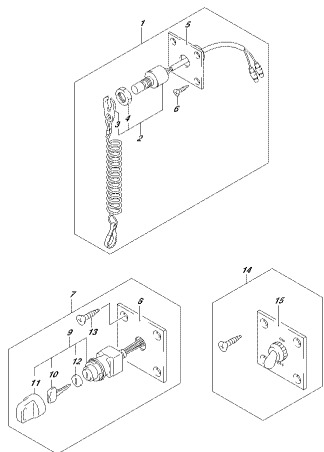


DT28, 30, PAH, 61H, 833B
OPT.ELECTRIC PANEL

FIG.550A

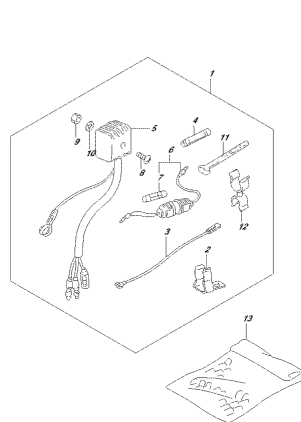


DT28, 30, PAH, 61H, 833A
OPT.ELECTRIC

FIG.550B

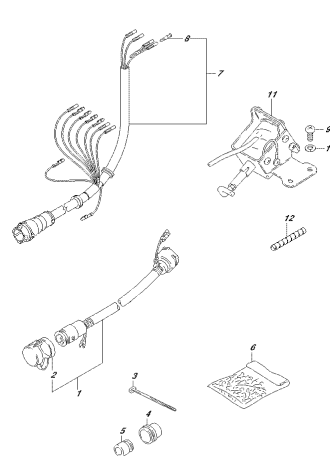


DT28, 30, PAH, 61H, 833B
OPT.ELECTRIC

FIG.553A

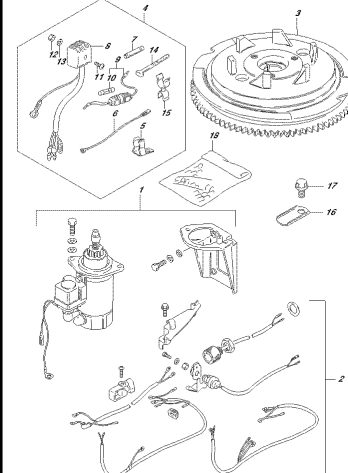


DT28, 30, PAH, 61H, 833A
OPT.ELECTRIC (MANUAL STARTER)

FIG.554A

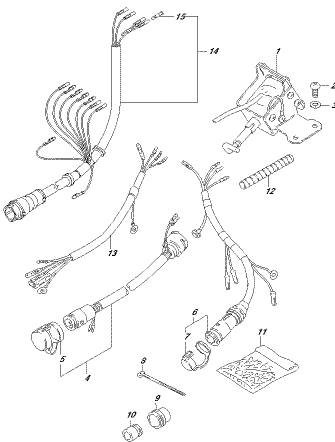


DT28, 30, PAH, 61H, 834A
OPT.ELECTRIC (ELECTRIC STARTER)

FIG.575A

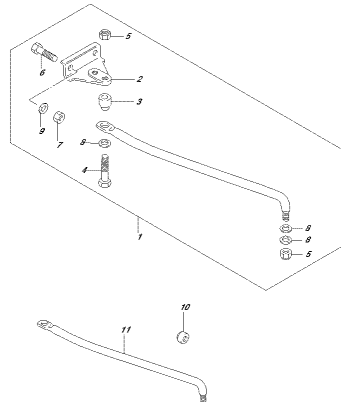


DT28, 30, PAH, 61H, 833A
OPT.BRAG LAMP

FIG.580A

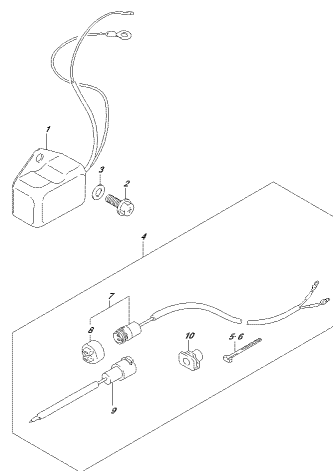

DT28, 30, PAH, 61H, 833A
OPT.REGULATOR

FIG.580B

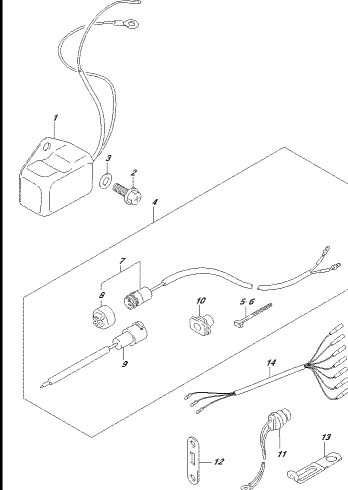

DT28, 30, PAH, 61H, 833B
OPT.REGULATOR

FIG. 580C

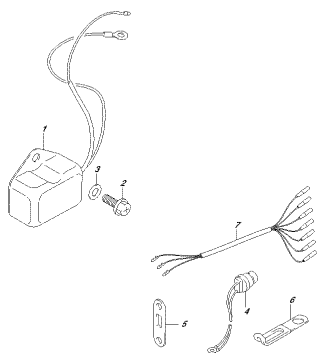


FIG. 580C
OFF-REGULATOR

FIG.112A


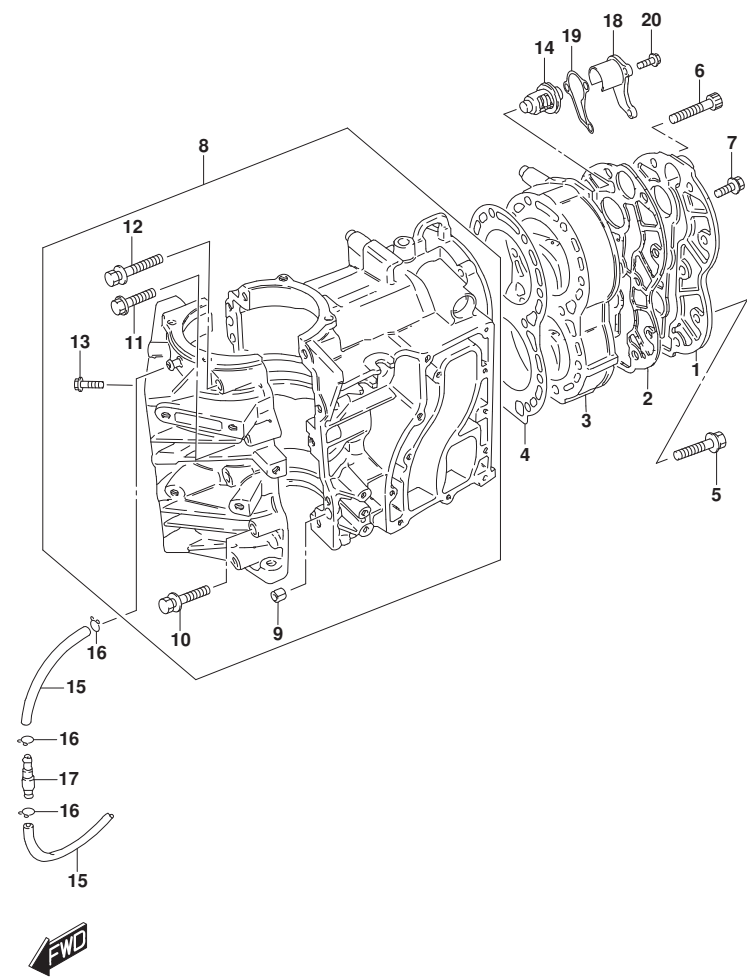


FIG.112A (1-B-2) CYLINDER (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-91L10	COVER, CYLINDER HEAD	1	
2	11162-96310	GASKET, CYLINDER HEAD COVER	1	
3	11111-91L30	CYLINDER HEAD (KEROSENE)	1	
4	11141-96344	GASKET, CYLINDER HEAD	1	
5	01560-08657	BOLT	8	
6	11119-91L00	BOLT, CYLINDER HEAD NO.2	2	
7	01550-0625C	BOLT	2	
8	11300-91L40	CYLINDER ASSY	1	
9	04211-09109	.PIN	2	
10	01560-08557	.BOLT	4	
11	01560-08457	.BOLT	2	
12	01560-08607	.BOLT	2	
13	01550-06257	.BOLT	4	
14	17670-93953	THERMOSTAT (60sC)	1	
15	09343-03510	HOSE (3.1X6.8X180)	2	
16	09401-06406	CLIP	4	
17	16710-95211	CHECK VALVE	1	
18	17681-91L10	COVER, THERMOSTAT	1	
19	17685-96300	GASKET, THERMOSTAT	1	
20	01550-0620C	BOLT	3	

DT25K P36

FIG.112B (1-B-3) CYLINDER (DT30)(DT30R)



DT30 P40
DT30R P40

FIG.116A

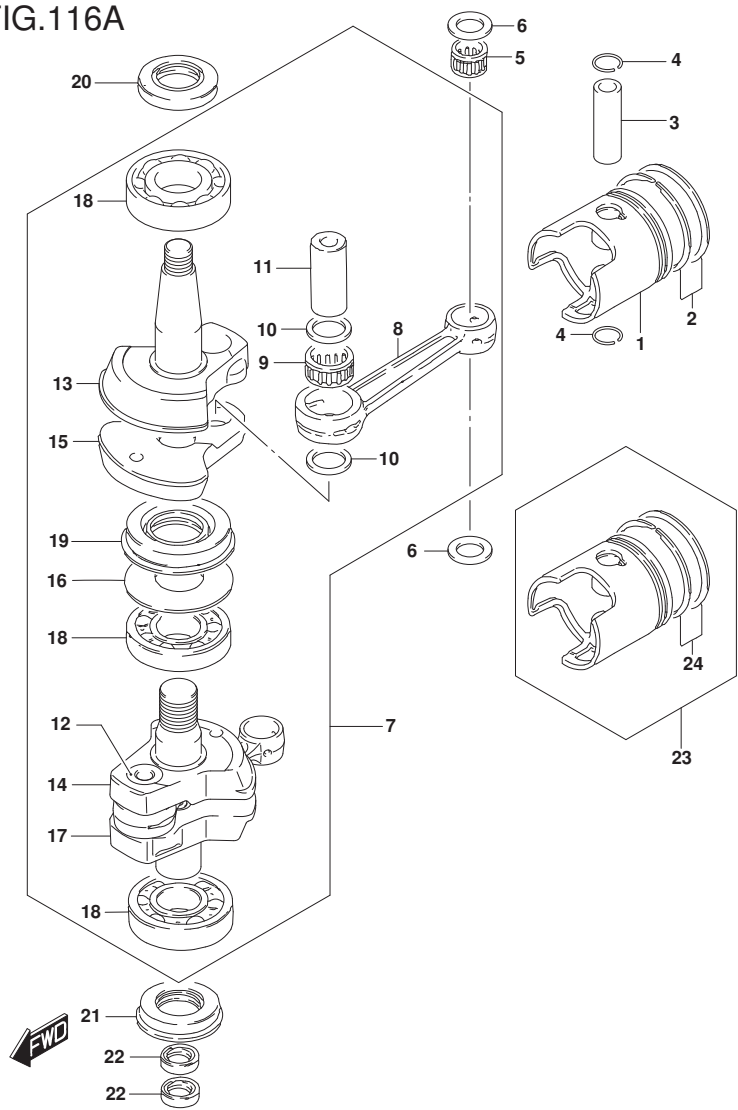


FIG.116A (1-B-4) CRANKSHAFT (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-91L00-0B0	PISTON (NONE)	2	
2	12140-91L10	RING SET, PISTON	2	
3	12151-92502	PIN, PISTON	2	
4	09381-18002	SNAP RING	4	
5	09263-18016	BEARING (18X23X22)	2	
6	09169-18001	WASHER	4	
7	12200-91L41	CRANKSHAFT ASSY (KEROSENE)	1	
8	12161-96300	.ROD, CONNECTING	2	
9	09263-24018	.BEARING (24X32X20)	2	
10	09181-24001	.WASHER (24X31.5X1)	4	
11	12211-96311	.PIN, CRANK UPPER	1	
12	12211-96311	.PIN, CRANK LOWER	1	
13	12221-91L30	.CRANKSHAFT, UPPER	1	
14	12232-91L31	.WHEEL, MIDDLE UNDER	1	
15	12231-91L30	.WHEEL, MIDDLE UPPER	1	
16	09160-50002	.WASHER (50X77X1)	1	
17	12240-91L30	.CRANKSHAFT, UNDER	1	
18	09262-30055	.BEARING (30X72X19)	3	
19	09289-39L01	.OIL SEAL (38X72X12)	1	
20	09283-30L03	OIL SEAL (30X55X10)	1	
21	09283-30062	OIL SEAL (30X55X8)	1	
22	09282-15009	OIL SEAL (14.7X25X6.5)	2	
23	12100-91L00-050	PISTON/RING SET (OS:0.50)	2	OPT
24	12140-96351-050	.RING SET, PISTON (OS:0.50)	2	OPT

DT25K P36

FIG.116B

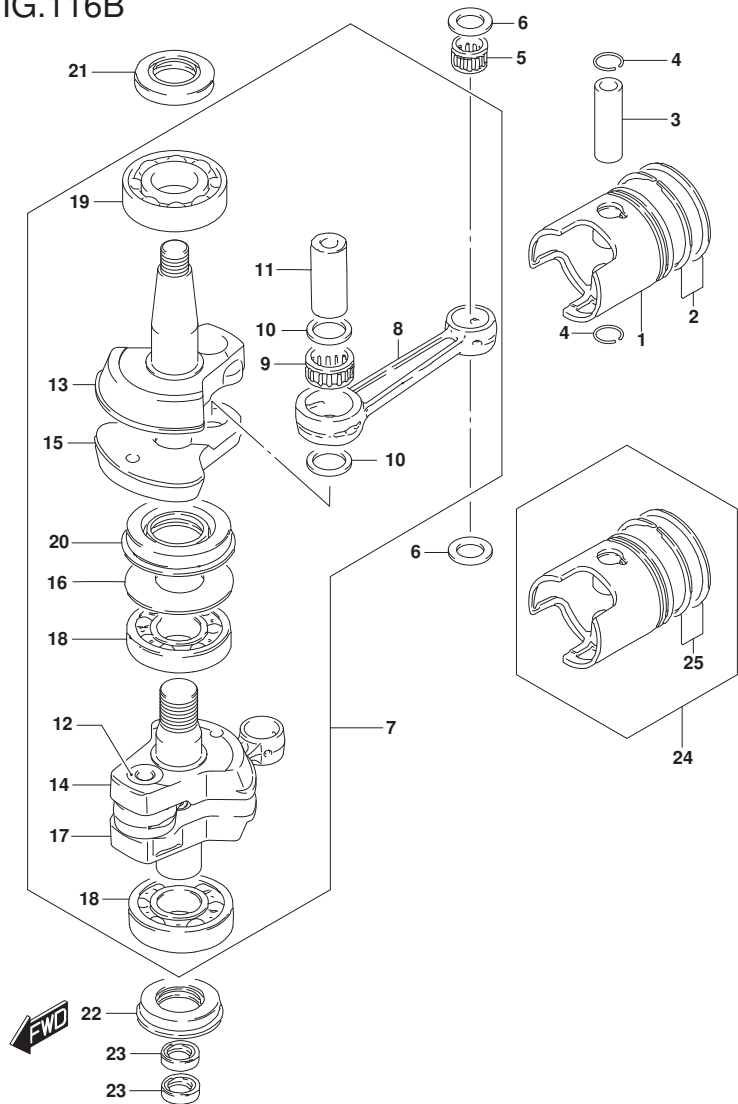


FIG.116B (1-B-5) CRANKSHAFT (DT30)(DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-91L00-0B0	PISTON (NONE)	2	
2	12140-91L00	RING SET, PISTON	2	
3	12151-92502	PIN, PISTON	2	
4	09381-18002	SNAP RING	4	
5	09263-18016	BEARING (18X23X22)	2	
6	09169-18001	WASHER	4	
7	12200-91L31	CRANKSHAFT ASSY	1	
8	12161-96300	.ROD, CONNECTING	2	
9	09263-24018	.BEARING (24X32X20)	2	
10	09181-24001	.WASHER (24X31.5X1)	4	
11	12211-96311	.PIN, CRANK UPPER	1	
12	12211-96311	.PIN, CRANK LOWER	1	
13	12221-91L30	.CRANKSHAFT, UPPER	1	
14	12232-91L31	.WHEEL, MIDDLE UNDER	1	
15	12231-91L30	.WHEEL, MIDDLE UPPER	1	
16	09160-50002	.WASHER (50X77X1)	1	
17	12240-91L30	.CRANKSHAFT, UNDER	1	
18	09262-30055	.BEARING (30X72X19)	2	
19	09262-30055	.BEARING (30X72X19)	1	
20	09289-39L01	.OIL SEAL (38X72X12)	1	
21	09283-30L03	OIL SEAL (30X55X10)	1	
22	09283-30062	OIL SEAL (30X55X8)	1	
23	09282-15009	OIL SEAL (14.7X25X6.5)	2	
24	12100-91L00-050	PISTON/RING SET (OS:0.50)	2	OPT
25	12140-96351-050	.RING SET, PISTON (OS:0.50)	2	OPT

DT30 P40
DT30R P40

This exploded view diagram illustrates the assembly of a vehicle's front suspension and steering components. The parts are numbered 1 through 19, indicating their assembly sequence. Key components include:

- 1**: A small bolt or pin.
- 2**: A small rectangular component, possibly a bush or spacer.
- 3**: A control arm.
- 4**: A control arm.
- 5**: A steering knuckle or hub assembly.
- 6**: A steering knuckle or hub assembly.
- 7**: A bolt or pin.
- 8**: A control arm.
- 9**: A control arm.
- 10**: A control arm.
- 11**: A control arm.
- 12**: A large bolt or pin.
- 13**: A bolt or pin.
- 14**: A small bolt or pin.
- 15**: A control arm.
- 16**: A control arm.
- 17**: A control arm.
- 18**: A control arm.
- 19**: A large circular component, likely a brake disc or rotor.

The diagram shows the relationship between these parts, including the steering knuckle (5, 6), control arms (3, 4, 8, 9, 10, 11, 15, 16, 17, 18), and the brake disc (19). A directional arrow labeled "FWD" indicates the front of the vehicle.

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0625C	BOLT	8	
2	08316-10067	NUT	2	
3	12481-91L10	CASE, INLET (KEROSENE)	1	
4	13121-96400	GASKET, INLET CASE	1	
5	13125-95210	GASKET, CARBURETOR	1	
6	01411-0820A	STUD BOLT	1	
7	01411-0620A	STUD BOLT	2	
8	13150-91L00	VALVE ASSY, REED	1	
9	13152-91L00	.STOPPER, REED VALVE	4	
10	13153-91L00	.VALVE, REED	4	
11	02112-3306A	.SCREW	12	
12	02142-06357	SCREW	2	
13	02122-0616A	SCREW	1	
14	08316-10087	NUT	2	
15	14151-96311	GASKET, EXHAUST COVER	2	
16	14131-91L10	PLATE, EXHAUST	1	
17	14141-91L10	COVER, EXHAUST	1	
18	01550-0630C	BOLT	12	
19	13811-96351	CASE, SILENCER	1	

DT25K P36

FIG.125B

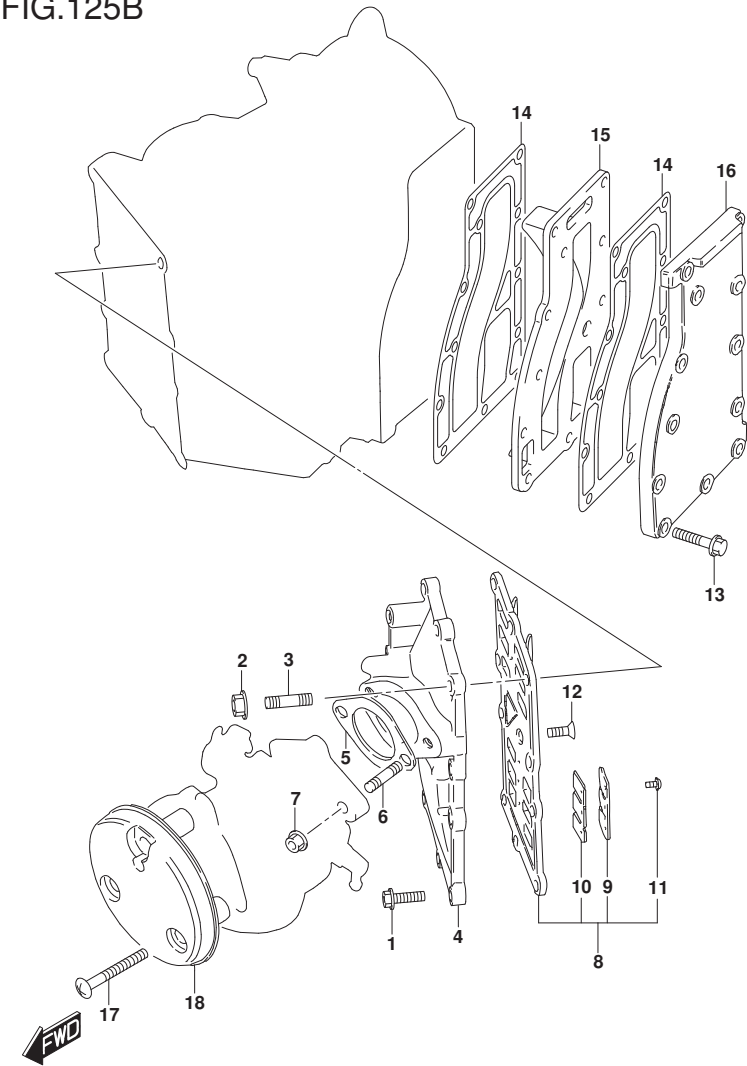


FIG.125B (1-B-7) INLET CASE (DT30)(DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0625C	BOLT	8	
2	08316-10067	NUT	2	
3	01411-0620A	STUD BOLT	2	
4	12481-91L00	CASE, INLET (BLACK)	1	
5	13125-93010	GASKET, CARBURETOR	1	
6	01411-0820A	STUD BOLT	2	
7	08316-10087	NUT	2	
8	13150-91L00	VALVE ASSY, REED	1	
9	13152-91L00	.STOPPER, REED VALVE	4	
10	13153-91L00	.VALVE, REED	4	
11	02112-3306A	.SCREW	12	
12	02122-0616A	SCREW	1	
13	01550-0630C	BOLT	12	
14	14151-96311	GASKET, EXHAUST COVER	2	
15	14131-91L10	PLATE, EXHAUST	1	
16	14141-91L10	COVER, EXHAUST	1	
17	02142-06407	SCREW	3	
18	13811-96300	CASE, SILENCER	1	

DT30 P40
DT30R P40

FIG.128A

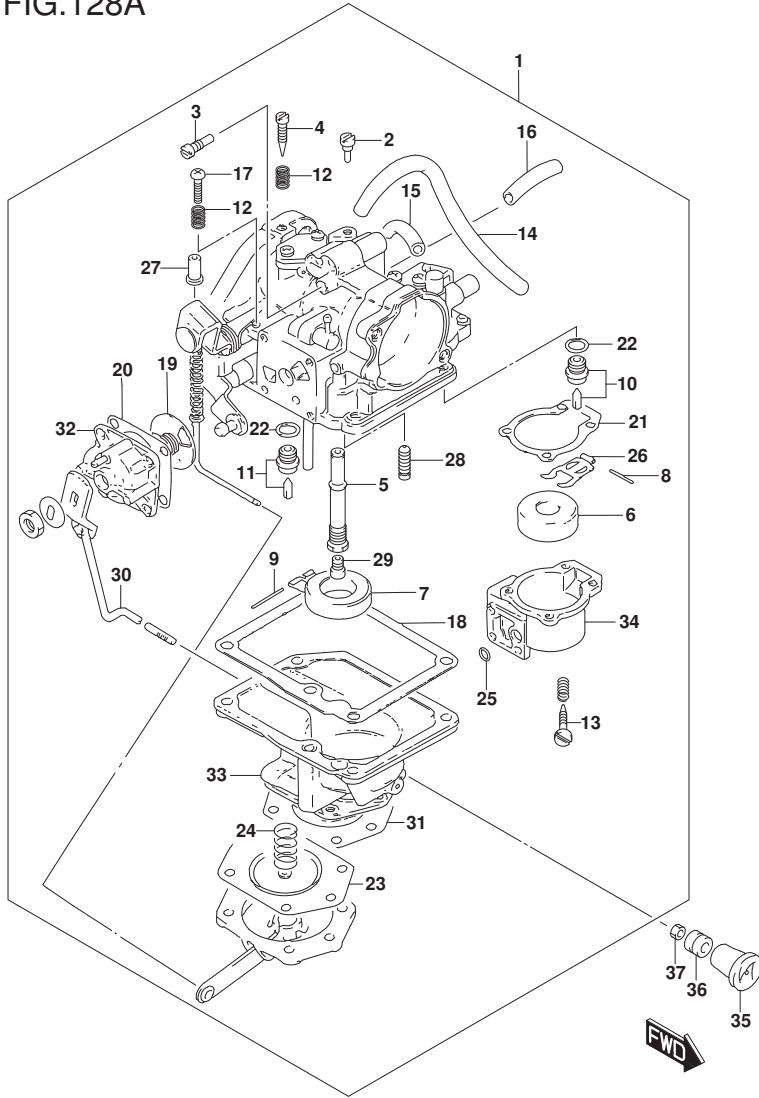


FIG.128A (1-B-8) CARBURETOR (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-96461	CARBURETOR ASSY	1	
2	09492-50008	.JET, PILOT (50)	1	FOR GASOLINE
3	09492-30017	.JET, PILOT (150)	1	FOR KEROSENE
4	13269-98100	.SCREW, PILOT	1	
5	13235-94350	.NOZZLE	1	
6	13270-94350	.FLOAT	1	FOR GASOLINE
7	13250-93012	.FLOAT	1	FOR KEROSENE
8	13254-98410	.PIN	1	FOR GASOLINE
9	13254-98300	.PIN	1	FOR KEROSENE
10	13370-94350	.VALVE ASSY, NEEDLE	1	FOR GASOLINE
11	13370-28110	.VALVE ASSY, NEEDLE	1	FOR KEROSENE
12	13268-96111	.SPRING, STOP SCREW	3	
13	13616-93900	.ADJUSTER	2	
14	13651-95300	.HOSE	1	L:175->125
15	13651-94350	.HOSE	1	L:175->28,50
16	13651-94350	.HOSE	1	L:175->28
17	13534-96300	.SCREW, THROTTLE STOP	1	
18	13245-94350	.GASKET, FLOAT CHAMBER	1	FOR KEROSENE
19	13415-94350	.DISC ASSY	1	
20	13418-94360	.GASKET	1	
21	13265-94360	.GASKET, FLOAT CHAMBER	1	FOR GASOLINE
22	13392-58600	.PACKING, NEEDLE VALVE SEAT	2	
23	13450-94350	.MEMBRANE ASSY	1	
24	13441-94350	.SPRING	1	
25	13521-78100	.O RING	1	
26	13282-94350	.ARM	1	
27	13461-94350	.NUT	1	
28	13443-94350	.VALVE ASSY	1	
29	09491-29010	.JET, MAIN (147.5)	1	
30	13580-96351	.LEVER ASSY, STARTER	1	
31	13446-94360	.GASKET	1	
32	13419-94400	.COVER, DISK STARTER	1	
33	13245-96400	.CHAMBER, FLOAT	1	FOR KEROSENE
34	13261-95200	.CHAMBER, FLOAT	1	FOR GASOLINE

FIG.128A

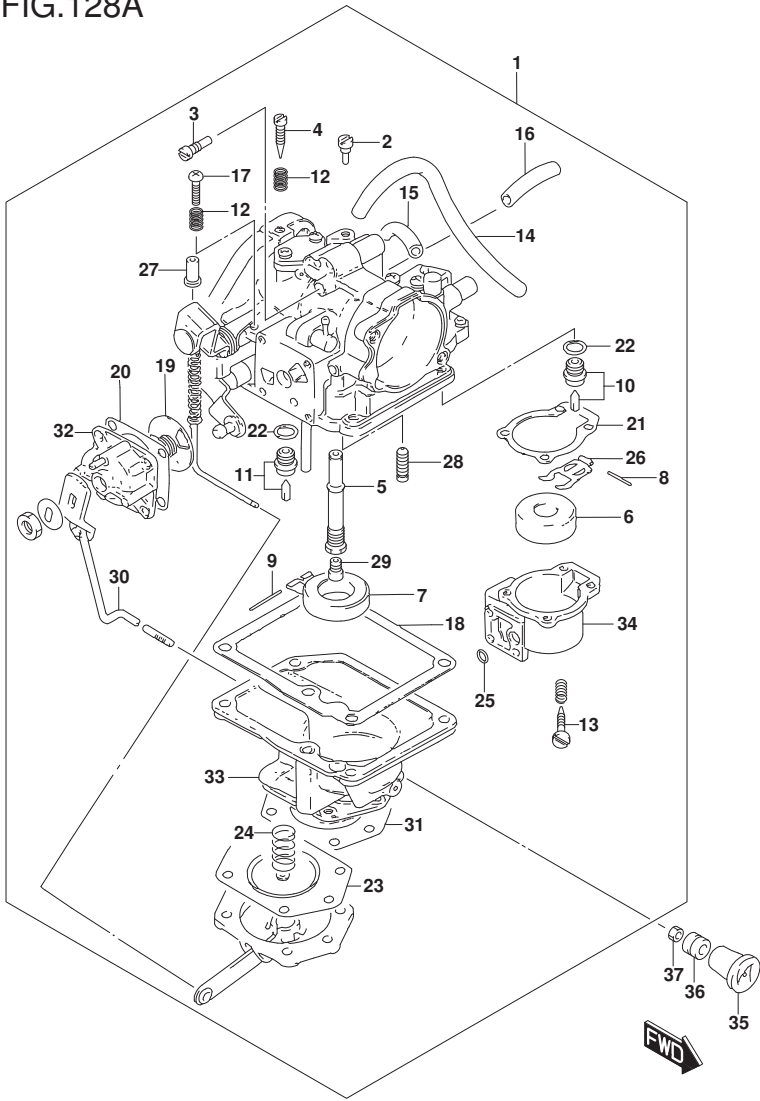


FIG.128A (1-B-9) CARBURETOR (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	13631-93501	KNOB, STARTER	1	
36	09320-04009	BUSH	1	
37	09140-04007	NUT	1	

DT25K P36

FIG.128B

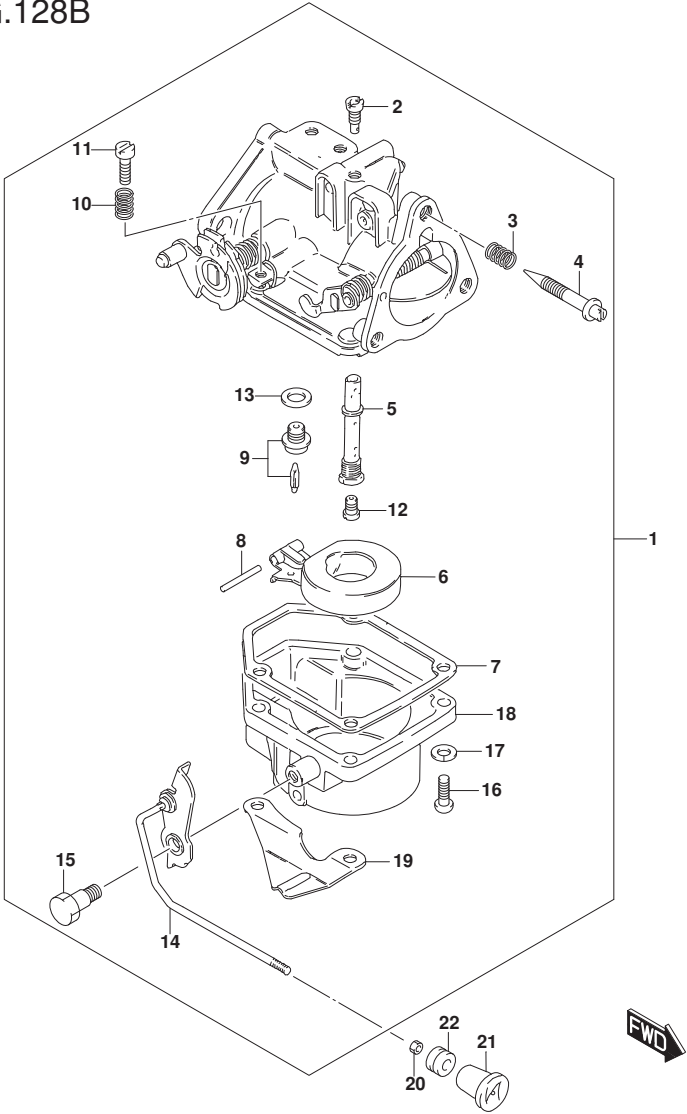


FIG.128B (1-B-10) CARBURETOR (DT30)(DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-964J0	CARBURETOR ASSY	1	
2	09492-70001	.JET, PILOT (70)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-93311	.SCREW, PILOT AIR	1	
5	13235-94350	.NOZZLE	1	
6	13250-93012	.FLOAT	1	
7	13251-93320	.GASKET, FLOAT CHAMBER	1	
8	13254-98300	.PIN, FLOAT	1	
9	13370-28110	.VALVE ASSY, NEEDLE	1	
10	13268-96111	.SPRING, THROTTLE STOP	1	
11	13534-96300	.SCREW, THROTTLE STOP	1	
12	09491-32012	.JET, MAIN (160)	1	
13	13392-58600	.GASKET, VALVE SEAT	1	
14	13681-96301	.LEVER, CHOKE	1	
15	13682-96300	.BOLT	1	
16	02112-05207	.SCREW	4	
17	08321-0105A	.WASHER	4	
18	13240-94620	.CHAMBER, FLOAT	1	
19	13694-96300	.PLATE, SPRING	1	
20	09140-04007	NUT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	

DT30 P40
DT30R P40

FIG.130A

FIG.130A (1-B-11) OIL SEAL HOUSING (MANUAL STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-91L00	HOUSING, UPPER OIL SEAL	1	
2	11413-96310	GASKET, UPPER OIL SEAL HOUSING	1	
3	02122-06167	SCREW	4	

DT25K P36
DT30 P40

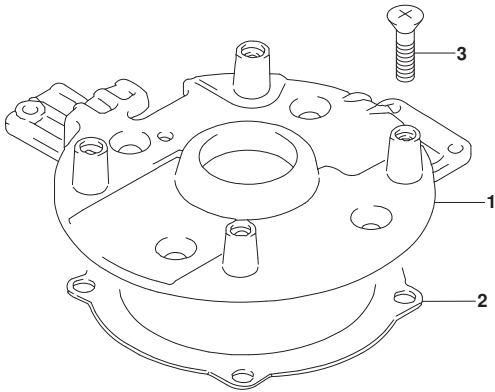


FIG.130B

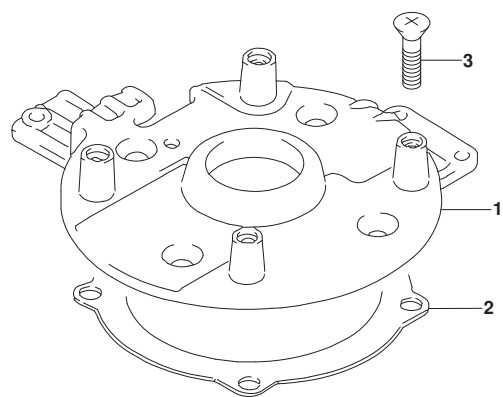


FIG.130B (1-B-12) OIL SEAL HOUSING (ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-91L00	HOUSING, UPPER OIL SEAL	1	
2	11413-96310	GASKET, UPPER OIL SEAL HOUSING	1	
3	02122-06167	SCREW	4	
4	31911-91L00	BRACKET, STARTER	1	
5	01580-08257	BOLT	4	

DT30 P40
DT30R P40

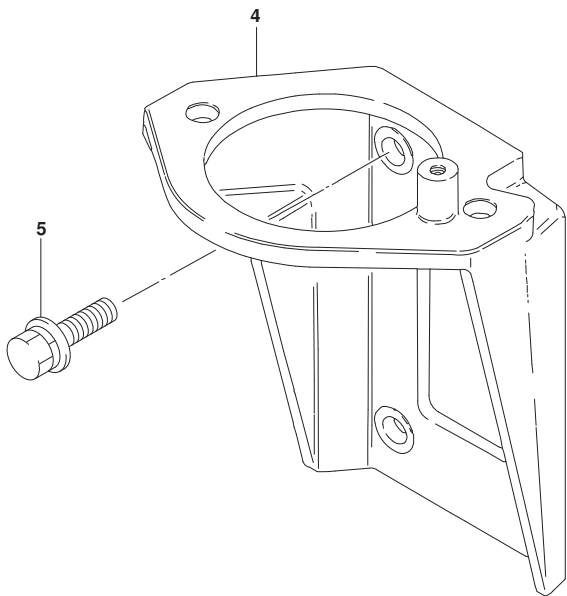


FIG.141A

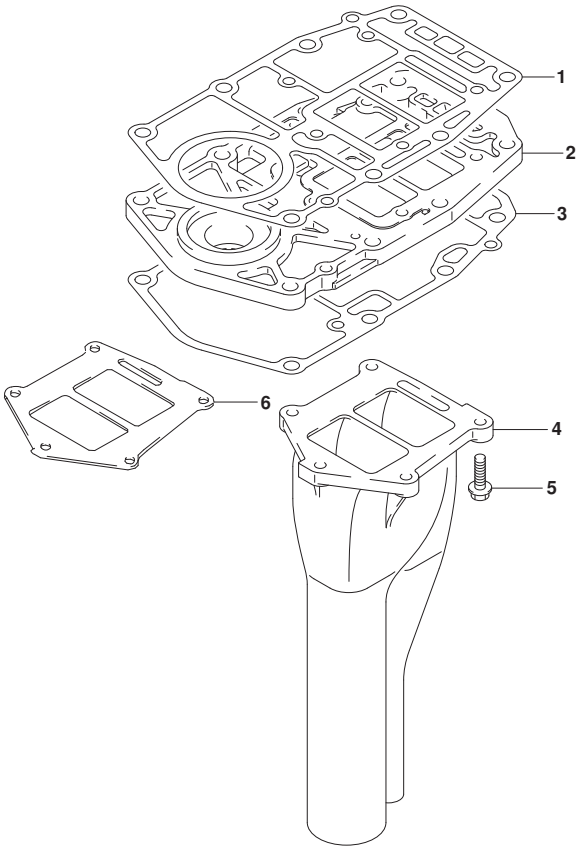


FIG.141A (1-B-13) EXHAUST TUBE TRANSOM(S)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-96330	GASKET, LOWER OIL SEAL HOUSING	1	
2	11431-91L00	HOUSING, UNDER OIL SEAL	1	
3	52113-96330	GASKET, DRIVE SHAFT HOUSING	1	
4	14211-91L10	TUBE, EXHAUST (S)	1	
5	09116-06234	BOLT (6X35)	5	
6	14212-96310	GASKET, EXHAUST TUBE	1	

DT30 P40
DT30R P40



FIG.141B

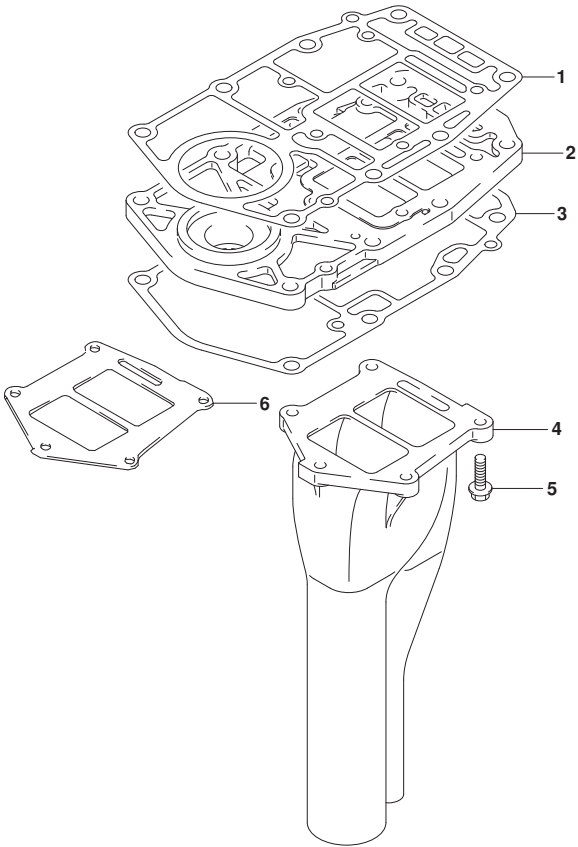



FIG.141B (1-B-14) EXHAUST TUBE TRANSOM(L)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-96330	GASKET, LOWER OIL SEAL HOUSING	1	
2	11431-91L00	HOUSING, UNDER OIL SEAL	1	
3	52113-96330	GASKET, DRIVE SHAFT HOUSING	1	
4	14211-91L00	TUBE, EXHAUST (L)	1	
5	09116-06234	BOLT (6X35)	5	
6	14212-96310	GASKET, EXHAUST TUBE	1	

DT25K P36
DT30 P40
DT30R P40



FIG.146A

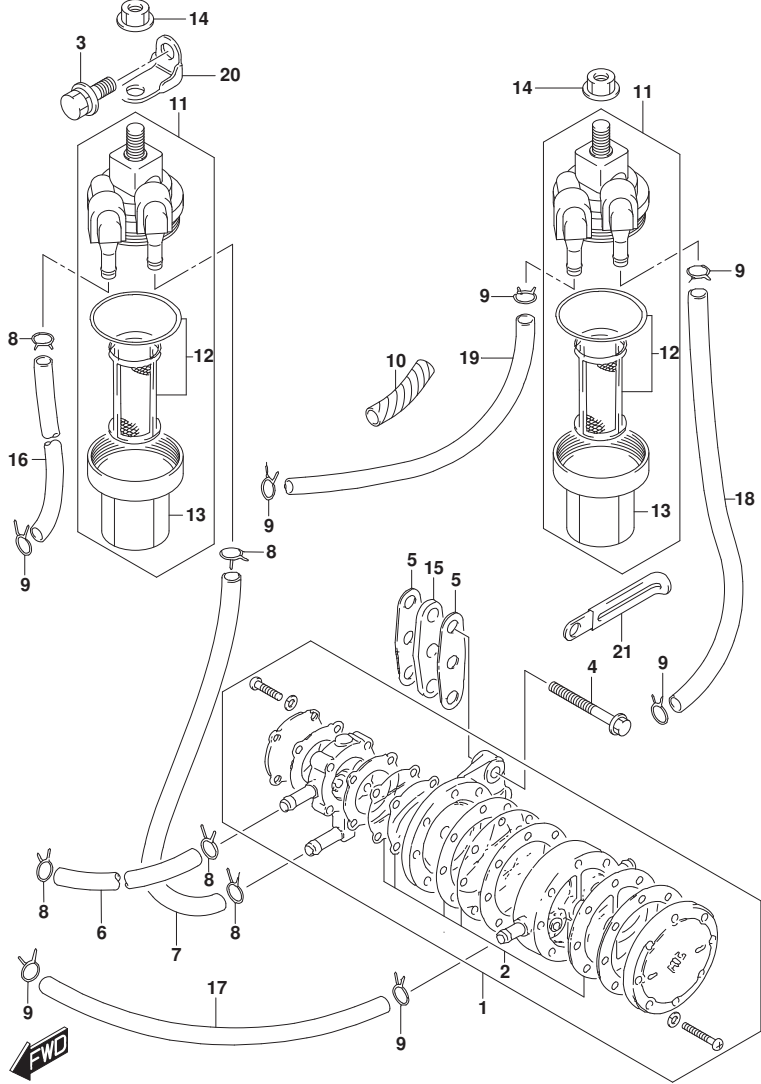

DT25_30_P40_018_146A
FUEL PUMP

FIG.146A (1-B-15) FUEL PUMP (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-9436V	PUMP ASSY, FUEL	1	
2	15170-94460	.DIAPHRAGM SET	1	
3	01580-08207	BOLT	1	
4	01550-0625C	BOLT	2	
5	15321-96300	GASKET	2	
6	15211-91J00-180	HOSE, FUEL (PUMP TO CARB)	1	FOR GASOLINE
7	15211-91J00-170	HOSE, FUEL (FILTER TO PUMP)	1	FOR GASOLINE
8	09401-08410	CLIP	5	
9	59412-91J00	CLIP	7	
10	16911-92E20	PROTECTOR	2	L:540->90
11	15410-94400	FILTER ASSY, FUEL	2	
12	15430-87D10	.ELEMENT SET	2	
13	15413-87D10	.CUP	2	
14	08316-10087	NUT	2	
15	15322-96300	INSULATOR, FUEL PUMP	1	
16	09359-50823-600	HOSE (5X8.2X600)	1	FOR GASOLINE L:600->230
17	09355-50108-300	HOSE (5X10X300)	1	FOR KEROSENE CONN TO FILTER
18	09355-50108-150	HOSE (5X10X150)	1	FOR KEROSENE PUMP TO CARB
19	09355-50108-300	HOSE (5X10X300)	1	FOR KEROSENE FILTER TO PUMP
20	15420-96300	BRACKET, FUEL FILTER	1	
21	29404-93J10	CLAMP	1	

DT25K P36

FIG.146B


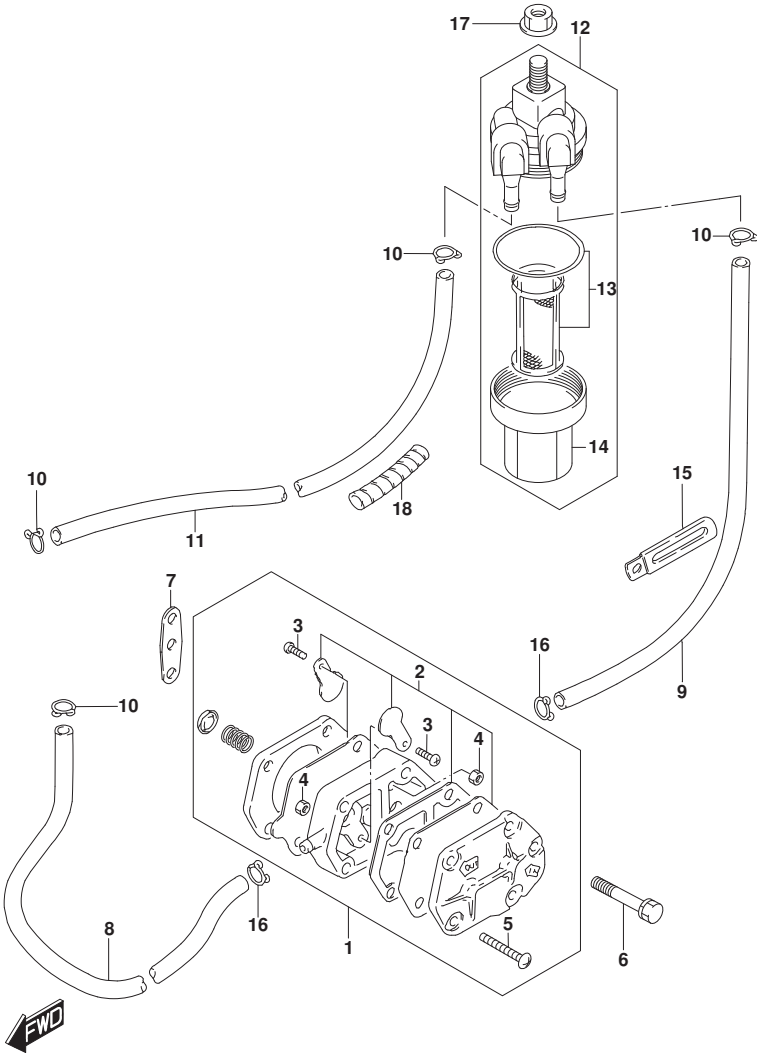


FIG.146B (1-C-2) FUEL PUMP (DT30)(DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94311	PUMP ASSY, FUEL	1	
2	15170-94320	.DIAPHRAGM SET	1	
3	15183-94301	.SCREW	2	
4	15186-94300	.NUT	2	
5	15851-94300	.SCREW	3	
6	01547-06407	BOLT	2	
7	15321-99710	GASKET, FUEL PUMP	1	
8	15211-91J00-195	HOSE, FUEL (PUMP TO CARB)	1	
9	15211-91J00-195	HOSE, FUEL (FILTER TO PUMP)	1	
10	09401-08410	CLIP	4	
11	15211-91J00-320	HOSE, FUEL (CONN TO FILTER)	1	
12	15410-94400	FILTER ASSY, FUEL	1	
13	15430-87D10	.ELEMENT SET	1	
14	15413-87D10	.CUP	1	
15	29404-93J10	CLAMP (L:65)	1	
16	15331-94300	CLIP	2	
17	08316-10087	NUT	1	
18	16911-92E20	PROTECTOR, FUEL HOSE	1	L:540->40

DT30 P40
DT30R P40

FIG.160A (1-C-3) WATER PUMP TRANSOM(S)

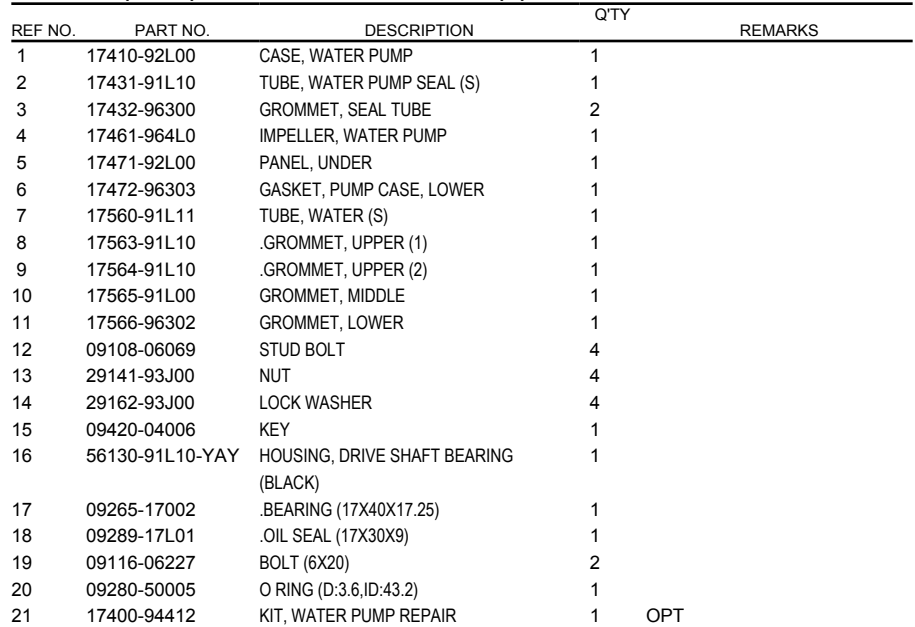

DT25_30_P40_018

FIG.160B

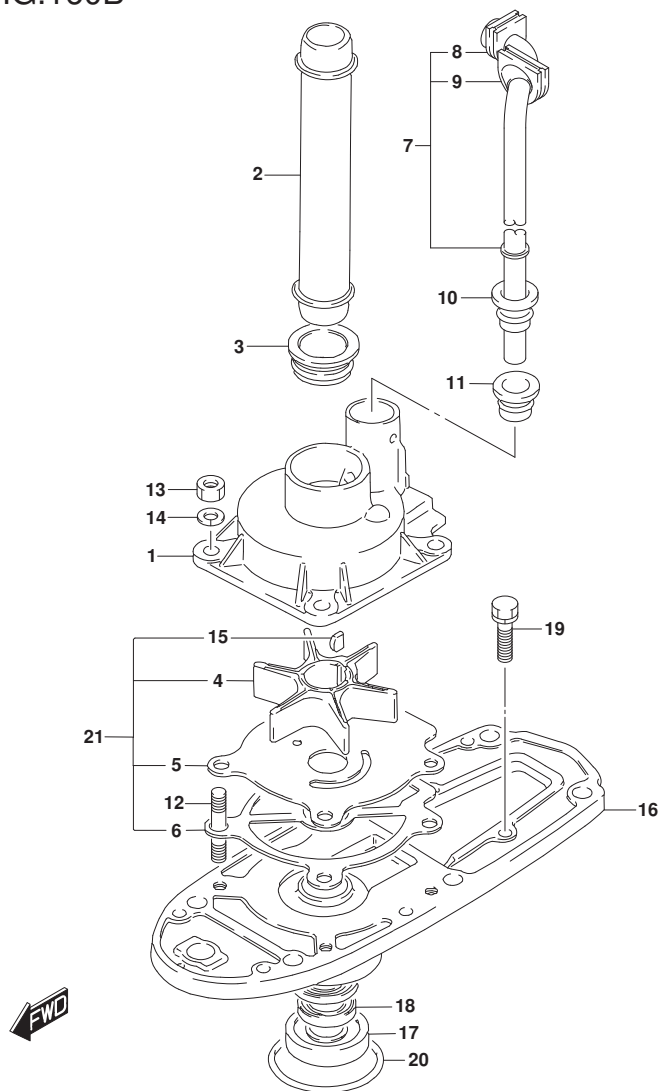


FIG.160B (1-C-4) WATER PUMP TRANSOM(L)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17410-92L00	CASE, WATER PUMP	1	
2	17431-91L00	TUBE, WATER PUMP SEAL (L)	1	
3	17432-96300	GROMMET, SEAL TUBE	2	
4	17461-964L0	IMPELLER, WATER PUMP	1	
5	17471-92L00	PANEL, UNDER	1	
6	17472-96303	GASKET, PUMP CASE, LOWER	1	
7	17560-91L01	TUBE, WATER (L)	1	
8	17563-91L10	.GROMMET, UPPER (1)	1	
9	17564-91L10	.GROMMET, UPPER (2)	1	
10	17565-91L00	GROMMET, MIDDLE	1	
11	17566-96302	GROMMET, LOWER	1	
12	09108-06069	STUD BOLT	4	
13	29141-93J00	NUT	4	
14	29162-93J00	LOCK WASHER	4	
15	09420-04006	KEY	1	
16	56130-91L10-YAY	HOUSING, DRIVE SHAFT BEARING	1	
		(BLACK)		
17	09265-17002	.BEARING (17X40X17.25)	1	
18	09289-17L01	.OIL SEAL (17X30X9)	1	
19	09116-06227	BOLT (6X20)	2	
20	09280-50005	O RING (D:3.6,ID:43.2)	1	
21	17400-94412	KIT, WATER PUMP REPAIR	1	OPT

DT25K P36
DT30 P40
DT30R P40

FIG.166A

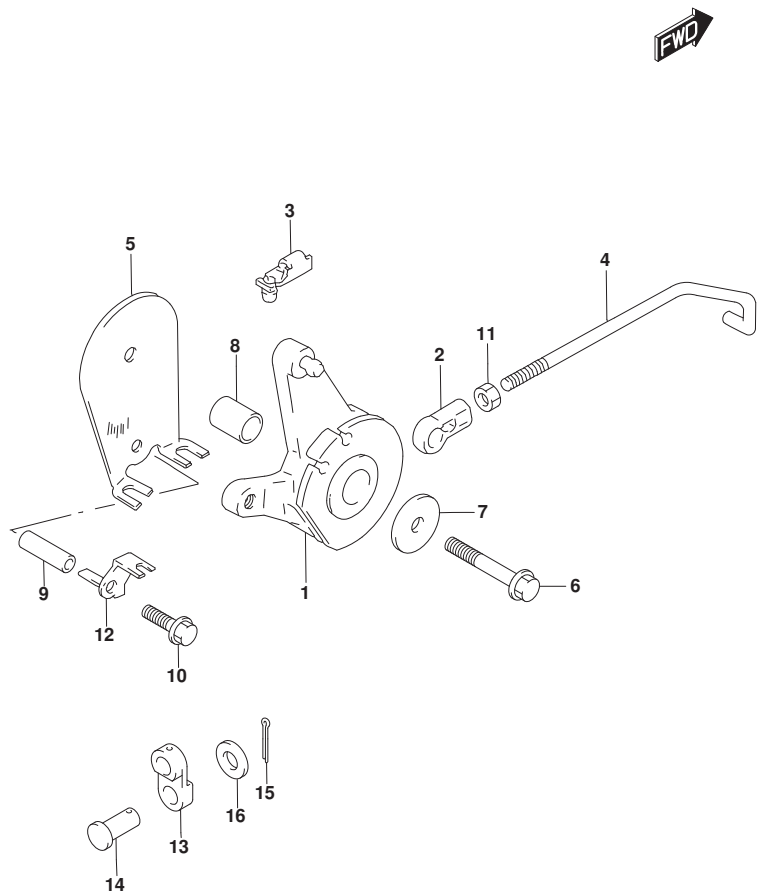


FIG.166A (1-C-5) THROTTLE CONTROL (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-91L00	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	1	
3	19132-96300	CONNECTOR, THROTTLE ROD	1	
4	19135-96350	ROD (TH LEVER TO CARB)	1	
5	19761-96351	STAY, THROTTLE CABLE	1	
6	09116-06232	BOLT (6X30)	1	
7	09160-06084	WASHER (6.5X18X1.6)	1	
8	09180-06105	SPACER (6.1X10X14)	1	
9	09180-06186	SPACER (6.2X12.6X21)	1	
10	01550-06357	BOLT	1	
11	09140-05005	NUT	1	
12	18642-96301	HOLDER, INTERLOCK CABLE	1	
13	18652-96300	CONNECTOR, INTERLOCK CABLE	1	
14	09200-05006	PIN (L:12)	1	
15	09204-01002	PIN	1	
16	09160-05029	WASHER (5.5X12X0.8)	1	

DT25K P36

FIG.166B

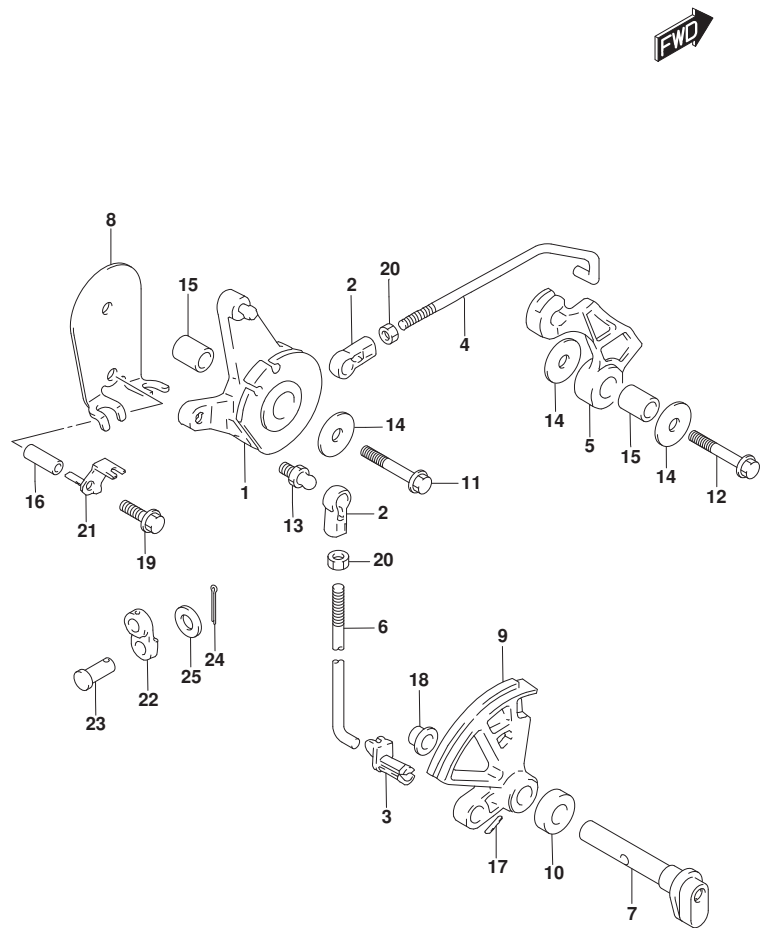


FIG.166B (1-C-6) THROTTLE CONTROL (DT30)(DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-91L00	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	2	
3	19131-96300	RETAINER, ROD CONNECTOR	1	
4	19135-96301	ROD (TH LEVER TO TH CAM)	1	
5	19141-96301	CAM, THROTTLE	1	
6	19656-96300	ROD (LIMITER TO TH LEVER)	1	
7	19720-91L00	SHAFT, REMOCON THROTTLE	1	
8	19761-91L00	STAY, THROTTLE CABLE	1	
9	19811-91L10	LIMITER, THROTTLE	1	
10	19859-94300	SPACER, NSI	1	
11	09116-06232	BOLT (6X30)	1	
12	09116-06232	BOLT (6X30)	1	
13	09119-05010	PIVOT	1	
14	09160-06084	WASHER (6.5X18X1.6)	3	
15	09180-06105	SPACER (6.1X10X14)	2	
16	09180-06186	SPACER (6.2X12.6X21)	1	
17	09205-04002	SPRING PIN (4X20)	1	
18	09306-10001	BUSH	1	
19	01550-06357	BOLT	1	
20	09140-05005	NUT	2	
21	18642-96301	HOLDER, INTERLOCK CABLE	1	
22	18652-96300	CONNECTOR, INTERLOCK CABLE	1	
23	09200-05006	PIN (L:12)	1	
24	09204-01002	PIN	1	
25	09160-05029	WASHER (5.5X12X0.8)	1	

DT30 P40
DT30R P40

FIG.167A

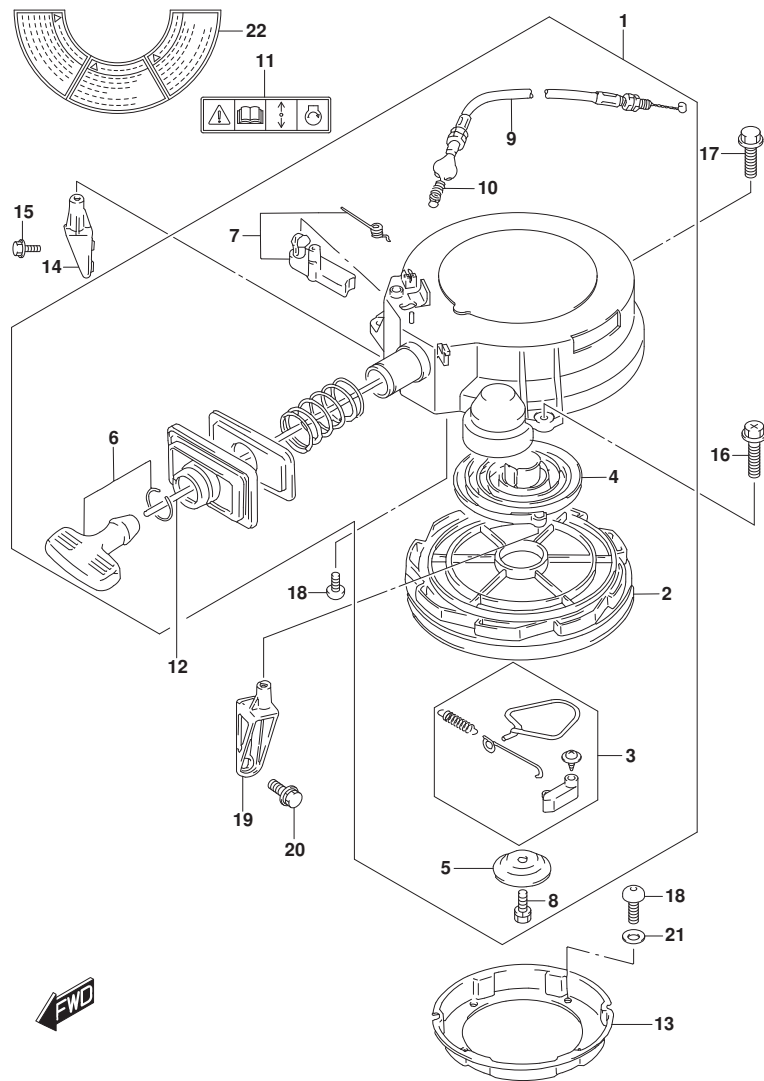


FIG.167A (1-C-7) RECOIL STARTER (MANUAL STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-91L00	STARTER ASSY, RECOIL	1	
2	18120-96320	.REEL	1	
3	18130-91L00	.RATCHET SET	1	
4	18142-96300	.SPRING, SPIRAL	1	
5	18151-96310	.PLATE, FRICTION	1	
6	18210-93002	.GRIP ASSY	1	
7	18280-96320	.NSI SET	1	
8	18132-89L00	.SCREW	1	
9	18290-91L00	.CABLE, NSI	1	
10	18293-96310	.SPRING	1	
11	69711-93E10	LABEL, S.I.G.P	1	
12	99000-81159-50M	ROPE	1	OPT L:50000->1750
13	18411-96301	CUP, STARTER	1	
14	18711-91L10	BRACE, RECOIL STARTER STBD	1	
15	01550-0620C	BOLT	2	BRACE STBD
16	01550-0620C	BOLT	2	
17	01550-08257	BOLT	1	
18	09106-06098	BOLT (6X12)	4	
19	18721-91L10	BRACE, RECOIL STARTER PORT	1	
20	01550-08257	BOLT	2	BRACE PORT
21	09164-06015	WASHER	4	
22	61472-94J00	LABEL, RECOIL STARTER	1	

DT25K P36
DT30 P40

FIG.167B

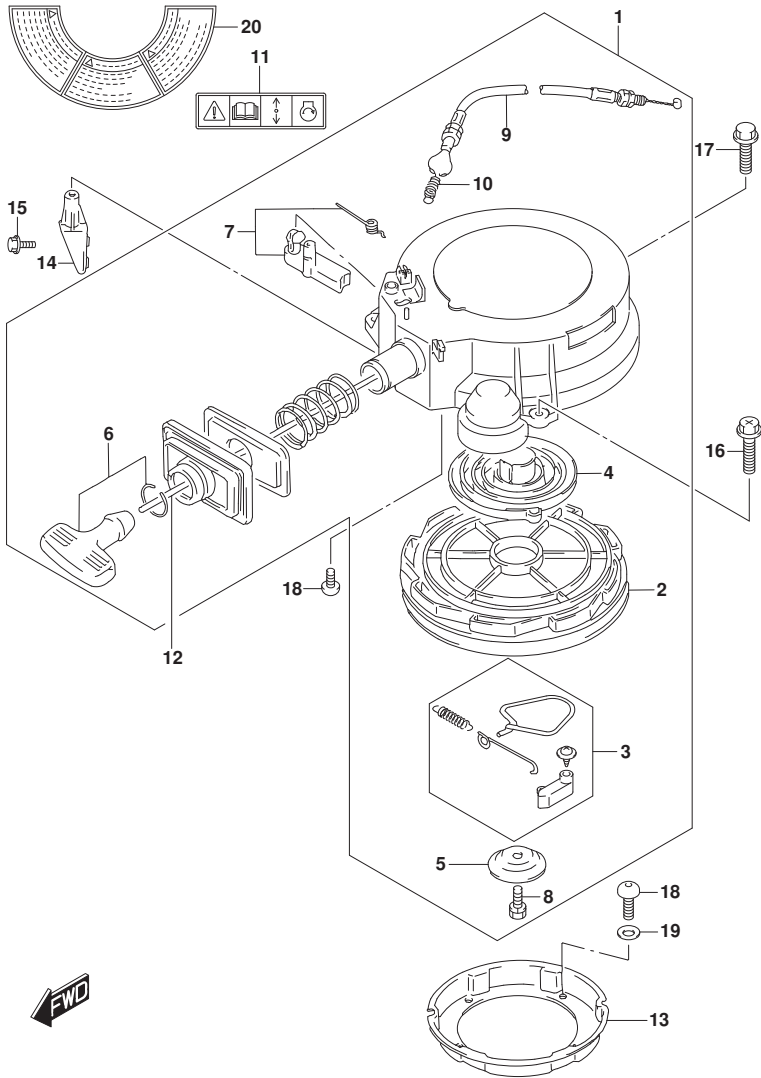


FIG.167B (1-C-8) RECOIL STARTER (ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-91L00	STARTER ASSY, RECOIL	1	
2	18120-96320	.REEL	1	
3	18130-91L00	.RATCHET SET	1	
4	18142-96300	.SPRING, SPIRAL	1	
5	18151-96310	.PLATE, FRICTION	1	
6	18210-93002	.GRIP ASSY	1	
7	18280-96320	.NSI SET	1	
8	18132-89L00	.SCREW	1	
9	18290-91L00	.WIRE	1	
10	18293-96310	.SPRING	1	
11	69711-93E10	LABEL, S.I.G.P	1	
12	99000-81159-50M	ROPE	1	OPT L:50000->1750
13	18411-96301	CUP, STARTER	1	
14	18711-91L10	BRACE, RECOIL STARTER STBD	1	
15	01550-0620C	BOLT	2	BRACE STBD
16	01550-0620C	BOLT	2	
17	01550-08257	BOLT	1	
18	09106-06098	BOLT (6X12)	4	
19	09164-06015	WASHER	4	
20	61472-94J00	LABEL, RECOIL STARTER	1	

DT30 P40
DT30R P40

FIG.201A

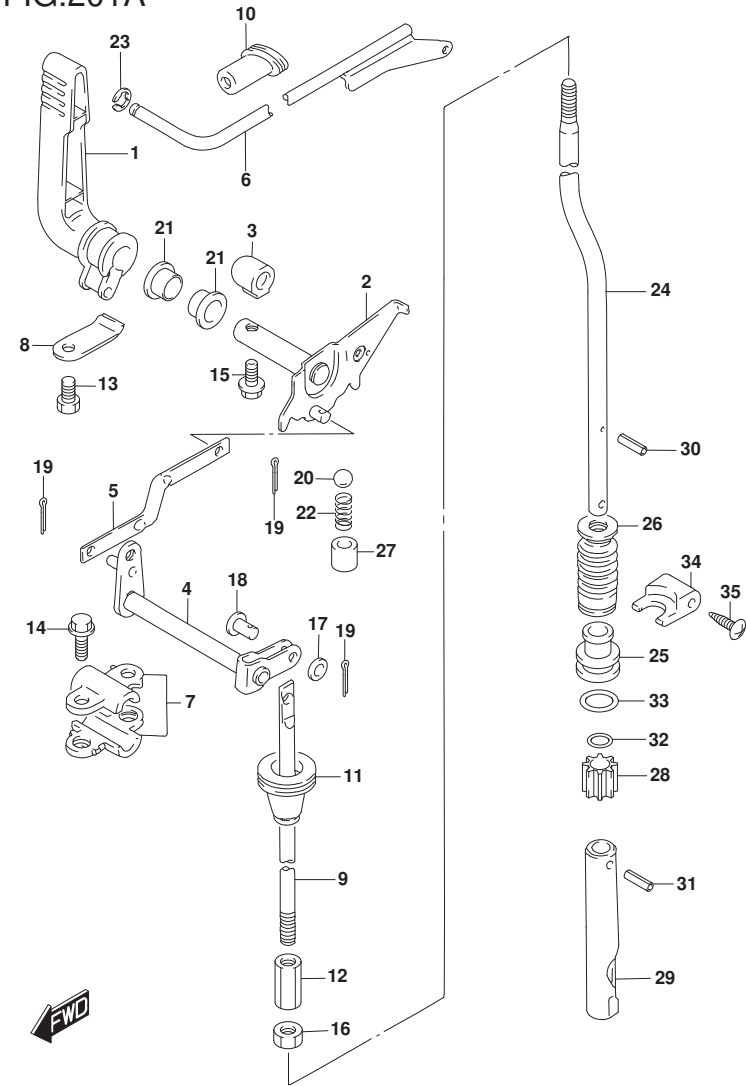


FIG.201A (1-C-9) CLUTCH (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21111-96311	LEVER, CLUTCH	1	
2	21120-91L00	PLATE, CLUTCH NOTCH	1	
3	21142-96300	CAP, CLUTCH SHAFT	1	
4	21210-96300	SHAFT, CLUTCH	1	
5	21241-96300	ROD, CLUTCH ARM	1	
6	21242-91L00	ROD, CLUTCH LEVER	1	
7	21311-91L00	HOLDER, CLUTCH SHIFT SHAFT	4	
8	21312-96300	HOLDER, CLUTCH LEVER	1	
9	23111-91L10	ROD, CLUTCH	1	
10	23131-95L00	BOOT, CLUTCH LEVER ROD	1	
11	23131-94300	BOOT, CLUTCH ROD	1	
12	23311-95J00	CONNECTOR, CLUTCH ROD	1	
13	09100-06174	BOLT (6X12)	1	
14	09116-06227	BOLT (6X20)	4	
15	09116-06225	BOLT (6X15)	1	
16	29141-93J00	NUT	1	
17	09160-05029	WASHER (5.5X12X0.8)	1	
18	09200-05006	PIN (L:12)	1	
19	09204-01002	PIN	3	
20	09260-10005	BALL	1	
21	09306-10001	BUSH	2	
22	09440-07021	SPRING	1	
23	09383-08004	E RING	1	
24	25111-91L11	ROD, SHIFT (L)	1	
25	25211-91L00	GUIDE, SHIFT ROD	1	
26	25222-96300	BOOT, SHIFT ROD GUIDE	1	
27	25231-96301	HOLDER, MAGNET	1	
28	25232-96302	MAGNETO	1	
29	25311-96303	CAM, CLUTCH SHIFT	1	

FIG.201A


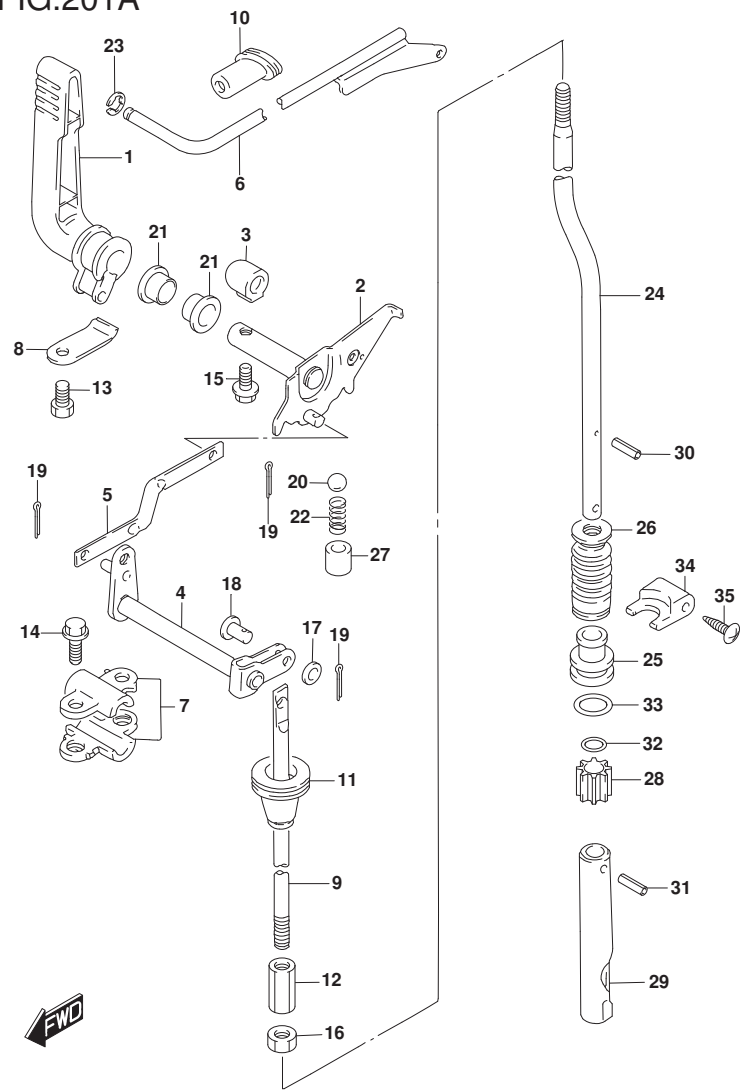


FIG.201A (1-C-10) CLUTCH (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
30	09205-02004	SPRING PIN (2.5X12)	1	
31	09205-03021	SPRING PIN (3.5X12)	1	
32	09280-08005	O RING (D:1.7,ID:7.7)	1	
33	09280-13005	O RING (D:3.5,ID:12.8)	1	
34	25215-96301	STOPPER, SHIFT ROD GUIDE	1	
35	09139-04004	SCREW (4X12)	2	

DT25K P36

FIG.201B

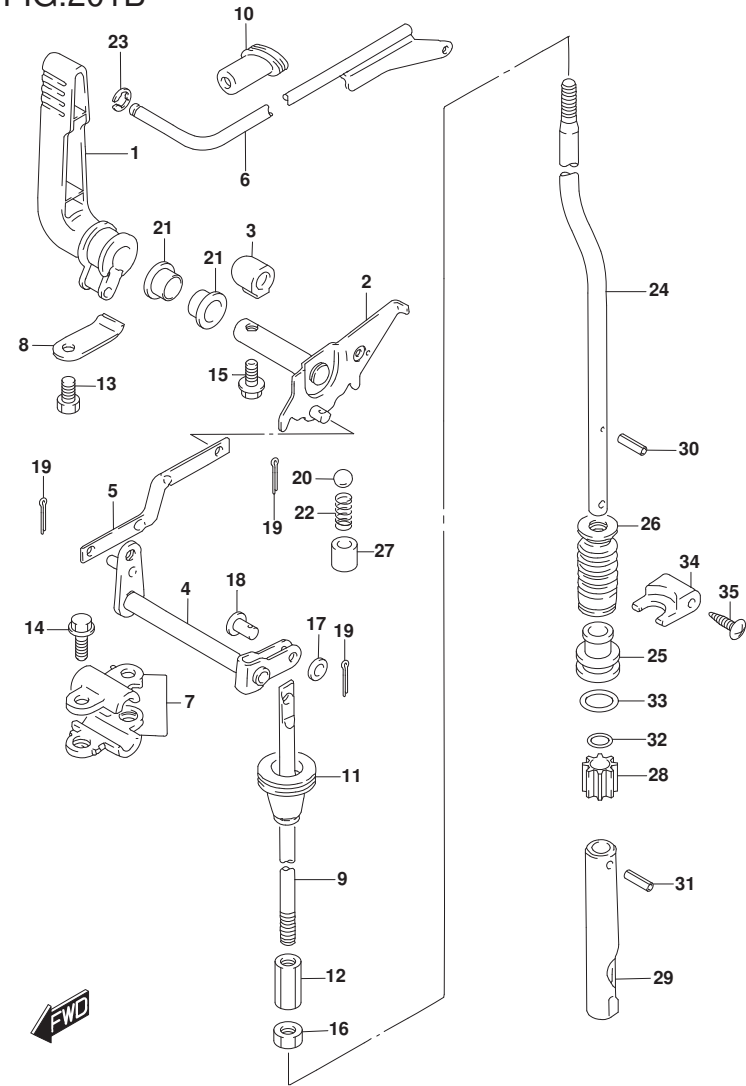

DT25_30_P40_018_201B
CLUTCH

FIG.201B (1-C-11) CLUTCH (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21111-96311	LEVER, CLUTCH	1	
2	21120-91L00	PLATE, CLUTCH NOTCH	1	
3	21142-96300	CAP, CLUTCH SHAFT	1	
4	21210-96300	SHAFT, CLUTCH	1	
5	21241-96300	ROD, CLUTCH ARM	1	
6	21242-91L00	ROD, CLUTCH LEVER	1	
7	21311-91L00	HOLDER, CLUTCH SHIFT SHAFT	4	
8	21312-96300	HOLDER, CLUTCH LEVER	1	
9	23111-91L10	ROD, CLUTCH	1	
10	23131-95L00	BOOT, CLUTCH LEVER ROD	1	
11	23131-94300	BOOT, CLUTCH ROD	1	
12	23311-95J00	CONNECTOR, CLUTCH ROD	1	
13	09100-06174	BOLT (6X12)	1	
14	09116-06227	BOLT (6X20)	4	
15	09116-06225	BOLT (6X15)	1	
16	29141-93J00	NUT	1	
17	09160-05029	WASHER (5.5X12X0.8)	1	
18	09200-05006	PIN (L:12)	1	
19	09204-01002	PIN	3	
20	09260-10005	BALL	1	
21	09306-10001	BUSH	2	
22	09440-07021	SPRING	1	
23	09383-08004	E RING	1	
24-1	25111-91L01	ROD, SHIFT (S)	1	W/TRANSOM(S)
24-2	25111-91L11	ROD, SHIFT (L)	1	W/TRANSOM(L)
25	25211-91L00	GUIDE, SHIFT ROD	1	
26	25222-96300	BOOT, SHIFT ROD GUIDE	1	
27	25231-96301	HOLDER, MAGNET	1	
28	25232-96302	MAGNETO	1	
29	25311-96303	CAM, CLUTCH SHIFT	1	
30	09205-02004	SPRING PIN (2.5X12)	1	
31	09205-03021	SPRING PIN (3.5X12)	1	
32	09280-08005	O RING (D:1.7,ID:7.7)	1	
33	09280-13005	O RING (D:3.5,ID:12.8)	1	

DT25_30_P40_018

FIG.201B

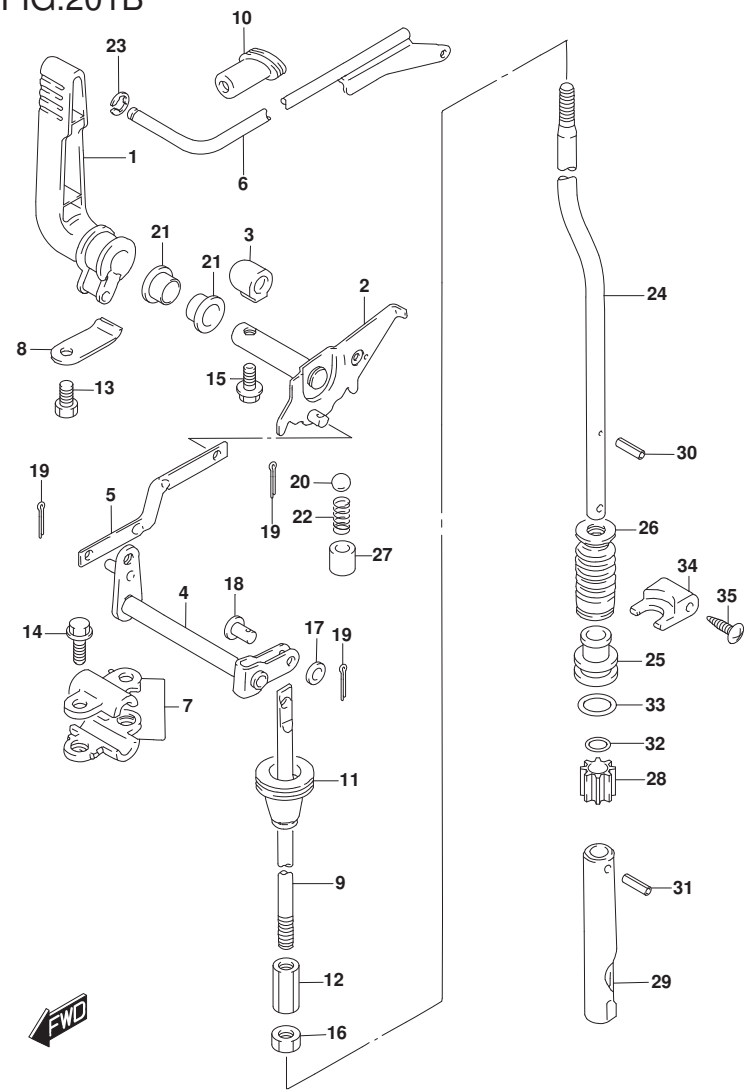


FIG.201B (1-C-12) CLUTCH (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	25215-96301	STOPPER, SHIFT ROD GUIDE	1	
35	09139-04004	SCREW (4X12)	2	

DT30 P40

FIG.201C

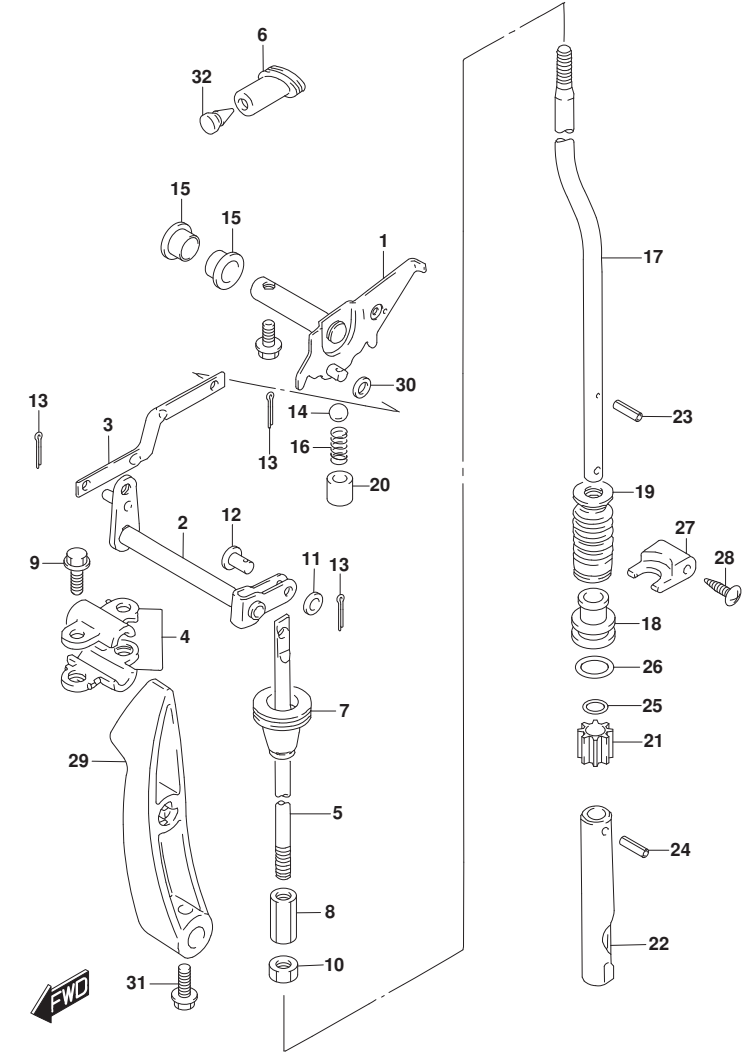


FIG.201C (1-C-13) CLUTCH (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	21120-91L00	PLATE, CLUTCH NOTCH	1	
2	21210-96300	SHAFT, CLUTCH	1	
3	21241-96300	ROD, CLUTCH ARM	1	
4	21311-91L00	HOLDER, CLUTCH SHIFT SHAFT	4	
5	23111-91L10	ROD, CLUTCH	1	
6	23131-95L00	BOOT, CLUTCH LEVER ROD	1	
7	23131-94300	BOOT, CLUTCH ROD	1	
8	23311-95J00	CONNECTOR, CLUTCH ROD	1	
9	09116-06227	BOLT (6X20)	4	
10	29141-93J00	NUT	1	
11	09160-05029	WASHER (5.5X12X0.8)	1	
12	09200-05006	PIN (L:12)	1	
13	09204-01002	PIN	3	
14	09260-10005	BALL	1	
15	09306-10001	BUSH	2	
16	09440-07021	SPRING	1	
17-1	25111-91L01	ROD, SHIFT (S)	1	W/TRANSOM(S)
17-2	25111-91L11	ROD, SHIFT (L)	1	W/TRANSOM(L)
18	25211-91L00	GUIDE, SHIFT ROD	1	
19	25222-96300	BOOT, SHIFT ROD GUIDE	1	
20	25231-96301	HOLDER, MAGNET	1	
21	25232-96302	MAGNETO	1	
22	25311-96303	CAM, CLUTCH SHIFT	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09205-03021	SPRING PIN (3.5X12)	1	
25	09280-08005	O RING (D:1.7,ID:7.7)	1	
26	09280-13005	O RING (D:3.5,ID:12.8)	1	

FIG.201C

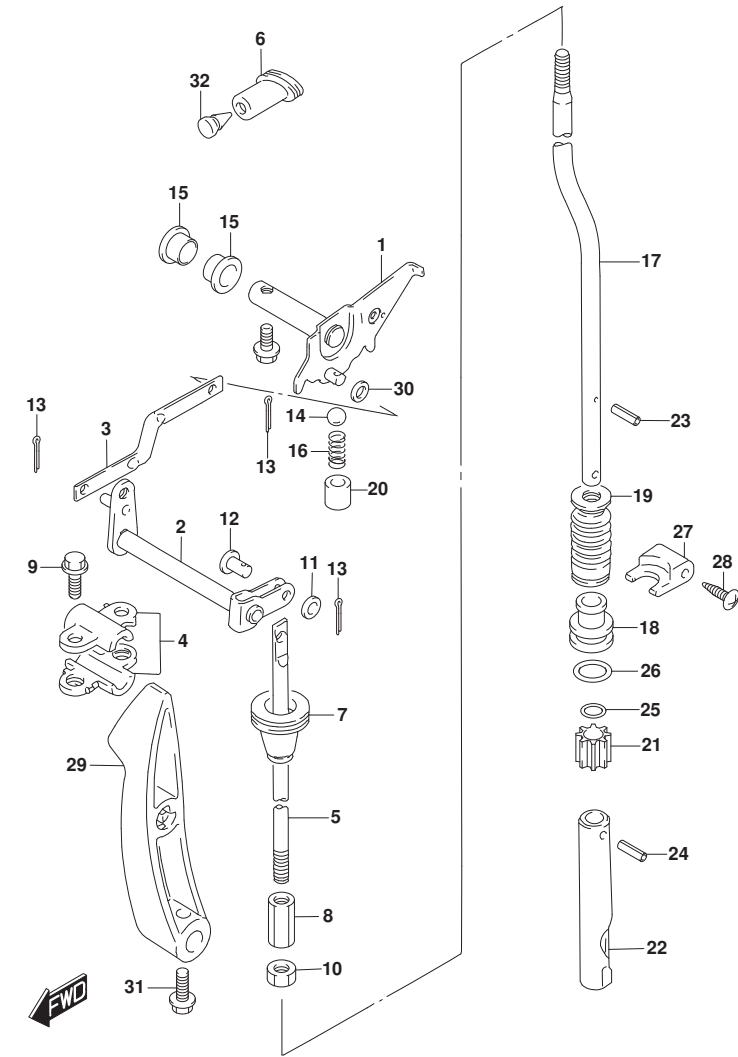


FIG.201C (1-C-14) CLUTCH (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
27	25215-96301	STOPPER, SHIFT ROD GUIDE	1	
28	09139-04004	SCREW (4X12)	2	
29	21111-91L00-YAY	LEVER, CLUTCH (BLACK)	1	
30	09160-05024	WASHER (5.5X16X1.5)	1	
31	09116-06227	BOLT (6X20)	1	
32	09250-06012	PLUG (OD:10)	1	

DT30R P40

FIG.220A

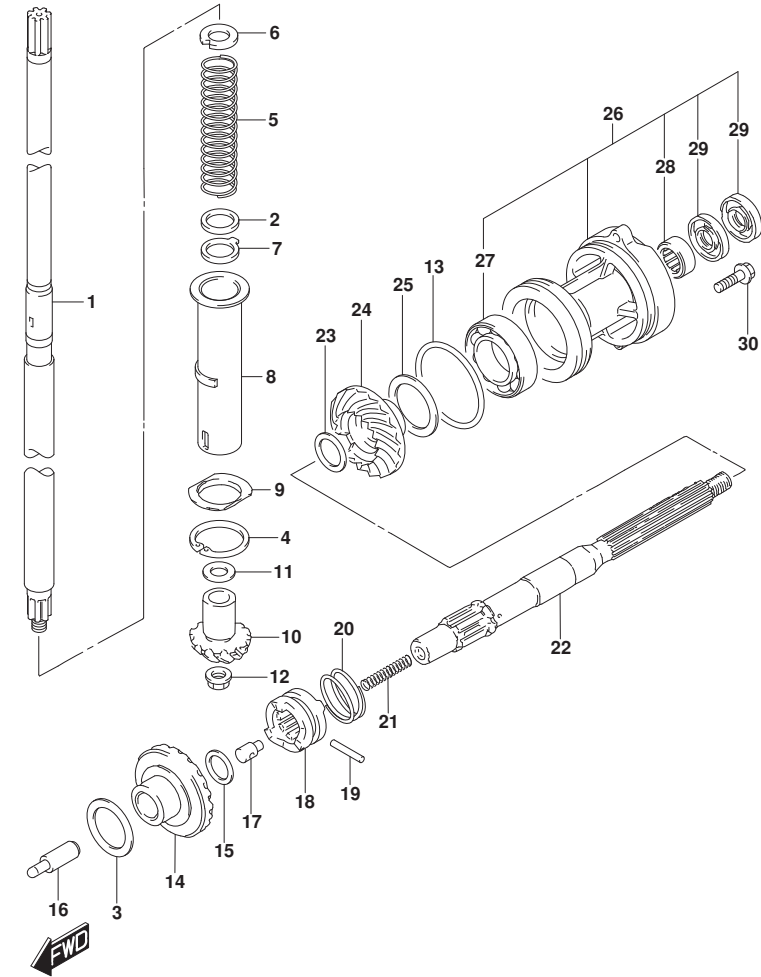


FIG.220A (1-C-15) TRANSMISSION TRANSOM(S)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	57110-91L10	SHAFT, DRIVE (S)	1	
2	08211-20253	THRUST WASHER	1	
3-1	09181-25190	WASHER (T:0.8)	1	
3-2	09181-25248	WASHER (T:0.9)	1	
3-3	09181-25251	WASHER (T:1.0)	1	
3-4	09160-25032	WASHER (T:1.1)	1	
3-5	09160-25033	WASHER (T:1.2)	1	
3-6	09160-25034	WASHER (T:1.3)	1	
3-7	09160-25035	WASHER (T:1.4)	1	
3-8	09181-25268	WASHER (T:1.5)	1	
4	08331-41406	CIRCLIP	1	
5	09440-25002	SPRING	1	
6	09166-17005	WASHER	1	
7	09167-20021	LOCK WASHER	1	
8	57133-96302	SPACER, PRELOAD SPRING	1	
9	57134-96301	BARRIER	1	
10	57311-91L00	PINION (NT:11)	1	
11-1	09160-15030	WASHER (T:1.7)	1	
11-2	09160-15031	WASHER (T:1.8)	1	
11-3	09160-15032	WASHER (T:1.9)	1	
11-4	09160-15053	WASHER (T:2.3)	1	
11-5	09160-15054	WASHER (T:2.4)	1	
11-6	08211-15203	WASHER (T:2.0)	1	
11-7	09160-15033	WASHER (T:2.1)	1	
11-8	08211-15204	WASHER (T:2.2)	1	
12	09159-08046	NUT	1	
13	09280-75002	O RING (D:3.5,ID:68.6)	1	
14	57510-91L00	GEAR, FORWARD (NT:23)	1	
15	09181-16008	SHIM (16X24X2)	1	
16	57631-96301	ROD, PUSH	1	
17	09209-08016	PIN	1	
18	57621-91L10	SHIFTER, CLUTCH DOG	1	
19	09202-05021	PIN (5X34)	1	

FIG.220A

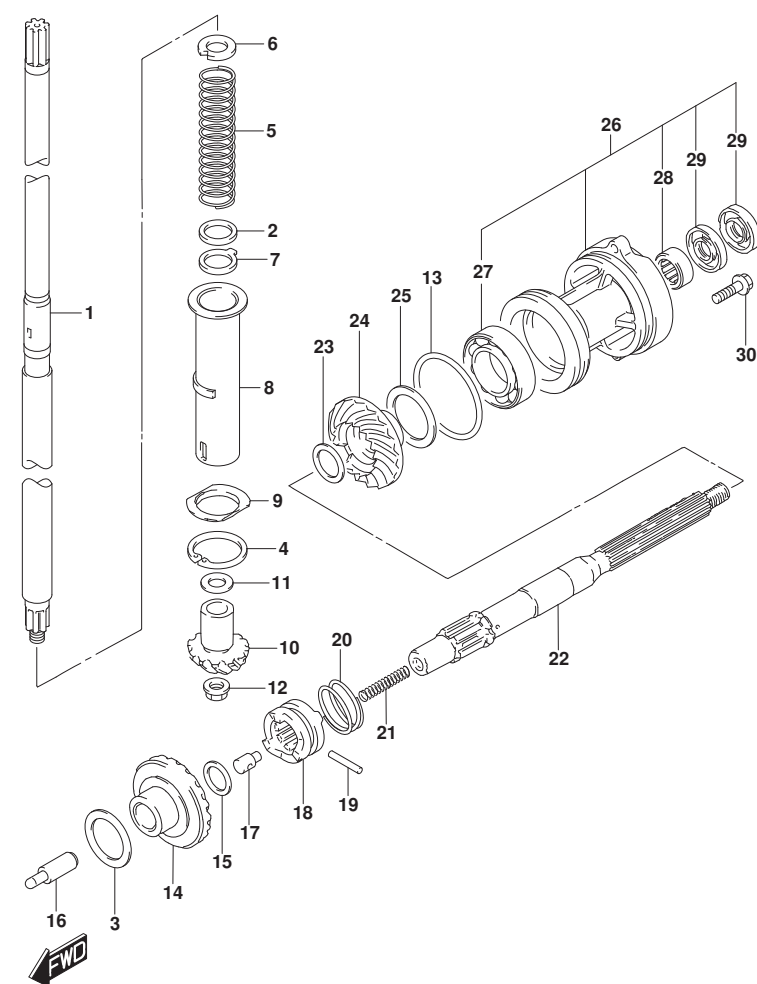


FIG.220A (1-D-2) TRANSMISSION TRANSOM(S)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	09440-35004	SPRING	1	
21	09440-07041	SPRING	1	
22	57610-96311	SHAFT, PROPELLER	1	
23-1	09160-20068	WASHER (T:1.6)	1	
23-2	09160-20069	WASHER (T:1.8)	1	
23-3	09160-20070	WASHER (T:2.0)	1	
23-4	09160-20071	WASHER (T:2.2)	1	
23-5	09160-20072	WASHER (T:2.4)	1	
23-6	09160-20073	WASHER (T:2.6)	1	
24	57521-91L00	GEAR, REVERSE (NT:23)	1	
25-1	08221-30404	SHIM (T:2.0)	2	
25-2	09181-30158	SHIM (T:0.5)	1	
25-3	09181-30162	SHIM (T:0.8)	1	
26	56120-91L11-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
27	08113-60060	.BEARING	1	
28	09263-20047	.BEARING (20X26X20)	1	
29	09289-20L01	.OIL SEAL (20X34X6.5)	2	
30	09116-06229	BOLT (6X25)	2	

DT30 P40
DT30R P40

FIG.220B

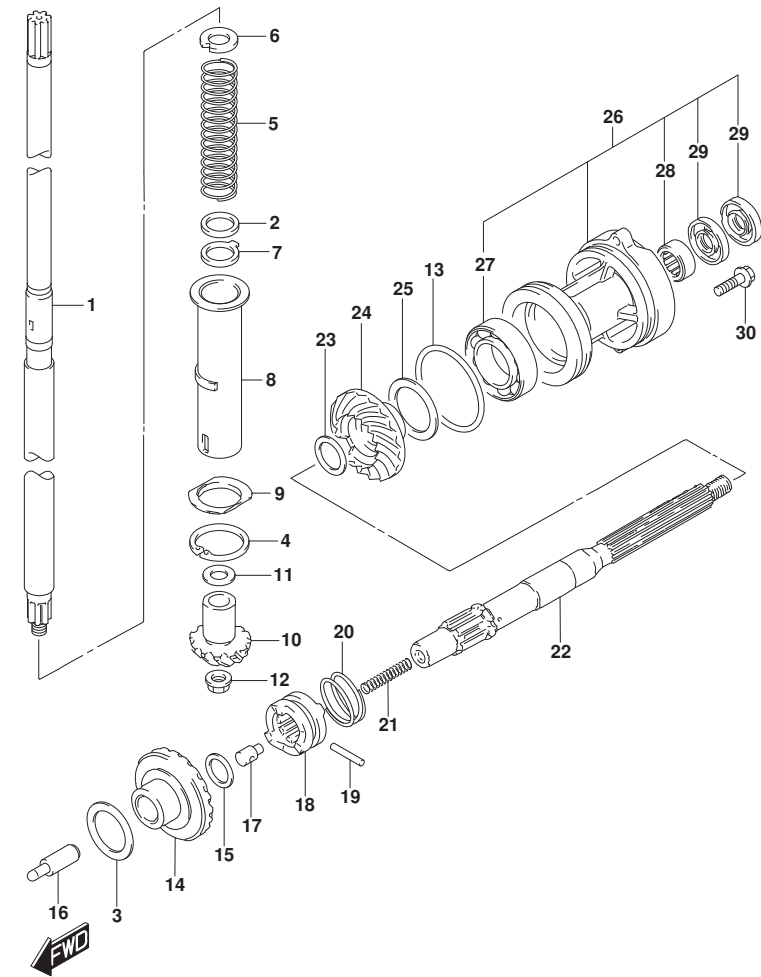


FIG.220B (1-D-3) TRANSMISSION TRANSOM(L)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	57110-91L00	SHAFT, DRIVE (L)	1	
2	08211-20253	THRUST WASHER	1	
3-1	09181-25190	WASHER (T:0.8)	1	
3-2	09181-25248	WASHER (T:0.9)	1	
3-3	09181-25251	WASHER (T:1.0)	1	
3-4	09160-25032	WASHER (T:1.1)	1	
3-5	09160-25033	WASHER (T:1.2)	1	
3-6	09160-25034	WASHER (T:1.3)	1	
3-7	09160-25035	WASHER (T:1.4)	1	
3-8	09181-25268	WASHER (T:1.5)	1	
4	08331-41406	CIRCLIP	1	
5	09440-25002	SPRING	1	
6	09166-17005	WASHER	1	
7	09167-20021	LOCK WASHER	1	
8	57133-96302	SPACER, PRELOAD SPRING	1	
9	57134-96301	BARRIER	1	
10	57311-91L00	PINION (NT:11)	1	
11-1	09160-15030	WASHER (T:1.7)	1	
11-2	09160-15031	WASHER (T:1.8)	1	
11-3	09160-15032	WASHER (T:1.9)	1	
11-4	09160-15053	WASHER (T:2.3)	1	
11-5	09160-15054	WASHER (T:2.4)	1	
11-6	08211-15203	WASHER (T:2.0)	1	
11-7	09160-15033	WASHER (T:2.1)	1	
11-8	08211-15204	WASHER (T:2.2)	1	
12	09159-08046	NUT	1	
13	09280-75002	O RING (D:3.5,ID:68.6)	1	
14	57510-91L00	GEAR, FORWARD (NT:23)	1	
15	09181-16008	SHIM (16X24X2)	1	
16	57631-96301	ROD, PUSH	1	
17	09209-08016	PIN	1	
18	57621-91L10	SHIFTER, CLUTCH DOG	1	
19	09202-05021	PIN (5X34)	1	
20	09440-35004	SPRING	1	

FIG.220B

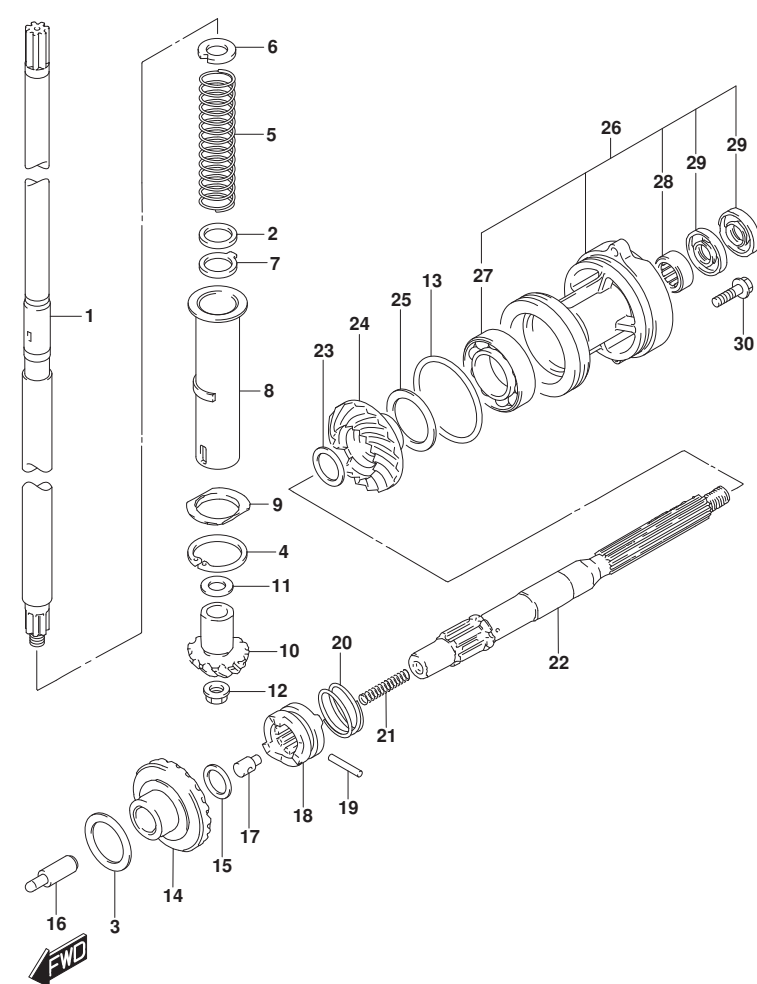


FIG.220B (1-D-4) TRANSMISSION TRANSOM(L)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
21	09440-07041	SPRING	1	
22	57610-96311	SHAFT, PROPELLER	1	
23-1	09160-20068	WASHER (T:1.6)	1	
23-2	09160-20069	WASHER (T:1.8)	1	
23-3	09160-20070	WASHER (T:2.0)	1	
23-4	09160-20071	WASHER (T:2.2)	1	
23-5	09160-20072	WASHER (T:2.4)	1	
23-6	09160-20073	WASHER (T:2.6)	1	
24	57521-91L00	GEAR, REVERSE (NT:23)	1	
25-1	08221-30404	SHIM (T:2.0)	2	
25-2	09181-30158	SHIM (T:0.5)	1	
25-3	09181-30162	SHIM (T:0.8)	1	
26	56120-91L11-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
27	08113-60060	.BEARING	1	
28	09263-20047	.BEARING (20X26X20)	1	
29	09289-20L01	.OIL SEAL (20X34X6.5)	2	
30	09116-06229	BOLT (6X25)	2	

DT25K P36
DT30 P40
DT30R P40

FIG.301A

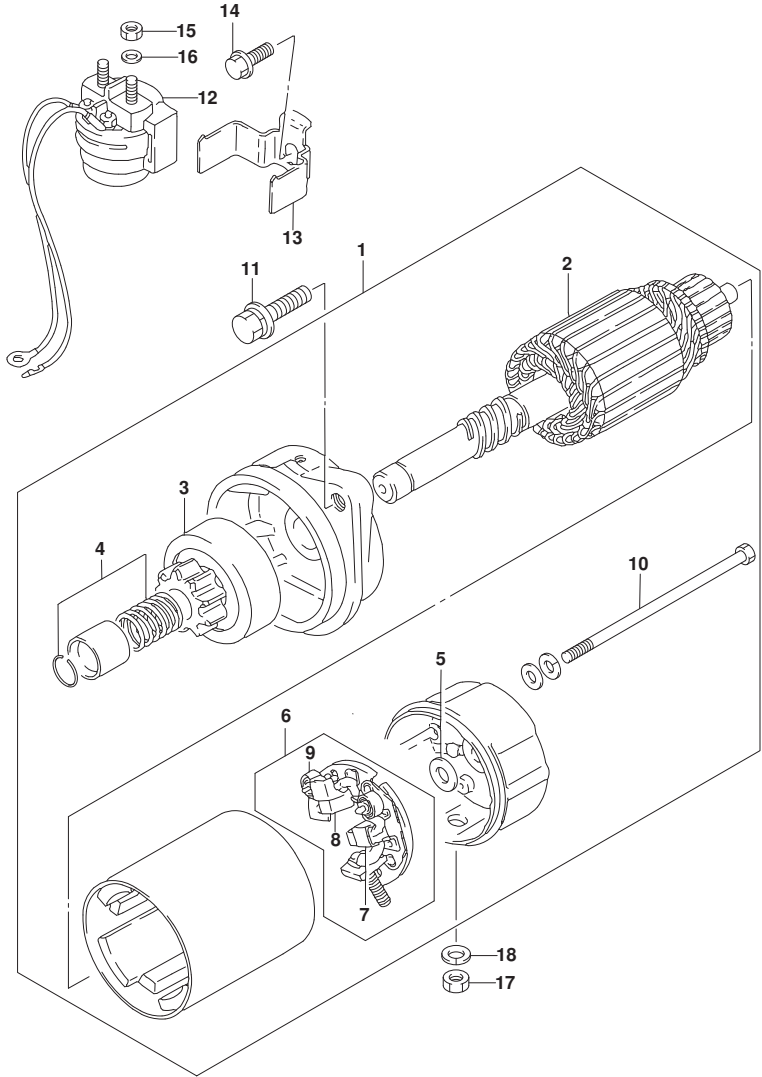


FIG.301A (1-D-5) STARTING MOTOR (ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PISTON ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	01580-08257	BOLT	2	
12	31800-94401	RELAY ASSY, STARTING MOTOR	1	
13	31805-96350	BRACKET, STARTING MOTOR	1	
14	01550-06167	BOLT	1	
15	08310-00067	NUT	2	
16	08321-01067	WASHER	2	
17	08310-00067	NUT	1	
18	08321-01067	WASHER	1	

DT30 P40
DT30R P40

FIG.303A (1-D-6) MAGNETO (DT25K)

DT25K P36

FIG.303B

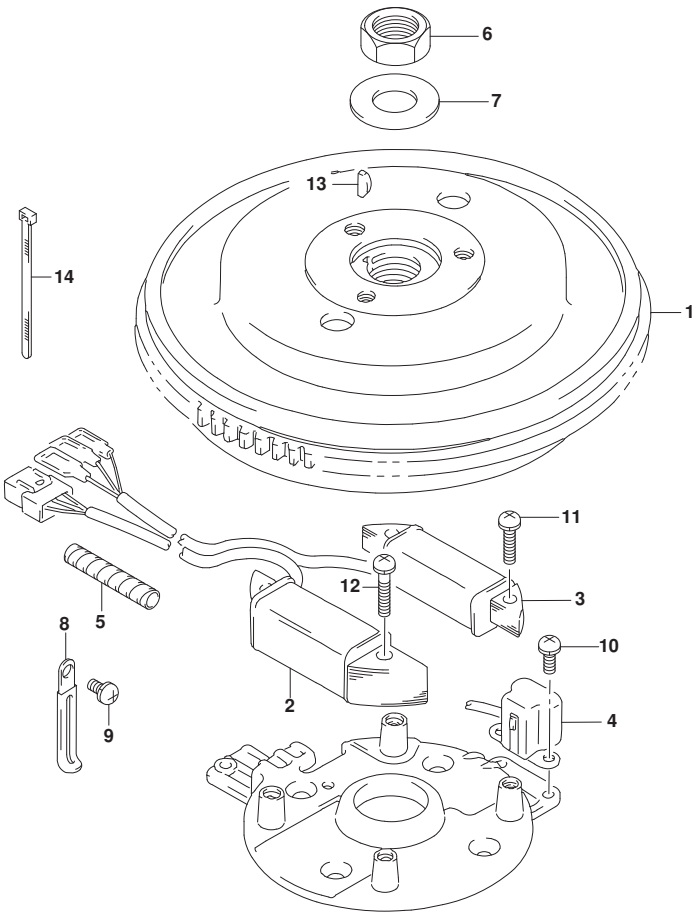


FIG.303B (1-D-7) MAGNETO (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32102-96462	FLYWHEEL	1	
2-1	32120-96330	COIL, LIGHTING	1	W/ELECTRIC STARTER
2-2	32120-96320	COIL, LIGHTING	1	W/MANUAL STARTER
3	32140-96310	COIL, PRIMARY	1	
4	32150-96340	COIL, IGNITION TIMING	1	
5	33833-91J00	TUBE	1	L:250->50
6	09140-18014	NUT	1	
7	09160-18011	WASHER (18.5X35X4)	1	
8	29404-93J10	CLAMP	2	
9	02112-35087	SCREW	1	
10	02112-35127	SCREW	2	
11	02112-35207	SCREW	2	
12	02112-35257	SCREW	2	
13	09420-04008	KEY	1	
14	09407-14407	CLAMP (L:145)	1	

DT30 P40



FIG.303C

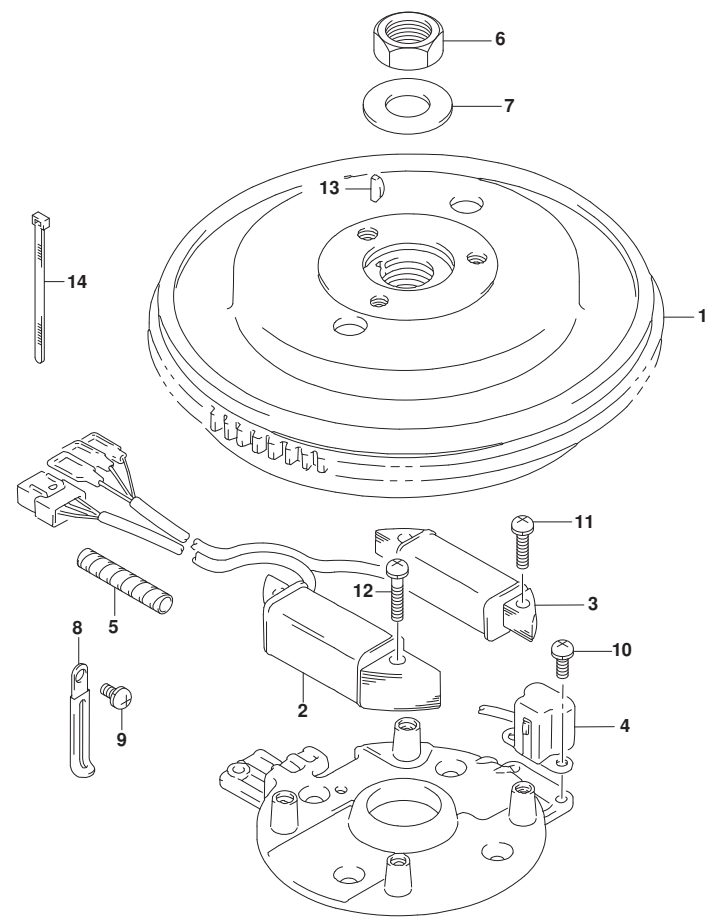


FIG.303C (1-D-8) MAGNETO (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32102-96462	FLYWHEEL	1	
2	32120-96330	COIL, LIGHTING	1	
3	32140-96310	COIL, PRIMARY	1	
4	32150-96340	COIL, IGNITION TIMING	1	
5	33833-91J00	TUBE	1	L:250->50
6	09140-18014	NUT	1	
7	09160-18011	WASHER (18.5X35X4)	1	
8	29404-93J10	CLAMP	2	
9	02112-35087	SCREW	1	
10	02112-35127	SCREW	2	
11	02112-35207	SCREW	2	
12	02112-35257	SCREW	2	
13	09420-04008	KEY	1	
14	09407-14407	CLAMP (L:145)	1	

DT30R P40



FIG.308A

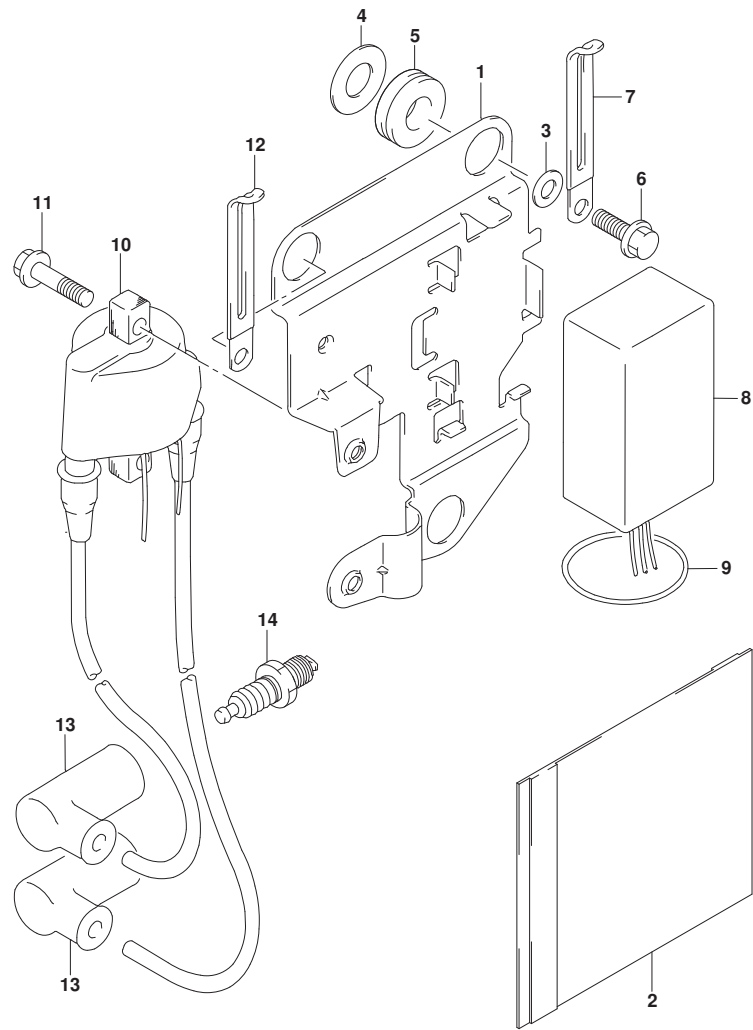


FIG.308A (1-D-9) IGNITION (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32890-91L00	HOLDER, ELECTRIC PARTS	1	
2	32916-92L00	COVER, CONNECTOR	1	
3	09160-06054	WASHER (6.5X22X1.6)	3	
4	09160-12007	WASHER (12.5X26X1.6)	3	
5	09320-12011	CUSHION	3	
6	01550-06127	BOLT	3	
7	29404-93J10	CLAMP	1	
8	32900-963B0	UNIT, CDI	1	
9	09280-76005	O RING (D:3.5, ID:76)	1	
10	33410-96311	COIL ASSY, IGNITION	1	
11	01550-0616C	BOLT	2	
12	29404-93J10	CLAMP, IGN COIL LEAD	1	
13	33510-95520	CAP, SPARK PLUG	2	
14	09482-00532	SPARK PLUG (B7HS-10)	2	NGK

DT25K P36

FIG.308B

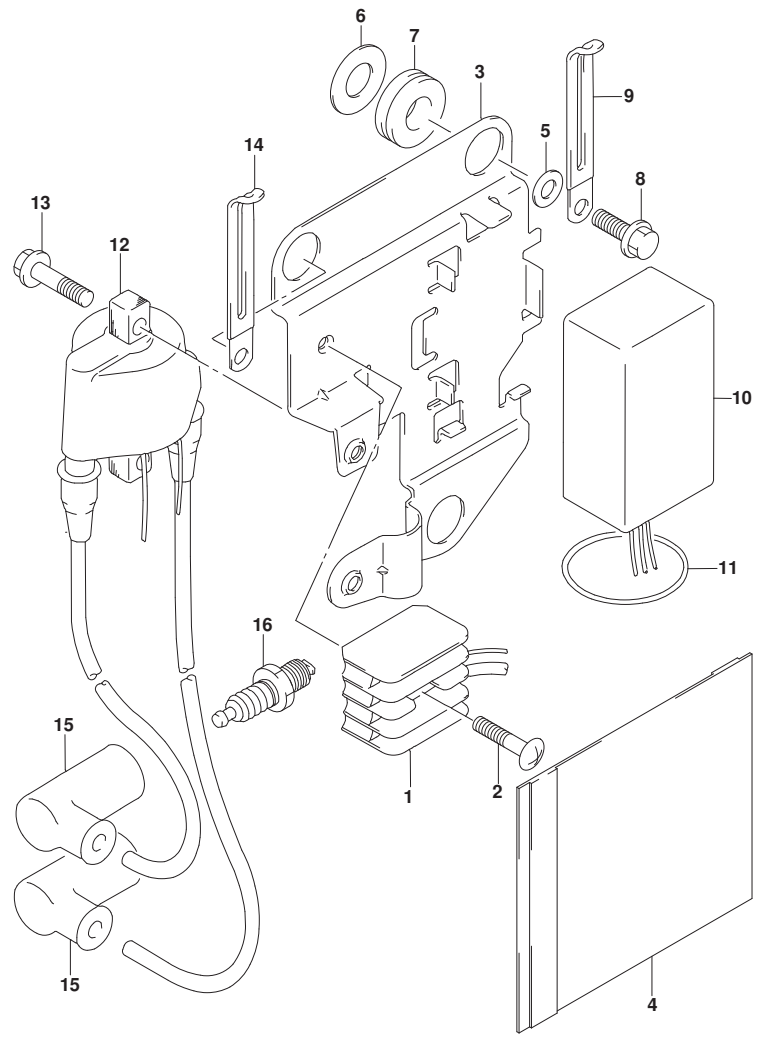


FIG.308B (1-D-10) IGNITION (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	W/ELECTRIC STARTER
2	02142-05257	SCREW	1	W/ELECTRIC STARTER
3	32890-91L00	HOLDER, ELECTRIC PARTS	1	
4	32916-92L00	COVER, CONNECTOR	1	
5	09160-06054	WASHER (6.5X22X1.6)	3	
6	09160-12007	WASHER (12.5X26X1.6)	3	
7	09320-12011	CUSHION	3	
8	01550-06127	BOLT	3	
9	29404-93J10	CLAMP	1	
10	32900-963A0	UNIT, CDI	1	
11	09280-76005	O RING (D:3.5, ID:76)	1	
12	33410-96300	COIL ASSY, IGNITION	1	
13	01550-0616C	BOLT	2	
14	29404-93J10	CLAMP, IGN COIL LEAD	1	
15	33510-90L00	CAP, SPARK PLUG	2	
16	09482-00533	SPARK PLUG (BR7HS-10)	2	NGK

DT30 P40

FIG.308C

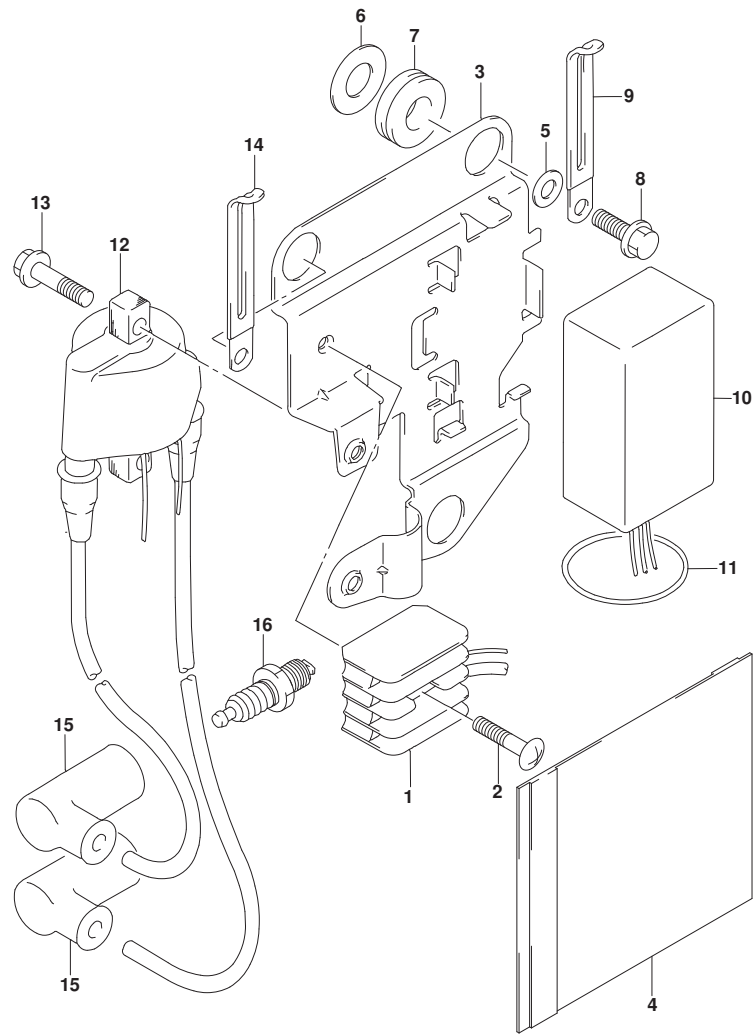


FIG.308C (1-D-11) IGNITION (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	
2	02142-05257	SCREW	1	
3	32890-91L00	HOLDER, ELECTRIC PARTS	1	
4	32916-92L00	COVER, CONNECTOR	1	
5	09160-06054	WASHER (6.5X22X1.6)	3	
6	09160-12007	WASHER (12.5X26X1.6)	3	
7	09320-12011	CUSHION	3	
8	01550-06127	BOLT	3	
9	29404-93J10	CLAMP	1	
10	32900-963A0	UNIT, CDI	1	
11	09280-76005	O RING (D:3.5,ID:76)	1	
12	33410-96300	COIL ASSY, IGNITION	1	
13	01550-0616C	BOLT	2	
14	29404-93J10	CLAMP, IGN COIL LEAD	1	
15	33510-90L00	CAP, SPARK PLUG	2	
16	09482-00533	SPARK PLUG (BR7HS-10)	2	NGK

DT30R P40

FIG.322A

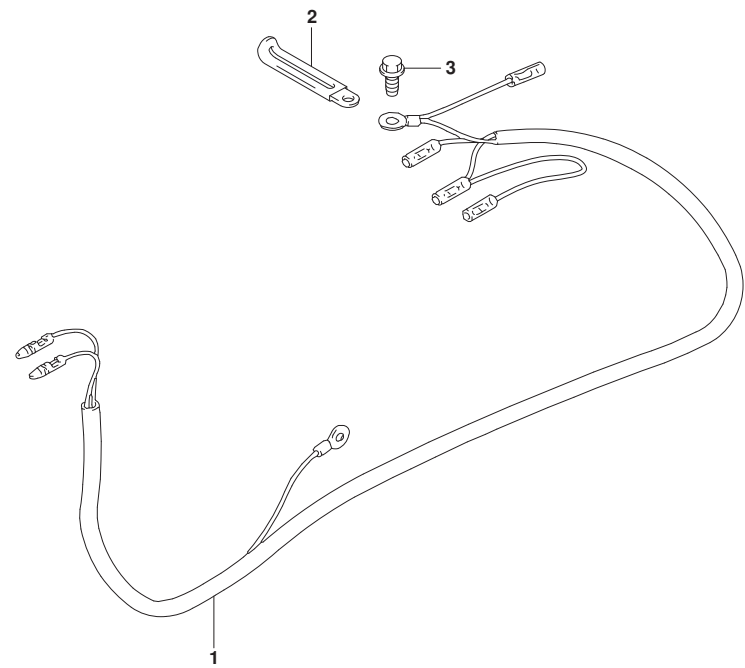


FIG.322A (1-D-12) HARNESS (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36610-91L00	WIRING HARNESS	1	
2	29404-93J10	CLAMP	1	
3	01550-06167	BOLT	1	GROUND

DT25K P36

FIG.322B

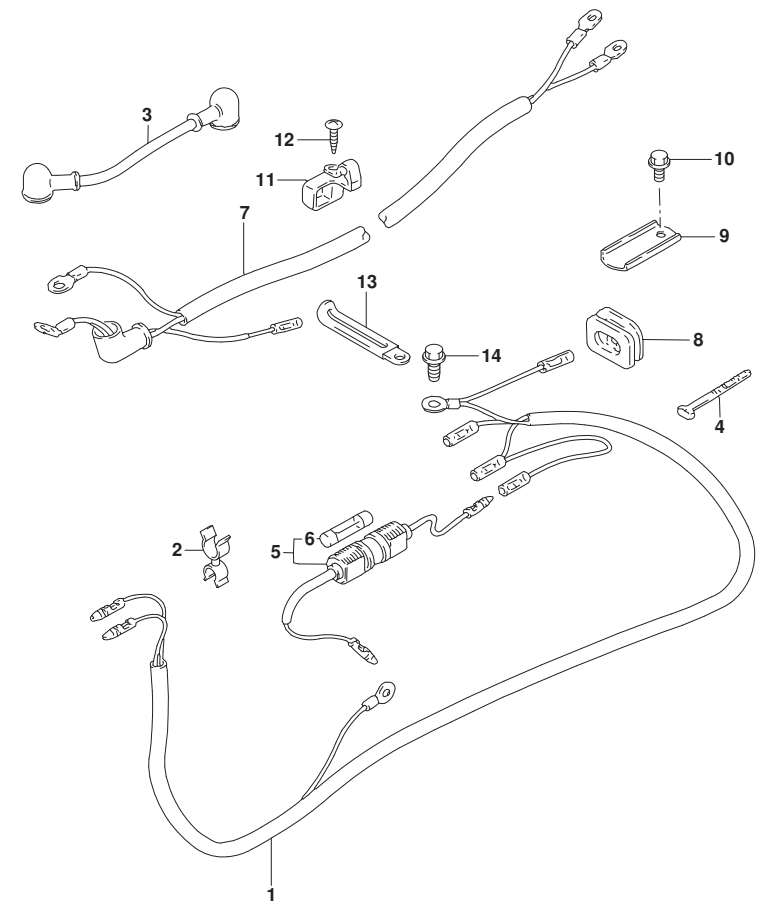


FIG.322B (1-D-13) HARNESS (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36610-91L00	WIRING HARNESS	1	
2	09408-00045	CLAMP	1	W/ELECTRIC STARTER
3	33820-89E01	CABLE ASSY, STARTER MOTOR SUB	1	W/ELECTRIC STARTER
4	09407-14403	CLAMP (L:125)	1	W/ELECTRIC STARTER
5	36740-95253	FUSE CASE ASSY	1	W/ELECTRIC STARTER
6	09481-20001	.FUSE (20A)	1	W/ELECTRIC STARTER
7	33810-96305	CABLE, STARTER	1	W/ELECTRIC STARTER
8	33811-94J00	GROMMET, STARTER CABLE	1	W/ELECTRIC STARTER
9	33815-94501	PROTECTOR, CABLE	1	W/ELECTRIC STARTER
10	01550-06167	BOLT	1	W/ELECTRIC STARTER
11	33816-96300	CLAMP, STARTER CABLE	1	W/ELECTRIC STARTER
12	03241-0625A	SCREW	1	W/ELECTRIC STARTER
13	29404-93J10	CLAMP	1	
14-1	01550-06167	BOLT	1	HARNESS
14-2	01550-06167	BOLT	1	GROUND
				W/MANUAL STARTER

DT30 P40

FIG.322C

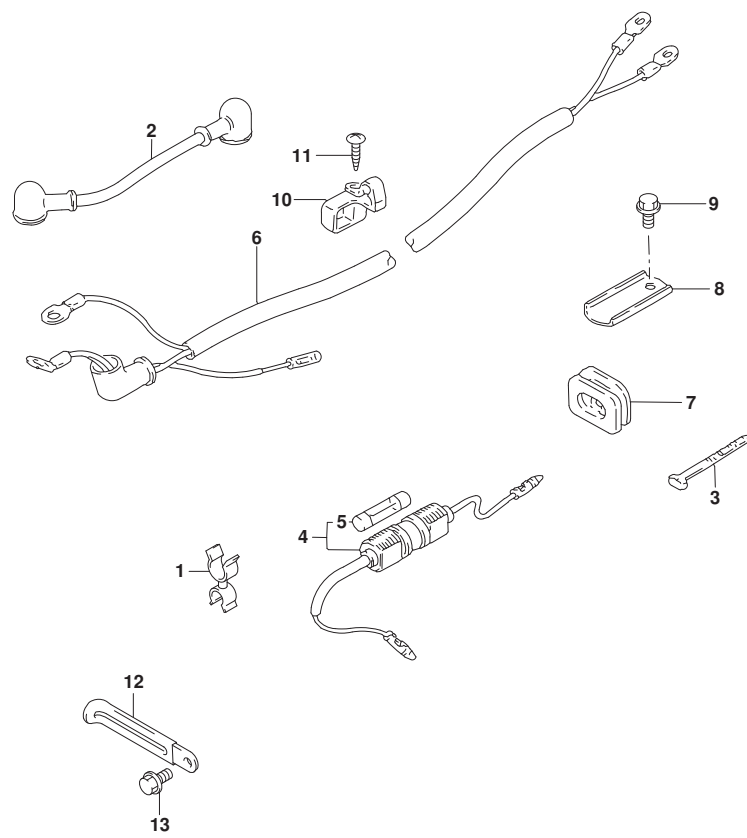


FIG.322C (1-D-14) HARNESS (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09408-00045	CLAMP	1	
2	33820-89E01	CABLE ASSY, STARTER MOTOR SUB	1	
3	09407-14403	CLAMP (L:125)	1	
4	36740-95253	FUSE CASE ASSY	1	
5	09481-20001	.FUSE (20A)	1	
6	33810-96305	CABLE, STARTER	1	
7	33811-94J00	GROMMET, STARTER CABLE	1	
8	33815-94501	PROTECTOR, CABLE	1	
9	01550-06167	BOLT	1	
10	33816-96300	CLAMP, STARTER CABLE	1	
11	03241-0625A	SCREW	1	
12	29404-93J10	CLAMP	1	
13	01550-06167	BOLT	1	HARNESS

DT30R P40

FIG.324A

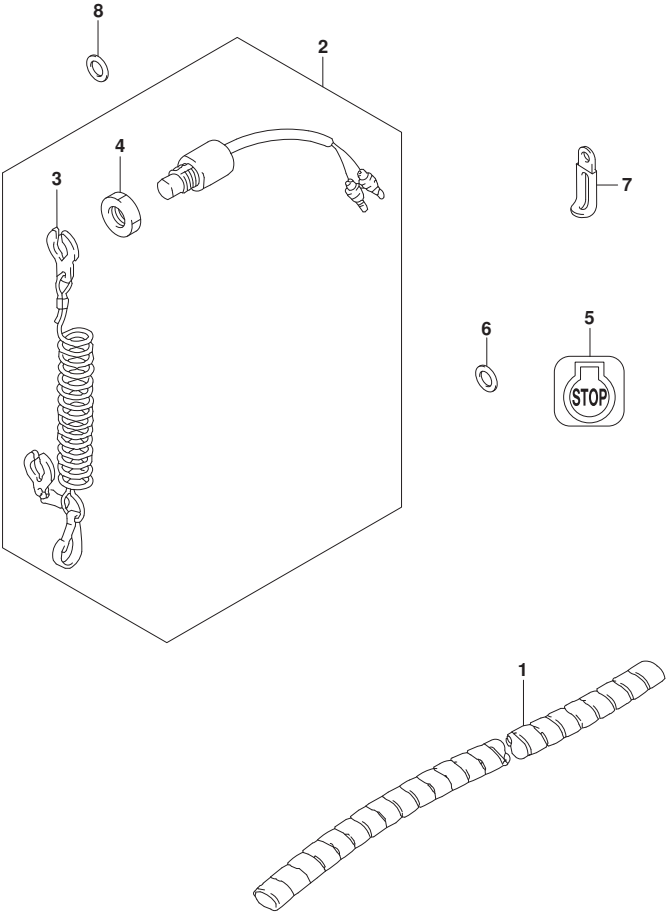


FIG.324A (1-D-15) SWITCH (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	33833-91J00	TUBE, WIRING HARNESS (L:250)	1	L:250->50
2	37830-92L02	SWITCH, EMERGENCY & STOP	1	
3	37823-97J00	.PLATE, LOCK	1	
4	37826-97J00	.NUT	1	
5	37835-91J00-YAY	LABEL, STOP (BLACK)	1	
6	09160-16053	SPACER (16X20X2)	1	
7	09404-12201	CLAMP (L:73)	1	
8	56123-986L0	WASHER, EMER & STOP SW	1	

DT25K P36

FIG.324B

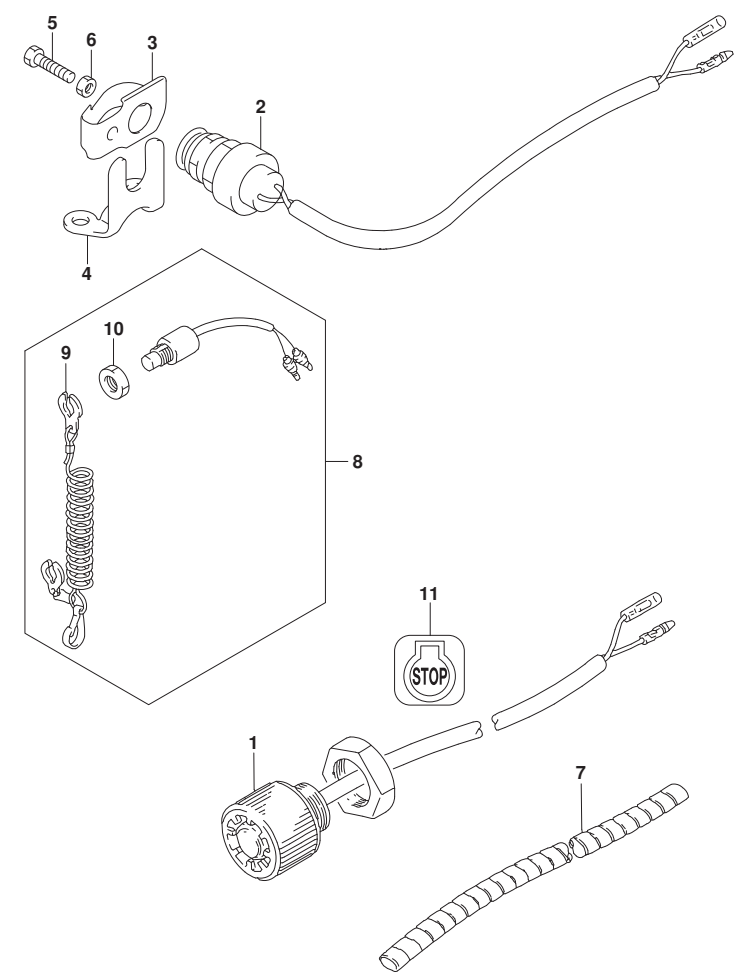


FIG.324B (1-E-2) SWITCH (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37160-96322	SWITCH, START	1	W/ELECTRIC STARTER
2	37721-96354	SWITCH, NEUTRAL	1	W/ELECTRIC STARTER
3	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
4	37726-96303	BRACKET, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
5	09100-05104	BOLT (5X20)	1	W/ELECTRIC STARTER
6	09140-05005	NUT	1	W/ELECTRIC STARTER
7	33833-91J00	TUBE, WIRING HARNESS (L:250)	1	L:250->50
8	37830-92L02	SWITCH, EMERGENCY & STOP	1	
9	37823-97J00	.PLATE, LOCK	1	
10	37826-97J00	.NUT	1	
11	37835-91J00-YAY	LABEL, STOP (BLACK)	1	

DT30 P40

FIG.324C

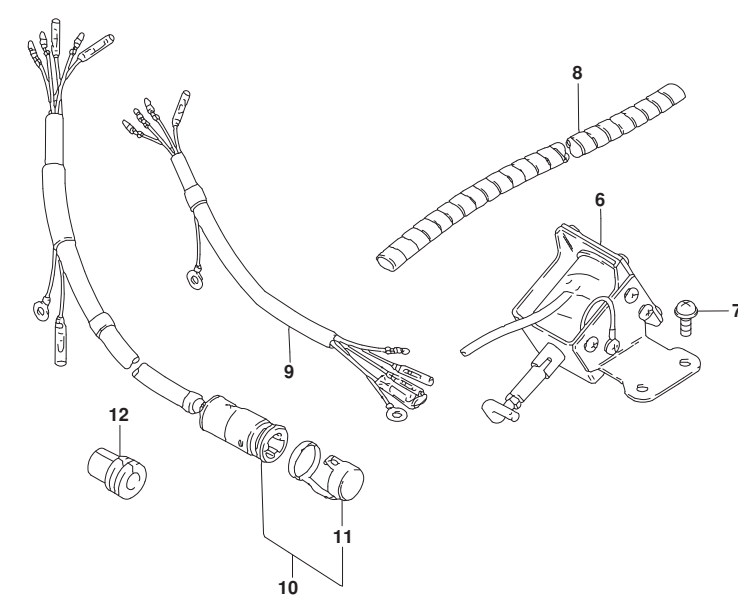
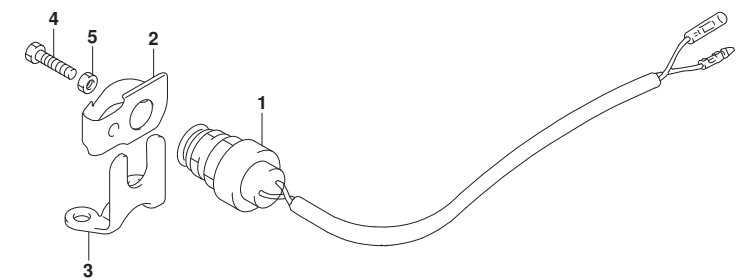


FIG.324C (1-E-3) SWITCH (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37721-96354	SWITCH, NEUTRAL	1	
2	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	
3	37726-96303	BRACKET, NEUTRAL SWITCH	1	
4	09100-05104	BOLT (5X20)	1	
5	09140-05005	NUT	1	
6	38600-96301	SOLENOID, CHOKE	1	
7	02112-35127	SCREW	2	
8	33833-91J00	TUBE, WIRING HARNESS (L:250)	1	L:250->50
9	36630-96311	WIRING HARNESS, REMO-CON 1	1	
10	36630-96321	WIRING HARNESS, REMO-CON 2	1	
11	36631-94300	.CAP	1	
12	36612-93900	GROMMET, REMOCON HARNESS	1	

DT30R P40

FIG.335A

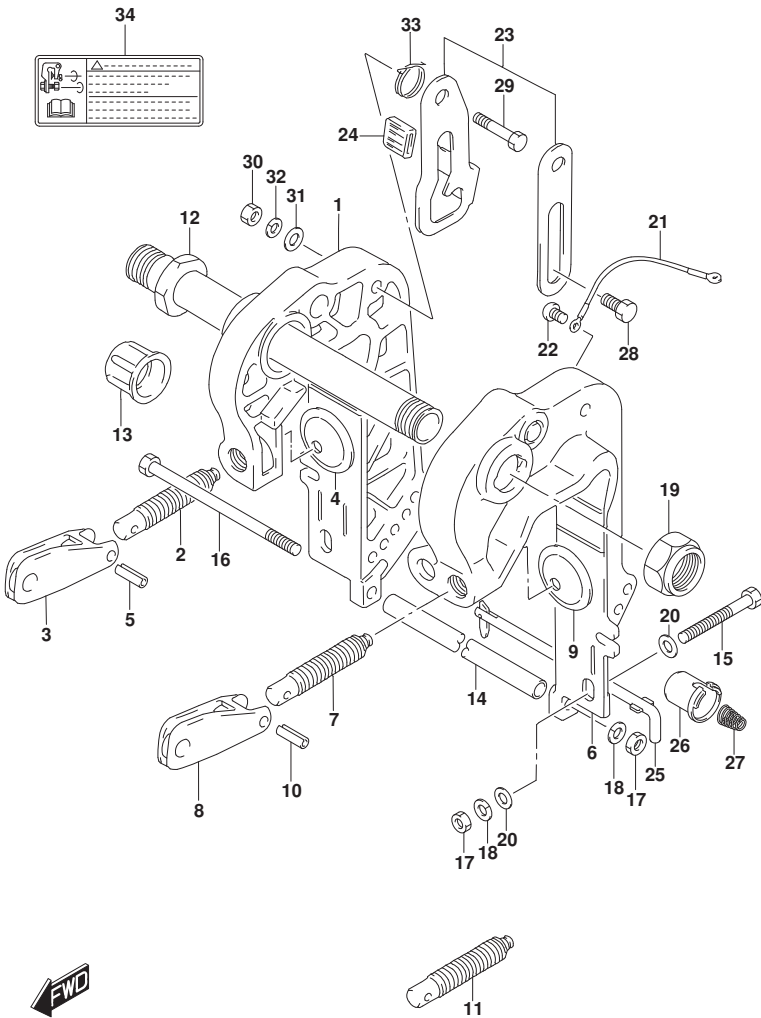


FIG.335A (1-E-4) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-91L00-YAY	BRACKET, CLAMP STBD (BLACK)	1	
2	41211-93003	SCREW, CLAMP	1	
3	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	1	
4	41213-94J01	PLATE, CLAMP	1	
5	09205-06021	SPRING PIN (6X25)	1	
6	41121-91L00-YAY	BRACKET, CLAMP PORT (BLACK)	1	
7	41211-93003	SCREW, CLAMP	1	
8	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	1	
9	41213-94J01	PLATE, CLAMP	1	
10	09205-06021	SPRING PIN (6X25)	1	
11-1	41211-93900	SCREW, CLAMP	2	OPT
11-2	41211-93003	SCREW, CLAMP	2	OPT
11-3	41211-93920	SCREW, CLAMP	2	OPT
12	41130-91L01	SHAFT, CLAMP BRACKET	1	
13	41151-94500	CAP, CLAMP BRACKET SHAFT	2	
14	09180-09024	SPACER (9.2X13.8X128)	1	
15	09100-08311	BOLT (8X90)	2	
16	09100-08313	BOLT (8X165)	1	
17	09140-08023-XC0	NUT	3	
18	29162-93J10	WASHER, LOCK (8.2X15.4X2.0)	3	
19	09159-22006	NUT	1	
20	09160-08081	WASHER (8.5X23X1.5)	4	
21	36894-95201	LEAD (L:165)	1	
22	29125-93J10	SCREW (5X8)	2	
23	41200-91L00	ARM ASSY, TILT	1	
24	41225-94400	RUBBER, TILT LOCK ARM	1	
25	45420-91LL0	PIN, TILT LOCK	1	

FIG.335A

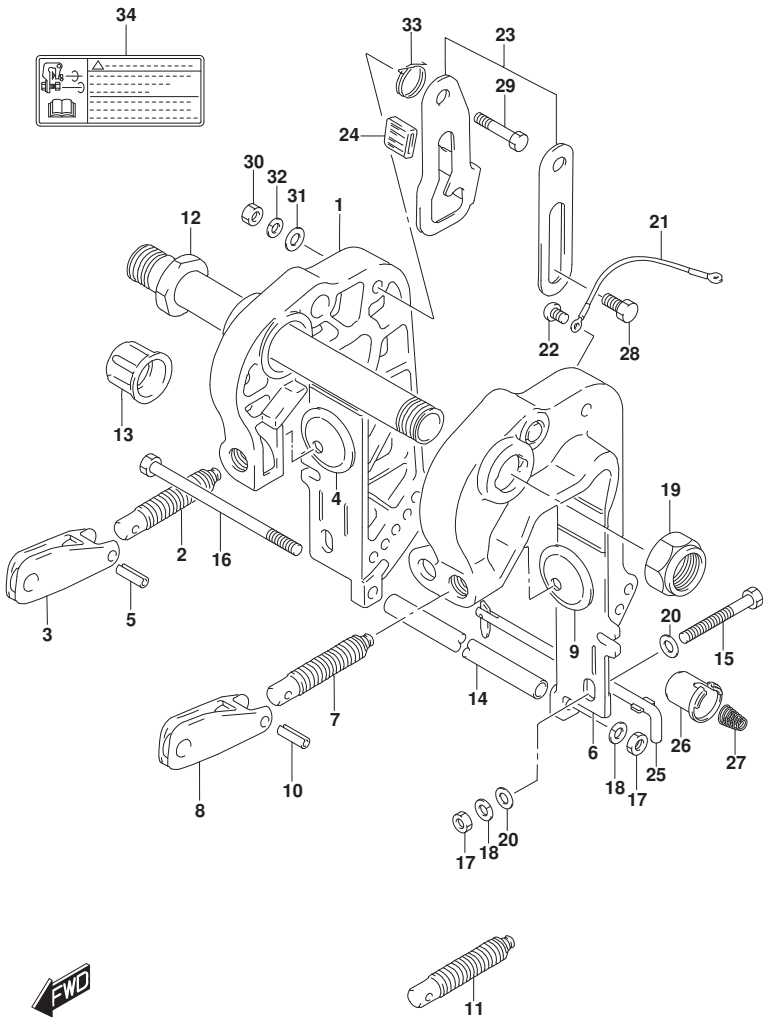


FIG.335A (1-E-5) CLAMP BRACKET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
26	45425-94J01	STOPPER, TILT LOCK PIN	1	
27	09441-17001	SPRING	1	
28	09111-10067	BOLT (10X20.5)	2	
29	09111-10068	BOLT (10X48.5)	2	
30	09140-10031	NUT	2	
31	09160-10082	WASHER (10.5X19X2)	2	
32	09162-10005	LOCK WASHER	2	
33	09448-29015	SPRING	1	
34	69911-91J50	MARK, CLAMP BRACKET	1	


DT25_30_P40_018_336A
SWIVEL BRACKET



DT25_30_P40_018

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43111-91L02-YAY	BRACKET, SWIVEL (BLACK)	1	
2	22511-99011	NIPPLE, SWIVEL BRKT GREASE	4	
3	43710-91L00	BUSH SET, STEERING	1	
4	09205-06013	SPRING PIN (6X16)	1	
5	43741-91L00-YAY	SHAFT, PILOT (BLACK)	1	
6	43751-91L00-YAY	BRACKET, STEERING (BLACK)	1	
7	43753-96310	TUBE, THROTTLE CABLE	1	
8	09116-08149	BOLT (8X22)	4	
9	09160-40005	WASHER (40X58X2)	1	
10	09284-40001	OIL SEAL (40X49X4)	1	
11	09306-22004	BUSH	2	
12	43411-96300	ADJUSTER, STEERING	1	
13	43421-91L00	BUSH	1	
14	09119-08104	BOLT (8X23)	1	
15	09440-12036	SPRING	1	
16	45231-91L00	ARM, REVERSE LOCK	1	
17	45246-91L00	SPACER	1	
18	45241-91L00	LINK, REVERSE LOCK ARM	1	
19	45252-91L00	LINK, RELEASE LEVER	1	
20	45255-96302	KNOB, RELEASE LEVER	1	
21	45257-96300	BUSH, RELEASE LEVER	1	
22	45260-96300	LEVER, RELEASE	1	
23	09160-04012	WASHER (4.2X10X1)	1	
24	45311-91L00-YAY	BRACKET, RELEASE LEVER (BLACK)	1	
25	09116-05010	BOLT (5X12)	2	
26	09111-10066	BOLT (10X16.5)	2	
27	09140-10032	NUT	2	
28	09200-05011	PIN (5X101)	1	
29	09204-01002	PIN	1	
30	09319-04001	BUSH	1	
31	09440-04021	SPRING	1	
32	09443-05013	SPRING	1	
33	09443-09036	SPRING	1	
34	09205-02006	SPRING PIN (2X12)	1	

FIG.336A

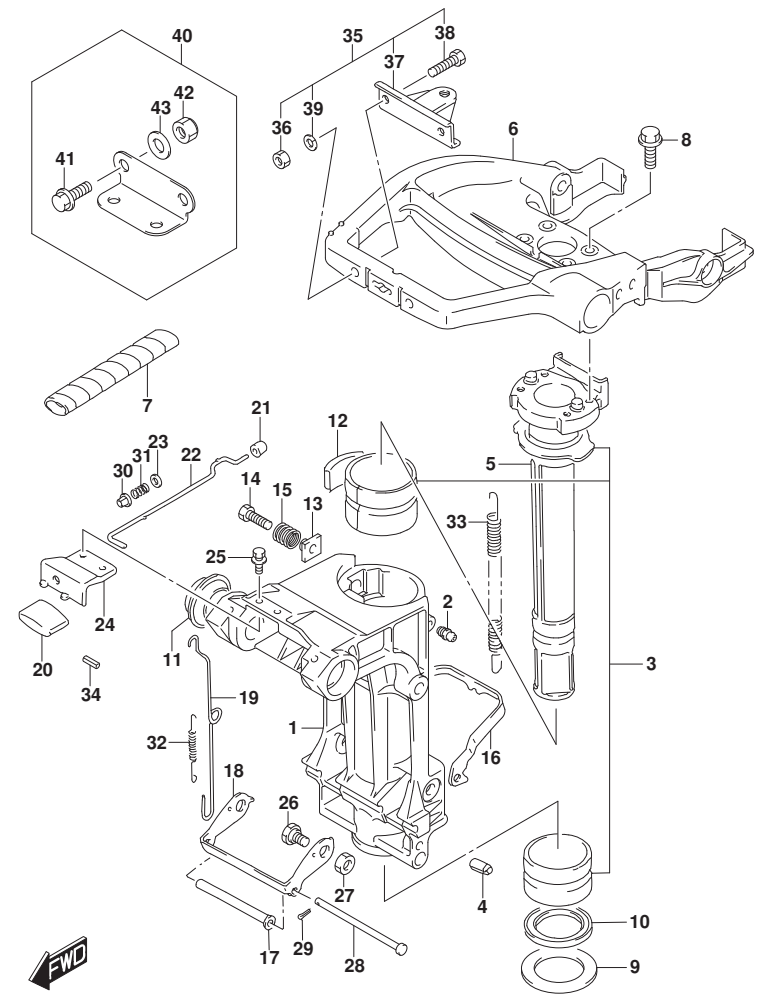

DT25_30_P40_018_336A
SWIVEL BRACKET

FIG.336A (1-E-7) SWIVEL BRACKET (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67100-96300	ATTACHMENT, STEERING ROPE END	1	OPT
36	09140-08023-XC0	.NUT	2	OPT
37	43755-96320	.ATTACHMENT, STEERING BRACKET	1	OPT
38	09100-08309	.BOLT (8X35)	2	OPT
39	29162-93J10	.LOCK WASHER	2	OPT
40	67110-99710	ATTACHMENT SET, STRG ROPE END	1	OPT
41	29116-93J10	.BOLT	2	OPT
42	09159-08059	.NUT	2	OPT
43	09160-08082	.WASHER (8.5X16X1.2)	2	OPT

DT25K P36

FIG.336B

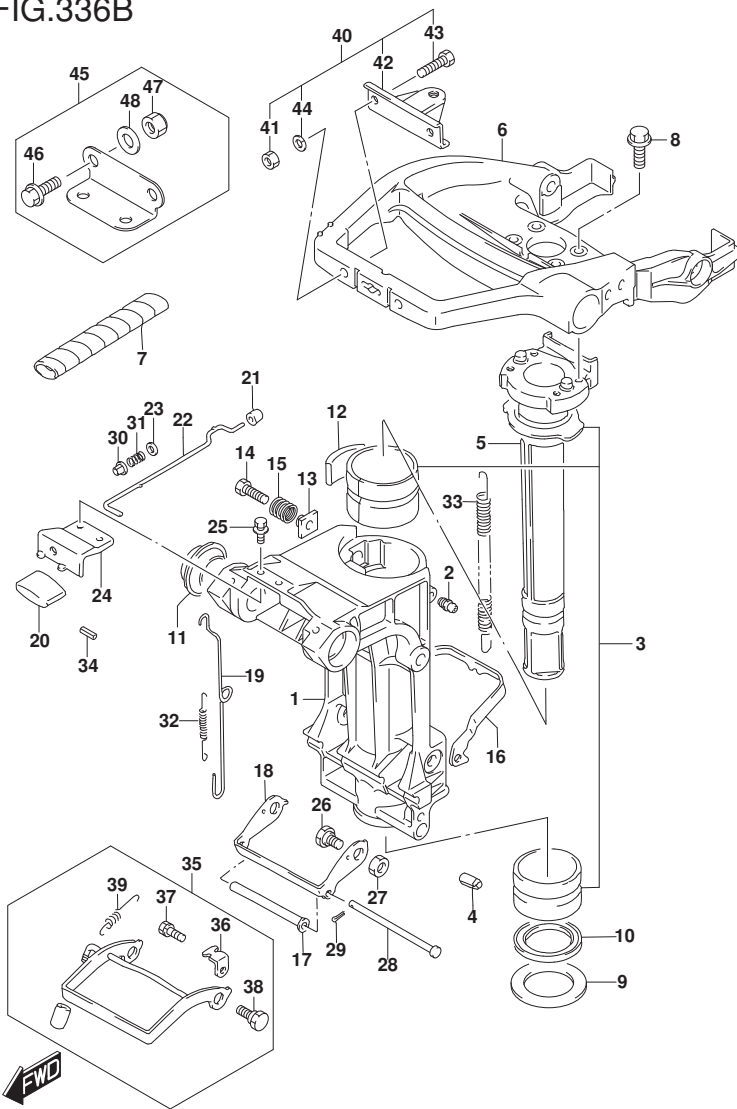


FIG.336B (1-E-8) SWIVEL BRACKET (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43111-91L02-YAY	BRACKET, SWIVEL (BLACK)	1	
2	22511-99011	NIPPLE, SWIVEL BRKT GREASE	4	
3	43710-91L00	BUSH SET, STEERING	1	
4	09205-06013	SPRING PIN (6X16)	1	
5	43741-91L00-YAY	SHAFT, PILOT (BLACK)	1	
6	43751-91L00-YAY	BRACKET, STEERING (BLACK)	1	
7	43753-96310	TUBE, THROTTLE CABLE	1	
8	09116-08149	BOLT (8X22)	4	
9	09160-40005	WASHER (40X58X2)	1	
10	09284-40001	OIL SEAL (40X49X4)	1	
11	09306-22004	BUSH	2	
12	43411-96300	ADJUSTER, STEERING	1	
13	43421-91L00	BUSH	1	
14	09119-08104	BOLT (8X23)	1	
15	09440-12036	SPRING	1	
16	45231-91L00	ARM, REVERSE LOCK	1	
17	45246-91L00	SPACER	1	
18	45241-91L00	LINK, REVERSE LOCK ARM	1	
19	45252-91L00	LINK, RELEASE LEVER	1	
20	45255-96302	KNOB, RELEASE LEVER	1	
21	45257-96300	BUSH, RELEASE LEVER	1	
22	45260-96300	LEVER, RELEASE	1	
23	09160-04012	WASHER (4.2X10X1)	1	
24	45311-91L00-YAY	BRACKET, RELEASE LEVER (BLACK)	1	
25	09116-05010	BOLT (5X12)	2	
26	09111-10066	BOLT (10X16.5)	2	
27	09140-10032	NUT	2	
28	09200-05011	PIN (5X101)	1	
29	09204-01002	PIN	1	
30	09319-04001	BUSH	1	
31	09440-04021	SPRING	1	
32	09443-05013	SPRING	1	
33	09443-09036	SPRING	1	
34	09205-02006	SPRING PIN (2X12)	1	

FIG.336B

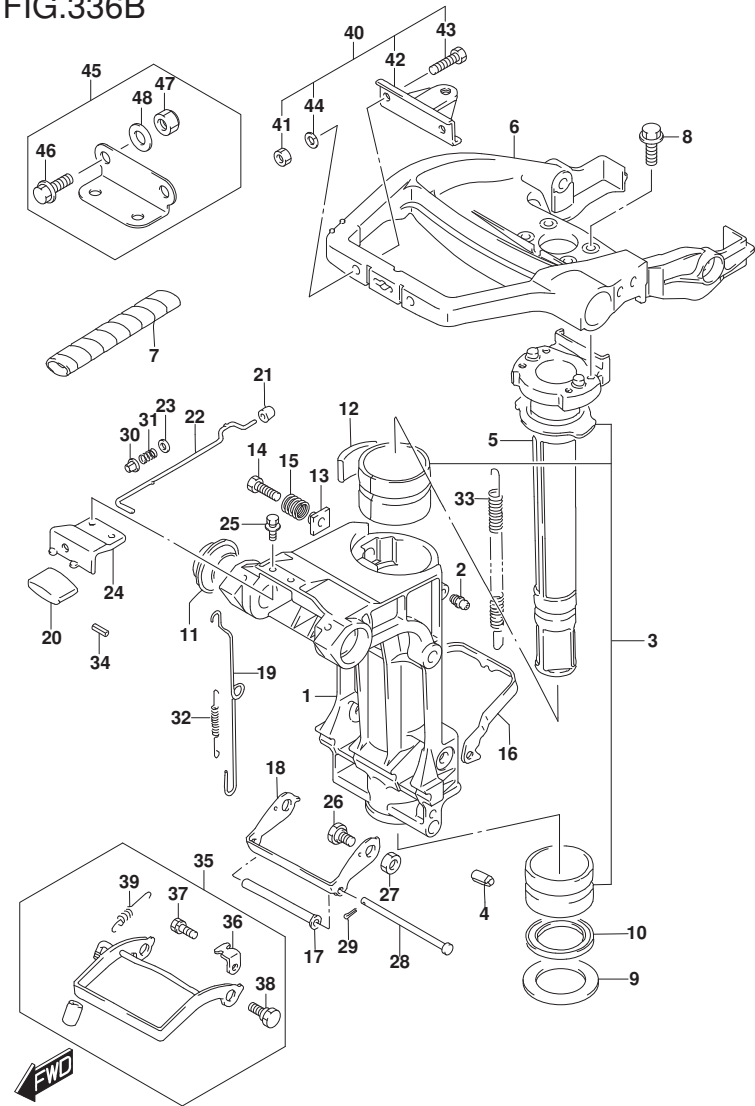


FIG.336B (1-E-9) SWIVEL BRACKET (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	45700-91L10	SHALLOW DRIVE ASSY	1	
36	45731-96312	.PLATE	1	
37	09116-06225	.BOLT (6X15)	1	
38	09111-10067	.BOLT (10X20.5)	2	
39	09443-08031	.SPRING	1	
40	67100-96300	ATTACHMENT, STEERING ROPE END	1	OPT
41	09140-08023-XC0	.NUT	2	OPT
42	43755-96320	.ATTACHMENT, STEERING BRACKET	1	OPT
43	09100-08309	.BOLT (8X35)	2	OPT
44	29162-93J10	.LOCK WASHER	2	OPT
45	67110-99710	ATTACHMENT SET, STRG ROPE END	1	OPT
46	29116-93J10	.BOLT	2	OPT
47	09159-08059	.NUT	2	OPT
48	09160-08082	.WASHER (8.5X16X1.2)	2	OPT

DT30 P40

FIG.336C


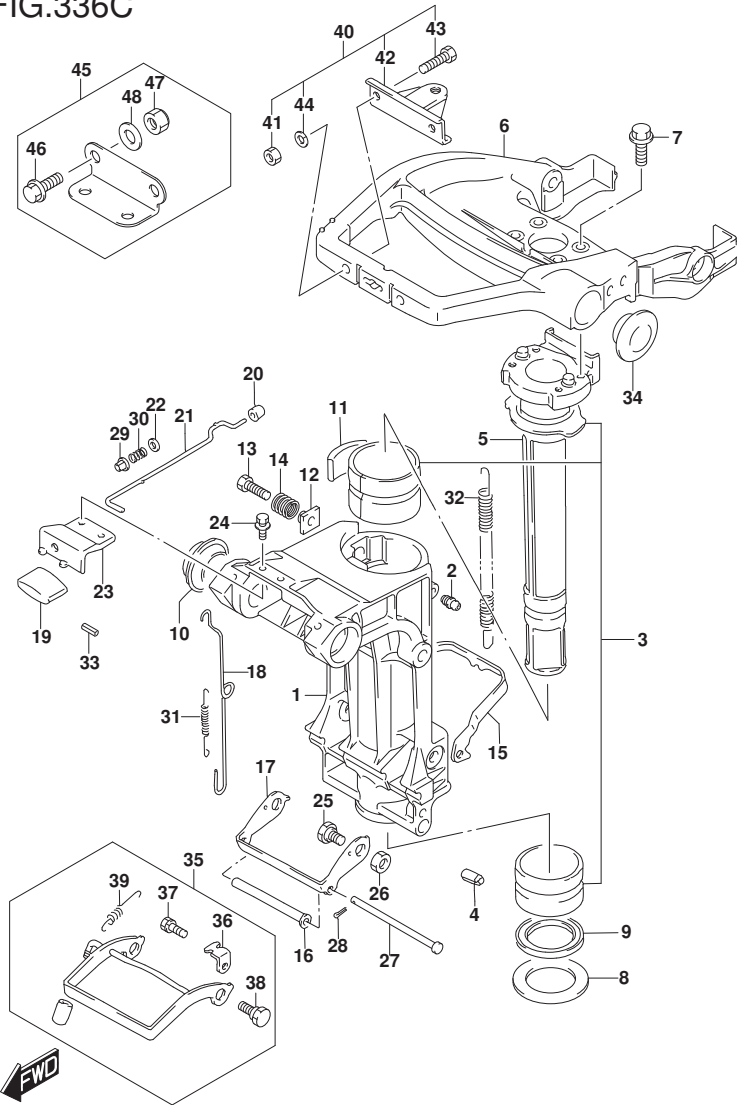


FIG.336C (1-E-10) SWIVEL BRACKET (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	43111-91L02-YAY	BRACKET, SWIVEL (BLACK)	1	
2	22511-99011	NIPPLE, SWIVEL BRKT GREASE	4	
3	43710-91L00	BUSH SET, STEERING	1	
4	09205-06013	SPRING PIN (6X16)	1	
5	43741-91L00-YAY	SHAFT, PILOT (BLACK)	1	
6	43751-91L00-YAY	BRACKET, STEERING (BLACK)	1	
7	09116-08149	BOLT (8X22)	4	
8	09160-40005	WASHER (40X58X2)	1	
9	09284-40001	OIL SEAL (40X49X4)	1	
10	09306-22004	BUSH	2	
11	43411-96300	ADJUSTER, STEERING	1	
12	43421-91L00	BUSH	1	
13	09119-08104	BOLT (8X23)	1	
14	09440-12036	SPRING	1	
15	45231-91L00	ARM, REVERSE LOCK	1	
16	45246-91L00	SPACER	1	
17	45241-91L00	LINK, REVERSE LOCK ARM	1	
18	45252-91L00	LINK, RELEASE LEVER	1	
19	45255-96302	KNOB, RELEASE LEVER	1	
20	45257-96300	BUSH, RELEASE LEVER	1	
21	45260-96300	LEVER, RELEASE	1	
22	09160-04012	WASHER (4.2X10X1)	1	
23	45311-91L00-YAY	BRACKET, RELEASE LEVER (BLACK)	1	
24	09116-05010	BOLT (5X12)	2	
25	09111-10066	BOLT (10X16.5)	2	
26	09140-10032	NUT	2	
27	09200-05011	PIN (5X101)	1	
28	09204-01002	PIN	1	
29	09319-04001	BUSH	1	
30	09440-04021	SPRING	1	
31	09443-05013	SPRING	1	
32	09443-09036	SPRING	1	
33	09205-02006	SPRING PIN (2X12)	1	
34	09250-33001	CAP (OD:40)	1	

FIG.336C

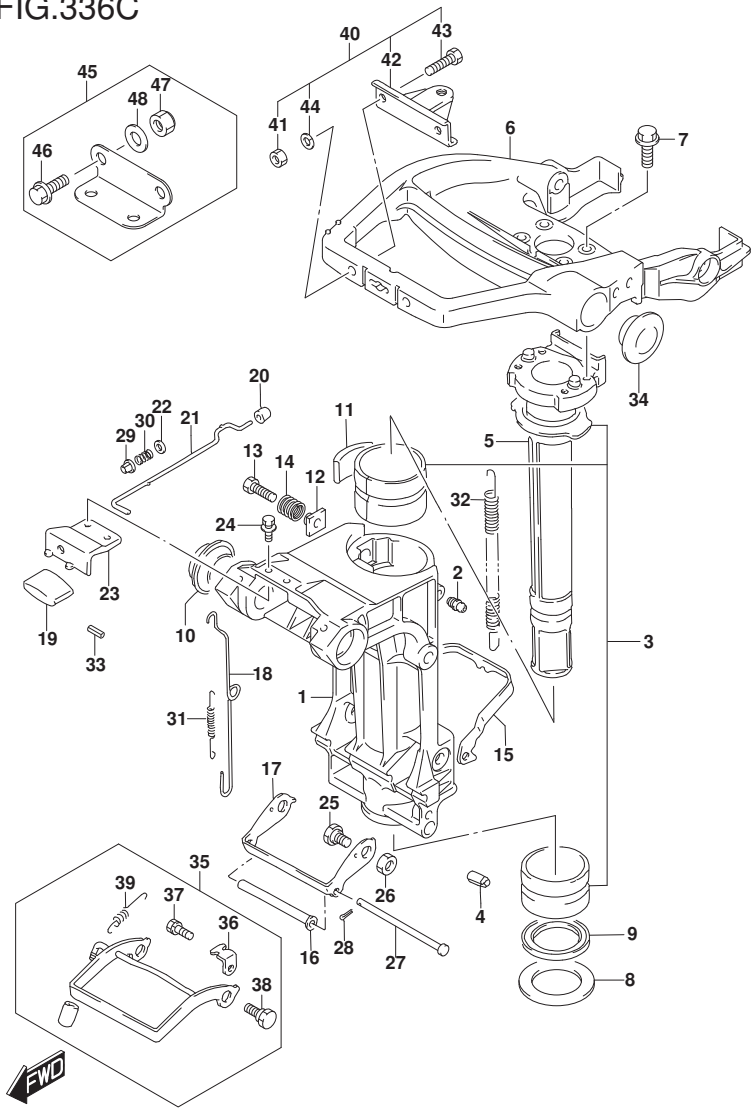

DT25_30_P40_018_336C
SWIVEL BRACKET

FIG.336C (1-E-11) SWIVEL BRACKET (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	45700-91L10	SHALLOW DRIVE ASSY	1	
36	45731-96312	.PLATE	1	
37	09116-06225	.BOLT (6X15)	1	
38	09111-10067	.BOLT (10X20.5)	2	
39	09443-08031	.SPRING	1	
40	67100-96300	ATTACHMENT, STEERING ROPE END	1	OPT
41	09140-08023-XC0	.NUT	2	OPT
42	43755-96320	.ATTACHMENT, STEERING BRACKET	1	OPT
43	09100-08309	.BOLT (8X35)	2	OPT
44	29162-93J10	.LOCK WASHER	2	OPT
45	67110-99710	ATTACHMENT SET, STRG ROPE END	1	OPT
46	29116-93J10	.BOLT	2	OPT
47	09159-08059	.NUT	2	OPT
48	09160-08082	.WASHER (8.5X16X1.2)	2	OPT

DT30R P40

FIG.405A

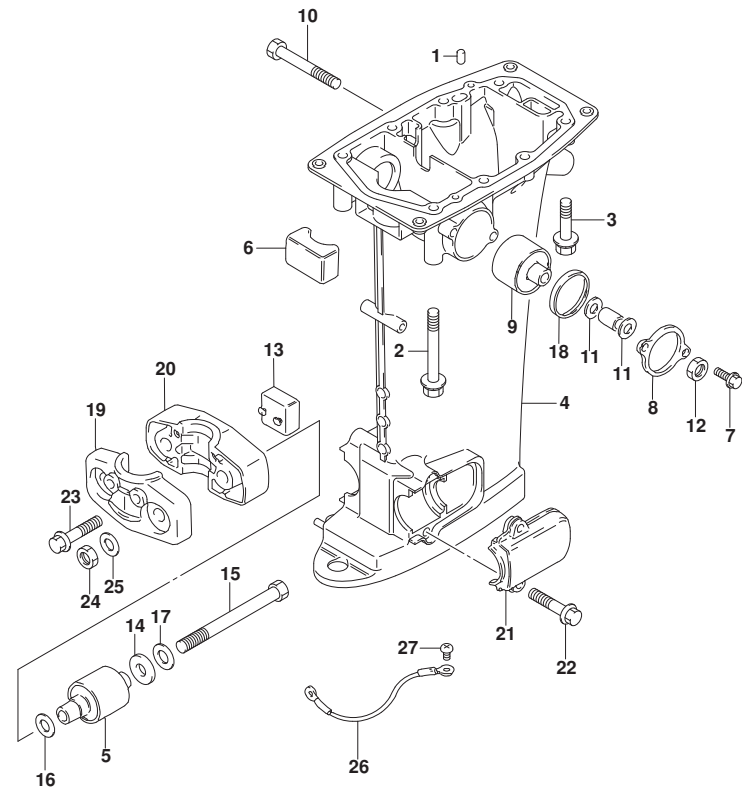


FIG.405A (1-E-12) DRIVE SHAFT HOUSING TRANSOM(S)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09202-06023	PIN (6X10)	2	
2	09118-08172	BOLT (8X85)	4	
3	09118-08169	BOLT (8X52)	4	
4	52110-91L20-YAY	HOUSING, DRIVE SHAFT (S) (BLACK)	1	
5	54160-96310	MOUNTING, LOWER	2	
6	54121-96301	MOUNTING, UPPER THRUST REVERSE	1	
7	09116-06226	BOLT (6X16)	4	
8	54137-91L10-YAY	COVER, UPPER MOUNT (BLACK)	2	
9	54130-96320	MOUNTING, UPPER	2	
10	09100-10318	BOLT (10X75)	2	
11	09160-10082	WASHER (10.5X19X2)	4	
12	09159-10050	NUT	2	
13	54151-96300	MOUNTING, LOWER THRUST	1	
14	54165-96310	DAMPER, REVERSE STOPPER	2	
15	09100-10319	BOLT (10X125)	2	
16	09160-10082	WASHER (10.5X19X2)	2	
17	09160-10083	WASHER (10.5X30X3.2)	2	
18	54138-96300	SLEEVE, UPPER MOUNT	2	
19	54211-91L10-YAY	BRACKET, LOWER MOUNT FRONT (BLACK)	1	
20	54212-91L10-YAY	BRACKET, LOWER MOUNT REAR (BLACK)	1	
21	54221-91L10-YAY	COVER, LOWER MOUNT (BLACK)	2	
22	09116-06232	BOLT (6X30)	4	
23	09116-08154	BOLT (8X40)	2	
24	09159-10050	NUT	2	
25	09160-10082	WASHER (10.5X19X2)	2	
26	36894-95201	LEAD (L:165)	1	
27	29125-93J10	SCREW (5X8)	2	

DT30 P40
DT30R P40

FIG.405B

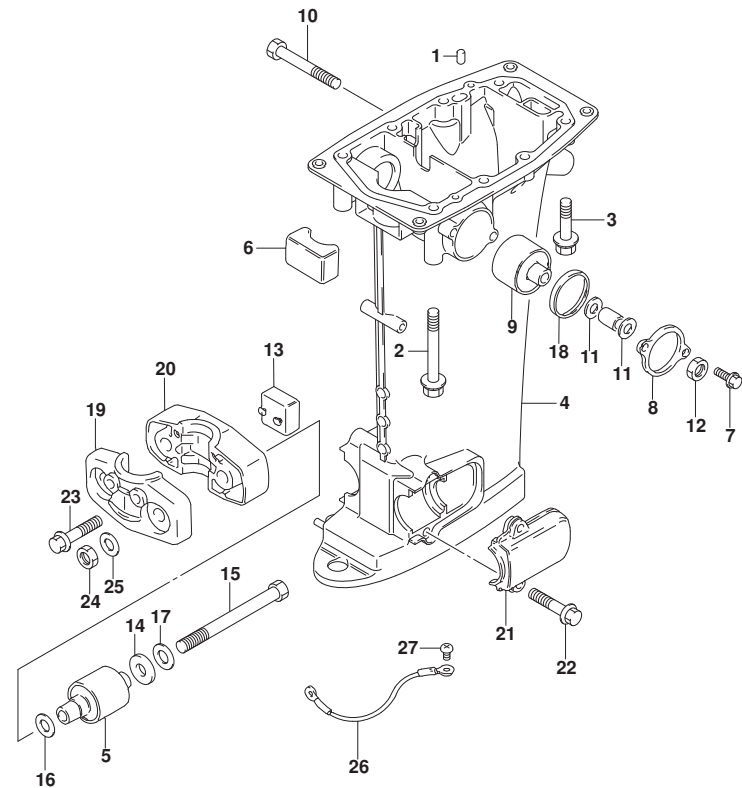


FIG.405B (1-E-13) DRIVE SHAFT HOUSING TRANSOM(L)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09202-06023	PIN (6X10)	2	
2	09118-08172	BOLT (8X85)	4	
3	09118-08169	BOLT (8X52)	4	
4	52110-91L30-YAY	HOUSING, DRIVE SHAFT (L) (BLACK)	1	
5	54160-96310	MOUNTING, LOWER	2	
6	54121-96301	MOUNTING, UPPER THRUST REVERSE	1	
7	09116-06226	BOLT (6X16)	4	
8	54137-91L10-YAY	COVER, UPPER MOUNT (BLACK)	2	
9	54130-96320	MOUNTING, UPPER	2	
10	09100-10318	BOLT (10X75)	2	
11	09160-10082	WASHER (10.5X19X2)	4	
12	09159-10050	NUT	2	
13	54151-96300	MOUNTING, LOWER THRUST	1	
14	54165-96310	DAMPER, REVERSE STOPPER	2	
15	09100-10319	BOLT (10X125)	2	
16	09160-10082	WASHER (10.5X19X2)	2	
17	09160-10083	WASHER (10.5X30X3.2)	2	
18	54138-96300	SLEEVE, UPPER MOUNT	2	
19	54211-91L10-YAY	BRACKET, LOWER MOUNT FRONT (BLACK)	1	
20	54212-91L10-YAY	BRACKET, LOWER MOUNT REAR (BLACK)	1	
21	54221-91L10-YAY	COVER, LOWER MOUNT (BLACK)	2	
22	09116-06232	BOLT (6X30)	4	
23	09116-08154	BOLT (8X40)	2	
24	09159-10050	NUT	2	
25	09160-10082	WASHER (10.5X19X2)	2	
26	36894-95201	LEAD (L:165)	1	
27	29125-93J10	SCREW (5X8)	2	

DT25K P36
DT30 P40
DT30R P40

FIG.407A

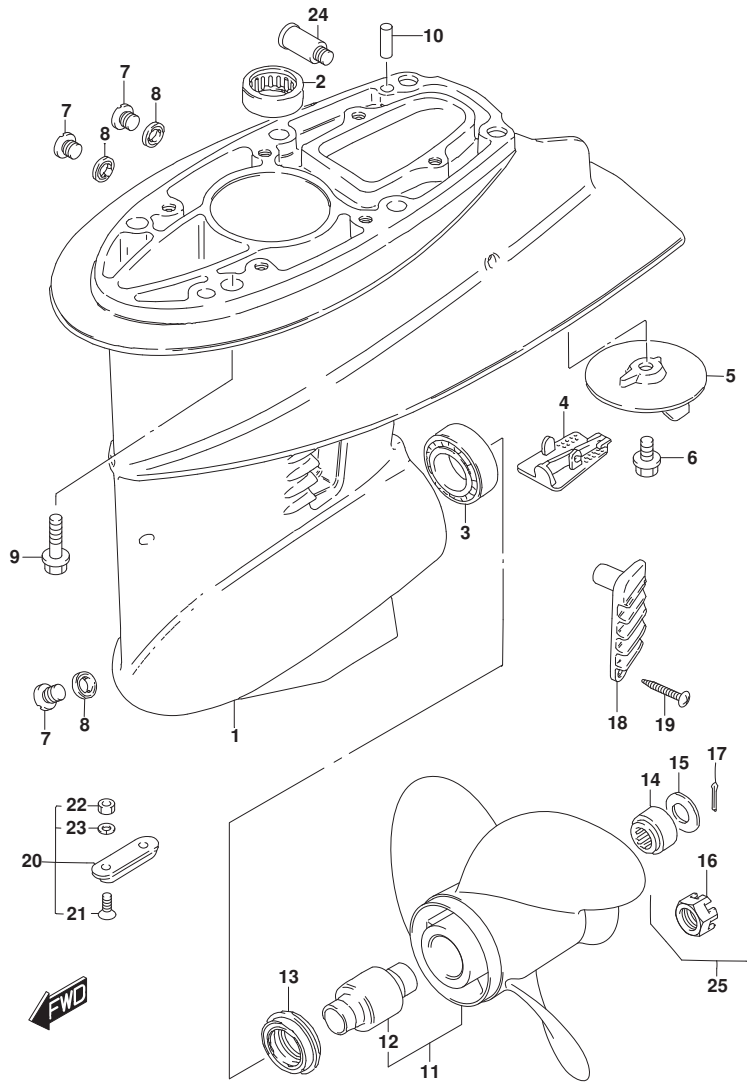


FIG.407A (1-E-14) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-91L40-YAY	CASE ASSY, GEAR (BLACK)	1	
2	09263-20046	.BEARING (20.6X27X25.4)	1	
3	09265-25015	.BEARING (25X52X16.25)	1	
4	55114-963L0	.COVER, GEAR CASE	1	
5	55125-96310	TRIM TAB	1	
6	09116-08147	BOLT (8X16)	1	
7	09248-10008	PLUG (10X7.5)	3	
8	09168-10022	GASKET (10X17X1.5)	3	
9	09116-08154	BOLT (8X40)	6	
10	09202-06015	KNOCK PIN (L:20)	2	
11-1	58100-96372-019	PROPELLER (3X10-1/4X9) (BLACK)	1	
11-2	58100-91L40-019	PROPELLER (3X10-1/4X10) (BLACK)	1	
11-3	58100-91L50-019	PROPELLER (3X10-1/4X11) (BLACK)	1	
11-4	58100-91L20-019	PROPELLER (3X10-1/4X12) (BLACK)	1	
11-5	58100-91L30-019	PROPELLER (3X10-1/4X13) (BLACK)	1	
11-6	58100-95D01-019	PROPELLER (3X10-1/4X14) (BLACK)	1	
11-7	58100-96472-019	PROPELLER (3X10-1/4X10) (BLACK)	1	
11-8	58100-96482-019	PROPELLER (3X10-1/4X12) (BLACK)	1	
11-9	58100-96462-019	PROPELLER (3X10-1/4X15) (BLACK)	1	OPT
11-10	58100-96492-019	PROPELLER (3X10-1/4X13) (BLACK)	1	OPT THICK BLADE
12	58120-96401	.BUSH	1	
13	57632-91L00	STOPPER, PROPELLER BUSH	1	
14	57633-96300	SPACER , PROPELLER NUT	1	
15	09160-14028	WASHER (14.5X30X2.5)	1	
16	09141-14008	NUT	1	
17	09204-03003	COTTER PIN (D:3.6,L:25)	1	
18	17631-91L00	FILTER, WATER	2	

FIG.407A

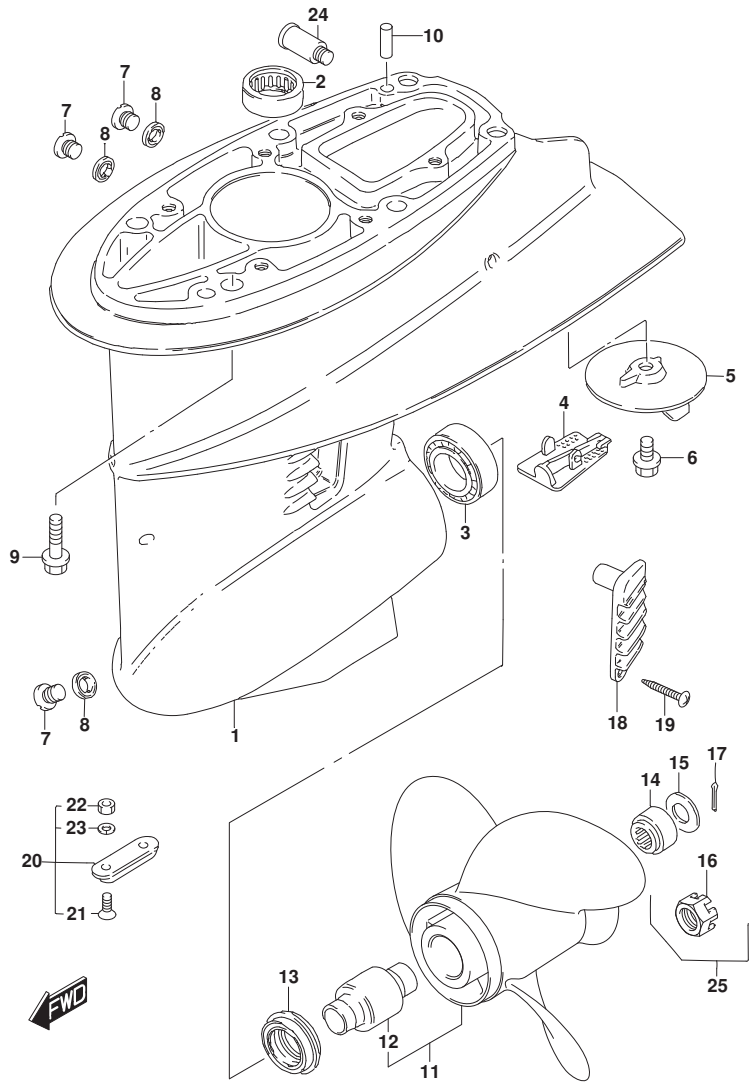


FIG.407A (1-E-15) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
19	03142-04259	SCREW	2		
20	55300-95500	ZINC ASSY, PROTECTION	1	OPT	
21	09126-06006	.SCREW (6X20)	2	OPT	
22	29141-93J00	.NUT	2	OPT	
23	29162-93J00	.LOCK WASHER (6.1X12.2X1.5)	2	OPT	
24	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT	
25	57630-96300	KIT, PROPELLER NUT	1	OPT	

FIG.413A

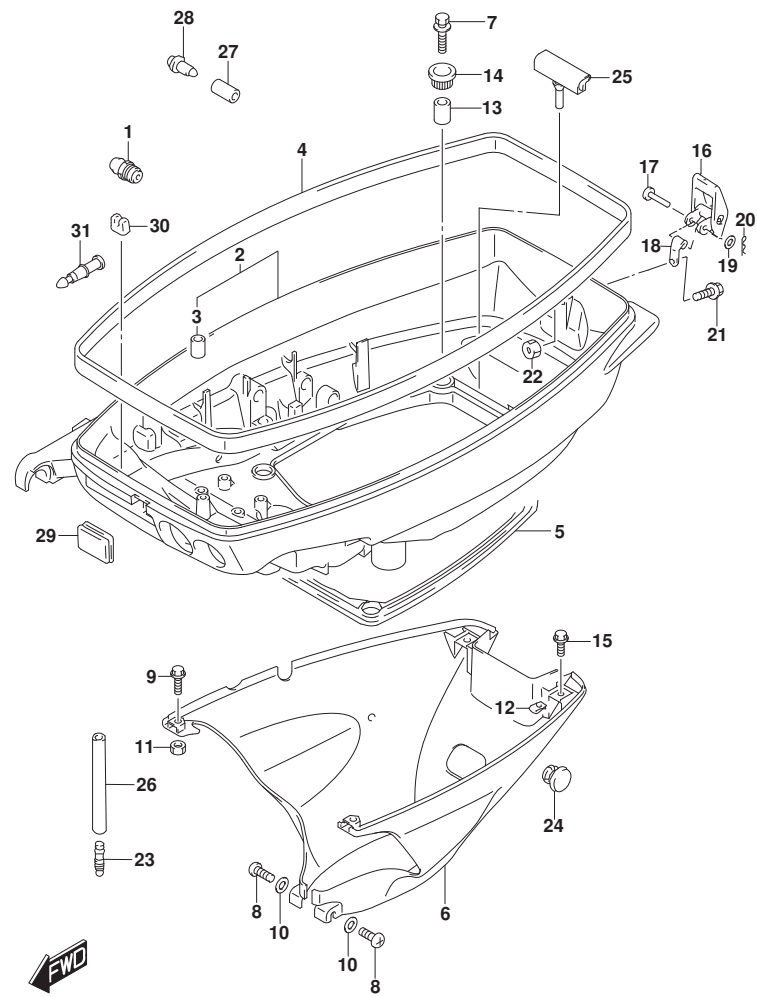


FIG.413A (1-F-2) UNDER COVER (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE	1	
2	61110-91L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
3	09205-10006	.SPRING PIN (10.2X10)	1	
4	61112-96320	RUBBER, UNDER COVER	1	
5	61113-91L00	SEAL, UNDER COVER	1	
6	61131-91L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
7	09116-06230	BOLT (6X25)	4	
8	09125-05046	SCREW (5X12)	2	
9	09116-06223	BOLT (6X12)	2	
10	09160-05029	WASHER (5.5X12X0.8)	2	
11	09140-06020	NUT	2	
12	09148-06017	NUT	2	
13	09180-06289	SPACER (6.5X10X11.5)	4	
14	09320-10031	CUSHION	4	
15	09116-06227	BOLT (6X20)	2	
16	61610-90L00	FASTENER	1	
17	61616-93EL0	PIN, LEVER	1	
18	61642-90L00	HOLDER, FASTENER LEVER	1	
19	09161-04012	WASHER (4.2X11X1)	1	
20	09385-04003	CLIP	1	
21	09116-06225	BOLT (6X15)	1	
22	08310-00067	NUT	1	
23	61155-94500	TUBE, WATER INSPECTION	1	
24	09250-08007	CAP (OD:16)	2	
25	61138-944L0	COVER, WATER	1	
26	09352-50903-600	HOSE (5X9X600)	1	L:600->40
27	09352-70121-600	HOSE (7X12.1X600)	1	L:600->15
28	09409-08308-5ES	CLIP (BLACK)	1	FOR KEROSENE
29	39669-94400	PLUG, LOWER COVER	1	FOR KEROSENE
30	13625-94300	CAP, CHOKE ROD GUIDE	1	
31	36615-96300	TERMINAL, RESIN	2	

DT25K P36

FIG.413B

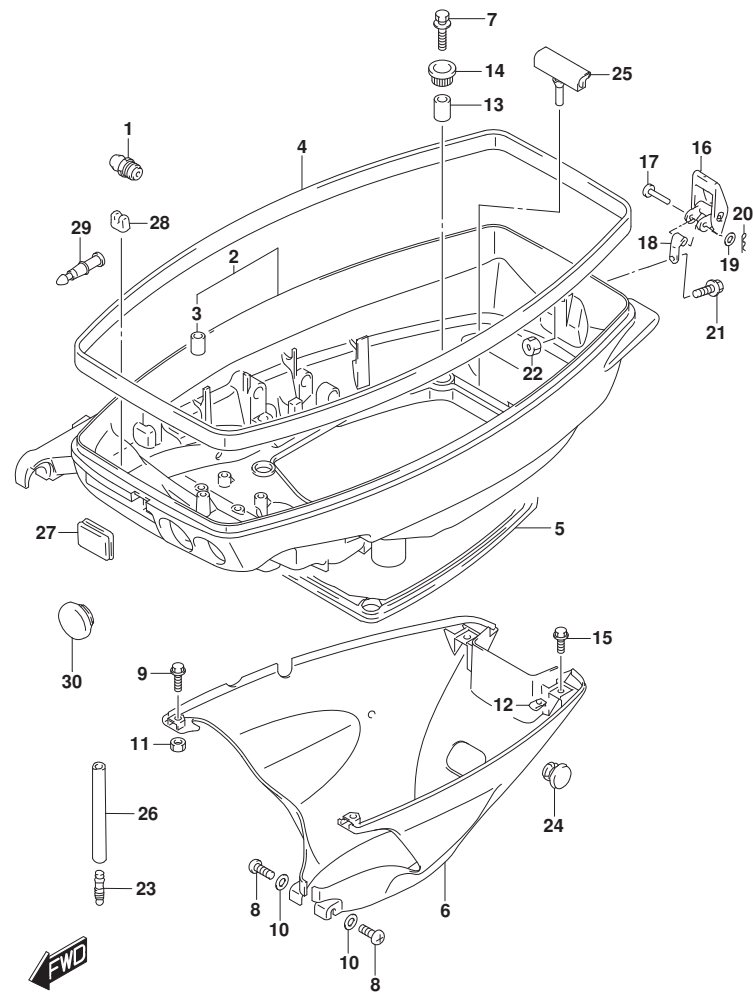


FIG.413B (1-F-3) UNDER COVER (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE	1	
2	61110-91L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
3	09205-10006	.SPRING PIN (10.2X10)	1	
4	61112-96320	RUBBER, UNDER COVER	1	
5	61113-91L00	SEAL, UNDER COVER	1	
6	61131-91L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
7	09116-06230	BOLT (6X25)	4	
8	09125-05046	SCREW (5X12)	2	
9	09116-06223	BOLT (6X12)	2	
10	09160-05029	WASHER (5.5X12X0.8)	2	
11	09140-06020	NUT	2	
12	09148-06017	NUT	2	
13	09180-06289	SPACER (6.5X10X11.5)	4	
14	09320-10031	CUSHION	4	
15	09116-06227	BOLT (6X20)	2	
16	61610-90L00	FASTENER	1	
17	61616-93EL0	PIN, LEVER	1	
18	61642-90L00	HOLDER, FASTENER LEVER	1	
19	09161-04012	WASHER (4.2X11X1)	1	
20	09385-04003	CLIP	1	
21	09116-06225	BOLT (6X15)	1	
22	08310-00067	NUT	1	
23	61155-94500	TUBE, WATER INSPECTION	1	
24	09250-08007	CAP (OD:16)	2	
25	61138-944L0	COVER, WATER	1	
26	09352-50903-600	HOSE (5X9X600)	1	L:600->40
27	39669-94400	PLUG, LOWER COVER	1	W/MANUAL STARTER
28	13625-94300	CAP, CHOKE ROD GUIDE	1	
29	36615-96300	TERMINAL, RESIN	2	W/MANUAL STARTER
30	09250-21003	PLUG (OD:28)	1	W/MANUAL STARTER FOR STARTING SW HOLE

DT30 P40

FIG.413C

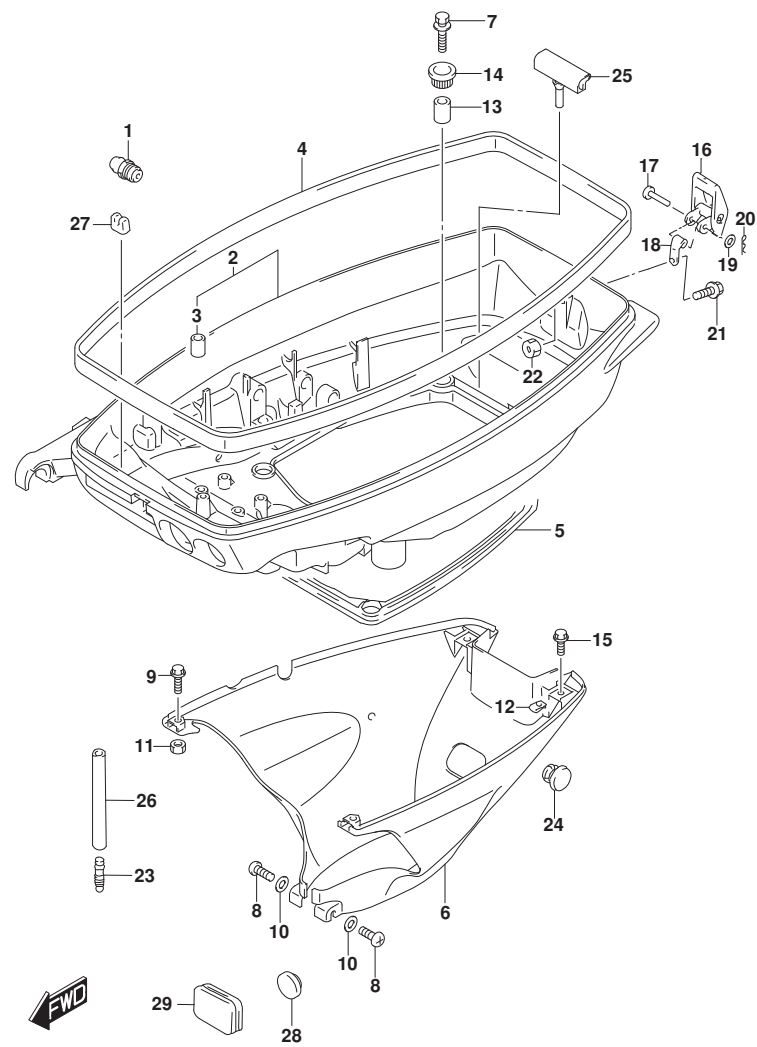


FIG.413C (1-F-4) UNDER COVER (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE	1	
2	61110-91L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
3	09205-10006	.SPRING PIN (10.2X10)	1	
4	61112-96320	RUBBER, UNDER COVER	1	
5	61113-91L00	SEAL, UNDER COVER	1	
6	61131-91L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
7	09116-06230	BOLT (6X25)	4	
8	09125-05046	SCREW (5X12)	2	
9	09116-06223	BOLT (6X12)	2	
10	09160-05029	WASHER (5.5X12X0.8)	2	
11	09140-06020	NUT	2	
12	09148-06017	NUT	2	
13	09180-06289	SPACER (6.5X10X11.5)	4	
14	09320-10031	CUSHION	4	
15	09116-06227	BOLT (6X20)	2	
16	61610-90L00	FASTENER	1	
17	61616-93EL0	PIN, LEVER	1	
18	61642-90L00	HOLDER, FASTENER LEVER	1	
19	09161-04012	WASHER (4.2X11X1)	1	
20	09385-04003	CLIP	1	
21	09116-06225	BOLT (6X15)	1	
22	08310-00067	NUT	1	
23	61155-94500	TUBE, WATER INSPECTION	1	
24	09250-08007	CAP (OD:16)	2	
25	61138-944L0	COVER, WATER	1	
26	09352-50903-600	HOSE (5X9X600)	1	L:600->40
27	13625-94300	CAP, CHOKE ROD GUIDE	1	
28	09250-16008	PLUG (OD:24)	1	EMG SW HOLE
29	63625-94300	CAP, THROTTLE CABLE	1	

DT30R P40

FIG.420A

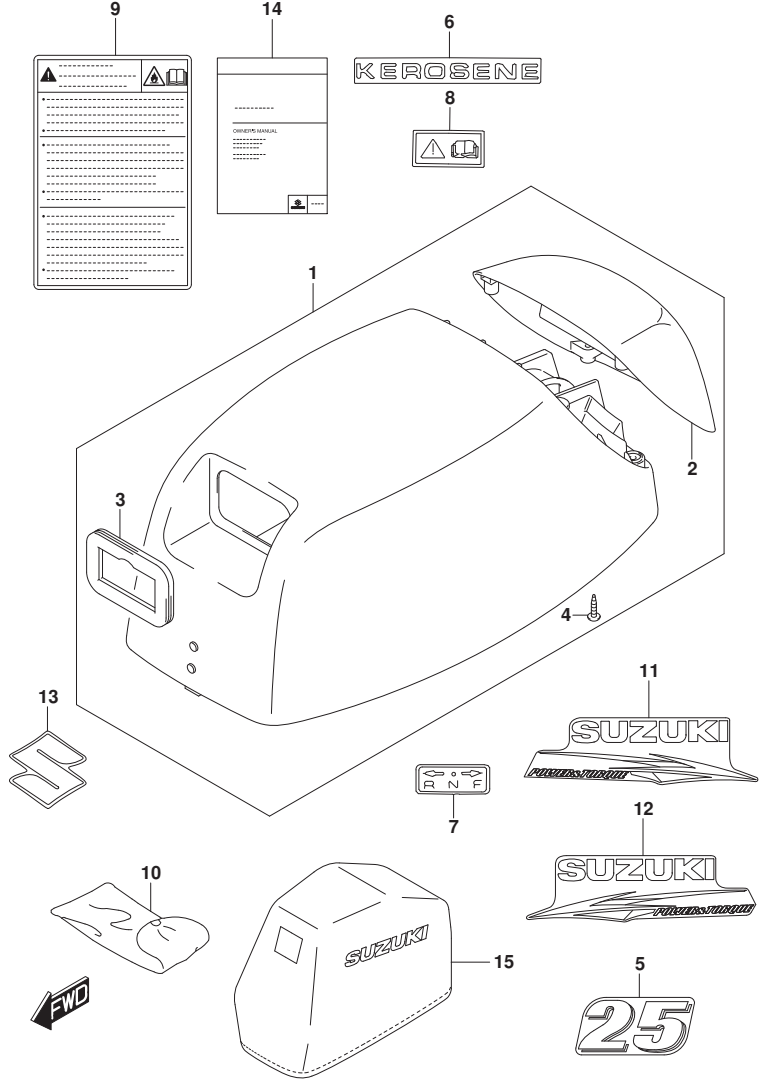


FIG.420A (1-F-5) ENGINE COVER (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-91L12-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-91L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-96302	.RUBBER, RECOIL STARTER SEAL	1	
4	03542-06169	.SCREW	4	
5	61435-91L20	MARK, EMBLEM REAR (25)	1	
6	61449-95L00	MARK, KEROSENE	1	
7	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	
8	69712-93E10	LABEL, S.I.G.P.	1	
9	61458-89L00	LABEL, ENGINE COVER	1	
10	59800-90L10	TOOL ASSY	1	
11	61443-91L10	STRIPE, ENGINE COVER STBD	1	
12	61453-91L10	STRIPE, ENGINE COVER PORT	1	
13	68111-91L00	EMBLEM, "S"	1	
14	99011-91LD0-063	MANUAL, OWNER'S	1	
15	68110-88L01	COVER, WEATHER	1	OPT

DT25K P36

FIG.420B

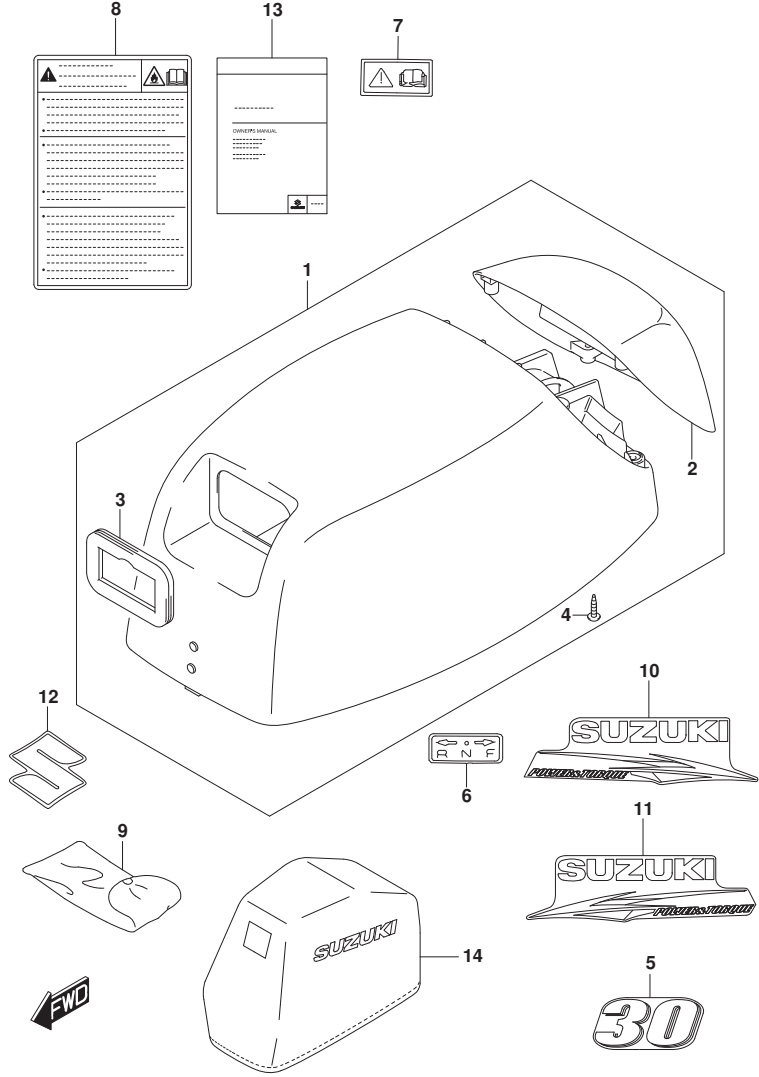


FIG.420B (1-F-6) ENGINE COVER (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-91L12-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-91L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-96302	.RUBBER, RECOIL STARTER SEAL	1	
4	03542-06169	.SCREW	4	
5	61435-91L30	MARK, EMBLEM REAR (30)	1	
6	21131-94J00-YAY	MARK, CLUTCH SHIFT (BLACK)	1	
7	69712-93E10	LABEL, S.I.G.P.	1	
8	61458-89L00	LABEL, ENGINE COVER	1	
9	59800-90L10	TOOL ASSY	1	
10	61443-91L10	STRIPE, ENGINE COVER STBD	1	
11	61453-91L10	STRIPE, ENGINE COVER PORT	1	
12	68111-91L00	EMBLEM, "S"	1	
13	99011-91LC0-063	MANUAL, OWNER'S	1	
14	68110-88L01	COVER, WEATHER	1	OPT

DT30 P40

FIG.420C

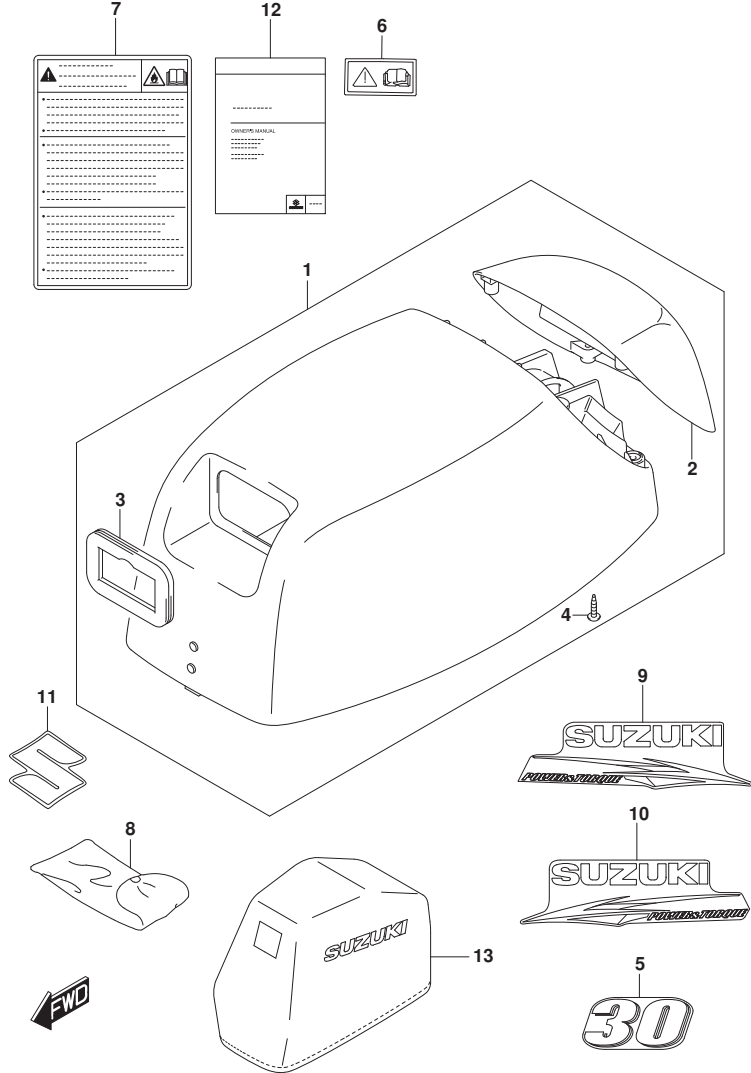


FIG.420C (1-F-7) ENGINE COVER (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-91L12-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-91L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-96302	.RUBBER, RECOIL STARTER SEAL	1	
4	03542-06169	.SCREW	4	
5	61435-91L30	MARK, EMBLEM REAR (30)	1	
6	69712-93E10	LABEL, S.I.G.P.	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	59800-90L10	TOOL ASSY	1	
9	61443-91L10	STRIPE, ENGINE COVER STBD	1	
10	61453-91L10	STRIPE, ENGINE COVER PORT	1	
11	68111-91L00	EMBLEM, "S"	1	
12	99011-91LC0-063	MANUAL, OWNER'S	1	
13	68110-88L01	COVER, WEATHER	1	OPT

DT30R P40

FIG.432A

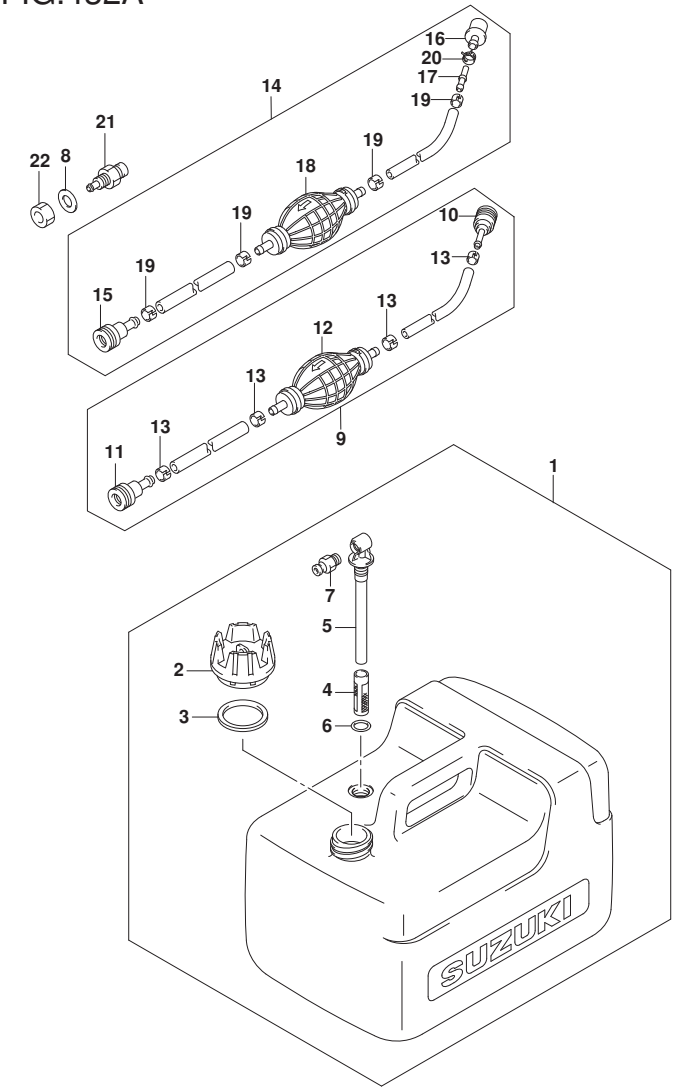


FIG.432A (1-F-8) FUEL TANK (RESIN, 12L) (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-99100	TANK ASSY, FUEL (12L)	1	
2	65520-99100	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-99100	.OUTLET ASSY	1	
6	65892-95D00	.O RING	1	
7	65740-99100	.PLUG, FUEL CONNECTOR	1	
8	09160-12066	WASHER (12.5X22X2.5)	1	FOR GASOLINE
9	65700-95D05	HOSE, FUEL	1	FOR GASOLINE
10	65750-98505	.SOCKET, FUEL HOSE (IN)	1	FOR GASOLINE
11	65750-95500	.SOCKET, FUEL HOSE (OUT)	1	FOR GASOLINE
12	65770-99J02	.PUMP, SQUEEZE	1	FOR GASOLINE
13	65781-98500	.CLIP	4	FOR GASOLINE
14	65700-94417	HOSE, FUEL	1	FOR GASOLINE
15	65750-95500	.SOCKET, FUEL HOSE	1	FOR GASOLINE
16	65830-95500	.FILTER ASSY, FUEL HOSE	1	FOR GASOLINE
17	65842-94401	.TUBE	1	FOR GASOLINE
18	65770-90J12	.PUMP, SQUEEZE	1	FOR GASOLINE
19	65781-98500	.CLIP	4	FOR GASOLINE
20	09401-10412	.CLIP	1	FOR GASOLINE
21	65720-955L0	PLUG, FUEL CONNECTOR	1	FOR GASOLINE
22	65761-91L00	NUT, FUEL CONNECTOR PLUG	1	FOR GASOLINE

DT25K P36

FIG.432B


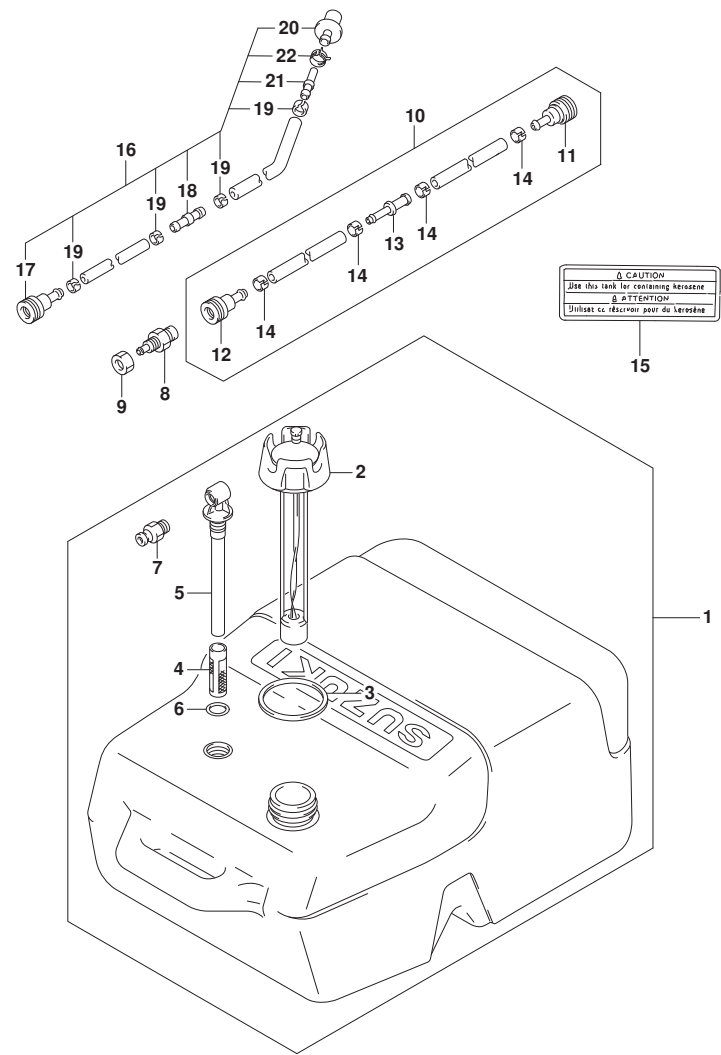


FIG.432B (1-F-9) FUEL TANK (RESIN, 25L) (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-95D00	.OUTLET ASSY	1	
6	65892-95D00	.O RING, OUTLET	1	
7	65740-95D01	.PLUG, FUEL CONNECTOR	1	
8	65720-985L1	PLUG, FUEL CONNECTOR	1	FOR KEROSENE
9	09140-10032	NUT	1	FOR KEROSENE
10	65700-96362	HOSE, FUEL	1	FOR KEROSENE
11	65750-95500	.SOCKET (IN)	1	FOR KEROSENE
12	65750-98505	.SOCKET (OUT)	1	FOR KEROSENE
13	65779-93900	.UNION	1	FOR KEROSENE
14	65781-98500	.CLIP	4	FOR KEROSENE
15	65318-93910	MARK, KEROSENE CAUTION	1	FOR KEROSENE
16	65700-94424	HOSE, FUEL	1	FOR KEROSENE
17	65750-98505	.SOCKET, FUEL HOSE	1	FOR KEROSENE
18	65779-93900	.UNION, FUEL HOSE	1	FOR KEROSENE
19	65781-98500	.CLIP	4	FOR KEROSENE
20	65830-95500	.FILTER	1	FOR KEROSENE
21	65842-94401	.TUBE	1	FOR KEROSENE
22	09401-10412	.CLIP	1	FOR KEROSENE

DT25K P36

FIG.432C

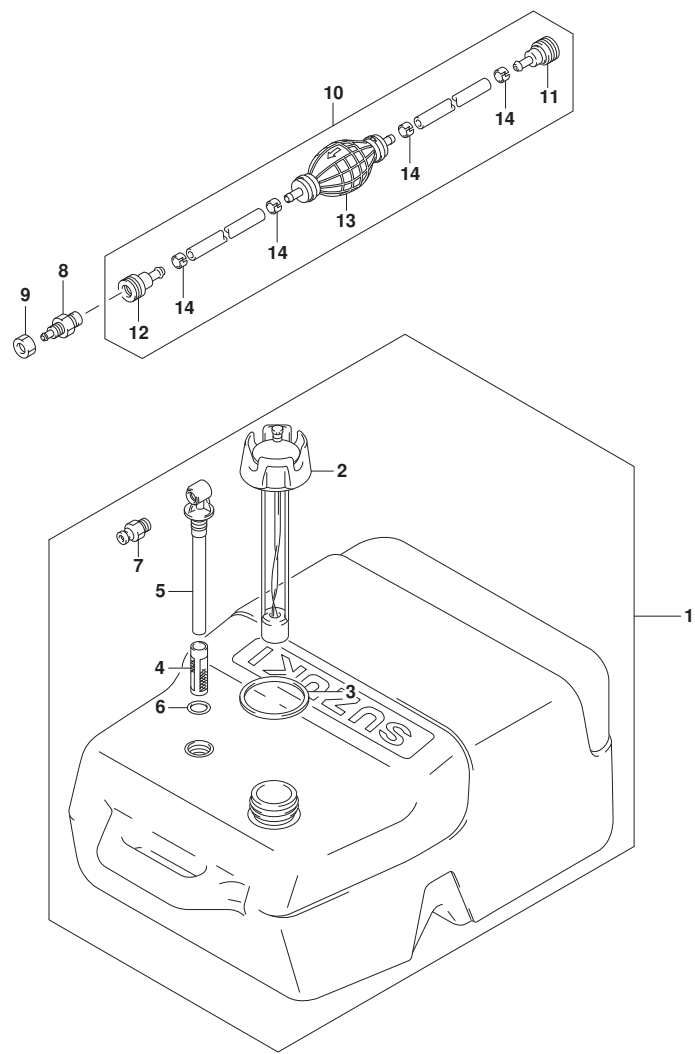

DT25_30_P40_018_432C
FUEL TANK

FIG.432C (1-F-10) FUEL TANK (RESIN, 25L) (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-95D00	.OUTLET ASSY	1	
6	65892-95D00	.O RING, OUTLET	1	
7	65740-95D01	.PLUG, FUEL CONNECTOR	1	
8	65720-985L1	PLUG, FUEL CONNECTOR	1	
9	09140-10032	NUT	1	
10	65700-87DL0	HOSE, FUEL	1	
11	65750-95500	.SOCKET, FUEL HOSE (IN)	1	
12	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
13	65770-87DL0	.PUMP, SQUEEZE	1	
14	65781-98500	.CLIP	4	

DT30 P40

FIG.432D

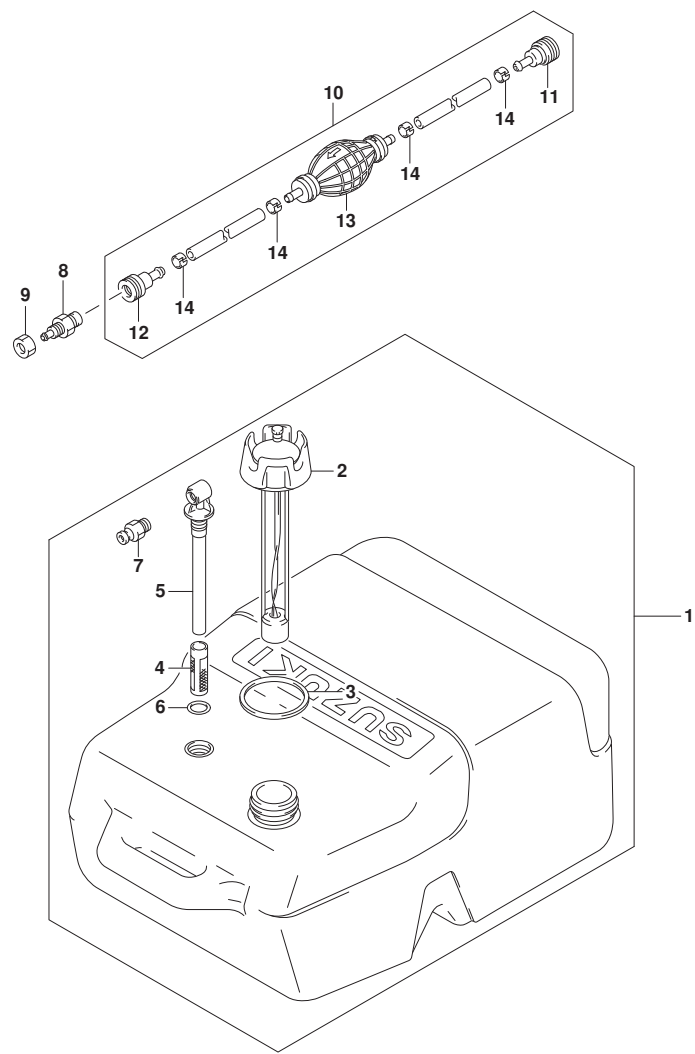


FIG.432D (1-F-11) FUEL TANK (RESIN, 25L) (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-95D00	.OUTLET ASSY	1	
6	65892-95D00	.O RING, OUTLET	1	
7	65740-95D01	.PLUG, FUEL CONNECTOR	1	
8	65720-985L1	PLUG, FUEL CONNECTOR	1	
9	09140-10032	NUT	1	
10	65700-87DL0	HOSE, FUEL	1	
11	65750-95500	.SOCKET, FUEL HOSE (IN)	1	
12	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
13	65770-87DL0	.PUMP, SQUEEZE	1	
14	65781-98500	.CLIP	4	

DT30R P40

FIG.442A

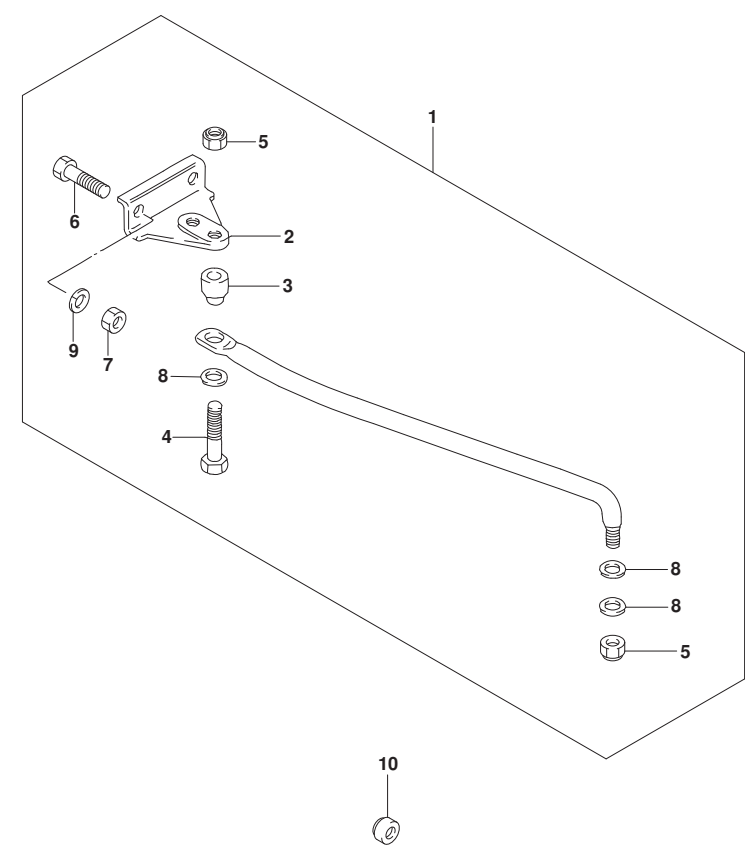


FIG.442A (1-F-12) DRAG LINK (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67701-94420	DRAG LINK ASSY	1	
2	43755-96320	.ATTACHMENT, STEERING BRACKET	1	
3	67721-94310	.SPACER	1	
4	67725-99E20	.BOLT	1	
5	67726-99E00	.NUT	2	
6	09100-08309	.BOLT (8X35)	2	
7	09140-08023-XC0	.NUT	1	
8	67728-99E00	.WASHER	3	
9	29162-93J10	.LOCK WASHER	2	
10	41161-94400	SEAL, STEERING CABLE	1	

DT30R P40

FIG.444A

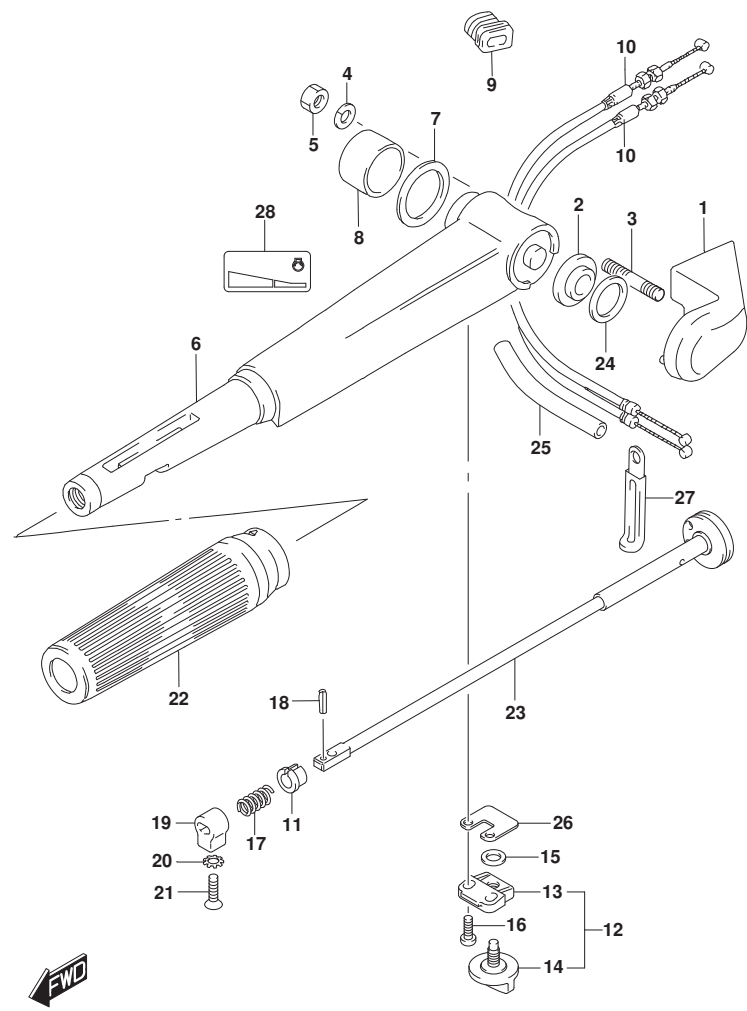


FIG.444A (1-F-13) TILLER HANDLE (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63121-91L10-YAY	COVER, TILLER HANDLE (BLACK)	1	
2	63114-94300	SPACER, HANDLE COVER	1	
3	09108-08300	STUD BOLT	2	
4	29162-93J10	LOCK WASHER (8.2X15.4X2.0)	2	
5	09140-08023-XC0	NUT	2	
6	63111-91L00-YAY	HANDLE, TILLER (BLACK)	1	
7	63115-96310	SPACER	1	
8	63116-96301	BUSH, TILLER HANDLE	1	
9	63625-96300	GROMMET	1	
10	63610-91L00	CABLE, THROTTLE	2	
11	63225-93200	BUSH, HANDLE ROD	1	
12	63240-94J10	ADJUSTER SET, HANDLE GRIP	1	
13	63241-986B0	SUPPORT, HANDLE ROD	1	
14	63244-94J00	KNOB, THROTTLE ADJUSTER	1	
15	09148-06008	NUT	1	
16	09136-05041	SCREW (5X20)	2	
17	09440-12027	SPRING	1	
18	09205-03038	SPRING PIN (3X14)	1	
19	63223-92D00	STOPPER, HANDLE ROD	1	
20	09163-06001	LOCK WASHER	1	
21	09126-06015	SCREW (6X23)	1	
22	63210-93E30	GRIP, HANDLE	1	
23	63220-91L00	ROD, HANDLE	1	
24-1	63118-94300	SHIM (0.3)	1	OPT
24-2	63118-94310	SHIM (0.5)	1	
25	18498-91J00	PROTECTOR, THROTTLE CABLE	1	
26	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
27	29404-93J10	CLAMP, THROTTLE CABLE	1	
28	69714-94J00	MARK, ENGINE START	1	

DT25K P36

FIG.444B

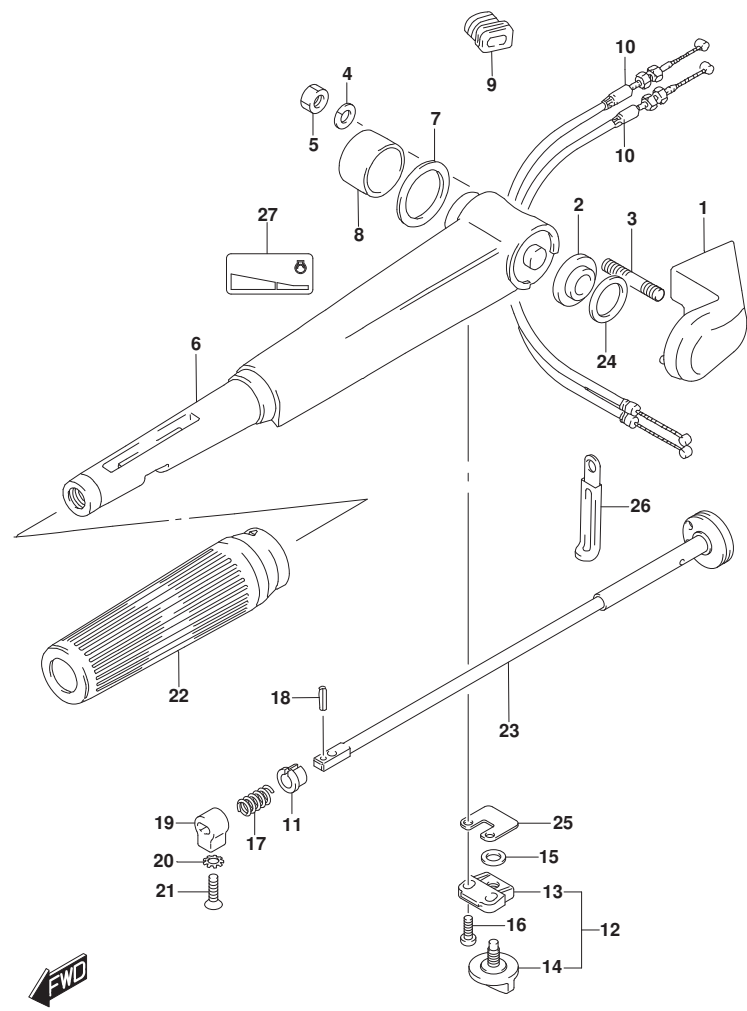


FIG.444B (1-F-14) TILLER HANDLE (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63121-91L10-YAY	COVER, TILLER HANDLE (BLACK)	1	
2	63114-94300	SPACER, HANDLE COVER	1	
3	09108-08300	STUD BOLT	2	
4	29162-93J10	LOCK WASHER (8.2X15.4X2.0)	2	
5	09140-08023-XC0	NUT	2	
6	63111-91L00-YAY	HANDLE, TILLER (BLACK)	1	
7	63115-96310	SPACER	1	
8	63116-96301	BUSH, TILLER HANDLE	1	
9	63625-96300	GROMMET	1	
10	63610-91L00	CABLE, THROTTLE	2	
11	63225-93200	BUSH, HANDLE ROD	1	
12	63240-94J10	ADJUSTER SET, HANDLE GRIP	1	
13	63241-986B0	.SUPPORT, HANDLE ROD	1	
14	63244-94J00	.KNOB, THROTTLE ADJUSTER	1	
15	09148-06008	NUT	1	
16	09136-05041	SCREW (5X20)	2	
17	09440-12027	SPRING	1	
18	09205-03038	SPRING PIN (3X14)	1	
19	63223-92D00	STOPPER, HANDLE ROD	1	
20	09163-06001	LOCK WASHER	1	
21	09126-06015	SCREW (6X23)	1	
22	63210-93E30	GRIP, HANDLE	1	
23	63220-91L00	ROD, HANDLE	1	
24-1	63118-94300	SHIM (0.3)	1	OPT
24-2	63118-94310	SHIM (0.5)	1	
25	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
26	29404-93J10	CLAMP, THROTTLE CABLE	1	
27	69714-94J00	MARK, ENGINE START	1	

DT30 P40

FIG.450A

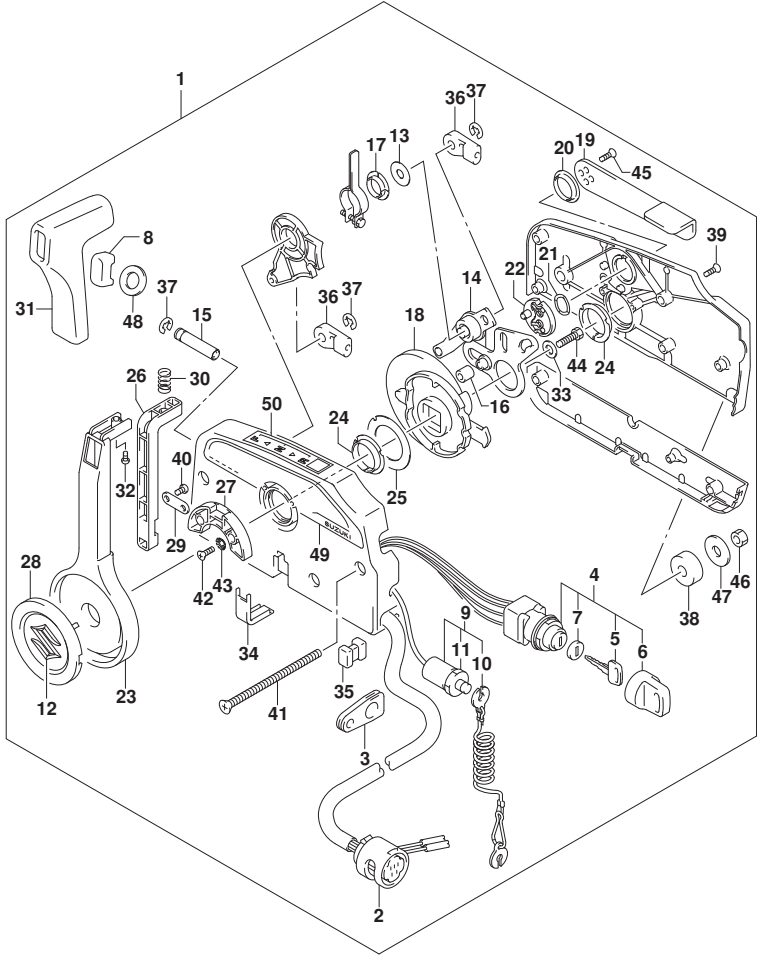


FIG.450A (1-F-15) REMOTE CONTROL (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-963A0	REMOTE CONTROL ASSY	1	
2	36620-95D10	..WIRE ASSY, REMOCON	1	
3	36628-92E00	..GROMMET	1	
4	37110-99E01	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	1	
5-2	37141-99E10	..KEY (932)	1	
5-3	37141-99E20	..KEY (933)	1	
5-4	37141-99E30	..KEY (934)	1	
5-5	37141-99E40	..KEY (935)	1	
5-6	37141-99E50	..KEY (936)	1	
5-7	37141-99E60	..KEY (937)	1	
5-8	37141-99E70	..KEY (938)	1	
5-9	37141-99E80	..KEY (939)	1	
5-10	37141-99E90	..KEY (940)	1	
5-11	37141-99EA0	..KEY (941)	1	
5-12	37141-99EB0	..KEY (942)	1	
6	37143-99E00	..CAP, KEY	1	
7	37149-93J00	..CAP, CYLINDER BODY	1	
8	37864-94J10	..CAP, PTT SW	1	
9	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
10	37823-92E01	..PLATE	1	
11	37826-92J00	..NUT	1	
12	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
13	67212-95600	..WASHER	1	
14	67220-95620	..PLATE ASSY	1	
15	67223-99E10	..KNOB, BRAKE ADJUST	1	
16	67229-95600	..ROLLER	1	
17	67232-95600	..BUSH	1	
18	67238-87D00	..GEAR, DRIVE	1	
19	67241-99E10	..LEVER, FREE THROTTLE	1	

FIG.450A

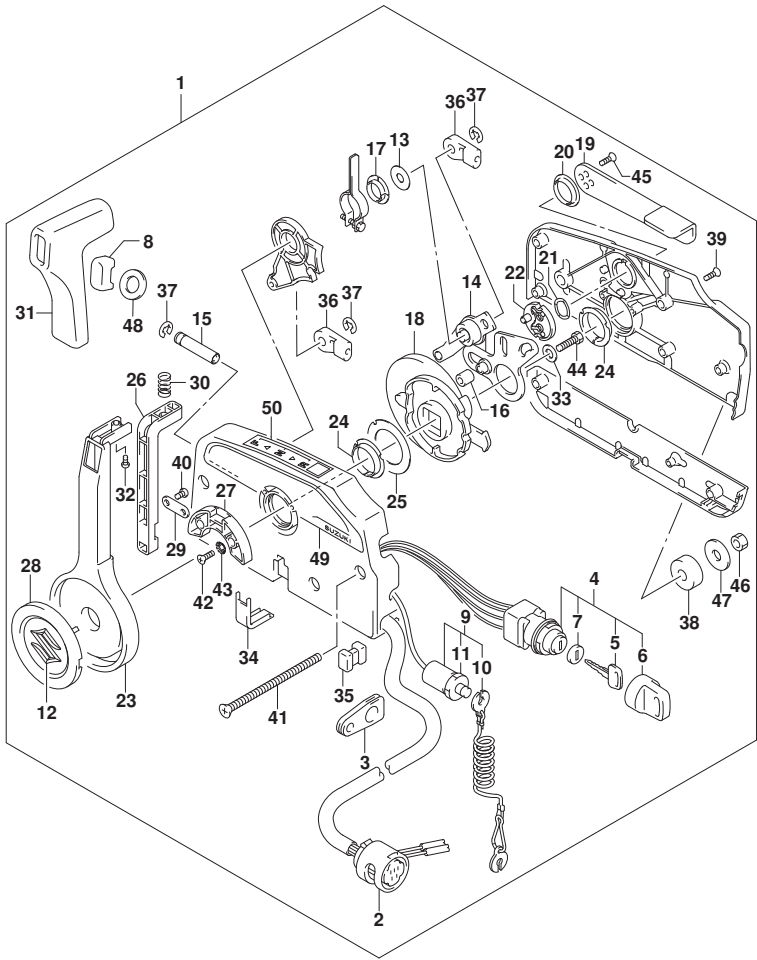


FIG.450A (1-G-2) REMOTE CONTROL (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	67243-95600	.BUSH	1	
21	67244-95600	.WAVE WASHER	1	
22	67245-95600	.DRUM, FREE THROTTLE	1	
23	67251-99E20	.LEVER, HANDLE	1	
24	67252-95600	.BUSH	2	
25	67253-95600	.WASHER	1	
26	67255-99E10	.ARM, LOCK	1	
27	67256-95600	.HOLDER, NEUT LOCK	1	
28	67257-99E10	.CAP, LEVER	1	
29	67258-99E00	.BRACKET	1	
30	67259-87D00	.SPRING, NEUTRAL ARM	1	
31	67261-99E10	.GRIP	1	
32	67296-94310	.SCREW	1	
33	67264-95600	.WASHER	1	
34	67267-93J00	.COVER, WIRE	1	
35	67273-95600	.SPACER	1	
36	67275-95600	.END, CABLE	2	
37	67292-94300	.E RING	3	
38	67294-95600	.SPACER	3	
39	67296-90J10	.SCREW, COVER	5	
40	67296-94300	.SCREW	2	
41	67296-95600	.SCREW	3	
42	67296-95610	.SCREW	2	
43	67297-95600	.WASHER	2	
44	09100-08232	.BOLT (8X30)	1	
45	09126-05003	.SCREW (5X12)	2	
46	09140-06020	.NUT	3	
47	09160-06104	.WASHER (6.5X24X2)	3	
48	37859-90J00	.SPACER	1	
49	67282-94L00	.DECAL, REMOCON SIDE	1	
50	67284-94L00	.MARK, HANDLE LEVER	1	

DT30R P40

FIG.451A

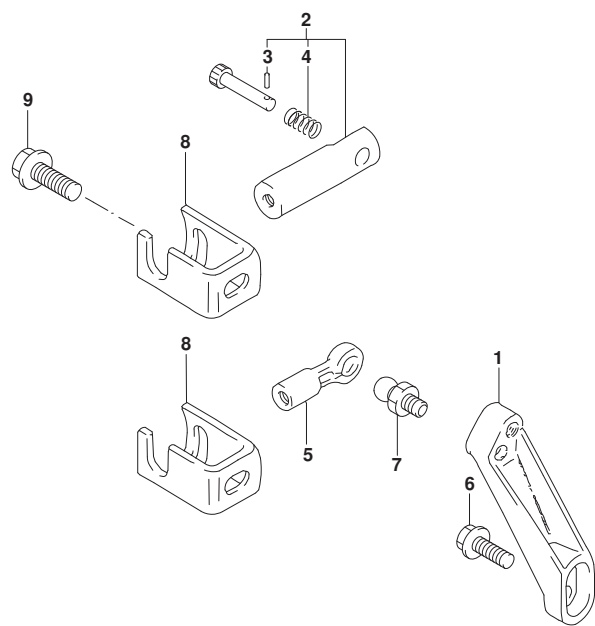


FIG.451A (1-G-3) REMOCON PARTS (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67414-91L00-YAY	LEVER, REMOCON SWITCH (BLACK)	1	
2	67440-93701	GUIDE, CLUTCH CABLE	1	
3	09205-02006	.SPRING PIN (2X12)	1	
4	09440-09042	.SPRING	1	
5	67466-95200	GUIDE, THROTTLE CABLE	1	
6	09116-06225	BOLT (6X15)	1	
7	09119-06047	PIVOT	1	
8	67341-94302	HOLDER, REMOCON CABLE	2	
9	09116-06225	BOLT (6X15)	2	

DT30R P40

FIG.501A

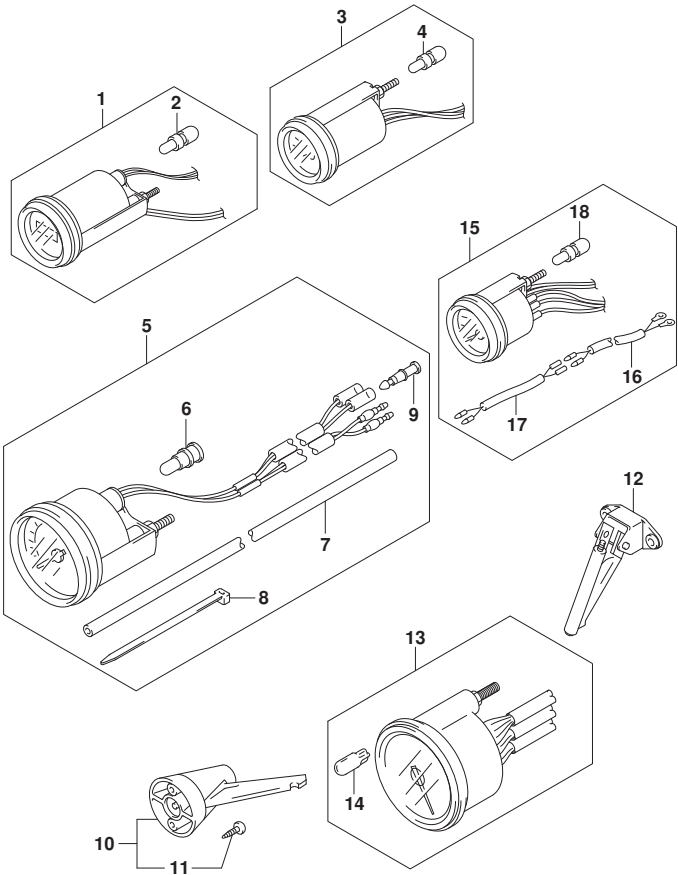


FIG.501A (1-G-4) OPT:METER (ELECTRIC STARTER)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1-1	34500-93J00	METER ASSY, HOUR	1	BLACK
1-2	34500-93J11	METER ASSY, HOUR	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
3-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

DT30 P40
DT30R P40

FIG.508A

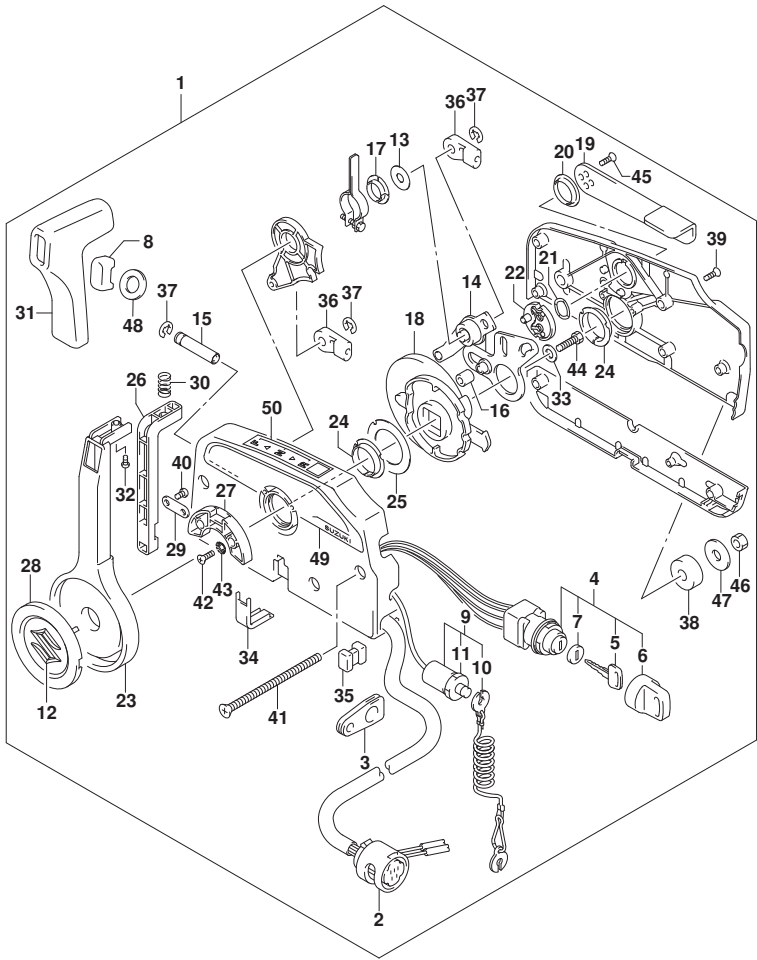


FIG.508A (1-G-5) OPT:REMOTE CONTROL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-963A0	REMOTE CONTROL ASSY	1	
2	36620-95D10	..WIRE ASSY, REMOCON	1	
3	36628-92E00	..GROMMET	1	
4	37110-99E01	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	1	
5-2	37141-99E10	..KEY (932)	1	
5-3	37141-99E20	..KEY (933)	1	
5-4	37141-99E30	..KEY (934)	1	
5-5	37141-99E40	..KEY (935)	1	
5-6	37141-99E50	..KEY (936)	1	
5-7	37141-99E60	..KEY (937)	1	
5-8	37141-99E70	..KEY (938)	1	
5-9	37141-99E80	..KEY (939)	1	
5-10	37141-99E90	..KEY (940)	1	
5-11	37141-99EA0	..KEY (941)	1	
5-12	37141-99EB0	..KEY (942)	1	
6	37143-99E00	..CAP, KEY	1	
7	37149-93J00	..CAP, CYLINDER BODY	1	
8	37864-94J10	..CAP, PTT SW	1	
9	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
10	37823-92E01	..PLATE	1	
11	37826-92J00	..NUT	1	
12	77811-54GB0-0PG	..EMBLEM, RR MARK S (CHROME)	1	
13	67212-95600	..WASHER	1	
14	67220-95620	..PLATE ASSY	1	
15	67223-99E10	..KNOB, BRAKE ADJUST	1	
16	67229-95600	..ROLLER	1	
17	67232-95600	..BUSH	1	
18	67238-87D00	..GEAR, DRIVE	1	
19	67241-99E10	..LEVER, FREE THROTTLE	1	

FIG.508A

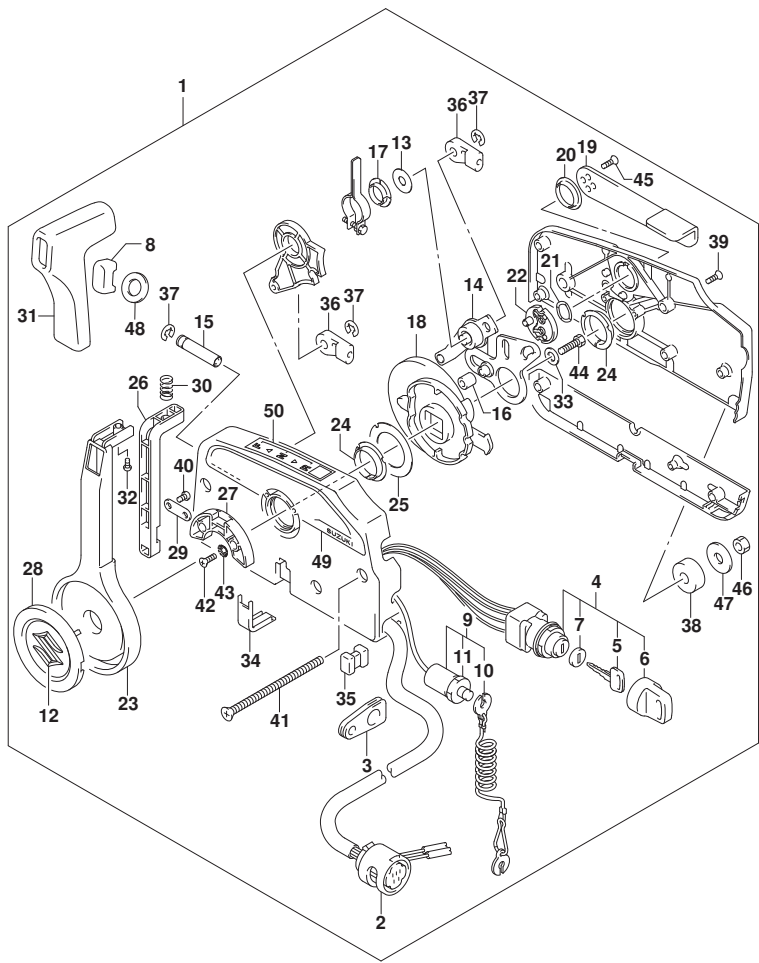


FIG.508A (1-G-6) OPT:REMOTE CONTROL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
20	67243-95600	.BUSH	1	
21	67244-95600	.WAVE WASHER	1	
22	67245-95600	.DRUM, FREE THROTTLE	1	
23	67251-99E20	.LEVER, HANDLE	1	
24	67252-95600	.BUSH	2	
25	67253-95600	.WASHER	1	
26	67255-99E10	.ARM, LOCK	1	
27	67256-95600	.HOLDER, NEUT LOCK	1	
28	67257-99E10	.CAP, LEVER	1	
29	67258-99E00	.BRACKET	1	
30	67259-87D00	.SPRING, NEUTRAL ARM	1	
31	67261-99E10	.GRIP	1	
32	67296-94310	.SCREW	1	
33	67264-95600	.WASHER	1	
34	67267-93J00	.COVER, WIRE	1	
35	67273-95600	.SPACER	1	
36	67275-95600	.END, CABLE	2	
37	67292-94300	.E RING	3	
38	67294-95600	.SPACER	3	
39	67296-90J10	.SCREW, COVER	5	
40	67296-94300	.SCREW	2	
41	67296-95600	.SCREW	3	
42	67296-95610	.SCREW	2	
43	67297-95600	.WASHER	2	
44	09100-08232	.BOLT (8X30)	1	
45	09126-05003	.SCREW (5X12)	2	
46	09140-06020	.NUT	3	
47	09160-06104	.WASHER (6.5X24X2)	3	
48	37859-90J00	.SPACER	1	
49	67282-94L00	.DECAL, REMOCON SIDE	1	
50	67284-94L00	.MARK, HANDLE LEVER	1	

FIG.514A

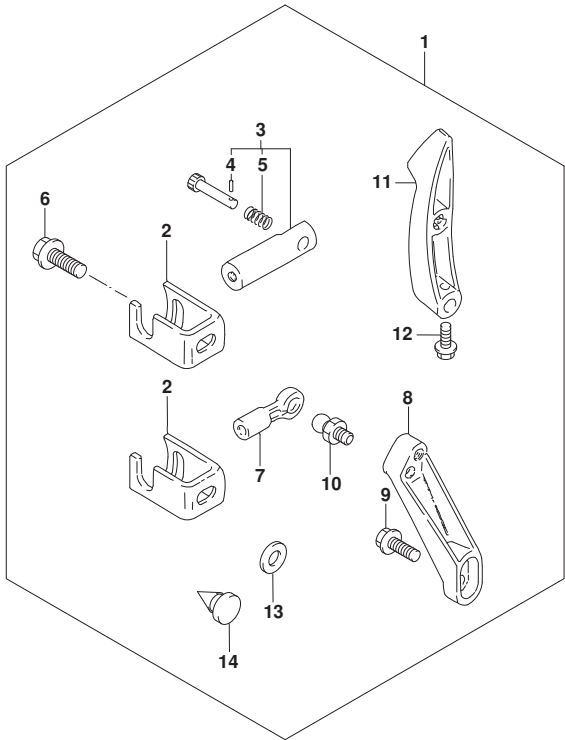


FIG.514A (1-G-7) OPT:REMOCON PARTS SET

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-91L00-YAY	REMOTE CONTROL PARTS SET (BLACK)	1	
2	67341-94302	.HOLDER, REMO-CON CABLE	2	
3	67440-93701	.GUIDE, CLUTCH CABLE	1	
4	09205-02006	..SPRING PIN (2X12)	1	
5	09440-09042	..SPRING	1	
6	09116-06237	.BOLT (6X15)	2	
7	67466-95200	.CONNECTOR, REMO-CON CABLE	1	
8	67414-91L00-YAY	.LEVER, REMO-CON THROTTLE (BLACK)	1	
9	09116-06094	.BOLT (6X15)	1	
10	09119-06047	.PIVOT	1	
11	21111-91L00-YAY	.LEVER, CLUTCH (BLACK)	1	
12	09103-06093	.BOLT (6X20)	1	
13	09160-05024	.WASHER (5.5X16X1.5)	1	
14	09250-06012	.PLUG (OD:10)	1	

FIG.533A

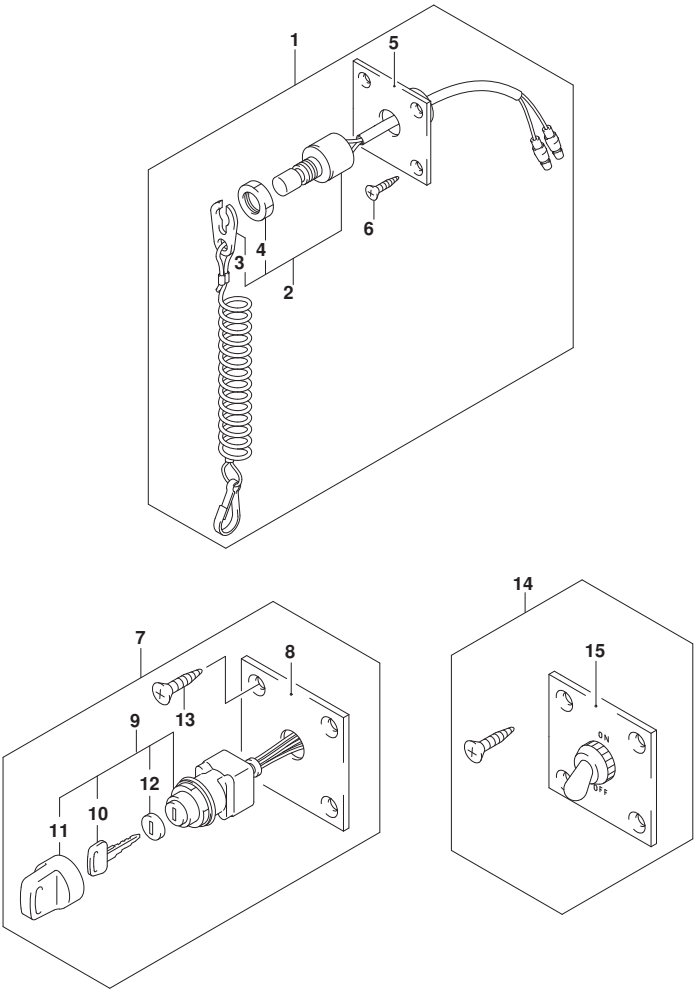


FIG.533A (1-G-8) OPT:SWITCH PANEL (ELECTRIC STARTER) (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37803-99E05	PANEL ASSY, EMERGENCY SWITCH	1	
2	37820-92E20	..SWITCH ASSY, EMERGENCY	1	
3	37823-92E01	..PLATE	1	
4	37826-92J10	..NUT	1	
5	37825-99E10	..PANEL	1	
6	03122-05165	..SCREW	4	
7	37100-99E00	PANEL ASSY, IGNITION SWITCH	1	
8	37139-99E00	..PANEL	1	
9	37110-99E01	..SWITCH ASSY, IGNITION	1	
10-1	37141-99E00	..KEY (931)	1	
10-2	37141-99E10	..KEY (932)	1	
10-3	37141-99E20	..KEY (933)	1	
10-4	37141-99E30	..KEY (934)	1	
10-5	37141-99E40	..KEY (935)	1	
10-6	37141-99E50	..KEY (936)	1	
10-7	37141-99E60	..KEY (937)	1	
10-8	37141-99E70	..KEY (938)	1	
10-9	37141-99E80	..KEY (939)	1	
10-10	37141-99E90	..KEY (940)	1	
10-11	37141-99EA0	..KEY (941)	1	
10-12	37141-99EB0	..KEY (942)	1	
11	37143-99E00	..CAP, KEY	1	
12	37149-93J00	..CAP, CYLINDER BODY	1	
13	03122-05165	..SCREW	4	
14	37210-93J00	PANEL ASSY, LIGHTING SW	1	
15	37212-93J00	..PANEL	1	

DT30 P40

FIG.533B

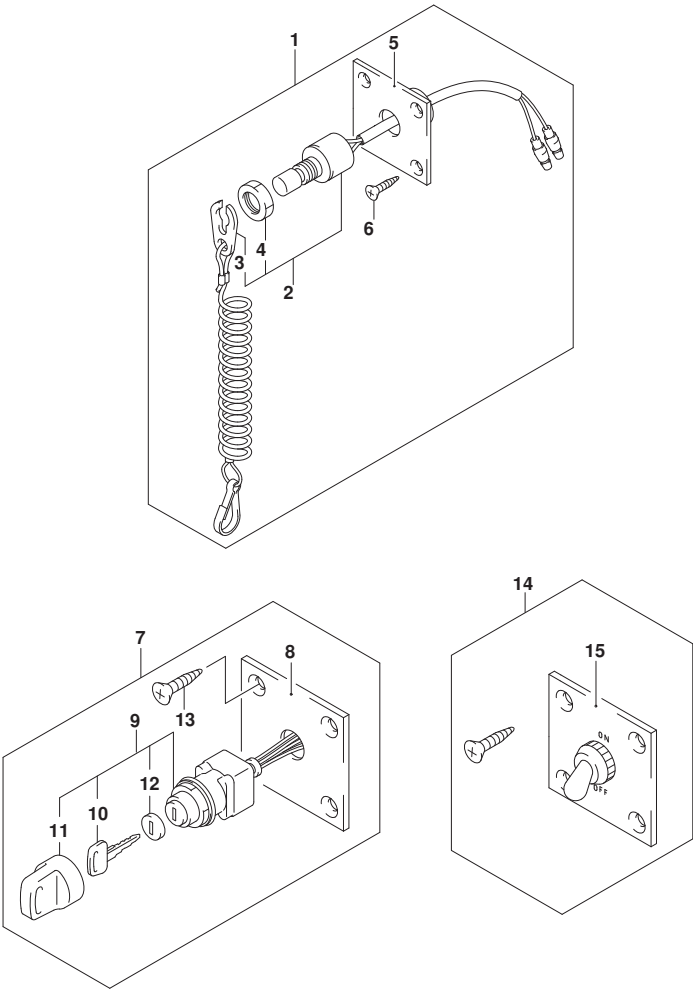


FIG.533B (1-G-9) OPT:SWITCH PANEL (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37803-99E05	PANEL ASSY, EMERGENCY SWITCH	1	
2	37820-92E20	..SWITCH ASSY, EMERGENCY	1	
3	37823-92E01	..PLATE	1	
4	37826-92J10	..NUT	1	
5	37825-99E10	..PANEL	1	
6	03122-05165	..SCREW	4	
7	37100-99E00	PANEL ASSY, IGNITION SWITCH	1	
8	37139-99E00	..PANEL	1	
9	37110-99E01	..SWITCH ASSY, IGNITION	1	
10-1	37141-99E00	..KEY (931)	1	
10-2	37141-99E10	..KEY (932)	1	
10-3	37141-99E20	..KEY (933)	1	
10-4	37141-99E30	..KEY (934)	1	
10-5	37141-99E40	..KEY (935)	1	
10-6	37141-99E50	..KEY (936)	1	
10-7	37141-99E60	..KEY (937)	1	
10-8	37141-99E70	..KEY (938)	1	
10-9	37141-99E80	..KEY (939)	1	
10-10	37141-99E90	..KEY (940)	1	
10-11	37141-99EA0	..KEY (941)	1	
10-12	37141-99EB0	..KEY (942)	1	
11	37143-99E00	..CAP, KEY	1	
12	37149-93J00	..CAP, CYLINDER BODY	1	
13	03122-05165	..SCREW	4	
14	37210-93J00	PANEL ASSY, LIGHTING SW	1	
15	37212-93J00	..PANEL	1	

DT30R P40

FIG.550A

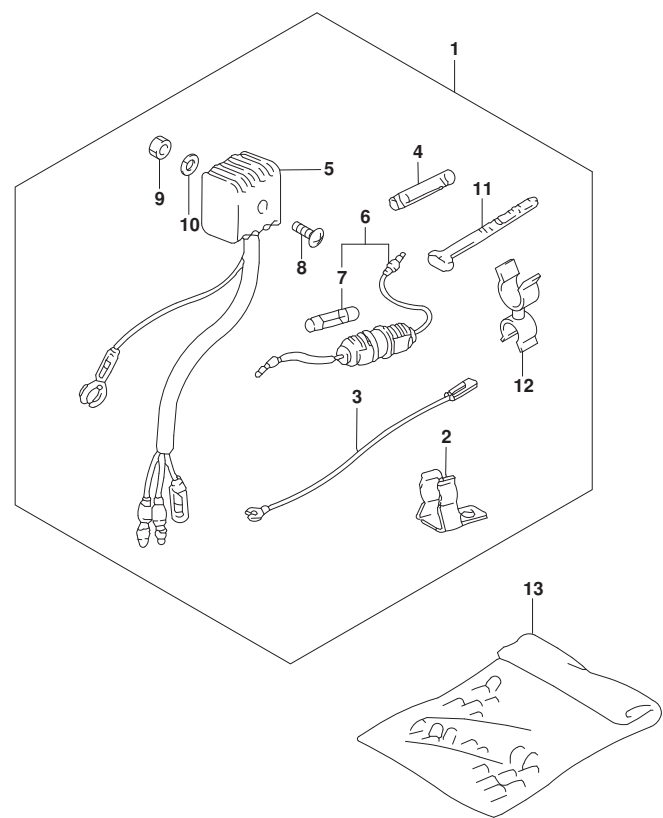


FIG.550A (1-G-10) OPT:ELECTRICAL (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32801-96304	RECTIFIER SET	1	
2	36791-95200	.HOLDER	1	
3	37801-98300	.LEAD, WIRE	1	
4	37132-93700	.WIRE, CONNECTOR	1	
5	32800-95D01	.RECTIFIER	1	
6	36740-95253	.CASE ASSY, FUSE	1	
7	09481-20001	..FUSE (20A)	1	
8	02142-05257	.SCREW	1	
9	08310-00057	.NUT	1	
10	08321-0105A	.WASHER	1	
11	09407-14403	.CLAMP (L:125)	1	
12	09408-00045	.CLAMP	1	
13	36990-87D00	TERMINAL & SLEEVE SET	1	

DT25K P36

FIG.550B

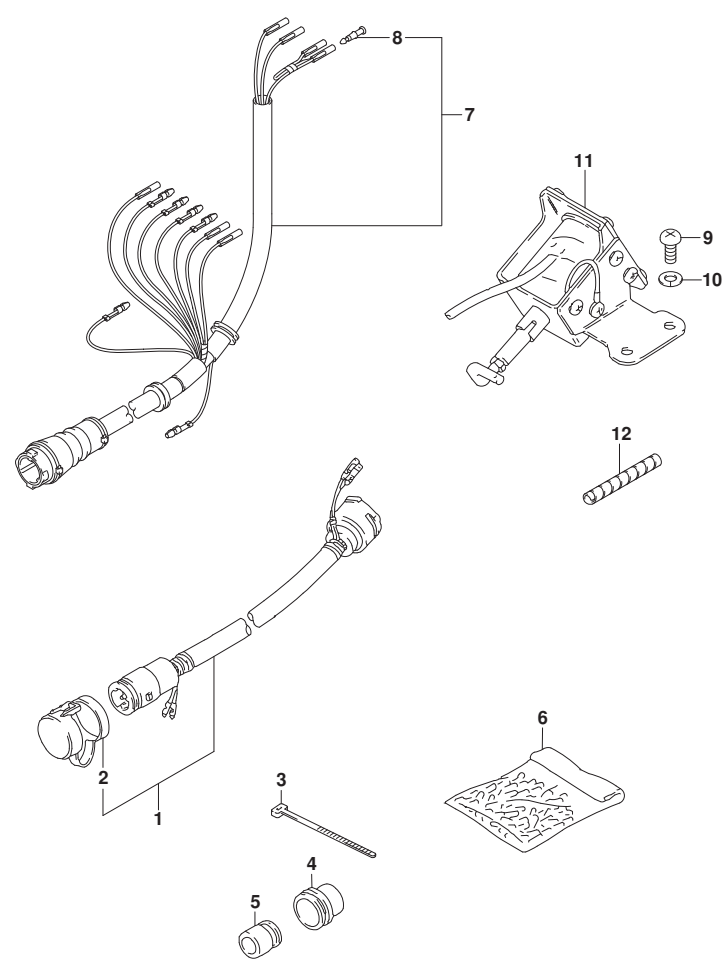


FIG.550B (1-G-11) OPT:ELECTRICAL (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	36620-87D20	WIRING HARNESS, REMO-CON	1	L:5000	
1-2	36620-95302	WIRING HARNESS, REMO-CON	1	L:2000	
2	36631-94300	.CAP, REMO-CON HARNESS	1		
3	09407-25402	CLAMP (L:250)	1		
4	36612-94301	GROMMET, CABLE 1	1		
5	36613-94300	GROMMET, CABLE 2	1		
6	36990-87D00	TERMINAL & SLEEVE SET	1		
7	36620-95D00	WIRING HARNESS, REMO-CON	1		
8	36615-96300	.TERMINAL	4		
9	02112-05127	SCREW	2		
10	08321-0105A	WASHER	2		
11	38600-96301	SOLENOID, CHOKE	1		
12	33833-91J00	TUBE	1	L:250->50	

DT30R P40

FIG.553A

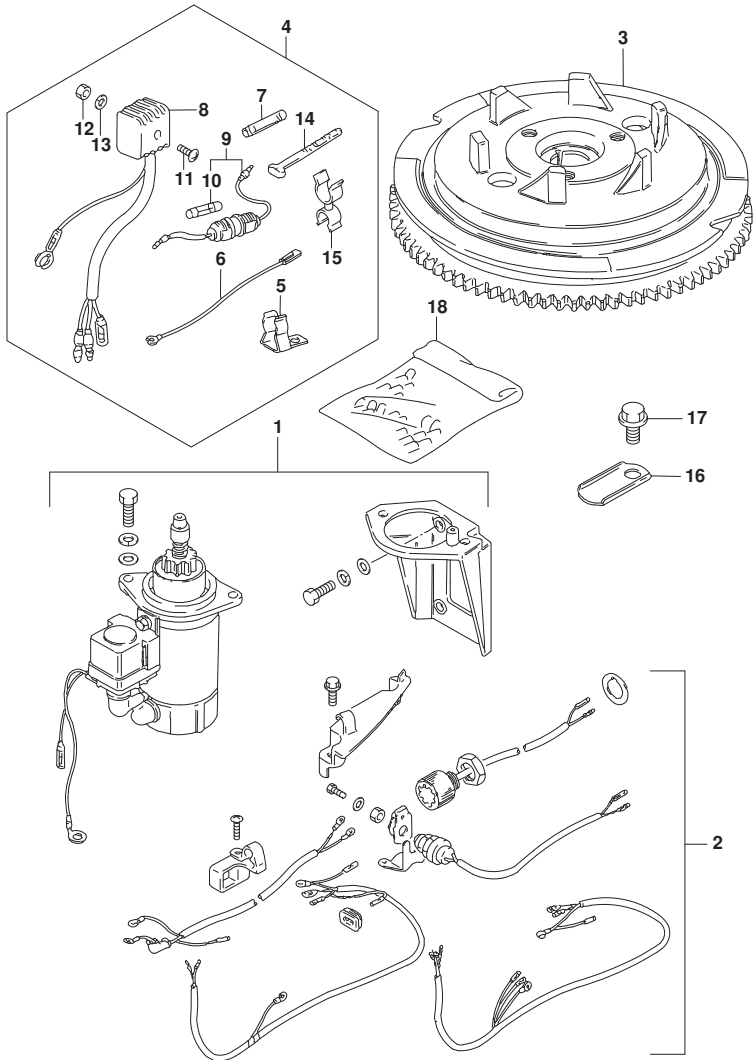


FIG.553A (1-G-12) OPT:ELECTRICAL (MANUAL STARTER) (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31101-96320	MOTOR SET, STARTER (BLACK)	1	
2	33800-96305	SWITCH, STARTER/CABLE SET	1	
3	32102-96462	FLYWHEEL	1	
4	32801-96304	RECTIFIER SET	1	
5	36791-95200	.HOLDER	1	
6	37801-98300	.LEAD, WIRE	1	
7	37132-93700	.WIRE, CONNECTOR	1	
8	32800-95D01	.RECTIFIER	1	
9	36740-95253	.CASE ASSY, FUSE	1	
10	09481-20001	..FUSE (20A)	1	
11	02142-05257	.SCREW	1	
12	08310-00057	.NUT	1	
13	08321-0105A	.WASHER	1	
14	09407-14403	.CLAMP (L:125)	1	
15	09408-00045	.CLAMP	1	
16	33815-94501	PROTECTOR, CABLE	1	
17	01550-06167	BOLT	1	
18	36990-87D00	TERMINAL & SLEEVE SET	1	

DT30 P40

FIG.554A

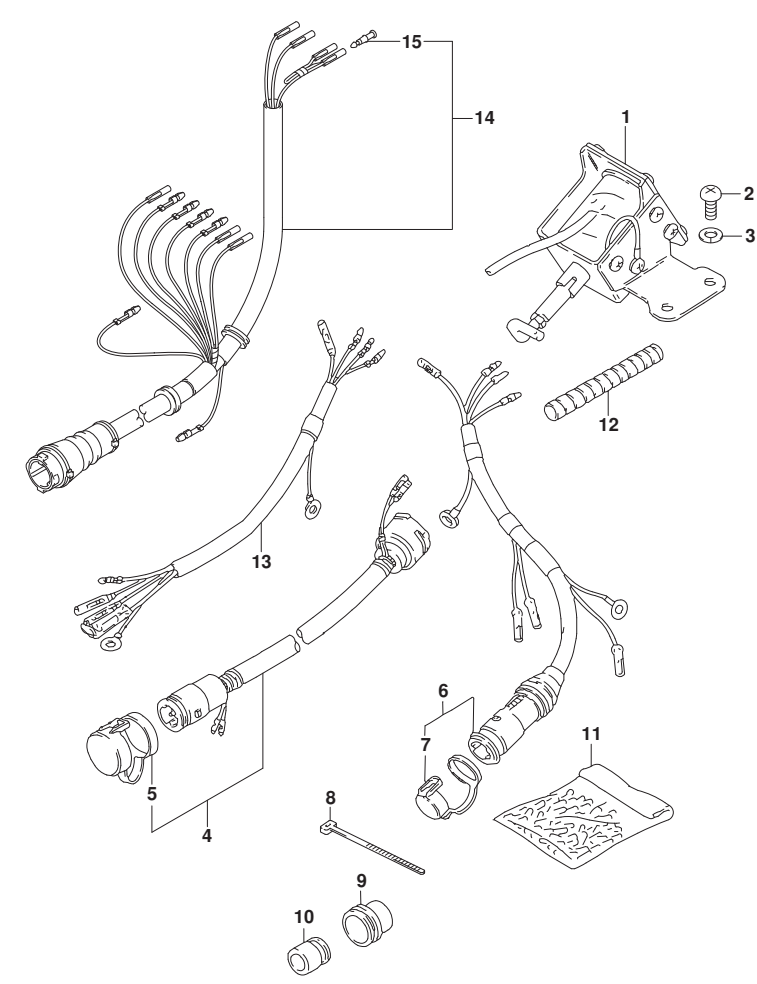


FIG.554A (1-G-13) OPT:ELECTRICAL (ELECTRIC STARTER) (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	38600-96301	SOLENOID, CHOKE	1	
2	02112-05127	SCREW	2	
3	08321-0105A	WASHER	2	
4-1	36620-87D20	WIRING HARNESS, REMO-CON	1	L:5000
4-2	36620-95302	WIRING HARNESS, REMO-CON	1	L:2000
5	36631-94300	.CAP, REMO-CON HARNESS	1	
6	36630-96321	WIRING HARNESS, REMO-CON	1	
7	36631-94300	.CAP, REMO-CON HARNESS	1	
8	09407-25402	CLAMP (L:250)	1	
9	36612-94301	GROMMET, CABLE 1	1	
10	36613-94300	GROMMET, CABLE 2	1	
11	36990-87D00	TERMINAL & SLEEVE SET	1	
12	33833-91J00	TUBE	1	L:250->50
13	36630-96311	WIRING HARNESS, REMO-CON	1	
14	36620-95D00	WIRING HARNESS, REMO-CON	1	
15	36615-96300	.TERMINAL	4	

DT30 P40

FIG.575A

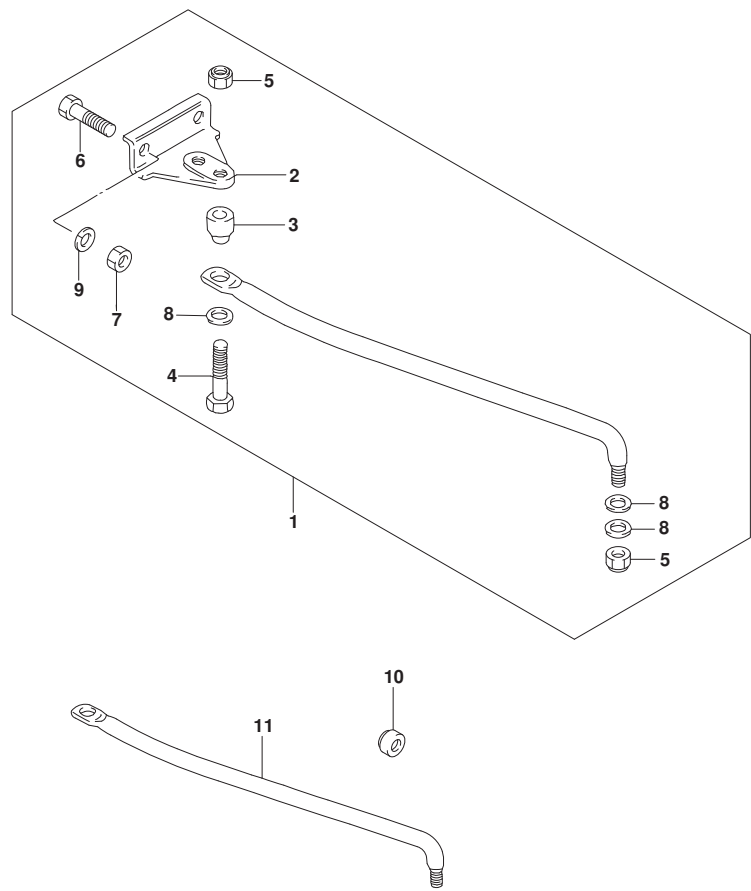


FIG.575A (1-G-14) OPT:DRAG LINK

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67701-94420	DRAG LINK ASSY	1	
2	43755-96320	.ATTACHMENT, STEERING BRACKET	1	
3	67721-94310	.SPACER	1	
4	67725-99E20	.BOLT	1	
5	67726-99E00	.NUT	2	
6	09100-08309	.BOLT (8X35)	2	
7	09140-08023-XC0	.NUT	2	
8	67728-99E00	.WASHER	3	
9	29162-93J10	.LOCK WASHER	2	
10	41161-94400	SEAL, STEERING CABLE	1	
11	67711-97E60	DRAG LINK	1	

FIG.580A

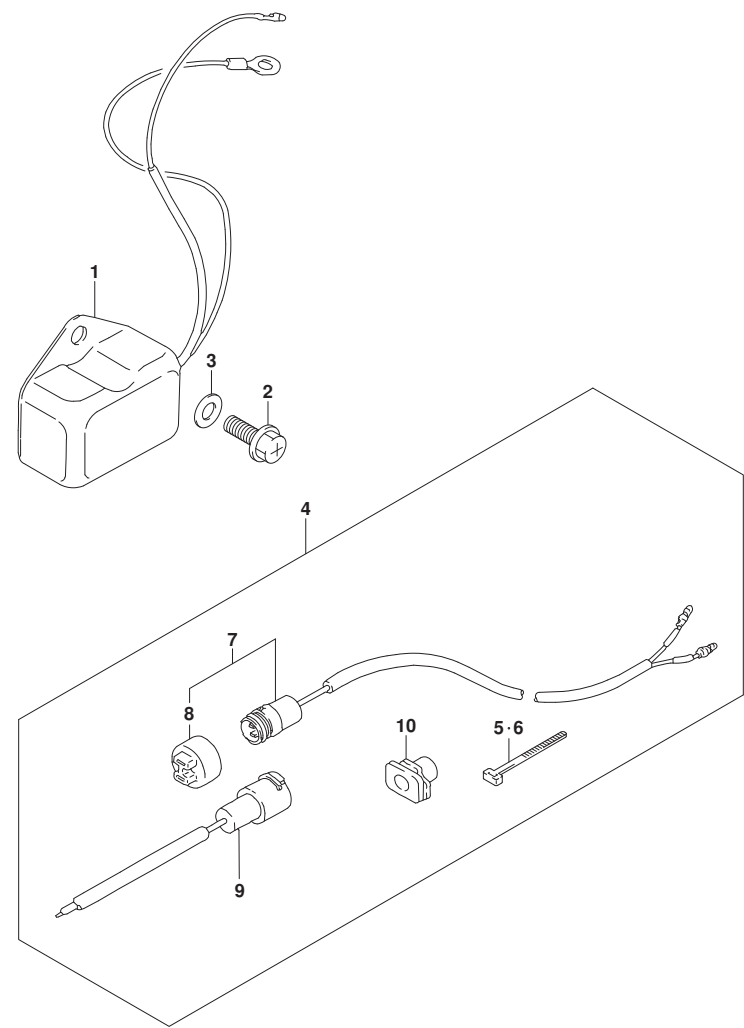


FIG.580A (1-G-15) OPT:REGULATOR (DT25K)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32500-95722	REGULATOR, VOLTAGE	1	
2	02162-06127	SCREW	2	
3	08322-01067	WASHER	2	
4	39600-93910	RECEPTACLE SET	1	
5	09407-25402	.CLAMP (L:250)	1	
6	09407-10403	.CLAMP (L:95)	1	
7	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
8	36634-93910	..CAP, LIGHTING RECEPTACLE	1	
9	39602-93900	.PLUG ASSY, LAMP CORD	1	
10	39603-94400	.GROMMET	1	

DT25K P36

FIG.580B

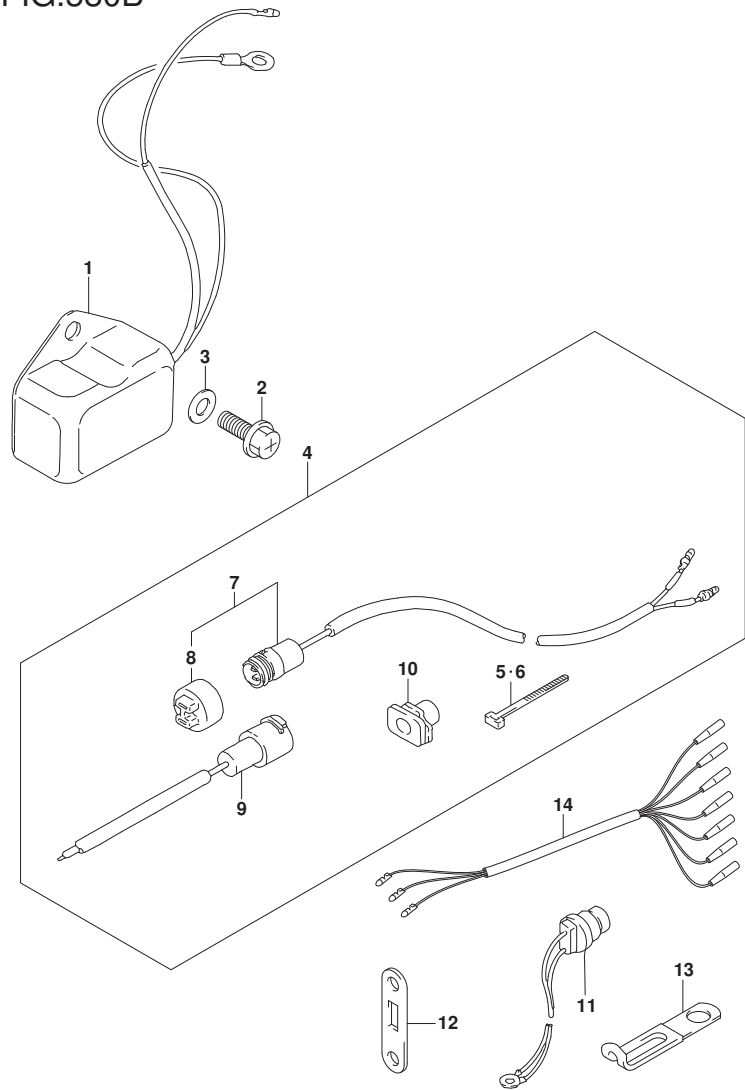


FIG.580B (1-H-2) OPT:REGULATOR (DT30)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32500-95722	REGULATOR, VOLTAGE	1	
2	02162-06127	SCREW	2	
3	08322-01067	WASHER	2	
4	39600-93910	RECEPTACLE SET	1	W/MANUAL STARTER
5	09407-25402	.CLAMP (L:250)	1	W/MANUAL STARTER
6	09407-10403	.CLAMP (L:95)	1	W/MANUAL STARTER
7	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	W/MANUAL STARTER
8	36634-93910	..CAP, LIGHTING RECEPTACLE	1	W/MANUAL STARTER
9	39602-93900	.PLUG ASSY, LAMP CORD	1	W/MANUAL STARTER
10	39603-94400	.GROMMET	1	W/MANUAL STARTER
11	34850-94700	SENSOR, HEAT	1	W/ELECTRIC STARTER
12	34853-94301	SUPPORT, HEAT SENSOR	1	W/ELECTRIC STARTER
13	09404-08205	CLAMP (L:45)	1	W/ELECTRIC STARTER
14	36630-92E00	WIRE ASSY, INSTRUMENT	1	W/ELECTRIC STARTER

DT30 P40

FIG.580C

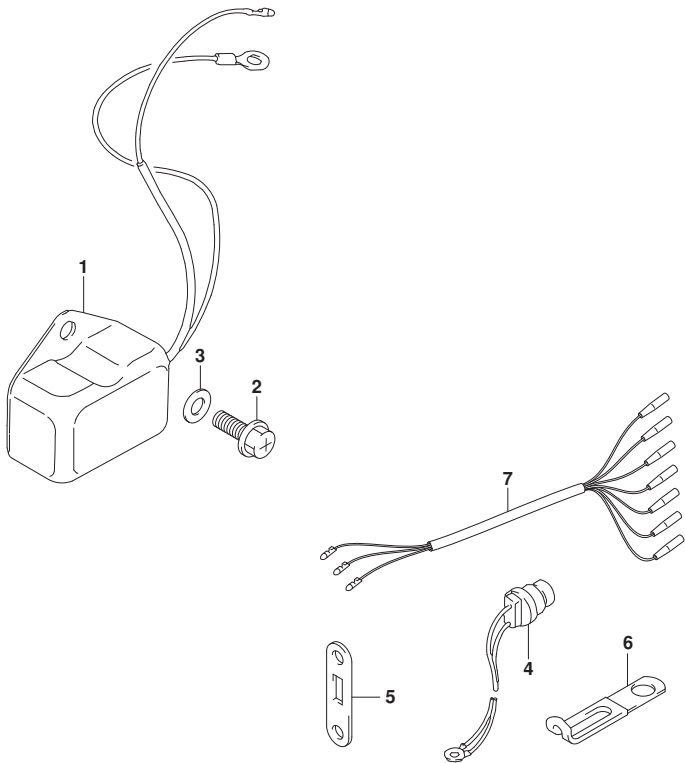


FIG.580C (1-H-3) OPT:REGULATOR (DT30R)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32500-95722	REGULATOR, VOLTAGE	1	
2	02162-06127	SCREW	2	
3	08322-01067	WASHER	2	
4	34850-94700	SENSOR, HEAT	1	
5	34853-94301	SUPPORT, HEAT SENSOR	1	
6	09404-08205	CLAMP (L:45)	1	
7	36630-92E00	WIRE ASSY, INSTRUMENT	1	

DT30R P40

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		116B-17	13580-96351	128A-30	
		125B-4	13616-93900	128A-13	
		125A-3	13625-94300	413A-30	
		125A-4		413B-28	
		125B-5		413C-27	
11111-91L20	112B-3	13125-95210	13631-93501	128A-35	
11111-91L30	112A-3	13150-91L00		128B-21	
11119-91L00	112A-6		13651-94350	128A-15	
	112B-6	13152-91L00		128A-16	
11141-96344	112A-4		13651-95300	128A-14	
	112B-4	13153-91L00		128B-14	
11161-91L10	112A-1		13681-96301	128B-15	
	112B-1	13200-96461		128B-19	
11162-96310	112A-2	13200-964J0		125B-18	
	112B-2	13235-94350		125A-19	
	112B-8		13811-96351	125A-16	
11300-91L30			14131-91L10	125A-16	
11300-91L40	112A-8	13240-94620		125B-15	
11411-91L00	130A-1	13245-94350		125A-17	
	130B-1	13245-96400		125B-16	
11413-96310	130A-2	13250-93012		125A-15	
	130B-2		14151-96311	125B-14	
11431-91L00	141A-2	13251-93320		141B-4	
	141B-2	13254-98300		141A-4	
11433-96330	141A-1		14211-91L10	141A-6	
	141B-1	13254-98410		141B-6	
12100-91L00-050	116A-23	13261-95200		146B-1	
	116B-24	13265-94360		146A-1	
12110-91L00-0B0	116A-1	13268-96111		146B-2	
	116B-1		15170-94320	146A-2	
12140-91L00	116B-2	13269-93311		15183-94301	146B-3
12140-91L10	116A-2	13269-98100		15186-94300	146B-4
12140-96351-050	116A-24	13270-94350		15211-91J00-170	146A-7
	116B-25	13271-93311		15211-91J00-180	146A-6
12151-92502	116A-3	13282-94350		15211-91J00-195	146B-8
	116B-3	13370-28110		146B-9	
12161-96300	116A-8		15211-91J00-320	146B-11	
	116B-8	13370-94350		146A-5	
12200-91L31	116B-7	13392-58600		146B-7	
12200-91L41	116A-7		15321-99710	146B-7	
12211-96311	116A-11	13415-94350		15322-96300	146A-15
	116A-12	13418-94360		15331-94300	146B-16
	116B-11	13419-94400		15410-94400	146A-11
	116B-12	13441-94350			146B-12
12221-91L30	116A-13	13443-94350		15413-87D10	146A-13
	116B-13	13446-94360			146B-14
12231-91L30	116A-15	13450-94350		15420-96300	146A-20
	116B-15	13461-94350		15430-87D10	146A-12
12232-91L31	116A-14	13521-78100			146B-13
	116B-14	13534-96300		15851-94300	146B-5
12240-91L30	116A-17		16710-95211	112A-17	
				112B-17	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
16911-92E20	146A-10		167B-9		201B-5
	146B-18	18293-96310	167A-10		201C-3
17400-94412	160A-21		167B-10	21242-91L00	201A-6
	160B-21	18411-96301	167A-13		201B-6
17410-92L00	160A-1		167B-13	21311-91L00	201A-7
	160B-1	18498-91J00	444A-25		201B-7
17431-91L00	160B-2	18642-96301	166A-12		201C-4
17431-91L10	160A-2		166B-21	21312-96300	201A-8
17432-96300	160A-3	18652-96300	166A-13		201B-8
	160B-3		166B-22	22511-99011	336A-2
17461-964L0	160A-4	18711-91L10	167A-14		336B-2
	160B-4		167B-14		336C-2
17471-92L00	160A-5	18721-91L10	167A-19		413A-1
	160B-5	19121-91L00	166A-1		413B-1
17472-96303	160A-6		166B-1		413C-1
	160B-6	19131-95502	166A-2	23111-91L10	201A-9
17560-91L01	160B-7		166B-2		201B-9
17560-91L11	160A-7	19131-96300	166B-3		201C-5
17563-91L10	160A-8	19132-96300	166A-3	23131-94300	201A-11
	160B-8	19135-96301	166B-4		201B-11
17564-91L10	160A-9	19135-96350	166A-4		201C-7
	160B-9	19141-96301	166B-5	23131-95L00	201A-10
17565-91L00	160A-10	19656-96300	166B-6		201B-10
	160B-10	19720-91L00	166B-7		201C-6
17566-96302	160A-11	19761-91L00	166B-8	23311-95J00	201A-12
	160B-11	19761-96351	166A-5		201B-12
17631-91L00	407A-18	19811-91L10	166B-9		201C-8
17670-93953	112A-14	19859-94300	166B-10	25111-91L01	201B-24-1
17670-93962	112B-14				201C-17-1
17681-91L10	112A-18			25111-91L11	201A-24
	112B-18				201B-24-2
17685-96300	112A-19				201C-17-2
	112B-19			25211-91L00	201A-25
18100-91L00	167A-1				201B-25
	167B-1				201C-18
18120-96320	167A-2	21111-91L00-YAY	201C-29	25215-96301	201A-34
	167B-2		514A-11		201B-34
18130-91L00	167A-3	21111-96311	201A-1		201C-27
	167B-3		201B-1	25222-96300	201A-26
18132-89L00	167A-8	21120-91L00	201A-2		201B-26
	167B-8		201B-2		201C-19
18142-96300	167A-4		201C-1	25231-96301	201A-27
	167B-4	21131-94J00-YAY	420A-7		201B-27
18151-96310	167A-5		420B-6		201C-20
	167B-5	21142-96300	201A-3	25232-96302	201A-28
18210-93002	167A-6		201B-3		201B-28
	167B-6	21210-96300	201A-4		201C-21
18280-96320	167A-7		201B-4	25311-96303	201A-29
	167B-7		201C-2		201B-29
18290-91L00	167A-9	21241-96300	201A-5		201C-22

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
29116-93J10	336A-41	31173-89J00	301A-6	33811-94J00	322B-8	36620-87D20	550B-1-1		508A-5-2		533B-12
	336B-46	31281-93340	301A-10		322C-7		554A-4-1		533A-10-2	37160-96322	324B-1
	336C-46	31310-96300	301A-2	33815-94501	322B-9	36620-95302	550B-1-2		533B-10-2	37210-93J00	533A-14
29125-93J10	335A-22	31312-96300	301A-4		322C-8		554A-4-2	37141-99E20	450A-5-3		533B-14
	405A-27	31320-94400	301A-3		553A-16	36620-95D00	550B-7		508A-5-3	37212-93J00	533A-15
	405B-27	31360-96300	301A-5	33816-96300	322B-11		554A-14		533A-10-3		533B-15
29141-93J00	160A-13	31800-94401	301A-12		322C-10	36620-95D10	450A-2		533B-10-3	37721-96354	324B-2
	160B-13	31805-96350	301A-13	33820-89E01	322B-3		508A-2	37141-99E30	450A-5-4		324C-1
	201A-16	31911-91L00	130B-4		322C-2	36628-92E00	450A-3		508A-5-4	37725-94302	324B-3
	201B-16	32102-96462	303B-1	33833-91J00	303A-5		508A-3		533A-10-4		324C-2
	201C-10		303C-1		303B-5	36630-92E00	580B-14		533B-10-4	37726-96303	324B-4
	407A-22		553A-3		303C-5		580C-7	37141-99E40	450A-5-5		324C-3
29162-93J00	160A-14	32102-96472	303A-1		324A-1	36630-96311	324C-9		508A-5-5	37801-98300	550A-3
	160B-14	32120-96320	303A-2		324B-7		554A-13		533A-10-5		553A-6
	407A-23		303B-2-2		324C-8	36630-96321	324C-10		533B-10-5	37803-99E05	533A-1
29162-93J10	335A-18	32120-96330	303B-2-1		550B-12		554A-6	37141-99E50	450A-5-6		533B-1
	336A-39		303C-2		554A-12	36631-94300	324C-11		508A-5-6	37820-92E04	450A-9
	336B-44	32140-96310	303A-3	34100-93J20	501A-5-1		550B-2		533A-10-6		508A-9
	336C-44		303B-3	34100-93J31	501A-5-2		554A-5		533B-10-6	37820-92E20	533A-2
	442A-9		303C-3	34100-93J40	501A-5-3		554A-7	37141-99E60	450A-5-7		533B-2
	444A-4	32150-96340	303A-4	34100-93J51	501A-5-4	36634-93910	580A-8		508A-5-7	37823-92E01	450A-10
	444B-4		303B-4	34190-87D00	501A-12		580B-8		533A-10-7		508A-10
29404-93J10	575A-9		303C-4	34190-95500	501A-10	36740-95253	322B-5		533B-10-7		533A-3
	146A-21	32500-95722	580A-1	34191-92E00	501A-7		322C-4	37141-99E70	450A-5-8		533B-3
	146B-15		580B-1	34200-93J20	501A-13-1		550A-6		508A-5-8	37823-97J00	324A-3
	303A-8		580C-1	34200-93J32	501A-13-2		553A-9		533A-10-8		324B-9
	303B-8	32800-95D01	308B-1	34300-93J00	501A-15-1	36791-95200	550A-2		533B-10-8	37825-99E10	533A-5
	303C-8		308C-1	34300-93J11	501A-15-2		553A-5	37141-99E80	450A-5-9		533B-5
	308A-7		550A-5	34310-92E00	501A-16	36894-95201	335A-21		508A-5-9	37826-92J00	450A-11
	308A-12		553A-8	34360-92E00	501A-17		405A-26		533A-10-9		508A-11
	308B-9	32801-96304	550A-1	34500-93J00	501A-1-1		405B-26		533B-10-9	37826-92J10	533A-4
	308B-14		553A-4	34500-93J11	501A-1-2	36990-87D00	550A-13	37141-99E90	450A-5-10		533B-4
	308C-9	32890-91L00	308A-1	34600-93J00	501A-3-1		550B-6		508A-5-10	37826-97J00	324A-4
	308C-14		308B-3	34600-93J11	501A-3-2		553A-18		533A-10-10		324B-10
	322A-2		308C-3	34850-94700	580B-11		554A-11		533B-10-10	37830-92L02	324A-2
	322B-13	32900-963A0	308B-10		580C-4	37100-99E00	533A-7	37141-99EA0	450A-5-11		324B-8
	322C-12		308C-10	34853-94301	580B-12		533B-7		508A-5-11	37835-91J00-YAY	324A-5
	444A-27	32900-963B0	308A-8		580C-5	37110-99E01	450A-4		533A-10-11		324B-11
	444B-26	32916-92L00	308A-2	36610-91L00	322A-1		508A-4		533B-10-11	37859-90J00	450A-48
			308B-4		322B-1		533A-9	37141-99EB0	450A-5-12		508A-48
			308C-4	36612-93900	324C-12		533B-9		508A-5-12	37864-94J10	450A-8
		33410-96300	308B-12	36612-94301	550B-4	37132-93700	550A-4		533A-10-12		508A-8
			308C-12		554A-9		553A-7		533B-10-12	38600-96301	324C-6
		33410-96311	308A-10	36613-94300	550B-5	37139-99E00	533A-8	37143-99E00	450A-6		550B-11
		33510-90L00	308B-15		554A-10		533B-8		508A-6		554A-1
31100-94401	301A-1		308C-15	36615-96300	413A-31	37141-99E00	450A-5-1		533A-11	39600-93910	580A-4
31101-96320	553A-1	33510-95520	308A-13		413B-29		508A-5-1		533B-11		580B-4
31131-96300	301A-7	33800-96305	553A-2		501A-9		533A-10-1	37149-93J00	450A-7	39601-95D00	580A-7
31132-96300	301A-8	33810-96305	322B-7		550B-8		533B-10-1		508A-7		580B-7
31135-89J00	301A-9		322C-6		554A-15	37141-99E10	450A-5-2		533A-12	39602-93900	580A-9

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
39603-94400	580B-9	45231-91L00	442A-2	54138-96300	405A-18
	580A-10		575A-2		405B-18
	580B-10		336A-16	54151-96300	405A-13
39669-94400	413A-29	45241-91L00	336B-16		405B-13
	413B-27		336C-15	54160-96310	405A-5
40000		45246-91L00	336A-18		405B-5
			336B-18	54165-96310	405A-14
			336C-17		405B-14
		45252-91L00	336A-17	54211-91L10-YAY	405A-19
			336B-17		405B-19
			336C-16	54212-91L10-YAY	405A-20
	41111-91L00-YAY		336A-19		405B-20
	41121-91L00-YAY		336B-19	54221-91L10-YAY	405A-21
	41130-91L01		336C-18		405B-21
	41151-94500	45255-96302	336A-20	55100-91L40-YAY	407A-1
41161-94400	442A-10		336B-20	55114-963L0	407A-4
41200-91L00	575A-10	45257-96300	336C-19	55125-96310	407A-5
	335A-23		336A-21	55181-95200	407A-24
	41211-93003		336B-21	55300-95500	407A-20
41211-93900	335A-7	45260-96300	336C-20	56120-91L11-YAY	220A-26
	335A-11-2		336A-22		220B-26
	41211-93920		336B-22	56123-986L0	324A-8
41212-91LL0-YAY	335A-3	45311-91L00-YAY	336C-21	56130-91L10-YAY	160A-16
	335A-8		336A-24		160B-16
	41213-94J01		336B-24	57110-91L00	220B-1
41225-94400	335A-9	45420-91LL0	336C-23	57110-91L10	220A-1
	335A-24		335A-25	57133-96302	220A-8
	43111-91L02-YAY		335A-26		220B-8
43411-96300	336B-1	45731-96312	336B-35	57134-96301	220A-9
	336C-1		336C-35		220B-9
	336A-12		336B-36	57311-91L00	220A-10
43421-91L00	336B-12	50000	336C-36		220B-10
	336C-11			57510-91L00	220A-14
	336A-13				220B-14
43710-91L00	336B-13			57521-91L00	220A-24
	336C-12				220B-24
	336A-3			57610-96311	220A-22
43741-91L00-YAY	336B-3				220B-22
	336C-3			57621-91L10	220A-18
	336A-5				220B-18
43751-91L00-YAY	336B-5		52110-91L20-YAY	57630-96300	407A-25
	336C-5		52110-91L30-YAY	57631-96301	220A-16
	336A-6		52113-96330		220B-16
43753-96310	336B-6		141B-3	57632-91L00	407A-13
	336C-6		405A-6	57633-96300	407A-14
	336A-7	54137-91L10-YAY	405B-6	58100-91L20-019	407A-11-4
43755-96320	336B-7		405A-9	58100-91L30-019	407A-11-5
	336A-37		405B-9	58100-91L40-019	407A-11-2
43755-96320	336B-42	54137-91L10-YAY	405A-8	58100-91L50-019	407A-11-3
	336C-42		405B-8	58100-95D01-019	407A-11-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
58100-96372-019	407A-11-1	61472-94J00	420B-8		444B-9
58100-96462-019	407A-11-9		420C-7	65000-95D01	432B-1
58100-96472-019	407A-11-7		167A-22		432C-1
58100-96482-019	407A-11-8	61610-90L00	167B-20		432D-1
58100-96492-019	407A-11-10		413A-16	65000-99100	432A-1
58120-96401	407A-12		413B-16	65318-93910	432B-15
59412-91J00	146A-9	61616-93EL0	413C-16	65520-95D01	432B-2
59800-90L10	420A-10		413A-17		432C-2
	420B-9		413B-17		432D-2
	420C-8		413C-17	65520-99100	432A-2
60000		61622-96302	420A-3	65561-95D00	432A-3
			420B-3		432B-3
			420C-3		432C-3
		61642-90L00	413A-18		432D-3
			413B-18	65700-87DL0	432C-10
			413C-18		432D-10
	61110-91L20-YAY	63111-91L00-YAY	444A-6	65700-94417	432A-14
	413B-2		444B-6	65700-94424	432B-16
	413C-2		444A-2	65700-95D05	432A-9
	61112-96320	63114-94300	444B-2	65700-96362	432B-10
61113-91L00	413B-4		444A-7	65720-955L0	432A-21
	413C-4		444B-7	65720-985L1	432B-8
	413A-5	63116-96301	444A-8		432C-8
61131-91L00-QGF	413B-5		444B-8		432D-8
	413A-6		444A-24-1	65740-95D01	432B-7
	413B-6	63118-94300	444B-24-1		432C-7
61138-944L0	413C-6	63118-94310	444A-24-2		432D-7
	413A-25		444B-24-2	65740-99100	432A-7
	413B-25	63121-91L10-YAY	444A-1	65750-95500	432A-11
61155-94500	413C-25		444B-1		432A-15
	413A-23	63210-93E30	444A-22		432B-11
	413B-23		444B-22		432C-11
61400-91L12-YAY	413C-23	63220-91L00	444A-23		432D-11
	420A-1		444B-23	65750-98505	432A-10
	420B-1	63223-92D00	444A-19		432B-12
61431-91L00-YAY	420C-1		444B-19		432B-17
	420A-2	63225-93200	444A-11		432C-12
	420B-2		444B-11		432D-12
61435-91L20	420C-2	63225-94J00	444A-26	65761-91L00	432A-22
	420A-5		444B-25	65770-87DL0	432C-13
	420B-5	63240-94J10	444A-12		432D-13
61443-91L10	420C-5		444B-12	65770-90J12	432A-18
	420A-11	63241-986B0	444A-13	65770-99J02	432A-12
	420B-10		444B-13	65779-93900	432B-13
61449-95L00	420C-9	63244-94J00	444A-14		432B-18
	420A-6		444B-14	65781-98500	432A-13
	420A-12	63610-91L00	444A-10		432A-19
61453-91L10	420B-11		444B-10		432B-14
	420C-10	63625-94300	413C-29		432B-19
	420A-9	63625-96300	444A-9		432C-14
61458-89L00					

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
65830-95500	432D-14	67253-95600	450A-25	67701-94420	442A-1
	432A-16		508A-25		575A-1
	432B-20	67255-99E10	450A-26	67711-97E60	575A-11
65831-95D00	432A-4		508A-26	67721-94310	442A-3
	432B-4	67256-95600	450A-27		575A-3
	432C-4		508A-27	67725-99E20	442A-4
65842-94401	432D-4	67257-99E10	450A-28		575A-4
	432A-17		508A-28	67726-99E00	442A-5
	432B-21	67258-99E00	450A-29		575A-5
65890-95D00	432B-5		508A-29	67728-99E00	442A-8
	432C-5	67259-87D00	450A-30		575A-8
	432D-5		508A-30	68110-88L01	420A-15
65890-99100	432A-5	67261-99E10	450A-31		420B-14
65892-95D00	432A-6		508A-31		420C-13
	432B-6	67264-95600	450A-33	68111-91L00	420A-13
	432C-6		508A-33		420B-12
67100-96300	432D-6	67267-93J00	450A-34		420C-11
	336A-35		508A-34	69711-93E10	167A-11
	336B-40	67273-95600	450A-35		167B-11
67110-99710	336C-40		508A-35	69712-93E10	420A-8
	336A-40	67275-95600	450A-36		420B-7
	336B-45		508A-36		420C-6
67130-91L00-YAY	336C-45	67282-94L00	450A-49	69714-94J00	444A-28
	514A-1		508A-49		444B-27
	67200-963A0	67284-94L00	450A-50	69911-91J50	335A-34
67212-95600	508A-1		508A-50	70000	
	450A-13	67292-94300	450A-37		
	508A-13		508A-37		
67220-95620	450A-14	67294-95600	450A-38	70000	
	508A-14		508A-38		
	450A-15	67296-90J10	450A-39		
67223-99E10	508A-15		508A-39	77811-54GB0-0PG	450A-12
	450A-16	67296-94300	450A-40		508A-12
	508A-16		508A-40	90000	
67232-95600	450A-17	67296-94310	450A-32		
	508A-17		508A-32		
67238-87D00	450A-18	67296-95600	450A-41	90000	
	508A-18		508A-41		
	450A-19	67296-95610	450A-42		
67241-99E10	508A-19		508A-42	90000	
	450A-20	67297-95600	450A-43		
	508A-20		508A-43		
67244-95600	450A-21	67341-94302	451A-8	99011-91LC0-063	420B-13
	508A-21		514A-2		420C-12
	450A-22	67414-91L00-YAY	451A-1	99011-91LD0-063	420A-14
67245-95600	508A-22		514A-8	00000	
	450A-23	67440-93701	451A-2		
	508A-23		514A-3		
67252-95600	450A-24	67466-95200	451A-5	00000	
	508A-24		514A-7		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01411-0620A	125A-7	02112-05127	550B-9	08211-20253	220A-2
	125B-3		554A-2		220B-2
	125A-6	02112-05207	128B-16	08221-30404	220A-25-1
01411-0820A	125B-6	02112-3306A	125A-11		220B-25-1
	146B-6		125B-11	08310-00057	550A-9
	303A-9	02112-35087	303A-9		553A-12
01547-06407	308B-8		303B-9	08310-00067	301A-15
01550-06127	308C-8		303C-9		301A-17
	301A-14	02112-35127	303A-10		413A-22
01550-06167	322A-3		303B-10		413B-22
	322B-10		303C-10		413C-22
	322B-14-1		324C-7	08316-10067	125A-2
01550-0616C	322B-14-2	02112-35207	303A-11		125B-2
	322C-9		303B-11	08316-10087	125A-14
	322C-13		303C-11		125B-7
01550-0616C	553A-17	02112-35257	303A-12		146A-14
	308A-11		303B-12	08321-0105A	146B-17
	308B-13		303C-12		128B-17
01550-0620C	308C-13	02122-06167	130A-3		550A-10
	112A-20		130B-3		550B-10
	112B-20	02122-0616A	125A-13		553A-13
01550-06257	167A-15		125B-12		554A-3
	167A-16	02142-05257	308B-2	08321-01067	301A-16
	167B-15		308C-2		301A-18
01550-06257	167B-16		550A-8	08322-01067	580A-3
	112A-13		553A-11		580B-3
	112B-13	02142-06357	125A-12		580C-3
01550-0625C	112A-7	02142-06407	125B-17	08331-41406	220A-4
	112B-7	02162-06127	580A-2		220B-4
	125A-1		580B-2	09100-05104	324B-5
01550-0630C	125B-1		580C-2		324C-4
	146A-4	03112-0630B	501A-11	09100-06174	201A-13
	125A-18	03122-05165	533A-6		201B-13
01550-06357	125B-13		533A-13	09100-08232	450A-44
	166A-10		533B-6		508A-44
	166B-19		533B-13	09100-08309	336A-38
01550-08257	167A-17	03142-04259	407A-19		336B-43
	167A-20	03241-0625A	322B-12		336C-43
	167B-17		322C-11		442A-6
01560-08457	112A-11	03542-06169	420A-4		575A-6
	112B-11		420B-4	09100-08311	335A-15
	112A-10		420C-4	09100-08313	335A-16
01560-08557	112B-10	04211-09109	112A-9	09100-10318	405A-10
	112A-12		112B-9		405B-10
	112B-12	08113-60060	220A-27	09100-10319	405A-15
01560-08657	112A-5		220B-27		405B-15
	112B-5	08211-15203	220A-11-6	09103-06093	514A-12
	146A-3		220B-11-6	09106-06098	167A-18
01580-08207	130B-5	08211-15204	220A-11-8		167B-18
01580-08257	301A-11		220B-11-8	09108-06069	160A-12

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09108-08300	160B-12	09116-08147	407A-6	09140-10032	336A-27
	444A-3	09116-08149	336A-8		336B-27
	444B-3		336B-8		336C-26
09111-10066	336A-26		336C-7		432B-9
	336B-26	09116-08154	405A-23		432C-9
09111-10067	336C-25		405B-23		432D-9
	335A-28		407A-9	09140-18014	303A-6
	336B-38	09118-08169	405A-3		303B-6
	336C-38		405B-3		303C-6
09111-10068	335A-29	09118-08172	405A-2	09141-14008	407A-16
09116-05010	336A-25		405B-2	09148-06008	444A-15
	336B-25	09119-05010	166B-13		444B-15
	336C-24	09119-06047	451A-7	09148-06017	413A-12
09116-06094	514A-9		514A-10		413B-12
09116-06223	413A-9	09119-08104	336A-14		413C-12
	413B-9		336B-14	09159-08046	220A-12
09116-06225	413C-9		336C-13		220B-12
	201A-15	09125-05046	413A-8	09159-08059	336A-42
	201B-15		413B-8		336B-47
	336B-37		413C-8		336C-47
	336C-37	09126-05003	450A-45	09159-10050	405A-12
	413A-21		508A-45		405A-24
	413B-21	09126-06006	407A-21		405B-12
	413C-21	09126-06015	444A-21		405B-24
	451A-6		444B-21	09159-22006	335A-19
	451A-9	09136-05041	444A-16	09160-04012	336A-23
09116-06226	405A-7		444B-16		336B-23
	405B-7	09139-04004	201A-35		336C-22
09116-06227	160A-19		201B-35	09160-05024	201C-30
	160B-19		201C-28		514A-13
	201A-14	09140-04007	128A-37	09160-05029	166A-16
	201B-14		128B-20		166B-25
	201C-9	09140-05005	166A-11		201A-17
	201C-31		166B-20		201B-17
	413A-15		324B-6		201C-11
	413B-15		324C-5		413A-10
09116-06229	413C-15	09140-06020	413A-11		413B-10
	220A-30		413B-11		413C-10
	220B-30		413C-11	09160-06054	308A-3
	413A-7		450A-46		308B-5
09116-06230	413B-7		508A-46		308C-5
	413C-7	09140-08023-XC0	335A-17	09160-06084	166A-7
09116-06232	166A-6		336A-36		166B-14
	166B-11		336B-41	09160-06104	450A-47
	166B-12		336C-41		508A-47
	405A-22		442A-7	09160-08081	335A-20
09116-06234	405B-22		444A-5	09160-08082	336A-43
	141A-5		444B-5		336B-48
	141B-5		575A-7		336C-48
09116-06237	514A-6	09140-10031	335A-30	09160-10082	335A-31

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	405A-11		336B-9		336C-27
	405A-16		336C-8	09202-05021	220A-19
	405A-25	09160-50002	116A-16		220B-19
	405B-11		116B-16	09202-06015	407A-10
	405B-16	09161-04012	413A-19	09202-06023	405A-1
	405B-25		413B-19		405B-1
09160-10083	405A-17		413C-19	09204-01002	166A-15
	405B-17	09162-10005	335A-32		166B-24
09160-12007	308A-4	09163-06001	444A-20		201A-19
	308B-6		444B-20		201B-19
	308C-6	09164-06015	167A-21		201C-13
09160-12066	432A-8		167B-19		336A-29
09160-14028	407A-15	09166-17005	220A-6		336B-29
09160-15030	220A-11-1		220B-6		336C-28
	220B-11-1	09167-20021	220A-7	09204-03003	407A-17
09160-15031	220A-11-2		220B-7	09205-02004	201A-30
	220B-11-2	09168-10022	407A-8		201B-30
09160-15032	220A-11-3	09169-18001	116A-6		201C-23
	220B-11-3		116B-6	09205-02006	336A-34
09160-15033	220A-11-7	09180-06105	166A-8		336B-34
	220B-11-7		166B-15		336C-33
09160-15053	220A-11-4	09180-06186	166A-9		451A-3
	220B-11-4		166B-16		514A-4
09160-15054	220A-11-5	09180-06289	413A-13	09205-03021	201A-31
	220B-11-5		413B-13		201B-31
09160-16053	324A-6		413C-13		201C-24
09160-18011	303A-7	09180-09024	335A-14	09205-03038	444A-18
	303B-7	09181-16008	220A-15		444B-18
	303C-7		220B-15	09205-04002	166B-17
09160-20068	220A-23-1	09181-24001	116A-10	09205-06013	336A-4
	220B-23-1		116B-10		336B-4
09160-20069	220A-23-2	09181-25190	220A-3-1		336C-4
	220B-23-2		220B-3-1	09205-06021	335A-5
09160-20070	220A-23-3	09181-25248	220A-3-2		335A-10
	220B-23-3		220B-3-2	09205-10006	413A-3
09160-20071	220A-23-4	09181-25251	220A-3-3		413B-3
	220B-23-4		220B-3-3		413C-3
09160-20072	220A-23-5	09181-25268	220A-3-8	09209-08016	220A-17
	220B-23-5		220B-3-8		220B-17
09160-20073	220A-23-6	09181-30158	220A-25-2	09248-10008	407A-7
	220B-23-6		220B-25-2	09250-06012	201C-32
09160-25032	220A-3-4	09181-30162	220A-25-3		514A-14
	220B-3-4		220B-25-3	09250-08007	413A-24
09160-25033	220A-3-5	09200-05006	166A-14		413B-24
	220B-3-5		166B-23		413C-24
09160-25034	220A-3-6		201A-18	09250-16008	413C-28
	220B-3-6		201B-18	09250-21003	413B-30
09160-25035	220A-3-7		201C-12	09250-33001	336C-34
	220B-3-7	09200-05011	336A-28	09260-10005	201A-20
09160-40005	336A-9		336B-28		201B-20

SUZUKI **DT25/30** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material Development Group, Service Engineering Department
300 Takatsuka, Minami, Hamamatsu, Japan

Copyright © SUZUKI MOTOR CORPORATION 2017 All Rights Reserved

SUZUKI MOTOR CORPORATION