

DT40W

DT40W
DT40WR
DT40WK



OUTBOARD MOTOR

P40/P90

2015-9

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DT40W production start 2015.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	S, L, L2	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 04005-123456	PTT	: Power trim and tilt
123456~	: From E. NO. 04005-123456		
12 x 34 x 5.6	 Figures in the description column		
	show the dimensions of parts.		
ID	OD	T(or W, L)	

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec. :

spec. code : DT40W : P40, P90
DT40WR : P40, P90
DT40WK : P40

7. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE No.
DT40W	P40	04005	S, L, L2	04005-610001~
DT40W	P90	04005	S	04005-610001~
DT40WR	P40	04005	L, L2	04005-610001~
DT40WR	P90	04005	S	04005-610001~
DT40WK	P40	04005K	S, L, L2	04005K-610001~

MILLIMETER → INCH CONVERSION CHART

	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...


23 millimeters equal 0.906 inch

FIG.10AA




DT40NE_P40_516_10A4
MAINTENANCE KIT

FIG.10AB

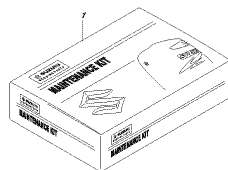


DT40NE_P40_516_10AB
MAINTENANCE KIT

FIG.10AC

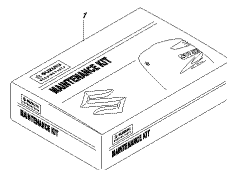


DT40NE_P40_516_10AC
MAINTENANCE KIT

FIG.10AD

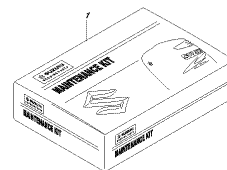


DT40NE_P40_516_10AD
MAINTENANCE KIT

FIG.112A

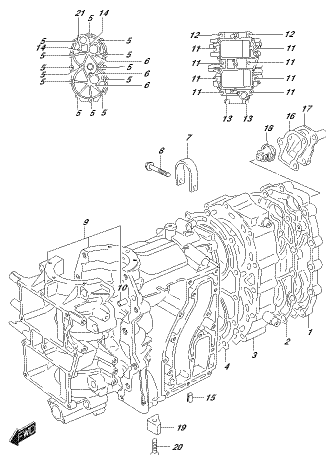


DT40NE_P40_516_112A
CYLINDER

FIG.112B

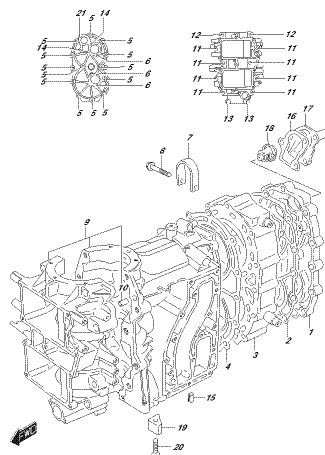


DT40NE_P40_516_112B
CYLINDER

FIG.112C

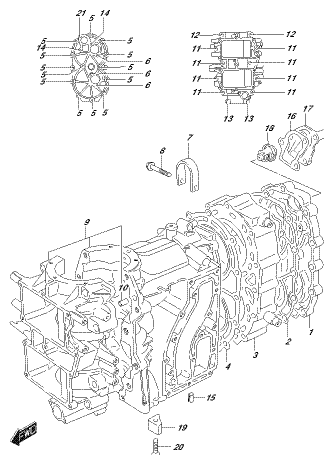


DT40NE_P40_516_112C
CYLINDER

FIG.112D

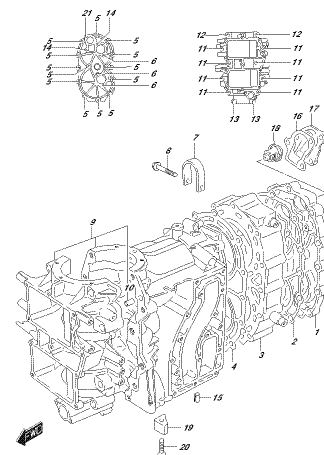


DT40NE_P40_516_112D
CYLINDER

FIG.112E

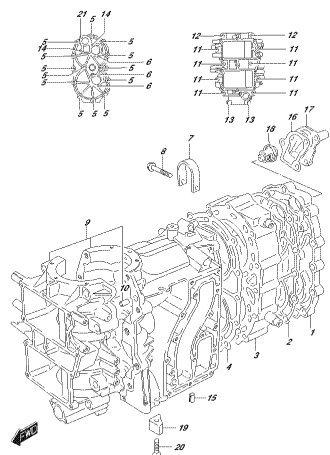


DT40NC_PRL516.116E
C24434354KT

FIG.116A

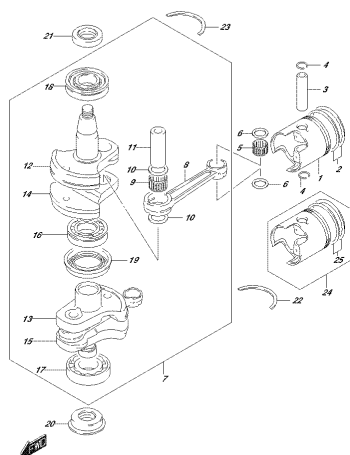


DT40NC_PRL516.116A
C24434354KT

FIG.116B

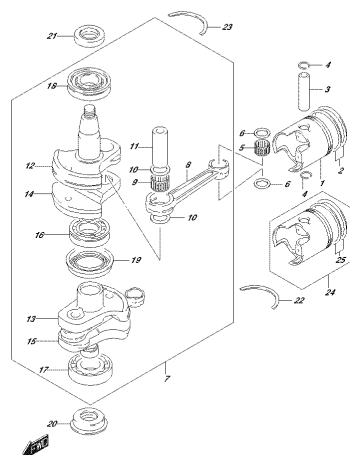


DT40NC_PRL516.116B
C24434354KT

FIG.116C

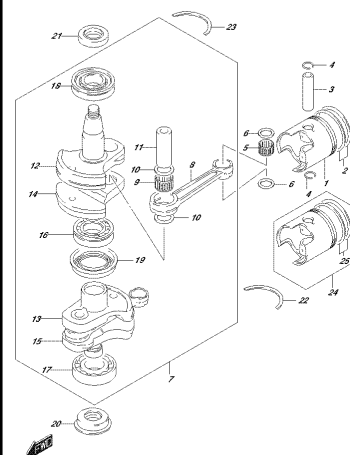


DT40NC_PRL516.116C
C24434354KT

FIG.116D

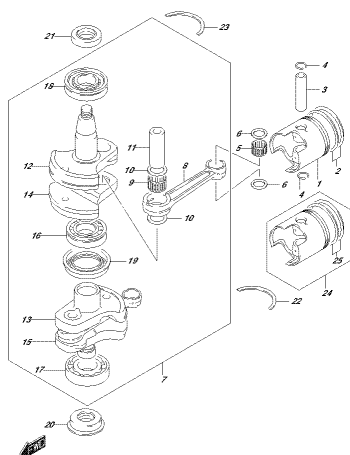


DT40NC_PRL516.116D
C24434354KT

FIG.116E

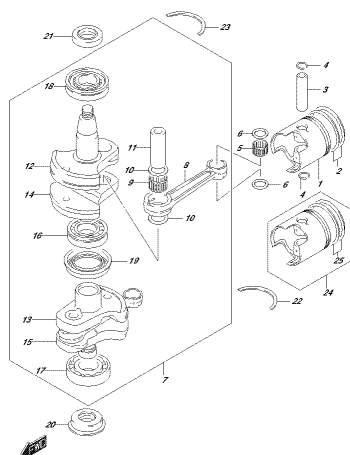


DT40NC_PRL516.116E
C24434354KT

FIG.125A

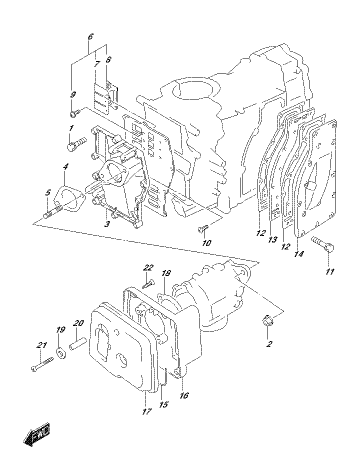


DT40NC_PRL516.125A
PILET CASE

FIG.125B

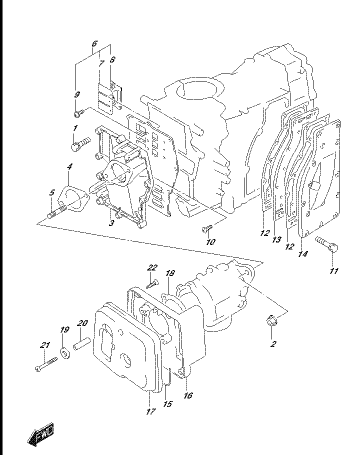


DT40NC_PRL516.125B
PILET CASE

FIG.125C

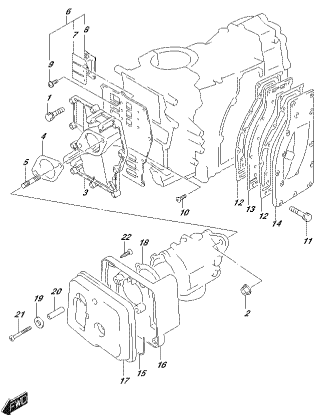


DT40MC_P81_514E_125C
PILEY OKSE

FIG.125D

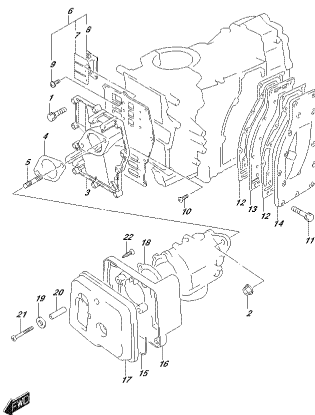


DT40MC_P81_514E_125D
PILEY OKSE

FIG.125E

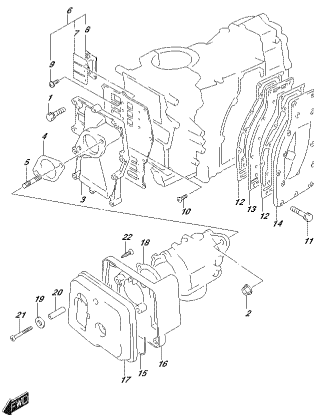


DT40MC_P81_514E_125E
PILEY OKSE

FIG.128A

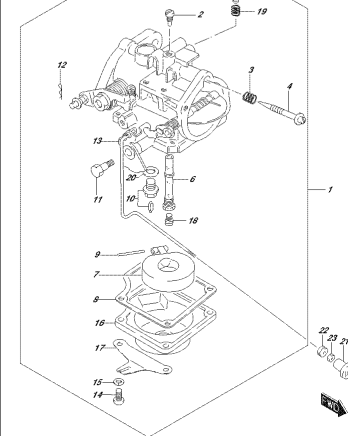


DT40MC_P81_514E_128A
CARBURETOR

FIG.128B

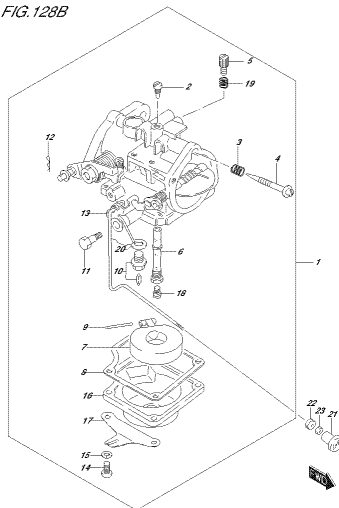


DT40MC_P81_514E_128B
CARBURETOR

FIG.128C

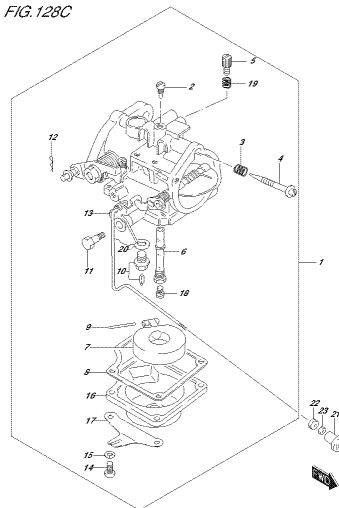


DT40MC_P81_514E_128C
CARBURETOR

FIG.128D

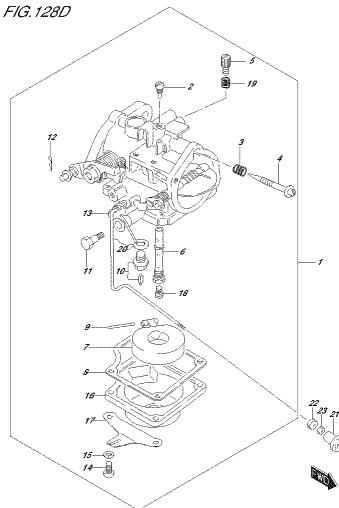

DT40MC_P81_514E_128D
CARBURETOR

FIG.128E

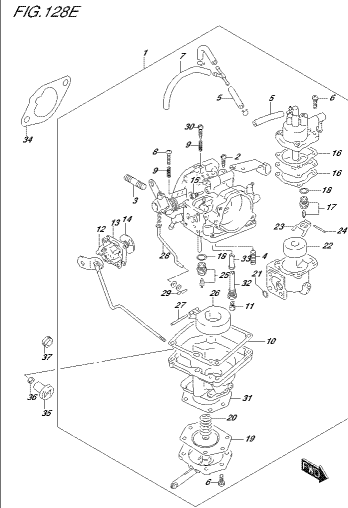

DT40MC_P81_514E_128E
CARBURETOR

FIG. 130A


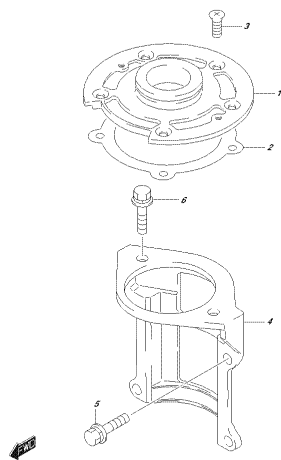
DT4084 P42 016 1.004
OR SEAL HOUSING

FIG. 130B

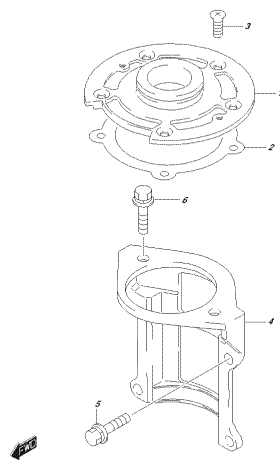

DT408_P40_016_1303

FIG. 130C


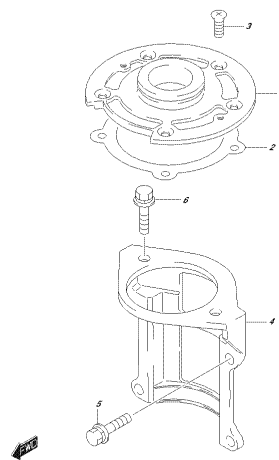
DT408L P42.51E 1.30C
OR SEAL HOUSING

FIG. 130D

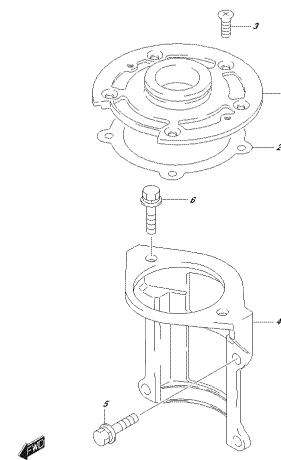

DT408/P42.016.1000

FIG. 130E




DT408L P42.016.1.2SE
OR SEAL HOUSING

FIG. 141A




DT408_P42_G16_141A
EXHAUST TUBE

FIG. 141B

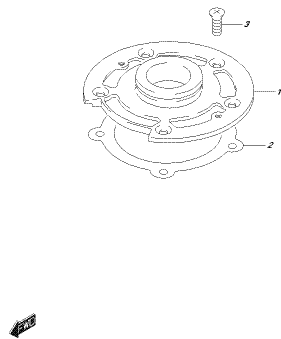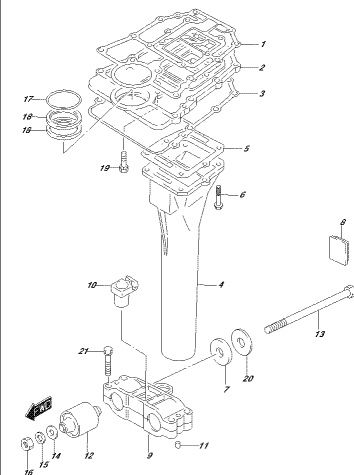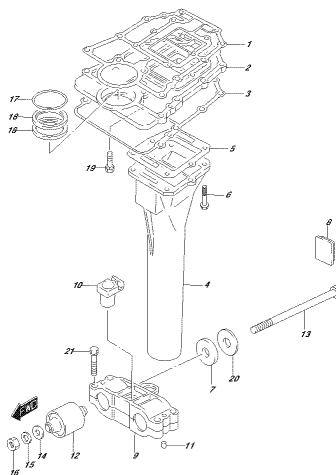


DT40N_P42_516_141B
EXHAUST TUBE

FIG. 141C

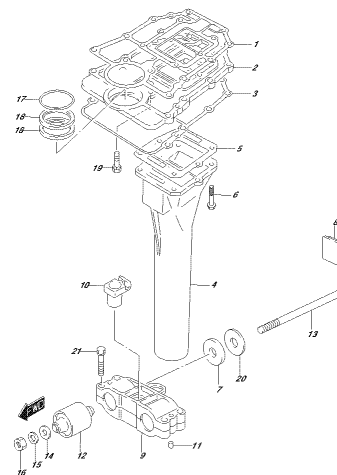


DT40H_P42_016_141C
EXHAUST TUBE

FIG.141D

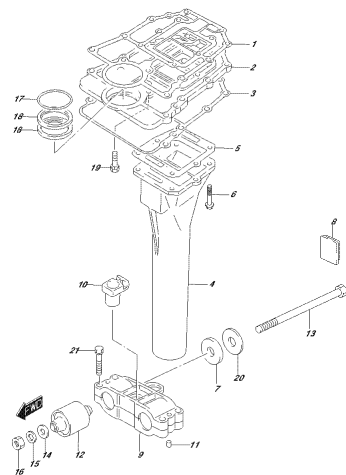


DT400C_Rail_S16L 141D
E/Fuel-Gust Valve

FIG.141E

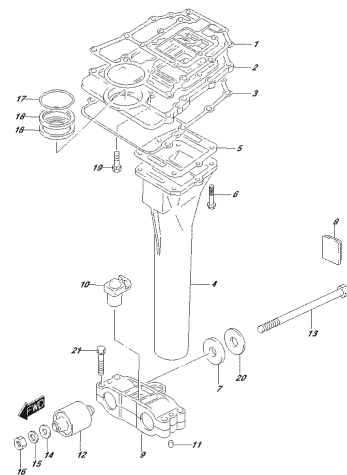


DT400C_Rail_S16L 141E
E/Fuel-Gust Valve

FIG.146A

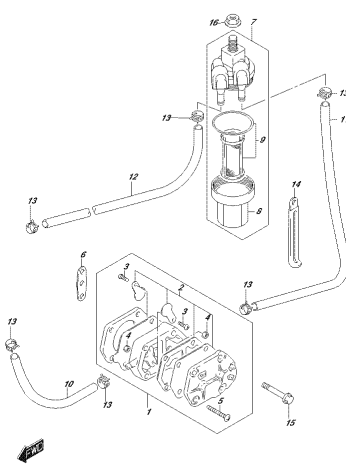


DT400C_Rail_S16L 146A
Fuel Pump

FIG.146B

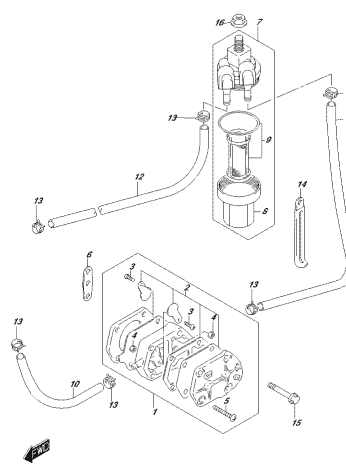


DT400C_Rail_S16L 146B
Fuel Pump

FIG.146C

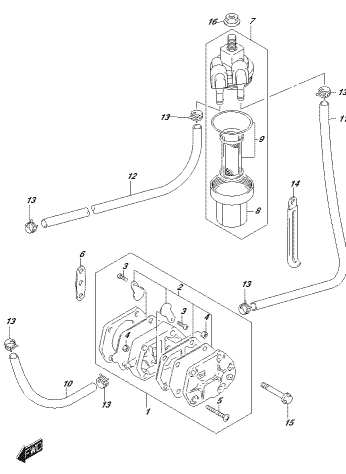


DT400C_Rail_S16L 146C
Fuel Pump

FIG.146D

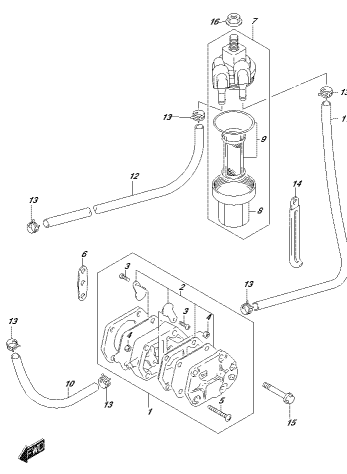


DT400C_Rail_S16L 146D
Fuel Pump

FIG.146E

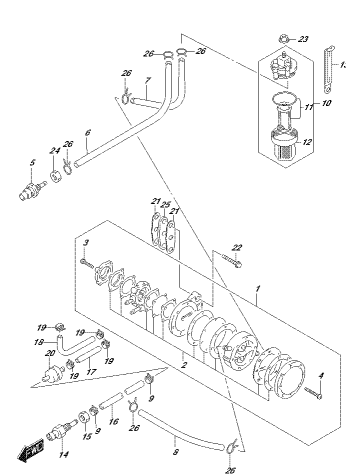

DT400C_Rail_S16L 146E
Fuel Pump

FIG.160A

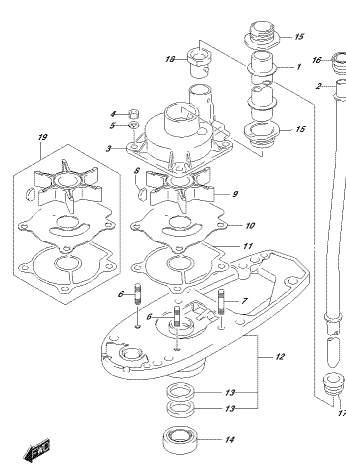

DT400C_Rail_S16L 160A
Water Pump

FIG.160B

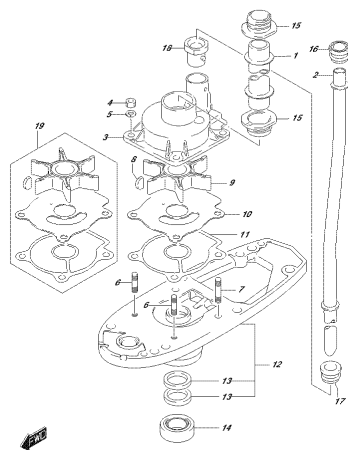
DT40NE_P40,S16,160B
WAKES PUMP

FIG.160C

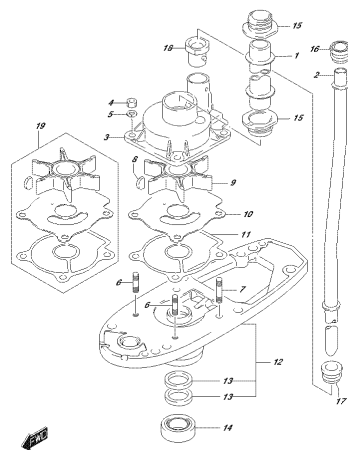
DT40NE_P40,S16,160C
WAKES PUMP

FIG.160D

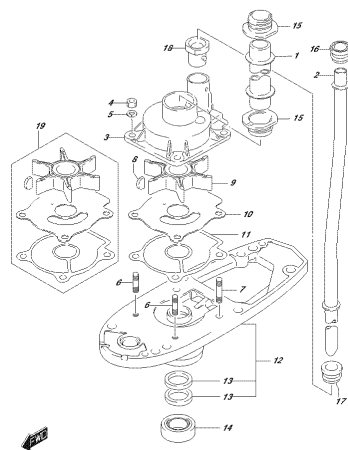
DT40NE_P40,S16,160D
WAKES PUMP

FIG.160E

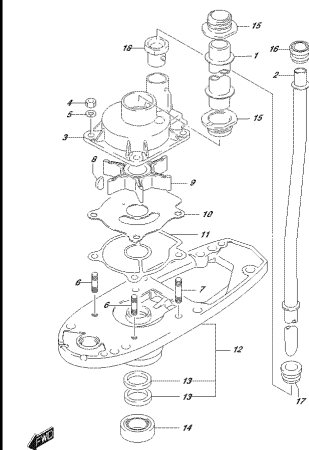
DT40NE_P40,S16,160E
WAKES PUMP

FIG.166A

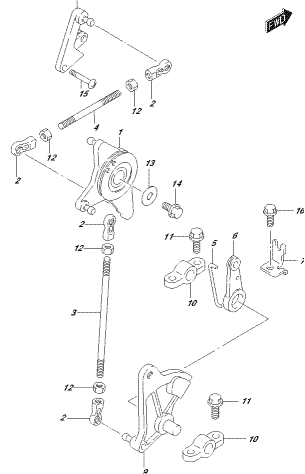
DT40NE_P40,S16,166A
THROTTLE CONTROL

FIG.166B

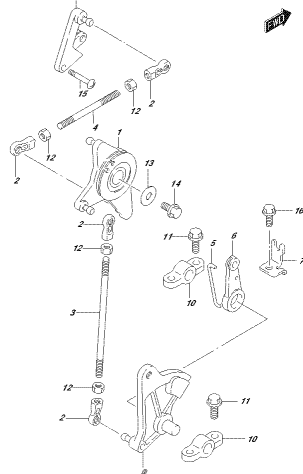
DT40NE_P40,S16,166B
THROTTLE CONTROL

FIG.166C

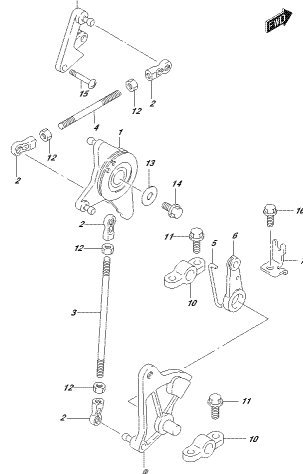
DT40NE_P40,S16,166C
THROTTLE CONTROL

FIG.166D




DT40NE_P40,S16,166D
THROTTLE CONTROL

FIG.166E




DT40NC_PAL_516_166E
FUSE/SHUT-OFF CONTROL

FIG.167A

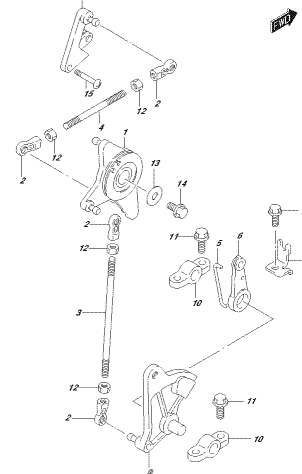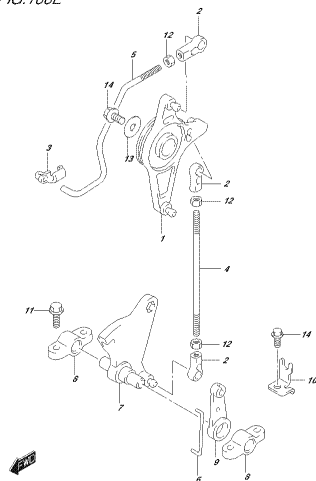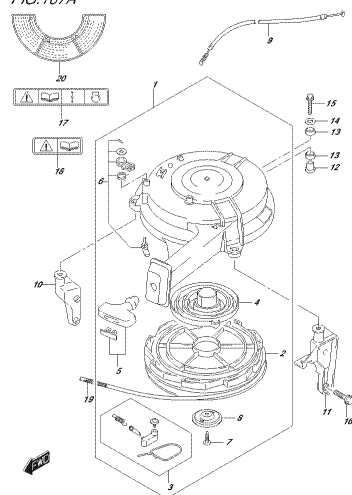


DT40NC_PAL_516_167A
BECKL STARTER

FIG.201A

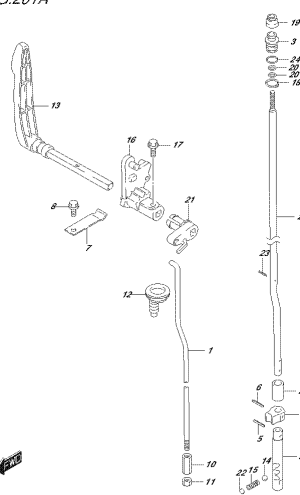


DT40NC_PAL_516_201A
CLUTCH

FIG.201B

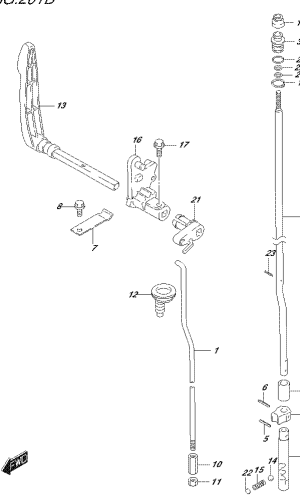


DT40NC_PAL_516_201B
CLUTCH

FIG.201C

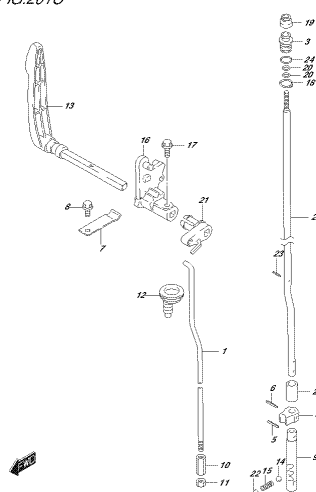


DT40NC_PAL_516_201C
CLUTCH

FIG.201D

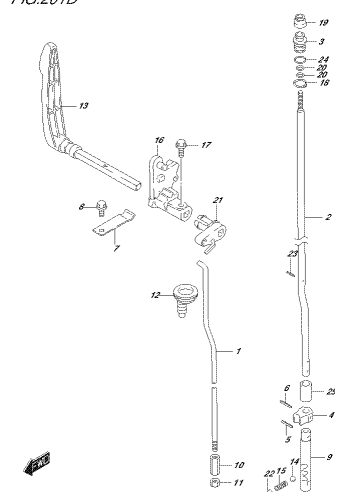


DT40NC_PAL_516_201D
CLUTCH

FIG.201E

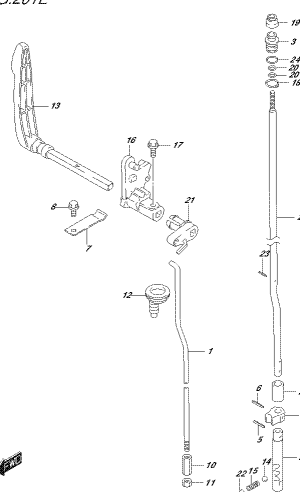


DT40NC_PAL_516_201E
CLUTCH

FIG.220A

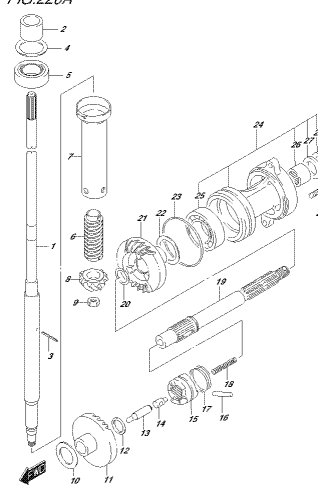


DT40NC_PAL_516_220A
TRANSMISSION

FIG.220B

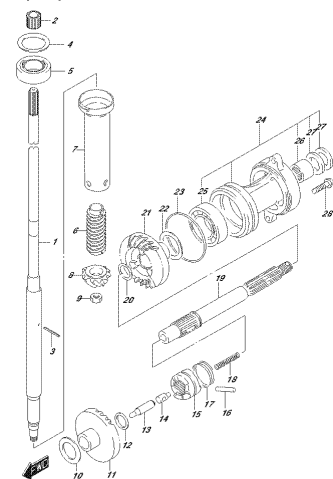


DT40MC_P&L_016_220B
F0463802001

FIG.220C

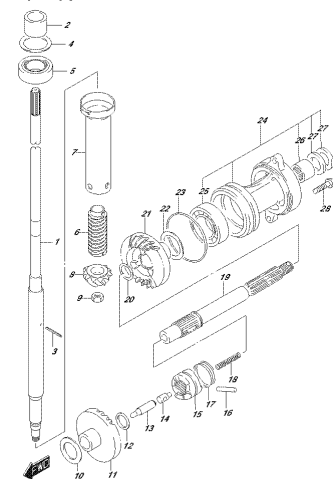


DT40MC_P&L_016_220C
F0463802001

FIG.220D

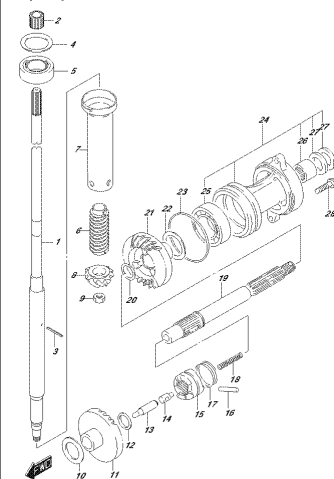


DT40MC_P&L_016_220D
F0463802001

FIG.220E

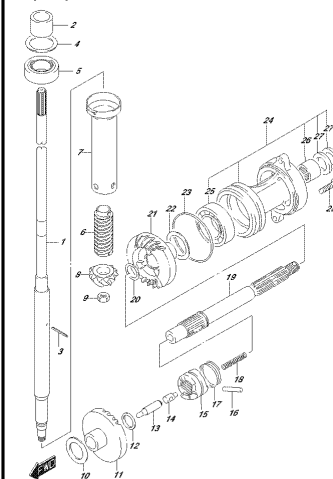


DT40MC_P&L_016_220E
F0463802001

FIG.301A

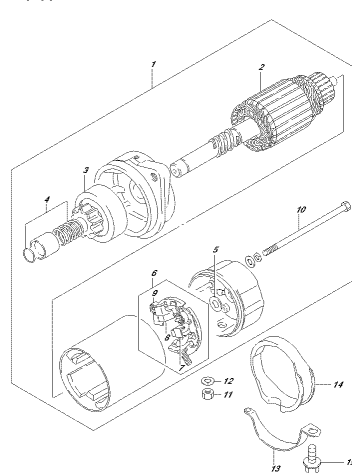


DT40MC_P&L_016_301A
STARTING MOTOR

FIG.301B

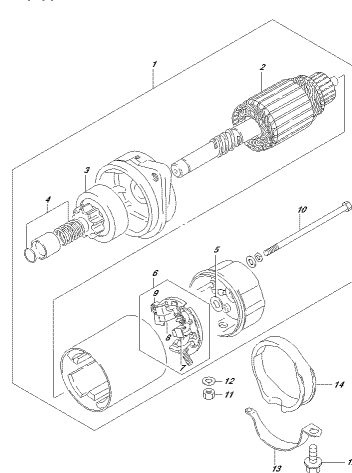


DT40MC_P&L_016_301B
STARTING MOTOR

FIG.301C

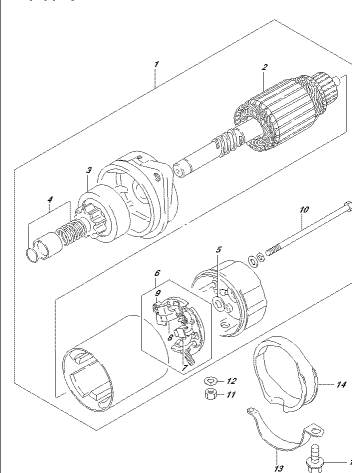


DT40MC_P&L_016_301C
STARTING MOTOR

FIG.301D

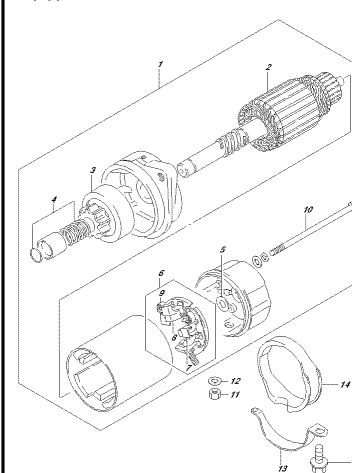


DT40MC_P&L_016_301D
STARTING MOTOR

FIG.303A

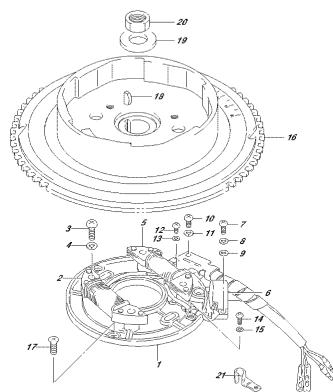


DT40NC_PAL_016_0534
MAGNETO

FIG.303B

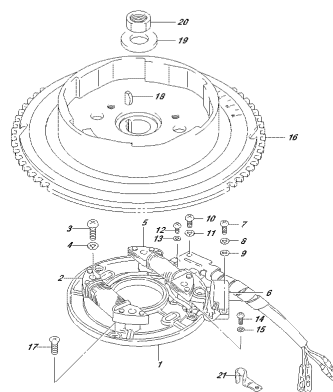


DT40NC_PAL_016_0535
MAGNETO

FIG.303C

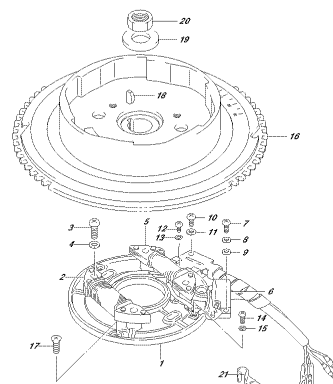


DT40NC_PAL_016_0537
MAGNETO

FIG.303D

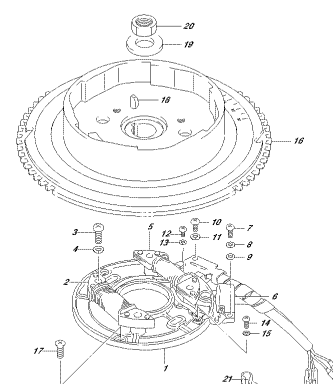


DT40NC_PAL_016_0538
MAGNETO

FIG.303E

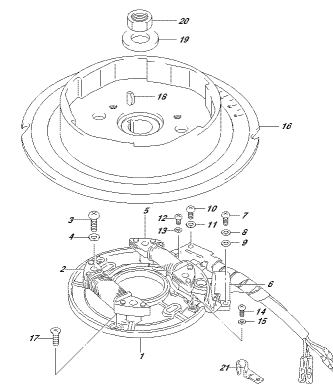


DT40NC_PAL_016_0536
MAGNETO

FIG.303A

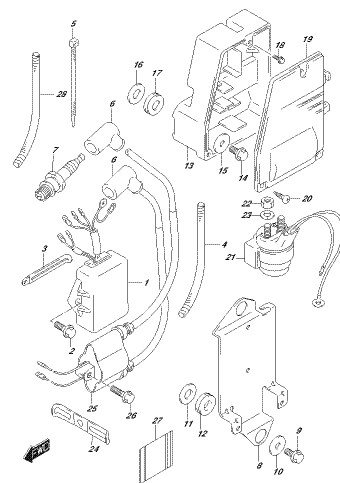


DT40NC_PAL_016_0534
MAGNETO

FIG.303B

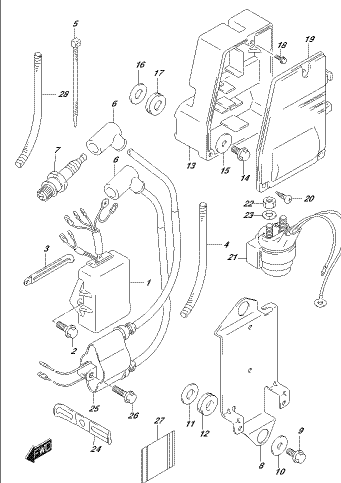


DT40NC_PAL_016_0535
MAGNETO

FIG.303C

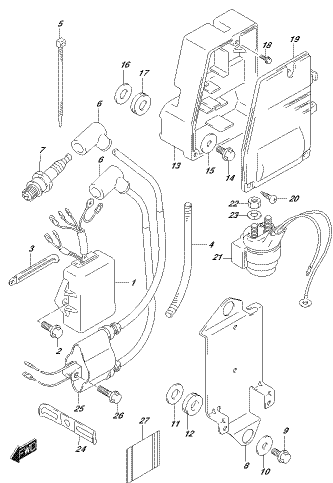


DT40NC_PAL_016_0537
MAGNETO

FIG.308D

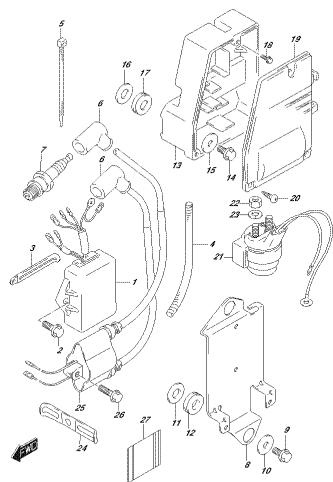


DT40MC_PAL_516L_354D
IGN/STOP

FIG.308E

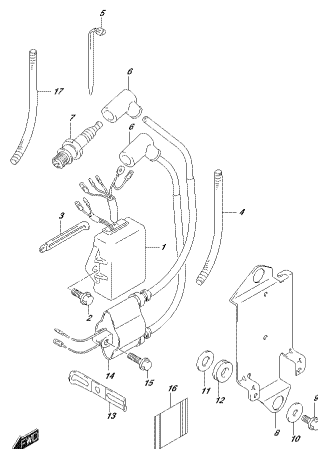


DT40MC_PAL_516L_355E
IGN/STOP

FIG.309A

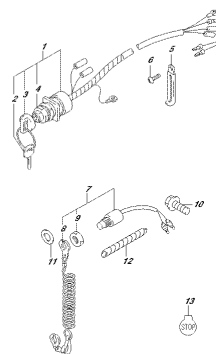


DT40MC_PAL_516L_355H
IGN/STOP SWITCH

FIG.309B

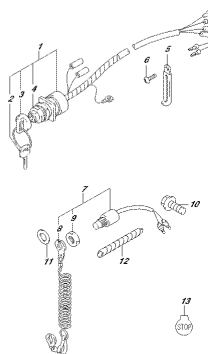


DT40MC_PAL_516L_355F
IGN/STOP SWITCH

FIG.309C

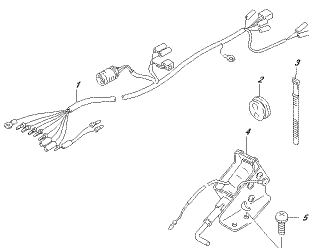


DT40MC_PAL_516L_355C
IGN/STOP SWITCH

FIG.309D

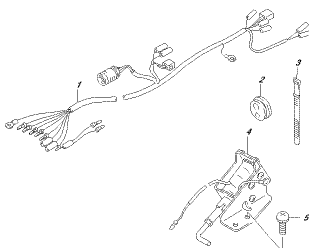


DT40MC_PAL_516L_355D
IGN/STOP SWITCH

FIG.309E

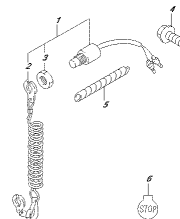


DT40MC_PAL_516L_355E
IGN/STOP SWITCH

FIG.319A

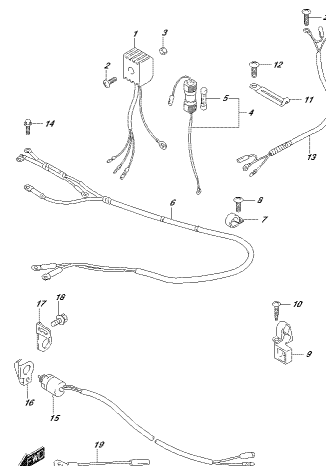


DT40MC_PAL_516L_319A
ELECTRICAL

FIG.319B

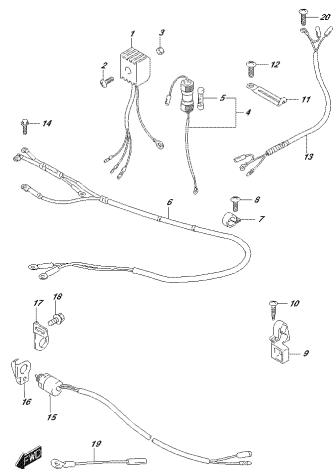


DT40NC_P81.516_319B
ELECTROCK

FIG.319C

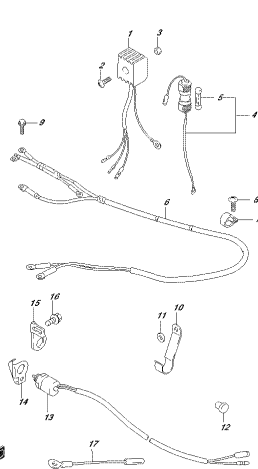


DT40NC_P81.516_319C
ELECTROCK

FIG.319D

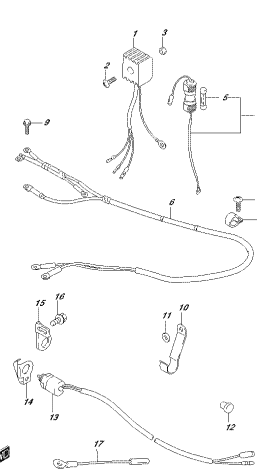


DT40NC_P81.516_319D
ELECTROCK

FIG.319E

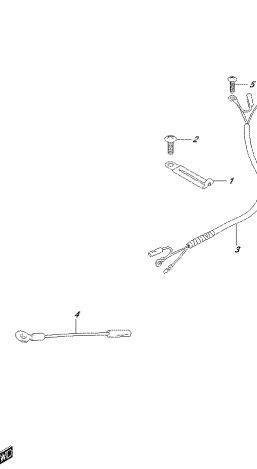


DT40NC_P81.516_319E
ELECTROCK

FIG.335A

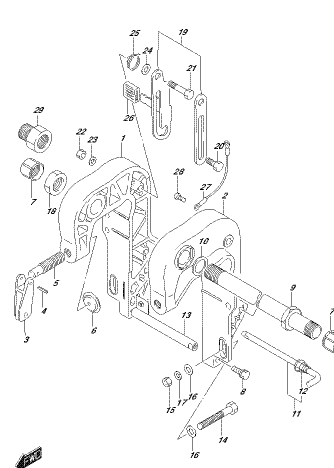


DT40NC_P81.516_335A
CLAMP BRACKET

FIG.335B

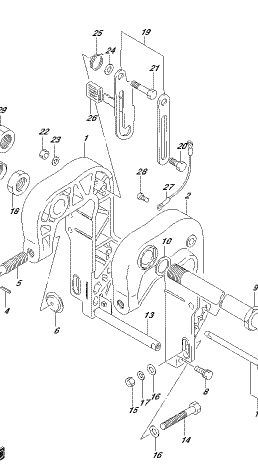


DT40NC_P81.516_335B
CLAMP BRACKET

FIG.335C

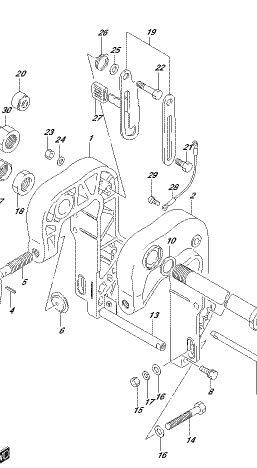


DT40NC_P81.516_335C
CLAMP BRACKET

FIG.335D

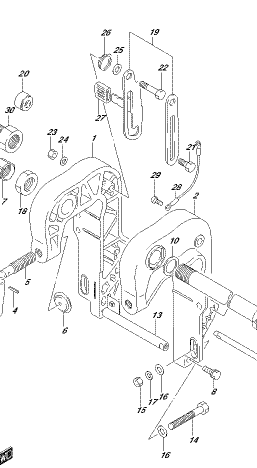


DT40NC_P81.516_335D
CLAMP BRACKET

FIG.335E

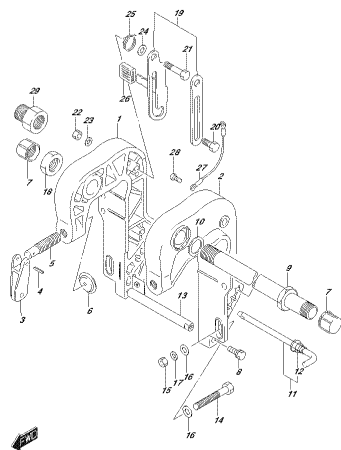


DT40MC_PAG_516L_535E
CLAMP BRACKET

FIG.336A

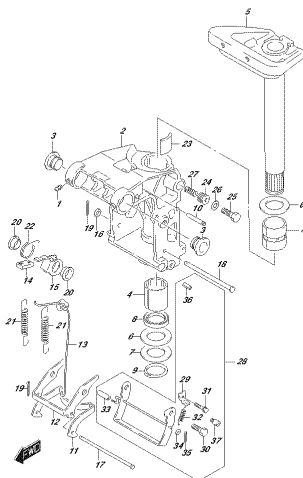


DT40MC_PAG_516L_536A
CLAMP BRACKET

FIG.336B

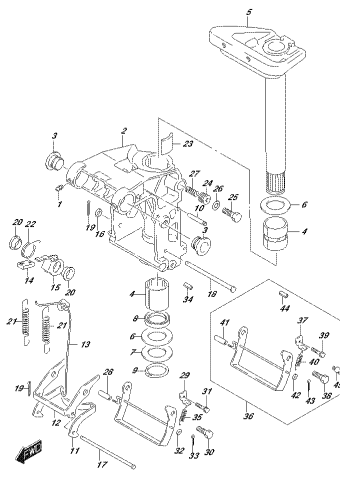


DT40MC_PAG_516L_536B
CLAMP BRACKET

FIG.336C

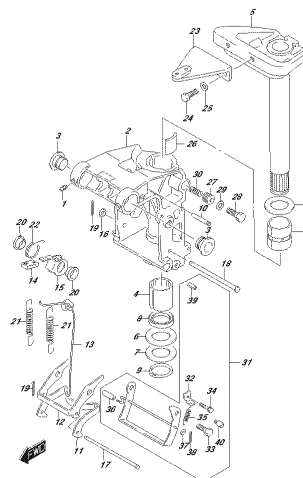


DT40MC_PAG_516L_536C
CLAMP BRACKET

FIG.336D

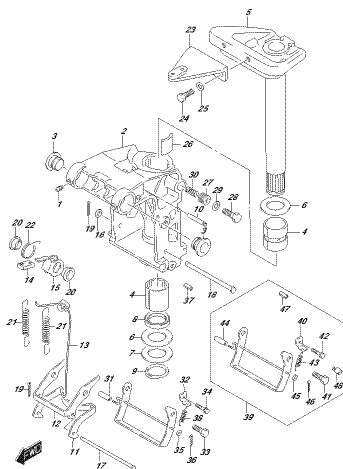


DT40MC_PAG_516L_536D
CLAMP BRACKET

FIG.336E

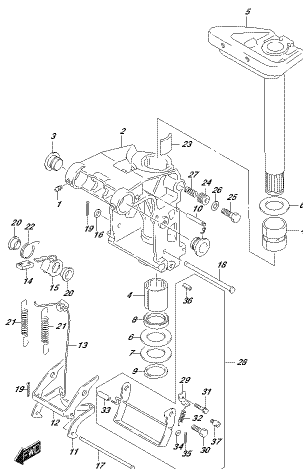


DT40MC_PAG_516L_536E
CLAMP BRACKET

FIG.405A

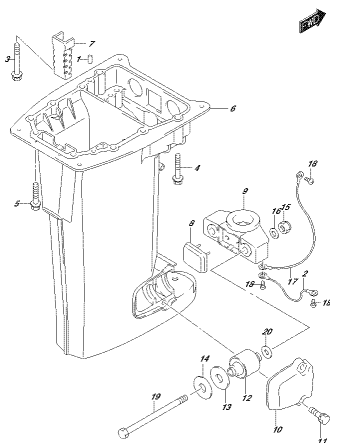


DT40MC_PAG_516L_405A
SHAFT ASSEMBLY

FIG.405B

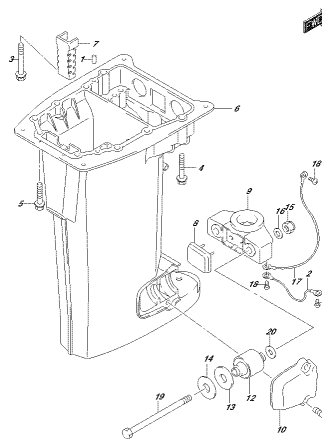


DT40MC_PAG_516L_405B
SHAFT ASSEMBLY

FIG.405C

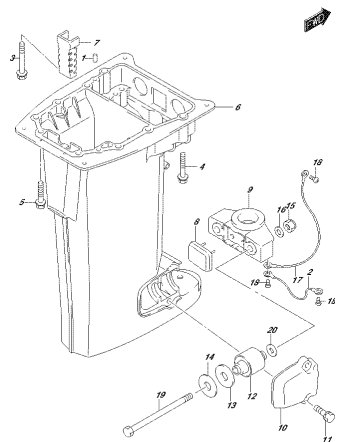


DT40M_PAL_S16_405C
0951C-SH47T-140-39G

FIG.405D

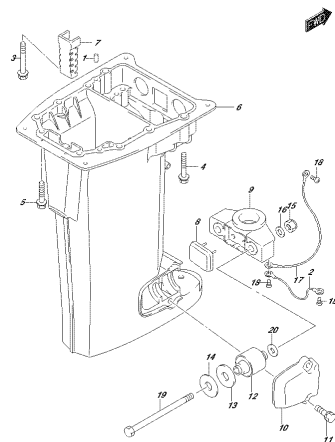


DT40M_PAL_S16_405D
0951C-SH47T-140-39G

FIG.405E

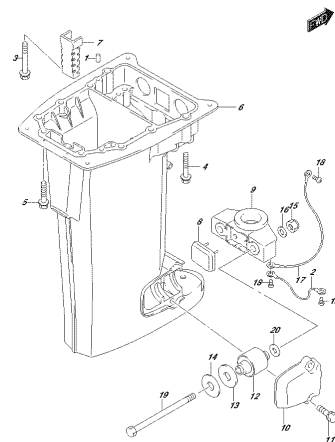


DT40M_PAL_S16_405E
0951C-SH47T-140-39G

FIG.407A

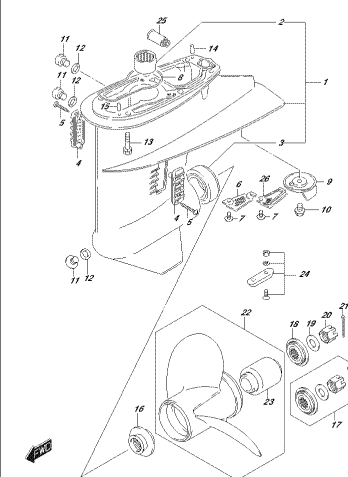


DT40M_PAL_S16_407A
0951C-SH47T-140-39G

FIG.412A

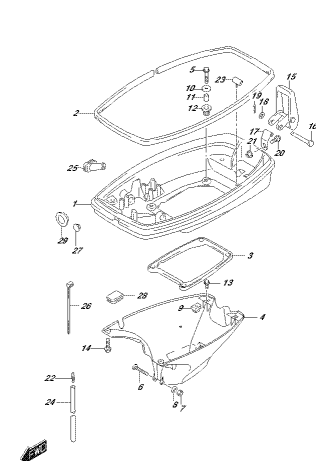


DT40M_PAL_S16_412A
LOWER COVER

FIG.412B

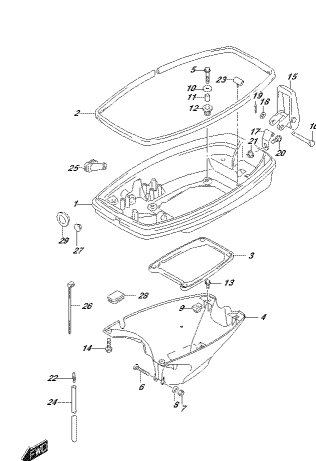


DT40M_PAL_S16_412B
LOWER COVER

FIG.412C

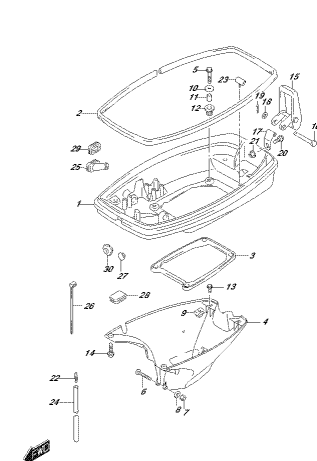

DT40M_PAL_S16_412C
LOWER COVER

FIG.412D

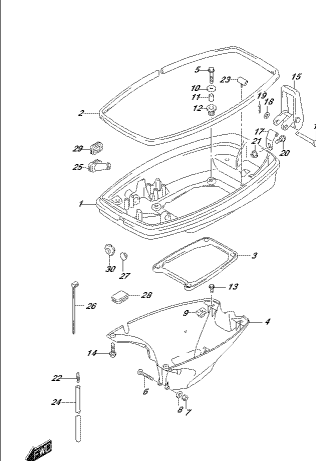

DT40M_PAL_S16_412D
LOWER COVER

FIG.412E

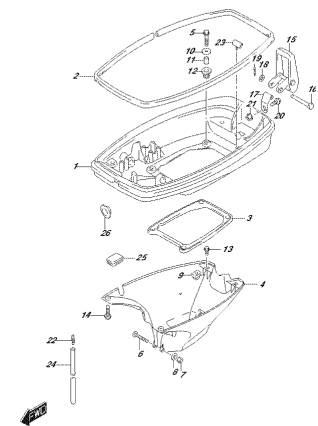
DT400E, P40, 516, 412E
LOWER COVER

FIG.420A

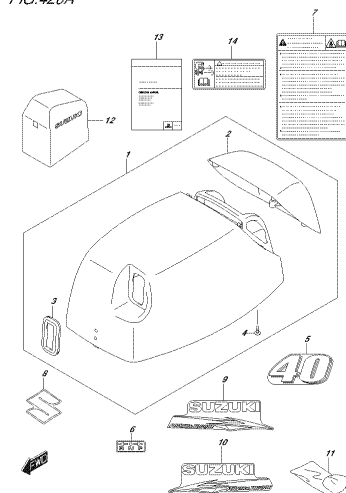
DT400A, P40, 516, 420A
ENGINE COVER

FIG.420B

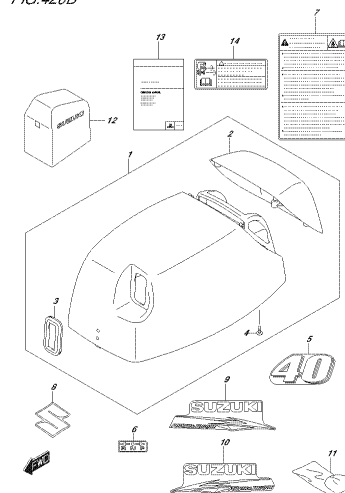
DT400B, P40, 516, 420B
ENGINE COVER

FIG.420C

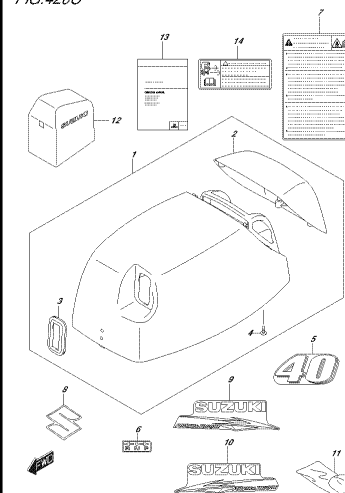
DT400C, P40, 516, 420C
ENGINE COVER

FIG.420D

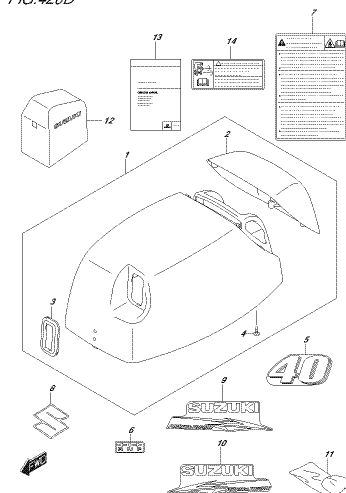
DT400D, P40, 516, 420D
ENGINE COVER

FIG.420E

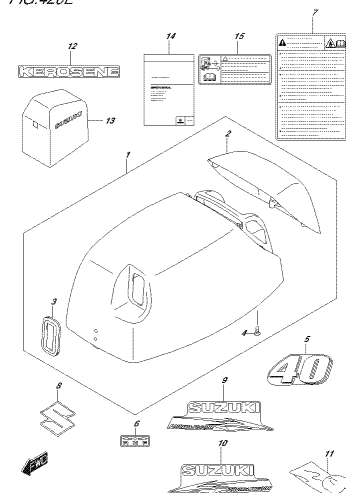
DT400E, P40, 516, 420E
ENGINE COVER

FIG.432A

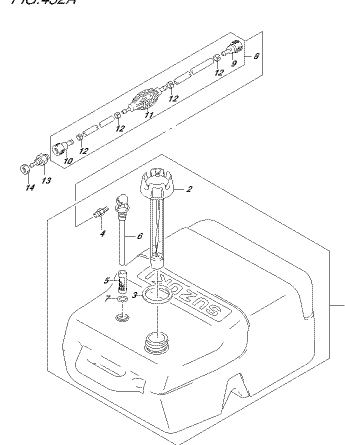
DT400A, P40, 516, 432A
FUEL TANK

FIG.432B




DT400B, P40, 516, 432B
FUEL TANK

FIG.432C




DT400E_P01,516L_432C
FUEL TANK

FIG.432D

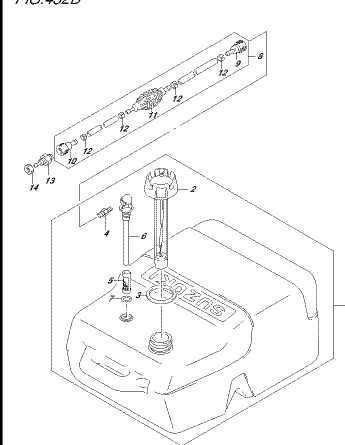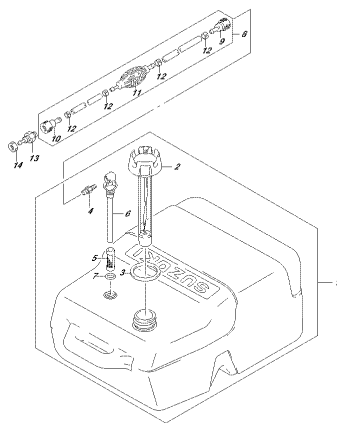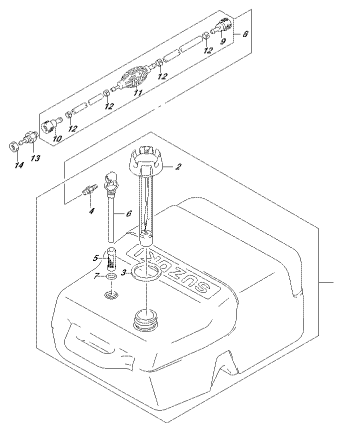


DT400E_P01,516L_432D
FUEL TANK

FIG.432E

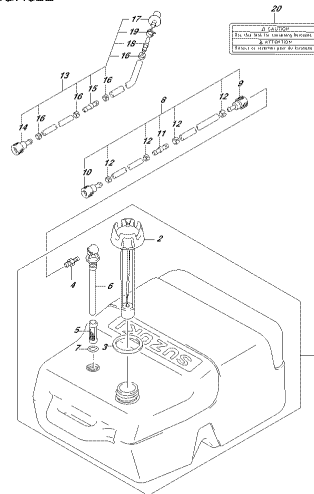


DT400E_P01,516L_432E
FUEL TANK

FIG.432F

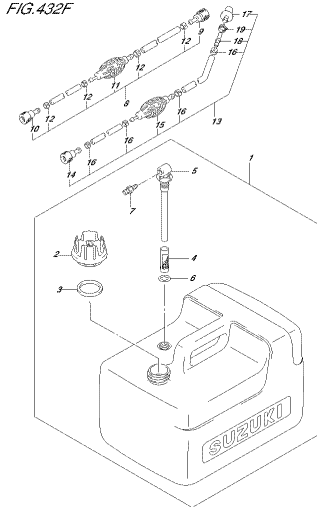


DT400E_P01,516L_432F
FUEL TANK

FIG.442A

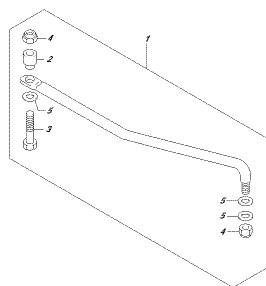


DT400E_P01,516L_442A
DRAG LEVER

FIG.442B

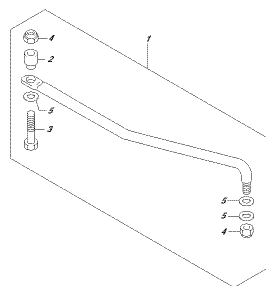


DT400E_P01,516L_442B
DRAG LEVER

FIG.444A

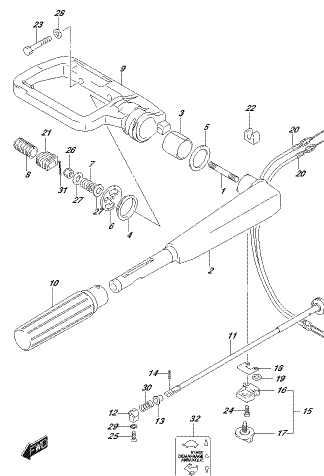


DT400E_P01,516L_444A
TILTER HANDLE

FIG.444B

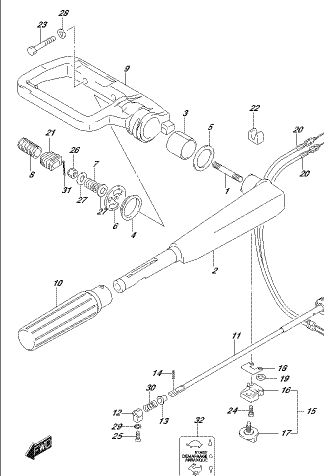


DT400E_P01,516L_444B
TILTER HANDLE

FIG.444C

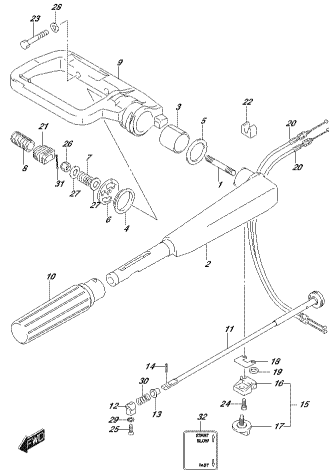


DT40NC_PAS_516_444C
TILE-16103-E

FIG.450A

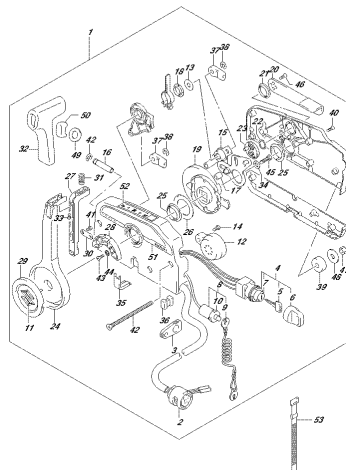


DT40NC_PAS_516_450A
REMOTE CONTROL

FIG.450B

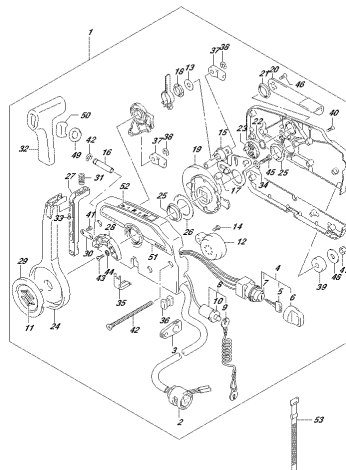


DT40NC_PAS_516_450B
REMOTE CONTROL

FIG.454A

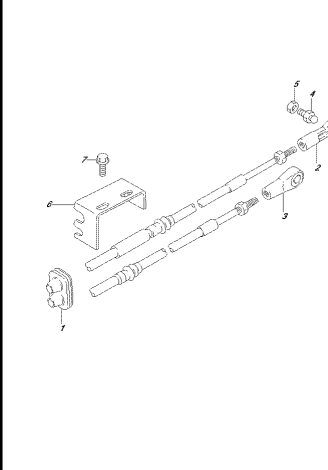


DT40NC_PAS_516_454A
REMOTE CABLE HOLDER

FIG.454B

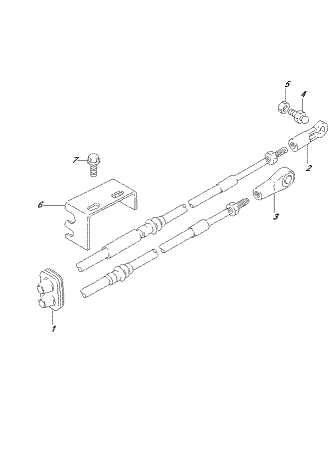


DT40NC_PAS_516_454B
REMOTE CABLE HOLDER

FIG.501A

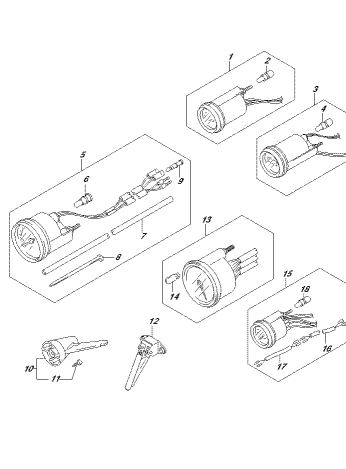


DT40NC_PAS_516_501A
OPT-METER

FIG.501B

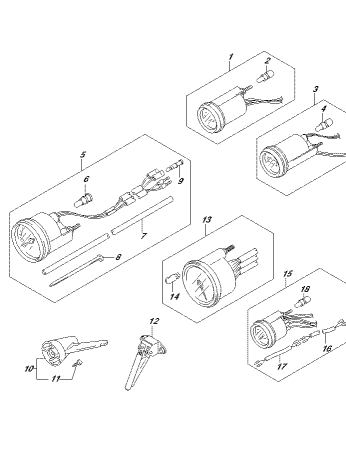


DT40NC_PAS_516_501B
OPT-METER

FIG.501C

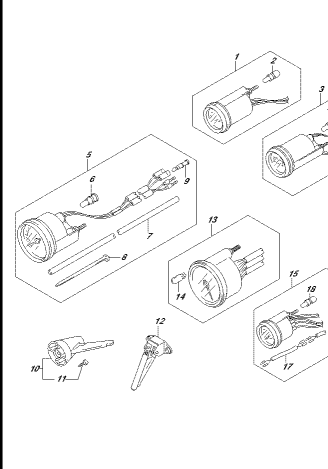


DT40NC_PAS_516_501C
OPT-METER

FIG.501D

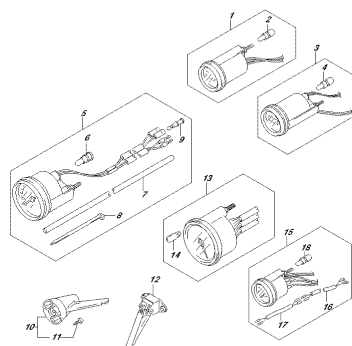


DT40MC_PAS_510L.B01D
OPT. REMOTE CONTROL

FIG.508A

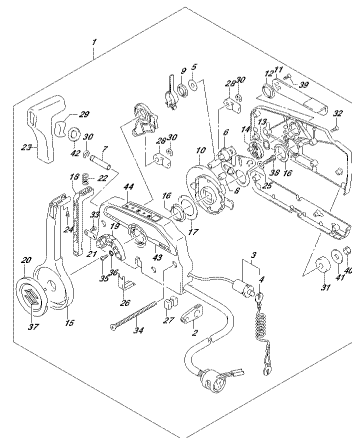


DT40MC_PAS_510L.B00A
OPT. REMOTE CONTROL

FIG.513A

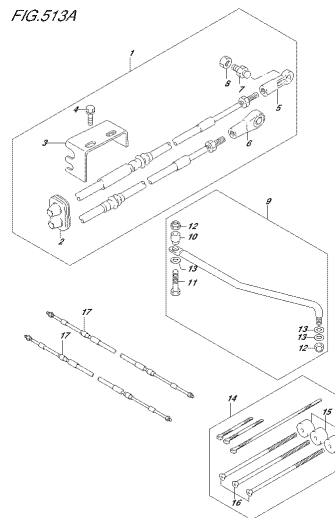


DT40MC_PAS_510L.B13A
OPT. REMOTE CONTROL PARTS

FIG.513B

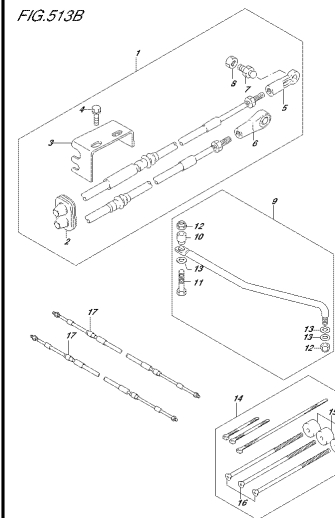


DT40MC_PAS_510L.B13B
OPT. REMOTE CONTROL PARTS

FIG.513C

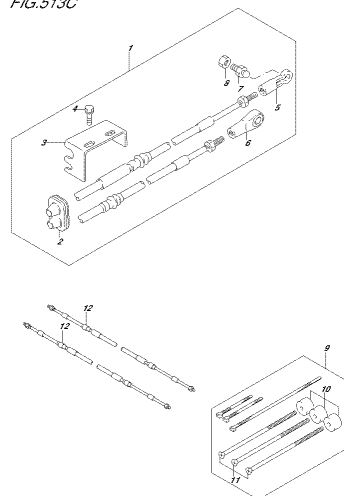


DT40MC_PAS_510L.B13C
OPT. REMOTE CONTROL PARTS

FIG.513D

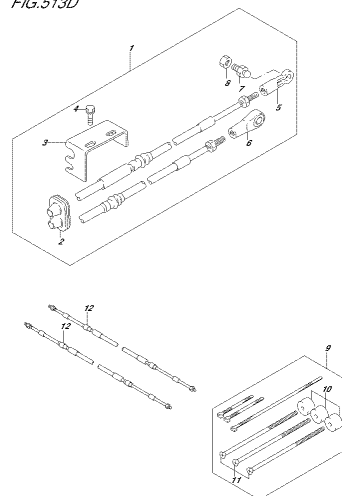


DT40MC_PAS_510L.B13D
OPT. REMOTE CONTROL PARTS

FIG.513E

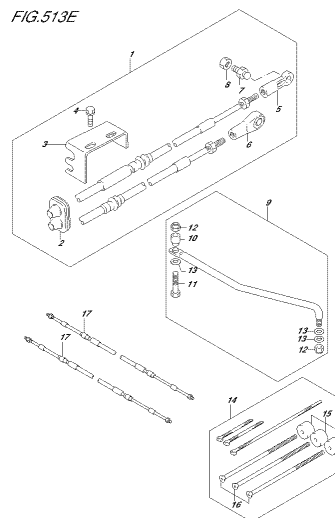


DT40MC_PAS_510L.B13E
OPT. REMOTE CONTROL PARTS

FIG.550A

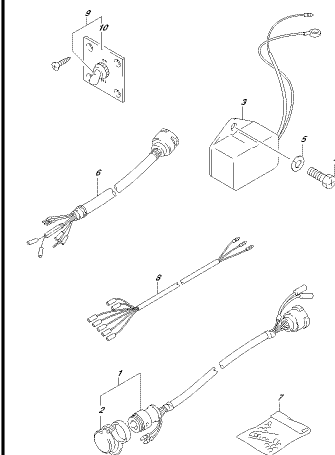


DT40MC_PAS_510L.B50A
OPT. ELECTRICAL

FIG.550B

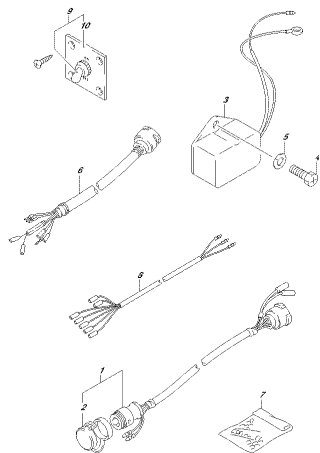


DT40MC_PAL_516L_550B
OPT.ELECTRONIC

FIG.553A

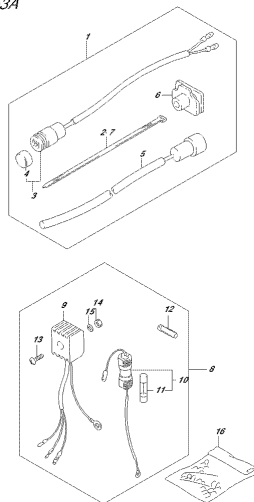


DT40MC_PAL_516L_553A
OPT.ELECTRONIC (MANUAL STARTER)

FIG.553B

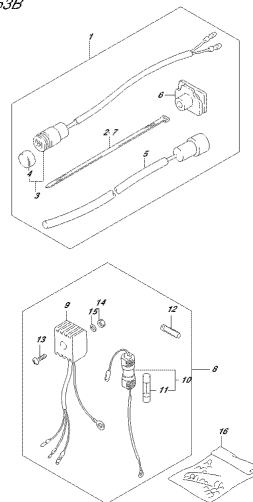


DT40MC_PAL_516L_553B
OPT.ELECTRONIC (MANUAL STARTER)

FIG.553C

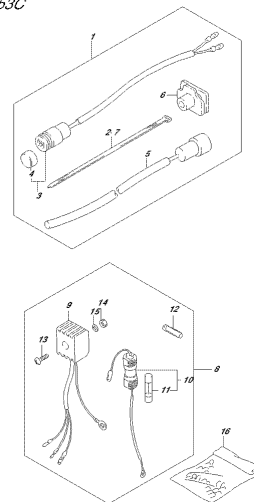


DT40MC_PAL_516L_553C
OPT.ELECTRONIC (MANUAL STARTER)

FIG.554A

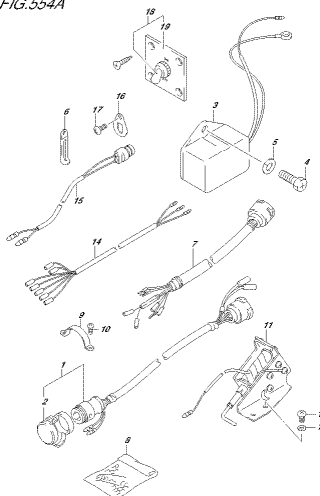


DT40MC_PAL_516L_554A
OPT.ELECTRONIC (ELECTRIC STARTER)

FIG.554B

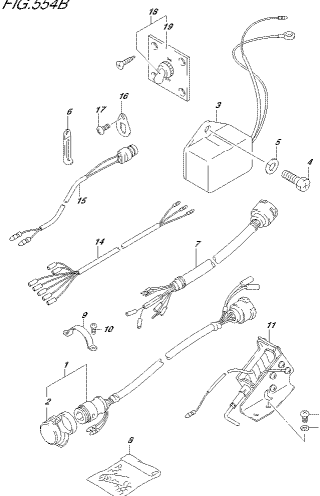


DT40MC_PAL_516L_554B
OPT.ELECTRONIC (ELECTRIC STARTER)

FIG.561A

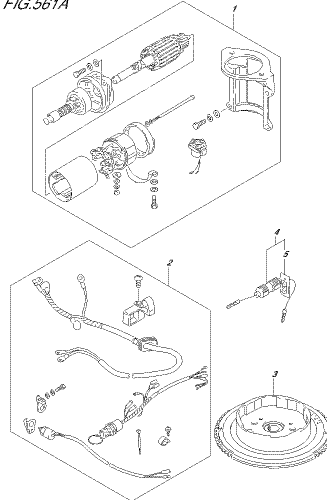


DT40MC_PAL_516L_561A
OPT.STARTING INCH (MANUAL STARTER)

FIG.561B

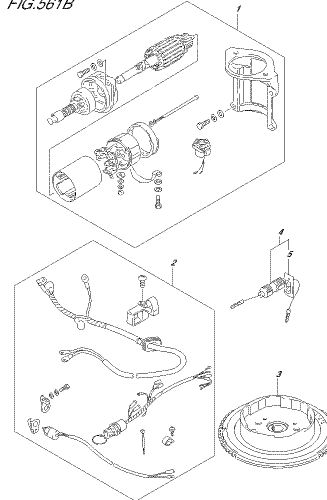


DT40MC_PAL_516L_561B
OPT.STARTING INCH (MANUAL STARTER)

FIG.570A

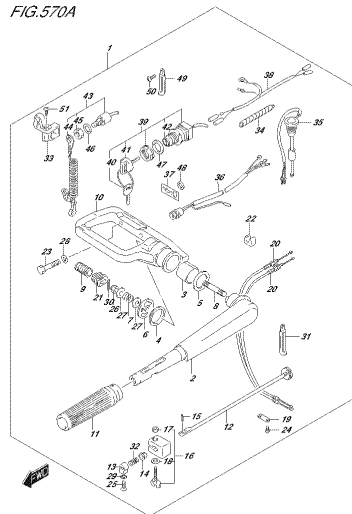


DETACHABLE HANDLE
DETACHABLE HANDLE

FIG.570B

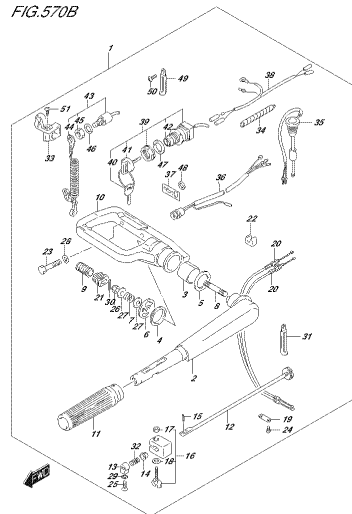

DETACHABLE HANDLE
DETACHABLE HANDLE

FIG.10AA

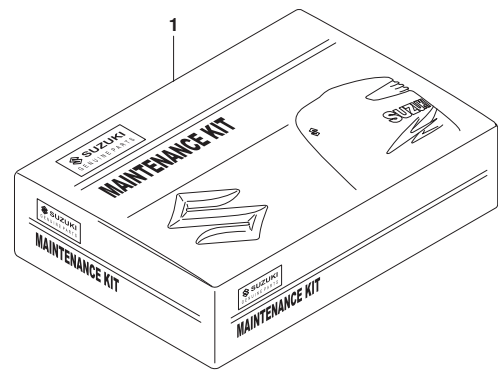

DT40W_P40_016_10AA
MAINTENANCE KIT

FIG.10AA (1-B-2) MAINTENANCE KIT (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

DT40W_P40_016

FIG.10AB


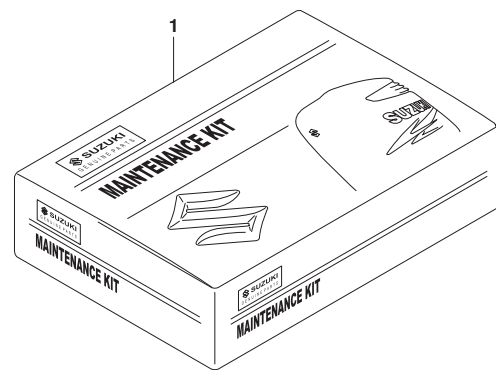


FIG.10AB (1-B-3) MAINTENANCE KIT (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

FIG.10AC

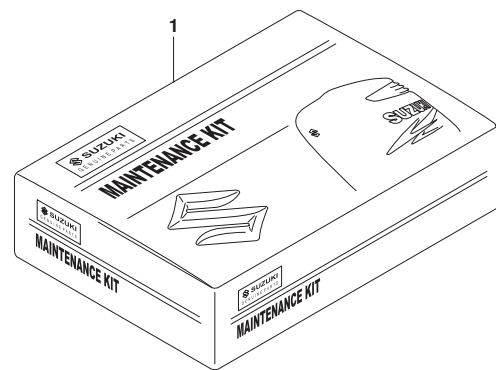

DT40W_P40_016_10AC
MAINTENANCE KIT

FIG.10AC (1-B-4) MAINTENANCE KIT (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

DT40W_P40_016

FIG.10AD

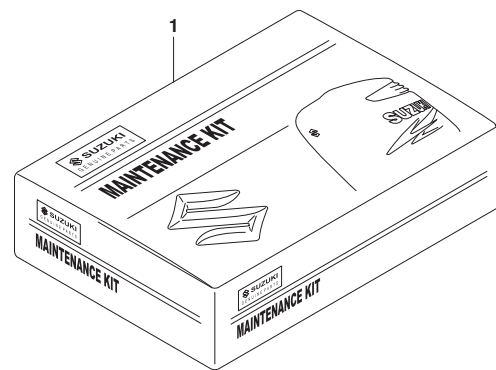


FIG.10AD (1-B-5) MAINTENANCE KIT (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

FIG.112A

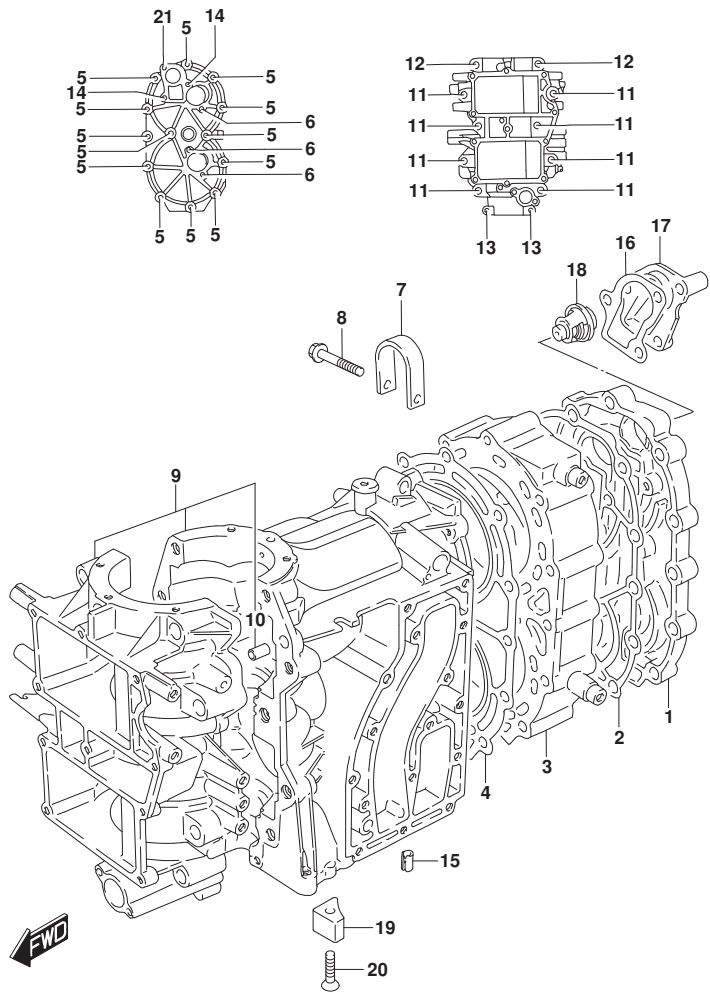


FIG.112A (1-B-6) CYLINDER (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-06307	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.KNOCK PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-06307	BOLT	1	

FIG.112B

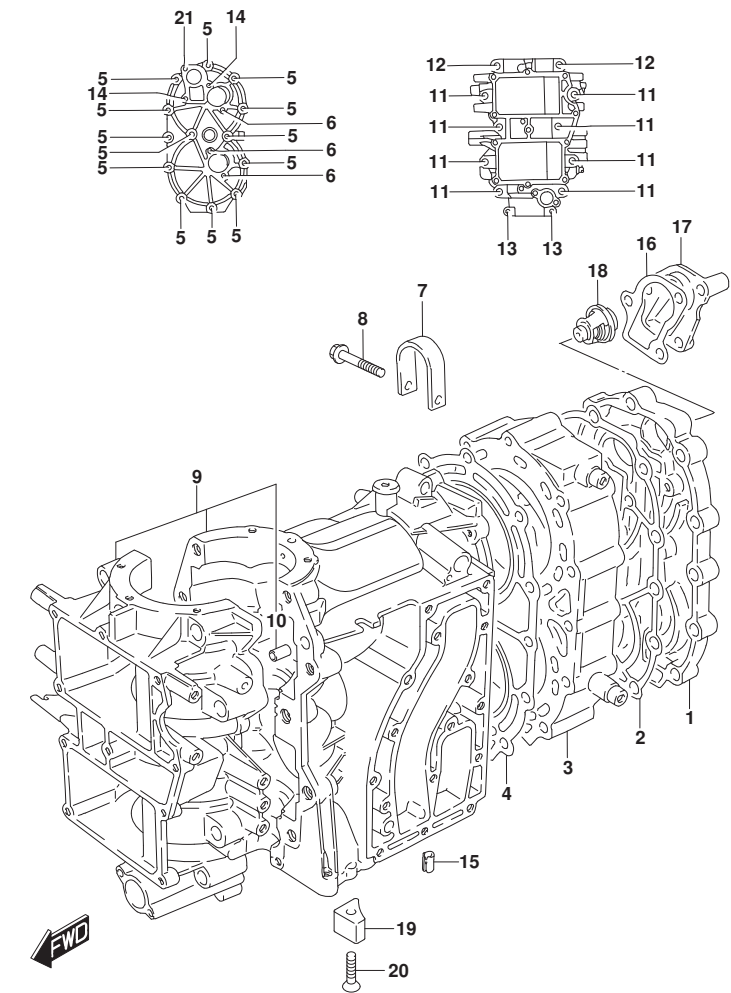


FIG.112B (1-B-7) CYLINDER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-06307	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.KNOCK PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-06307	BOLT	1	

FIG.112C

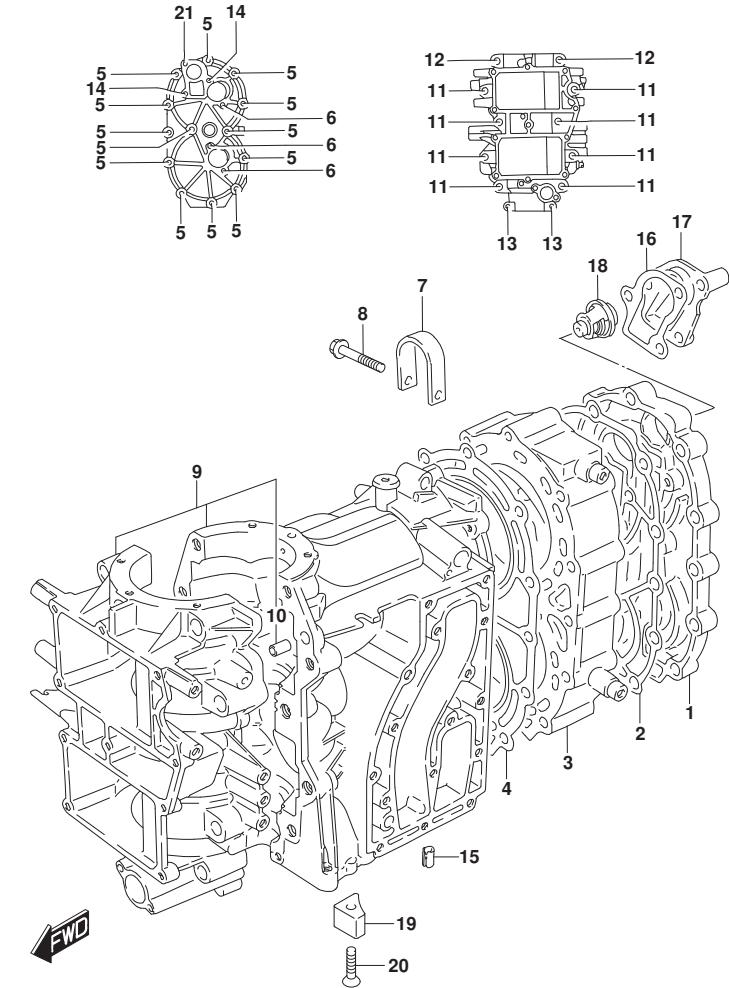


FIG.112C (1-B-8) CYLINDER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-06307	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.KNOCK PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-06307	BOLT	1	

FIG.112D

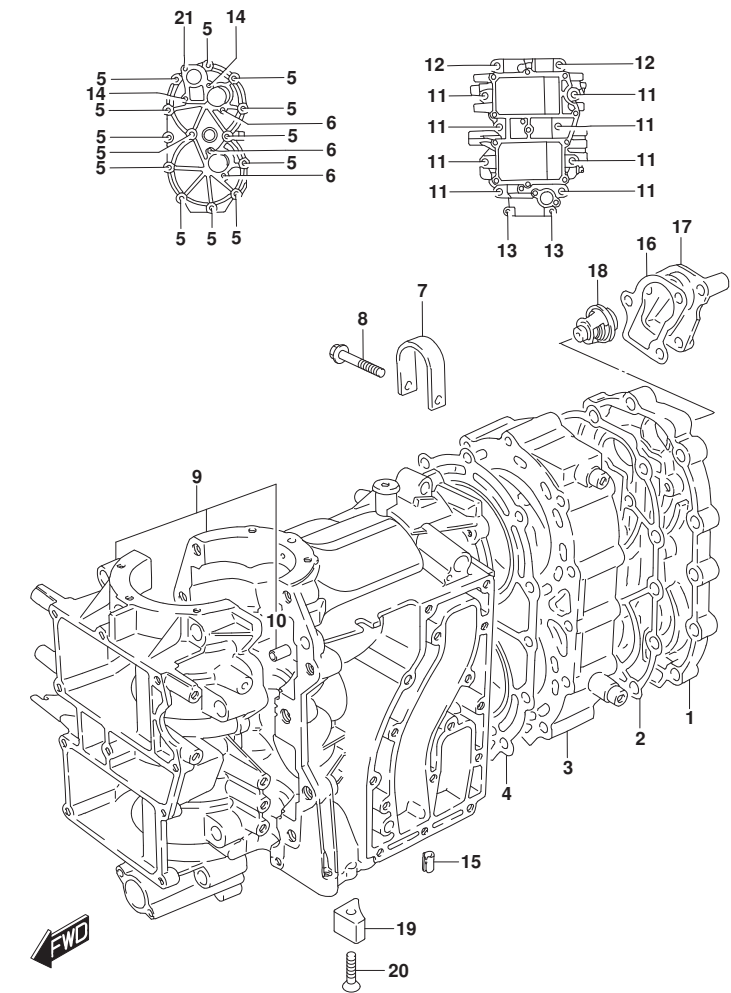


FIG.112D (1-B-9) CYLINDER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-06307	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.KNOCK PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-06307	BOLT	1	

FIG.112E

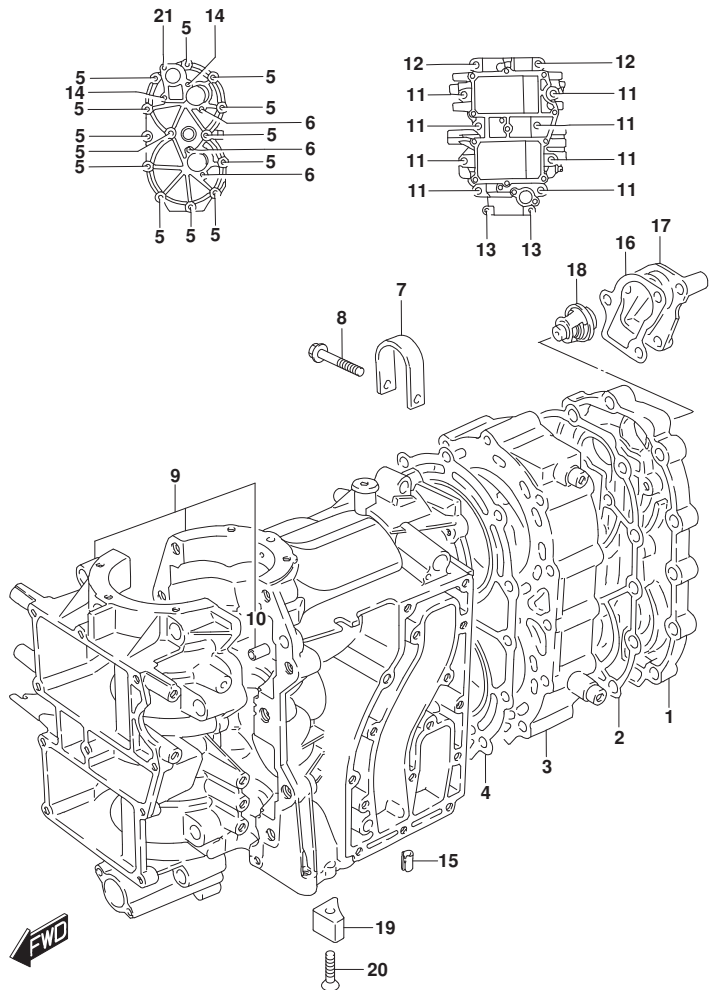


FIG.112E (1-B-10) CYLINDER (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L30	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-06307	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.KNOCK PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-94402	THERMOSTAT (60sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-06307	BOLT	1	

FIG.116A

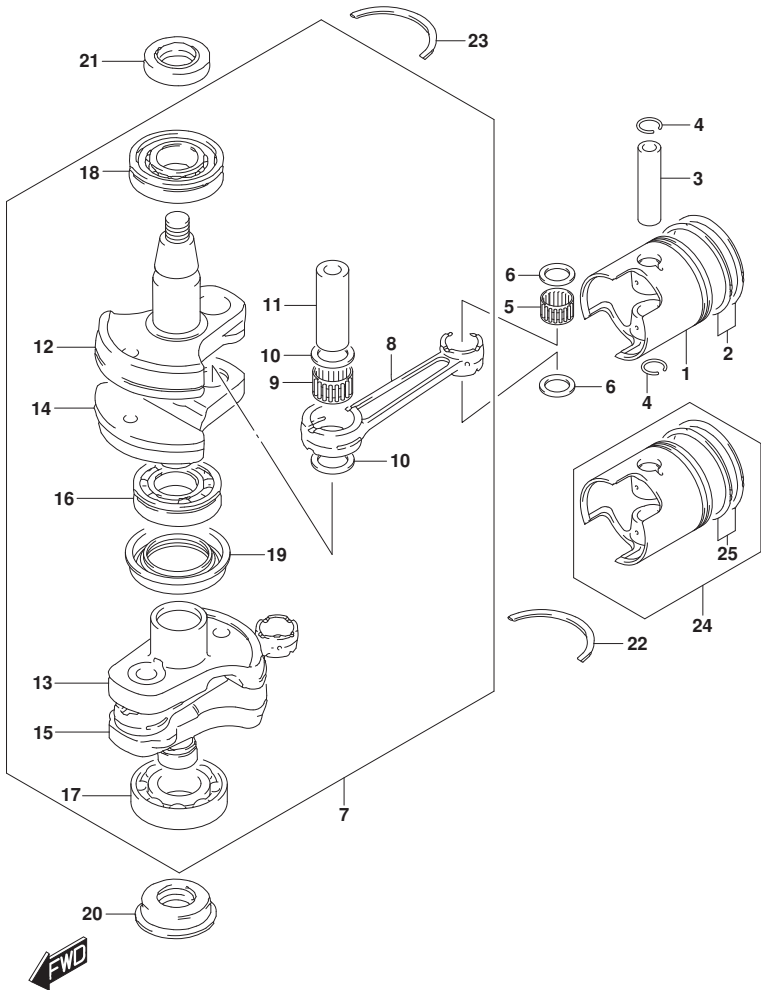


FIG.116A (1-B-11) CRANKSHAFT (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27L01	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35L01	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116B

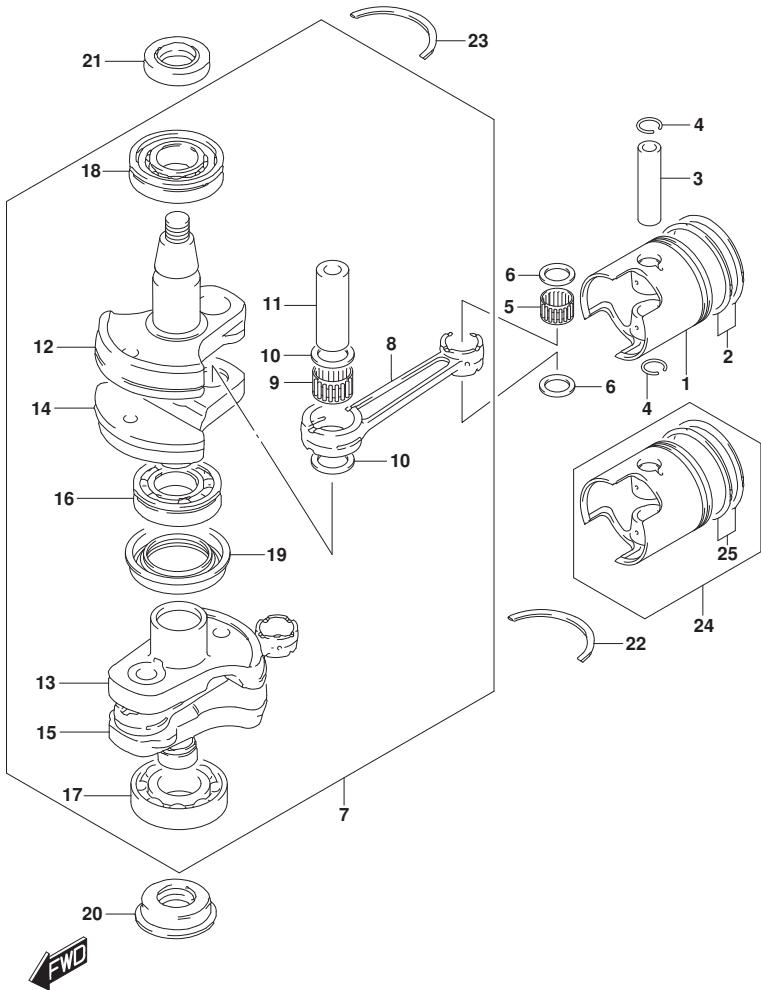


FIG.116B (1-B-12) CRANKSHAFT (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27L01	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35L01	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116C

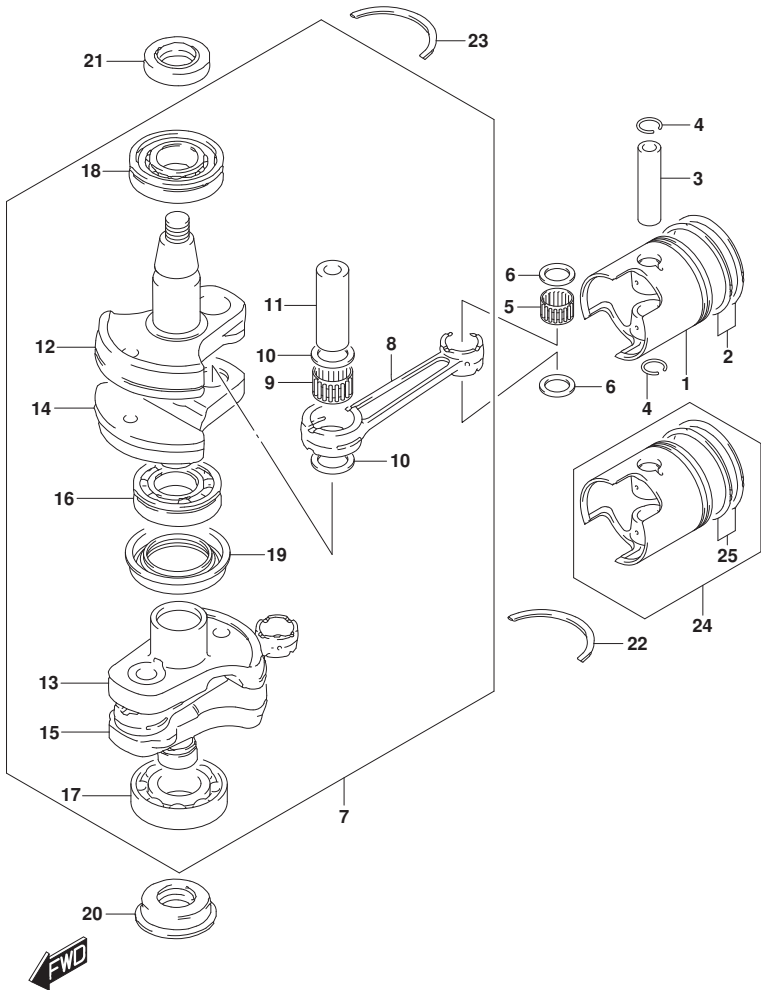


FIG.116C (1-B-13) CRANKSHAFT (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27L01	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35L01	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116D

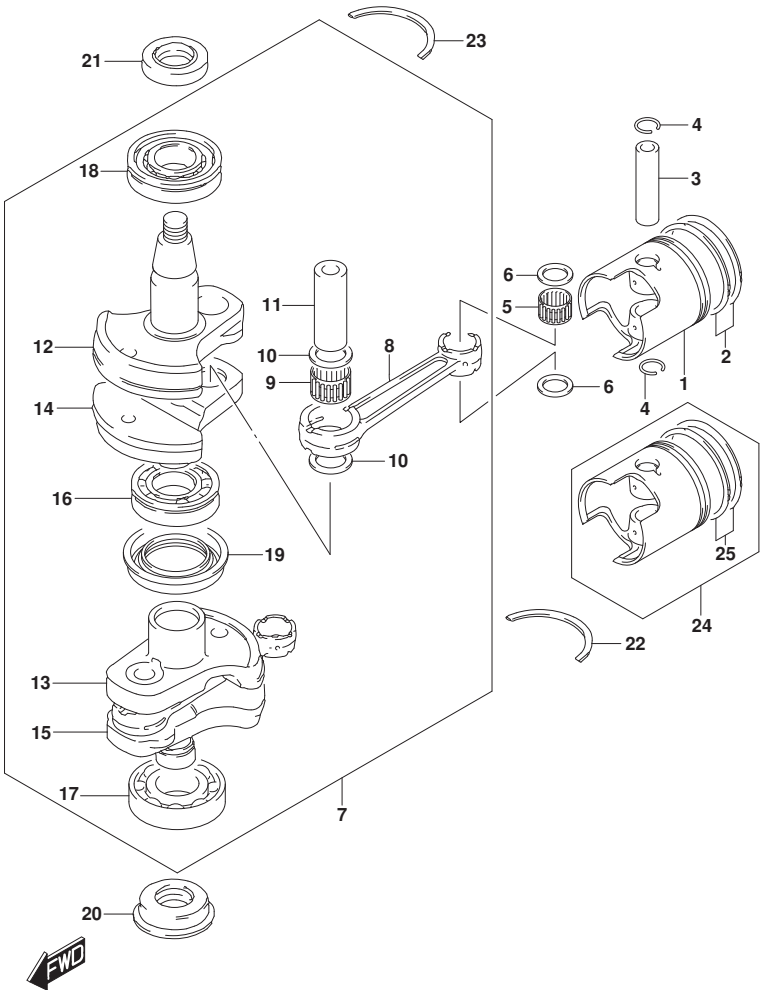


FIG.116D (1-B-14) CRANKSHAFT (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27L01	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35L01	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116E

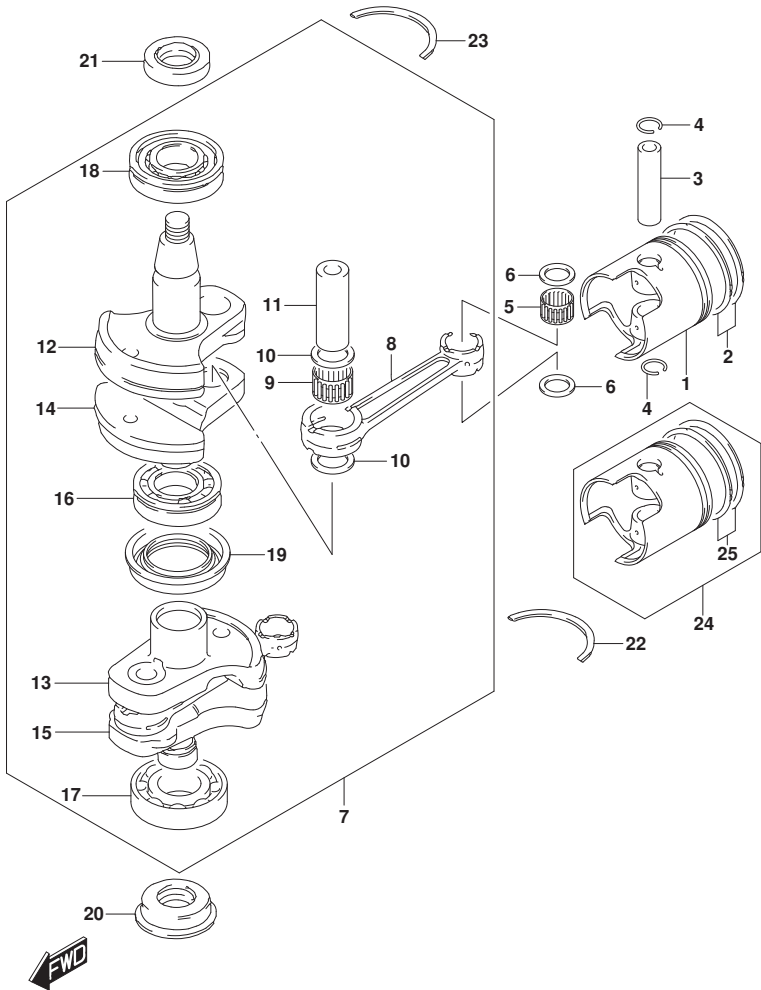


FIG.116E (1-B-15) CRANKSHAFT (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-92L20-0B0	PISTON	2	
2	12140-94410	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27008	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35L01	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.125A

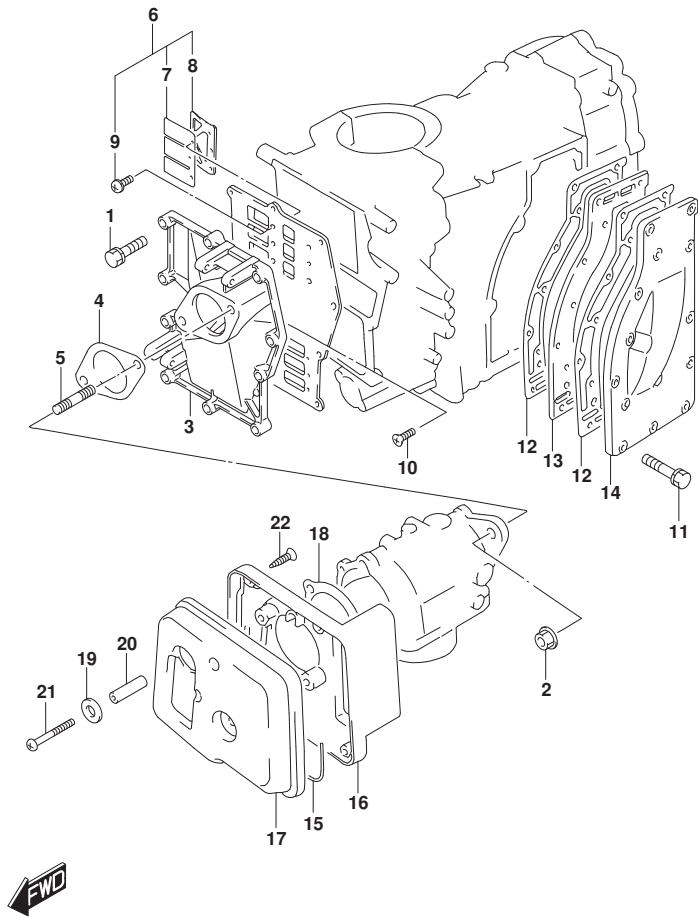


FIG.125A (1-C-2) INLET CASE (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-06307	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-06307	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L00	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09160-06066	WASHER (6.5X20X1.6)	2	
20	09180-06254	SPACER (6.1X8X34)	2	
21	09125-06089	SCREW (6X45)	2	
22	03222-0520B	SCREW	5	

FIG.125B

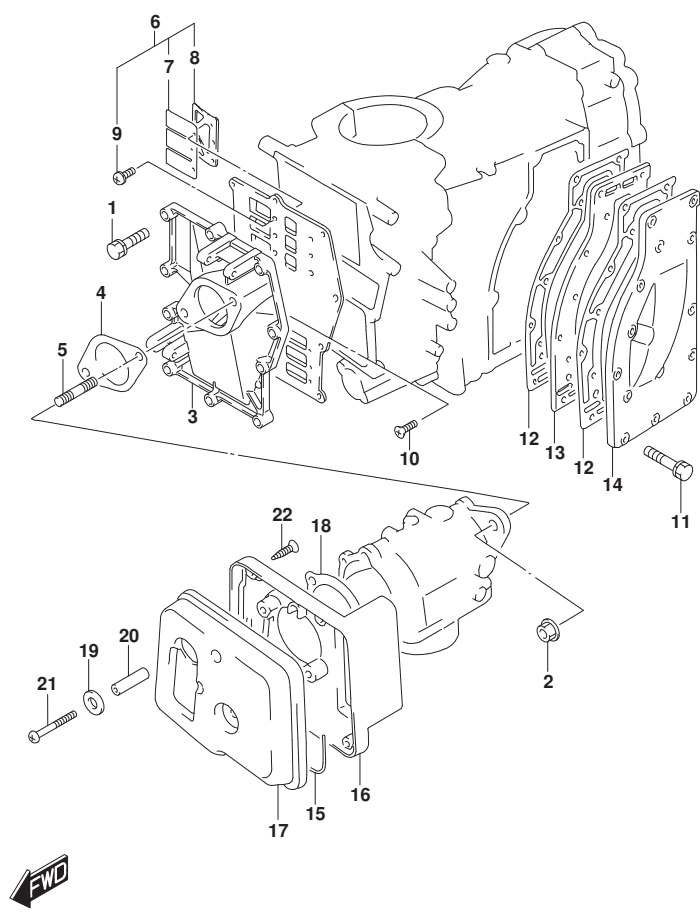


FIG.125B (1-C-3) INLET CASE (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-06307	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-06307	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L00	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09160-06066	WASHER (6.5X20X1.6)	2	
20	09180-06254	SPACER (6.1X8X34)	2	
21	09125-06089	SCREW (6X45)	2	
22	03222-0520B	SCREW	5	

FIG.125C

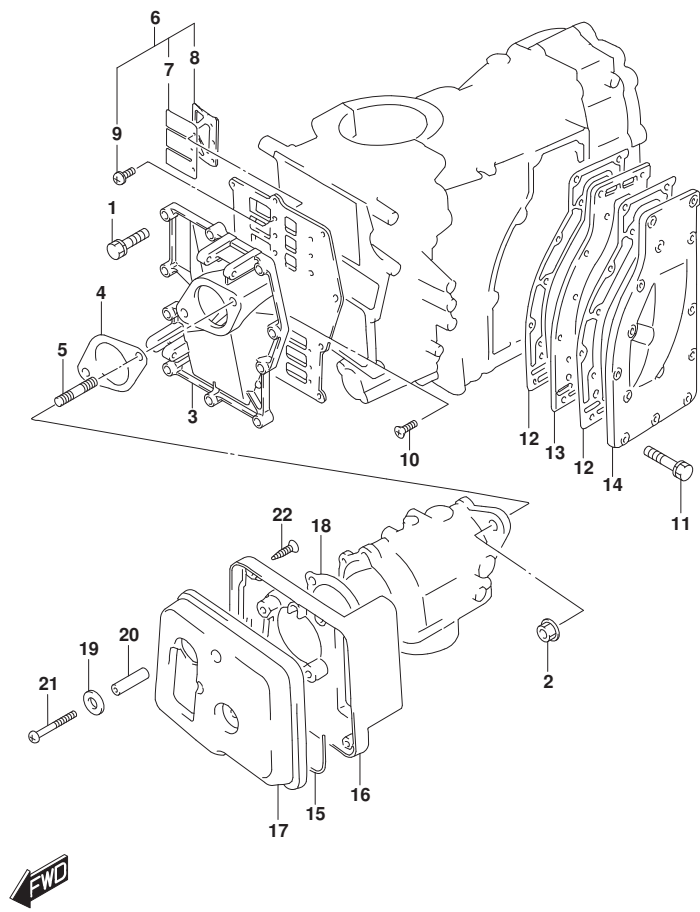


FIG.125C (1-C-4) INLET CASE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-06307	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-06307	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L00	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09160-06066	WASHER (6.5X20X1.6)	2	
20	09180-06254	SPACER (6.1X8X34)	2	
21	09125-06089	SCREW (6X45)	2	
22	03222-0520B	SCREW	5	

FIG.125D

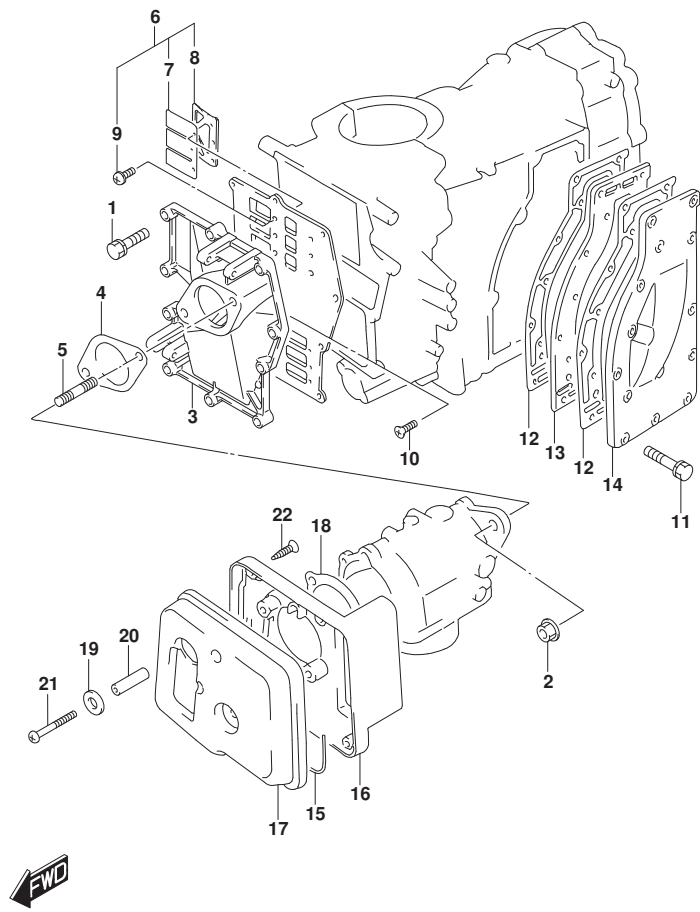


FIG.125D (1-C-5) INLET CASE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-06307	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-06307	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L00	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09160-06066	WASHER (6.5X20X1.6)	2	
20	09180-06254	SPACER (6.1X8X34)	2	
21	09125-06089	SCREW (6X45)	2	
22	03222-0520B	SCREW	5	

FIG.125E

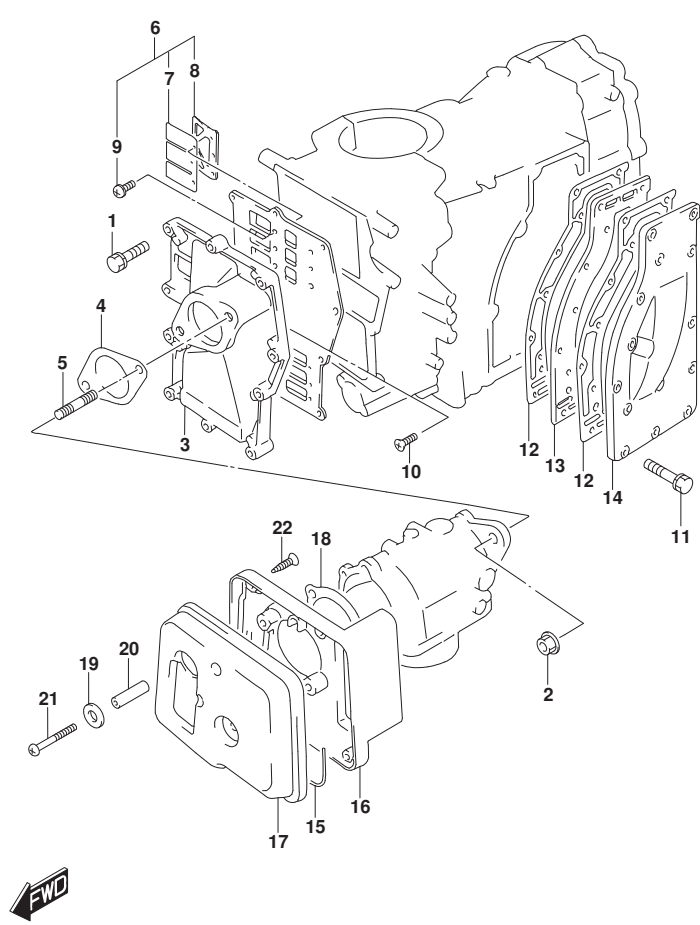


FIG.125E (1-C-6) INLET CASE (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-06307	BOLT	10	
2	08316-10087	NUT	2	
3	13111-94450-0EP	CASE, INLET (BLACK)	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	1	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-06307	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L00	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09160-06066	WASHER (6.5X20X1.6)	2	
20	09180-06254	SPACER (6.1X8X34)	2	
21	09125-06089	SCREW (6X45)	2	
22	03222-0520B	SCREW	5	

FIG.128A

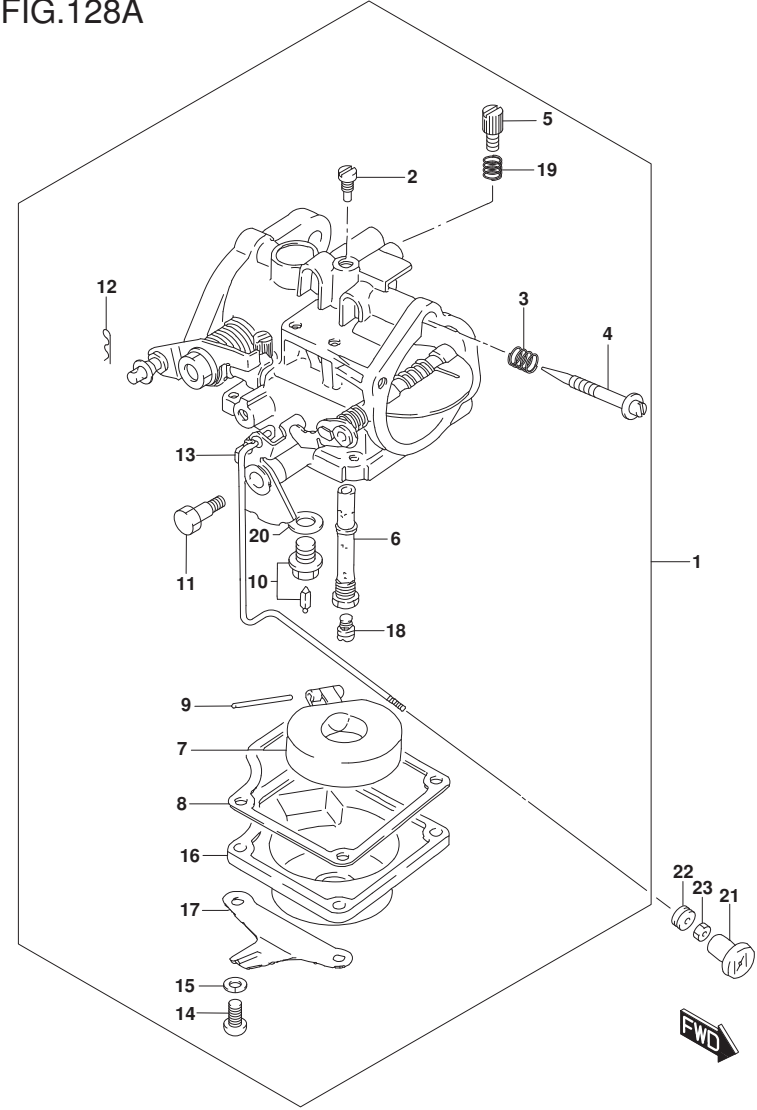


FIG.128A (1-C-7) CARBURETOR (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128B

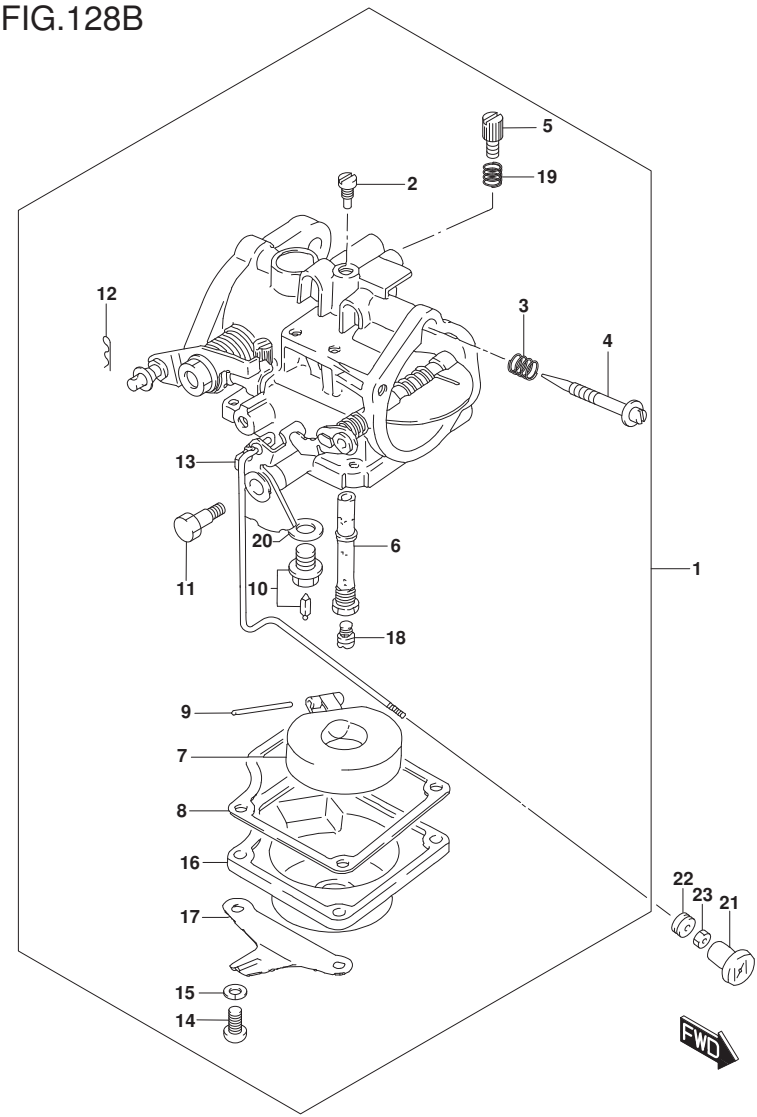


FIG.128B (1-C-8) CARBURETOR (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128C

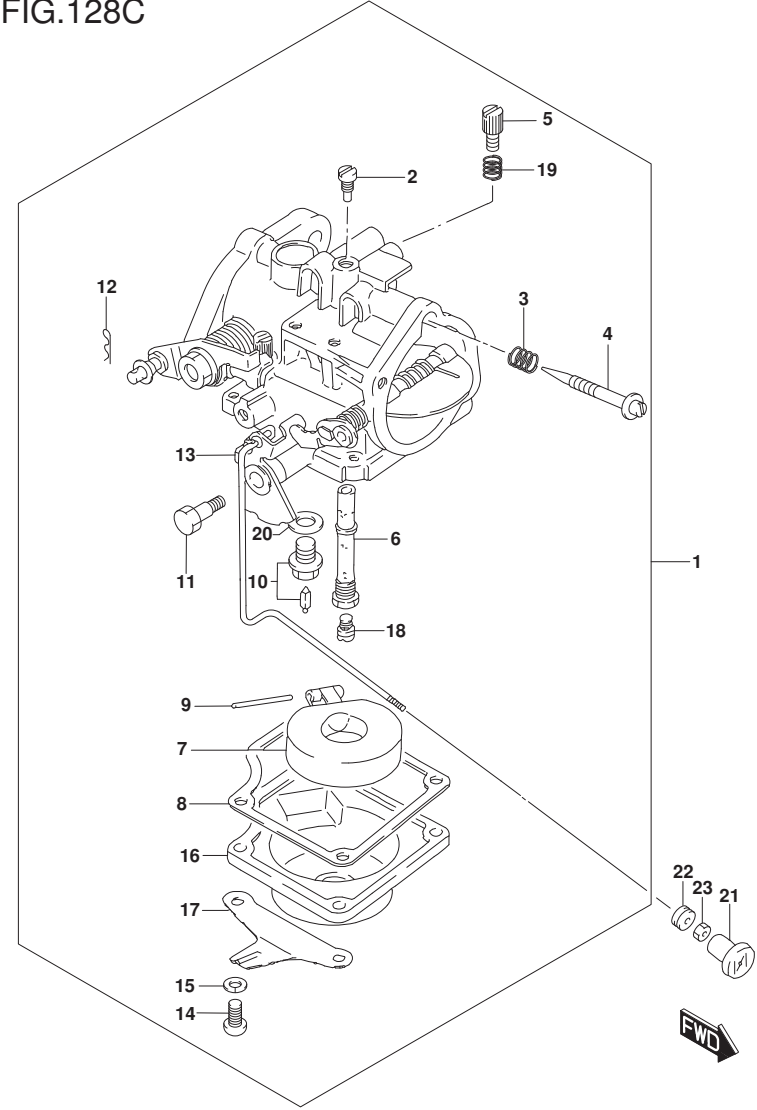


FIG.128C (1-C-9) CARBURETOR (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128D


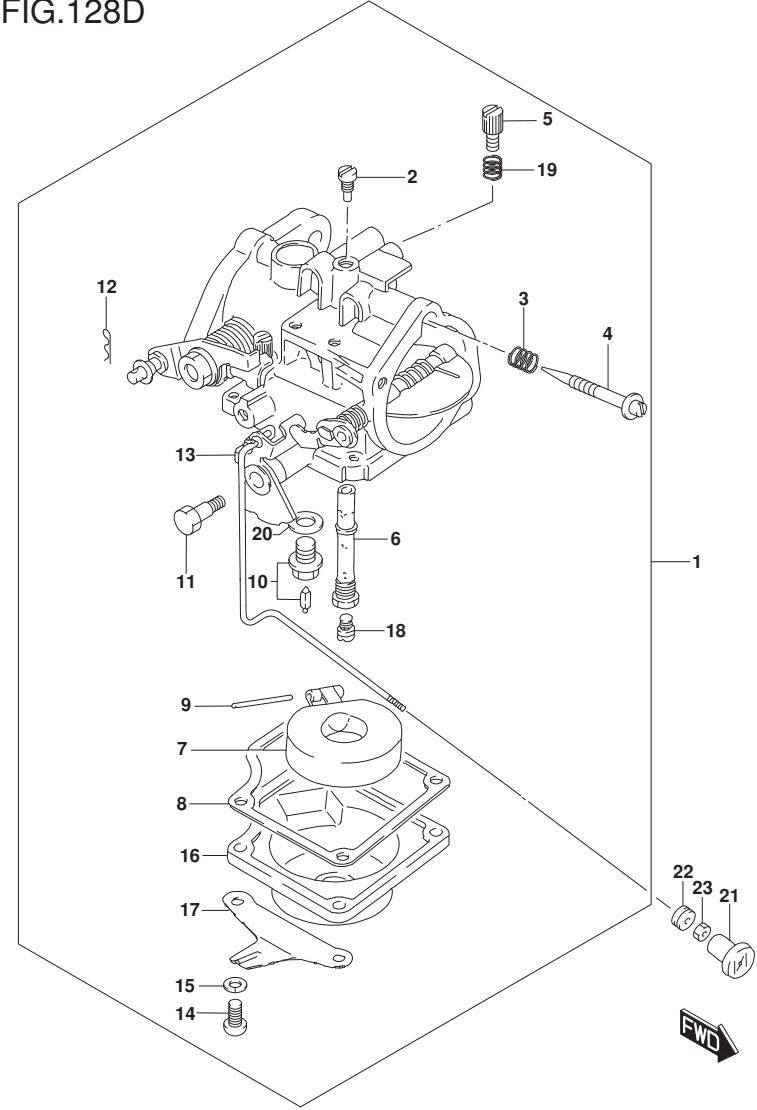


FIG.128D (1-C-10) CARBURETOR (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128E

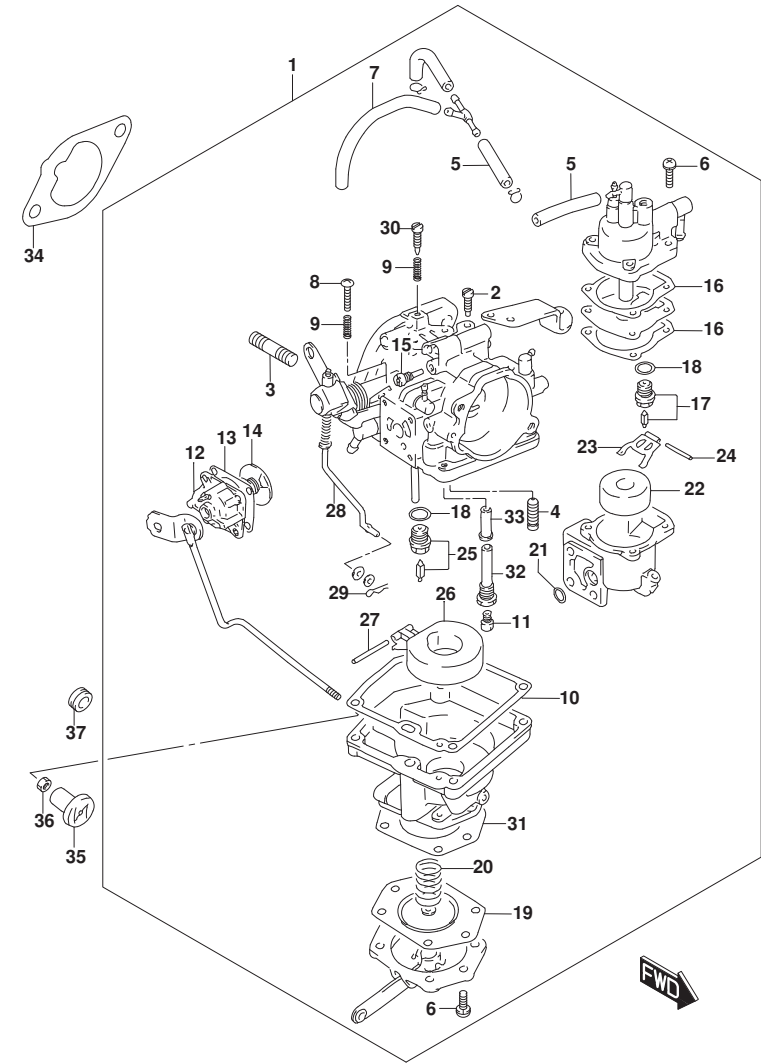

DT40W_P40_016_128E
CARBURETOR

FIG.128E (1-C-11) CARBURETOR (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944D0	CARBURETOR	1	
2	09492-65002	.JET,PILOT (65)	1	FOR GASOLINE
3	01411-0820A	.STUD BOLT	1	
4	13443-94350	.VALVE	1	
5	13651-95300	.HOSE	2	
6	13249-93900	.SCREW	10	
7	13651-95300	.HOSE	1	
8	13534-96300	.SCREW	1	
9	13268-96111	.SPRING	2	
10	13245-94350	.GASKET, FLOAT CHAMBER	1	FOR KEROSENE
11	09491-38008	.JET, MAIN (195)	1	
12	13419-94400	.COVER, VALVE	1	
13	13418-94360	.GASKET	1	
14	13415-94350	.DISC, STARTER	1	
15	09492-75001	.JET, PILOT (75)	1	FOR KEROSENE
16	13265-94360	.GASKET	2	FOR GASOLINE
17	13370-94350	.NEEDLE VALVE ASSY	1	FOR GASOLINE
18	13392-58600	.PACKING	2	
19	13450-94350	.DIAPHRAGM ASSY	1	
20	13441-94350	.SPRING	1	
21	13521-78100	.O RING	1	
22	13270-94350	.FLOAT	1	FOR GASOLINE
23	13282-94350	.ARM	1	
24	13254-98410	.PIN	1	FOR GASOLINE
25	13370-27310	.NEEDLE VALVE ASSY	1	FOR KEROSENE
26	13250-93012	.FLOAT ASSY	1	FOR KEROSENE
27	13254-98300	.PIN	1	FOR KEROSENE
28	13462-94351	.ROD	1	
29	13464-96350	.SPRING PIN	1	
30	13269-98100	.SCREW, PILOT	1	
31	13446-94360	.GASKET	1	
32	13236-94460	.NOZZLE, MAIN	1	
33	13237-94460	.NOZZLE	1	

FIG.128E

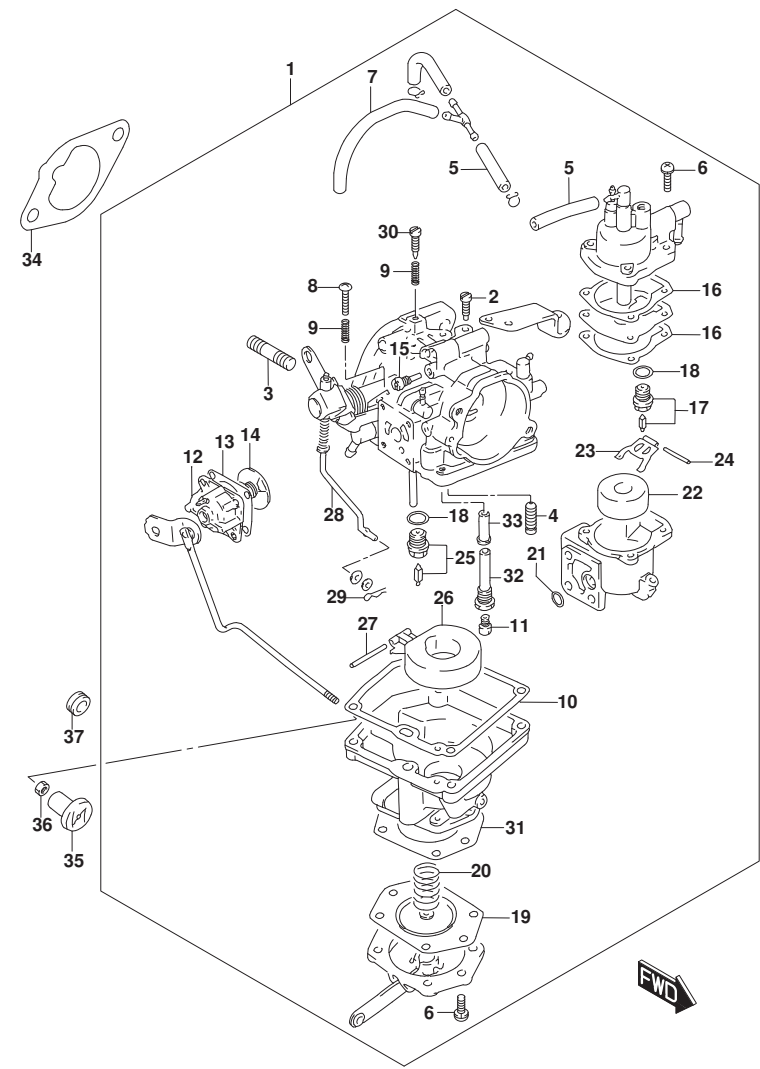


FIG.128E (1-C-12) CARBURETOR (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	13126-94450	PLATE, AIR FLOW CONTROL	1	
35	13631-93501	KNOB, STARTER	1	
36	09140-04007	NUT	1	
37	09320-04009	BUSH	1	
38	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.130A

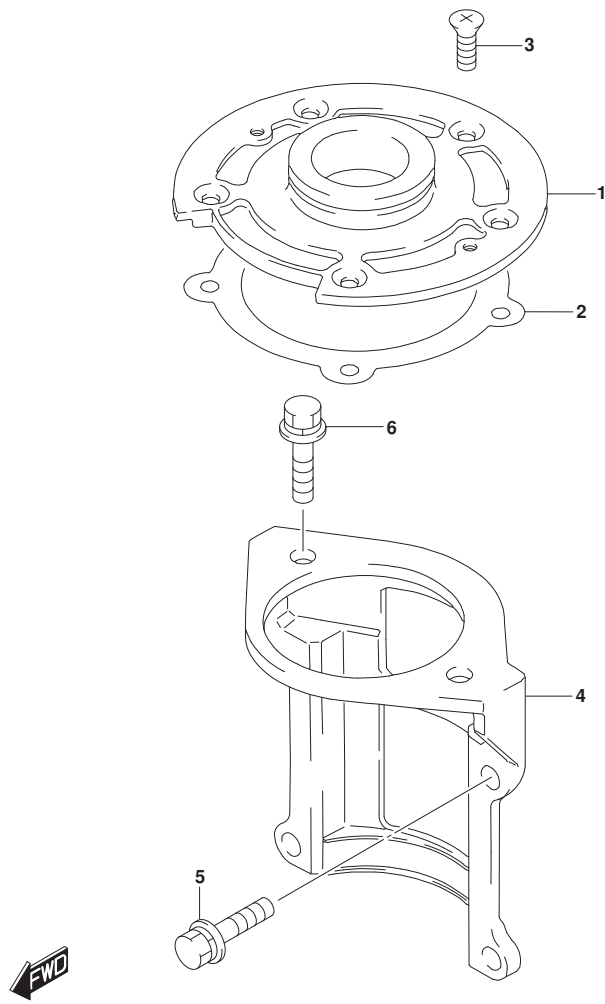


FIG.130A (1-C-13) OIL SEAL HOUSING (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	W/ELECTRIC STARTER
5	01550-08257	BOLT	4	W/ELECTRIC STARTER
6	01580-08257	BOLT	2	W/ELECTRIC STARTER

FIG.130B

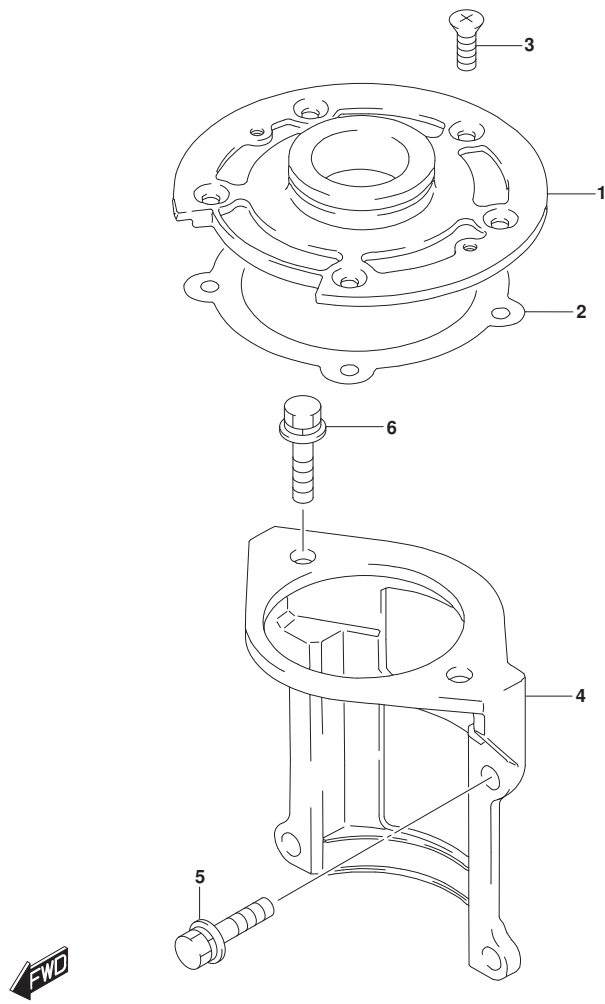


FIG.130B (1-C-14) OIL SEAL HOUSING (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	W/ELECTRIC STARTER
5	01550-08257	BOLT	4	W/ELECTRIC STARTER
6	01580-08257	BOLT	2	W/ELECTRIC STARTER

FIG.130C

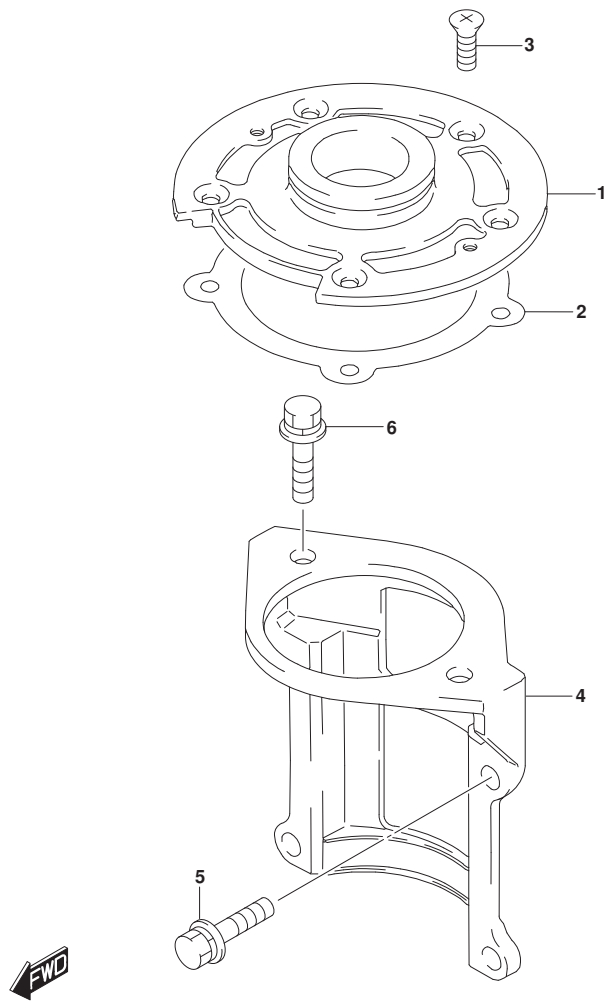


FIG.130C (1-C-15) OIL SEAL HOUSING (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	
5	01550-08257	BOLT	4	
6	01580-08257	BOLT	2	

FIG.130D

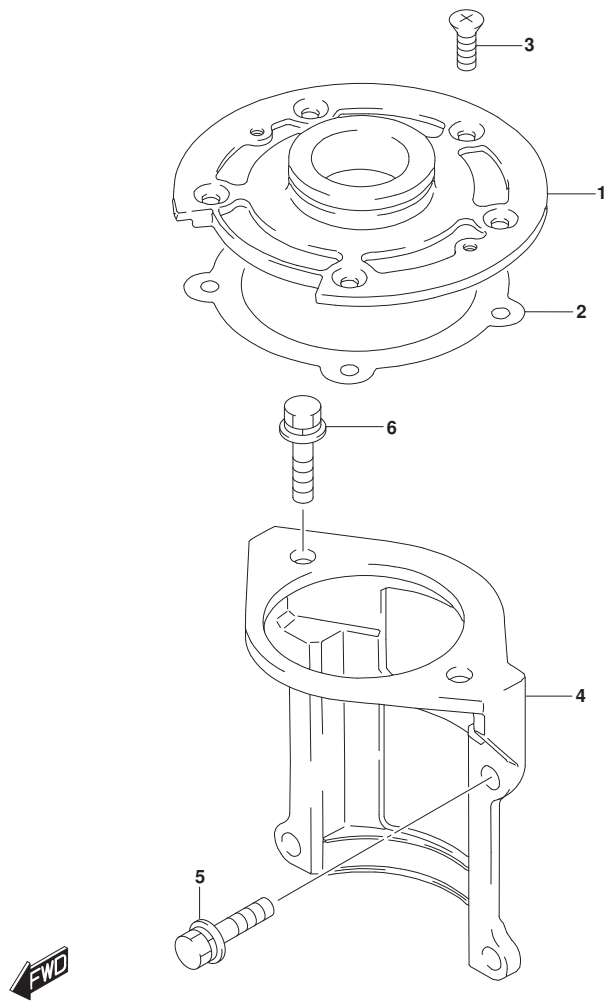


FIG.130D (1-D-2) OIL SEAL HOUSING (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	
5	01550-08257	BOLT	4	
6	01580-08257	BOLT	2	

FIG.130E

FIG.130E (1-D-3) OIL SEAL HOUSING (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	


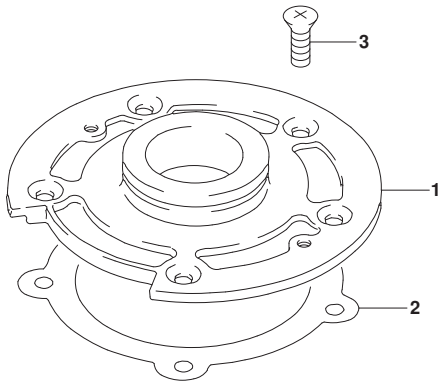


FIG.141A

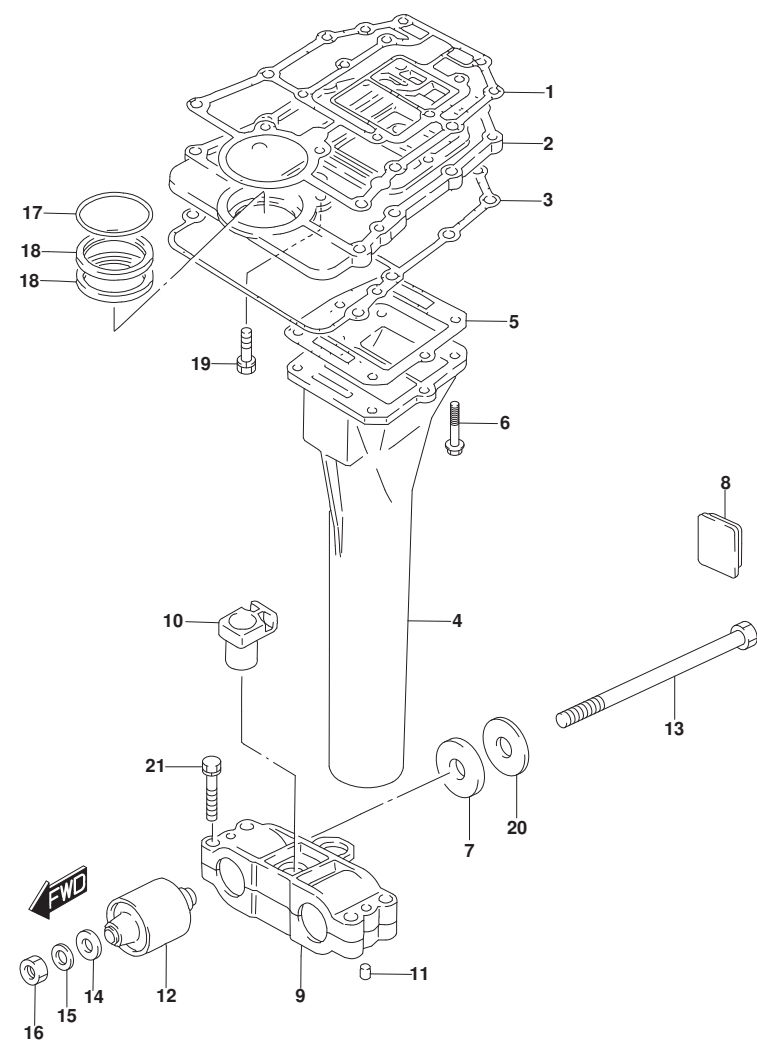


DT40W_P40_016_141A
EXHAUST TUBE

FIG.141A (1-D-4) EXHAUST TUBE (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_016

FIG.141B

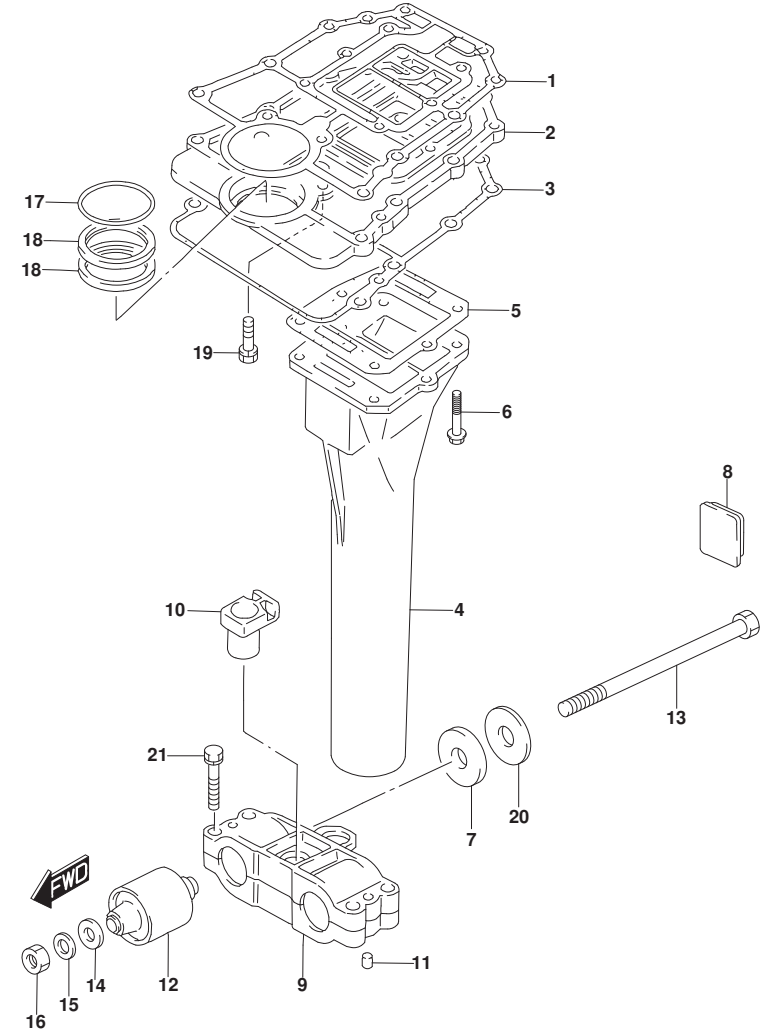

DT40W_P40_016_141B
EXHAUST TUBE

FIG.141B (1-D-5) EXHAUST TUBE (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_016

FIG.141C (1-D-6) EXHAUST TUBE (DT40WR P40)


DT40W_P40_016

FIG.141D (1-D-7) EXHAUST TUBE (DT40WR P90)


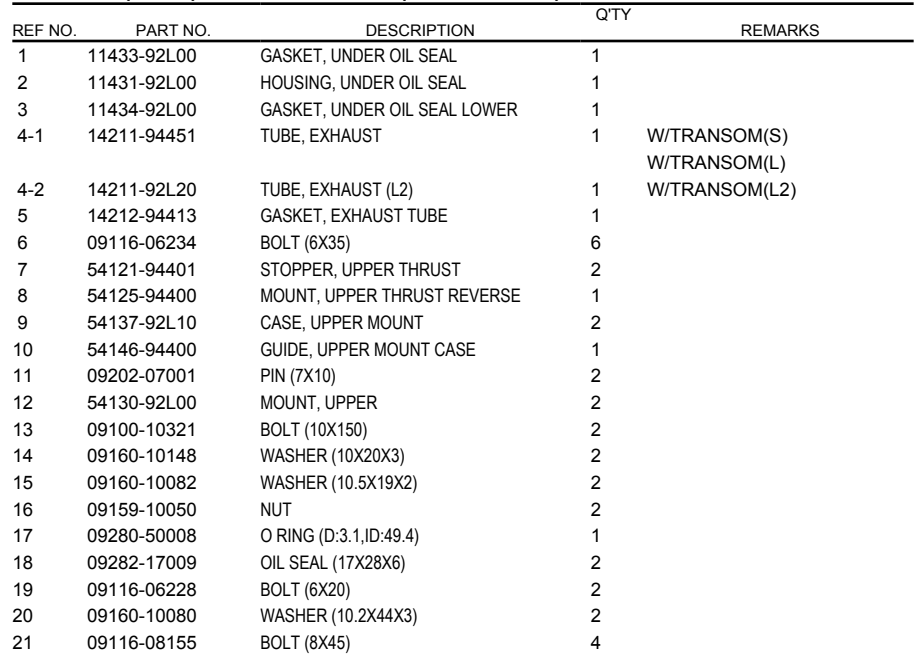


FIG.141E

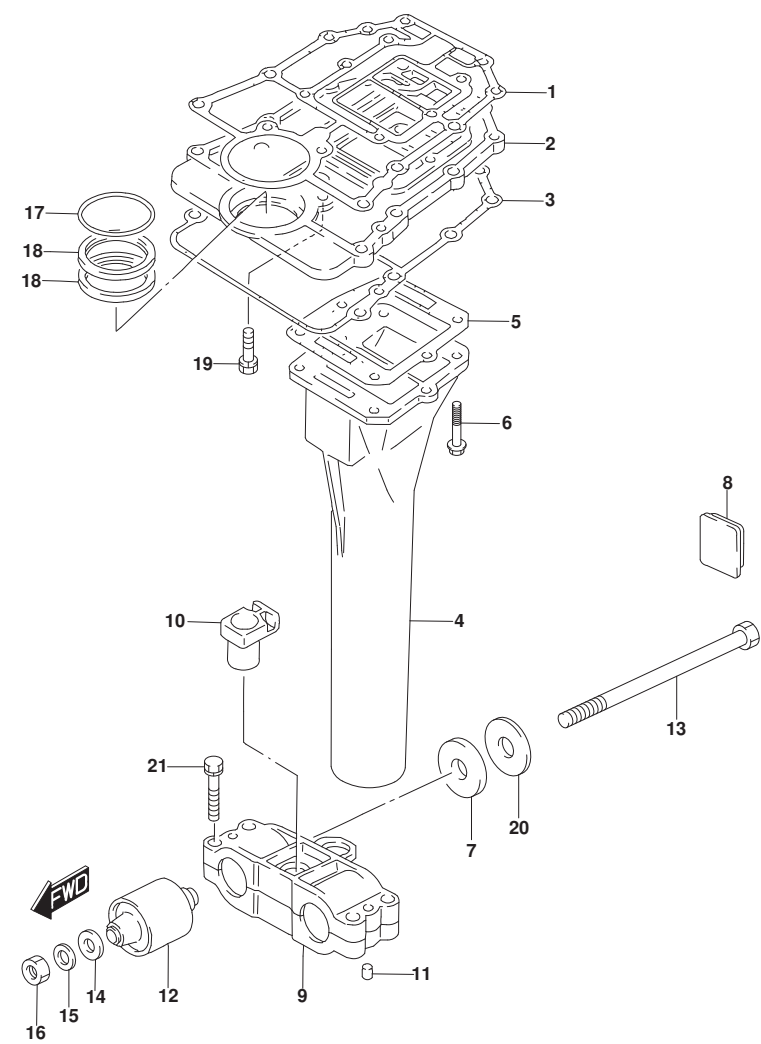

DT40W_P40_016_141E
EXHAUST TUBE

FIG.141E (1-D-8) EXHAUST TUBE (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_016

FIG.146A (1-D-9) FUEL PUMP (DT40W P40)


DT40W_P40_016

FIG.146B

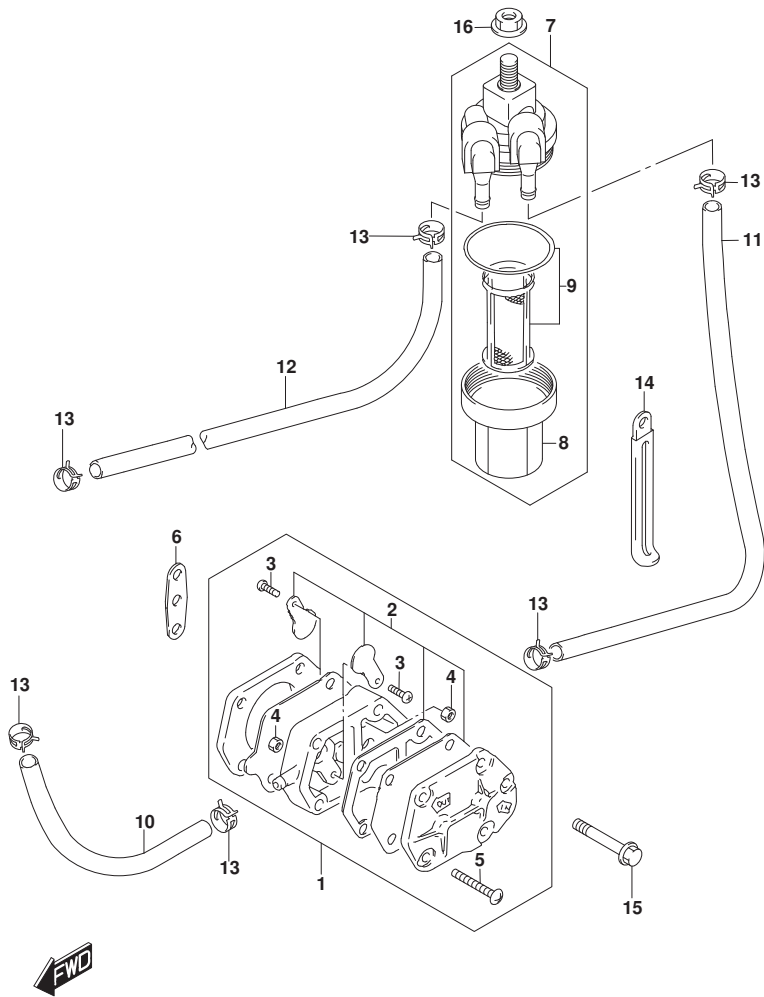


FIG.146B (1-D-10) FUEL PUMP (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94311	PUMP, FUEL	1	
2	15170-94320	.DIAPHRAGM SET	1	
3	15183-94301	.SCREW	2	
4	15186-94300	.NUT	2	
5	15851-94300	.SCREW	3	
6	15321-99710	GASKET, FUEL PUMP	1	
7	15410-94400	FILTER ASSY, FUEL	1	
8	15413-87D10	.CUP	1	
9	15430-87D10	.ELEMENT SET	1	
10	15211-91J00-110	HOSE, FUEL (PUMP TO CARB)	1	
11	15211-91J00-135	HOSE, FUEL (FILTER TO PUMP)	1	
12	15211-91J00-400	HOSE, FUEL (CONNECTOR TO FILTER)	1	
13	09401-08413	CLIP	6	
14	29404-93J10	CLAMP	1	
15	01547-06407	BOLT	2	
16	08316-10087	NUT	1	

FIG.146C (1-D-11) FUEL PUMP (DT40WR P40)


DT40W_P40_016

FIG.146D (1-D-12) FUEL PUMP (DT40WR P90)



DT40W_P40_016

FIG.146E

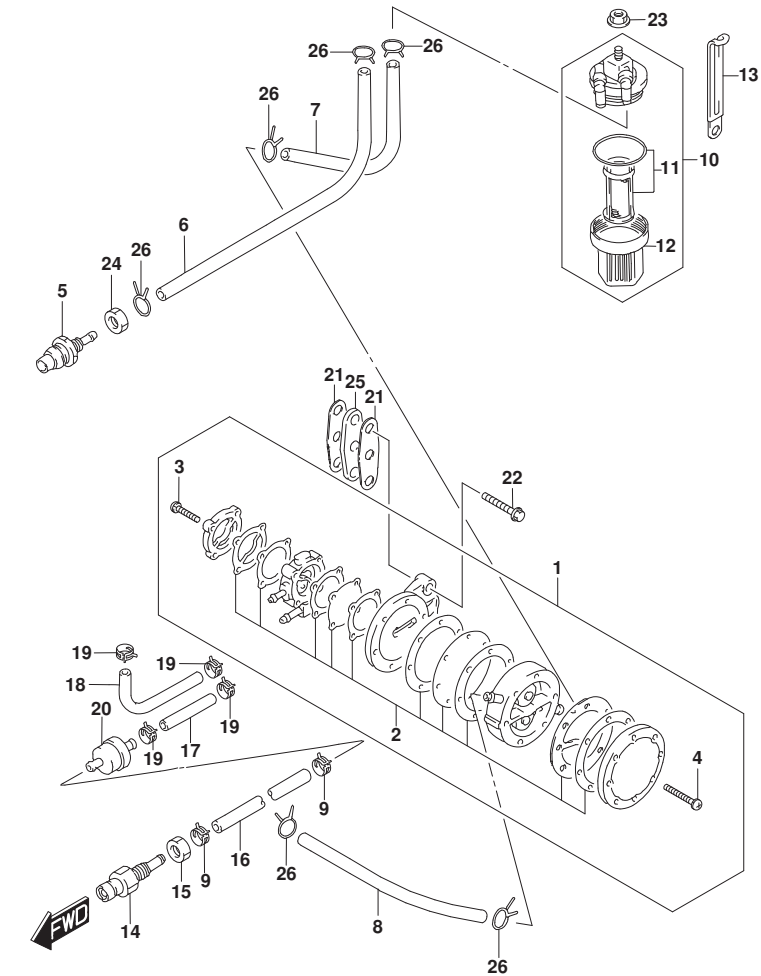

DT40W_P40_016_146E
FUEL PUMP

FIG.146E (1-D-13) FUEL PUMP (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94460	PUMP ASSY, FUEL	1	
2	15170-94460	.DIAPHRAGM SET	1	
3	15251-94450	.SCREW	4	
4	15251-94470	.SCREW	6	
5	65720-985L1	PLUG, FUEL CONNECTOR	1	FOR KEROSENE
6	09355-50108-370	HOSE (5X10X370)	1	FOR KEROSENE CONN TO FILTER
7	09355-50108-135	HOSE (5X10X135)	1	FOR KEROSENE FILTER TO PUMP
8	09355-50108-260	HOSE (5X10X260)	1	FOR KEROSENE PUMP TO CARB
9	09401-10412	CLIP	2	
10	15410-94400	FILTER ASSY, FUEL	1	FOR KEROSENE
11	15430-87D10	.ELEMENT SET	1	
12	15413-87D10	.CUP	1	
13	29404-93J10	CLAMP	1	FOR KEROSENE
14	65720-955L0	PLUG, FUEL CONNECTOR	1	FOR GASOLINE
15	09140-12038	NUT	1	FOR GASOLINE
16	09352-70113-600	HOSE (7X11X600)	1	L:600->150 FOR GASOLINE CONN TO FILTER
17	15211-91J00-050	HOSE, FUEL (FILTER TO PUMP)	1	FOR GASOLINE
18	15211-91J00-140	HOSE, FUEL (PUMP TO CARB)	1	FOR GASOLINE
19	09401-08413	CLIP	4	
20	15410-94350	FILTER, FUEL	1	FOR GASOLINE
21	15321-96300	GASKET, FUEL PUMP	2	
22	01550-06307	BOLT	2	
23	08316-10087	NUT	1	
24	09140-10032	NUT	1	FOR KEROSENE
25	15322-96300	INSULATOR, FUEL PUMP	1	
26	59412-91J00	CLIP	6	

DT40W_P40_016

FIG.160A

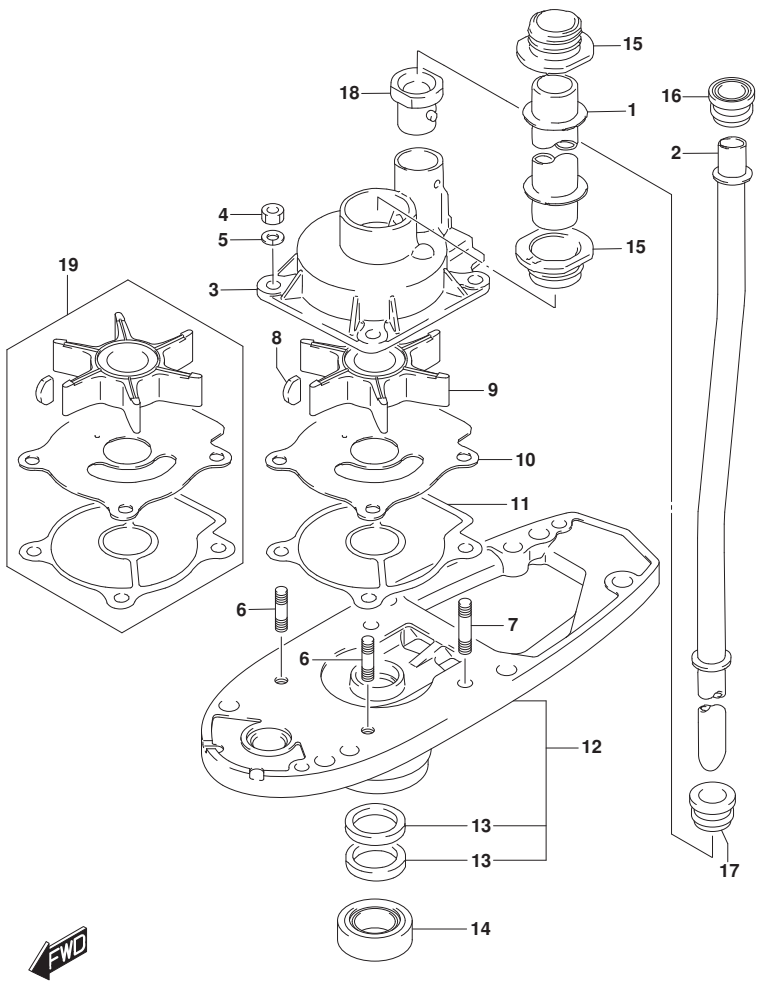


FIG.160A (1-D-14) WATER PUMP (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	17431-92L10	TUBE, WATER PUMP SEAL (S)	1	W/TRANSOM(S) L:21
1-2	17431-92L20	TUBE, WATER PUMP SEAL (L)	1	W/TRANSOM(L) L:126
1-3	17431-92L00	TUBE, WATER PUMP SEAL (L2)	1	W/TRANSOM(L2) L:173
2-1	17561-92L50	TUBE, WATER (S)	1	W/TRANSOM(S) L:366
2-2	17561-92L60	TUBE, WATER (L)	1	W/TRANSOM(L) L:446
2-3	17561-92L70	TUBE, WATER (L2)	1	W/TRANSOM(L2) L:493
3	17410-92L00	CASE, WATER PUMP	1	
4	29141-93J00	NUT	4	
5	29162-93J00	LOCK WASHER	4	
6	09108-06060	STUD BOLT	2	
7	09108-06061	STUD BOLT	2	
8	09420-04006	KEY	1	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-92L00	PANEL, PUMP CASE UNDER	1	
11	17472-96303	GASKET, PUMP CASE UNDER	1	
12	56130-92L20-0EP	HOUSING, DRIVE SHAFT BEARING (BLACK)	1	
13	09282-17L01	.OIL SEAL (17X32X6)	2	
14	09265-20015	BEARING (20X42X15)	1	
15	17432-96300	GROMMET, WATER PUMP SEAL TUBE	2	
16	17563-94400	GROMMET, WATER TUBE, UPPER	1	
17	17565-94400	GROMMET, WATER TUBE, MIDDLE	1	
18	17566-94400	GROMMET, WATER TUBE, LOWER	1	
19	17400-94412	KIT, WATER PUMP REPAIR	1	OPT

FIG.160B (1-D-15) WATER PUMP (DT40W P90)

DT40W_P40_016

FIG.160C

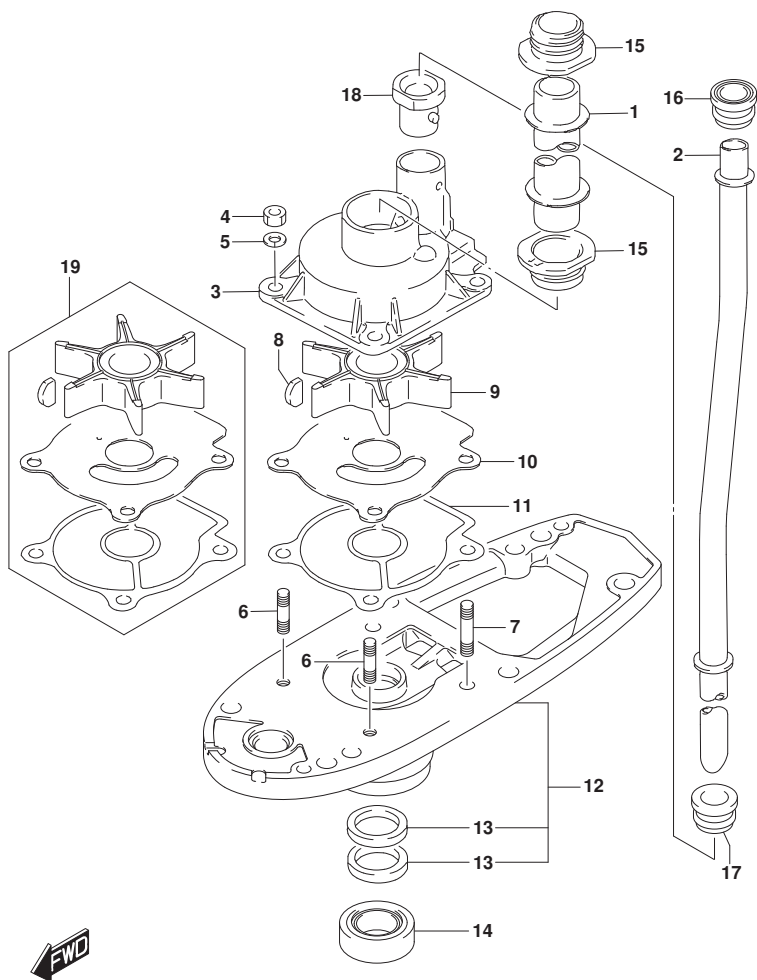


FIG.160C (1-E-2) WATER PUMP (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	17431-92L20	TUBE, WATER PUMP SEAL (L)	1	W/TRANSOM(L) L:126
1-2	17431-92L00	TUBE, WATER PUMP SEAL (L2)	1	W/TRANSOM(L2) L:173
2-1	17561-92L60	TUBE, WATER (L)	1	W/TRANSOM(L) L:446
2-2	17561-92L70	TUBE, WATER (L2)	1	W/TRANSOM(L2) L:493
3	17410-92L00	CASE, WATER PUMP	1	
4	29141-93J00	NUT	4	
5	29162-93J00	LOCK WASHER	4	
6	09108-06060	STUD BOLT	2	
7	09108-06061	STUD BOLT	2	
8	09420-04006	KEY	1	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-92L00	PANEL, PUMP CASE UNDER	1	
11	17472-96303	GASKET, PUMP CASE UNDER	1	
12	56130-92L20-0EP	HOUSING, DRIVE SHAFT BEARING (BLACK)	1	
13	09282-17L01	.OIL SEAL (17X32X6)	2	
14	09265-20015	BEARING (20X42X15)	1	
15	17432-96300	GROMMET, WATER PUMP SEAL TUBE	2	
16	17563-94400	GROMMET, WATER TUBE, UPPER	1	
17	17565-94400	GROMMET, WATER TUBE, MIDDLE	1	
18	17566-94400	GROMMET, WATER TUBE, LOWER	1	
19	17400-94412	KIT, WATER PUMP REPAIR	1	OPT

FIG.160D (1-E-3) WATER PUMP (DT40WR P90)

DT40W_P40_016

FIG.160E

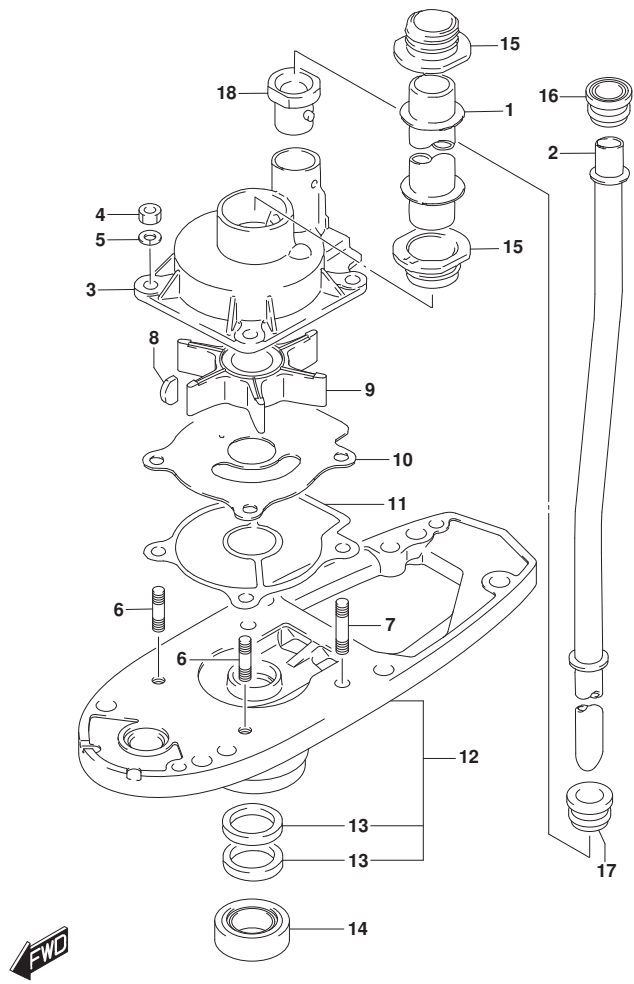


FIG.160E (1-E-4) WATER PUMP (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	17431-92L10	TUBE, WATER PUMP SEAL (S)	1	W/TRANSOM(S) L:21
1-2	17431-92L20	TUBE, WATER PUMP SEAL (L)	1	W/TRANSOM(L) L:126
1-3	17431-92L00	TUBE, WATER PUMP SEAL (L2)	1	W/TRANSOM(L2) L:173
2-1	17561-92L50	TUBE, WATER (S)	1	W/TRANSOM(S) L:366
2-2	17561-92L60	TUBE, WATER (L)	1	W/TRANSOM(L) L:446
2-3	17561-92L70	TUBE, WATER (L2)	1	W/TRANSOM(L2) L:493
3	17410-92L00	CASE, WATER PUMP	1	
4	29141-93J00	NUT	4	
5	29162-93J00	LOCK WASHER	4	
6	09108-06060	STUD BOLT	2	
7	09108-06061	STUD BOLT	2	
8	09420-04006	KEY	1	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-92L00	PANEL, PUMP CASE UNDER	1	
11	17472-96303	GASKET, PUMP CASE UNDER	1	
12	56130-92L20-0EP	HOUSING, DRIVE SHAFT BEARING (BLACK)	1	
13	09282-17L01	.OIL SEAL (17X32X6)	2	
14	09265-20015	BEARING (20X42X15)	1	
15	17432-96300	GROMMET, WATER PUMP SEAL TUBE	2	
16	17563-94400	GROMMET, WATER TUBE, UPPER	1	
17	17565-94400	GROMMET, WATER TUBE, MIDDLE	1	
18	17566-94400	GROMMET, WATER TUBE, LOWER	1	

FIG.166A

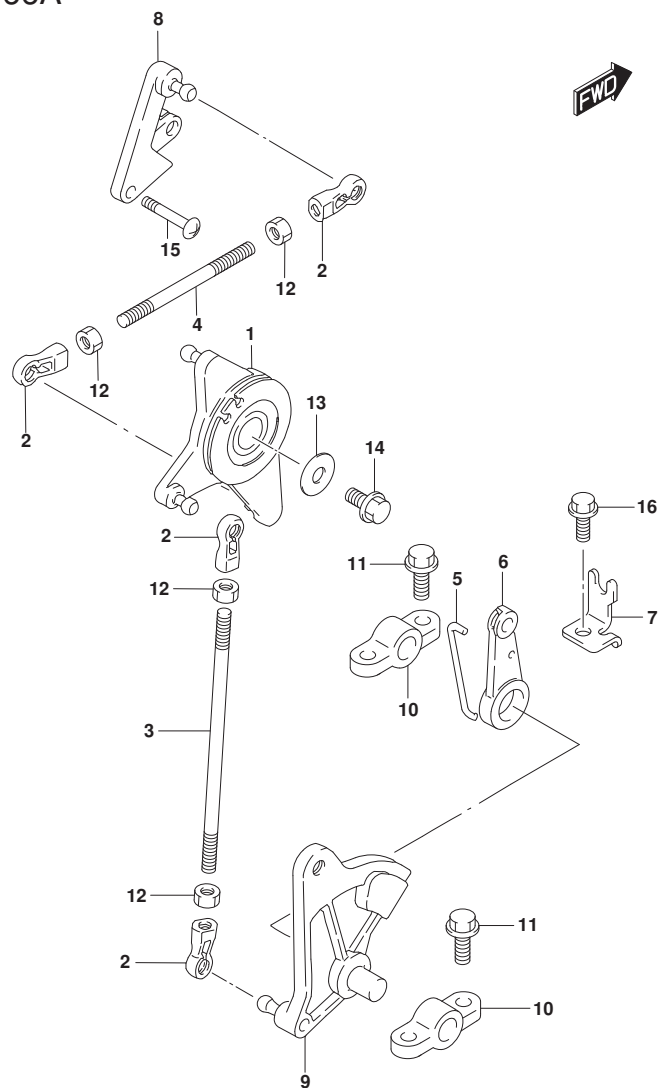


FIG.166A (1-E-5) THROTTLE CONTROL (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09103-06048	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-06127	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-06127	BOLT	1	

FIG.166B

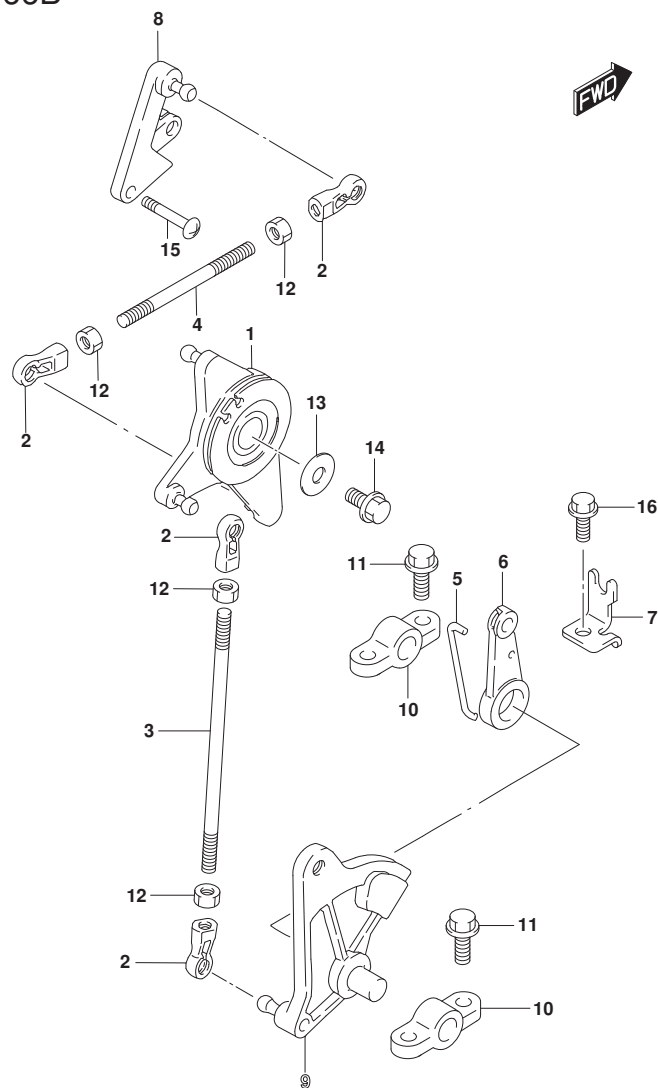


FIG.166B (1-E-6) THROTTLE CONTROL (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09103-06048	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-06127	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-06127	BOLT	1	

FIG.166C

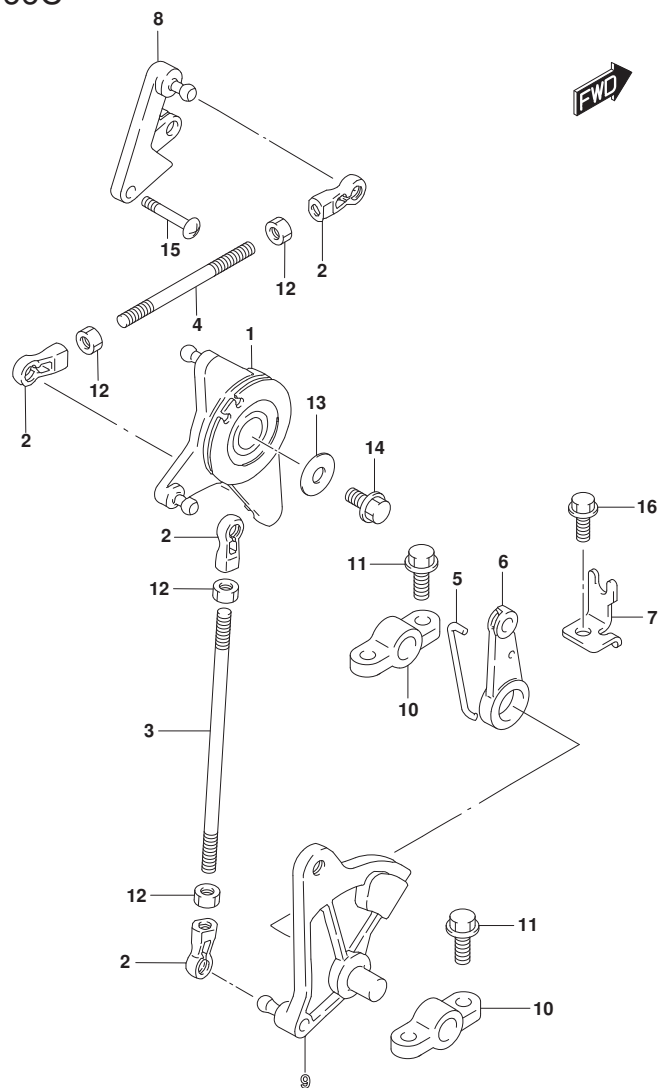


FIG.166C (1-E-7) THROTTLE CONTROL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09103-06048	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-06127	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-06127	BOLT	1	

FIG.166D

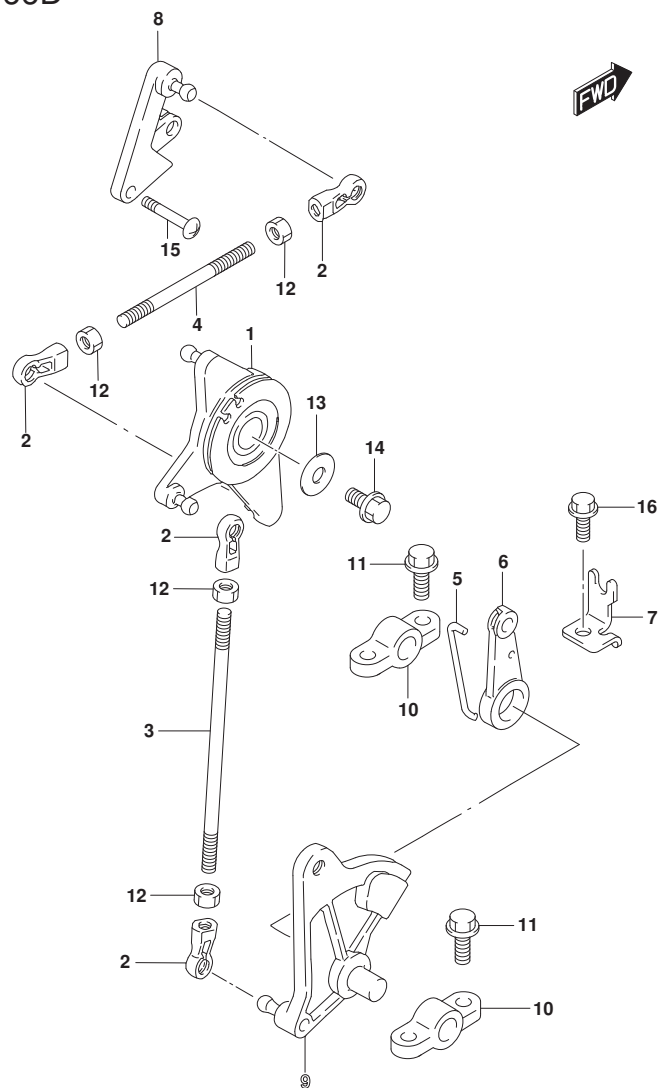


FIG.166D (1-E-8) THROTTLE CONTROL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09103-06048	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-06127	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-06127	BOLT	1	

FIG.166E

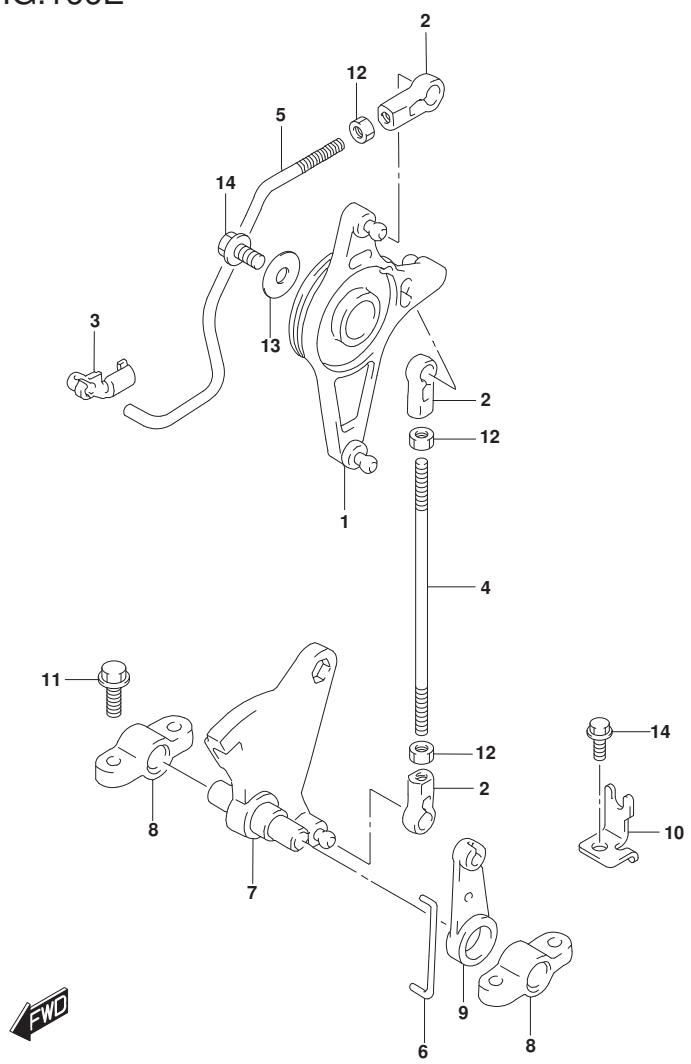


FIG.166E (1-E-9) THROTTLE CONTROL (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	3	
3	19132-96300	CONNECTOR, THROTTLE ROD	1	
4	19135-94400	ROD (LEVER TO LIMITER)	1	
5	19136-94451	ROD, THROTTLE	1	
6	19654-94421	ROD (CLUTCH TO NSI)	1	
7	19811-94400	LIMITER, THROTTLE	1	
8	19815-94400	HOLDER, THROTTLE LIMITER	2	
9	19851-94401	LEVER, NSI	1	
10	19861-92L00	STAY, NSI CABLE	1	
11	09103-06048	BOLT (6X20)	4	
12	09140-05005	NUT	3	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-06127	BOLT	2	

FIG.167A

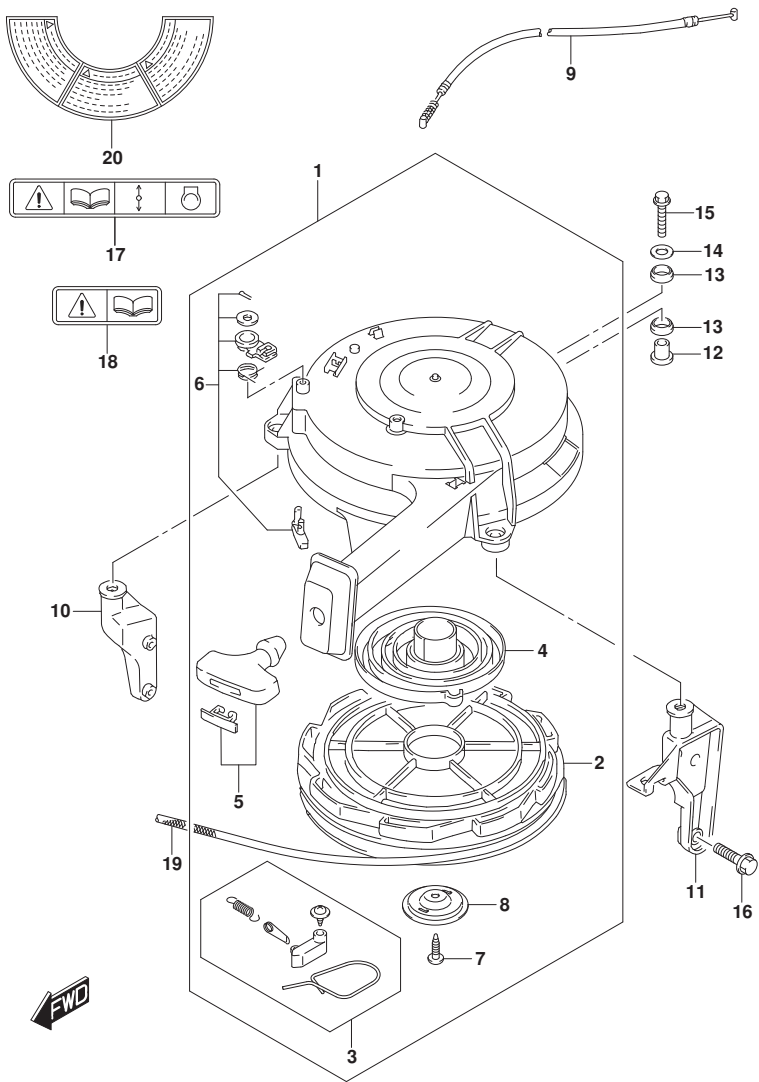


FIG.167A (1-E-10) RECOIL STARTER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-92L10	STARTER ASSY, RECOIL	1	
2	18120-96320	.REEL	1	
3	18130-91L00	.RATCHET SET	1	
4	18142-96300	.SPRING, SPIRAL	1	
5	18210-93002	.GRIP	1	
6	18280-96320	.NSI SET	1	
7	18132-89L00	.SCREW	1	
8	18151-96310	.PLATE, FRICTION	1	
9	18290-92L00	CABLE, NSI	1	
10	18711-92L10	BRACE, STBD	1	
11	18721-92L10	BRACE, PORT	1	
12	09180-08169	SPACER (8.6X12X17)	3	
13	09320-12059	CUSHION	6	
14	09160-08124	WASHER (8.5X20X1.6)	3	
15	01550-08357	BOLT	3	
16	01550-06257	BOLT	4	
17	69711-93E10	LABEL, CAUTION (S.I.G.P.)	1	
18	69712-93E10	LABEL, CAUTION (S.I.G.P.)	1	
19	99000-81159-50M	ROPE (L:50000)	1	OPT L:50000->1750
20	61472-94J00	LABEL, RECOIL STARTER	1	

FIG.201A


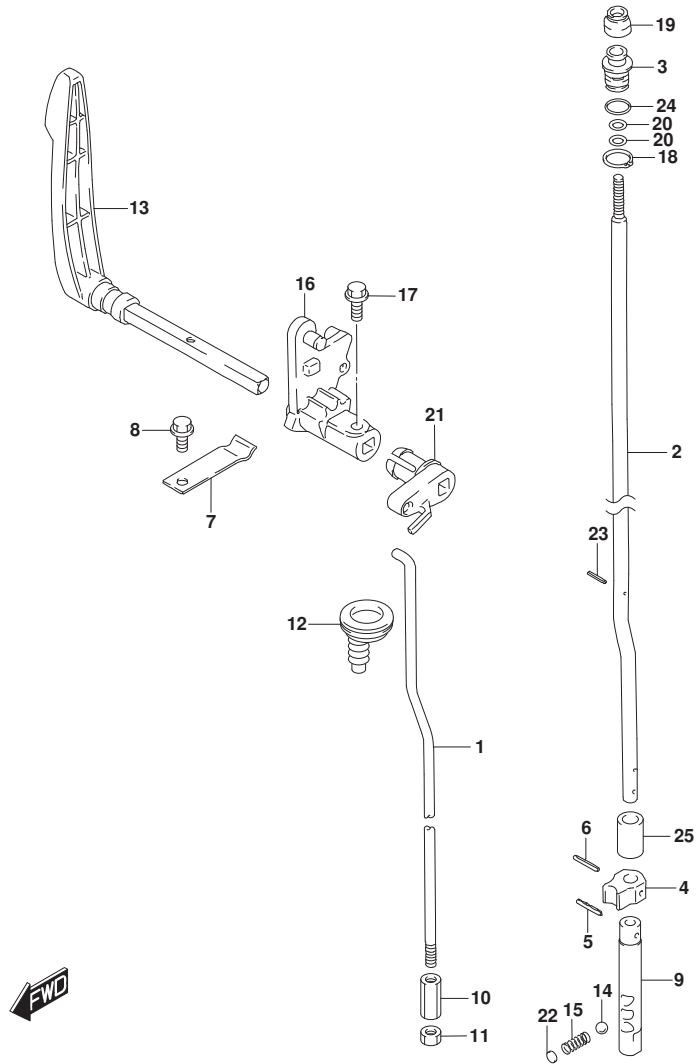


FIG.201A (1-E-11) CLUTCH (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-06127	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.201B

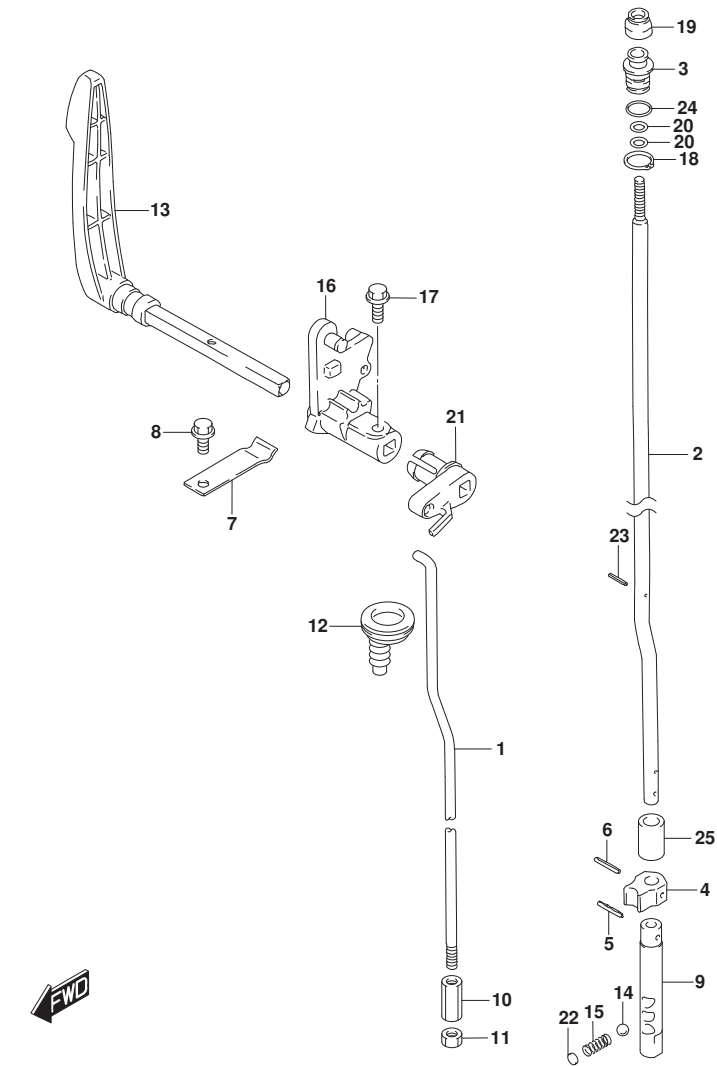

DT40W_P40_016_201B
CLUTCH

FIG.201B (1-E-12) CLUTCH (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-06127	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

DT40W_P40_016

FIG.201C

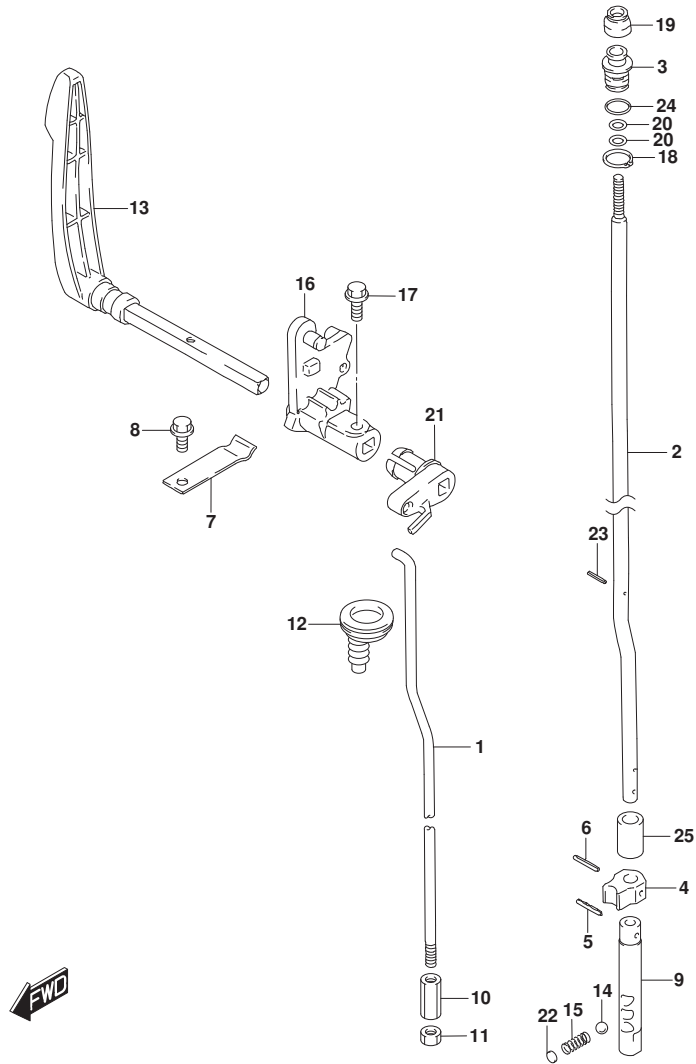


FIG.201C (1-E-13) CLUTCH (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-2	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-06127	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.201D

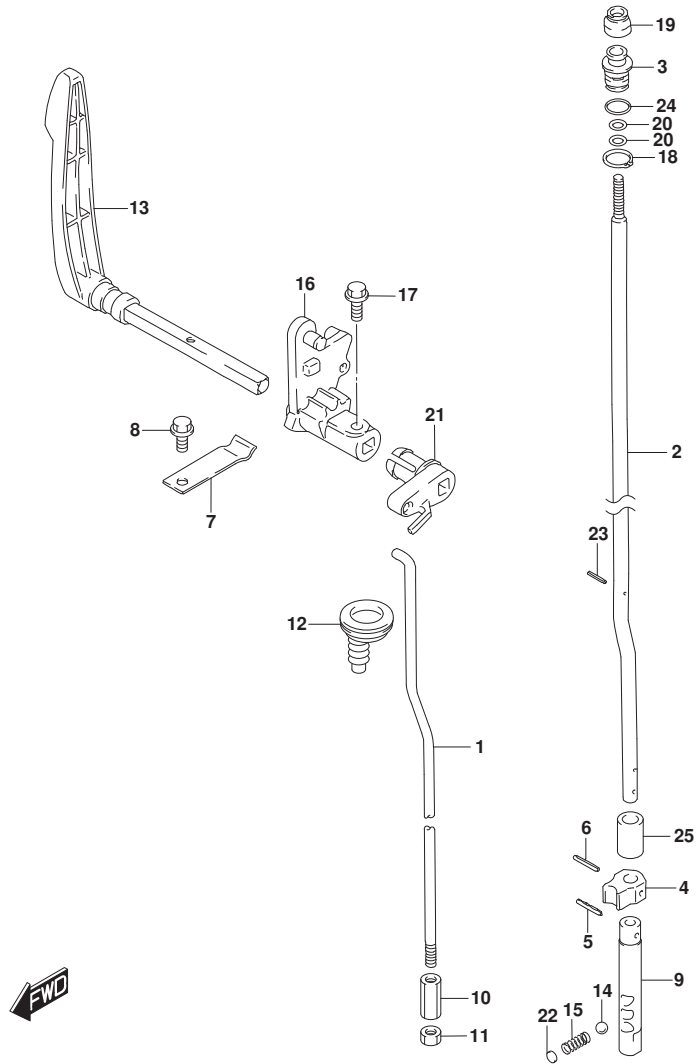


FIG.201D (1-E-14) CLUTCH (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-06127	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.201E


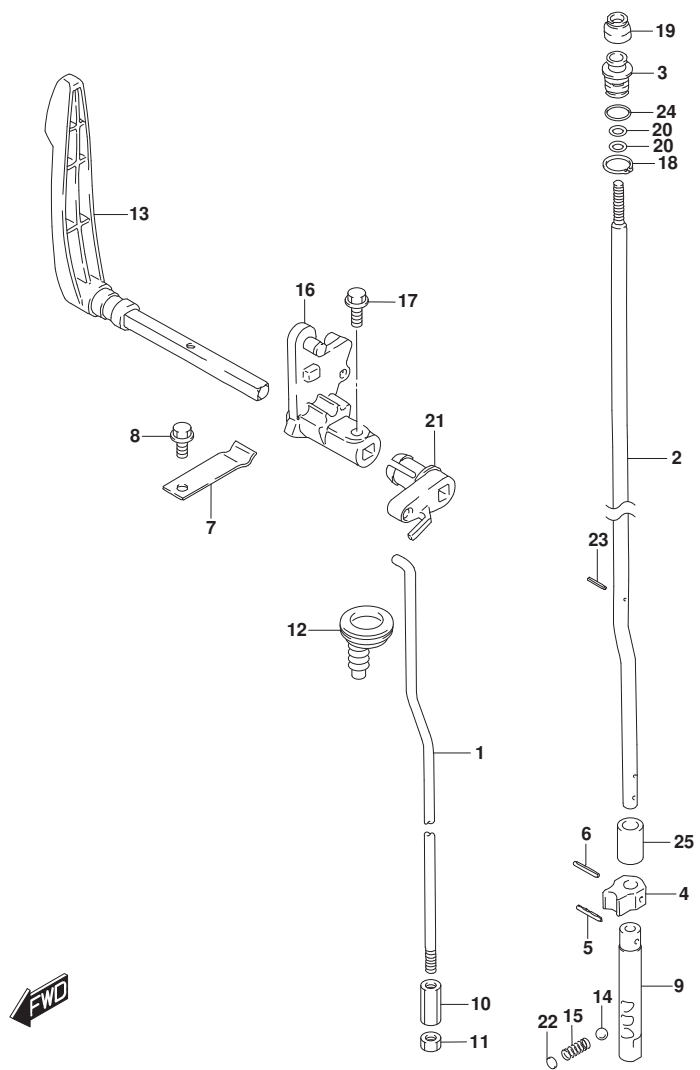


FIG.201E (1-E-15) CLUTCH (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-06127	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.220A

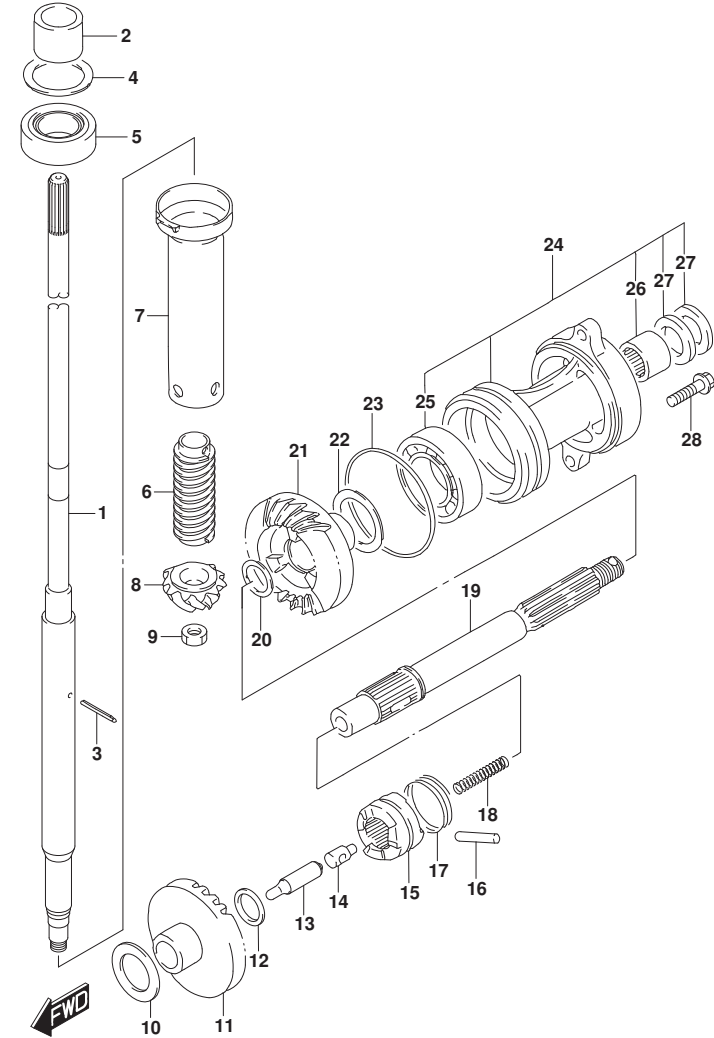


DT40W_P40_016_220A
TRANSMISSION

FIG.220A (1-F-2) TRANSMISSION (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

FIG.220A

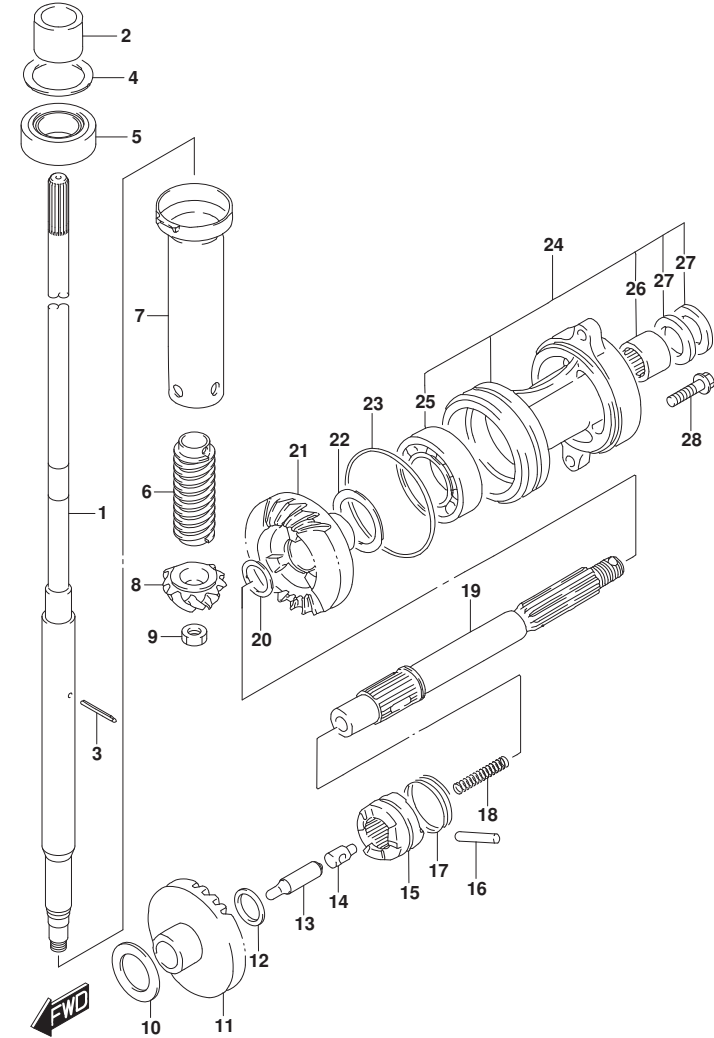


DT40W_P40_016_220A
TRANSMISSION

FIG.220A (1-F-3) TRANSMISSION (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-0EP	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

DT40W_P40_016

FIG.220B

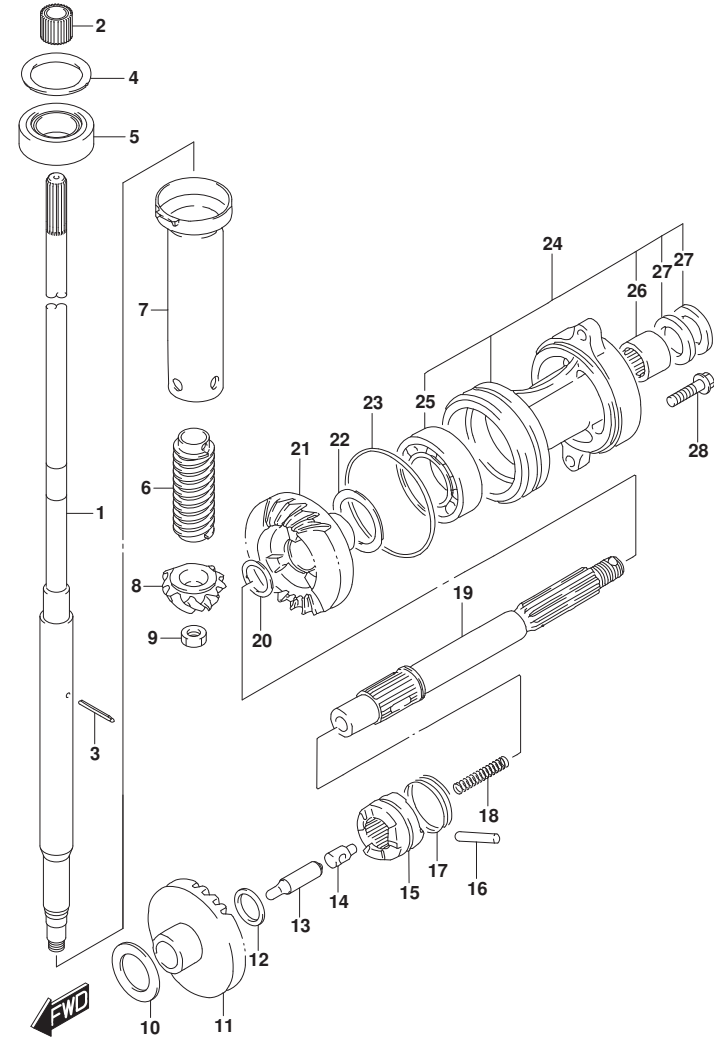


DT40W_P40_016_220B
TRANSMISSION

FIG.220B (1-F-4) TRANSMISSION (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

DT40W_P40_016

FIG.220B

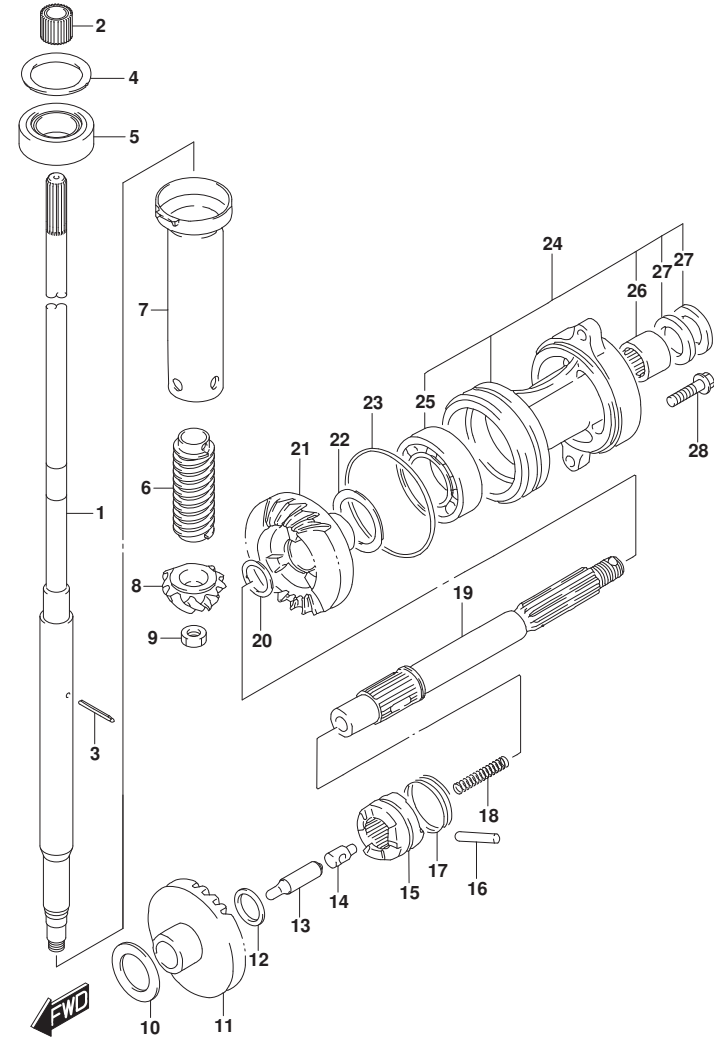

DT40W_P40_016_220B
TRANSMISSION

FIG.220B (1-F-5) TRANSMISSION (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-0EP	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

FIG.220C


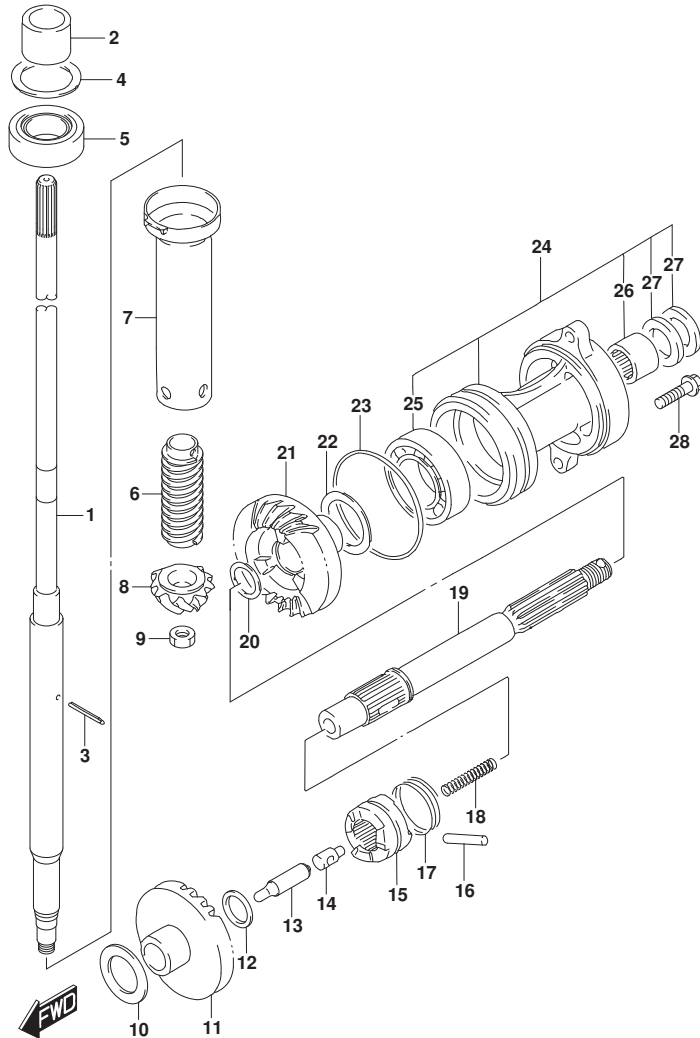


FIG.220C (1-F-6) TRANSMISSION (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-2	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	
18	09440-08043	SPRING	1	

FIG.220C

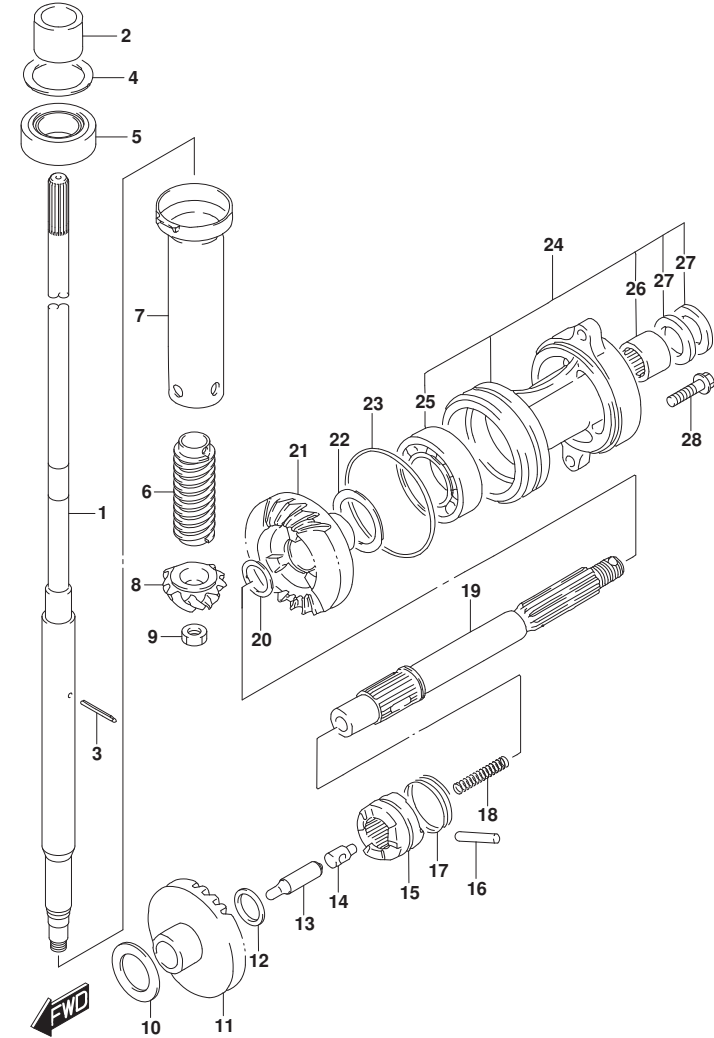

DT40W_P40_016_220C
TRANSMISSION

FIG.220C (1-F-7) TRANSMISSION (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-0EP	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

DT40W_P40_016

FIG.220D

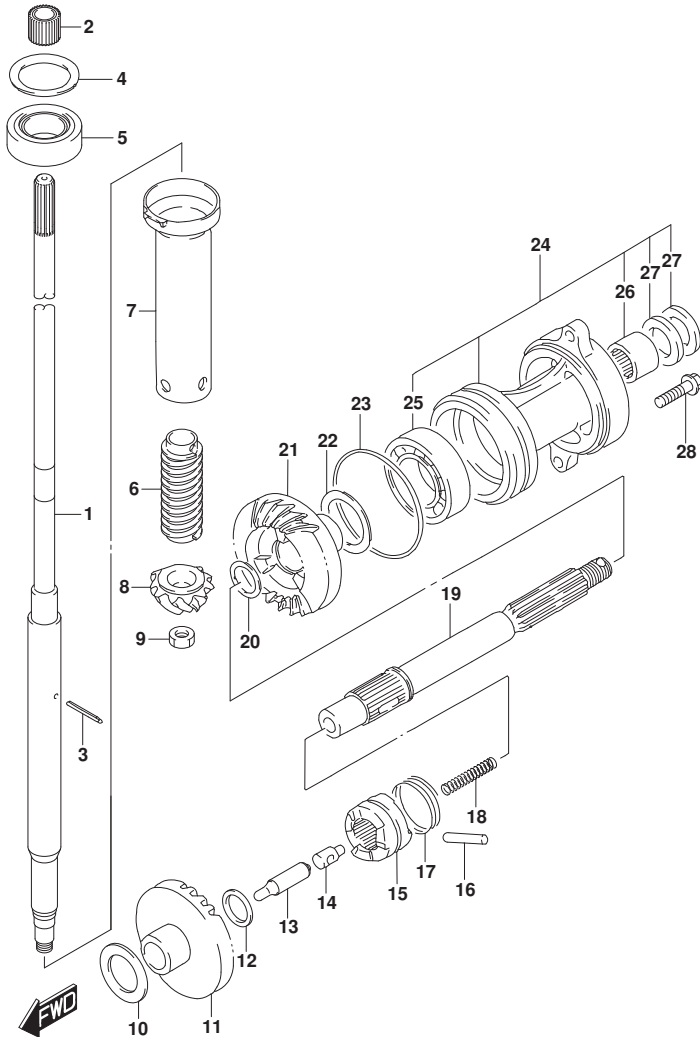


FIG.220D (1-F-8) TRANSMISSION (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	


This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 28. The assembly process involves fitting various seals, bearings, and gears onto a central shaft (1). A 'FWD' arrow at the bottom left indicates the forward direction of assembly.

Parts List:

- 1: Main shaft
- 2: Small cylindrical cap
- 3: Pin
- 4: O-ring
- 5: Flange
- 6: Threaded cap
- 7: Housing
- 8: Gear
- 9: Small cap
- 10: Gear
- 11: Gear
- 12: Pin
- 13: Pin
- 14: Pin
- 15: Gear
- 16: Pin
- 17: Pin
- 18: Pin
- 19: Shaft
- 20: Gear
- 21: Gear
- 22: O-ring
- 23: Bearing
- 24: Seal
- 25: Seal
- 26: Seal
- 27: Seal
- 28: Pin

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-0EP	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

FIG.220E

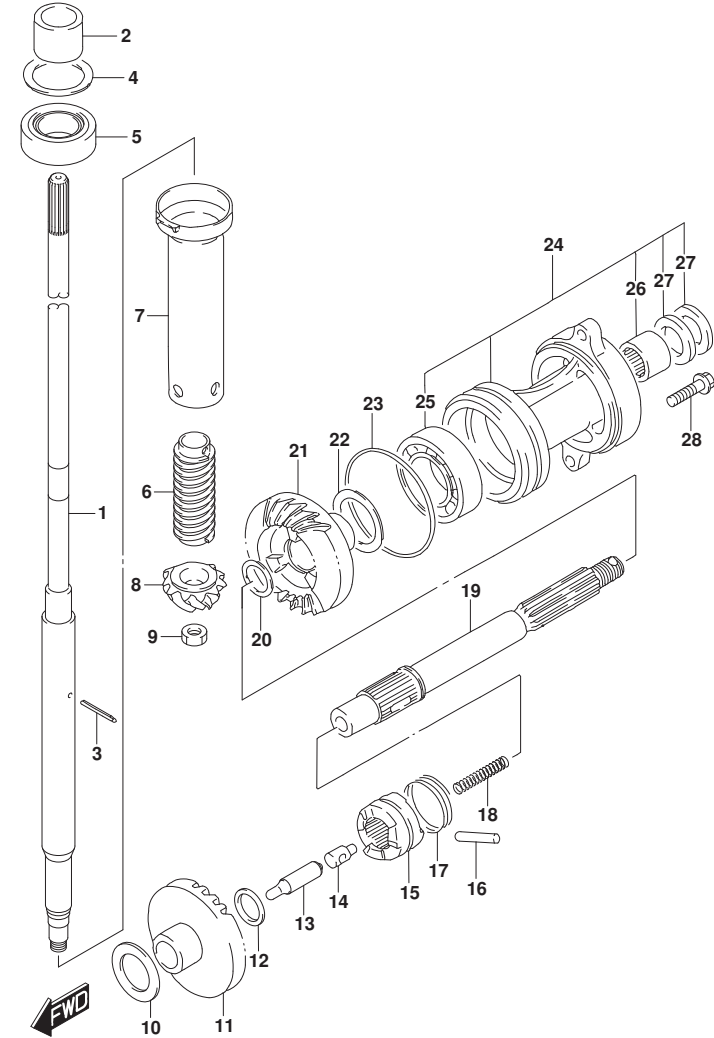


DT40W_P40_016_220E
TRANSMISSION

FIG.220E (1-F-10) TRANSMISSION (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

DT40W_P40_016

FIG.220E

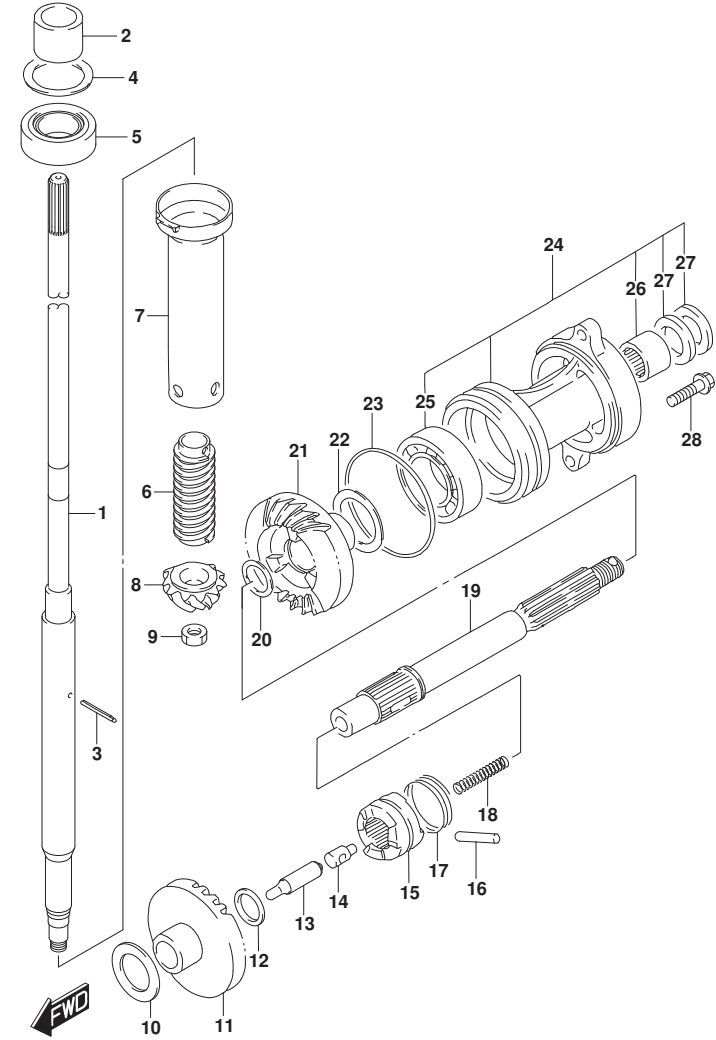

DT40W_P40_016_220E
TRANSMISSION

FIG.220E (1-F-11) TRANSMISSION (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-0EP	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

DT40W_P40_016

FIG.301A

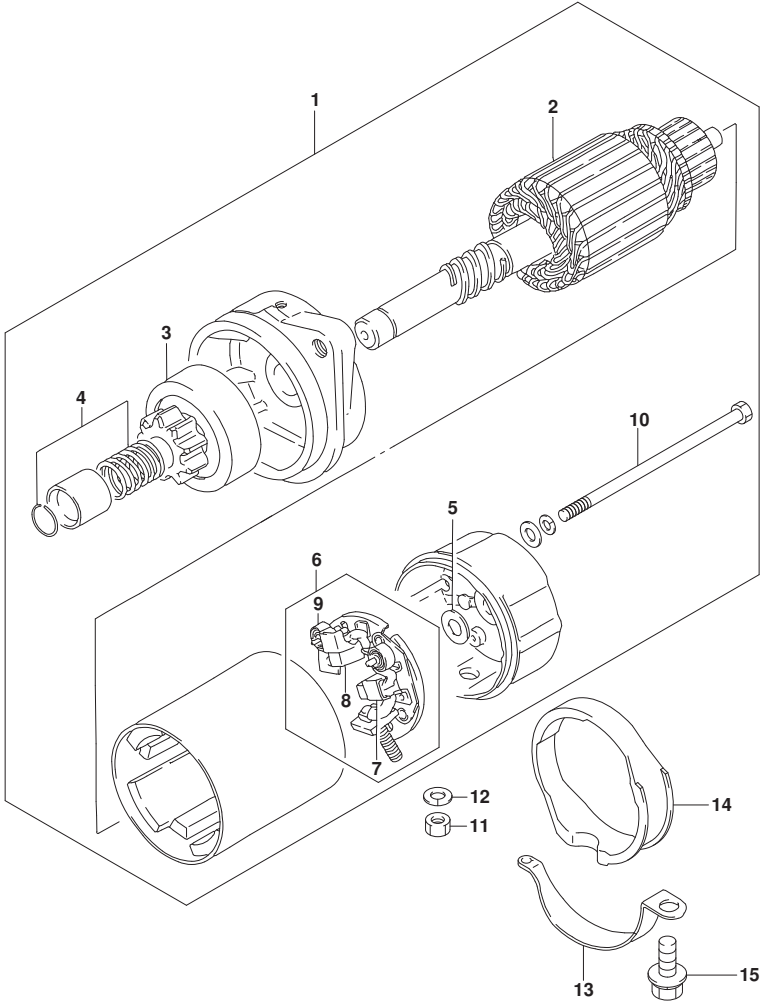


FIG.301A (1-F-12) STARTING MOTOR (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.301B

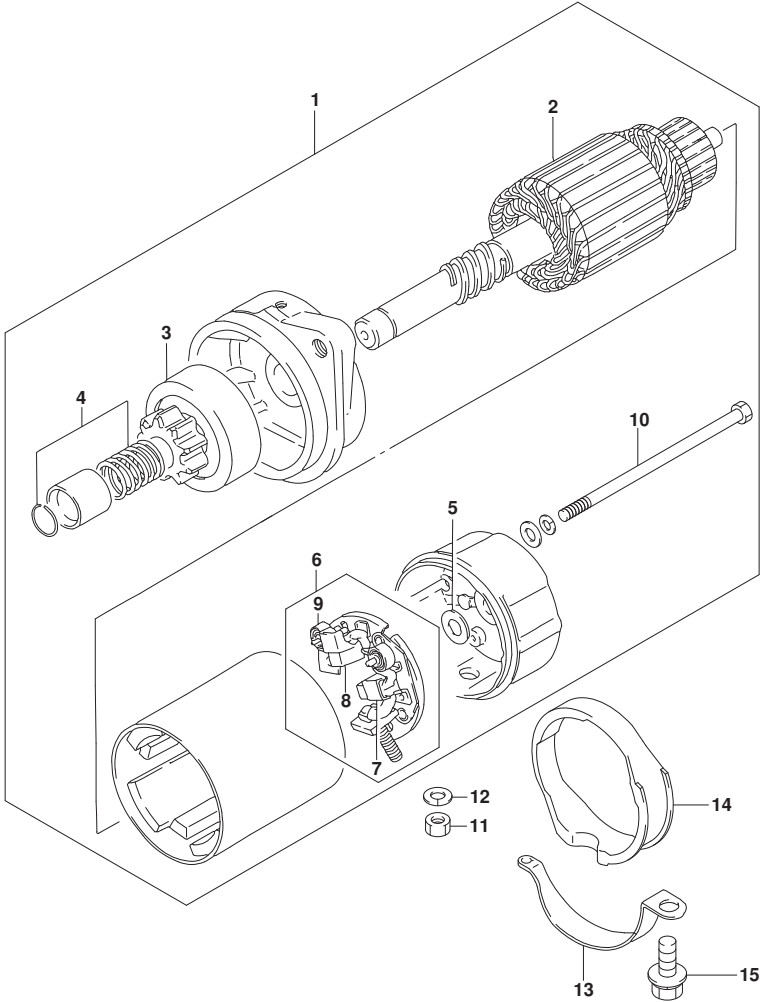


FIG.301B (1-F-13) STARTING MOTOR (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.301C

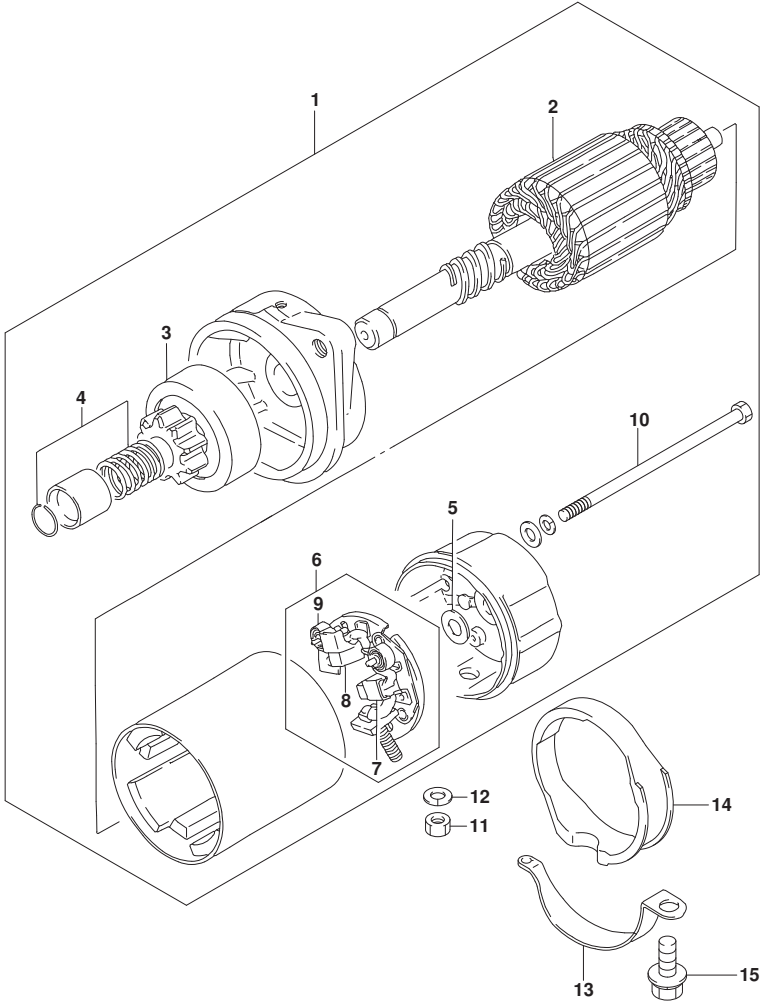


FIG.301C (1-F-14) STARTING MOTOR (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.301D

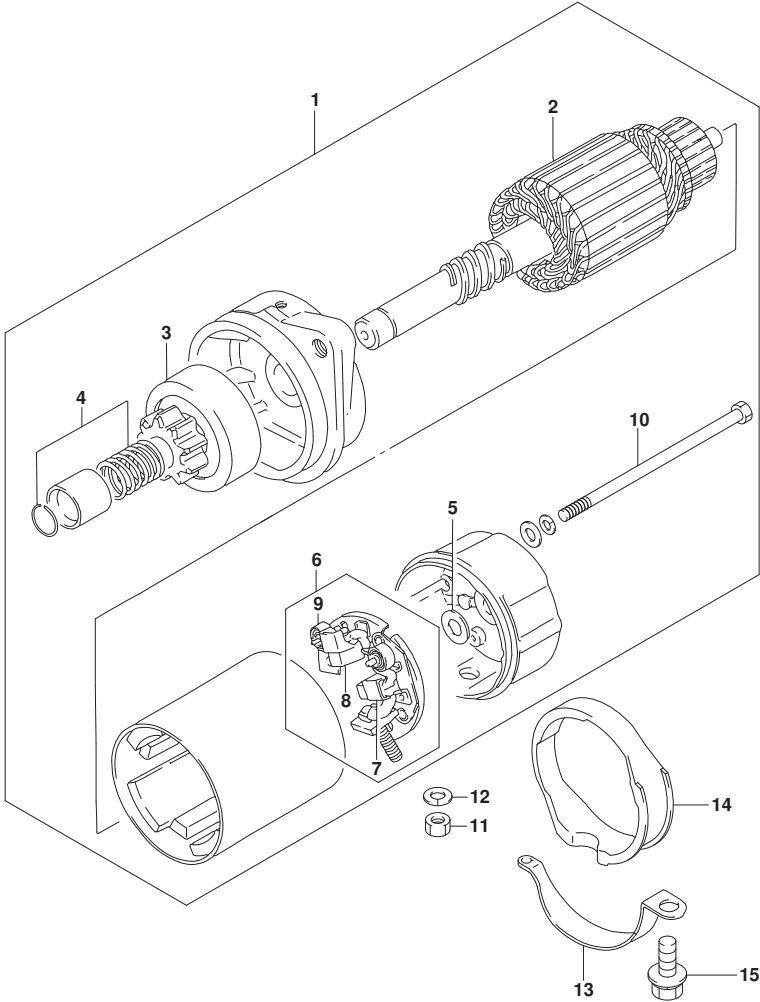


FIG.301D (1-F-15) STARTING MOTOR (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.303A

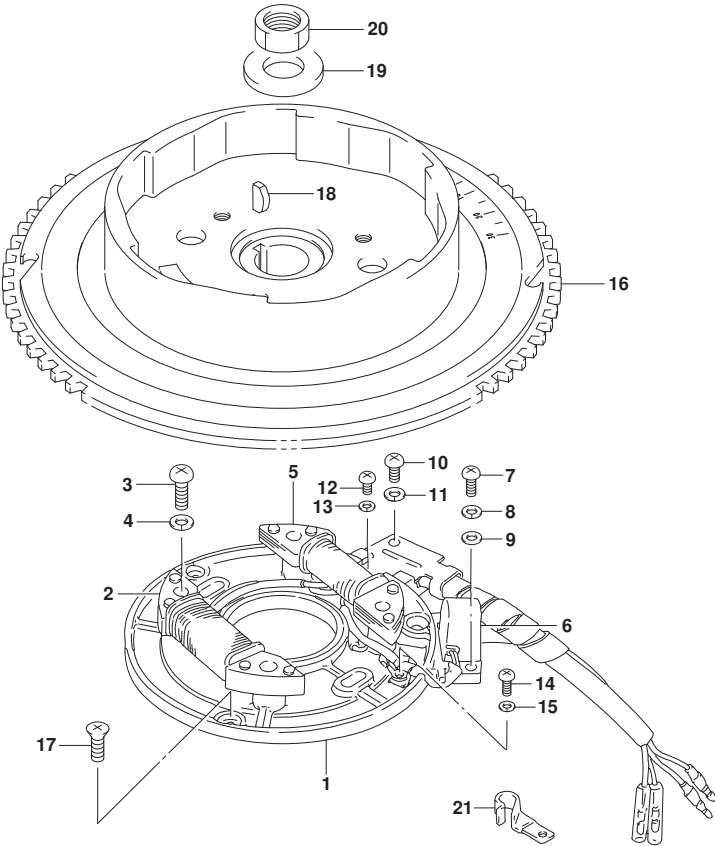


FIG.303A (1-G-2) MAGNETO (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32101-94430	STARTER ASSY	1	W/ELECTRIC STARTER
1-2	32101-92L10	STARTER ASSY	1	W/MANUAL STARTER
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16-1	32102-92L00	FLYWHEEL	1	W/ELECTRIC STARTER
16-2	32102-92L30	FLYWHEEL	1	W/MANUAL STARTER
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.303B

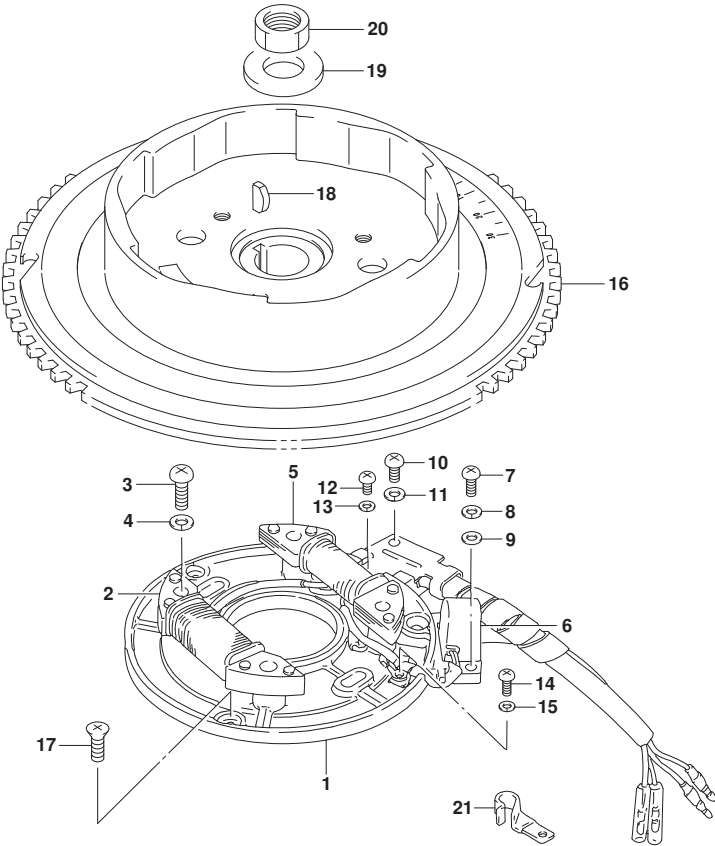


FIG.303B (1-G-3) MAGNETO (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32101-94430	STARTER ASSY	1	W/ELECTRIC STARTER
1-2	32101-92L10	STARTER ASSY	1	W/MANUAL STARTER
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16-1	32102-92L00	FLYWHEEL	1	W/ELECTRIC STARTER
16-2	32102-92L30	FLYWHEEL	1	W/MANUAL STARTER
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.303C

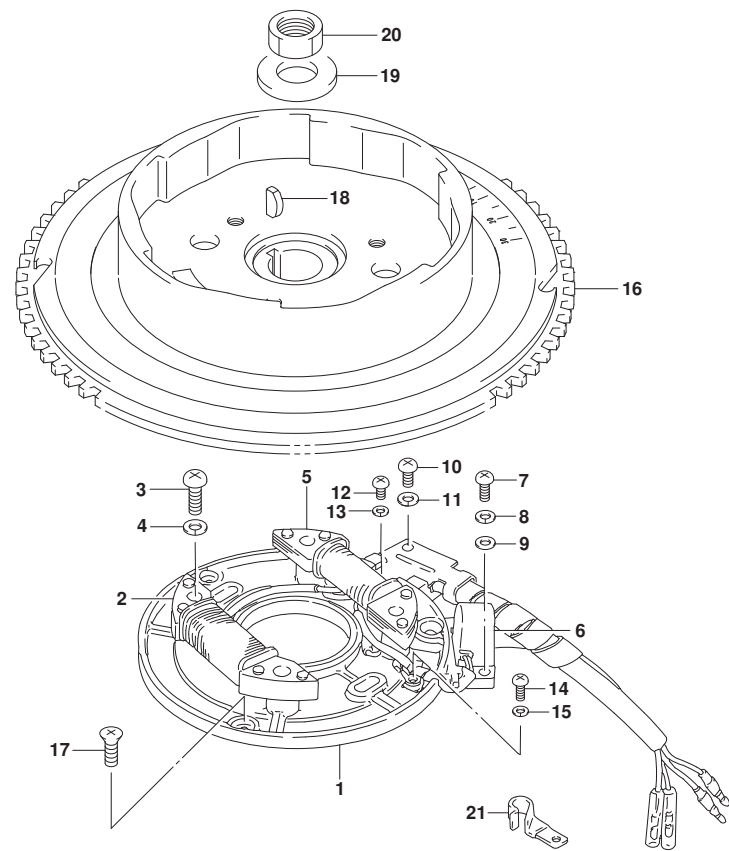


FIG.303C (1-G-4) MAGNETO (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32101-94430	STARTER ASSY	1	
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16	32102-92L00	FLYWHEEL	1	
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.303D

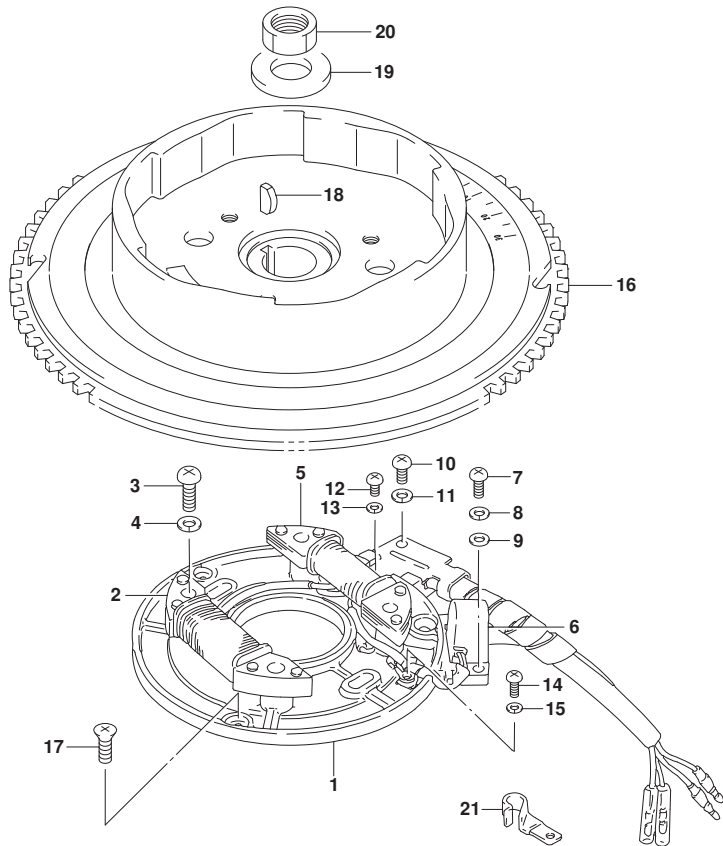


FIG.303D (1-G-5) MAGNETO (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32101-94430	STARTER ASSY	1	
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16	32102-92L00	FLYWHEEL	1	
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.303E


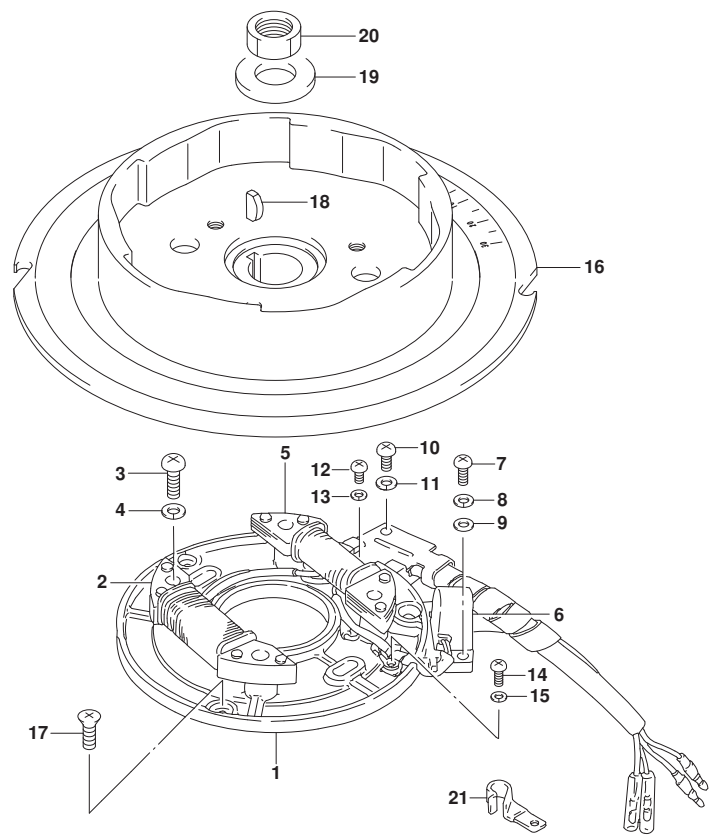


FIG.303E (1-G-6) MAGNETO (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32101-92L10	STARTER ASSY	1	
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16	32102-92L40	FLYWHEEL	1	
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.308A

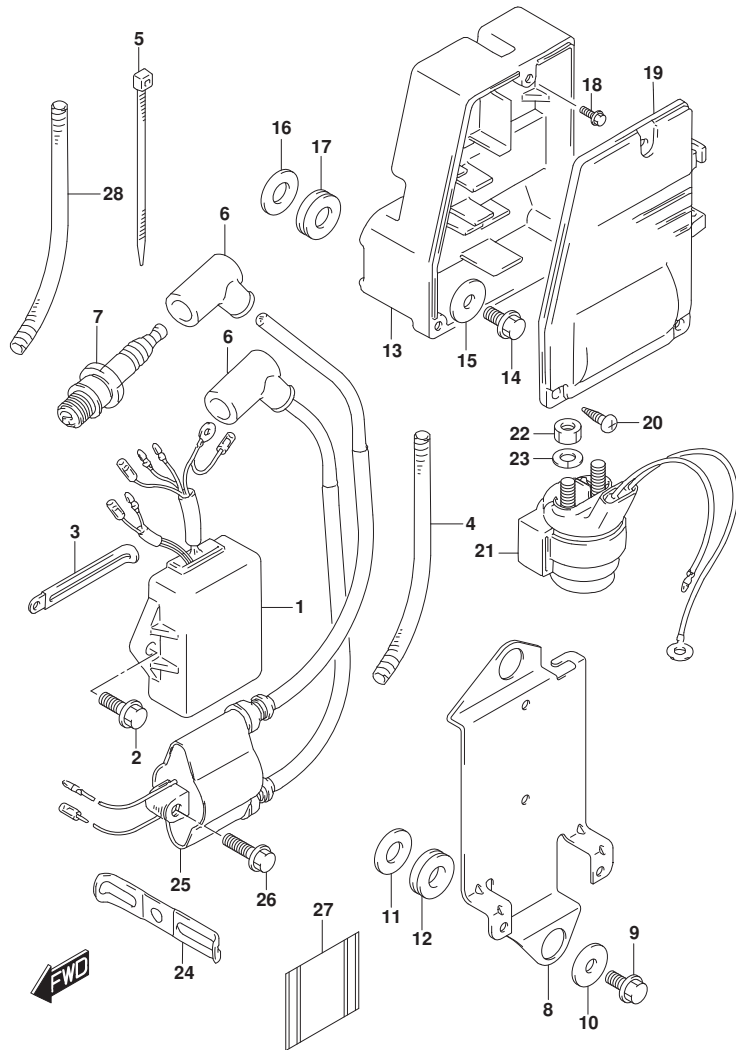


DT40W_P40_016_308A
IGNITION

FIG.308A (1-G-7) IGNITION (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	W/ELECTRIC STARTER
14	09103-06049	BOLT (6X12)	1	W/ELECTRIC STARTER
15	09160-06084	WASHER (6.5X18X1.6)	2	W/ELECTRIC STARTER
16	09160-12007	WASHER (12.5X26X1.6)	2	W/ELECTRIC STARTER
17	09320-12011	CUSHION	2	W/ELECTRIC STARTER
18	01550-06127	BOLT	1	W/ELECTRIC STARTER
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	W/ELECTRIC STARTER
20	03212-0512B	SCREW	3	W/ELECTRIC STARTER
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	W/ELECTRIC STARTER
22	08310-00067	NUT	2	W/ELECTRIC STARTER
23	08321-01067	LOCK WASHER	2	W/ELECTRIC STARTER
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-06207	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	
28	33833-91J00	TUBE	1	L:250->100 W/MANUAL STARTER

FIG.308B

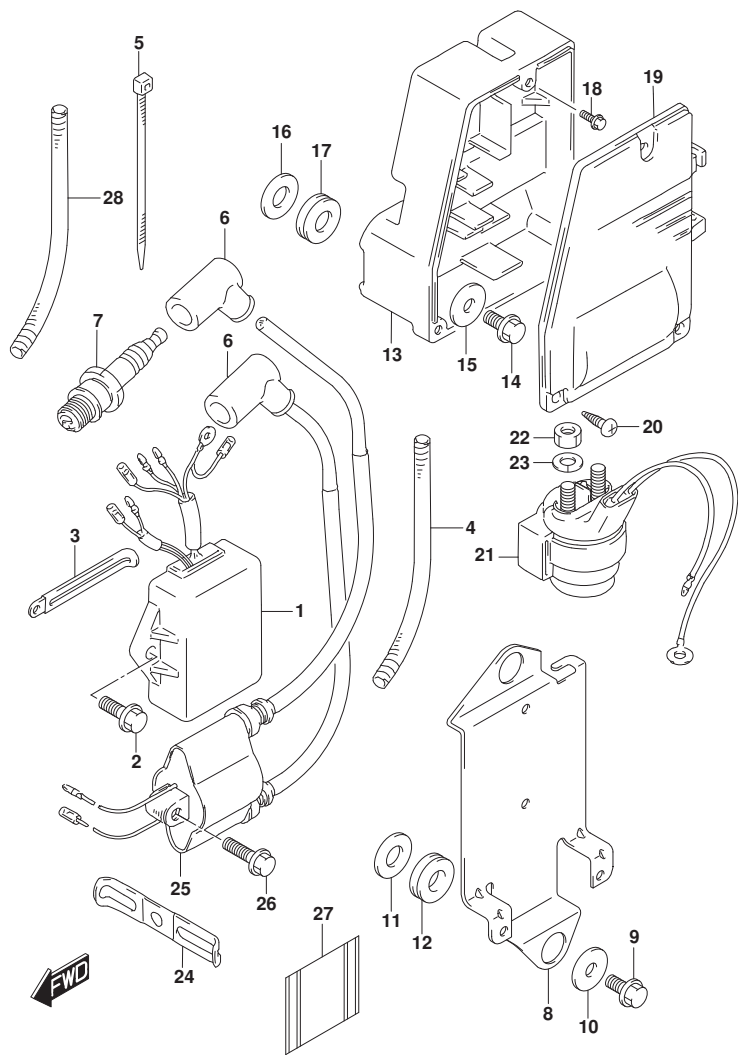


DT40W_P40_016_308B
IGNITION

FIG.308B (1-G-8) IGNITION (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	W/ELECTRIC STARTER
14	09103-06049	BOLT (6X12)	1	W/ELECTRIC STARTER
15	09160-06084	WASHER (6.5X18X1.6)	2	W/ELECTRIC STARTER
16	09160-12007	WASHER (12.5X26X1.6)	2	W/ELECTRIC STARTER
17	09320-12011	CUSHION	2	W/ELECTRIC STARTER
18	01550-06127	BOLT	1	W/ELECTRIC STARTER
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	W/ELECTRIC STARTER
20	03212-0512B	SCREW	3	W/ELECTRIC STARTER
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	W/ELECTRIC STARTER
22	08310-00067	NUT	2	W/ELECTRIC STARTER
23	08321-01067	LOCK WASHER	2	W/ELECTRIC STARTER
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-06207	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	
28	33833-91J00	TUBE	1	L:250->100 W/MANUAL STARTER

FIG.308C

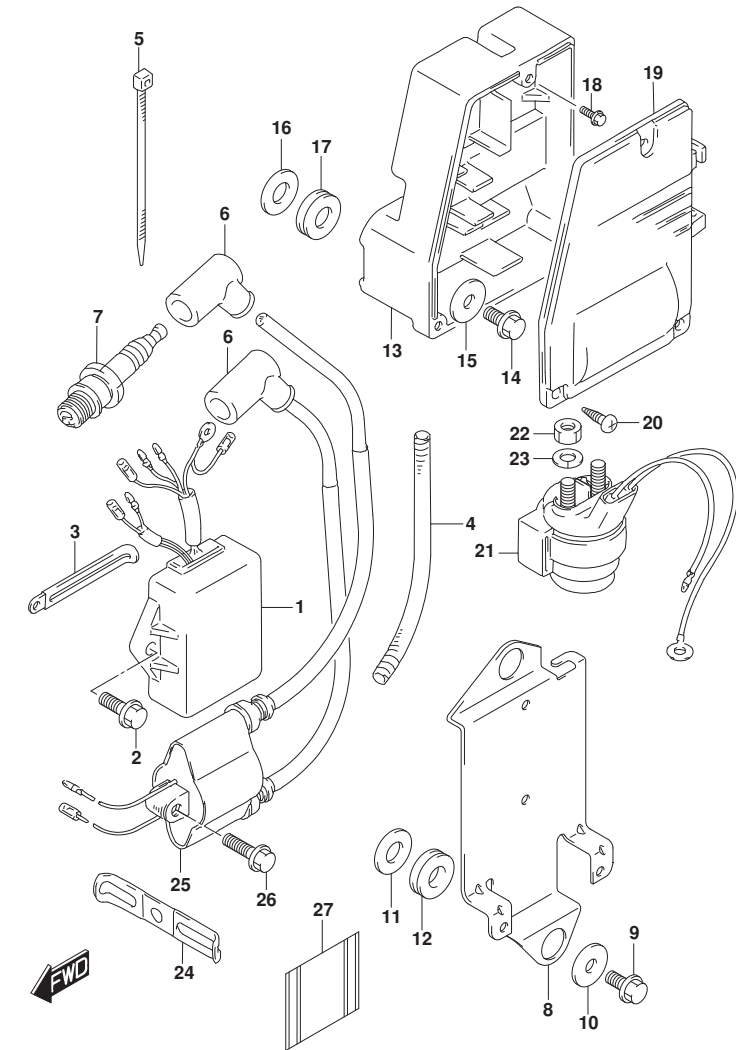


DT40W_P40_016_308C
IGNITION

FIG.308C (1-G-9) IGNITION (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	
14	09103-06049	BOLT (6X12)	1	
15	09160-06084	WASHER (6.5X18X1.6)	2	
16	09160-12007	WASHER (12.5X26X1.6)	2	
17	09320-12011	CUSHION	2	
18	01550-06127	BOLT	1	
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	
20	03212-0512B	SCREW	3	
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	
22	08310-00067	NUT	2	
23	08321-01067	LOCK WASHER	2	
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-06207	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	

DT40W_P40_016

FIG.308D

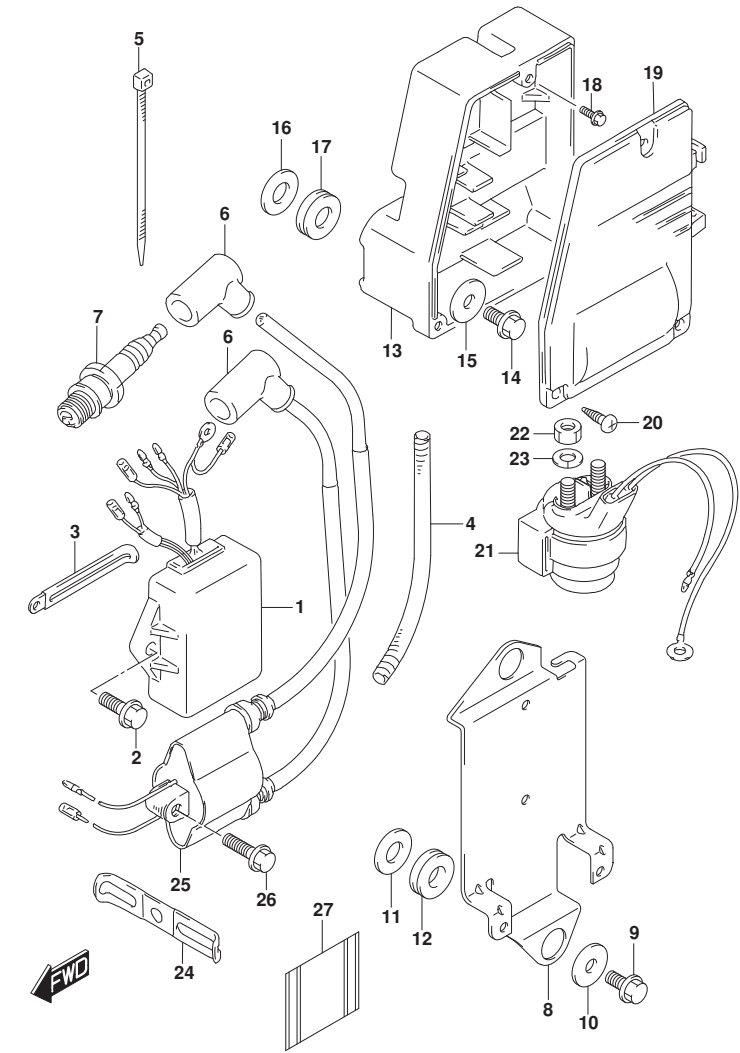

DT40W_P40_016_308D
IGNITION

FIG.308D (1-G-10) IGNITION (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	
14	09103-06049	BOLT (6X12)	1	
15	09160-06084	WASHER (6.5X18X1.6)	2	
16	09160-12007	WASHER (12.5X26X1.6)	2	
17	09320-12011	CUSHION	2	
18	01550-06127	BOLT	1	
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	
20	03212-0512B	SCREW	3	
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	
22	08310-00067	NUT	2	
23	08321-01067	LOCK WASHER	2	
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-06207	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	

DT40W_P40_016

FIG.308E

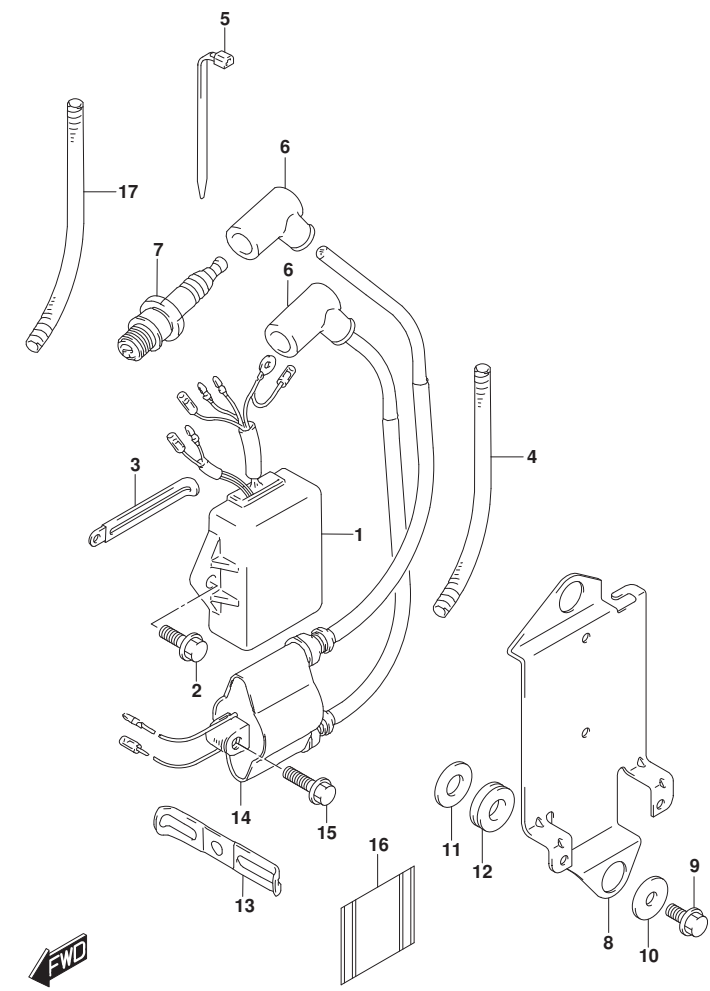


FIG.308E (1-G-11) IGNITION (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L30	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00532	SPARK PLUG (B7HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32919-92L00	CLAMP, HIGH TENSION CORD	1	
14	33410-92L10	COIL, IGNITION	1	
15	01550-06207	BOLT	2	
16	32916-92L10	COVER, CONNECTOR	1	
17	33833-91J00	TUBE	1	L:250->100

FIG.309A

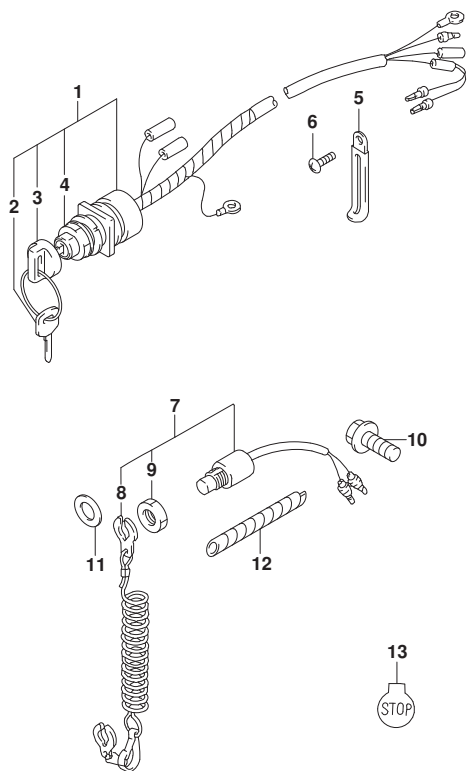


FIG.309A (1-G-12) IGNITION SWITCH (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37110-94471	SWITCH ASSY, IGNITION	1	W/ELECTRIC STARTER
2-1	37141-99EA0	.KEY (941)	1	W/ELECTRIC STARTER
2-2	37141-99EB0	.KEY (942)	1	W/ELECTRIC STARTER
2-3	37141-99E00	.KEY (931)	1	W/ELECTRIC STARTER
2-4	37141-99E10	.KEY (932)	1	W/ELECTRIC STARTER
2-5	37141-99E20	.KEY (933)	1	W/ELECTRIC STARTER
2-6	37141-99E30	.KEY (934)	1	W/ELECTRIC STARTER
2-7	37141-99E40	.KEY (935)	1	W/ELECTRIC STARTER
2-8	37141-99E50	.KEY (936)	1	W/ELECTRIC STARTER
2-9	37141-99E60	.KEY (937)	1	W/ELECTRIC STARTER
2-10	37141-99E70	.KEY (938)	1	W/ELECTRIC STARTER
2-11	37141-99E80	.KEY (939)	1	W/ELECTRIC STARTER
2-12	37141-99E90	.KEY (940)	1	W/ELECTRIC STARTER
3	37143-99E00	.CAP, KEY	1	W/ELECTRIC STARTER
4	37149-93J00	.CAP, CYLINDER BODY	1	W/ELECTRIC STARTER
5	29404-93J10	CLAMP	1	W/ELECTRIC STARTER
6	02142-06127	SCREW	1	W/ELECTRIC STARTER
7	37830-92L02	SWITCH ASSY, EMERGENCY & STOP	1	
8	37823-97J00	.PLATE, LOCK	1	
9	37826-97J00	.NUT	1	
10	01550-06127	BOLT	1	W/MANUAL STARTER
11	09160-25069	WASHER (25X40X1.1)	1	W/ELECTRIC STARTER
12	33833-91J00	TUBE (L:250)	1	L:250->100
13	37835-95D00	LABEL, STOP	1	W/MANUAL STARTER



FIG.309B

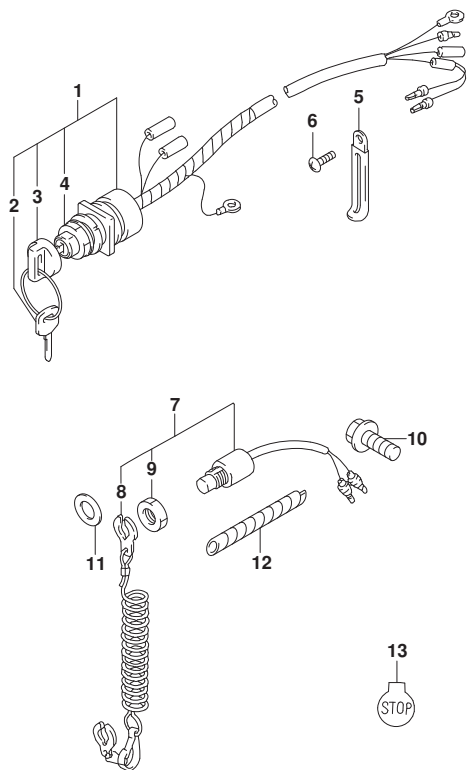


FIG.309B (1-G-13) IGNITION SWITCH (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37110-94471	SWITCH ASSY, IGNITION	1	W/ELECTRIC STARTER
2-1	37141-99EA0	.KEY (941)	1	W/ELECTRIC STARTER
2-2	37141-99EB0	.KEY (942)	1	W/ELECTRIC STARTER
2-3	37141-99E00	.KEY (931)	1	W/ELECTRIC STARTER
2-4	37141-99E10	.KEY (932)	1	W/ELECTRIC STARTER
2-5	37141-99E20	.KEY (933)	1	W/ELECTRIC STARTER
2-6	37141-99E30	.KEY (934)	1	W/ELECTRIC STARTER
2-7	37141-99E40	.KEY (935)	1	W/ELECTRIC STARTER
2-8	37141-99E50	.KEY (936)	1	W/ELECTRIC STARTER
2-9	37141-99E60	.KEY (937)	1	W/ELECTRIC STARTER
2-10	37141-99E70	.KEY (938)	1	W/ELECTRIC STARTER
2-11	37141-99E80	.KEY (939)	1	W/ELECTRIC STARTER
2-12	37141-99E90	.KEY (940)	1	W/ELECTRIC STARTER
3	37143-99E00	.CAP, KEY	1	W/ELECTRIC STARTER
4	37149-93J00	.CAP, CYLINDER BODY	1	W/ELECTRIC STARTER
5	29404-93J10	CLAMP	1	W/ELECTRIC STARTER
6	02142-06127	SCREW	1	W/ELECTRIC STARTER
7	37830-92L02	SWITCH ASSY, EMERGENCY & STOP	1	
8	37823-97J00	.PLATE, LOCK	1	
9	37826-97J00	.NUT	1	
10	01550-06127	BOLT	1	W/MANUAL STARTER
11	09160-25069	WASHER (25X40X1.1)	1	W/ELECTRIC STARTER
12	33833-91J00	TUBE (L:250)	1	L:250->100
13	37835-95D00	LABEL, STOP	1	W/MANUAL STARTER



FIG.309C

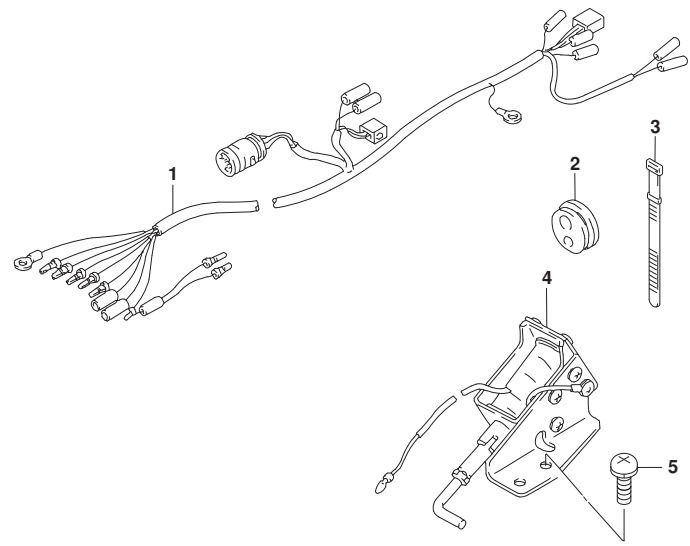


FIG.309C (1-G-14) IGNITION SWITCH (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36610-94411	HARNESS ASSY, WIRING	1	
2	36612-94421	GROMMET	1	
3	09407-12402	CLAMP (L:120)	1	
4	38600-94400	SOLENOID ASSY, CHOKE	1	
5	02112-35127	SCREW	2	



FIG.309D

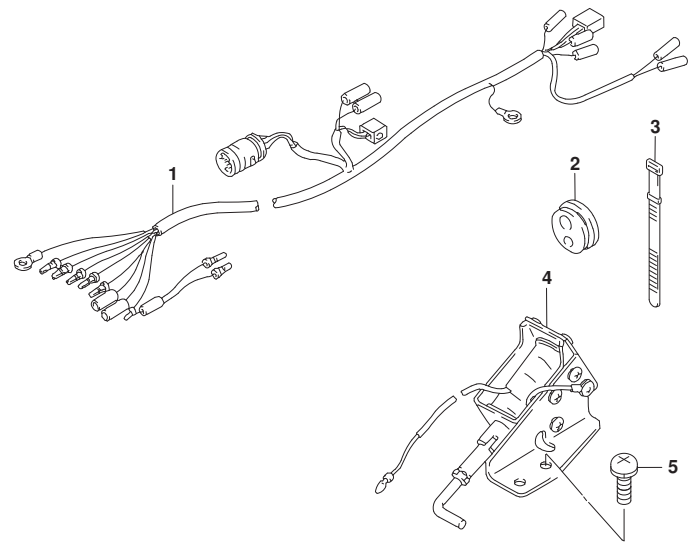


FIG.309D (1-G-15) IGNITION SWITCH (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36610-94411	HARNESS ASSY, WIRING	1	
2	36612-94421	GROMMET	1	
3	09407-12402	CLAMP (L:120)	1	
4	38600-94400	SOLENOID ASSY, CHOKE	1	
5	02112-35127	SCREW	2	



FIG.309E

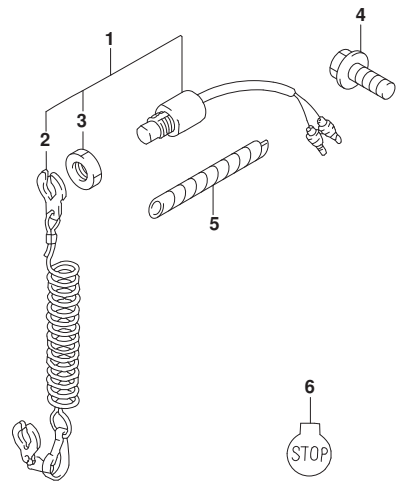


FIG.309E (1-H-2) IGNITION SWITCH (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37830-92L02	SWITCH ASSY, EMERGENCY & STOP	1	
2	37823-97J00	.PLATE, LOCK	1	
3	37826-97J00	.NUT	1	
4	01550-06127	BOLT	1	
5	33833-91J00	TUBE (L:250)	1	L:250->100
6	37835-95D00	LABEL, STOP	1	



FIG.319A

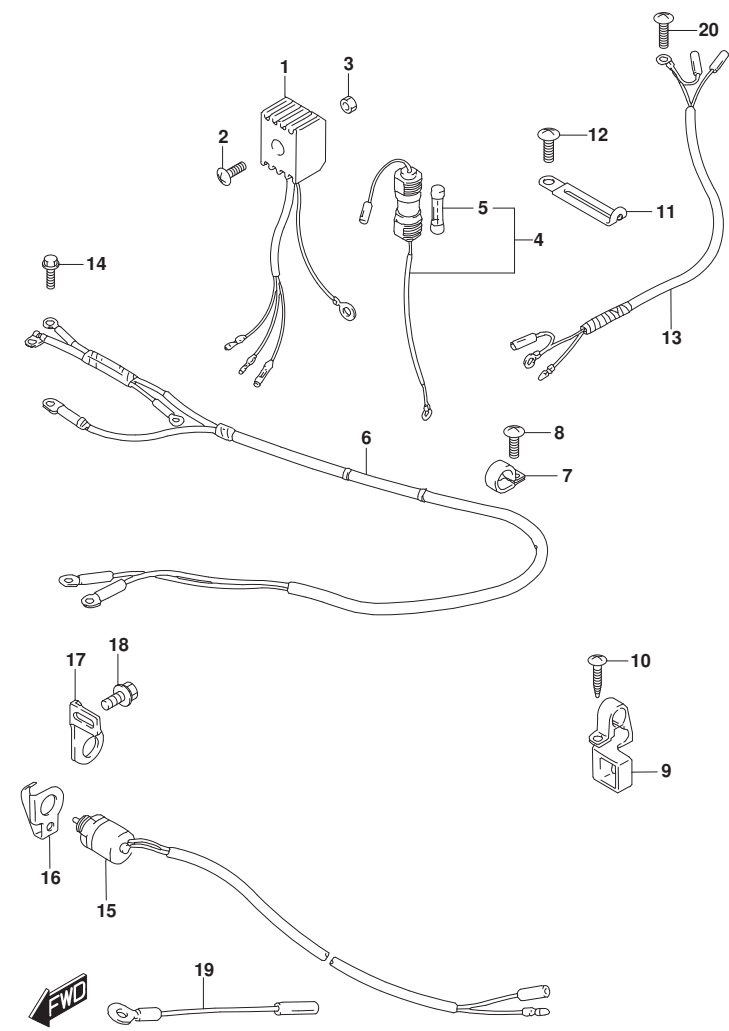


FIG.319A (1-H-3) ELECTRICAL (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	W/ELECTRIC STARTER
2	02142-05257	SCREW	1	W/ELECTRIC STARTER
3	08310-00057	NUT	1	W/ELECTRIC STARTER
4	36740-93901	FUSE CASE ASSY	1	W/ELECTRIC STARTER
5	09481-20001	.FUSE (20A)	1	W/ELECTRIC STARTER
6	33810-94411	CABLE ASSY, STARTER	1	W/ELECTRIC STARTER
7	09403-14204	CLAMP	1	W/ELECTRIC STARTER
8	02142-06167	SCREW	1	W/ELECTRIC STARTER
9	33816-96300	CLAMP, CABLE	1	W/ELECTRIC STARTER
10	03241-0625A	SCREW	1	W/ELECTRIC STARTER
11	29404-93J10	CLAMP	1	W/MANUAL STARTER
12	02142-06127	SCREW	1	W/MANUAL STARTER
13	36899-92L00	LEAD, STOP ETC	1	W/MANUAL STARTER
14	01550-06167	BOLT	1	W/ELECTRIC STARTER
15	37721-94404	SWITCH ASSY, NEUTRAL	1	W/ELECTRIC STARTER
16	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
17	37726-94402	BRACKET, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
18	01580-06167	BOLT	1	W/ELECTRIC STARTER
19	36895-94400	LEAD, ENGINE GROUND	1	
20	02142-06167	SCREW	1	W/MANUAL STARTER

FIG.319B

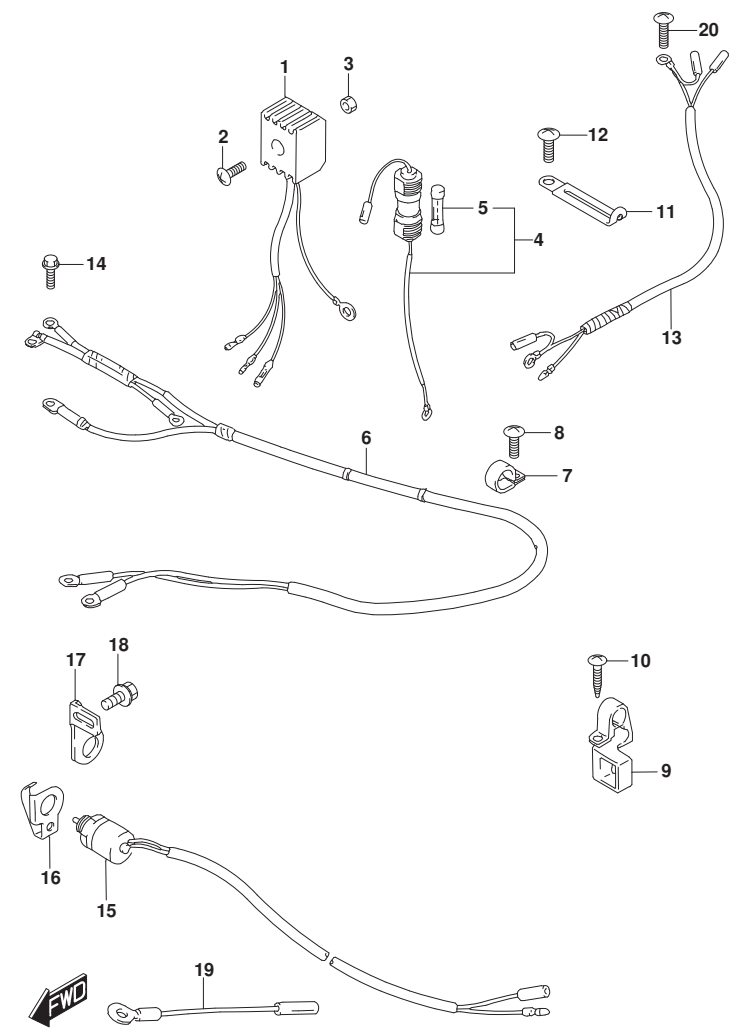


FIG.319B (1-H-4) ELECTRICAL (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	W/ELECTRIC STARTER
2	02142-05257	SCREW	1	W/ELECTRIC STARTER
3	08310-00057	NUT	1	W/ELECTRIC STARTER
4	36740-93901	FUSE CASE ASSY	1	W/ELECTRIC STARTER
5	09481-20001	.FUSE (20A)	1	W/ELECTRIC STARTER
6	33810-94411	CABLE ASSY, STARTER	1	W/ELECTRIC STARTER
7	09403-14204	CLAMP	1	W/ELECTRIC STARTER
8	02142-06167	SCREW	1	W/ELECTRIC STARTER
9	33816-96300	CLAMP, CABLE	1	W/ELECTRIC STARTER
10	03241-0625A	SCREW	1	W/ELECTRIC STARTER
11	29404-93J10	CLAMP	1	W/MANUAL STARTER
12	02142-06127	SCREW	1	W/MANUAL STARTER
13	36899-92L00	LEAD, STOP ETC	1	W/MANUAL STARTER
14	01550-06167	BOLT	1	W/ELECTRIC STARTER
15	37721-94404	SWITCH ASSY, NEUTRAL	1	W/ELECTRIC STARTER
16	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
17	37726-94402	BRACKET, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
18	01580-06167	BOLT	1	W/ELECTRIC STARTER
19	36895-94400	LEAD, ENGINE GROUND	1	
20	02142-06167	SCREW	1	W/MANUAL STARTER

FIG.319C

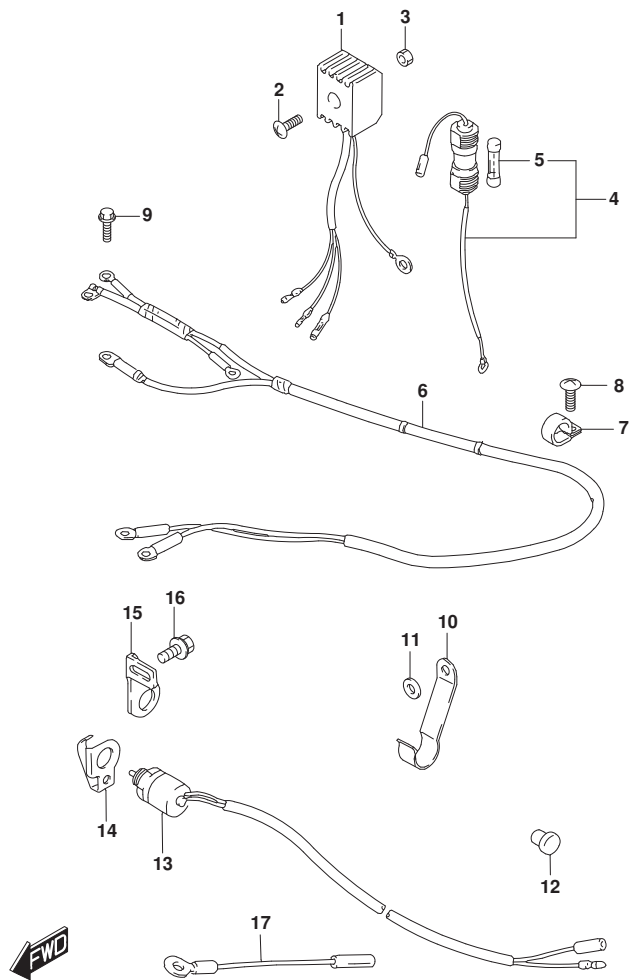


FIG.319C (1-H-5) ELECTRICAL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	
2	02142-05257	SCREW	1	
3	08310-00057	NUT	1	
4	36740-93901	FUSE CASE ASSY	1	
5	09481-20001	.FUSE (20A)	1	
6	33810-94411	CABLE ASSY, STARTER	1	
7	09403-14204	CLAMP	1	
8	02142-06167	SCREW	1	
9	01550-06167	BOLT	1	
10	36791-94504	HOLDER, CONNECTOR	1	
11	08322-01067	WASHER	1	
12	09250-09001	CAP (OD:14)	1	
13	37721-94404	SWITCH ASSY, NEUTRAL	1	
14	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	
15	37726-94402	BRACKET, NEUTRAL SWITCH	1	
16	01580-06167	BOLT	1	
17	36895-94400	LEAD, ENGINE GROUND	1	

FIG.319D

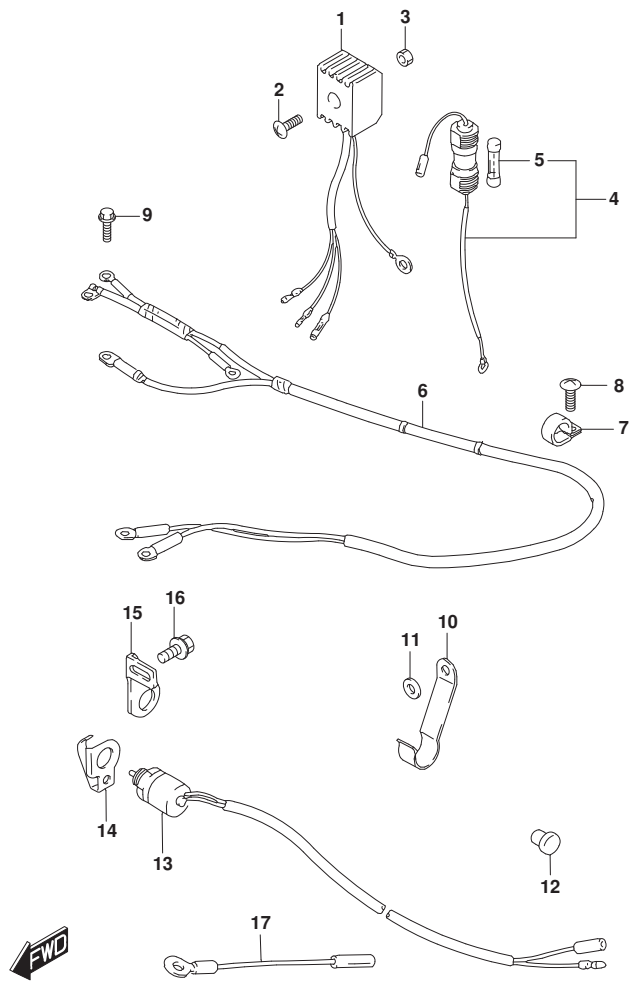


FIG.319D (1-H-6) ELECTRICAL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	
2	02142-05257	SCREW	1	
3	08310-00057	NUT	1	
4	36740-93901	FUSE CASE ASSY	1	
5	09481-20001	.FUSE (20A)	1	
6	33810-94411	CABLE ASSY, STARTER	1	
7	09403-14204	CLAMP	1	
8	02142-06167	SCREW	1	
9	01550-06167	BOLT	1	
10	36791-94504	HOLDER, CONNECTOR	1	
11	08322-01067	WASHER	1	
12	09250-09001	CAP (OD:14)	1	
13	37721-94404	SWITCH ASSY, NEUTRAL	1	
14	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	
15	37726-94402	BRACKET, NEUTRAL SWITCH	1	
16	01580-06167	BOLT	1	
17	36895-94400	LEAD, ENGINE GROUND	1	

FIG.319E


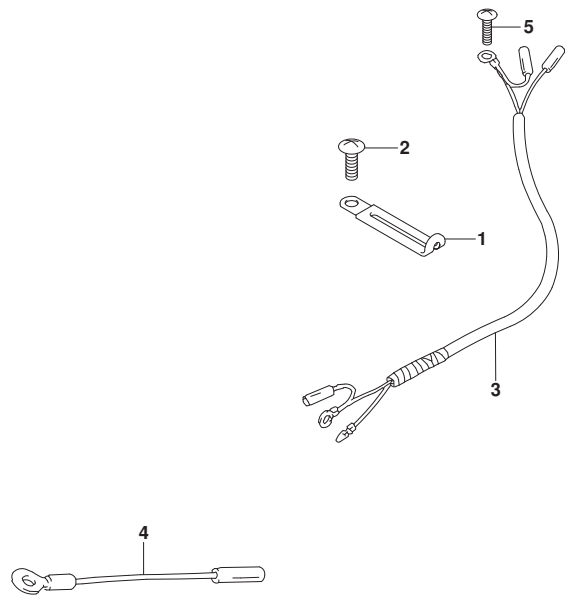


FIG.319E (1-H-7) ELECTRICAL (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	29404-93J10	CLAMP	1	
2	02142-06127	SCREW	1	
3	36899-92L00	LEAD, STOP ETC	1	
4	36895-94400	LEAD, ENGINE GROUND	1	
5	02142-06167	SCREW	1	



FIG.335A

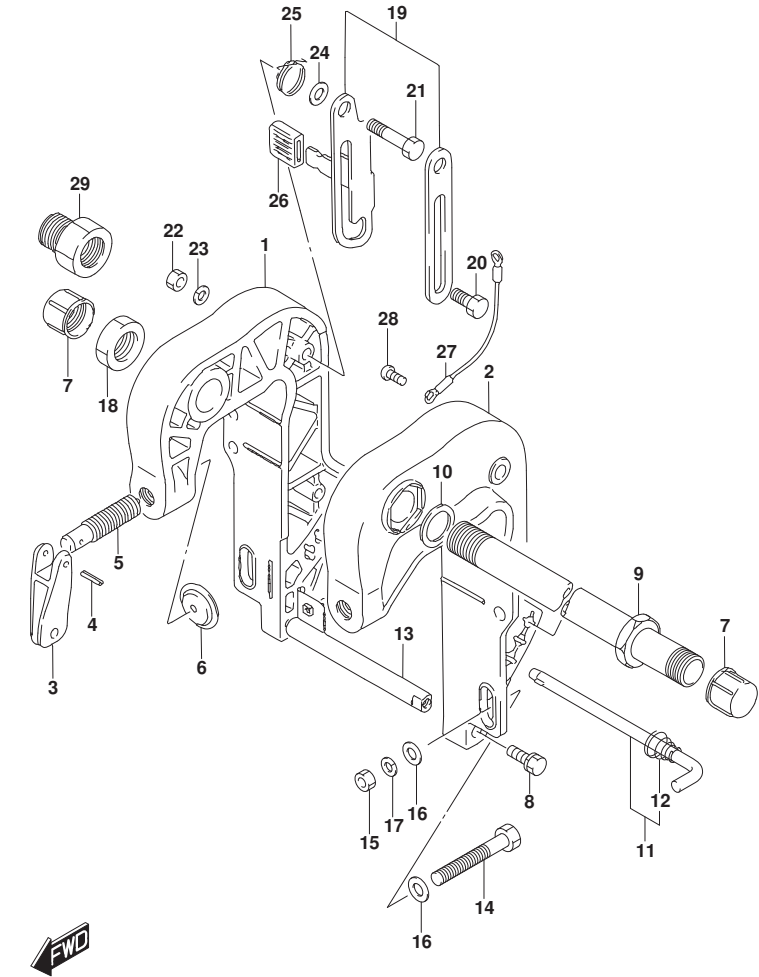


DT40W_P40_016_335A
CLAMP BRACKET

FIG.335A (1-H-8) CLAMP BRACKET (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-92L10-0EP	BRACKET, CLAMP STBD (BLACK)	1	OPT
2	41121-92L10-0EP	BRACKET, CLAMP PORT (BLACK)	1	OPT
3	41212-91L00-0EP	HANDLE, CLAMP (BLACK)	2	
4	09205-06021	SPRING PIN (6X25)	2	
5	41211-94302	SCREW, CLAMP	2	
6	41213-94J01	PLATE, CLAMP	2	
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2	
8	09116-08152	BOLT (8X45)	2	
9	41130-92L00	SHAFT, CLAMP BRACKET	1	
10	09160-22033	WASHER (22.5X38X1)	1	
11	45420-92L00	PIN, TILT LOCK	1	
12	09441-17002	.SPRING	1	
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1	
14	09100-08311	BOLT (8X90)	2	
15	09140-08023-XC0	NUT	2	
16	09160-08081	WASHER (8.5X23X1.5)	4	
17	29162-93J10	LOCK WASHER	2	
18	09159-22006	NUT	1	
19	41200-92L00	ARM ASSY, TILT	1	
20	09111-10067	BOLT (10X20.5)	2	
21	09111-10069	BOLT (10X54.5)	2	
22	29141-93J20	NUT	2	
23	09162-10005	LOCK WASHER	2	
24	09160-10082	WASHER (10.5X19X2)	2	
25	09448-29009	SPRING	1	
26	41225-94400	RUBBER, TILT LOCK	1	
27	36894-95201	LEAD (L:165)	1	
28	29125-93J10	SCREW	2	
29	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT

DT40W_P40_016

FIG.335B

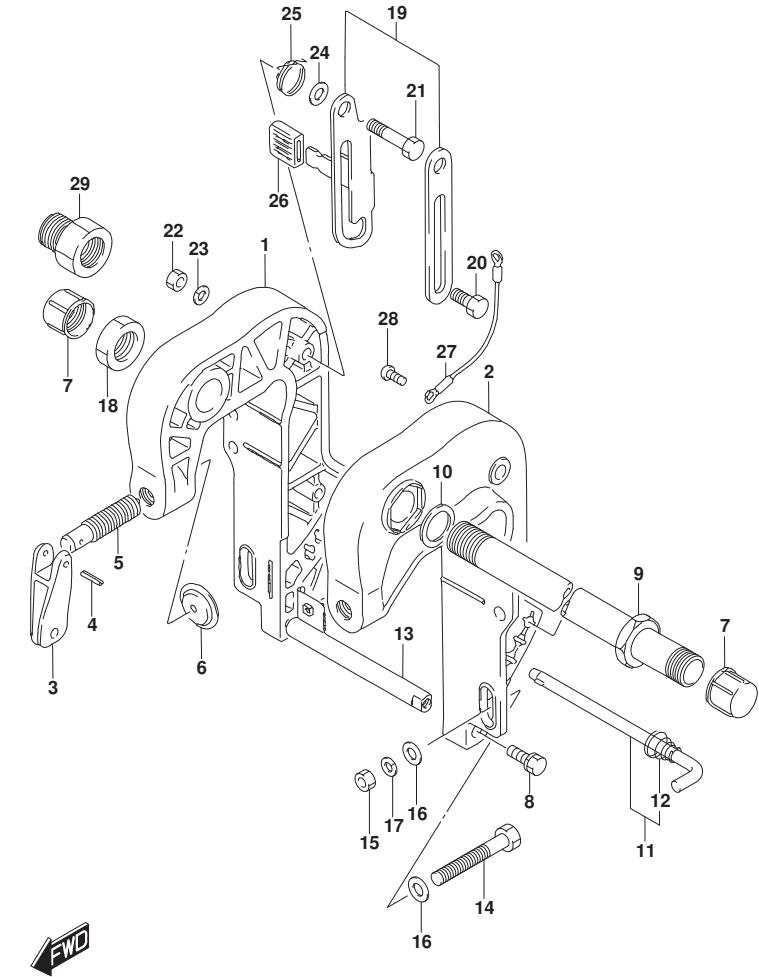


DT40W_P40_016_335B
CLAMP BRACKET

FIG.335B (1-H-9) CLAMP BRACKET (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-92L10-0EP	BRACKET, CLAMP STBD (BLACK)	1	OPT
2	41121-92L10-0EP	BRACKET, CLAMP PORT (BLACK)	1	OPT
3	41212-91L00-0EP	HANDLE, CLAMP (BLACK)	2	
4	09205-06021	SPRING PIN (6X25)	2	
5	41211-94302	SCREW, CLAMP	2	
6	41213-94J01	PLATE, CLAMP	2	
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2	
8	09116-08152	BOLT (8X45)	2	
9	41130-92L00	SHAFT, CLAMP BRACKET	1	
10	09160-22033	WASHER (22.5X38X1)	1	
11	45420-92L00	PIN, TILT LOCK	1	
12	09441-17002	.SPRING	1	
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1	
14	09100-08311	BOLT (8X90)	2	
15	09140-08023-XC0	NUT	2	
16	09160-08081	WASHER (8.5X23X1.5)	4	
17	29162-93J10	LOCK WASHER	2	
18	09159-22006	NUT	1	
19	41200-92L00	ARM ASSY, TILT	1	
20	09111-10067	BOLT (10X20.5)	2	
21	09111-10069	BOLT (10X54.5)	2	
22	29141-93J20	NUT	2	
23	09162-10005	LOCK WASHER	2	
24	09160-10082	WASHER (10.5X19X2)	2	
25	09448-29009	SPRING	1	
26	41225-94400	RUBBER, TILT LOCK	1	
27	36894-95201	LEAD (L:165)	1	
28	29125-93J10	SCREW	2	
29	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT

DT40W_P40_016

FIG.335C

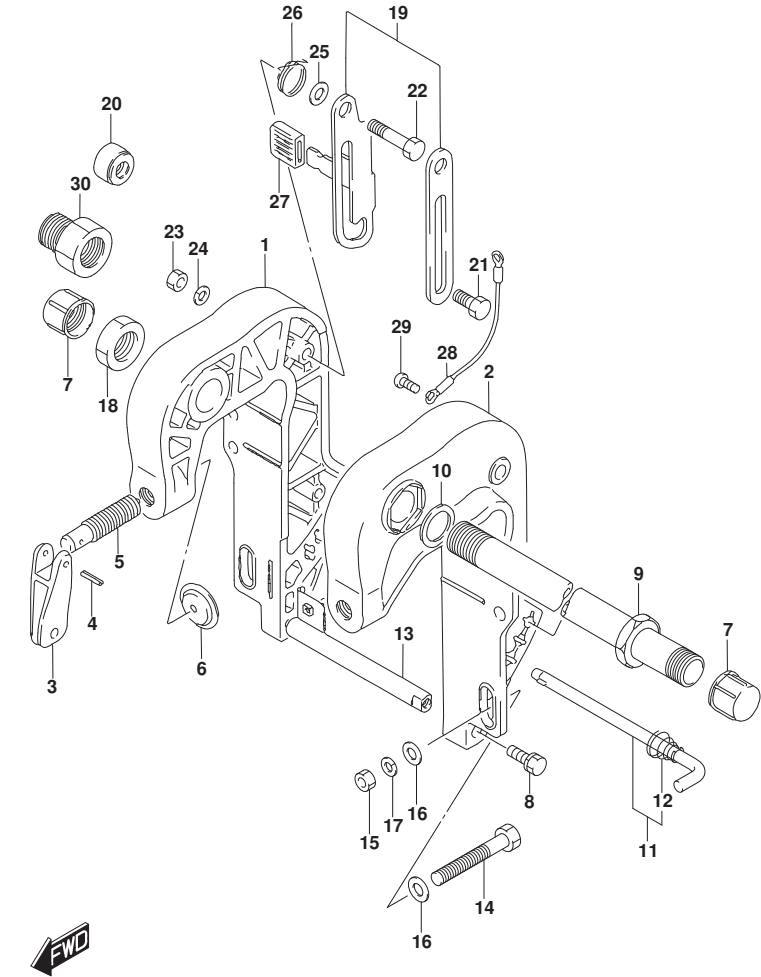

DT40W_P40_016_335C
CLAMP BRACKET

FIG.335C (1-H-10) CLAMP BRACKET (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	41111-92L10-0EP	BRACKET, CLAMP STBD (BLACK)	1	OPT	
2	41121-92L10-0EP	BRACKET, CLAMP PORT (BLACK)	1	OPT	
3	41212-91L00-0EP	HANDLE, CLAMP (BLACK)	2		
4	09205-06021	SPRING PIN (6X25)	2		
5	41211-94302	SCREW, CLAMP	2		
6	41213-94J01	PLATE, CLAMP	2		
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2		
8	09116-08152	BOLT (8X45)	2		
9	41130-92L00	SHAFT, CLAMP BRACKET	1		
10	09160-22033	WASHER (22.5X38X1)	1		
11	45420-92L00	PIN, TILT LOCK	1		
12	09441-17002	.SPRING	1		
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1		
14	09100-08311	BOLT (8X90)	2		
15	09140-08023-XC0	NUT	2		
16	09160-08081	WASHER (8.5X23X1.5)	4		
17	29162-93J10	LOCK WASHER	2		
18	09159-22006	NUT	1		
19	41200-92L00	ARM ASSY, TILT	1		
20	41161-94400	SEAL, STEERING CABLE	1		
21	09111-10067	BOLT (10X20.5)	2		
22	09111-10069	BOLT (10X54.5)	2		
23	29141-93J20	NUT	2		
24	09162-10005	LOCK WASHER	2		
25	09160-10082	WASHER (10.5X19X2)	2		
26	09448-29009	SPRING	1		
27	41225-94400	RUBBER, TILT LOCK	1		
28	36894-95201	LEAD (L:165)	1		
29	29125-93J10	SCREW	2		
30	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT	

DT40W_P40_016

FIG.335D

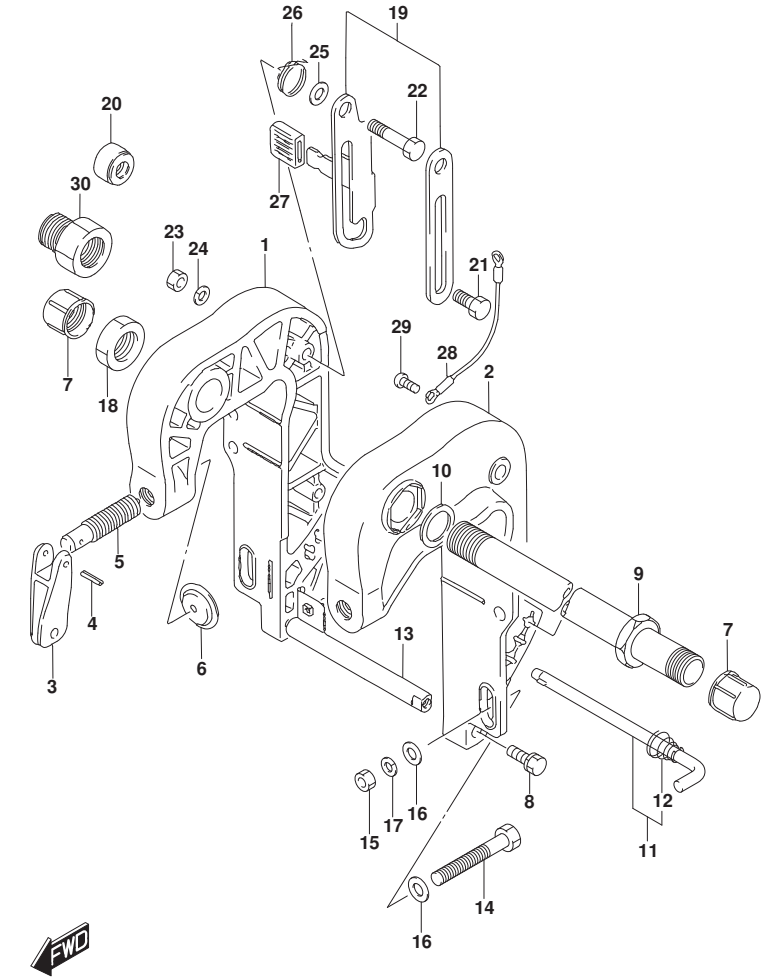


FIG.335D (1-H-11) CLAMP BRACKET (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	41111-92L10-0EP	BRACKET, CLAMP STBD (BLACK)	1	OPT	
2	41121-92L10-0EP	BRACKET, CLAMP PORT (BLACK)	1	OPT	
3	41212-91L00-0EP	HANDLE, CLAMP (BLACK)	2		
4	09205-06021	SPRING PIN (6X25)	2		
5	41211-94302	SCREW, CLAMP	2		
6	41213-94J01	PLATE, CLAMP	2		
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2		
8	09116-08152	BOLT (8X45)	2		
9	41130-92L00	SHAFT, CLAMP BRACKET	1		
10	09160-22033	WASHER (22.5X38X1)	1		
11	45420-92L00	PIN, TILT LOCK	1		
12	09441-17002	.SPRING	1		
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1		
14	09100-08311	BOLT (8X90)	2		
15	09140-08023-XC0	NUT	2		
16	09160-08081	WASHER (8.5X23X1.5)	4		
17	29162-93J10	LOCK WASHER	2		
18	09159-22006	NUT	1		
19	41200-92L00	ARM ASSY, TILT	1		
20	41161-94400	SEAL, STEERING CABLE	1		
21	09111-10067	BOLT (10X20.5)	2		
22	09111-10069	BOLT (10X54.5)	2		
23	29141-93J20	NUT	2		
24	09162-10005	LOCK WASHER	2		
25	09160-10082	WASHER (10.5X19X2)	2		
26	09448-29009	SPRING	1		
27	41225-94400	RUBBER, TILT LOCK	1		
28	36894-95201	LEAD (L:165)	1		
29	29125-93J10	SCREW	2		
30	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT	

FIG.335E


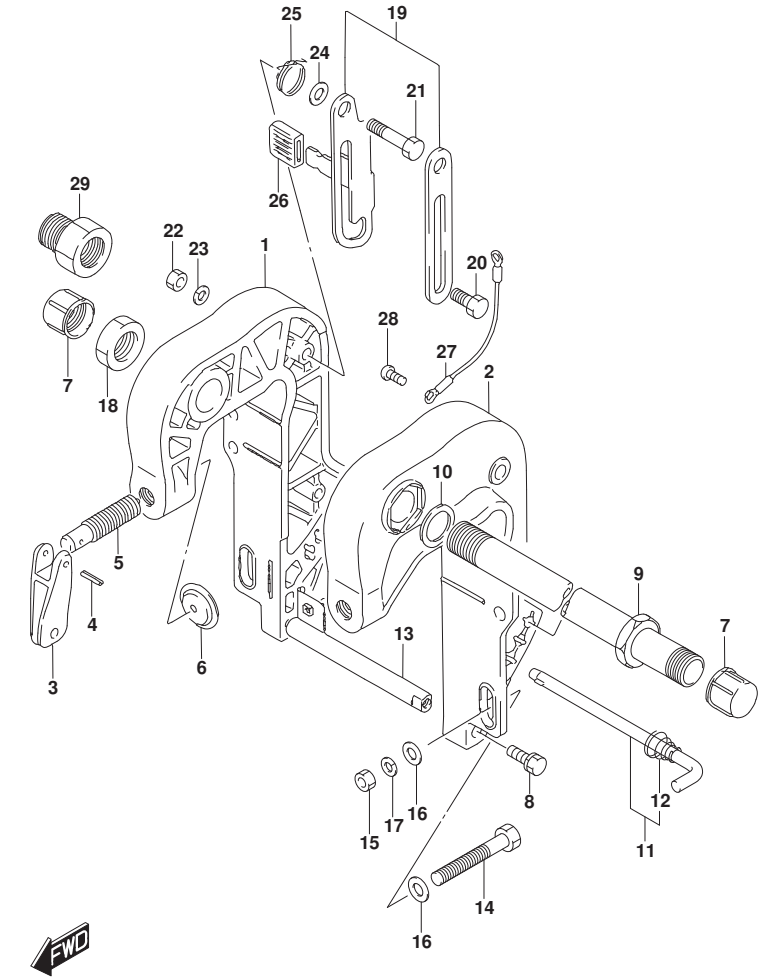


FIG.335E (1-H-12) CLAMP BRACKET (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	41111-92L10-0EP	BRACKET, CLAMP STBD (BLACK)	1	OPT	
2	41121-92L10-0EP	BRACKET, CLAMP PORT (BLACK)	1	OPT	
3	41212-91L00-0EP	HANDLE, CLAMP (BLACK)	2		
4	09205-06021	SPRING PIN (6X25)	2		
5	41211-94302	SCREW, CLAMP	2		
6	41213-94J01	PLATE, CLAMP	2		
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2		
8	09116-08152	BOLT (8X45)	2		
9	41130-92L00	SHAFT, CLAMP BRACKET	1		
10	09160-22033	WASHER (22.5X38X1)	1		
11	45420-92L00	PIN, TILT LOCK	1		
12	09441-17002	.SPRING	1		
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1		
14	09100-08311	BOLT (8X90)	2		
15	09140-08023-XC0	NUT	2		
16	09160-08081	WASHER (8.5X23X1.5)	4		
17	29162-93J10	LOCK WASHER	2		
18	09159-22006	NUT	1		
19	41200-92L00	ARM ASSY, TILT	1		
20	09111-10067	BOLT (10X20.5)	2		
21	09111-10069	BOLT (10X54.5)	2		
22	29141-93J20	NUT	2		
23	09162-10005	LOCK WASHER	2		
24	09160-10082	WASHER (10.5X19X2)	2		
25	09448-29009	SPRING	1		
26	41225-94400	RUBBER, TILT LOCK	1		
27	36894-95201	LEAD (L:165)	1		
28	29125-93J10	SCREW	2		
29	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT	

FIG.336A

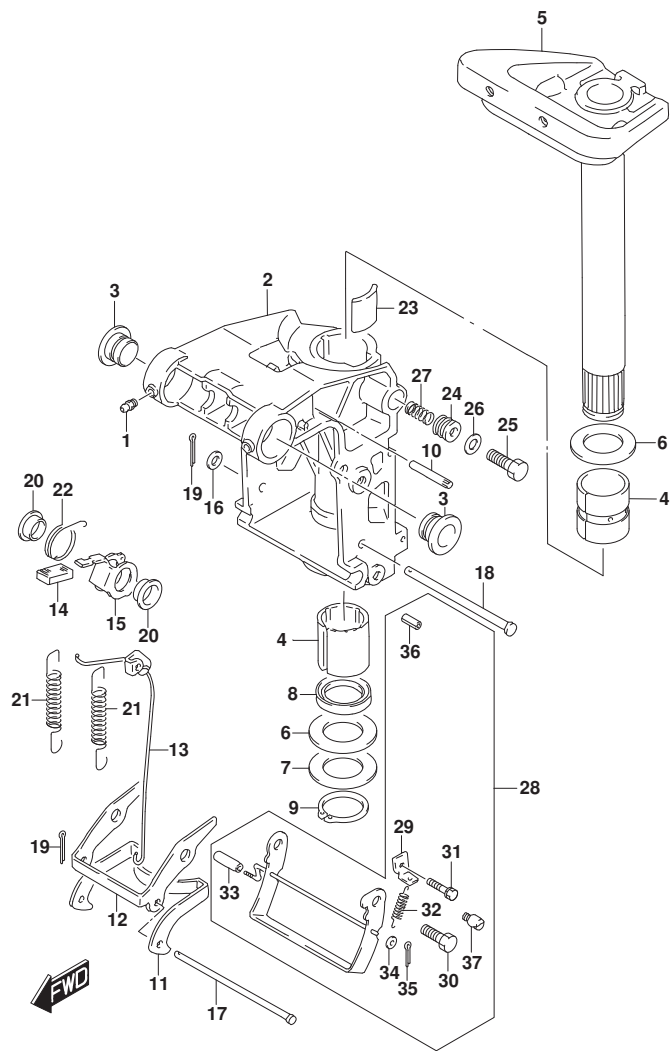

DT40W_P40_016_336A
SWIVEL BRACKET

FIG.336A (1-H-13) SWIVEL BRACKET (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-0EP	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-0EP	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43411-97E00	ADJUSTER, STEERING	1	
24	43412-93900	COVER, STEERING ADJUSTER	1	
25	09100-08309	BOLT (8X35)	1	
26	09160-08091	WASHER (8.5X14X1.0)	1	
27	29440-93J00	SPRING, STEERING ADJUSTER	1	

DT40W_P40_016

FIG.336A


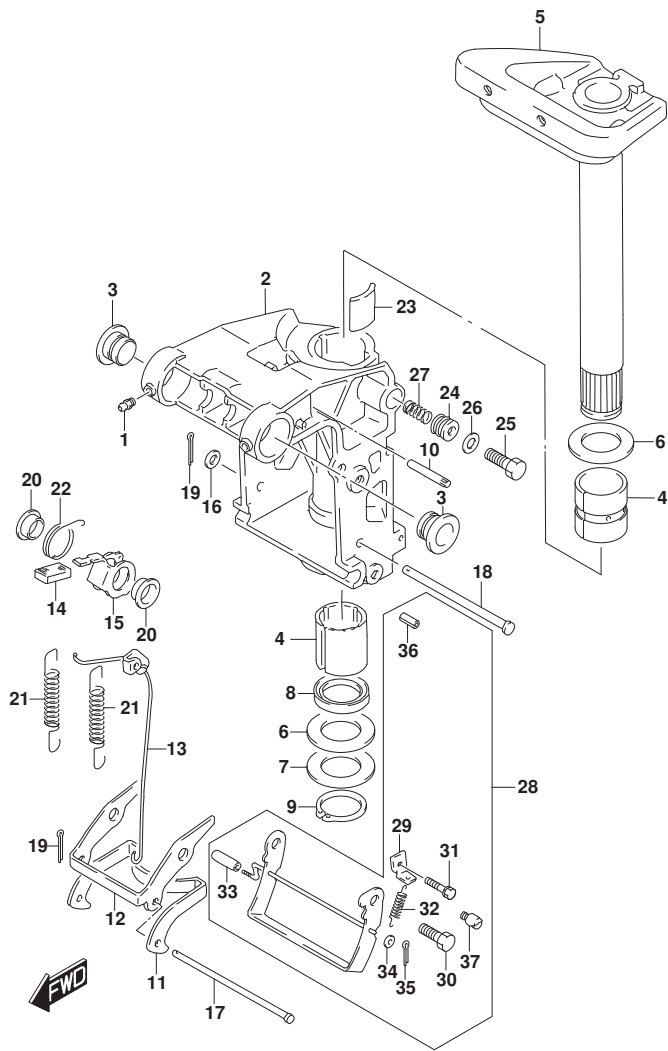


FIG.336A (1-H-14) SWIVEL BRACKET (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
28	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
29	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
30	09111-10045	.BOLT (10X20.8)	2	OPT	
31	09117-06030	.BOLT (6X16)	1	OPT	
32	09443-12039	.SPRING	1	OPT	
33	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
34	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
35	09204-01002	.PIN	1	OPT	
36	09205-08002	.SPRING PIN (8X16)	1	OPT	
37	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

FIG.336B

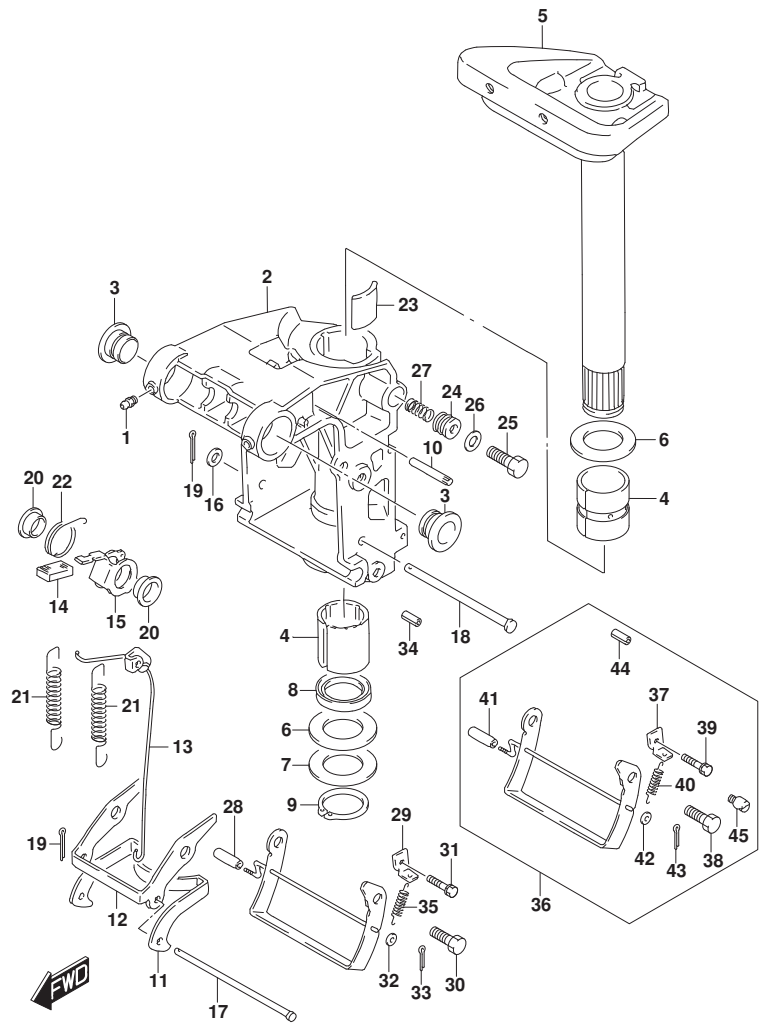


DT40W_P40_016_336B
SWIVEL BRACKET

FIG.336B (1-H-15) SWIVEL BRACKET (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-0EP	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-0EP	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43411-97E00	ADJUSTER, STEERING	1	
24	43412-93900	COVER, STEERING ADJUSTER	1	
25	09100-08309	BOLT (8X35)	1	
26	09160-08091	WASHER (8.5X14X1.0)	1	
27	29440-93J00	SPRING, STEERING ADJUSTER	1	
28	45255-95500	KNOB, RELEASE LEVER	1	
29	45713-92L00	STOPPER, SHALLOW WATER DRIVE	1	
30	09111-10067	BOLT (10X20.5)	2	
31	09116-06225	BOLT (6X15)	1	
32	09160-05029	WASHER (5.5X12X0.8)	1	
33	09204-01002	PIN	1	
34	09205-08002	SPRING PIN (8X16)	1	

DT40W_P40_016

FIG.336B

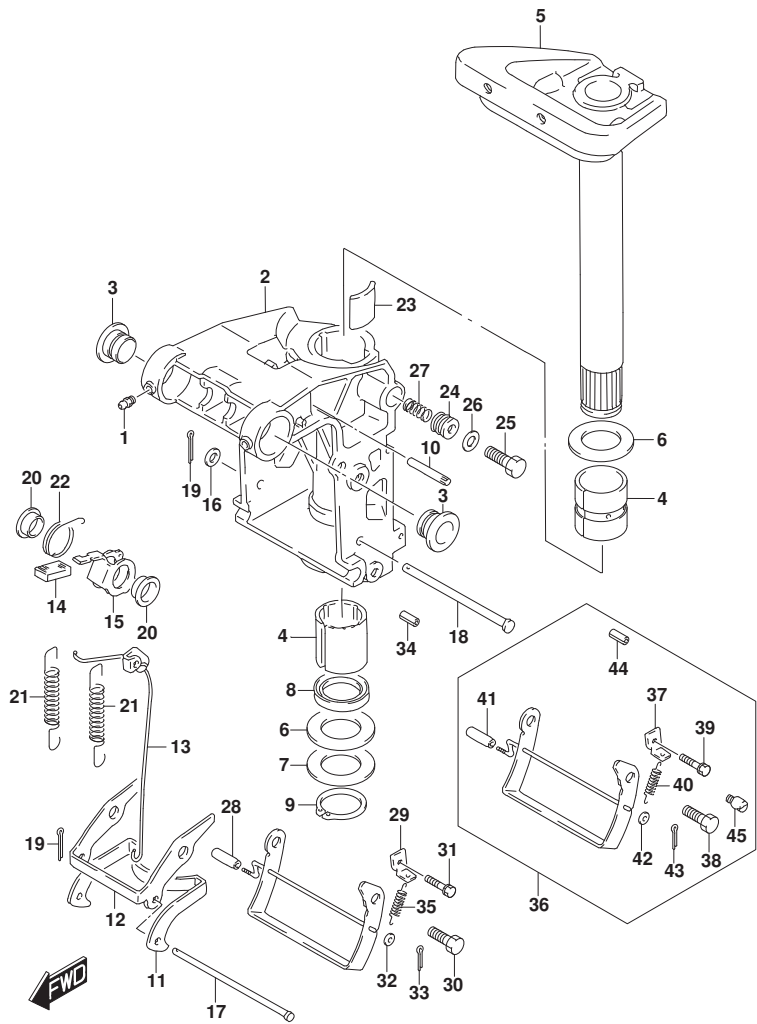


DT40W_P40_016_336B
SWIVEL BRACKET

FIG.336B (1-I-2) SWIVEL BRACKET (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
35	09443-12039	SPRING	1		
36	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
37	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
38	09111-10045	.BOLT (10X20.8)	2	OPT	
39	09117-06030	.BOLT (6X16)	1	OPT	
40	09443-12039	.SPRING	1	OPT	
41	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
42	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
43	09204-01002	.PIN	1	OPT	
44	09205-08002	.SPRING PIN (8X16)	1	OPT	
45	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

DT40W_P40_016

FIG.336C

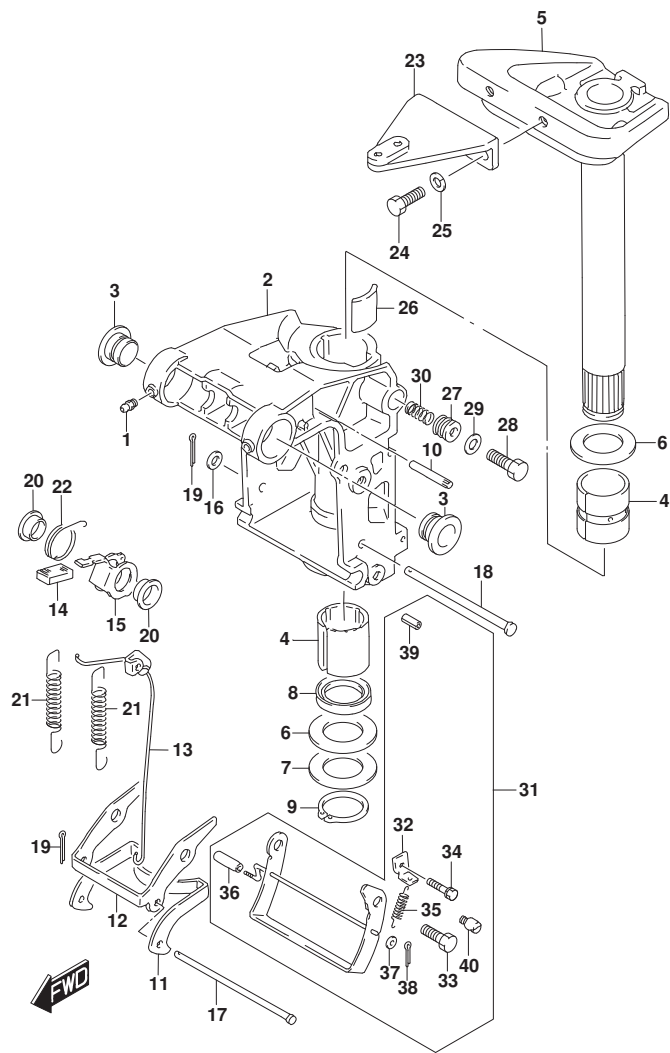


DT40W_P40_016_336C
SWIVEL BRACKET

FIG.336C (1-I-3) SWIVEL BRACKET (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-0EP	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-0EP	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43755-97E01	ATTACHMENT, STEERING BRACKET	1	
24	09100-10316	BOLT (10X25)	2	
25	09162-10005	LOCK WASHER	2	
26	43411-97E00	ADJUSTER, STEERING	1	
27	43412-93900	COVER, STEERING ADJUSTER	1	
28	09100-08309	BOLT (8X35)	1	
29	09160-08091	WASHER (8.5X14X1.0)	1	
30	29440-93J00	SPRING, STEERING ADJUSTER	1	

DT40W_P40_016

FIG.336C

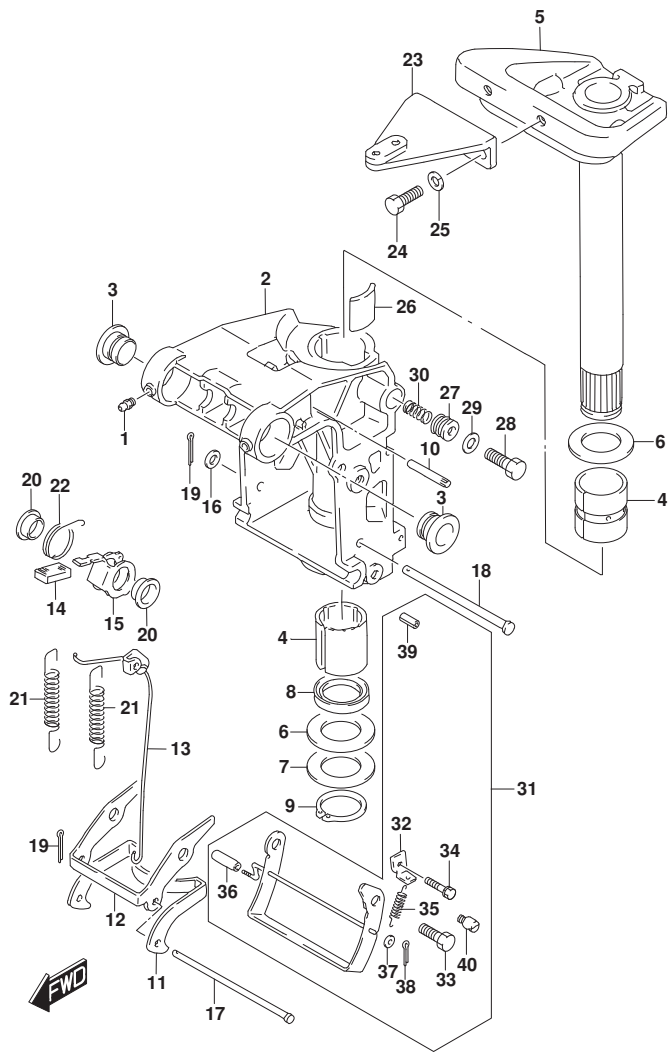


DT40W_P40_016_336C
SWIVEL BRACKET

FIG.336C (1-I-4) SWIVEL BRACKET (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
31	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
32	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
33	09111-10045	.BOLT (10X20.8)	2	OPT	
34	09117-06030	.BOLT (6X16)	1	OPT	
35	09443-12039	.SPRING	1	OPT	
36	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
37	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
38	09204-01002	.PIN	1	OPT	
39	09205-08002	.SPRING PIN (8X16)	1	OPT	
40	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

DT40W_P40_016

FIG.336D

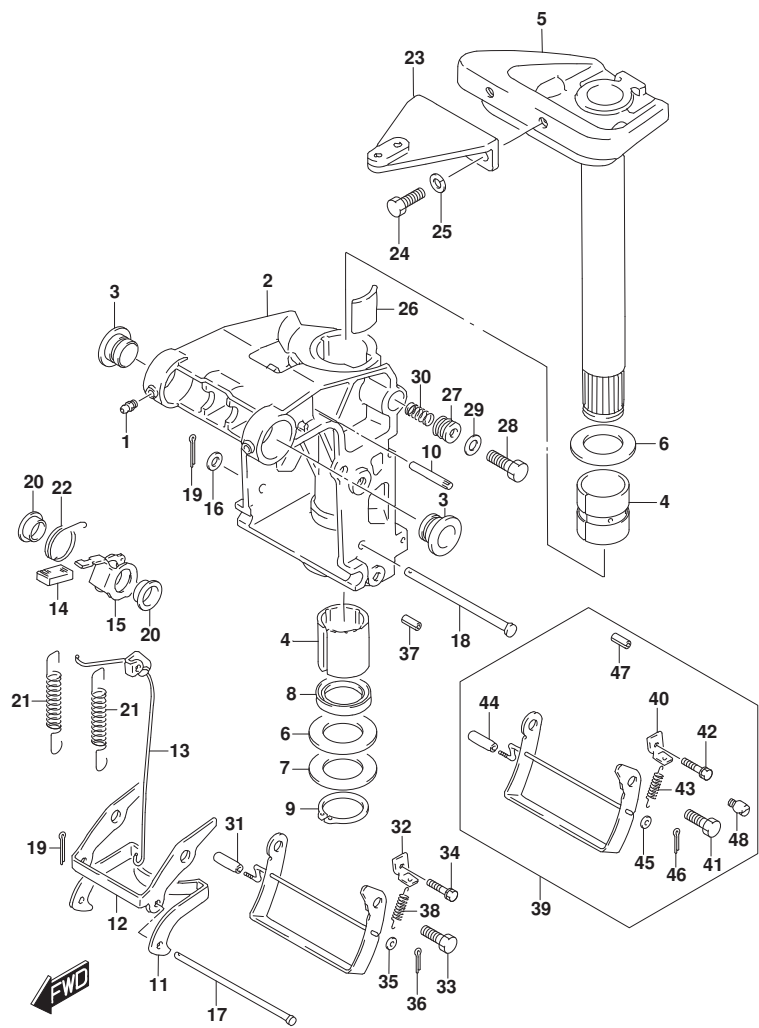


DT40W_P40_016_336D
SWIVEL BRACKET

FIG.336D (1-I-5) SWIVEL BRACKET (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-0EP	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-0EP	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43755-97E01	ATTACHMENT, STEERING BRACKET	1	
24	09100-10316	BOLT (10X25)	2	
25	09162-10005	LOCK WASHER	2	
26	43411-97E00	ADJUSTER, STEERING	1	
27	43412-93900	COVER, STEERING ADJUSTER	1	
28	09100-08309	BOLT (8X35)	1	
29	09160-08091	WASHER (8.5X14X1.0)	1	
30	29440-93J00	SPRING, STEERING ADJUSTER	1	
31	45255-95500	KNOB, RELEASE LEVER	1	
32	45713-92L00	STOPPER, SHALLOW WATER DRIVE	1	
33	09111-10067	BOLT (10X20.5)	2	
34	09116-06225	BOLT (6X15)	1	

FIG.336D

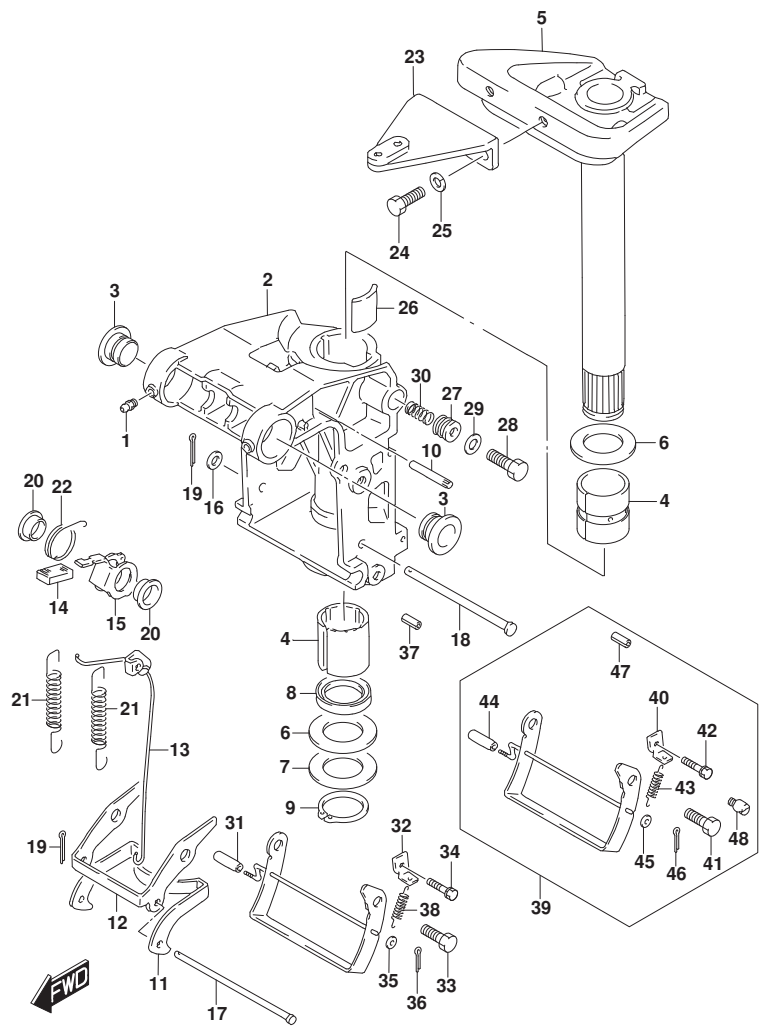


DT40W_P40_016_336D
SWIVEL BRACKET

FIG.336D (1-I-6) SWIVEL BRACKET (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09160-05029	WASHER (5.5X12X0.8)	1	
36	09204-01002	PIN	1	
37	09205-08002	SPRING PIN (8X16)	1	
38	09443-12039	SPRING	1	
39	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT
40	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT
41	09111-10045	.BOLT (10X20.8)	2	OPT
42	09117-06030	.BOLT (6X16)	1	OPT
43	09443-12039	.SPRING	1	OPT
44	45255-95500	.KNOB, RELEASE LEVER	1	OPT
45	09160-05029	.WASHER (5.5X12X0.8)	1	OPT
46	09204-01002	.PIN	1	OPT
47	09205-08002	.SPRING PIN (8X16)	1	OPT
48	45331-94610	.PIN, SHALLOW DRIVE	1	OPT

DT40W_P40_016

FIG.336E

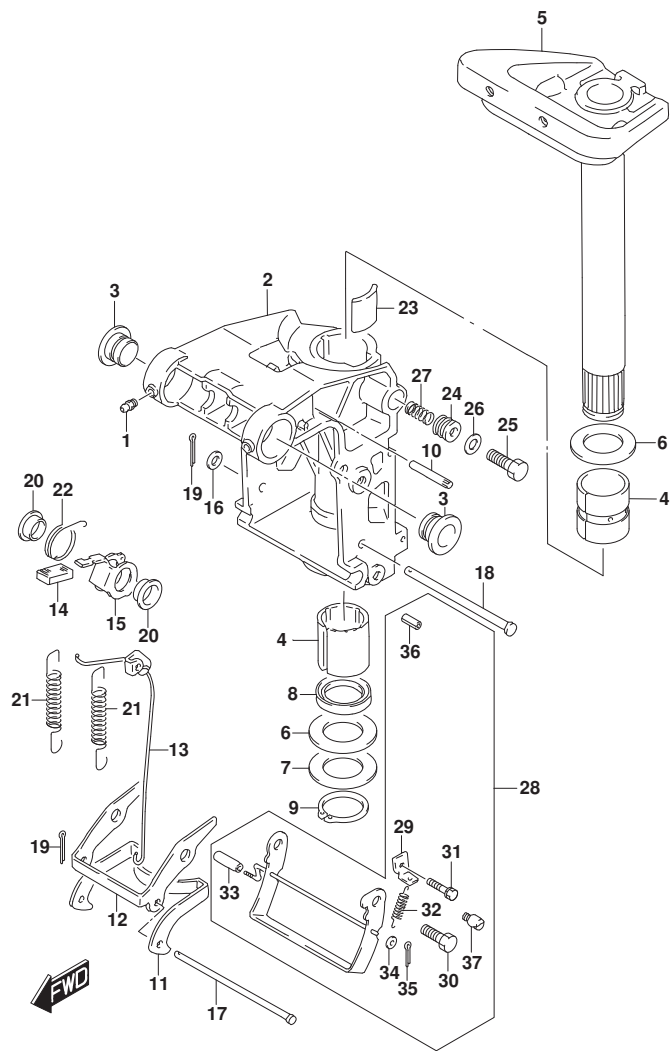


DT40W_P40_016_336E
SWIVEL BRACKET

FIG.336E (1-I-7) SWIVEL BRACKET (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-0EP	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-0EP	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43411-97E00	ADJUSTER, STEERING	1	
24	43412-93900	COVER, STEERING ADJUSTER	1	
25	09100-08309	BOLT (8X35)	1	
26	09160-08091	WASHER (8.5X14X1.0)	1	
27	29440-93J00	SPRING, STEERING ADJUSTER	1	

FIG.336E

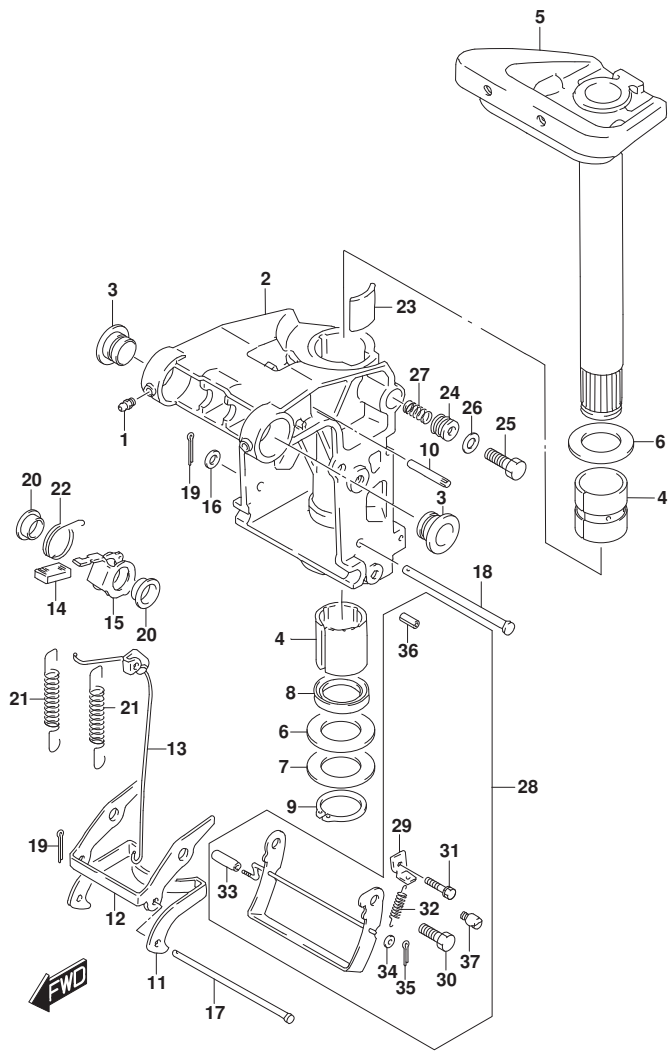


DT40W_P40_016_336E
SWIVEL BRACKET

FIG.336E (1-I-8) SWIVEL BRACKET (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
28	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
29	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
30	09111-10045	.BOLT (10X20.8)	2	OPT	
31	09117-06030	.BOLT (6X16)	1	OPT	
32	09443-12039	.SPRING	1	OPT	
33	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
34	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
35	09204-01002	.PIN	1	OPT	
36	09205-08002	.SPRING PIN (8X16)	1	OPT	
37	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

DT40W_P40_016

FIG.405A

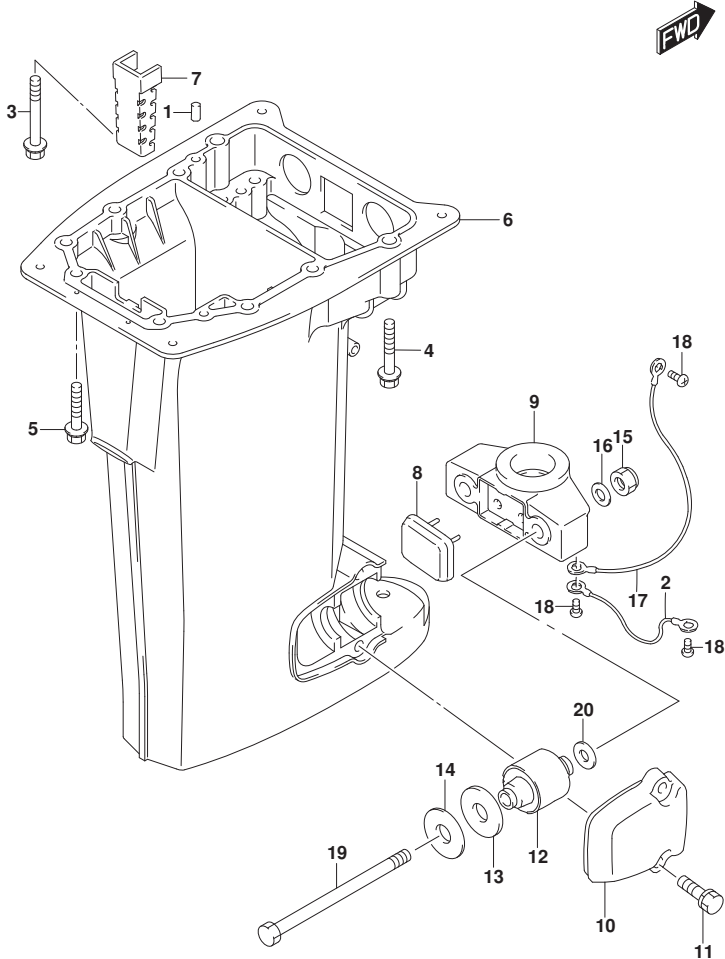


DT40W_P40_016_405A
DRIVE SHAFT HOUSING

FIG.405A (1-I-9) DRIVE SHAFT HOUSING (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09202-06031	PIN (6X12)	2	
2	36894-95201	LEAD (L:165)	1	
3	09118-08172	BOLT (8X85)	1	
4	09118-08171	BOLT (8X75)	2	
5	09118-08168	BOLT (8X50)	6	
6-1	52110-92L30-0EP	HOUSING, DRIVE SHAFT (S) (BLACK)	1	W/TRANSOM(S)
6-2	52110-92L50-0EP	HOUSING, DRIVE SHAFT (SL) (BLACK)	1	W/TRANSOM(L)
6-3	52110-92L40-0EP	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L2)
7	11435-94400	PLATE, EXHAUST RELEASE	1	
8	54151-99E00	MOUNT, LOWER THRUST	1	
9	54211-92L00-0EP	BRACKET, LOWER MOUNT (BLACK)	1	
10	54221-92L10-0EP	COVER, LOWER MOUNT (BLACK)	2	
11	09116-08153	BOLT (8X35)	4	
12-1	54160-94410	MOUNT, LOWER	2	W/TRANSOM(S) W/TRANSOM(L)
12-2	54160-92L00	MOUNT, LOWER	2	W/TRANSOM(L2)
13	54165-94400	DAMPER, REVERSE STOP, LOWER	2	
14	09160-13018	WASHER (13X40X3)	2	
15	09159-12014	NUT	2	
16	09160-12066	WASHER (12.5X22X2.5)	2	
17	36894-94401	LEAD (L:195)	1	
18	29125-93J10	SCREW	3	
19	09100-12123	BOLT (12X125)	2	
20	09160-12108	WASHER (12X28X1)	2	

DT40W_P40_016




DT40W_P40_016

DT40W_P40_016_405C
DRIVE SHAFT HOUSING




DT40W_P40_016

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	09202-06031	PIN (6X12)	2	
2	36894-95201	LEAD (L:165)	1	
3	09118-08172	BOLT (8X85)	1	
4	09118-08171	BOLT (8X75)	2	
5	09118-08168	BOLT (8X50)	6	
6-1	52110-92L50-0EP	HOUSING, DRIVE SHAFT (SL) (BLACK)	1	W/TRANSOM(L)
6-2	52110-92L40-0EP	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L2)
7	11435-94400	PLATE, EXHAUST RELEASE	1	
8	54151-99E00	MOUNT, LOWER THRUST	1	
9	54211-92L00-0EP	BRACKET, LOWER MOUNT (BLACK)	1	
10	54221-92L10-0EP	COVER, LOWER MOUNT (BLACK)	2	
11	09116-08153	BOLT (8X35)	4	
12-1	54160-94410	MOUNT, LOWER	2	W/TRANSOM(L)
12-2	54160-92L00	MOUNT, LOWER	2	W/TRANSOM(L2)
13	54165-94400	DAMPER, REVERSE STOP, LOWER	2	
14	09160-13018	WASHER (13X40X3)	2	
15	09159-12014	NUT	2	
16	09160-12066	WASHER (12.5X22X2.5)	2	
17	36894-94401	LEAD (L:195)	1	
18	29125-93J10	SCREW	3	
19	09100-12123	BOLT (12X125)	2	
20	09160-12108	WASHER (12X28X1)	2	




DT40W_P40_016



DT40W_P40_016

FIG.407A

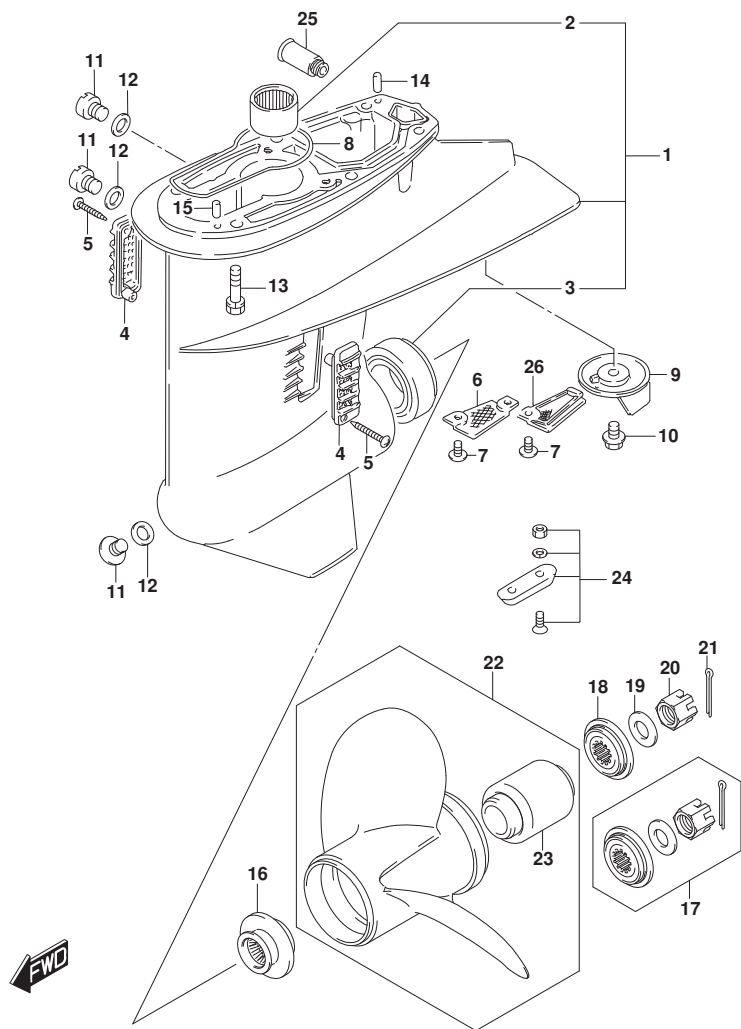

DT40W_P40_016_407A
GEAR CASE

FIG.407A (1-14) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-92L20-0EP	CASE ASSY, GEAR (BLACK)	1	
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	17631-91L00	FILTER, WATER	2	
5	03142-04309	SCREW	2	
6	17635-87E00	FILTER, SUB WATER	1	
7	09125-05046	SCREW (5X12)	2	
8	55122-88L00	RING, GEAR CASE SEAL	1	
9	55125-92L00	TAB, TRIM	1	
10	09116-08147	BOLT (8X16)	1	
11	09248-10008	PLUG (10X7.5)	3	
12	09168-10022	GASKET (10X17X1.5)	3	
13	09116-08155	BOLT (8X45)	6	
14	09202-06027	PIN (6X23)	1	
15	09202-06025	PIN (6X17)	1	
16	57632-92L00	STOPPER, PROPELLER BUSH	1	
17	57630-92L00	PROPELLER NUT KIT	1	OPT
18	57633-94300	SPACER, PROPELLER NUT	1	
19	09160-16054	WASHER	1	
20	09141-16008	NUT	1	
21	09204-03003	COTTER PIN (D:3.6,L:25)	1	
22-1	58100-88L13-019	PROPELLER (3X11-1/2X10) (BLACK)	1	
22-2	58100-88L23-019	PROPELLER (3X11-1/2X11) (BLACK)	1	
22-3	58100-88LA0-019	PROPELLER (3X11-5/8X12) (BLACK)	1	
22-4	58100-88LB0-019	PROPELLER (3X11-1/2X13) (BLACK)	1	
22-5	58100-88L52-019	PROPELLER (3X11-3/8X14) (BLACK)	1	
22-6	58100-88L62-019	PROPELLER (3X11-1/4X15) (BLACK)	1	
23	58120-88L01	.BUSH, PROPELLER	1	

FIG.407A


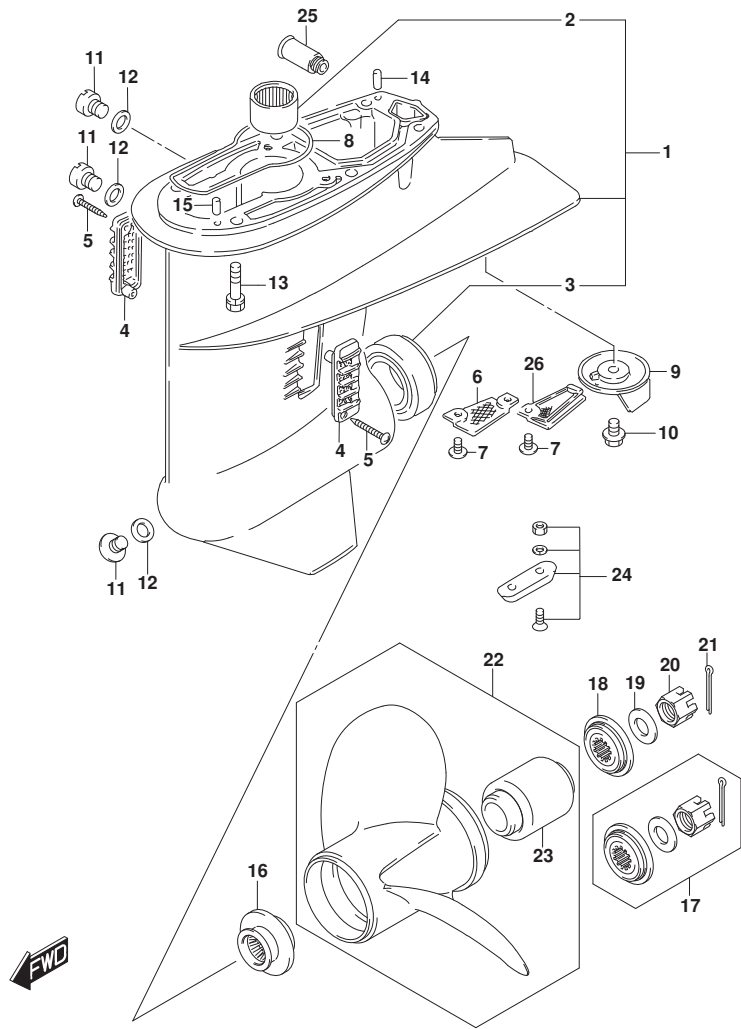


FIG.407A (1-I-15) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	55300-95500	ZINC, PROTECTION	1	OPT
25	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
26	17635-87E10	PLATE, GEAR CASE	1	OPT
27	25700-88L00	KIT, GEAR CASE RE-SEALING	1	OPT
				NOT ILLUSTRATED

FIG.412A

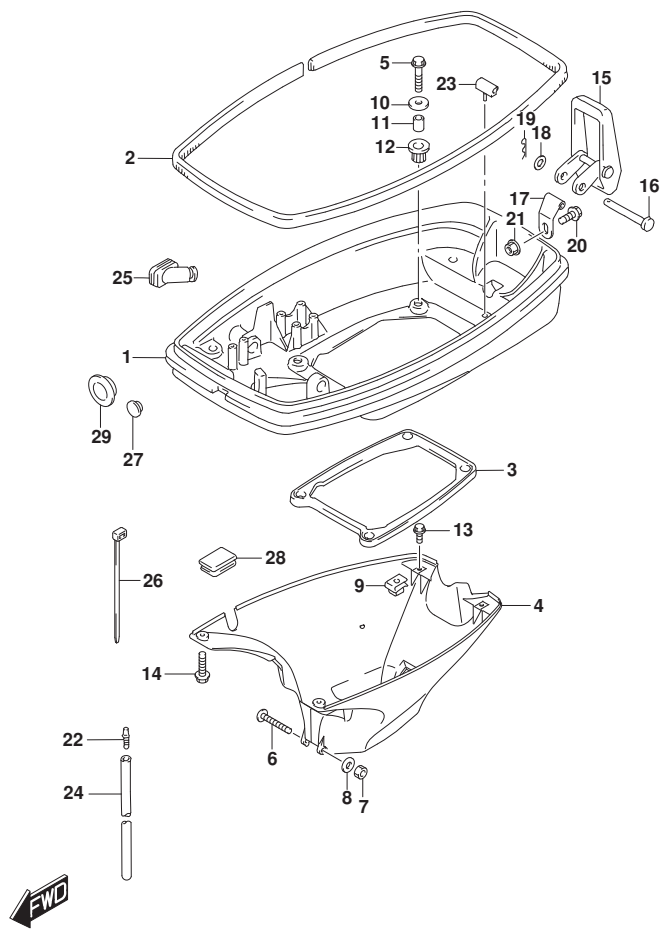

DT40W_P40_016_412A
LOWER COVER

FIG.412A (1-J-2) LOWER COVER (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L10-0EP	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-RB4	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	W/ELECTRIC STARTER
26	09407-25402	CLAMP (L:250)	1	W/ELECTRIC STARTER
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28-1	39669-94400	PLUG, LOWER COVER	1	W/ELECTRIC STARTER
28-2	39669-94400	PLUG, LOWER COVER	2	W/MANUAL STARTER
29	09250-33001	CAP (OD:40)	1	W/MANUAL STARTER

DT40W_P40_016

FIG.412B

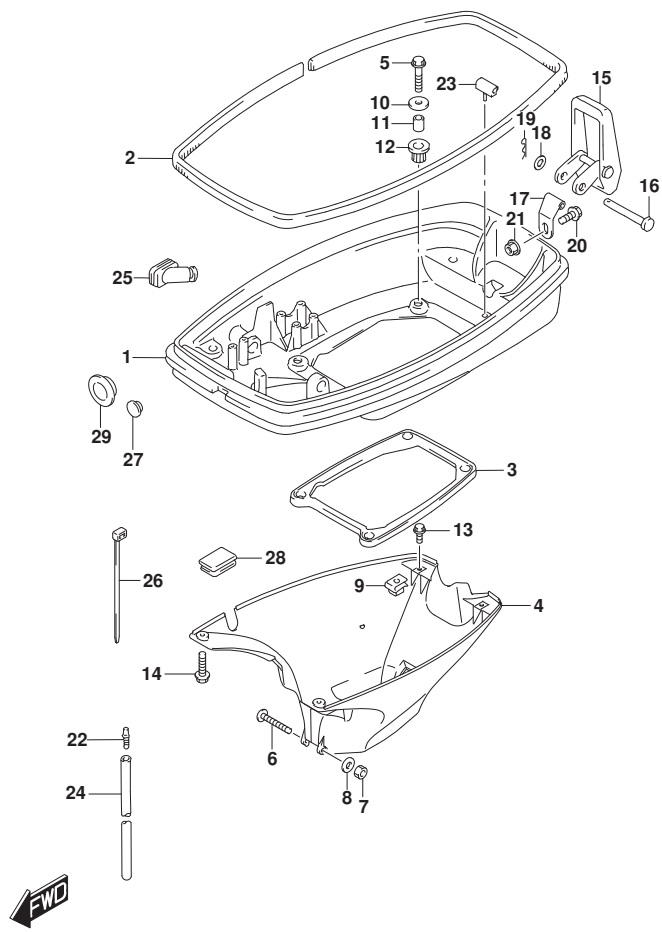


FIG.412B (1-J-3) LOWER COVER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L10-0EP	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-RB4	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	W/ELECTRIC STARTER
26	09407-25402	CLAMP (L:250)	1	W/ELECTRIC STARTER
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28-1	39669-94400	PLUG, LOWER COVER	1	W/ELECTRIC STARTER
28-2	39669-94400	PLUG, LOWER COVER	2	W/MANUAL STARTER
29	09250-33001	CAP (OD:40)	1	W/MANUAL STARTER

FIG.412C

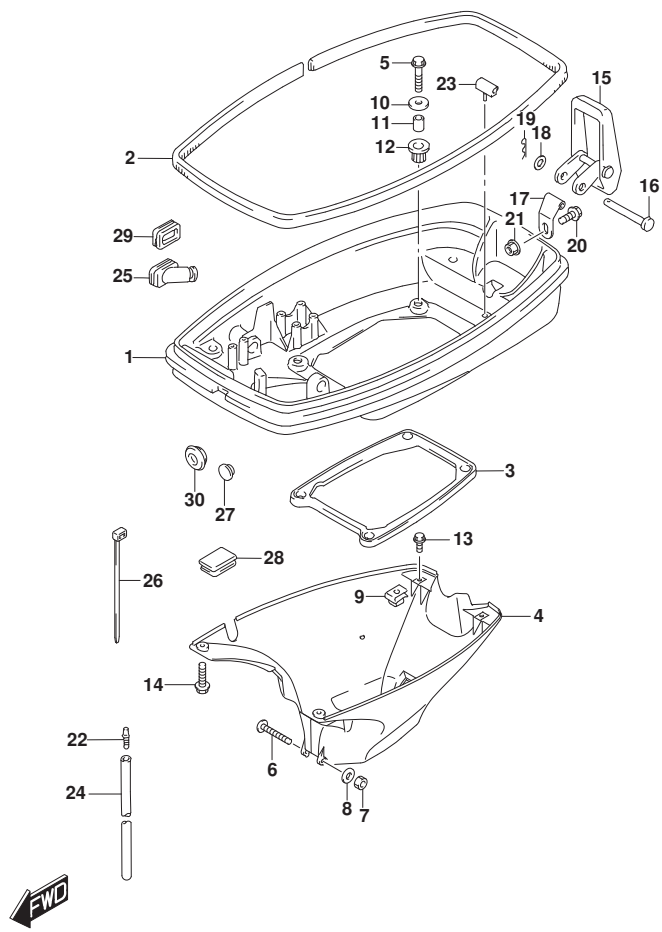


FIG.412C (1-J-4) LOWER COVER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L10-0EP	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-RB4	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	
26	09407-25402	CLAMP (L:250)	1	
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28	39669-94400	PLUG, LOWER COVER	1	
29	63625-94300	CAP, THROTTLE CABLE	1	
30	09250-16008	PLUG (OD:24)	1	

FIG.412D

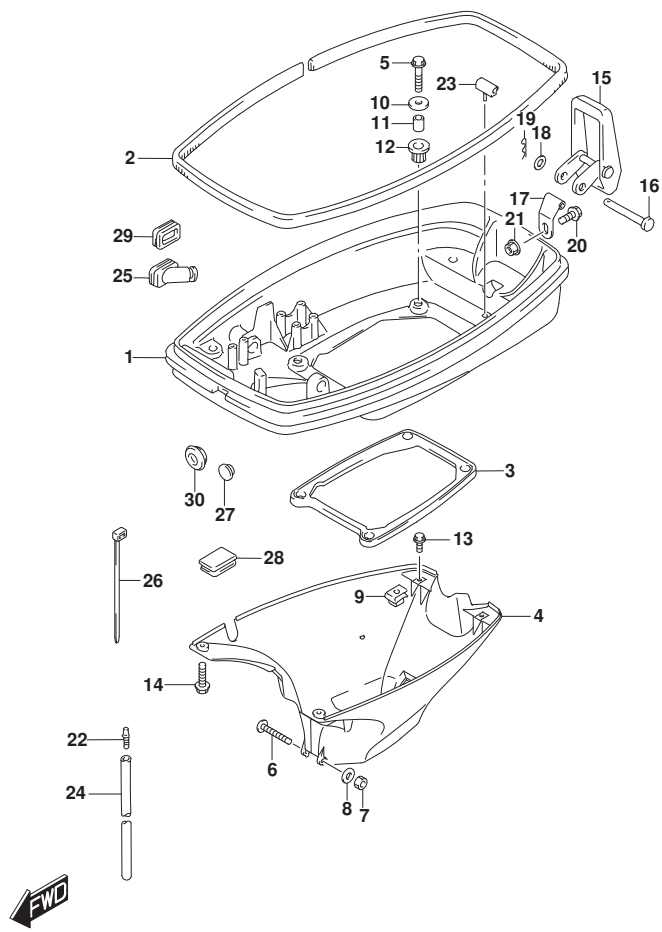


FIG.412D (1-J-5) LOWER COVER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L10-0EP	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-RB4	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	
26	09407-25402	CLAMP (L:250)	1	
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28	39669-94400	PLUG, LOWER COVER	1	
29	63625-94300	CAP, THROTTLE CABLE	1	
30	09250-16008	PLUG (OD:24)	1	

FIG.412E


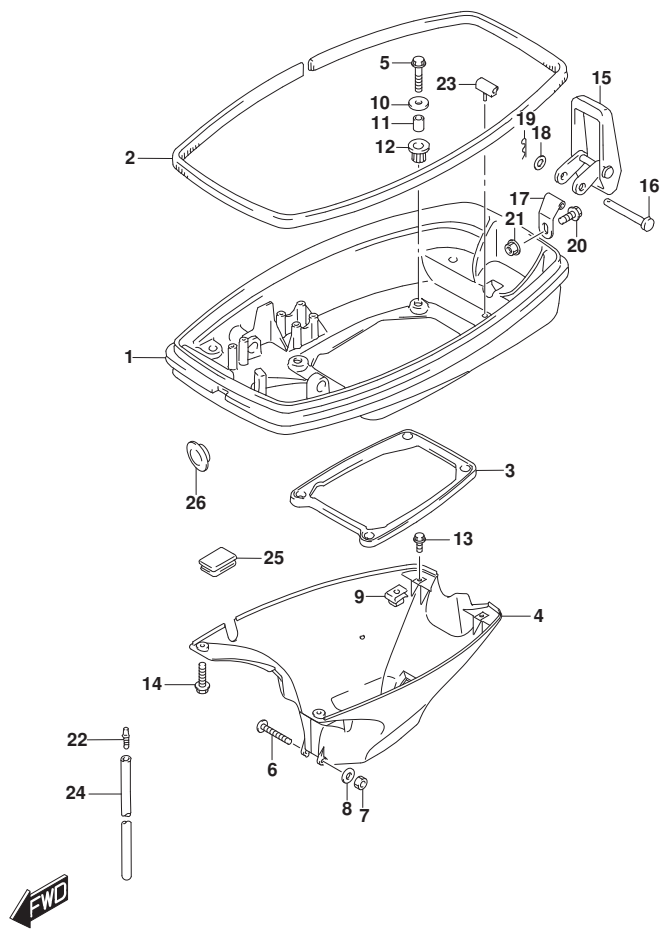


FIG.412E (1-J-6) LOWER COVER (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L10-0EP	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-RB4	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	39669-94400	PLUG, LOWER COVER	2	
26	09250-33001	CAP (OD:40)	1	

DT40W_P40_016_420A
ENGINE COVER



DT40W_P40_016

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61400-92L01-0EP	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-0EP	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L00	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L00	STRIPE, ENGINE COVER STBD	1	
10	61453-91L00	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	68110-87L00	COVER, WEATHER	1	OPT
13	99011-92L80-063	MANUAL, OWNER'S	1	
14	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.420B (1-J-8) ENGINE COVER (DT40W P90)



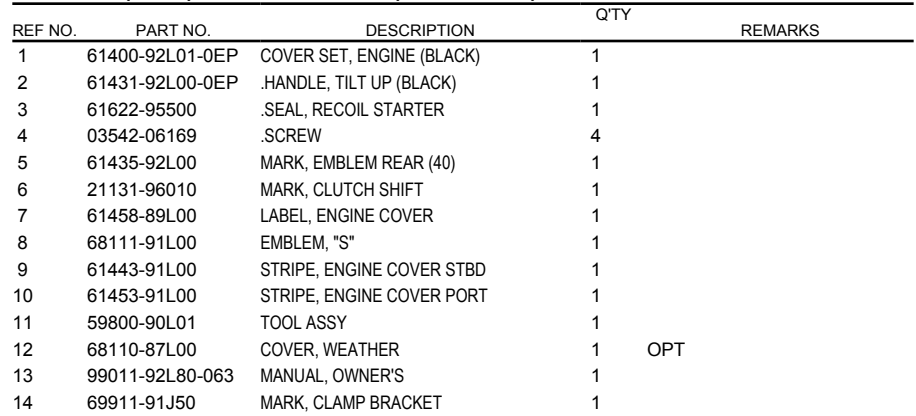


FIG.420C (1-J-9) ENGINE COVER (DT40WR P40)

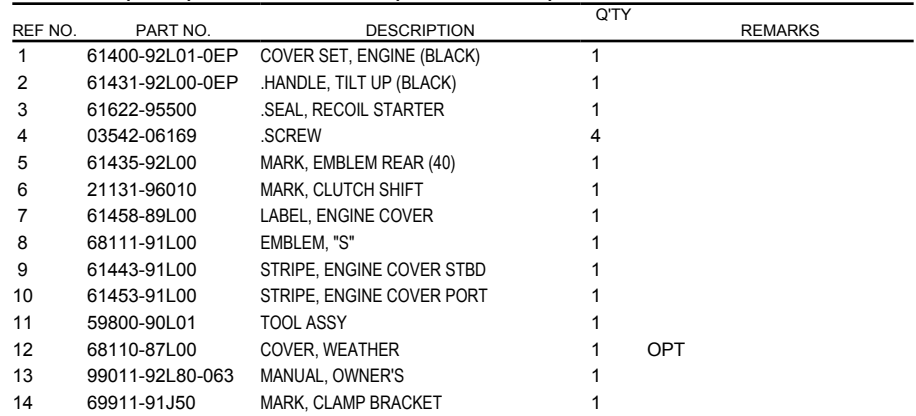

DT40W_P40_016_420D
ENGINE COVER



DT40W_P40_016

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61400-92L01-0EP	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-0EP	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L00	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L00	STRIPE, ENGINE COVER STBD	1	
10	61453-91L00	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	68110-87L00	COVER, WEATHER	1	OPT
13	99011-92L80-063	MANUAL, OWNER'S	1	
14	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.420E

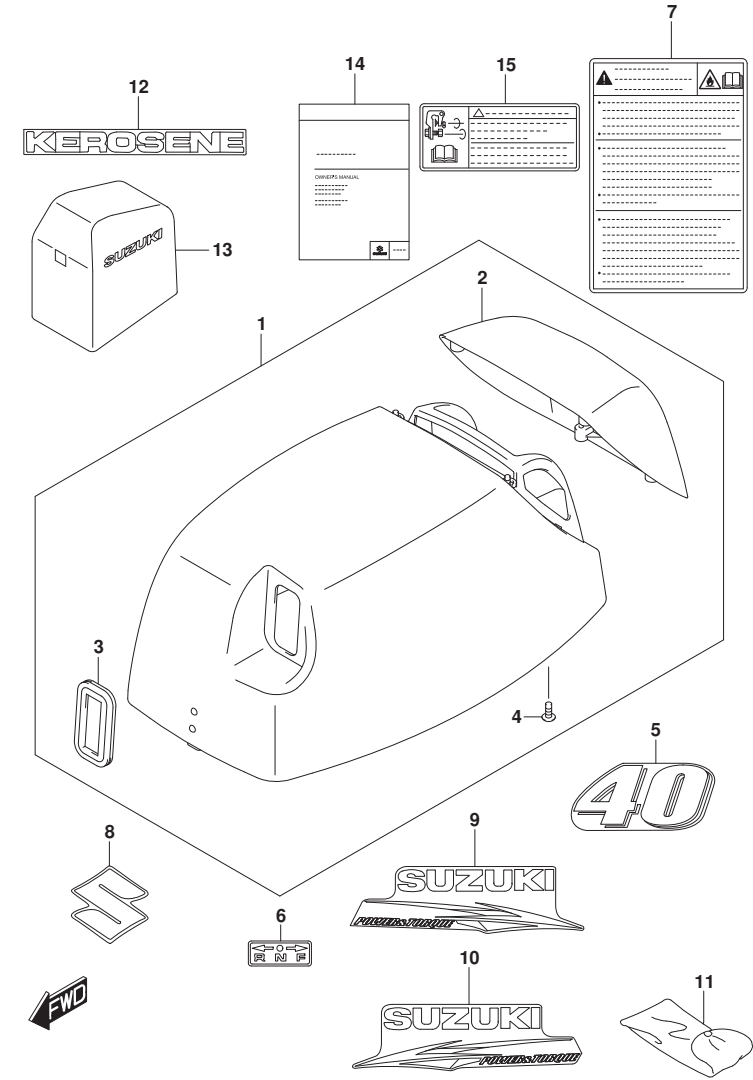


FIG.420E (1-J-11) ENGINE COVER (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-92L01-0EP	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-0EP	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L00	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L00	STRIPE, ENGINE COVER STBD	1	
10	61453-91L00	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	61449-93921	MARK, KEROSENE	1	
13	68110-87L00	COVER, WEATHER	1	OPT
14	99011-92L90-063	MANUAL, OWNER'S	1	
15	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.432A

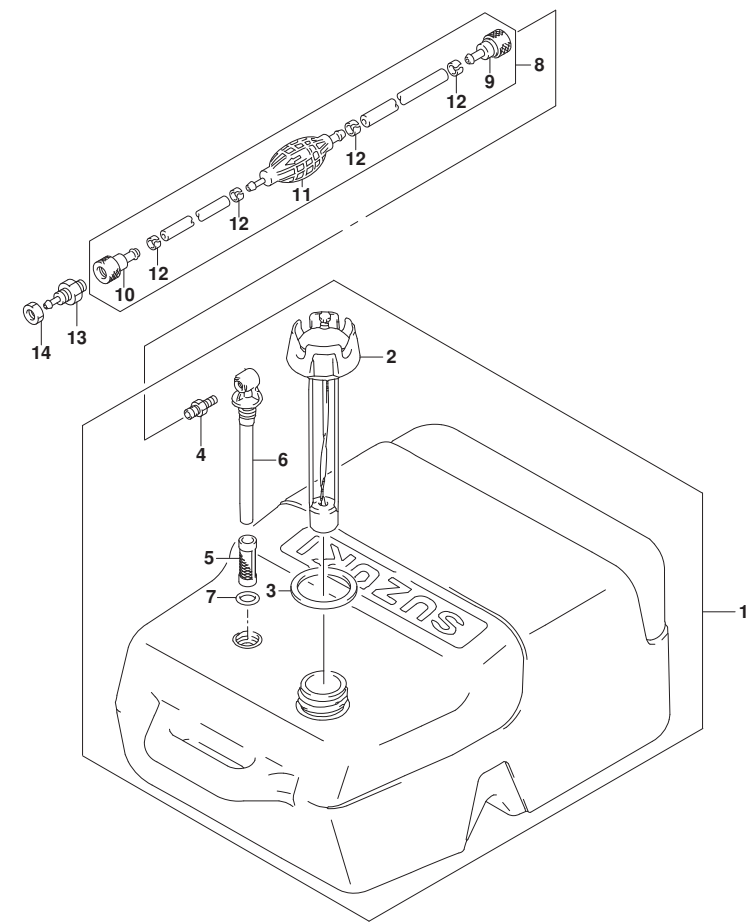


FIG.432A (1-J-12) FUEL TANK (PLASTIC/25L) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-955L0	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

FIG.432B

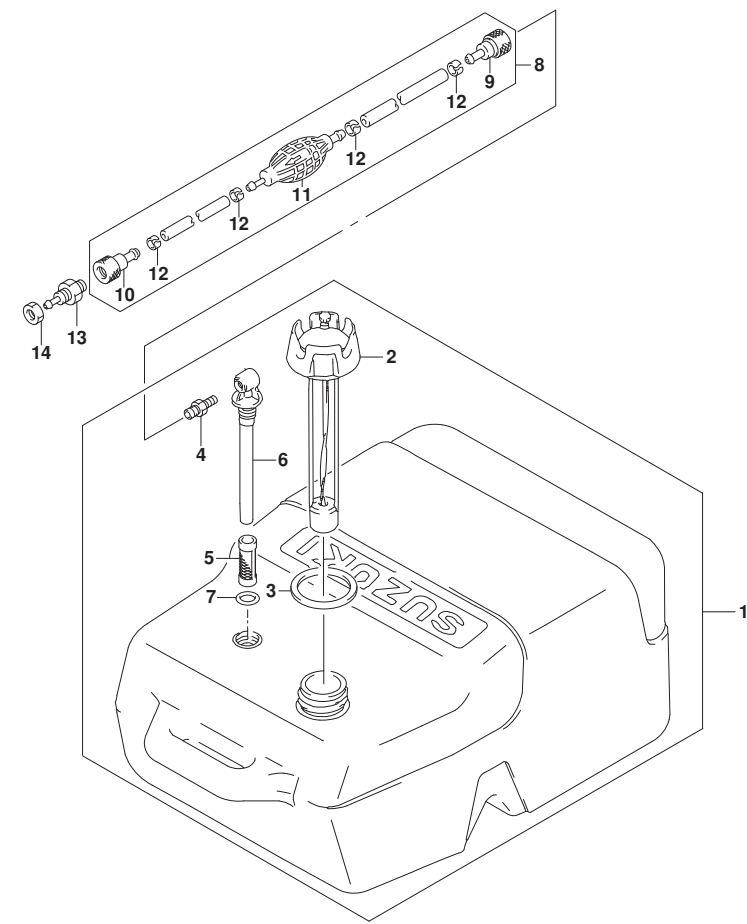


FIG.432B (1-J-13) FUEL TANK (PLASTIC/25L) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-955L0	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

FIG.432C

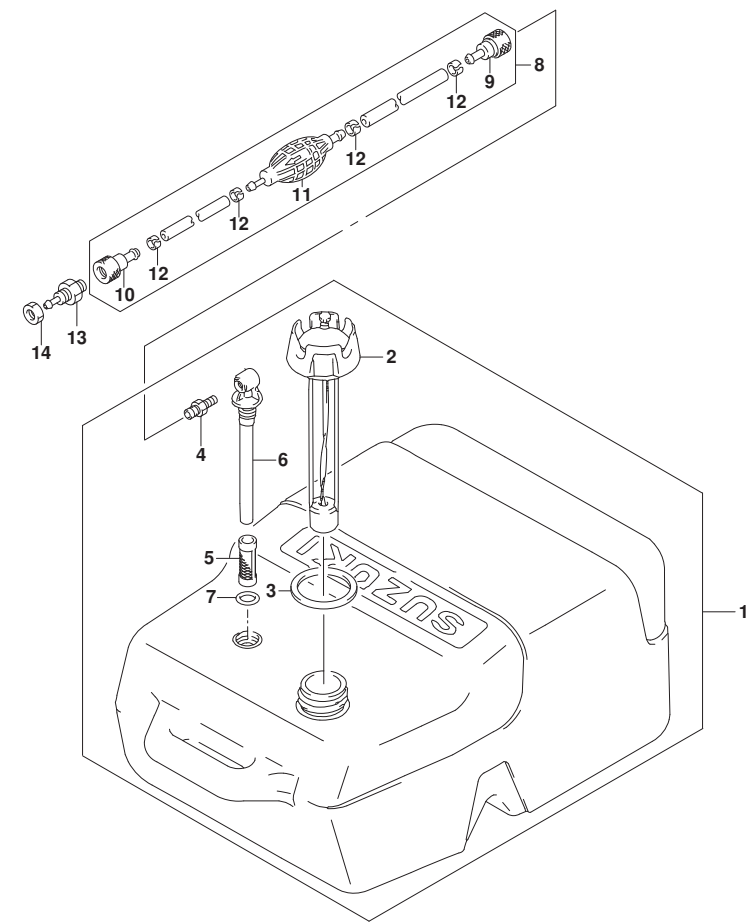


FIG.432C (1-J-14) FUEL TANK (PLASTIC/25L) (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-955L0	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

FIG.432D

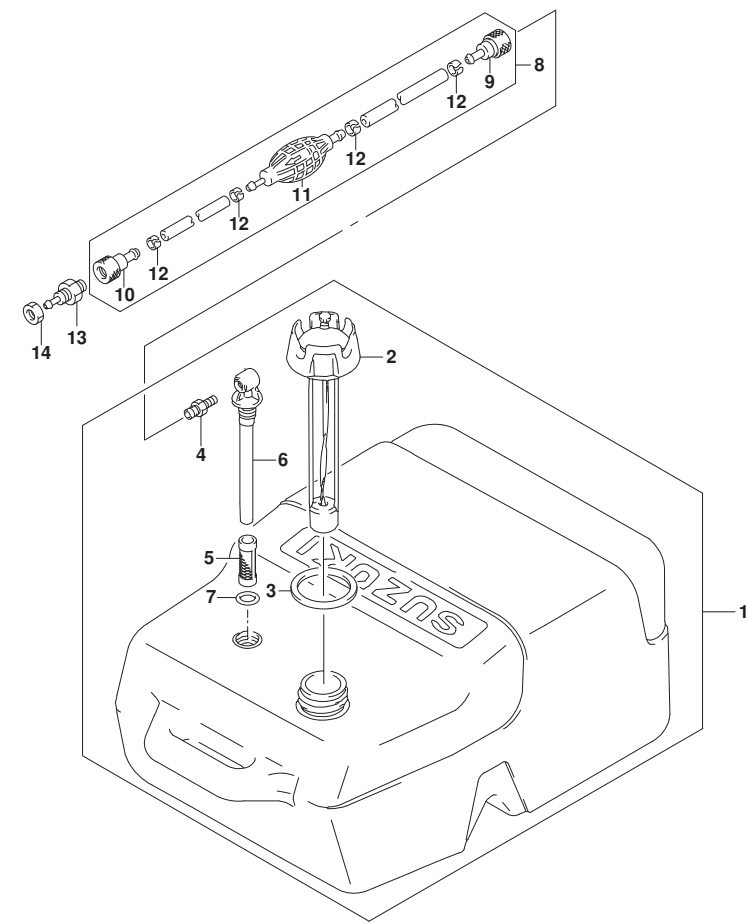


FIG.432D (1-J-15) FUEL TANK (PLASTIC/25L) (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-955L0	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

FIG.432E

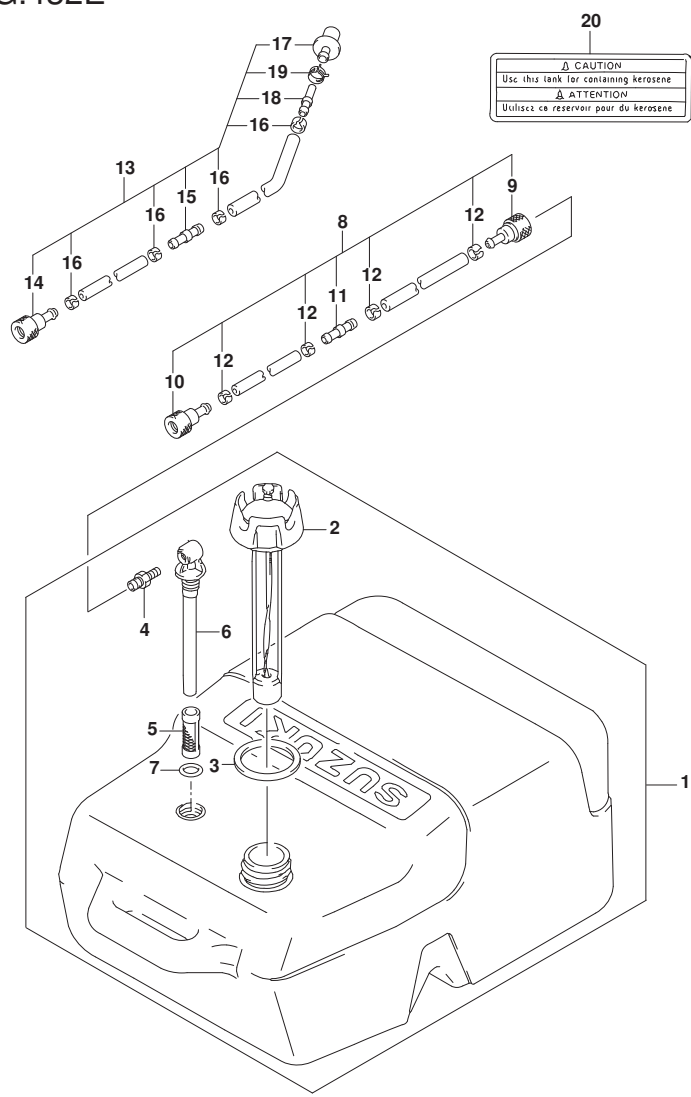


FIG.432E (1-K-2) FUEL TANK (PLASTIC/25L) (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-96362	HOSE, FUEL (L:2620)	1	FOR KEROSENE W/FUEL TANK
9	65750-955L0	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65779-93900	.UNION, FUEL HOSE	1	
12	65781-98500	.CLIP	4	
13	65700-94424	HOSE, FUEL	1	FOR KEROSENE N/FUEL TANK
14	65750-98505	.SOCKET, FUEL HOSE	1	
15	65779-93900	.UNION, FUEL HOSE	1	
16	65781-98500	.CLIP	4	
17	65830-95500	.FILTER	1	
18	65842-94401	.TUBE	1	
19	09401-10412	.CLIP	1	
20	65318-93910	MARK, KEROSENE CAUTION	1	W/FUEL TANK

FIG.432F

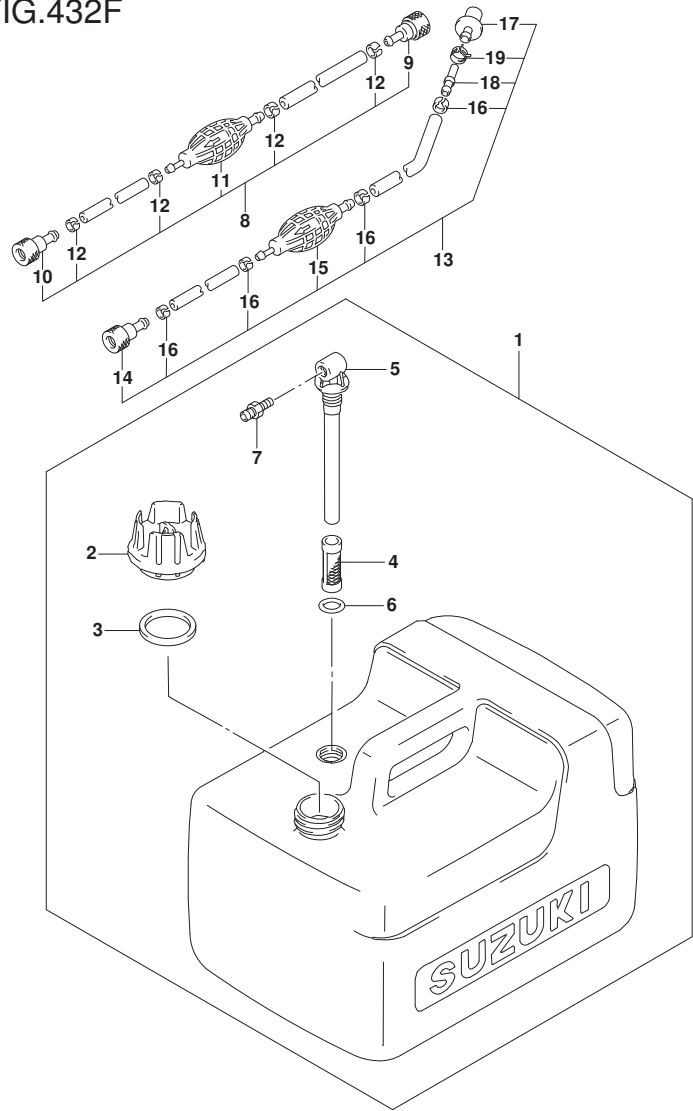


FIG.432F (1-K-3) FUEL TANK (PLASTIC/12L) (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-99100	TANK ASSY, FUEL (12L)	1	
2	65520-99100	.CAP, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-99100	.OUTLET ASSY	1	
6	65892-95D00	.O RING, FUEL OUTLET	1	
7	65740-99100	.PLUG, FUEL CONNECTOR	1	
8	65700-95D04	HOSE, FUEL (L:2550)	1	FOR GASOLINE W/FUEL TANK
9	65750-955L0	.SOCKET, FUEL HOSE (OUT)	1	
10	65750-98505	.SOCKET, FUEL HOSE (IN)	1	
11	65770-99J01	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65700-94416	HOSE, FUEL	1	FOR GASOLINE N/FUEL TANK
14	65750-955L0	.SOCKET, FUEL HOSE	1	
15	65770-90J11	.PUMP, SQUEEZE	1	
16	65781-98500	.CLIP	4	
17	65830-95500	.FILTER	1	
18	65842-94401	.TUBE	1	
19	09401-10412	.CLIP	1	

FIG.442A

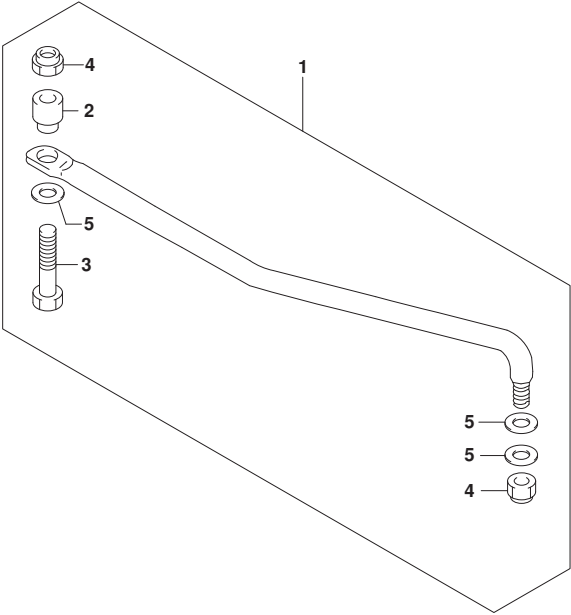


FIG.442A (1-K-4) DRAG LINK (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67701-94430	LINK ASSY, DRAG	1	
2	67721-94310	.SPACER	1	
3	67725-99E10	.BOLT	1	
4	67726-99E00	.NUT	2	
5	67728-99E00	.WASHER	3	

FIG.442B


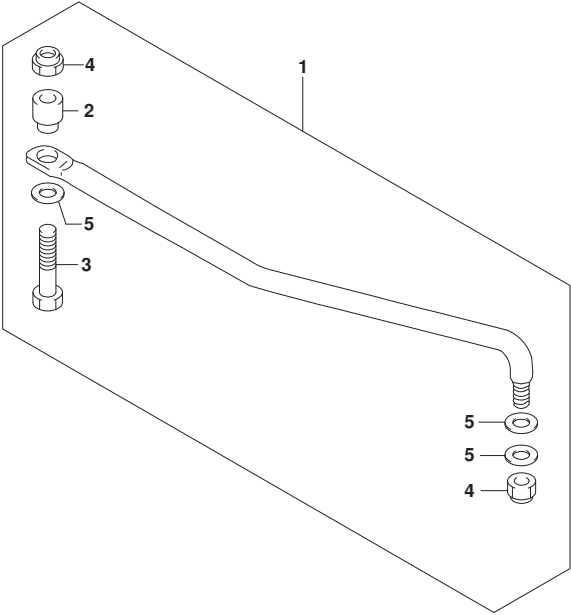


FIG.442B (1-K-5) DRAG LINK (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67701-94430	LINK ASSY, DRAG	1	
2	67721-94310	.SPACER	1	
3	67725-99E10	.BOLT	1	
4	67726-99E00	.NUT	2	
5	67728-99E00	.WASHER	3	

FIG.444A

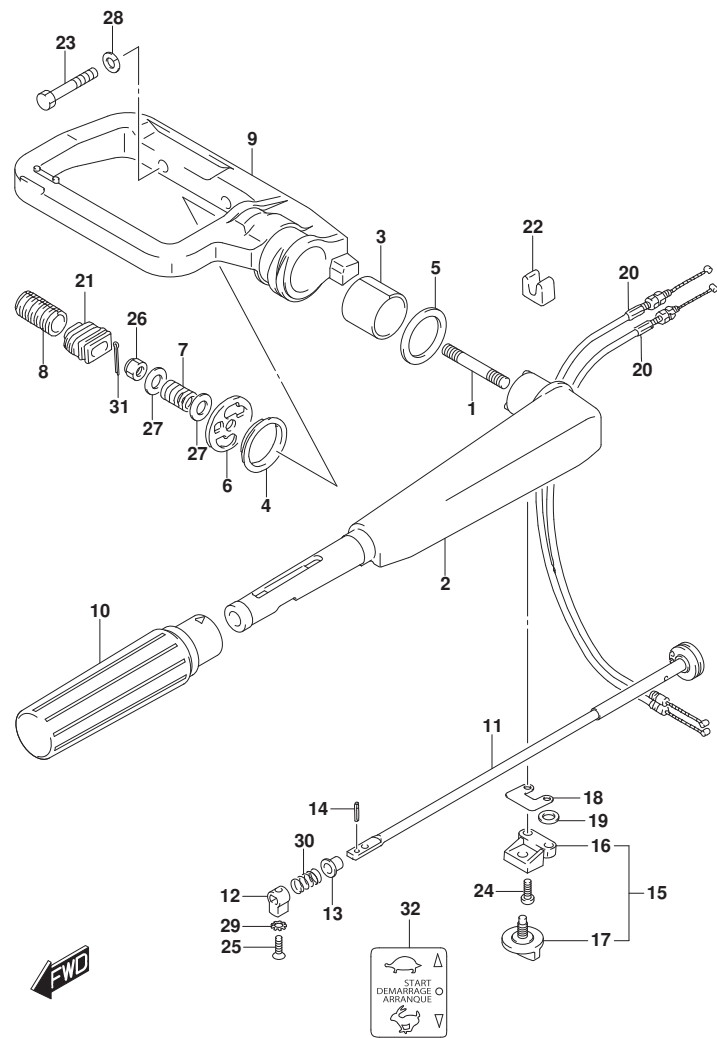


DT40W_P40_016_444A
TILLER HANDLE

FIG.444A (1-K-6) TILLER HANDLE (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09108-10137	STUD BOLT	1	
2	63111-92L00-0EP	HANDLE, TILLER (BLACK)	1	
3	63115-97E00	BUSH, TILLER HANDLE	1	
4	63116-97E00	WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	PLATE, TILLER HANDLE	1	
7	63126-97E01	SPRING, HANDLE STUD	1	
8	63128-97E00	COVER, HANDLE NUT	1	
9	63131-92L10-0EP	BRACKET, TILLER HANDLE (BLACK)	1	
10	63210-93E30	GRIP, HANDLE	1	
11	63220-91L00	ROD, HANDLE	1	
12	63223-92D00	STOPPER, HANDLE ROD	1	
13	63225-93200	BUSH, HANDLE ROD	1	
14	09205-03038	SPRING PIN (3X14)	1	
15	63240-94J10	ADJUSTER, HANDLE GRIP	1	
16	63241-986B0	SUPPORT, HANDLE ROD	1	
17	63244-94J00	KNOB, THROTTLE ADJUSTER	1	
18	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
19	09148-06008	NUT	1	
20	63610-92L00	CABLE, THROTTLE	2	
21	63625-96300	GROMMET, THROTTLE CABLE	1	
22	63627-94400	GUIDE, THROTTLE CABLE	1	
23	09100-10317	BOLT (10X50)	2	
24	09136-05041	SCREW (5X20)	2	
25	09126-06015	SCREW (6X23)	1	
26	09159-10050	NUT	1	
27	09160-10082	WASHER (10.5X19X2)	2	
28	09162-10005	LOCK WASHER	2	
29	09163-06001	LOCK WASHER	1	
30	09440-12027	SPRING	1	
31	09204-01002	PIN	1	
32	63215-93401	MARK, HANDLE GRIP	1	

DT40W_P40_016

FIG.444B

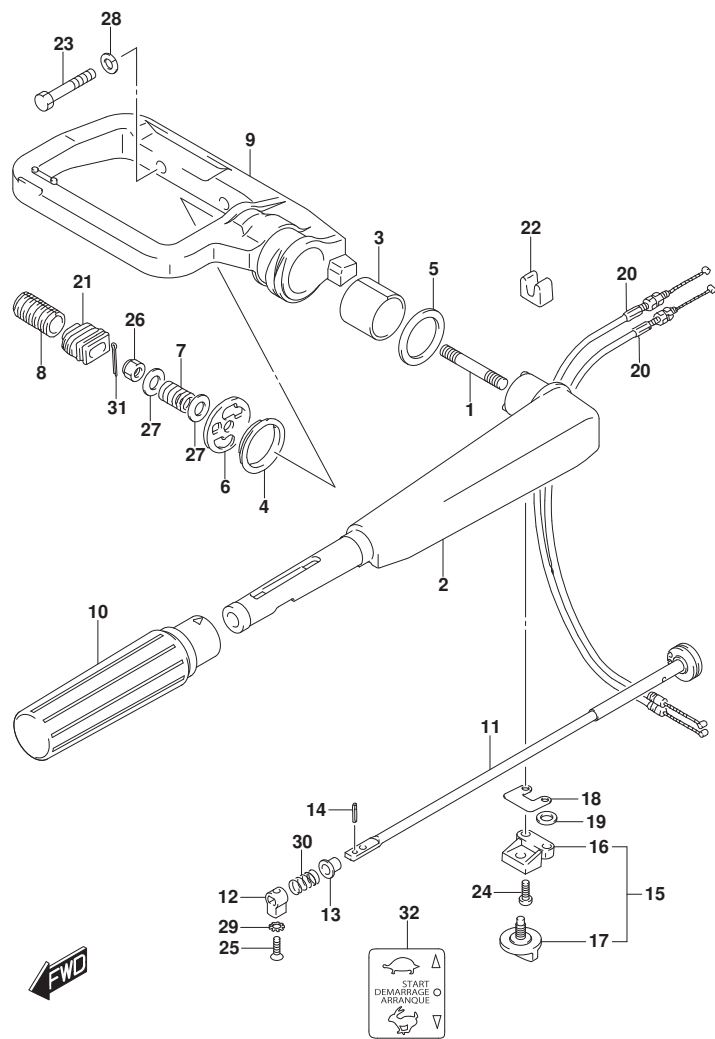


DT40W_P40_016_444B
TILLER HANDLE

FIG.444B (1-K-7) TILLER HANDLE (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09108-10137	STUD BOLT	1	
2	63111-92L00-0EP	HANDLE, TILLER (BLACK)	1	
3	63115-97E00	BUSH, TILLER HANDLE	1	
4	63116-97E00	WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	PLATE, TILLER HANDLE	1	
7	63126-97E01	SPRING, HANDLE STUD	1	
8	63128-97E00	COVER, HANDLE NUT	1	
9	63131-92L10-0EP	BRACKET, TILLER HANDLE (BLACK)	1	
10	63210-93E30	GRIP, HANDLE	1	
11	63220-91L00	ROD, HANDLE	1	
12	63223-92D00	STOPPER, HANDLE ROD	1	
13	63225-93200	BUSH, HANDLE ROD	1	
14	09205-03038	SPRING PIN (3X14)	1	
15	63240-94J10	ADJUSTER, HANDLE GRIP	1	
16	63241-986B0	.SUPPORT, HANDLE ROD	1	
17	63244-94J00	.KNOB, THROTTLE ADJUSTER	1	
18	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
19	09148-06008	NUT	1	
20	63610-92L00	CABLE, THROTTLE	2	
21	63625-96300	GROMMET, THROTTLE CABLE	1	
22	63627-94400	GUIDE, THROTTLE CABLE	1	
23	09100-10317	BOLT (10X50)	2	
24	09136-05041	SCREW (5X20)	2	
25	09126-06015	SCREW (6X23)	1	
26	09159-10050	NUT	1	
27	09160-10082	WASHER (10.5X19X2)	2	
28	09162-10005	LOCK WASHER	2	
29	09163-06001	LOCK WASHER	1	
30	09440-12027	SPRING	1	
31	09204-01002	PIN	1	
32	63215-93401	MARK, HANDLE GRIP	1	

FIG.444C

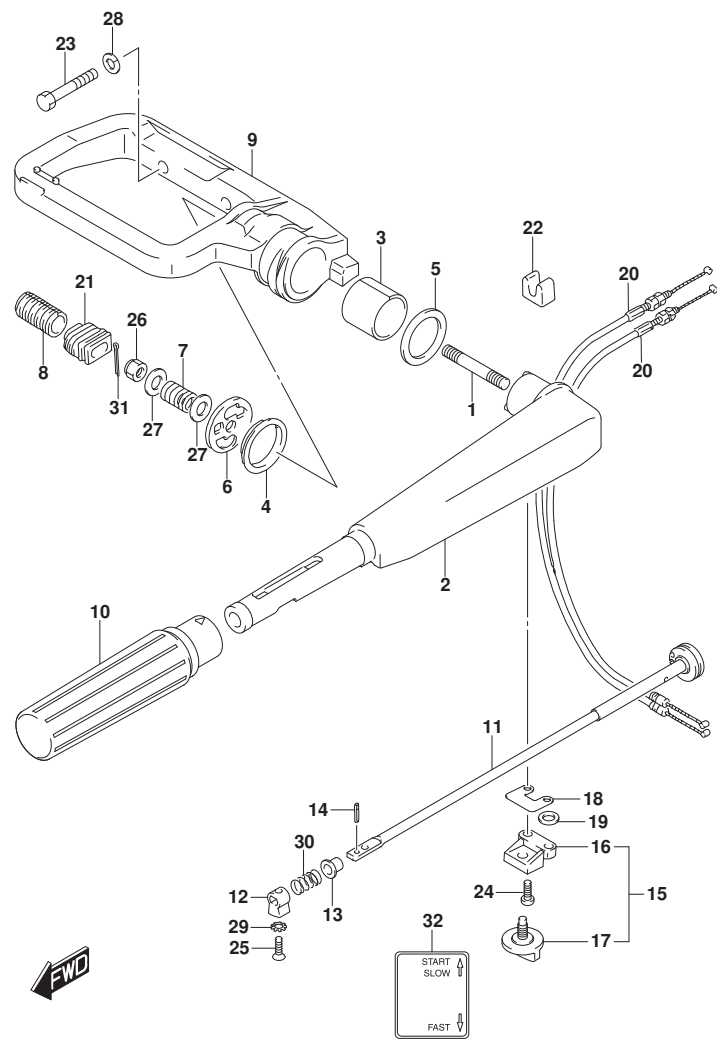


DT40W_P40_016_444C
TILLER HANDLE

FIG.444C (1-K-8) TILLER HANDLE (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09108-10137	STUD BOLT	1	
2	63111-92L00-0EP	HANDLE, TILLER (BLACK)	1	
3	63115-97E00	BUSH, TILLER HANDLE	1	
4	63116-97E00	WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	PLATE, TILLER HANDLE	1	
7	63126-97E01	SPRING, HANDLE STUD	1	
8	63128-97E00	COVER, HANDLE NUT	1	
9	63131-92L10-0EP	BRACKET, TILLER HANDLE (BLACK)	1	
10	63210-93E30	GRIP, HANDLE	1	
11	63220-91L00	ROD, HANDLE	1	
12	63223-89E00	STOPPER, HANDLE ROD	1	
13	63225-93200	BUSH, HANDLE ROD	1	
14	09205-03038	SPRING PIN (3X14)	1	
15	63240-94J10	ADJUSTER, HANDLE GRIP	1	
16	63241-986B0	SUPPORT, HANDLE ROD	1	
17	63244-94J00	KNOB, THROTTLE ADJUSTER	1	
18	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
19	09148-06008	NUT	1	
20	63610-92L00	CABLE, THROTTLE	2	
21	63625-96300	GROMMET, THROTTLE CABLE	1	
22	63627-94400	GUIDE, THROTTLE CABLE	1	
23	09100-10317	BOLT (10X50)	2	
24	09136-05041	SCREW (5X20)	2	
25	09126-06015	SCREW (6X23)	1	
26	09159-10050	NUT	1	
27	09160-10082	WASHER (10.5X19X2)	2	
28	09162-10005	LOCK WASHER	2	
29	09163-06001	LOCK WASHER	1	
30	09440-12027	SPRING	1	
31	09204-01002	PIN	1	
32	63215-93450	MARK, HANDLE GRIP	1	

DT40W_P40_016

FIG.450A

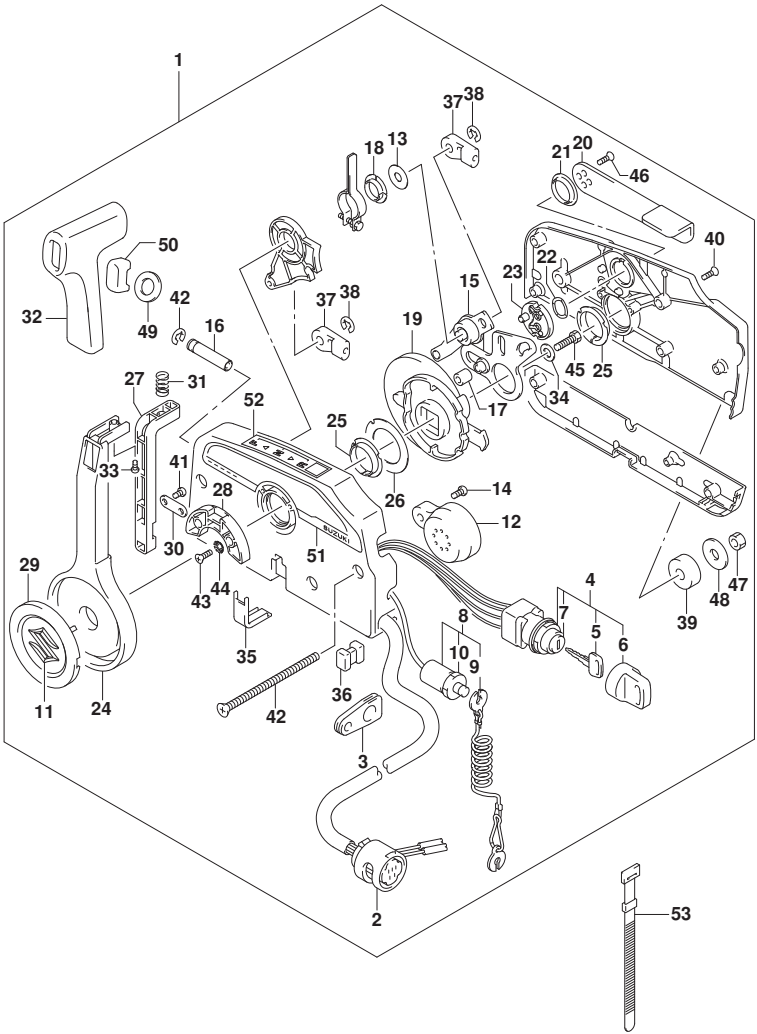


DT40W_P40_016_450A
REMOTE CONTROL

FIG.450A (1-K-9) REMOTE CONTROL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-97E50	REMOTE CONTROL ASSY	1	
2	36620-92E20	..WIRE ASSY, REMOCON	1	
3	36628-92E00	..GROMMET	1	
4	37110-99E01	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	1	
5-2	37141-99E10	..KEY (932)	1	
5-3	37141-99E20	..KEY (933)	1	
5-4	37141-99E30	..KEY (934)	1	
5-5	37141-99E40	..KEY (935)	1	
5-6	37141-99E50	..KEY (936)	1	
5-7	37141-99E60	..KEY (937)	1	
5-8	37141-99E70	..KEY (938)	1	
5-9	37141-99E80	..KEY (939)	1	
5-10	37141-99E90	..KEY (940)	1	
5-11	37141-99EA0	..KEY (941)	1	
5-12	37141-99EB0	..KEY (942)	1	
6	37143-99E00	..CAP, KEY	1	
7	37149-93J00	..CAP, CYLINDER BODY	1	
8	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
9	37823-92E01	..PLATE	1	
10	37826-92J00	..NUT	1	
11	77811-54GB0-0PG	..EMBLEM, SUZUKI (SILVER)	1	
12	38500-92X50	..BUZZER, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X10)	1	
15	67220-95620	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	
18	67232-95600	..BUSH	1	
19	67238-87D00	..GEAR, DRIVE	1	
20	67241-99E10	..LEVER, FREE THROTTLE	1	
21	67243-95600	..BUSH	1	
22	67244-95600	..WAVE WASHER	1	
23	67245-95600	..DRUM, FREE THROTTLE	1	

DT40W_P40_016

FIG.450A

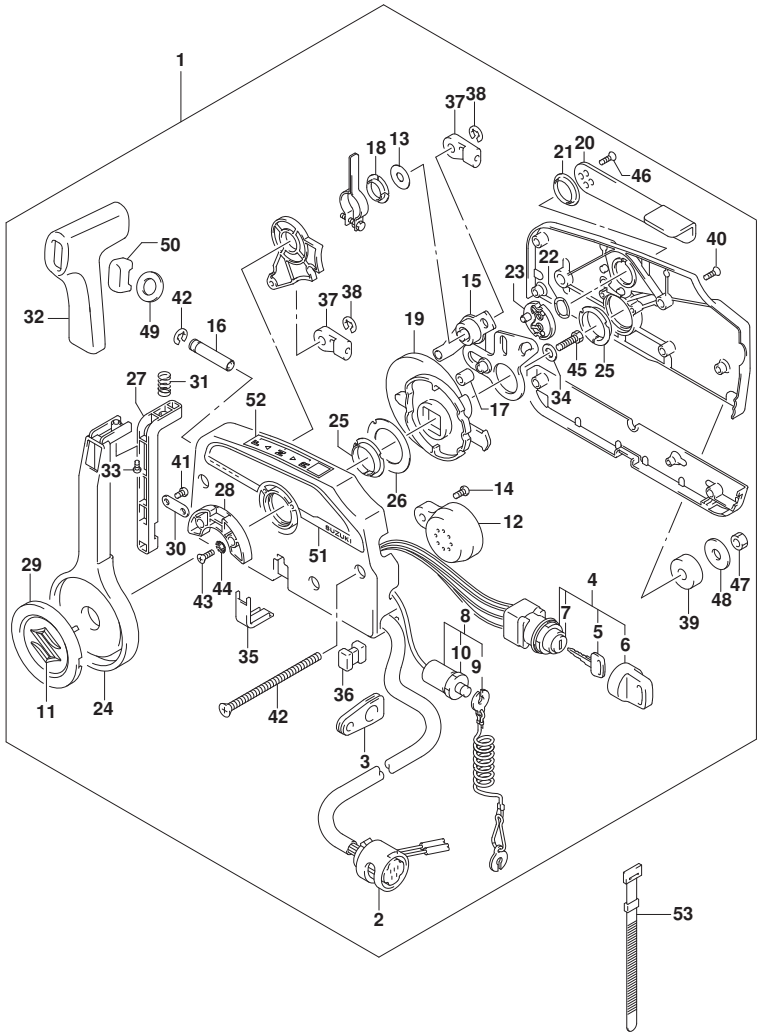


DT40W_P40_016_450A
REMOTE CONTROL

FIG.450A (1-K-10) REMOTE CONTROL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	.ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUT LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW, BUZZER BRKT	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67292-94300	.E RING	3	
39	67294-95600	.SPACER	3	
40	67296-90J00	.SCREW, COVER	5	
41	67296-94300	.SCREW	2	
42	67296-95600	.SCREW	3	
43	67296-95610	.SCREW	2	
44	67297-95600	.WASHER	2	
45	09100-08232	.BOLT (8X30)	1	
46	09126-05003	.SCREW (5X12)	2	
47	09140-06020	.NUT	3	
48	09160-06104	.WASHER (6.5X24X2)	3	
49	37859-90J00	.SPACER	1	
50	37864-94J10	.CAP,PTT SW	1	
51	67282-94L00	.DECAL,REMOCON SIDE	1	
52	67284-94L00	.MARK,HANDLE LEVER	1	
53	09407-12402	CLAMP (L:120)	2	

DT40W_P40_016

FIG.450B

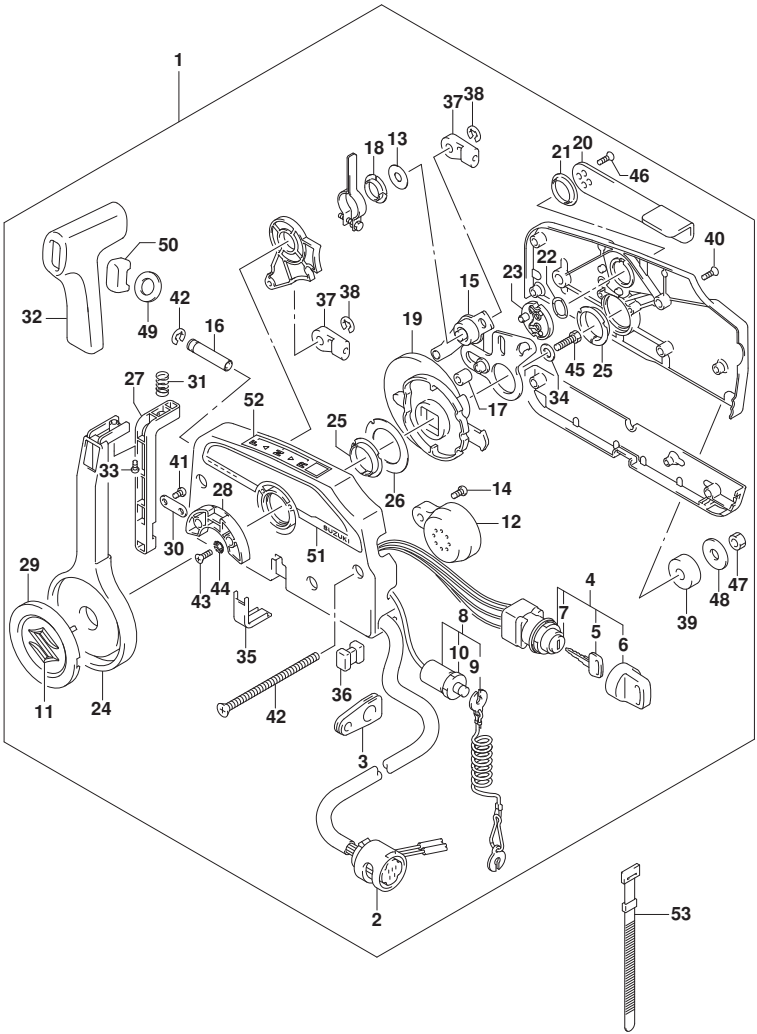


DT40W_P40_016_450B
REMOTE CONTROL

FIG.450B (1-K-11) REMOTE CONTROL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-97E50	REMOTE CONTROL ASSY	1	
2	36620-92E20	..WIRE ASSY, REMOCON	1	
3	36628-92E00	..GROMMET	1	
4	37110-99E01	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	1	
5-2	37141-99E10	..KEY (932)	1	
5-3	37141-99E20	..KEY (933)	1	
5-4	37141-99E30	..KEY (934)	1	
5-5	37141-99E40	..KEY (935)	1	
5-6	37141-99E50	..KEY (936)	1	
5-7	37141-99E60	..KEY (937)	1	
5-8	37141-99E70	..KEY (938)	1	
5-9	37141-99E80	..KEY (939)	1	
5-10	37141-99E90	..KEY (940)	1	
5-11	37141-99EA0	..KEY (941)	1	
5-12	37141-99EB0	..KEY (942)	1	
6	37143-99E00	..CAP, KEY	1	
7	37149-93J00	..CAP, CYLINDER BODY	1	
8	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
9	37823-92E01	..PLATE	1	
10	37826-92J00	..NUT	1	
11	77811-54GB0-0PG	..EMBLEM, SUZUKI (SILVER)	1	
12	38500-92X50	..BUZZER, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X10)	1	
15	67220-95620	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	
18	67232-95600	..BUSH	1	
19	67238-87D00	..GEAR, DRIVE	1	
20	67241-99E10	..LEVER, FREE THROTTLE	1	
21	67243-95600	..BUSH	1	
22	67244-95600	..WAVE WASHER	1	
23	67245-95600	..DRUM, FREE THROTTLE	1	

DT40W_P40_016

FIG.450B

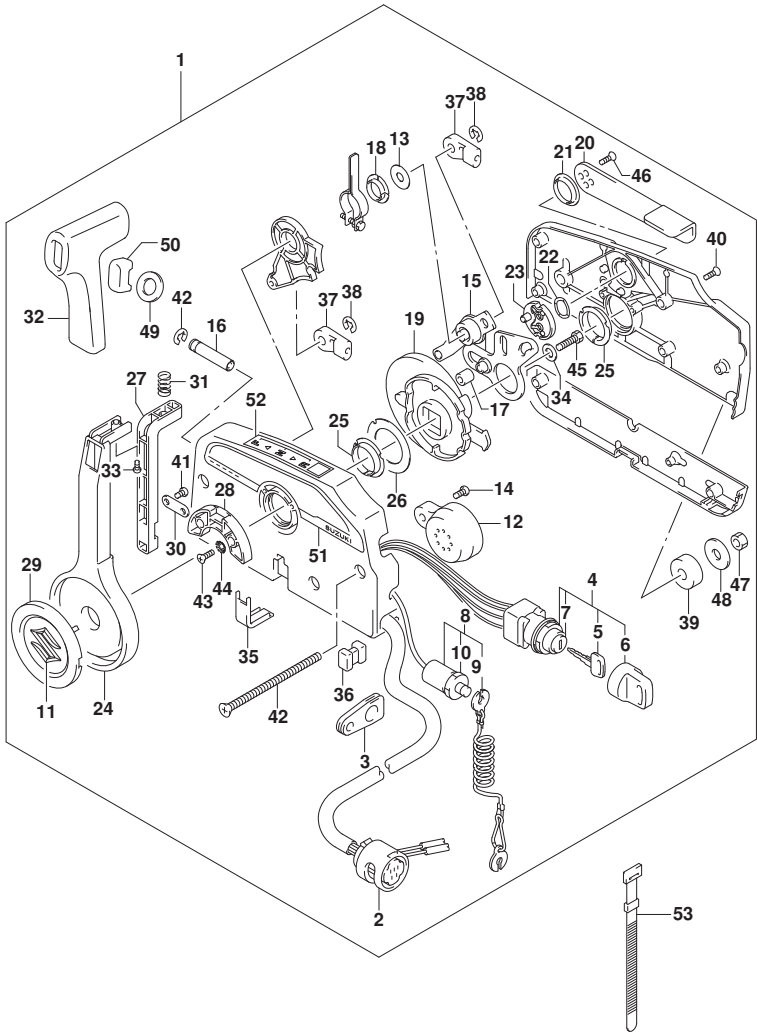

DT40W_P40_016_450B
REMOTE CONTROL

FIG.450B (1-K-12) REMOTE CONTROL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUT LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW, BUZZER BRKT	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67292-94300	.E RING	3	
39	67294-95600	.SPACER	3	
40	67296-90J00	.SCREW, COVER	5	
41	67296-94300	.SCREW	2	
42	67296-95600	.SCREW	3	
43	67296-95610	.SCREW	2	
44	67297-95600	.WASHER	2	
45	09100-08232	.BOLT (8X30)	1	
46	09126-05003	.SCREW (5X12)	2	
47	09140-06020	.NUT	3	
48	09160-06104	.WASHER (6.5X24X2)	3	
49	37859-90J00	.SPACER	1	
50	37864-94J10	.CAP,PTT SW	1	
51	67282-94L00	.DECAL,REMOCON SIDE	1	
52	67284-94L00	.MARK,HANDLE LEVER	1	
53	09407-12402	CLAMP (L:120)	2	

DT40W_P40_016

FIG.454A

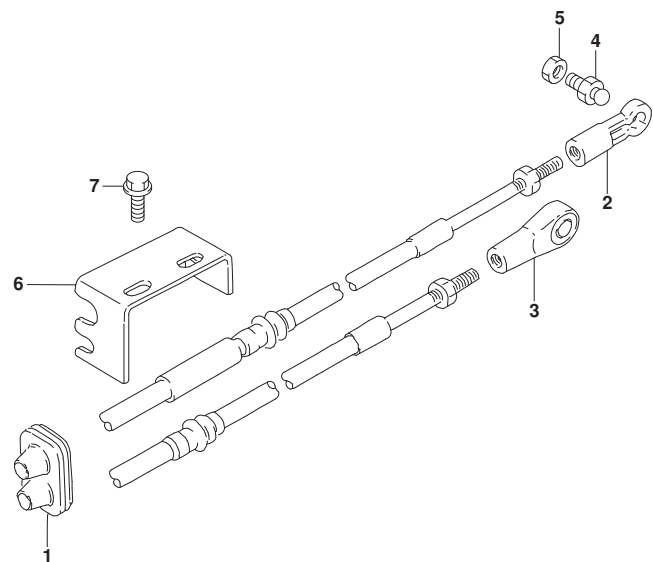


FIG.454A (1-K-13) REMOCON CABLE HOLDER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67331-94400	GROMMET, REMOCON CABLE	1	
2	67466-95200	CONNECTOR, THROTTLE CABLE	1	
3	67467-94404	CONNECTOR, CLUTCH CABLE	1	
4	09119-06047	PIVOT	1	
5	29141-93J00	NUT	1	
6	67341-94400	HOLDER, REMOCON CABLE	1	
7	09116-06225	BOLT (6X15)	2	

FIG.454B


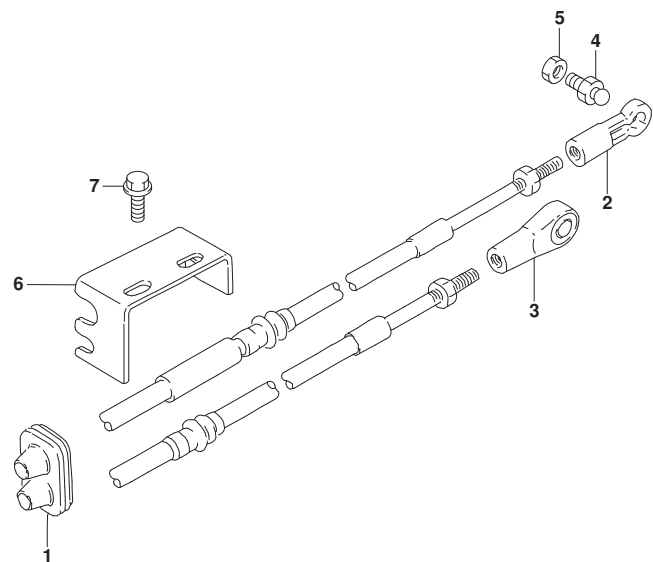


FIG.454B (1-K-14) REMOCON CABLE HOLDER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67331-94400	GROMMET, REMOCON CABLE	1	
2	67466-95200	CONNECTOR, THROTTLE CABLE	1	
3	67467-94404	CONNECTOR, CLUTCH CABLE	1	
4	09119-06047	PIVOT	1	
5	29141-93J00	NUT	1	
6	67341-94400	HOLDER, REMOCON CABLE	1	
7	09116-06225	BOLT (6X15)	2	

FIG.501A

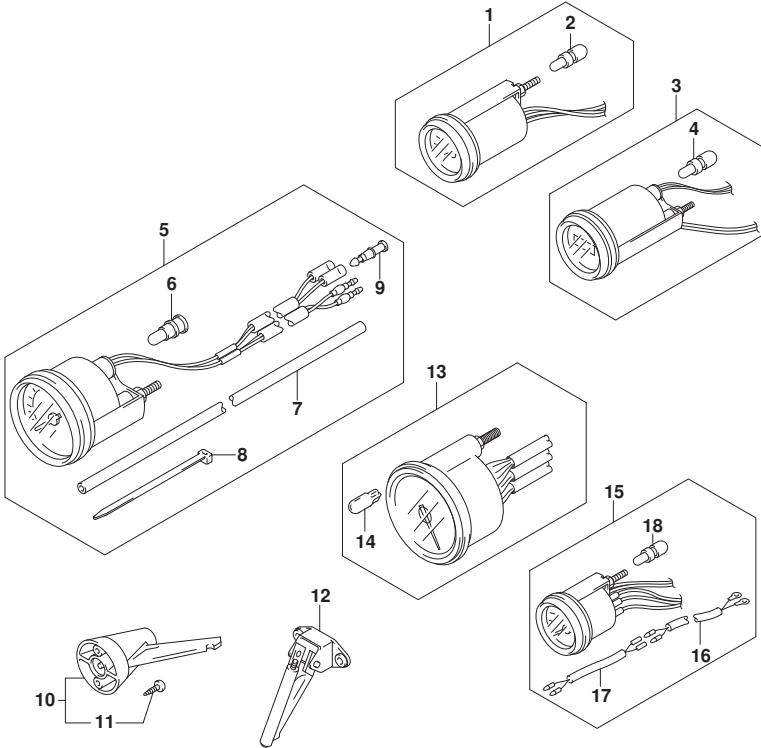

DT40W_P40_016_501A
OPT:METER

FIG.501A (1-K-15) OPT:METER (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J01	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J12	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J01	METER ASSY, HOUR	1	BLACK
3-2	34500-93J12	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J21	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J32	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J41	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J52	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V,3.4W)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J21	TACHOMETER ASSY	1	BLACK
13-2	34200-93J33	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V,3.4W)	1	
15-1	34300-93J01	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J12	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501B

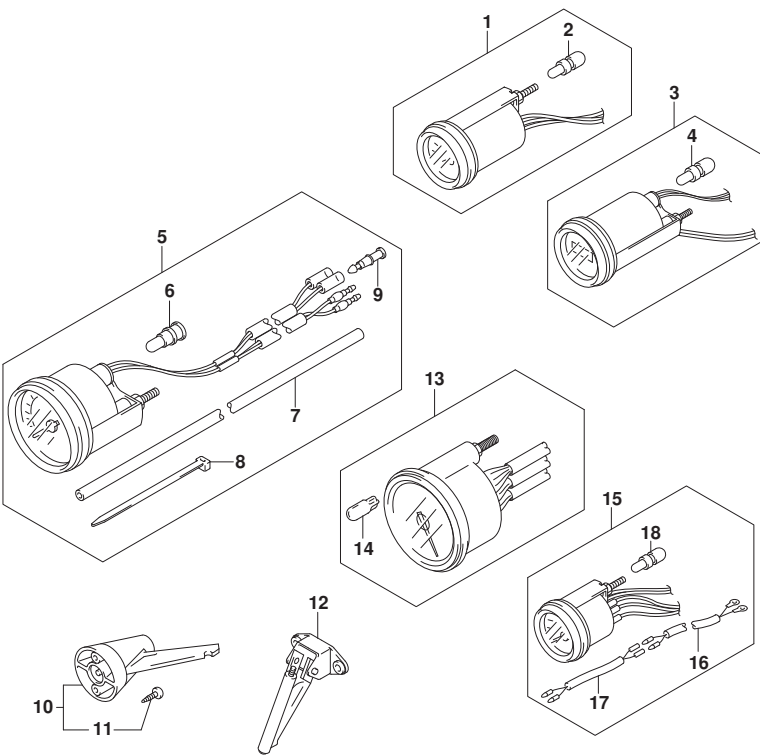


FIG.501B (1-L-2) OPT:METER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J01	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J12	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J01	METER ASSY, HOUR	1	BLACK
3-2	34500-93J12	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J21	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J32	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J41	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J52	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V,3.4W)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J21	TACHOMETER ASSY	1	BLACK
13-2	34200-93J33	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V,3.4W)	1	
15-1	34300-93J01	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J12	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501C

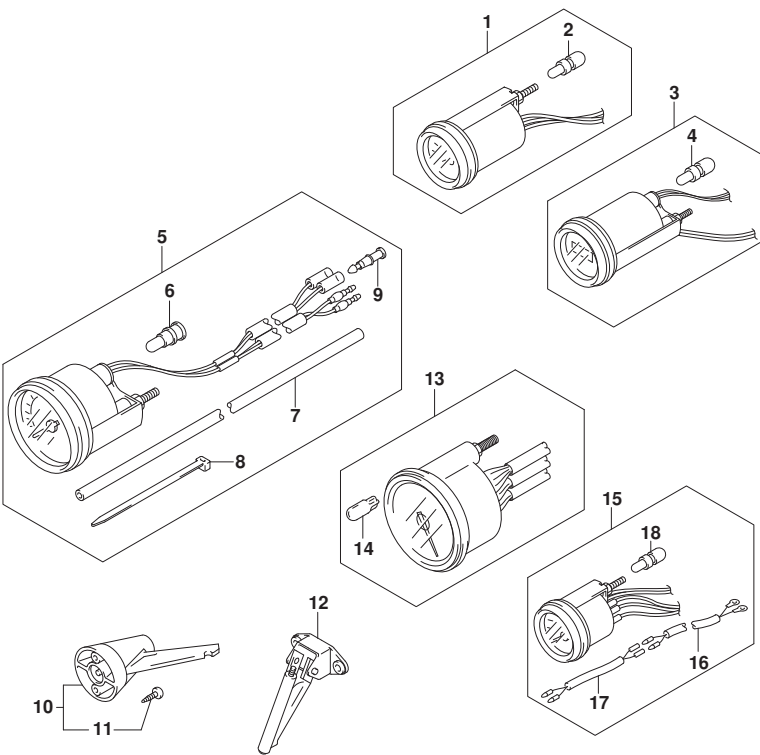


FIG.501C (1-L-3) OPT:METER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J01	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J12	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J01	METER ASSY, HOUR	1	BLACK
3-2	34500-93J12	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J21	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J32	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J41	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J52	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V,3.4W)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	02112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J21	TACHOMETER ASSY	1	BLACK
13-2	34200-93J33	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V,3.4W)	1	
15-1	34300-93J01	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J12	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501D


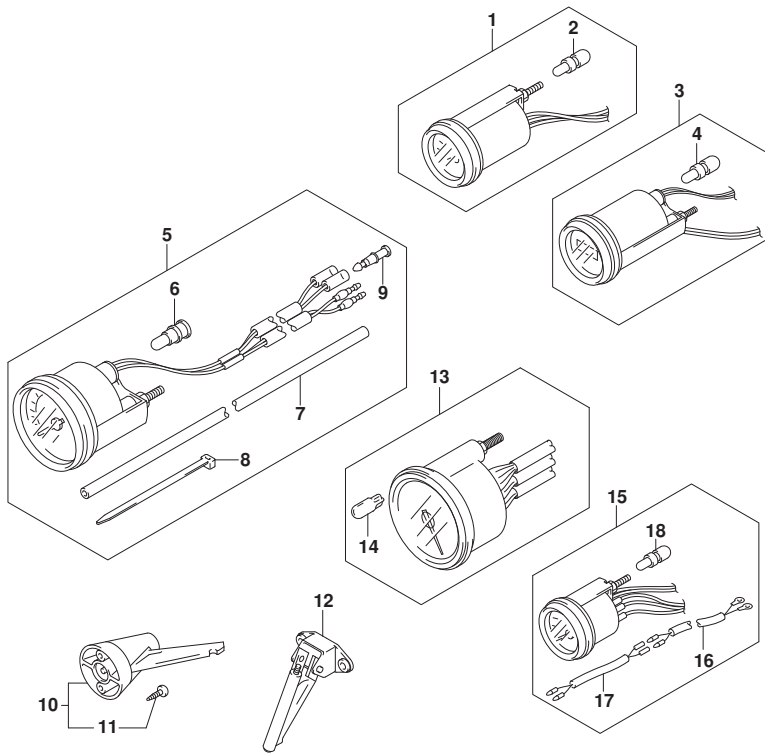


FIG.501D (1-L-4) OPT:METER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J01	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J12	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J01	METER ASSY, HOUR	1	BLACK
3-2	34500-93J12	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J21	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J32	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J41	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J52	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V,3.4W)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	02112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J21	TACHOMETER ASSY	1	BLACK
13-2	34200-93J33	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V,3.4W)	1	
15-1	34300-93J01	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J12	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.508A

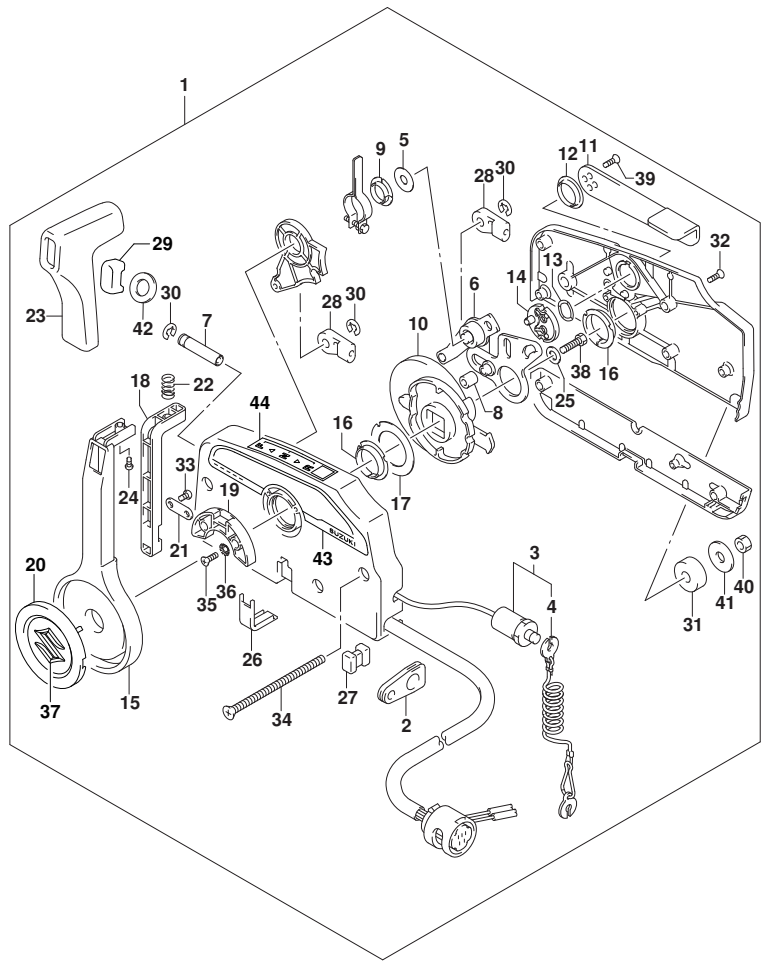

DT40W_P40_016_508A
OPT:REMOTE CONTROL

FIG.508A (1-L-5) OPT:REMOTE CONTROL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-91J20	REMOTE CONTROL ASSY	1	
2	36628-92E00	.GROMMET, WIRE HARNESS	1	
3	37830-95D03	.SWITCH ASSY, EMERGENCY & STOP	1	
4	37823-92E01	..PLATE, LOCK	1	
5	67212-95600	.WASHER	1	
6	67220-95630	.PLATE ASSY	1	
7	67223-99E10	.KNOB, BRAKE ADJUST	1	
8	67229-95600	.ROLLER	1	
9	67232-95600	.BUSH	1	
10	67238-87D00	.GEAR, DRIVE	1	
11	67241-99E10	.LEVER, FREE THROTTLE	1	
12	67243-95600	.BUSH	1	
13	67244-95600	.WAVE WASHER	1	
14	67245-95600	.DRUM, FREE THROTTLE	1	
15	67251-99E20	.LEVER, HANDLE	1	
16	67252-95600	.BUSH	2	
17	67253-95600	.WASHER	1	
18	67255-99E10	.ARM, LOCK	1	
19	67256-95600	.HOLDER, NEUTRAL LOCK	1	
20	67257-99E10	.CAP, LEVER	1	
21	67258-99E00	.BRACKET	1	
22	67259-87D00	.SPRING, NEUTRAL ARM	1	
23	67261-99E10	.GRIP	1	
24	67296-94310	.SCREW	1	
25	67264-95600	.WASHER	1	
26	67267-93J00	.COVER, WIRE	1	
27	67273-95600	.SPACER	1	
28	67275-95600	.END, CABLE	2	
29	37864-94J10	.CAP, PTT SWITCH	1	
30	67292-94300	.E RING	3	
31	67294-95600	.SPACER	3	
32	67296-90J00	.SCREW, REAR COVER	5	
33	67296-94300	.SCREW	2	
34	67296-95600	.SCREW	3	

FIG.508A


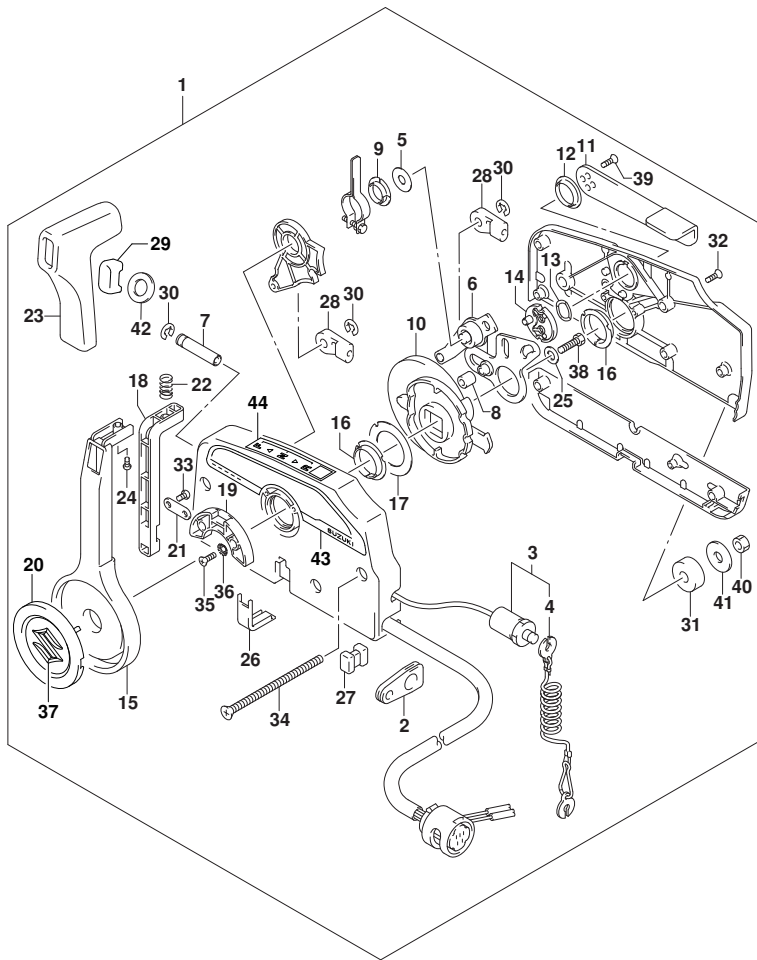


FIG.508A (1-L-6) OPT:REMOTE CONTROL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67296-95610	.SCREW	2	
36	67297-95600	.WASHER	2	
37	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
38	09100-08232	.BOLT (8X30)	1	
39	09126-05003	.SCREW (5X12)	2	
40	09140-06020	.NUT	3	
41	09160-06104	.WASHER (6.5X24X2)	3	
42	37859-90J00	.SPACER	1	
43	67282-94L00	.DECAL, REMOCON SIDE	1	
44	67284-94L00	.MARK, HANDLE LEVER	1	

FIG.513A

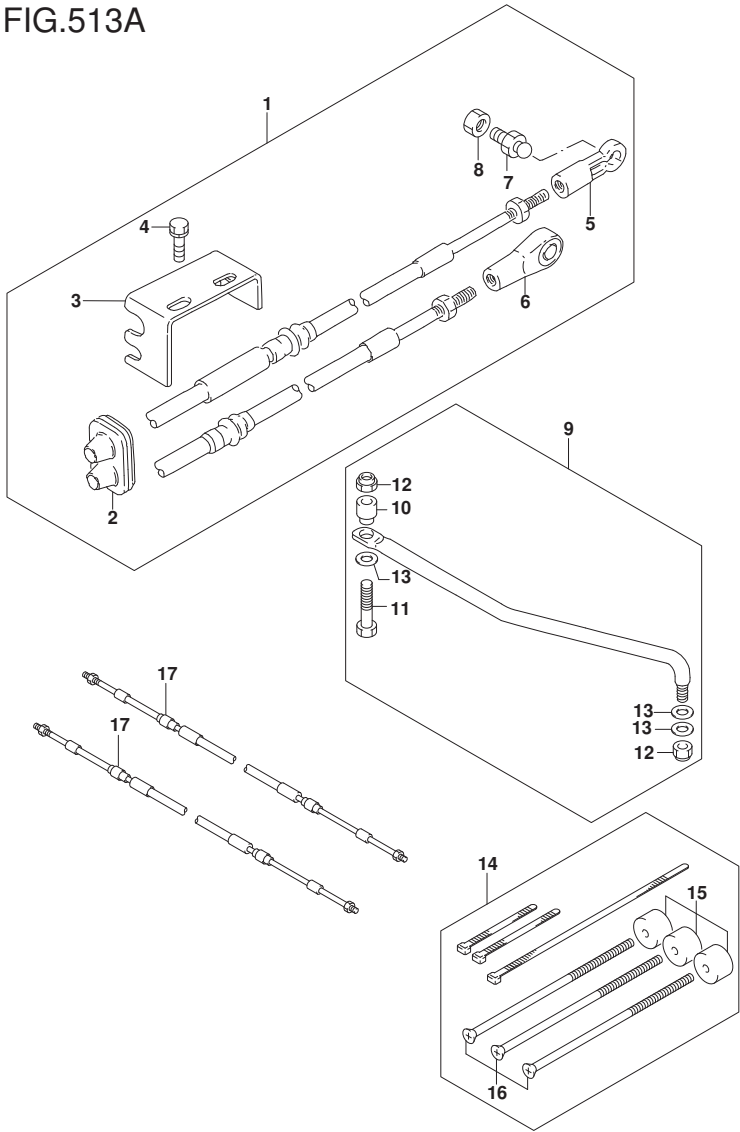


DT40W_P40_016_513A
OPT:REMOTE CONTROL PARTS

FIG.513A (1-L-7) OPT:REMOTE CONTROL PARTS (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67701-94430	LINK ASSY, DRAG	1	
10	67721-94310	.SPACER	1	
11	67725-99E10	.BOLT	1	
12	67726-99E00	.NUT	2	
13	67728-99E00	.WASHER	3	
14	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
15	67294-95600	.SPACER	3	
16	67296-95621	.SCREW	3	
17-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
17-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
17-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
17-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
17-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
17-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
17-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
17-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
17-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513B

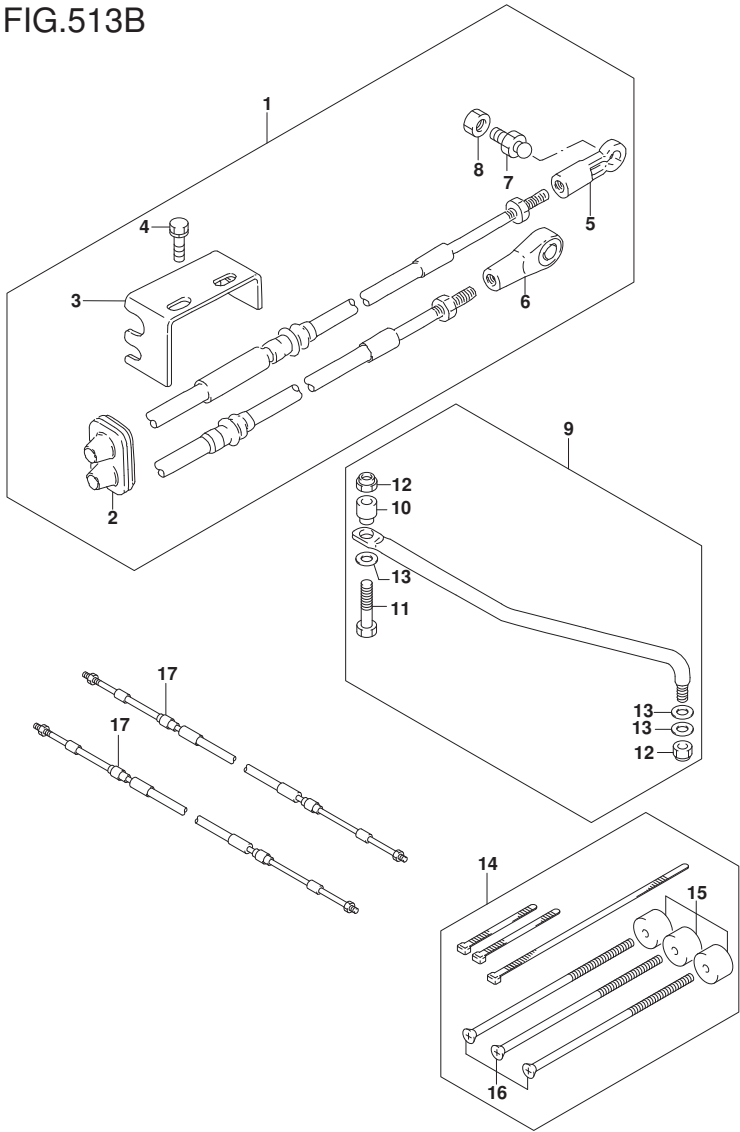

DT40W_P40_016_513B
OPT:REMOTE CONTROL PARTS

FIG.513B (1-L-8) OPT:REMOTE CONTROL PARTS (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67701-94430	LINK ASSY, DRAG	1	
10	67721-94310	.SPACER	1	
11	67725-99E10	.BOLT	1	
12	67726-99E00	.NUT	2	
13	67728-99E00	.WASHER	3	
14	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
15	67294-95600	.SPACER	3	
16	67296-95621	.SCREW	3	
17-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
17-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
17-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
17-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
17-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
17-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
17-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
17-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
17-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513C

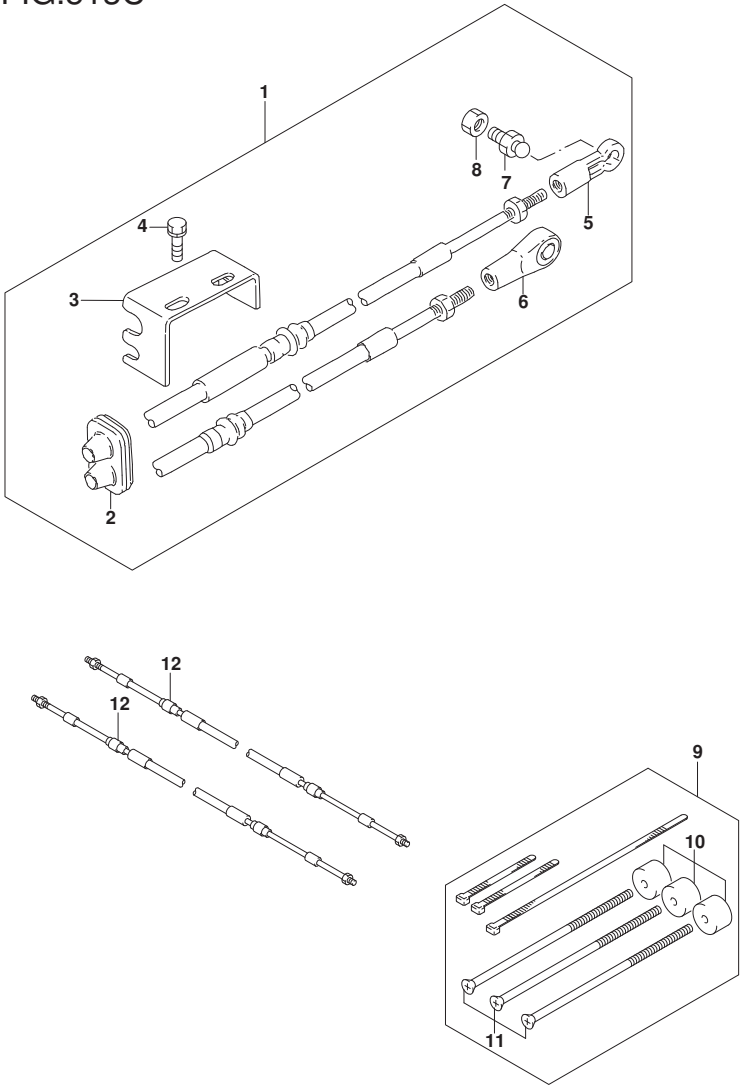


FIG.513C (1-L-9) OPT:REMOTE CONTROL PARTS (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
10	67294-95600	.SPACER	3	
11	67296-95621	.SCREW	3	
12-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
12-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
12-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
12-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
12-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
12-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
12-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
12-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
12-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513D

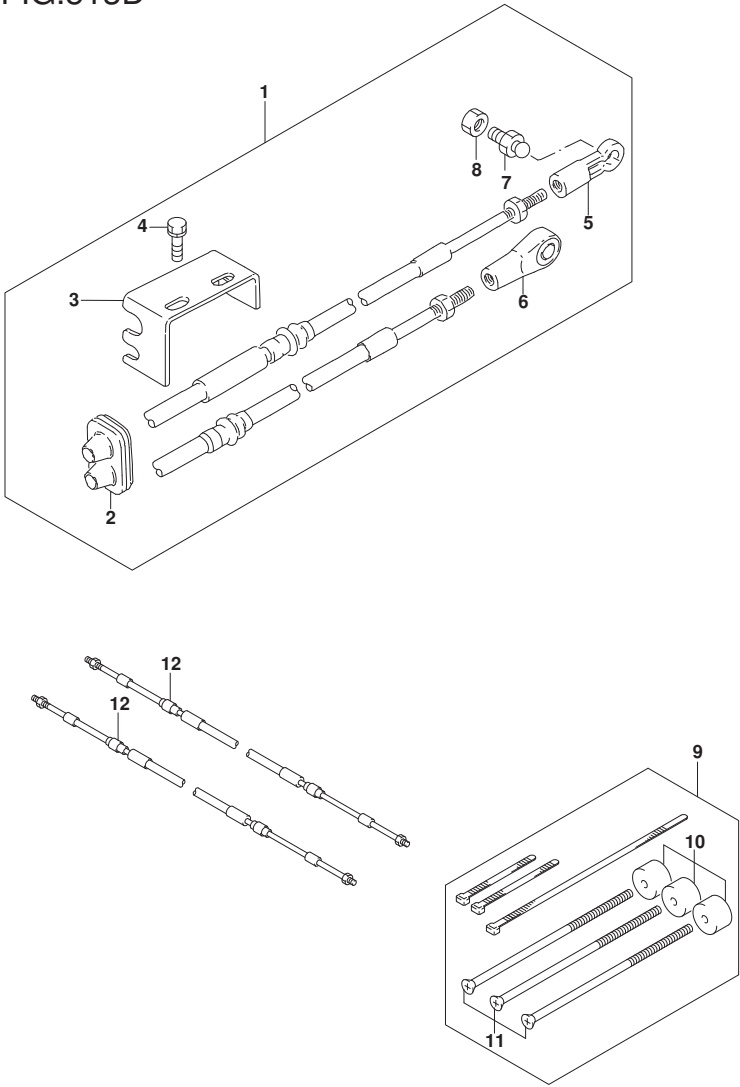


FIG.513D (1-L-10) OPT:REMOTE CONTROL PARTS (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
10	67294-95600	.SPACER	3	
11	67296-95621	.SCREW	3	
12-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
12-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
12-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
12-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
12-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
12-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
12-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
12-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
12-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513E

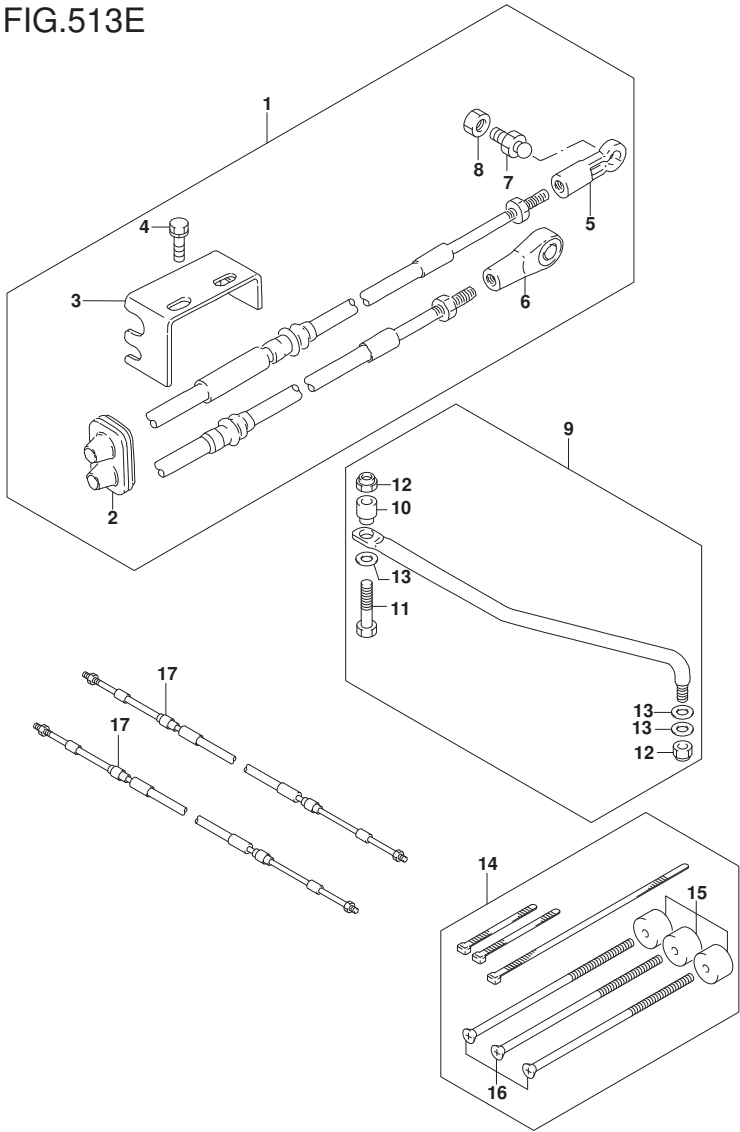


FIG.513E (1-L-11) OPT:REMOTE CONTROL PARTS (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67701-94430	LINK ASSY, DRAG	1	
10	67721-94310	.SPACER	1	
11	67725-99E10	.BOLT	1	
12	67726-99E00	.NUT	2	
13	67728-99E00	.WASHER	3	
14	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
15	67294-95600	.SPACER	3	
16	67296-95621	.SCREW	3	
17-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
17-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
17-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
17-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
17-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
17-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
17-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
17-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
17-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.550A

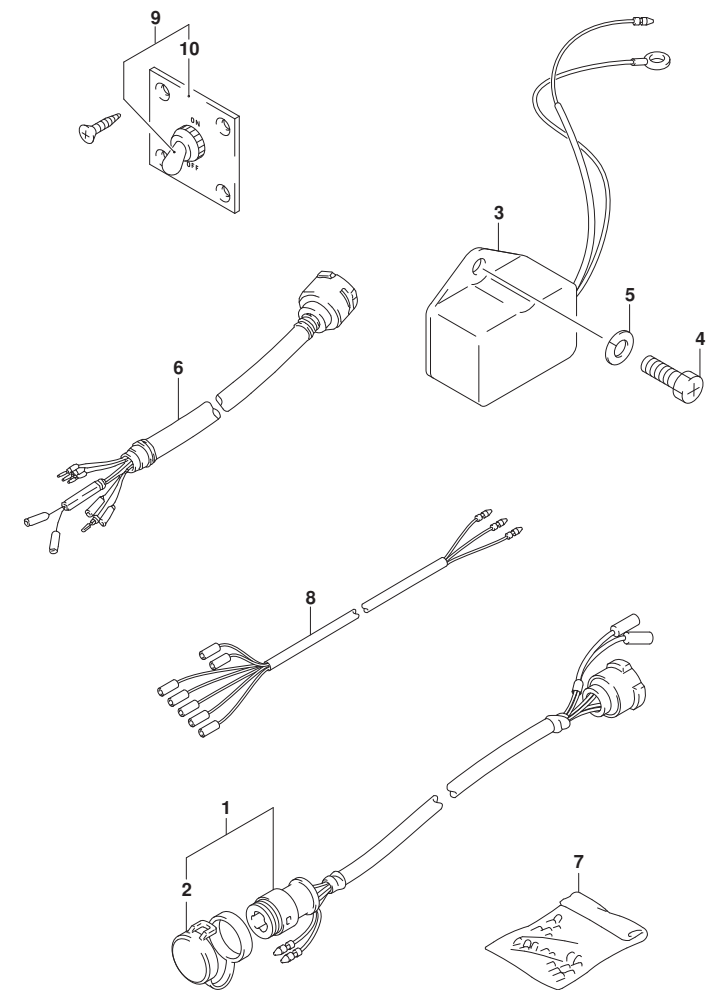


FIG.550A (1-L-12) OPT:ELECTRICAL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000	
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000	
2	36631-94300	.CAP	1		
3	32500-95722	REGULATOR ASSY, VOLTAGE	1		
4	02162-06127	SCREW	2		
5	08321-01067	LOCK WASHER	2		
6	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1		
7	36990-87D00	TERMINAL/SLEEVE SET	1		
8	36630-92E00	WIRE, INSTRUMENT	1		
9	37210-93J00	PANEL ASSY, LIGHTING SW	1		
10	37212-93J00	.PANEL, LIGHTING SW	1		

FIG.550B

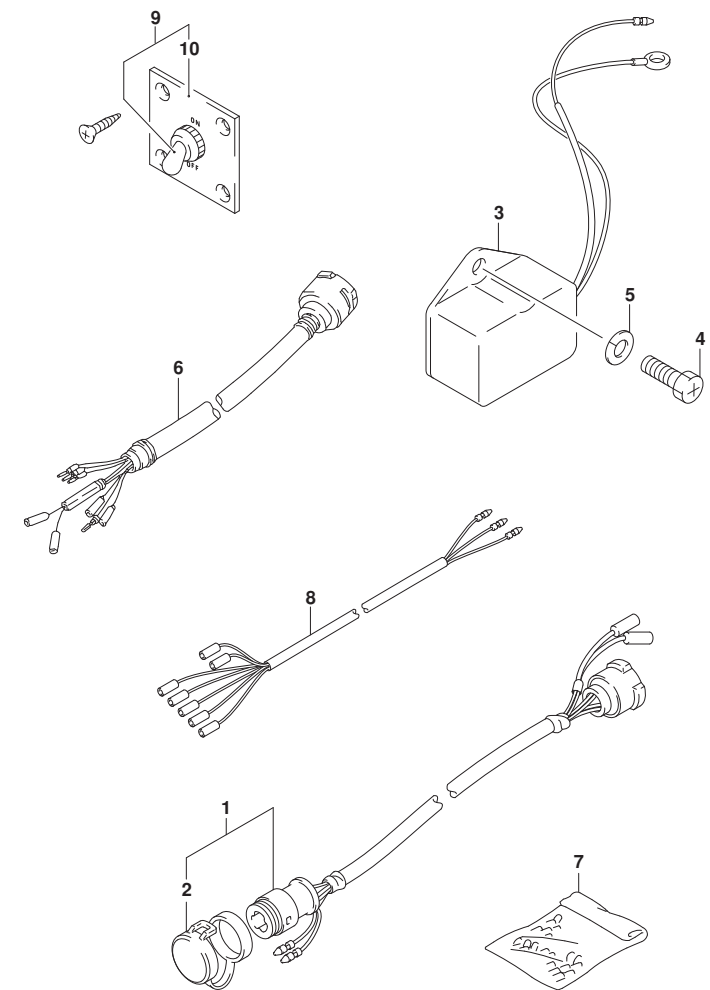


FIG.550B (1-L-13) OPT:ELECTRICAL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000	
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000	
2	36631-94300	.CAP	1		
3	32500-95722	REGULATOR ASSY, VOLTAGE	1		
4	02162-06127	SCREW	2		
5	08321-01067	LOCK WASHER	2		
6	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1		
7	36990-87D00	TERMINAL/SLEEVE SET	1		
8	36630-92E00	WIRE, INSTRUMENT	1		
9	37210-93J00	PANEL ASSY, LIGHTING SW	1		
10	37212-93J00	.PANEL, LIGHTING SW	1		

FIG.553A

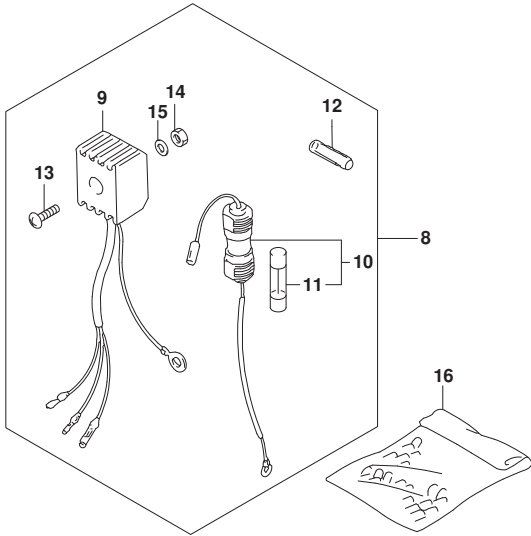
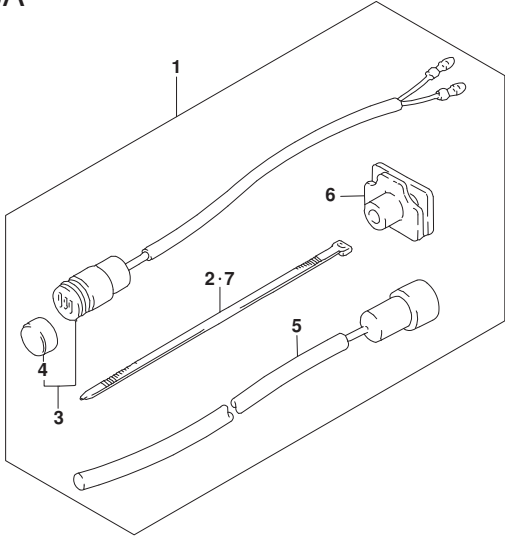


FIG.553A (1-L-14) OPT:ELECTRICAL (MANUAL STARTER) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	39600-93910	RECEPTACLE SET	1	
2	09407-25402	.CLAMP (L:250)	1	
3	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
4	36634-93910	.CAP	1	
5	39602-93900	.PLUG ASSY, LIGHTING	1	
6	39603-94400	.GROMMET, LIGHTING CABLE	1	
7	09407-10403	.CLAMP (L:95)	1	
8	32801-94402	RECTIFIER SET	1	
9	32800-95D01	.RECTIFIER ASSY	1	
10	36740-95253	.CASE ASSY, FUSE	1	
11	09481-20001	..FUSE (20A)	1	
12	37132-93700	.CONNECTOR, LEAD	1	
13	02142-05257	.SCREW	1	
14	08310-00057	.NUT	1	
15	08321-0105A	.LOCK WASHER	1	
16	36990-87D00	TERMINAL/SLEEVE SET	1	

FIG.553B

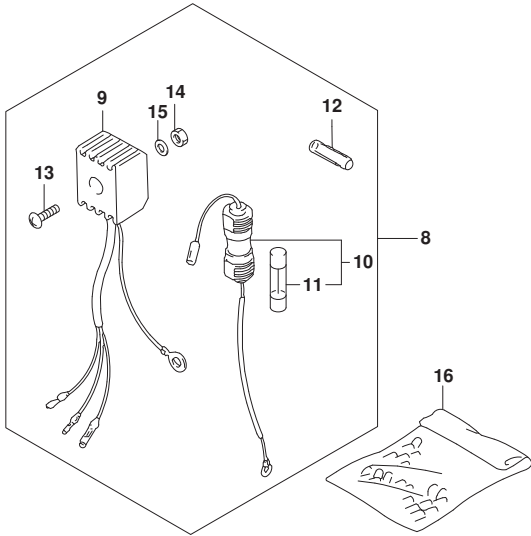
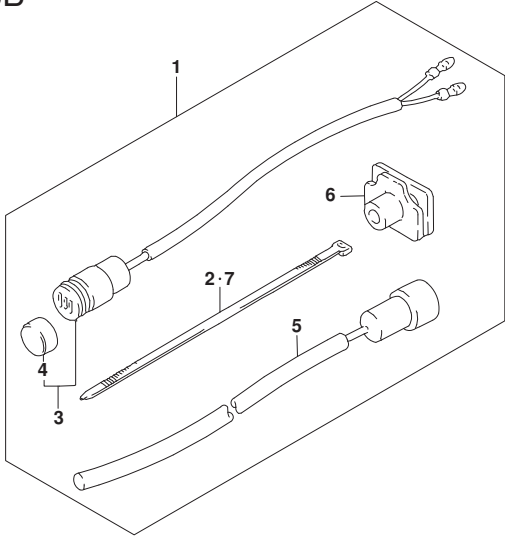


FIG.553B (1-L-15) OPT:ELECTRICAL (MANUAL STARTER) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	39600-93910	RECEPTACLE SET	1	
2	09407-25402	.CLAMP (L:250)	1	
3	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
4	36634-93910	..CAP	1	
5	39602-93900	.PLUG ASSY, LIGHTING	1	
6	39603-94400	.GROMMET, LIGHTING CABLE	1	
7	09407-10403	.CLAMP (L:95)	1	
8	32801-94402	RECTIFIER SET	1	
9	32800-95D01	.RECTIFIER ASSY	1	
10	36740-95253	.CASE ASSY, FUSE	1	
11	09481-20001	..FUSE (20A)	1	
12	37132-93700	.CONNECTOR, LEAD	1	
13	02142-05257	.SCREW	1	
14	08310-00057	.NUT	1	
15	08321-0105A	.LOCK WASHER	1	
16	36990-87D00	TERMINAL/SLEEVE SET	1	

FIG.553C



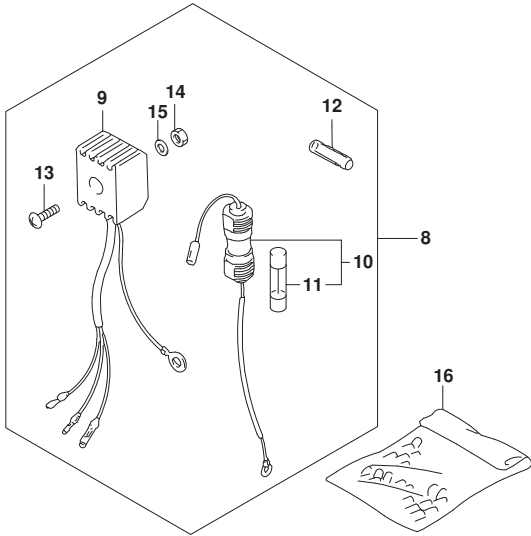


FIG.553C (2-B-2) OPT:ELECTRICAL (MANUAL STARTER) (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	39600-93910	RECEPTACLE SET	1	
2	09407-25402	.CLAMP (L:250)	1	
3	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
4	36634-93910	.CAP	1	
5	39602-93900	.PLUG ASSY, LIGHTING	1	
6	39603-94400	.GROMMET, LIGHTING CABLE	1	
7	09407-10403	.CLAMP (L:95)	1	
8	32801-94402	RECTIFIER SET	1	
9	32800-95D01	.RECTIFIER ASSY	1	
10	36740-95253	.CASE ASSY, FUSE	1	
11	09481-20001	..FUSE (20A)	1	
12	37132-93700	.CONNECTOR, LEAD	1	
13	02142-05257	.SCREW	1	
14	08310-00057	.NUT	1	
15	08321-0105A	.LOCK WASHER	1	
16	36990-87D00	TERMINAL/SLEEVE SET	1	

FIG.554A

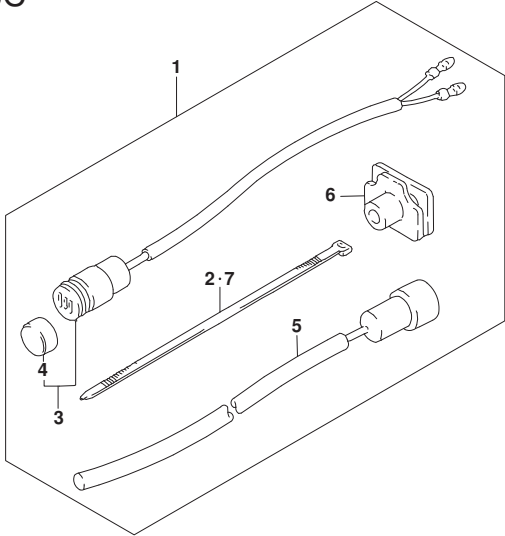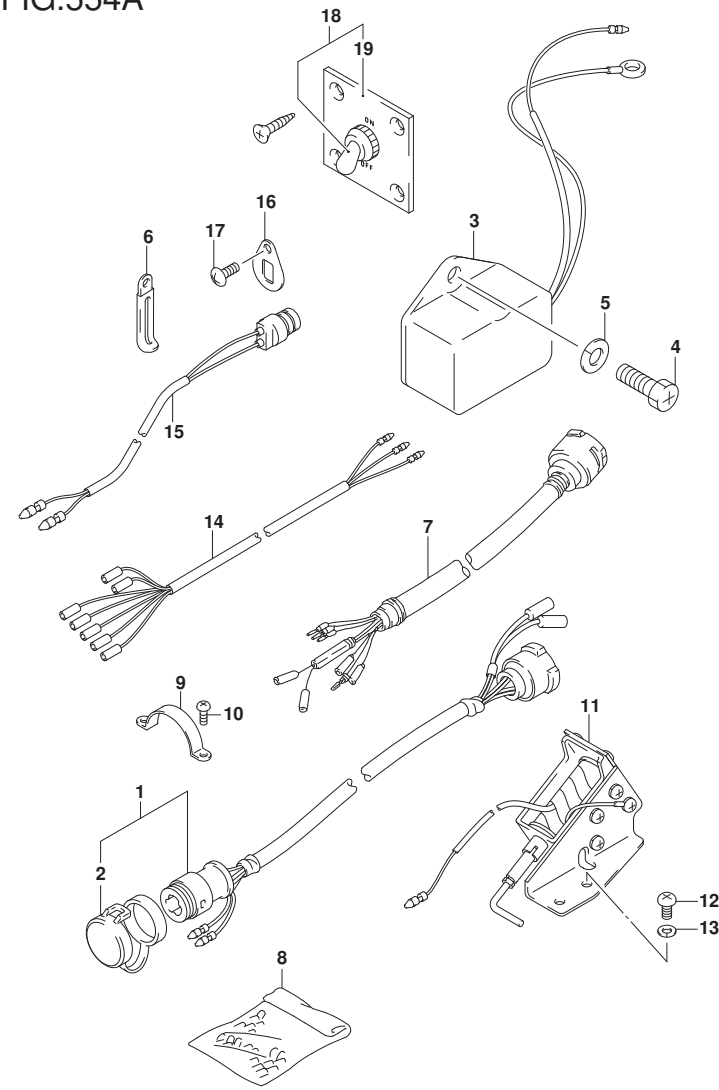


DT40W_P40_016_554A
OPT:ELECTRICAL (ELECTRIC STARTER)

FIG.554A (2-B-3) OPT:ELECTRICAL (ELECTRIC STARTER) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000
2	36631-94300	.CAP	1	
3	32500-95722	REGULATOR ASSY, VOLTAGE	1	
4	02162-06127	SCREW	2	
5	08321-01067	LOCK WASHER	2	
6	29404-93J10	CLAMP	1	
7	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1	
8	36990-87D00	TERMINAL/SLEEVE SET	1	
9	38501-95500	BAND, BUZZER	1	
10	02112-05087	SCREW	2	
11	38600-94400	SOLENOID ASSY, CHOKE	1	
12	02112-05107	SCREW	2	
13	08321-0105A	LOCK WASHER	2	
14	36630-92E00	WIRE, INSTRUMENT	1	
15	34850-94610	SENSOR ASSY, HEAT	1	
16	34853-94700	SUPPORTER, HEAT SENSOR	1	
17	29125-93J00	SCREW	1	
18	37210-93J00	PANEL ASSY, LIGHTING SW	1	
19	37212-93J00	.PANEL, LIGHTING SW	1	

FIG.554B

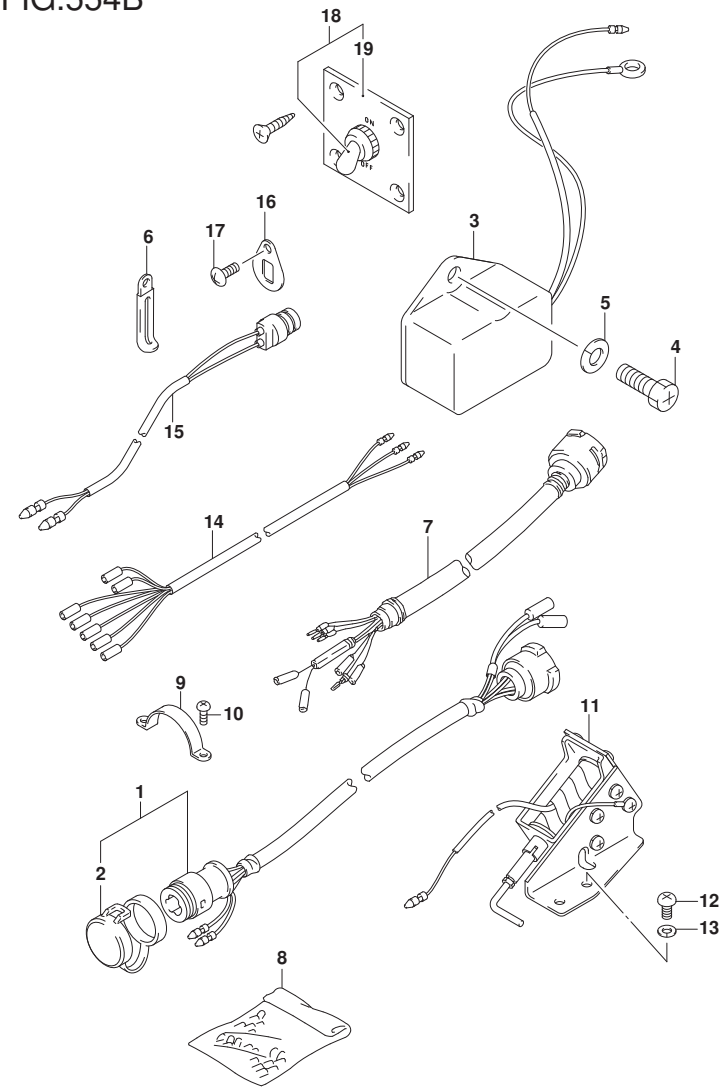


DT40W_P40_016_554B
OPT:ELECTRICAL (ELECTRIC STARTER)

FIG.554B (2-B-4) OPT:ELECTRICAL (ELECTRIC STARTER) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000
2	36631-94300	.CAP	1	
3	32500-95722	REGULATOR ASSY, VOLTAGE	1	
4	02162-06127	SCREW	2	
5	08321-01067	LOCK WASHER	2	
6	29404-93J10	CLAMP	1	
7	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1	
8	36990-87D00	TERMINAL/SLEEVE SET	1	
9	38501-95500	BAND, BUZZER	1	
10	02112-05087	SCREW	2	
11	38600-94400	SOLENOID ASSY, CHOKE	1	
12	02112-05107	SCREW	2	
13	08321-0105A	LOCK WASHER	2	
14	36630-92E00	WIRE, INSTRUMENT	1	
15	34850-94610	SENSOR ASSY, HEAT	1	
16	34853-94700	SUPPORTER, HEAT SENSOR	1	
17	29125-93J00	SCREW	1	
18	37210-93J00	PANEL ASSY, LIGHTING SW	1	
19	37212-93J00	.PANEL, LIGHTING SW	1	

FIG.561A

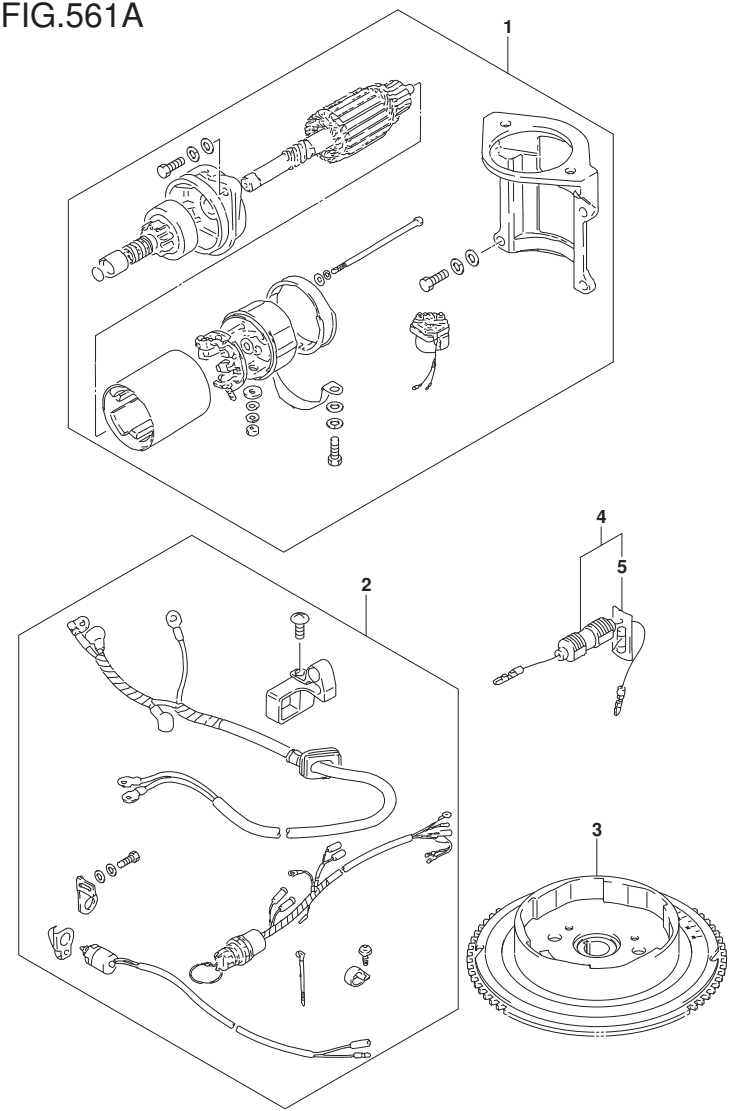


DT40W_P40_016_561A
OPT:STARTING MOTOR (MANUAL STARTER)

FIG.561A (2-B-5) OPT:STARTING MOTOR (MANUAL STARTER) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31101-94402-0EP	MOTOR SET, STARTING (BLACK)	1	
2	33800-94433	CABLE/SWITCH SET, STARTING	1	
3	32102-92L00	FLYWHEEL	1	
4	36740-93901	CASE ASSY, FUSE	1	
5	09481-20001	.FUSE (20A)	1	

FIG.561B

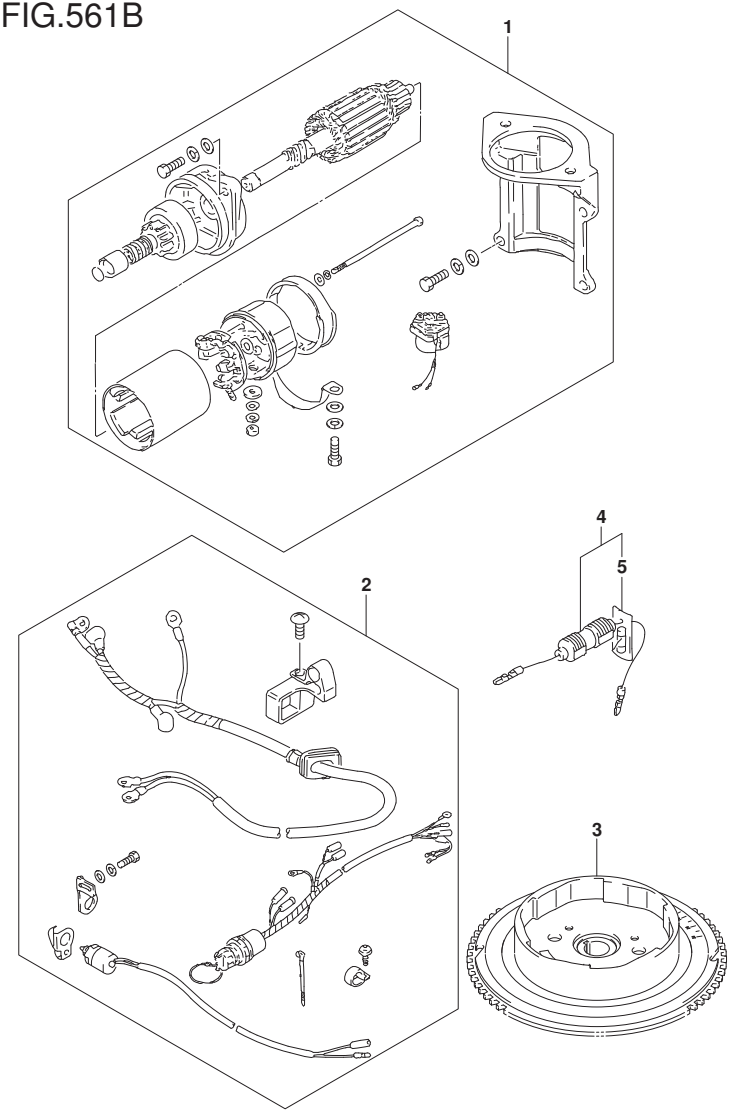


DT40W_P40_016_561B
OPT:STARTING MOTOR (MANUAL STARTER)

FIG.561B (2-B-6) OPT:STARTING MOTOR (MANUAL STARTER) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31101-94402-0EP	MOTOR SET, STARTING (BLACK)	1	
2	33800-94433	CABLE/SWITCH SET, STARTING	1	
3	32102-92L00	FLYWHEEL	1	
4	36740-93901	CASE ASSY, FUSE	1	
5	09481-20001	.FUSE (20A)	1	

FIG.570A

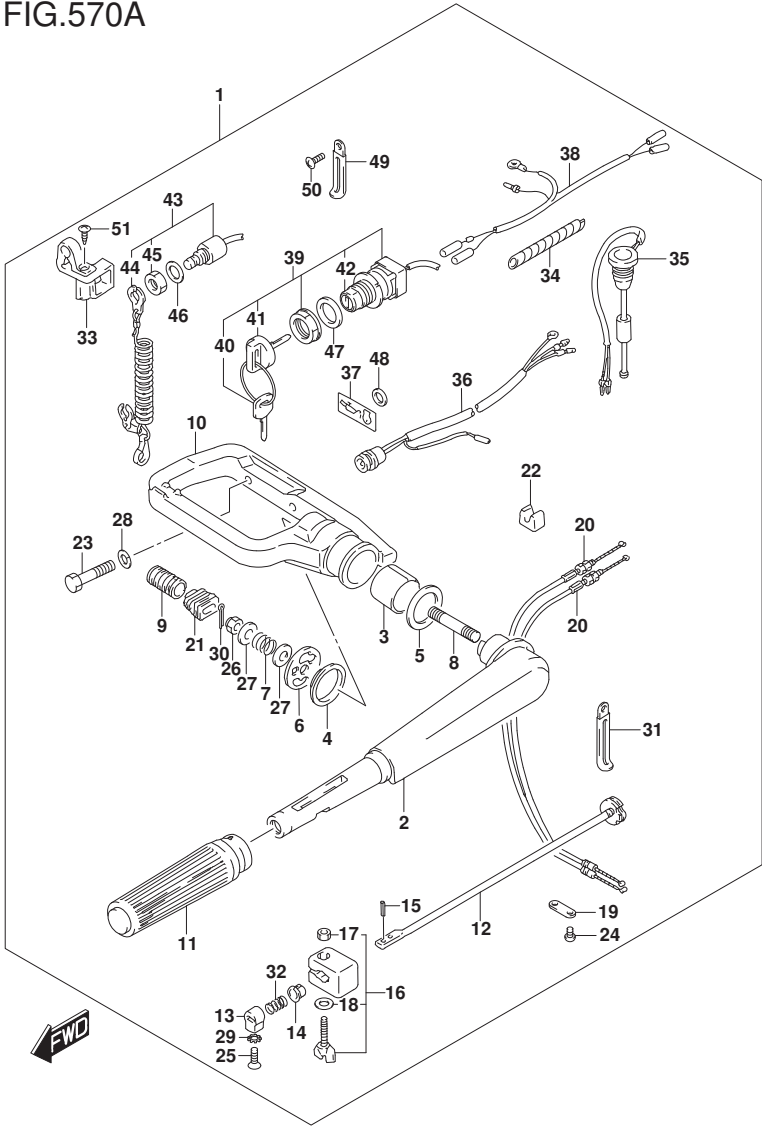


DT40W_P40_016_570A
OPT:TILLER HANDLE

FIG.570A (2-B-7) OPT:TILLER HANDLE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63001-97E08-0EP	HANDLE ASSY, TILLER (BLACK)	1	
2	63111-97E05-0EP	.HANDLE, TILLER (BLACK)	1	
3	63115-97E00	.BUSH, TILLER HANDLE	1	
4	63116-97E00	.WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	.WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	.PLATE, TILLER HANDLE	1	
7	63126-97E01	.SPRING, HANDLE STUD	1	
8	09108-10137	.STUD BOLT	1	
9	63128-97E00	.COVER, HANDLE NUT	1	
10	63131-97E03-0EP	.BRACKET, TILLER HANDLE (BLACK)	1	
11	63210-93E30	.GRIP	1	
12	63220-96302	.ROD, HANDLE	1	
13	63223-92D00	.STOPPER, HANDLE ROD	1	
14	63225-93200	.BUSH, HANDLE ROD	1	
15	63227-93200	.PIN, HANDLE ROD	1	
16	63240-97E20	.ADJUSTER SET, HANDLE GRIP	1	
17	09140-05005	.NUT	1	
18	09160-05029	..WASHER (5.5X12X0.8)	1	
19	63241-92D00	.SUPPORT, HANDLE ROD	1	
20	63610-92L00	.CABLE ASSY, THROTTLE	2	
21	63625-96300	.GROMMET, THROTTLE CABLE	1	
22	63627-94400	.GUIDE, THROTTLE CABLE	1	
23	09100-10155	.BOLT (10X50)	2	
24	09125-05046	.SCREW (5X12)	2	
25	09126-06015	.SCREW (6X23)	1	
26	09159-10050	.NUT	1	
27	09160-10082	.WASHER (10.5X19X2)	2	
28	09162-10005	.LOCK WASHER	2	
29	09163-06001	.LOCK WASHER	1	
30	09204-01002	.PIN	1	
31	29404-93J20	.CLAMP, THROTTLE CABLE	1	
32	09440-12027	.SPRING	1	
33	33816-96300	.CLAMP, CABLE	1	

FIG.570A

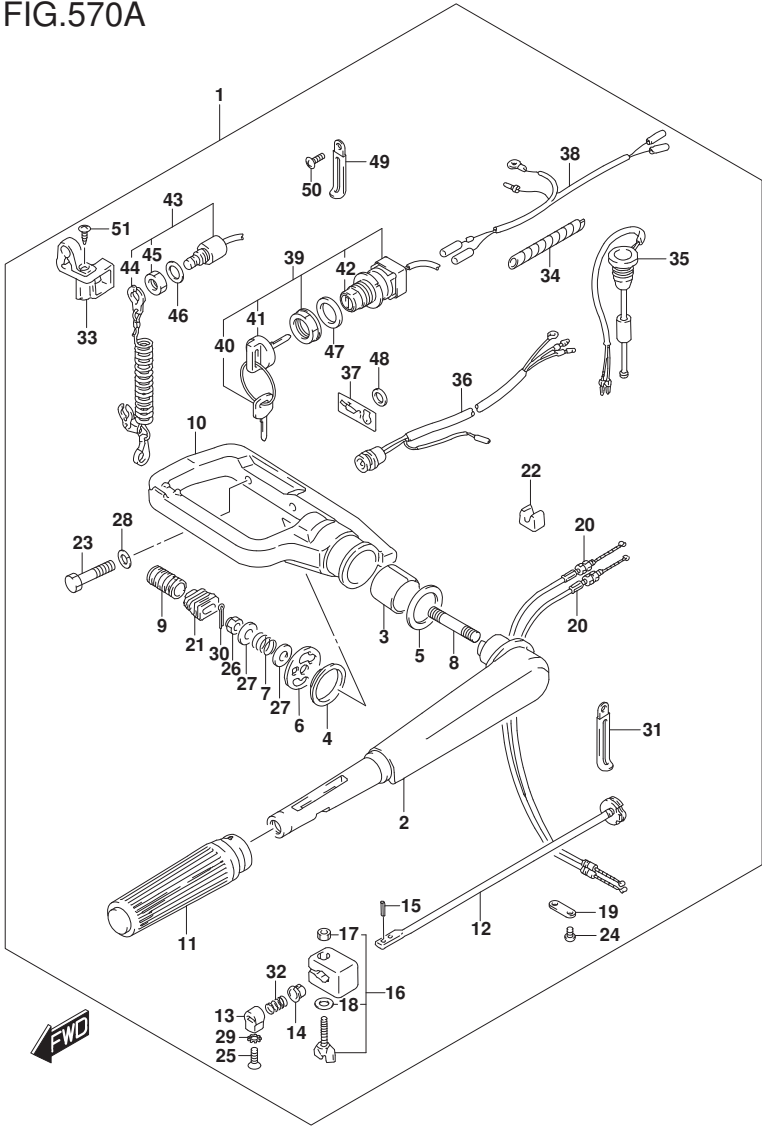

DT40W_P40_016_570A
OPT:TILLER HANDLE

FIG.570A (2-B-8) OPT:TILLER HANDLE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	33833-91J00	..TUBE, EMERGENCY SWITCH LEAD	1	
35	34860-94402	..SENSOR ASSY, OIL LEVEL	1	
36	36360-94400	..LAMP ASSY, OIL WARNING	1	
37	36367-95D10-064	..LABEL, OIL (WHITE)	1	
38	36893-94410	..WIRE ASSY, IGNITION SW EXT	1	
39	37110-94471	..SWITCH ASSY, IGNITION	1	
40-1	37141-99E00	..KEY (931)	1	
40-2	37141-99E10	..KEY (932)	1	
40-3	37141-99E20	..KEY (933)	1	
40-4	37141-99E30	..KEY (934)	1	
40-5	37141-99E40	..KEY (935)	1	
40-6	37141-99E50	..KEY (936)	1	
40-7	37141-99E60	..KEY (937)	1	
40-8	37141-99E70	..KEY (938)	1	
40-9	37141-99E80	..KEY (939)	1	
40-10	37141-99E90	..KEY (940)	1	
40-11	37141-99EA0	..KEY (941)	1	
40-12	37141-99EB0	..KEY (942)	1	
41	37143-99E00	..CAP, KEY	1	
42	37149-93J00	..CAP, CYLINDER BODY	1	
43	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
44	37823-92E01	..PLATE	1	
45	37826-92J00	..NUT	1	
46	09160-12067	..WASHER (12.5X23X1)	1	
47	09160-25069	..WASHER (25X40X1.1)	1	
48	09320-11004	..CUSHION	1	
49	29404-93J10	..CLAMP, IGNITION SWITCH LEAD	1	
50	02142-06127	..SCREW	1	
51	03241-0625A	..SCREW	1	

FIG.570B


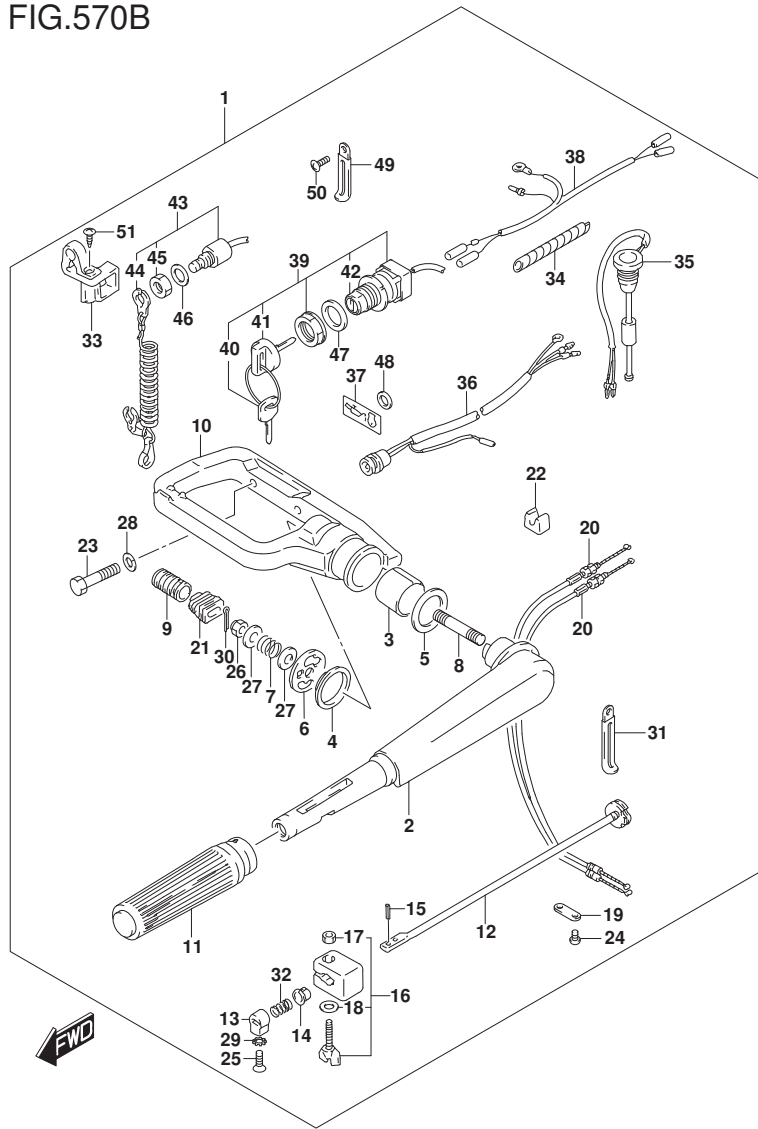


FIG.570B (2-B-9) OPT:TILLER HANDLE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63001-97E08-0EP	HANDLE ASSY, TILLER (BLACK)	1	
2	63111-97E05-0EP	.HANDLE, TILLER (BLACK)	1	
3	63115-97E00	.BUSH, TILLER HANDLE	1	
4	63116-97E00	.WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	.WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	.PLATE, TILLER HANDLE	1	
7	63126-97E01	.SPRING, HANDLE STUD	1	
8	09108-10137	.STUD BOLT	1	
9	63128-97E00	.COVER, HANDLE NUT	1	
10	63131-97E03-0EP	.BRACKET, TILLER HANDLE (BLACK)	1	
11	63210-93E30	.GRIP	1	
12	63220-96302	.ROD, HANDLE	1	
13	63223-92D00	.STOPPER, HANDLE ROD	1	
14	63225-93200	.BUSH, HANDLE ROD	1	
15	63227-93200	.PIN, HANDLE ROD	1	
16	63240-97E20	.ADJUSTER SET, HANDLE GRIP	1	
17	09140-05005	.NUT	1	
18	09160-05029	..WASHER (5.5X12X0.8)	1	
19	63241-92D00	.SUPPORT, HANDLE ROD	1	
20	63610-92L00	.CABLE ASSY, THROTTLE	2	
21	63625-96300	.GROMMET, THROTTLE CABLE	1	
22	63627-94400	.GUIDE, THROTTLE CABLE	1	
23	09100-10155	.BOLT (10X50)	2	
24	09125-05046	.SCREW (5X12)	2	
25	09126-06015	.SCREW (6X23)	1	
26	09159-10050	.NUT	1	
27	09160-10082	.WASHER (10.5X19X2)	2	
28	09162-10005	.LOCK WASHER	2	
29	09163-06001	.LOCK WASHER	1	
30	09204-01002	.PIN	1	
31	29404-93J20	.CLAMP, THROTTLE CABLE	1	
32	09440-12027	.SPRING	1	
33	33816-96300	.CLAMP, CABLE	1	

FIG.570B

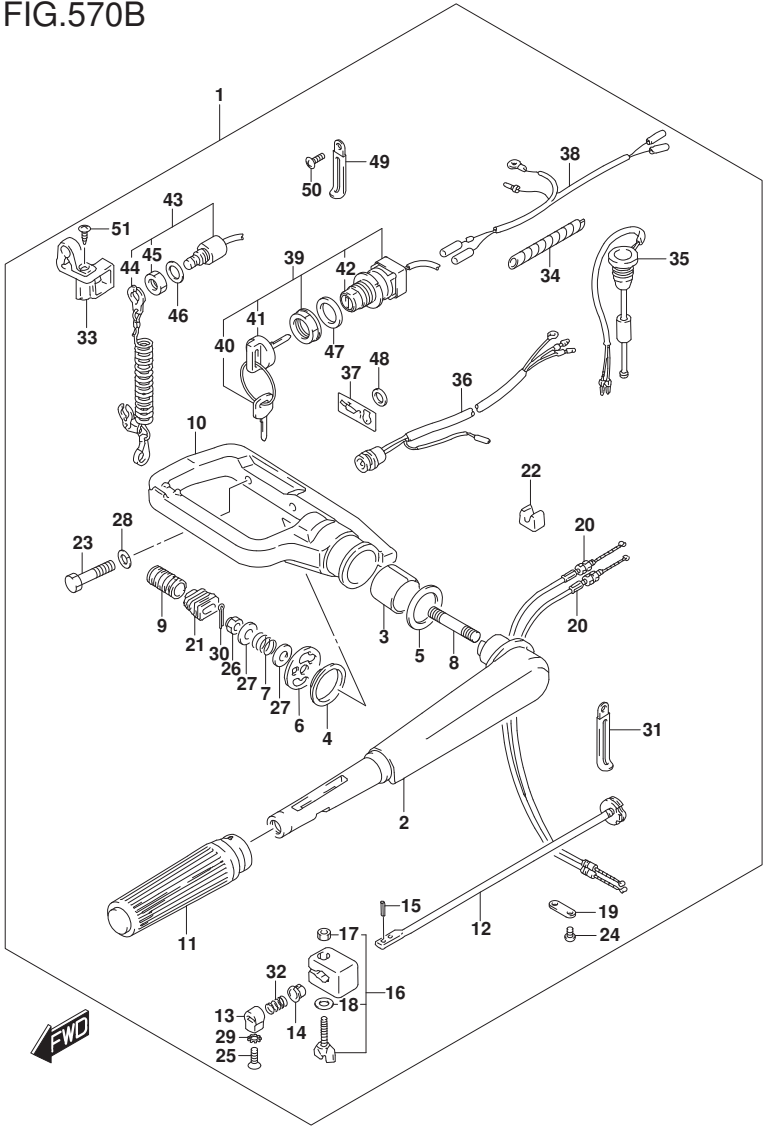

DT40W_P40_016_570B
OPT:TILLER HANDLE

FIG.570B (2-B-10) OPT:TILLER HANDLE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	33833-91J00	..TUBE, EMERGENCY SWITCH LEAD	1	
35	34860-94402	..SENSOR ASSY, OIL LEVEL	1	
36	36360-94400	..LAMP ASSY, OIL WARNING	1	
37	36367-95D10-064	..LABEL, OIL (WHITE)	1	
38	36893-94410	..WIRE ASSY, IGNITION SW EXT	1	
39	37110-94471	..SWITCH ASSY, IGNITION	1	
40-1	37141-99E00	..KEY (931)	1	
40-2	37141-99E10	..KEY (932)	1	
40-3	37141-99E20	..KEY (933)	1	
40-4	37141-99E30	..KEY (934)	1	
40-5	37141-99E40	..KEY (935)	1	
40-6	37141-99E50	..KEY (936)	1	
40-7	37141-99E60	..KEY (937)	1	
40-8	37141-99E70	..KEY (938)	1	
40-9	37141-99E80	..KEY (939)	1	
40-10	37141-99E90	..KEY (940)	1	
40-11	37141-99EA0	..KEY (941)	1	
40-12	37141-99EB0	..KEY (942)	1	
41	37143-99E00	..CAP, KEY	1	
42	37149-93J00	..CAP, CYLINDER BODY	1	
43	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
44	37823-92E01	..PLATE	1	
45	37826-92J00	..NUT	1	
46	09160-12067	..WASHER (12.5X23X1)	1	
47	09160-25069	..WASHER (25X40X1.1)	1	
48	09320-11004	..CUSHION	1	
49	29404-93J10	..CLAMP, IGNITION SWITCH LEAD	1	
50	02142-06127	..SCREW	1	
51	03241-0625A	..SCREW	1	

DT40W_P40_016

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11431-92L00	141A-2 141B-2 141C-2 141D-2 141E-2	12200-92L30	116A-7 116B-7 116C-7 116D-7 116E-7
	11111-92L20	11433-92L00	141A-1 141B-1 141C-1 141D-1	12211-94410	116A-11 116B-11 116C-11 116D-11
	11111-92L30		141E-1		116E-11
	11141-94450	11434-92L00	141A-3 141B-3 141C-3 141D-3	12221-92L20	116A-12 116B-12 116C-12 116D-12
			141E-3		116E-12
11161-92L10	112A-1 112B-1 112C-1 112D-1 112E-1	11435-94400	405A-7 405B-7 405C-7 405D-7 405E-7	12231-92L20	116A-14 116B-14 116C-14 116D-14 116E-14
11162-92L00	112A-2 112B-2 112C-2 112D-2 112E-2	12100-94400-050	116A-24 116B-24 116C-24 116D-24 116E-24	12232-92L20	116A-13 116B-13 116C-13 116D-13 116E-13
11281-94400	112A-19 112B-19 112C-19 112D-19 112E-19	12110-92L20-0B0 12110-94400	116E-1 116A-1 116B-1 116C-1 116D-1	12240-92L20	116A-15 116B-15 116C-15 116D-15 116E-15
11291-94402	112A-7 112B-7 112C-7 112D-7 112E-7	12140-94400	116A-2 116B-2 116C-2 116D-2	13111-92L00	125A-3 125B-3 125C-3 125D-3
11300-92L30	112A-9 112B-9 112C-9 112D-9 112E-9	12140-94400-050	116A-25 116B-25 116C-25 116D-25 116E-25	13111-94450-0EP	125E-3
				13125-95210	125A-4 125B-4 125C-4 125D-4 125E-4
11411-92L10	130A-1 130B-1 130C-1 130D-1 130E-1	12151-94400	116A-3 116B-3 116C-3 116D-3 116E-3	13126-94450 13150-92L00	128E-34 125A-6 125B-6 125C-6 125D-6
11413-94411	130A-2 130B-2 130C-2 130D-2 130E-2	12161-94400	116A-8 116B-8 116C-8 116D-8 116E-8	13152-92L00	125E-6 125A-8 125B-8 125C-8 125D-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
13153-92L00	125E-8 125A-7 125B-7 125C-7 125D-7		128C-4 128D-4 128E-30 128E-22		128D-21 128E-35 128E-5 128E-7
	125E-7	13269-98100 13270-94350 13271-93311	128A-3 128B-3 128C-3 128D-3 128E-23	13651-95300 13811-92L00	125A-16 125B-16 125C-16 125D-16 125E-16
	128E-1 128A-1 128B-1 128C-1 128D-1		128E-25		125A-17
	128A-6 128B-6 128C-6 128D-6	13282-94350 13370-27310 13370-94350 13370-97E20	128E-17 128A-10 128B-10 128C-10 128D-10	13812-92L00	125B-17 125C-17 125D-17 125E-17
	128E-32 128E-33 128E-10 128A-16 128B-16		128E-18	13855-95210	125A-18 125B-18 125C-18 125D-18 125E-18
13236-94460 13237-94460 13245-94350 13245-94400	128B-16 128C-16 128D-16 128E-6 128A-7 128B-7 128C-7 128D-7 128E-26 128A-8 128B-8 128C-8 128D-8 128A-9 128B-9 128C-9 128D-9 128E-27	13392-58600	128A-20 128B-20 128C-20 128D-20 128E-18 128E-14 128E-13 128E-12 128A-17 128B-17 128C-17 128D-17 128E-20 128E-4 128E-31 128E-19 128E-28 128A-12 128B-12 128C-12 128D-12 128E-29	13910-94400	128A-24 128B-24 128C-24 128D-24 128E-38 125A-13 125B-13 125C-13 125D-13 125E-13
13249-93900 13250-93012	128A-7 128B-7 128C-7 128D-7 128E-26 128A-8 128B-8 128C-8 128D-8 128A-9 128B-9 128C-9 128D-9 128E-27	13415-94350 13418-94360 13419-94400 13426-95211	128E-14 128E-13 128E-12 128A-17 128B-17 128C-17 128D-17 128E-20 128E-4 128E-31 128E-19 128E-28 128A-12 128B-12 128C-12 128D-12 128E-29	14131-92L10	125A-14 125B-14 125C-14 125D-14 125E-14 125A-12 125B-12 125C-12 125D-12 125E-12
13251-95220	128B-8 128C-8 128D-8 128A-9 128B-9 128C-9 128D-9 128E-27 128A-8 128B-5 128C-5 128D-5 128A-19 128B-19 128C-19 128D-19 128E-9 128A-4 128B-4	13441-94350 13443-94350 13446-94360 13450-94350 13462-94351 13464-96350	128E-31 128E-19 128E-28 128A-12 128B-12 128C-12 128D-12 128E-29 128E-21 128E-8 128A-13 128B-13 128C-13 128D-13 128A-11 128B-11 128C-11 128D-11 128A-21 128B-21 128C-21	14141-92L10	125A-14 125B-14 125C-14 125D-14 125E-14 125A-12 125B-12 125C-12 125D-12 125E-12
13254-98300	128B-5 128C-5 128D-5 128A-19 128B-19 128C-19 128D-19 128E-9 128A-4 128B-4	13521-78100 13534-96300 13580-94400	128E-19 128E-28 128A-12 128B-12 128C-12 128D-12 128E-29 128E-21 128E-8 128A-13 128B-13 128C-13 128D-13 128A-11 128B-11 128C-11 128D-11 128A-21 128B-21 128C-21	14151-92L00	125A-12 125B-12 125C-12 125D-12 125E-12
13254-98410 13265-94360 13267-93900	128A-5 128B-5 128C-5 128D-5 128A-19 128B-19 128C-19 128D-19 128E-9 128A-4 128B-4			14211-92L20	141A-4-2 141B-4-2 141C-4-2 141D-4-2 141E-4-2 141A-4-1 141B-4-1 141C-4-1 141D-4-1 141E-4-1 141A-5
13268-96111	128B-19 128C-19 128D-19 128E-9 128A-4 128B-4	13613-94300	128B-11 128C-11 128D-11 128A-21 128B-21 128C-21	14211-94451	141A-4-1 141B-4-1 141C-4-1 141D-4-1 141E-4-1 141A-5
13269-95210				14212-94413	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
15100-94311	141B-5	15413-87D10	146A-8	17461-96312	160A-9
	141C-5		146B-8		160B-9
	141D-5		146C-8		160C-9
	141E-5		146D-8		160D-9
	146A-1		146E-12		160E-9
15100-94460	146B-1	15430-87D10	146A-9	17471-92L00	160A-10
	146C-1		146B-9		160B-10
	146D-1		146C-9		160C-10
	146E-1		146D-9		160D-10
	146A-2		146E-11		160E-10
15170-94320	146B-2	15851-94300	146A-5	17472-96303	160A-11
	146C-2		146B-5		160B-11
	146D-2		146C-5		160C-11
	146E-2		146D-5		160D-11
	146A-3		10AA-1		160E-11
15183-94301	146B-3	17400-92810	10AB-1	17561-92L50	160A-2-1
	146C-3		10AC-1		160B-2-1
	146D-3		10AD-1		160D-2-1
	146A-4		10AA-2		160E-2-1
	146B-4		10AB-2		160A-2-2
15186-94300	146C-4	17400-94412	10AC-2	17561-92L60	160B-2-2
	146D-4		10AD-2		160C-2-1
	146E-17		160A-19		160D-2-2
	146A-10		160B-19		160E-2-2
	146B-10		160C-19		160A-2-3
15211-91J00-050	146C-10	17410-92L00	160D-19	17561-92L70	160B-2-3
	146D-10		160A-3		160C-2-2
	146A-11		160B-3		160D-2-3
	146B-11		160C-3		160E-2-3
	146C-11		160D-3		160A-16
15211-91J00-140	146D-11	17431-92L00	160E-3	17563-94400	160B-16
	146E-18		160A-1-3		160C-16
	146A-12		160B-1-3		160D-16
	146B-12		160C-1-2		160E-16
	146C-12		160D-1-3		160A-17
15251-94450	146D-12	17431-92L10	160E-1-3	17565-94400	160B-17
	146E-3		160A-1-1		160C-17
	146E-4		160B-1-1		160D-17
	146E-21		160D-1-1		160E-17
	146A-6		160E-1-1		160A-18
15321-99710	146B-6	17431-92L20	160A-1-2	17566-94400	160B-18
	146C-6		160B-1-2		160C-18
	146D-6		160C-1-1		160D-18
	146E-25		160D-1-2		160E-18
	146E-20		160E-1-2		407A-4
15410-94350	146A-7	17432-96300	160A-15	17631-91L00	407A-6
	146B-7		160B-15		407A-26
	146C-7		160C-15		112A-18
	146D-7		160D-15		112B-18
	146E-10		160E-15		112C-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
17670-94402	112D-18	19654-94421	166C-8	21131-96010	420A-6
	112E-18		166D-8		420B-6
	112A-17		166A-5		420C-6
	112B-17		166B-5		420D-6
	112C-17		166C-5		420E-6
17681-92L10	112D-17	19811-94400	166D-5	22511-99011	336A-1
	112E-17		166E-6		336B-1
	10AA-3		166A-9		336C-1
	10AB-3		166B-9		336D-1
	10AC-3		166C-9		336E-1
17685-94410	10AD-3	19815-94400	166D-9	23111-92L00	201A-1
	112A-16		166E-7		201B-1
	112B-16		166A-10		201C-1
	112C-16		166B-10		201D-1
	112D-16		166C-10		201E-1
18100-92L10	112E-16	19851-94401	166D-10	23131-92L00	201A-12
	167A-1		166E-8		201B-12
	18120-96320		166A-6		201C-12
	18130-91L00		166B-6		201D-12
	18132-89L00		166C-6		201E-12
18142-96300	167A-4	19861-92L00	166D-6	23211-94401	201A-21
	167A-8		166E-9		201B-21
	18210-93002		166A-7		201C-21
	18280-96320		166B-7		201D-21
	18290-92L00		166C-7		201E-21
18711-92L10	167A-10	23213-94400	166D-7	23311-95J00	201A-7
	18721-92L10		166E-10		201B-7
	166A-1				201C-7
	166B-1				201D-7
	166C-1				201E-7
19131-95502	166D-1	20000	166E-1	25111-92L50	201A-10
	166A-2		166E-2		201B-10
	166B-2		166C-2		201C-10
	166D-2		201A-13		201D-10
	166E-2		201B-13		201E-10
19132-96300	166E-3	21110-94402	201C-13	25111-92L60	201A-2-1
	166A-3		201D-13		201B-2-1
	166B-3		201E-13		201D-2-1
	166C-3		201A-16		201E-2-1
	166D-3		201B-16		201A-2-2
19136-94451	166E-4	21121-92L00	201C-16	25111-92L70	201B-2-2
	166E-5		201D-16		201C-2-1
	166A-4		201E-16		201D-2-2
	166B-4		201A-22		201E-2-2
	166C-4		201B-22		201A-2-3
19522-94400	166D-4	21121-93300	201C-22	25211-92L00	201B-2-3
	166A-8		201D-22		201C-2-2
	166B-8		201E-22		201D-2-3
					201E-2-3
					201A-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
25212-94401	201B-3	29141-93J20	513B-8	31100-94401	301A-1
	201C-3		513C-8		301B-1
	201D-3		513D-8		301C-1
	201E-3		513E-8		301D-1
25223-94400	201A-4	29162-93J00	335A-22	31101-94402-0EP	561A-1
	201B-4		335B-22		561B-1
	201C-4		335C-23	31131-96300	301A-7
	201D-4		335D-23		301B-7
25232-96302	201E-4		335E-22		301C-7
	201A-19	29162-93J10	160A-5		301D-7
	201B-19		160B-5	31132-96300	301A-8
	201C-19		160C-5		301B-8
25311-94402	201D-19		160D-5		301C-8
	201E-19		160E-5		301D-8
	201A-25	29404-93J10	335A-17	31135-89J00	301A-9
	201B-25		335B-17		301B-9
25700-88L00	201C-25		335C-17		301C-9
	201D-25		335D-17	31173-89J00	301D-9
	201E-25		335E-17		301A-6
	201A-9		146A-9		301B-6
29125-93J00	201B-9	29404-93J20	146B-14	31281-93340	301C-6
	201C-9		146C-14		301D-6
	201D-9		146D-14		301A-10
	201E-9		146E-13		301B-10
29125-93J10	407A-27	29440-93J00	308A-3	31310-96300	301C-10
	554A-17		308B-3		301D-10
	554B-17		308C-3		301A-2
	335A-28		308D-3		301B-2
29141-93J00	335B-28	29440-93J00	308E-3	31312-96300	301C-2
	335C-29		309A-5		301D-2
	335D-29		309B-5		301A-4
	335E-28		319A-11		301B-4
29141-93J00	405A-18	29404-93J20	319B-11	31320-94400	301C-4
	405B-18		319E-1		301D-4
	405C-18		554A-6		301A-3
	405D-18		554B-6		301B-3
29141-93J00	405E-18	29404-93J20	570A-49	31360-96300	301C-3
	160A-4		570B-49		301D-3
	160B-4		570A-31		301A-5
	160C-4		570B-31		301B-5
29141-93J00	160D-4	29440-93J00	336A-27	31800-94401	301C-5
	160E-4		336B-27		301D-5
	201A-11		336C-30		308A-21
	201B-11		336D-30		308B-21
29141-93J00	201C-11	29440-93J00	336E-27		308C-21
	201D-11				308D-21
	201E-11			31911-92L00	130A-4
	454A-5				130B-4
29141-93J00	454B-5	30000			130C-4
	513A-8				130D-4

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
31912-92L00	301A-13	32801-94402	553A-8	33816-96300	412D-25
	301B-13		553B-8		319A-9
	301C-13		553C-8		319B-9
	301D-13		308A-13		570A-33
31918-94401	301A-14	32891-94401	308B-13	33833-91J00	570B-33
	301B-14		308C-13		308A-4
	301C-14		308D-13		308A-28
	301D-14		308A-19		308B-4
32101-92L10	303A-1-2		308B-19	32900-92L20	308B-28
	303B-1-2		308C-19		308C-4
	303E-1		308D-19		308D-4
	303A-1-1		308A-1		308E-4
32101-94430	303B-1-1	32900-92L30	308B-1	32916-92L10	308E-17
	303C-1		308C-1		309A-12
	303D-1		308D-1		309B-12
	303A-16-1		308E-1		309E-5
32102-92L00	303B-16-1	32919-92L00	308A-27	34100-93J21	570A-34
	303C-16		308B-27		570B-36
	303D-16		308C-27		501A-5-1
	561A-3		308D-27		501B-5-1
32102-92L30	561B-3	32950-92L00	308E-16	34100-93J32	501C-5-1
	303A-16-2		308A-24		501D-5-1
	303B-16-2		308B-24		501A-5-2
	303E-16		308C-24		501B-5-2
32120-94420	303A-2	33410-92L10	308D-24	34100-93J41	501C-5-2
	303B-2		308E-13		501D-5-2
	303C-2		308A-8		501A-5-3
	303D-2		308B-8		501B-5-3
32140-94400	303E-2	33410-92L10	308C-8	34100-93J52	501C-5-3
	303A-5		308D-8		501D-5-3
	303B-5		308E-8		501A-5-4
	303C-5		308A-25		501B-5-4
32150-94410	303D-5	33510-95520	308B-25	34190-95500	501C-5-4
	303E-5		308C-25		501D-5-4
	303A-6		308D-25		501A-12
	303B-6		308E-14		501B-12
32500-95722	303C-6	33800-94433	308A-6	34191-92E00	501C-12
	303D-6		308B-6		501D-12
	303E-6		308C-6		501A-10
	550A-3		308D-6		501B-10
32800-95D01	550B-3	33810-94411	550B-6	34200-93J21	501C-10
	554A-3		561A-2		501D-10
	554B-3		561B-2		501A-7
	319A-1		319A-6		501B-7
32800-95D01	319B-1	33811-94400	319B-6	34200-93J21	501C-7
	319C-1		319C-6		501D-7
	319D-1		319D-6		501A-13-1
	553A-9		412A-25		501B-13-1
32800-95D01	553B-9	33811-94400	412B-25	34200-93J21	501C-13-1
	553C-9		412C-25		501D-13-1

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
34200-93J33	501A-13-2 501B-13-2 501C-13-2 501D-13-2	36615-96300	501A-9 501B-9 501C-9 501D-9	36894-95201	335A-27 335B-27 335C-28 335D-28
34300-93J01	501A-15-1 501B-15-1 501C-15-1 501D-15-1	36620-87D20	550A-1-1 550B-1-1 554A-1-1 554B-1-1		335E-27 405A-2 405B-2 405C-2
34300-93J12	501A-15-2 501B-15-2 501C-15-2 501D-15-2	36620-92E00	550A-6 550B-6 554A-7 554B-7		405D-2 405E-2 319A-19 319B-19
34310-92E00	501A-16 501B-16 501C-16 501D-16	36620-92E20	450A-2 450B-2 550A-1-2 550B-1-2	36895-94400	319C-17 319D-17 319E-4 319A-13
34360-92E00	501A-17 501B-17 501C-17 501D-17	36620-95302	554A-1-2 554B-1-2 450A-3 450B-3	36899-92L00	319B-13 319E-3 550A-7 550B-7
34500-93J01	501A-3-1 501B-3-1 501C-3-1 501D-3-1	36630-92E00	550A-8 550B-8 554A-14 554B-14	36990-87D00	553A-16 553B-16 553C-16 554A-8
34500-93J12	501A-3-2 501B-3-2 501C-3-2 501D-3-2	36631-94300	550A-2 550B-2 554A-2 554B-2		554B-8 309A-1 309B-1 570A-39
34600-93J01	501A-1-1 501B-1-1 501C-1-1 501D-1-1	36634-93910	553A-4 553B-4 553C-4 319A-4	37110-94471	570B-39 450A-4 450B-4 553A-12
34600-93J12	501A-1-2 501B-1-2 501C-1-2 501D-1-2	36740-93901	319B-4 319C-4 319D-4 554A-15	37132-93700	553B-12 553C-12 309A-2-3 309B-2-3
34850-94610	554A-15 554B-15 554A-16 554B-16	36740-95253	561A-4 561B-4 553A-10 553B-10		450A-5-1 450B-5-1 570A-40-1 570B-40-1
34860-94402	570A-35 570B-35 570A-36 570B-36	36791-94504	553C-10 319C-10 319D-10 570A-38	37141-99E10	309A-2-4 309B-2-4 450A-5-2 450B-5-2
36360-94400	570A-36 570B-36 570A-37 570B-37	36893-94410	570B-38 405A-17 405B-17 405C-17		570A-40-2 570B-40-2 309A-2-5 309B-2-5
36367-95D10-064	309C-1 309D-1 309C-2 309D-2	36894-94401	405D-17 405E-17	37141-99E20	450A-5-3 450B-5-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37141-99E30	570A-40-3 570B-40-3 309A-2-6 309B-2-6	37141-99E80	309A-2-2 309B-2-2 450A-5-12 450B-5-12	37826-92J00	450A-10 450B-10 570A-45 570B-45
	450A-5-4 450B-5-4 570A-40-4 570B-40-4	37143-99E00	570A-40-12 570B-40-12 309A-3 309B-3	37826-97J00	309A-9 309B-9 309E-3 309A-7
37141-99E40	309A-2-7 309B-2-7 450A-5-5 450B-5-5		450A-6 450B-6 570A-41 570B-41	37830-92L02	309B-7 309E-1 508A-3 309A-13
	570A-40-5 570B-40-5 309A-2-8 309B-2-8	37149-93J00	309A-4 309B-4 450A-7 450B-7	37830-95D03	309B-13 309E-6 450A-49 450B-49
37141-99E50	450A-5-6 450B-5-6 570A-40-6 570B-40-6		570A-42 570B-42 550A-9 550B-9	37835-95D00	508A-3 309A-13 309B-13 309E-6
37141-99E60	309A-2-9 309B-2-9 450A-5-7 450B-5-7	37210-93J00	554A-18 554B-18 554A-9 550B-10	37864-94J10	450A-50 450B-50 508A-29 450A-12
	570A-40-7 570B-40-7 309A-2-10 309B-2-10	37212-93J00	554A-19 554B-19 319A-15 319B-15	38500-92X50	450B-12 554A-9 554B-9 309C-4
37141-99E70	450A-5-8 450B-5-8 570A-40-8 570B-40-8	37721-94404	554A-19 554B-19 319C-13 319D-13	38600-94400	309D-4 554A-11 554B-11 553A-1
	309A-2-11 309B-2-11 450A-5-9 450B-5-9	37725-94302	319A-16 319B-16 319C-14 319D-14	39600-93910	553B-1 553C-1 553A-3 553B-3
37141-99E80	309B-2-12 450A-5-10 450B-5-10 570A-40-10	37726-94402	319A-17 319B-17 319C-15 319D-15	39601-95D00	553C-3 553B-3 553C-3 553A-5
	570B-40-10 309A-2-1 309B-2-1 450A-5-11	37820-92E04	570A-43 570B-43 450A-9 450B-9	39602-93900	553B-5 553C-5 553A-6 553B-6
37141-99E90	570A-40-11 570B-40-11 309A-2-1 309B-2-1	37823-92E01	508A-4 570A-44 570B-44 309A-8	39603-94400	553C-6 412A-28-1 412A-28-2 412B-28-1
	450B-5-11 570A-40-11 570B-40-11	37823-97J00	412B-28-2 412C-28 412D-28 412E-25	39669-94400	412B-28-2 412C-28 412D-28 412E-25

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
40000		335D-6		336B-11	
		335E-6		336C-11	
		335A-26		336D-11	
		335B-26		336E-11	
		335C-27		336A-12	
41111-92L10-0EP	335A-1	335D-27	45241-92L00	336B-12	
	335B-1	335E-26		336C-12	
	335C-1	336A-10		336D-12	
	335D-1	336B-10		336E-12	
	335E-1	336C-10	45250-92L00	336A-13	
41121-92L10-0EP	335A-2	336D-10		336B-13	
	335B-2	336E-10		336C-13	
	335C-2	335A-13		336D-13	
	335D-2	335B-13		336E-13	
	335E-2	335C-13	45255-93001	336A-14	
41130-92L00	335A-9	335D-13		336B-14	
	335B-9	335E-13		336C-14	
	335C-9	336A-2		336D-14	
	335D-9	336B-2		336E-14	
	335E-9	336C-2	45255-95500	336A-33	
41141-94301	335A-29	336D-2		336B-28	
	335B-29	336E-2		336B-41	
	335C-30	336A-3		336C-36	
	335D-30	336B-3		336D-31	
	335E-29	336C-3		336D-44	
41151-94500	335A-7	336D-3		336E-33	
	335B-7	336E-3	45261-92L00	336A-15	
	335C-7	336A-23		336B-15	
	335D-7	336B-23		336C-15	
	335E-7	336C-26		336D-15	
41161-94400	335C-20	336D-26		336E-15	
	335D-20	336E-23	45331-94610	336A-37	
41200-92L00	335A-19	336A-24		336B-45	
	335B-19	336B-24		336C-40	
	335C-19	336C-27		336D-48	
	335D-19	336D-27		336E-37	
	335E-19	336E-24	45420-92L00	335A-11	
41211-94302	335A-5	336A-4		335B-11	
	335B-5	336B-4		335C-11	
	335C-5	336C-4		335D-11	
	335D-5	336D-4		335E-11	
	335E-5	336E-4	45700-92L00	336A-28	
41212-91L00-0EP	335A-3	336A-5		336B-36	
	335B-3	336B-5		336C-31	
	335C-3	336C-5		336D-39	
	335D-3	336D-5		336E-28	
	335E-3	336E-5	45713-92L00	336A-29	
41213-94J01	335A-6	336C-23		336B-29	
	335B-6	336D-23		336B-37	
	335C-6	336A-11		336C-32	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	336D-32		405B-8		220B-1-1
	336D-40		405C-8		220D-1-1
	336E-29		405D-8		220E-1-1
			405E-8	57110-92L70	220A-1-2
		54160-92L00	405A-12-2		220B-1-2
			405B-12-2		220C-1-1
			405C-12-2		220D-1-2
			405D-12-2		220E-1-2
			405E-12-2	57130-94301	220A-2
		54160-94410	405A-12-1		220B-2
52110-92L30-0EP	405A-6-1		405B-12-1		220C-2
	405B-6-1		405C-12-1		220D-2
	405D-6-1		405D-12-1		220E-2
	405E-6-1		405E-12-1	57133-88L01	220A-6
52110-92L40-0EP	405A-6-3	54165-94400	405A-13		220B-6
	405B-6-3		405B-13		220C-6
	405C-6-2		405C-13		220D-6
	405D-6-3		405D-13		220E-6
	405E-6-3		405E-13	57133-92L00	220A-7
52110-92L50-0EP	405A-6-2	54211-92L00-0EP	405A-9		220B-7
	405B-6-2		405B-9		220C-7
	405C-6-1		405C-9		220D-7
	405D-6-2		405D-9		220E-7
	405E-6-2		405E-9	57311-94402	220A-8
54121-94401	141A-7	54221-92L10-0EP	405A-10		220B-8
	141B-7		405B-10		220C-8
	141C-7		405C-10		220D-8
	141D-7		405D-10		220E-8
	141E-7		405E-10	57510-94402	220A-11
54125-94400	141A-8	55100-92L20-0EP	407A-1		220B-11
	141B-8	55122-88L00	407A-8		220C-11
	141C-8	55125-92L00	407A-9		220D-11
	141D-8	55181-95200	407A-25		220E-11
	141E-8	55300-95500	407A-24	57521-94401	220A-21
54130-92L00	141A-12	56120-92L10-0EP	220A-24		220B-21
	141B-12		220B-24		220C-21
	141C-12		220C-24		220D-21
	141D-12		220D-24		220E-21
	141E-12		220E-24	57610-92L10	220A-19
54137-92L10	141A-9	56130-92L20-0EP	160A-12		220B-19
	141B-9		160B-12		220C-19
	141C-9		160C-12		220D-19
	141D-9		160D-12		220E-19
	141E-9		160E-12	57621-92L10	220A-15
54146-94400	141A-10	57110-92L50	220A-1-3		220B-15
	141B-10		220B-1-3		220C-15
	141C-10		220D-1-2		220D-15
	141D-10		220D-1-3		220E-15
	141E-10		220E-1-3	57630-92L00	407A-17
54151-99E00	405A-8	57110-92L60	220A-1-1	57631-95303	220A-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	220B-13	61138-944L0	412A-23		412D-16
	220C-13		412B-23		412E-16
	220D-13		412C-23	61622-95500	420A-3
	220E-13		412D-23		420B-3
57632-92L00	407A-16		412E-23		420C-3
57633-94300	407A-18	61155-94400	412A-22		420D-3
57634-88L00	220A-14		412B-22		420E-3
	220B-14		412C-22	61642-90L00	412A-17
	220C-14		412D-22		412B-17
	220D-14		412E-22		412C-17
	220E-14	61400-92L01-0EP	420A-1		412D-17
58100-88L13-019	407A-22-1		420B-1		412E-17
58100-88L23-019	407A-22-2		420C-1	63001-97E08-0EP	570A-1
58100-88L52-019	407A-22-5		420D-1		570B-1
58100-88L62-019	407A-22-6		420E-1	63111-92L00-0EP	444A-2
58100-88LA0-019	407A-22-3	61431-92L00-0EP	420A-2		444B-2
58100-88LB0-019	407A-22-4		420B-2		444C-2
58120-88L01	407A-23		420C-2	63111-97E05-0EP	570A-2
59412-91J00	146E-26		420D-2		570B-2
59800-90L01	420A-11		420E-2	63115-97E00	444A-3
	420B-11	61435-92L00	420A-5		444B-3
	420C-11		420B-5		444C-3
	420D-11		420C-5		570A-3
	420E-11		420D-5		570B-3
			420E-5	63116-97E00	444A-4
		61443-91L00	420A-9		444B-4
			420B-9		444C-4
			420C-9		570A-4
			420D-9		570B-4
			420E-9	63117-97E01	444A-5
			420E-12		444B-5
61111-92L10-0EP	412A-1	61449-93921	420A-10		444C-5
	412B-1	61453-91L00	420B-10		570A-5
	412C-1		420C-10		570B-5
	412D-1		420D-10	63125-97E01	444A-6
	412E-1		420E-10		444B-6
61112-94412	412A-2		420A-7		444C-6
	412B-2	61458-89L00	420B-7		570A-6
	412C-2		420C-7		570B-6
	412D-2		420D-7	63126-97E01	444A-7
	412E-2		420E-7		444B-7
61113-92L00	412A-3		167A-20		444C-7
	412B-3	61472-94J00	412A-15		570A-7
	412C-3	61610-90L00	412B-15		570B-7
	412D-3		412C-15	63128-97E00	444A-8
	412E-3		412D-15		444B-8
61131-92L00-RB4	412A-4		412E-15		444C-8
	412B-4	61616-93EL0	412A-16		570A-9
	412C-4		412B-16		570B-9
	412D-4		412C-16	63131-92L10-0EP	444A-9
	412E-4				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	444B-9	63625-94300	412C-29	65740-99100	432F-7
	444C-9		412D-29	65750-955L0	432A-9
63131-97E03-0EP	570A-10	63625-96300	444A-21		432B-9
	570B-10		444B-21		432C-9
63210-93E30	444A-10		444C-21		432D-9
	444B-10		570A-21		432E-9
	444C-10	63627-94400	570B-21		432F-9
	570A-11		444A-22	65750-98505	432F-14
	570B-11		444B-22		432A-10
63215-93401	444A-32		444C-22		432B-10
	444B-32		570A-22		432C-10
63215-93450	444C-32		570B-22		432D-10
63220-91L00	444A-11	65000-95D01	432A-1		432E-10
	444B-11		432B-1		432E-14
	444C-11		432C-1		432F-10
63220-96302	570A-12		432D-1	65770-87DL0	432A-11
	570B-12		432E-1		432B-11
63223-89E00	444C-12	65000-99100	432F-1		432C-11
63223-92D00	444A-12	65318-93910	432E-20		432D-11
	444B-12	65520-95D01	432A-2	65770-90J11	432F-15
	570A-13		432B-2	65770-99J01	432F-11
	570B-13		432C-2	65779-93900	432E-11
63225-93200	444A-13		432D-2		432E-15
	444B-13		432E-2	65781-98500	432A-12
	444C-13	65520-99100	432F-2		432B-12
	570A-14	65561-95D00	432A-3		432C-12
63225-94J00	570B-14		432B-3		432D-12
	444A-18		432C-3		432E-12
	444B-18		432D-3		432E-16
	444C-18		432E-3		432F-12
63227-93200	570A-15		432F-3		432F-16
	570B-15	65700-87DL0	432A-8	65830-95500	432E-17
63240-94J10	444A-15		432B-8		432F-17
	444B-15		432C-8	65831-95D00	432A-5
	444C-15		432D-8		432B-5
63240-97E20	570A-16	65700-94416	432F-13		432C-5
	570B-16	65700-94424	432E-13		432D-5
63241-92D00	570A-19	65700-95D04	432F-8		432E-5
	570B-19	65700-96362	432E-8		432F-4
63241-986B0	444A-16	65720-955L0	146E-14	65842-94401	432E-18
	444B-16	65720-985L1	146E-5		432F-18
	444C-16		432A-13	65890-95D00	432A-6
63244-94J00	444A-17		432B-13		432B-6
	444B-17		432C-13		432C-6
	444C-17		432D-13		432D-6
63610-92L00	444A-20	65740-95D01	432A-4		432E-6
	444B-20		432B-4	65890-99100	432F-5
	444C-20		432C-4	65892-95D00	432A-7
	570A-20		432D-4		432B-7
	570B-20		432E-4		432C-7

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67130-94812	432D-7	67252-95600	508A-15	67296-90J00	513B-15
	432E-7		450A-25		513C-10
	432F-6		450B-25		513D-10
	513A-1		508A-16		513E-15
67140-95600	513B-1	67255-99E10	450A-26	67296-94300	450A-40
	513C-1		450B-26		450B-40
	513D-1		508A-17		508A-32
	513E-1		450A-27		450A-41
	513A-14		450B-27		450B-41
	513B-14		508A-18		508A-33
67200-91J20	513C-9	67256-95600	450A-28	67296-94310	450A-33
	513D-9		450B-28		450B-33
	513E-14		508A-19		508A-24
	508A-1		450A-29		450A-42
67200-97E50	450A-1	67257-99E10	450B-29	67296-95600	450B-42
	450B-1		508A-20		508A-34
67212-95600	450A-13	67258-99E00	450A-30	67296-95610	450A-43
	450B-13		450B-30		450B-43
	508A-5		508A-21		508A-35
67214-92E00	450A-14	67259-87D00	450A-31	67296-95621	513A-16
	450B-14		450B-31		513B-16
67220-95620	450A-15	67261-99E10	508A-22	67297-95600	513C-11
	450B-15		450A-32		513D-11
67220-95630	508A-6		450B-32		513E-16
	450A-16		508A-23		450A-44
67223-99E10	450B-16	67264-95600	450A-34	67320-93J00	450B-44
	508A-7		450B-34		508A-36
	450A-17	67267-93J00	508A-25		513A-17-1
	450B-17		450A-35		513B-17-1
67232-95600	508A-8	67273-95600	450B-35	67320-93J10	513C-12-1
	450A-18		508A-26		513D-12-1
	450B-18		450A-36		513E-17-1
67238-87D00	508A-9		450B-36		513A-17-2
	450A-19	67275-95600	508A-27	67320-93J20	513B-17-2
	450B-19		450A-37		513C-12-2
67241-99E10	508A-10	67282-94L00	450B-37	67320-93J30	513D-12-2
	450A-20		508A-28		513E-17-2
	450B-20		450A-51		513A-17-3
	508A-11		450B-51		513B-17-3
67243-95600	450A-21	67284-94L00	508A-43	67320-93J40	513C-12-3
	450B-21		450A-52		513D-12-3
67244-95600	508A-12	67292-94300	450B-52	67320-93J00	513E-17-3
	450A-22		508A-44		513A-17-4
	450B-22		450A-38		513B-17-4
	508A-13		450B-38		513C-12-4
67245-95600	450A-23	67294-95600	508A-30	67320-93J00	513D-12-4
	450B-23		450A-39		513E-17-4
67251-99E20	508A-14		450B-39		513A-17-5
	450A-24		508A-31		513B-17-5
	450B-24		513A-15		513C-12-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67320-93J50	513D-12-5	67701-94430	442A-1	77811-54GB0-0PG	450A-11
	513E-17-5		442B-1		450B-11
	513A-17-6		513A-9		508A-37
	513B-17-6		513B-9		
67320-93J60	513C-12-6	67721-94310	513E-9	90000	
	513D-12-6		442A-2		
	513E-17-6		442B-2		
	513A-17-7		513A-10		
	513B-17-7		513B-10		
	513C-12-7		513E-10		
67320-93J70	513D-12-7	67725-99E10	442A-3	99000-81159-50M	167A-19
	513E-17-7		442B-3		420A-13
	513A-17-8		513A-11		420B-13
	513B-17-8		513B-11		420C-13
67320-93J80	513C-12-8	67726-99E00	513E-11	99011-92L90-063	420D-13
	513D-12-8		442A-4		420E-14
	513E-17-8		442B-4		
	513A-17-9		513A-12		
67331-94400	513B-17-9	67728-99E00	513B-12	00000	
	513C-12-9		513E-12		
	513D-12-9		442A-5		
	513E-17-9		442B-5		
67341-94400	454A-1	68110-87L00	513A-13	01411-0820A	125A-5
	454B-1		513B-13		125B-5
	513A-2		513E-13		125C-5
	513B-2		420A-12		125D-5
67466-95200	513C-2	68111-91L00	420B-12	01547-06407	125E-5
	513D-2		420C-12		128E-3
	513E-2		420D-12		146A-15
	454A-6		420E-13		146B-15
67466-95200	454B-6	69711-93E10	420A-8	01550-05167	146C-15
	513A-3		420B-8		146D-15
	513B-3		420C-8		201A-17
	513C-3		420D-8		201B-17
67467-94404	513D-3	69712-93E10	420E-8	01550-06127	201C-17
	513E-3		167A-17		201D-17
	454A-2		167A-18		201E-17
	454B-2		420A-14		166A-14
67467-94404	513A-5	69911-91J50	420B-14	70000	166A-16
	513B-5		420C-14		166B-14
	513C-5		420D-14		166C-14
	513D-5		420E-15		166C-16
67467-94404	513E-5	70000		70000	166D-14
	454A-3				166D-16
	454B-3				166E-14
	513A-6				201A-8
67467-94404	513B-6	70000		70000	
	513C-6				
	513D-6				
	513E-6				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	201B-8		125E-11		303B-14
	201C-8		146E-22		303C-14
	201D-8	01550-06407	112A-13		303D-14
	201E-8		112B-13		303E-14
	308A-2		112C-13	02112-04087	303A-12
	308A-9		112D-13		303B-12
	308A-18		112E-13		303C-12
	308B-2	01550-08257	130A-5		303D-12
	308B-9		130B-5		303E-12
	308B-18		130C-5	02112-05087	554A-10
	308C-2		130D-5		554B-10
	308C-9	01550-08357	112A-8	02112-05107	303A-7
	308C-18		112B-8		303A-10
	308D-2		112C-8		303B-7
	308D-9		112D-8		303B-10
	308D-18		112E-8		303C-7
	308E-2		167A-15		303C-10
	308E-9	01550-10557	112A-11		303D-7
	309A-10		112B-11		303D-10
	309B-10		112C-11		303E-7
01550-06167	309E-4		112D-11		303E-10
	319A-14		112E-11		554A-12
	319B-14	01560-06457	112A-14		554B-12
	319C-9		112B-14	02112-05167	128A-14
	319D-9		112C-14		128B-14
01550-06207	308A-26		112D-14		128C-14
	308B-26		112E-14		128D-14
	308C-26	01560-08757	112A-5	02112-06257	303A-3
	308D-26		112B-5		303B-3
	308E-15		112C-5		303C-3
01550-06257	167A-16		112D-5		303D-3
01550-06307	112A-6		112E-5		303E-3
	112A-21	01560-10657	112A-12	02112-0630B	501C-11
	112B-6		112B-12		501D-11
	112B-21		112C-12	02112-3306A	125A-9
	112C-6		112D-12		125B-9
	112C-21		112E-12		125C-9
	112D-6	01580-06167	319A-18		125D-9
	112D-21		319B-18		125E-9
	112E-6		319C-16	02112-35127	309C-5
	112E-21		319D-16		309D-5
	125A-1	01580-08257	130A-6	02122-06167	125A-10
	125A-11		130B-6		125B-10
	125B-1		130C-6		125C-10
	125B-11		130D-6		125D-10
	125C-1		301A-15		125E-10
	125C-11		301B-15	02142-05257	319A-2
	125D-1		301C-15		319B-2
	125D-11		301D-15		319C-2
	125E-1	02112-04067	303A-14		319D-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	553A-13		112E-10		146E-23
	553B-13	08211-20263	220A-12	08321-01047	303A-13
	553C-13		220B-12		303A-15
02142-05307	166A-15		220C-12		303B-13
	166B-15		220D-12		303B-15
	166C-15		220E-12		303C-13
	166D-15	08211-35451	220A-22-6		303C-15
02142-06127	309A-6		220B-22-6		303D-13
	309B-6		220C-22-6		303D-15
	319A-12		220D-22-6		303E-13
	319B-12		220E-22-6		303E-15
	319E-2	08221-35455	220A-22-1	08321-0105A	128A-15
	570A-50		220B-22-1		128B-15
	570B-50		220C-22-1		128C-15
02142-06167	319A-8		220D-22-1		128D-15
	319A-20		220E-22-1		303A-9
	319B-8	08221-35456	220A-22-4		303A-11
	319B-20		220B-22-4		303B-9
	319C-8		220C-22-4		303B-11
	319D-8		220D-22-4		303C-9
	319E-5		220E-22-4		303C-11
02162-06127	550A-4	08310-00057	319A-3		303D-9
	550B-4		319B-3		303D-11
	554A-4		319C-3		303E-9
	554B-4		319D-3		303E-11
03112-0630B	553A-14		553A-14		553A-15
	501B-11		553B-14		553B-15
03142-04309	407A-5		553C-14		553C-15
03212-0512B	308A-20	08310-00067	301A-11		554A-13
	308B-20		301B-11		554B-13
	308C-20		301C-11	08321-01067	301A-12
	308D-20		301D-11		301B-12
03222-0520B	125A-22		308A-22		301C-12
	125B-22		308B-22		301D-12
	125C-22		308C-22		303A-4
	125D-22		308D-22		303B-4
	125E-22		412A-21		303C-4
03241-0625A	319A-10		412B-21		303D-4
	319B-10		412C-21		303E-4
	570A-51		412D-21		308A-23
	570B-51		412E-21		308B-23
03542-06169	420A-4	08316-10087	125A-2		308C-23
	420B-4		125B-2		308D-23
	420C-4		125C-2		550A-5
	420D-4		125D-2		550B-5
	420E-4		125E-2		554A-5
04211-09109	112A-10		146A-16		554B-5
	112B-10		146B-16	08322-01057	303A-8
	112C-10		146C-16		303B-8
	112D-10		146D-16		303C-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
08322-01067	303D-8	09108-06060	308B-14	09116-06228	412D-13
	303E-8		308C-14		412D-20
	319C-11		308D-14		412E-13
	319D-11		160A-6		412E-20
08331-3115A	201A-18	09108-06061	160B-6	09116-06232	141A-19
	201B-18		160C-6		141B-19
	201C-18		160D-6		141C-19
	201D-18		160E-6		141D-19
08341-31059	201E-18	09108-10137	160A-7	09116-06234	141E-19
	303A-18		160B-7		412A-5
	303B-18		160C-7		412B-5
	303C-18		160D-7		412C-5
09100-08232	303D-18	09111-10045	160E-7	09116-06237	412D-5
	303E-18		444A-1		412E-5
	450A-45		444B-1		141A-6
	450B-45		444C-1		141B-6
09100-08309	508A-38	09111-10067	570A-8	09116-08147	141C-6
	336A-25		570B-8		141D-6
	336B-25		336A-30		141E-6
	336C-28		336B-38	09116-08151	513A-4
09100-08311	336D-28	09111-10069	336C-33		513B-4
	336E-25		336D-41		513C-4
	335A-14		336E-30		513D-4
	335B-14		335A-20		513E-4
09100-10155	335C-14	09116-06223	335B-20	09116-08152	407A-10
	335D-14		335C-21		220A-28
	335E-14		335D-21		220B-28
	570A-23		335E-20		220C-28
09100-10316	570B-23	09116-06225	336B-30	09116-08153	220D-28
	336C-24		336D-33		220E-28
	336D-24		335A-21		335A-8
	444A-23		335B-21	09116-08155	335B-8
09100-10317	444B-23	09116-06227	335C-22		335C-8
	444C-23		335D-22		335D-8
	141A-13		335E-21		335E-8
	141B-13	09103-06048	412A-14	09126-05003	405A-11
09100-12123	141C-13		412B-14		405B-11
	141D-13		412C-14		405C-11
	141E-13		412D-14		405D-11
09100-12123	405A-19	09116-06225	412E-14	09126-06005	405E-11
	405B-19		336B-31		141A-21
	405C-19		336D-34		141B-21
	405D-19	09103-06049	454A-7	09126-06015	141C-21
09103-06048	405E-19		454B-7		141D-21
	166A-11		412A-13		141E-21
	166B-11	09117-06030	412A-20	09126-06022	407A-13
09103-06049	166C-11		412B-13		336A-31
	166D-11		412B-20		336B-39
	166E-11		412C-13		336C-34
	308A-14		412C-20		336D-42

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09118-08168	336E-31	09136-05041	130B-3	09148-06017	444B-19
	405A-5		130C-3		444C-19
	405B-5		130D-3		412A-9
	405C-5		130E-3		412B-9
09118-08171	405D-5	09138-05011	444A-24	09159-05042	412C-9
	405E-5		444B-24		412D-9
	405A-4		444C-24		412E-9
	405B-4		303A-17		412A-7
09118-08172	405C-4	09140-04007	303B-17	09159-10050	412B-7
	405D-4		303C-17		412C-7
	405E-4		303D-17		412D-7
	405A-3		303E-17		412E-7
09119-06047	405B-3	09140-05005	128A-23	09159-12014	141A-16
	405C-3		128B-23		141B-16
	405D-3		128C-23		141C-16
	405E-3		128D-23		141D-16
09125-05046	454A-4	09140-06020	128E-36	09159-22006	141E-16
	454B-4		444A-12		444A-26
	513A-7		166B-12		444B-26
	513B-7		166C-12		444C-26
09125-05129	513C-7	09140-08023-XC0	166D-12	09160-05029	570A-26
	513D-7		166E-12		570B-26
	513E-7		570A-17		405A-15
	407A-7		570B-17		405B-15
09125-06089	570A-24	09140-10032	450A-47	09140-12034	405C-15
	570B-24		450B-47		405D-15
	412A-6		508A-40		405E-15
	412B-6	09140-12038	335A-15	09160-06066	335A-18
09125-06089	412C-6		335B-15		335B-18
	412D-6		335C-15		335C-18
	412E-6		335D-15		335D-18
09126-05003	125A-21	09140-18014	335E-15	09141-16008	335E-18
	125B-21		146E-24		336A-34
	125C-21		432A-14		336B-32
	125D-21		432B-14		336B-42
09126-06005	125E-21	09140-18014	432C-14	09141-16008	336C-37
	450A-46		432D-14		336D-35
	450B-46		220A-9		336D-45
	508A-39		220B-9		336E-34
09126-06015	112A-20	09140-18014	220C-9	09141-16008	412A-8
	112B-20		220D-9		412B-8
	112C-20		220E-9		412C-8
	112D-20		146E-15		412D-8
09126-06022	112E-20	09148-06008	303A-20	09148-06008	412E-8
	444A-25		303B-20		570A-18
	444B-25		303C-20		570B-18
	444C-25		303D-20		125A-19
09126-06022	570A-25	09141-16008	303E-20	09148-06008	125B-19
	570B-25		407A-20		125C-19
	130A-3		444A-19		125D-19

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09160-06084	125E-19		335B-24		220E-20-1
	166A-13		335C-25	09160-22019	220A-20-2
	166B-13		335D-25		220B-20-2
	166C-13		335E-24		220C-20-2
	166D-13		444A-27		220D-20-2
	166E-13		444B-27		220E-20-2
	308A-10		444C-27	09160-22020	220A-20-3
	308A-15		570A-27		220B-20-3
	308B-10		570B-27		220C-20-3
	308B-15	09160-10148	141A-14		220D-20-3
	308C-10		141B-14		220E-20-3
	308C-15		141C-14	09160-22021	220A-20-4
	308D-10		141D-14		220B-20-4
	308D-15		141E-14		220C-20-4
	308E-10		308A-11		220D-20-4
	412A-10	09160-12007	308A-16		220E-20-4
09160-06104	412B-10		308B-11	09160-22022	220A-20-5
	412C-10		308B-16		220B-20-5
	412D-10		308C-11		220C-20-5
	412E-10		308C-16		220D-20-5
	450A-48		308D-11		220E-20-5
	450B-48		308D-16	09160-22023	220A-20-6
	508A-41		308E-11		220B-20-6
	335A-16	09160-12066	405A-16		220C-20-6
	335B-16		405B-16		220D-20-6
	335C-16		405C-16		220E-20-6
	335D-16		405D-16	09160-22033	335A-10
	335E-16		405E-16		335B-10
	336A-16	09160-12067	570A-46		335C-10
	336A-26		570B-46		335D-10
	336B-16		405A-20		335E-10
	336B-26	09160-12108	405B-20	09160-25069	309A-11
	336C-16		405C-20		309B-11
	336C-29		405D-20		570A-47
	336D-16		405E-20		570B-47
	336D-29		405A-14	09160-27008	116A-10
	336E-16	09160-13018	405B-14		116B-10
	336E-26		405C-14		116C-10
	167A-14		405D-14		116D-10
	141A-20		405E-14		116E-10
09160-08124	141B-20	09160-16054	407A-19	09160-39001	336A-6
	141C-20		303A-19		336B-6
	141D-20		303B-19		336C-6
	141E-20		303C-19		336D-6
	141A-15		303D-19		336E-6
09160-10080	141B-15		303E-19	09161-04012	412A-18
	141C-15	09160-22018	220A-20-1		412B-18
	141D-15		220B-20-1		412C-18
	141E-15		220C-20-1		412D-18
	335A-24		220D-20-1		412E-18

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09162-10005	335A-23		220C-10-3		220C-4-9
	335B-23		220D-10-3		220D-4-9
	335C-24		220E-10-3		220E-4-9
	335D-24	09181-30190	220A-10-4	09181-33009	220A-4-10
	335E-23		220B-10-4		220B-4-10
	336C-25		220C-10-4		220C-4-10
	336D-25		220D-10-4		220D-4-10
	444A-28		220E-10-4		220E-4-10
	444B-28	09181-30192	220A-10-5	09181-35101	220A-4-1
	444C-28		220B-10-5		220B-4-1
	570A-28		220C-10-5		220C-4-1
	570B-28		220D-10-5		220D-4-1
	444A-29		220E-10-5		220E-4-1
09163-06001	444B-29	09181-33001	220A-4-2	09181-35110	220A-4-11
	444C-29		220B-4-2		220B-4-11
	570A-29		220C-4-2		220C-4-11
	570B-29		220D-4-2		220D-4-11
	10AA-4		220E-4-2		220E-4-11
09168-10022	10AB-4	09181-33002	220A-4-3	09181-35131	220A-22-2
	10AC-4		220B-4-3		220B-22-2
	10AD-4		220C-4-3		220C-22-2
	407A-12		220D-4-3		220D-22-2
	116A-6		220E-4-3		220E-22-2
09169-20007	116B-6	09181-33003	220A-4-4	09181-35132	220A-22-3
	116C-6		220B-4-4		220B-22-3
	116D-6		220C-4-4		220C-22-3
	116E-6		220D-4-4		220D-22-3
	125A-20		220E-4-4		220E-22-3
09180-06254	125B-20	09181-33004	220A-4-5	09181-35136	220A-22-5
	125C-20		220B-4-5		220B-22-5
	125D-20		220C-4-5		220C-22-5
	125E-20		220D-4-5		220D-22-5
	412A-11		220E-4-5		220E-22-5
09180-06295	412B-11	09181-33005	220A-4-6	09181-39001	336A-7
	412C-11		220B-4-6		336B-7
	412D-11		220C-4-6		336C-7
	412E-11		220D-4-6		336D-7
	167A-12		220E-4-6		336E-7
09180-08169	220A-10-1	09181-33006	220A-4-7	09200-05015	336A-17
	220B-10-1		220B-4-7		336B-17
	220C-10-1		220C-4-7		336C-17
	220D-10-1		220D-4-7		336D-17
	220E-10-1		220E-4-7		336E-17
09181-30187	220A-10-2	09181-33007	220A-4-8	09200-08043	336A-18
	220B-10-2		220B-4-8		336B-18
	220C-10-2		220C-4-8		336C-18
	220D-10-2		220D-4-8		336D-18
	220E-10-2		220E-4-8		336E-18
09181-30188	220A-10-3	09181-33008	220A-4-9	09202-05022	220A-16
	220B-10-3		220B-4-9		220B-16

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09202-06025	220C-16	09205-03021	220D-3	09262-35L09	220B-25
	220D-16		220E-3		220C-25
	220E-16		201A-5		220D-25
	407A-15		201B-5		220E-25
	407A-14		201C-5		116A-17
09202-06027	405A-1	09205-03038	201D-5	09263-20072	116B-17
09202-06031	405B-1		201E-5		116C-17
	405C-1		444A-14		116D-17
	405D-1		444B-14		116E-17
	405E-1		444C-14		116A-5
09202-07001	141A-11	09205-06011	112A-15	09263-22020	116B-5
	141B-11		112B-15		116C-5
	141C-11		112C-15		116D-5
	141D-11		112D-15		116E-5
	141E-11		112E-15		220A-26
09204-01002	336A-19	09205-06021	335A-4	09263-22039	220B-26
	336A-35		335B-4		220C-26
	336B-19		335C-4		220D-26
	336B-33		335D-4		220E-26
	336B-43		335E-4		407A-2
	336C-19	09205-08002	336A-36	09263-27008	116E-9
	336C-38		336B-34		116A-9
	336D-19		336B-44		116B-9
	336D-36		336C-39		116C-9
	336D-46		336D-37		116D-9
	336E-19	09248-10008	336D-47	09264-35L01	116A-18
	336E-35		336E-36		116B-18
	444A-31		407A-11		116C-18
	444B-31		319C-12		116D-18
	444C-31		319D-12		116E-18
09204-03003	570A-30	09250-12006	412A-27	09265-20015	160A-14
	570B-30		412B-27		160B-14
	10AA-5		412C-27		160C-14
	10AB-5		412D-27		160D-14
	10AC-5		412C-30		160E-14
09205-02004	10AD-5	09250-16008	412D-30	09250-33001	220A-5
	407A-21		412A-29		220B-5
	201A-23		412B-29		220C-5
	201B-23		412E-26		220D-5
	201C-23		201A-14		220E-5
09205-02013	201D-23	09260-10005	201B-14	09265-30004	407A-3
	201E-23		201C-14		201A-20
	201A-6		201D-14		201B-20
	201B-6		201E-14		201C-20
	201C-6		116A-16		201D-20
09205-03019	201D-6	09262-30068	116B-16	09280-11001	201E-20
	201E-6		116C-16		201A-24
	220A-3		116D-16		201B-24
	220B-3		116E-16		201C-24
	220C-3		220A-25		201D-24

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09280-50008	201E-24	09306-22006	116E-19	09390-72008	412D-19
	141A-17		336A-20		412E-19
	141B-17		336B-20		116A-22
	141C-17		336C-20		116B-22
	141D-17		336D-20		116C-22
09280-63001	141E-17	09320-04009	336E-20	09390-80002	116D-22
	125A-15		128A-22		116E-22
	125B-15		128B-22		116A-23
	125C-15		128C-22		116B-23
	125D-15		128D-22		116C-23
09280-75001	125E-15	09320-10035	128E-37	09401-08413	116D-23
	220A-23		412A-12		116E-23
	220B-23		412B-12		146A-13
	220C-23		412C-12		146B-13
	220D-23		412D-12		146C-13
09282-17009	220E-23	09320-11004	412E-12	09401-10412	146D-13
	141A-18		570A-48		146E-19
	141B-18		570B-48		146E-9
	141C-18		308A-12		432E-19
	141D-18		308A-17		432F-19
09282-17L01	141E-18	09320-12059	308B-12	09403-10312	303A-21
	160A-13		308B-17		303B-21
	160B-13		308C-12		303C-21
	160C-13		308C-17		303D-21
	160D-13		308D-12		303E-21
09282-39001	160E-13	09352-50903-600	308D-17	09403-14204	319A-7
	336A-8		308E-12		319B-7
	336B-8		167A-13		319C-7
	336C-8		412A-24		319D-7
	336D-8		412B-24		553A-7
09283-30062	336E-8	09352-70113-600	412C-24	09407-10403	553B-7
	116A-20		412D-24		553C-7
	116B-20		412E-24		308A-5
	116C-20		146E-16		308B-5
	116D-20		146E-7		308C-5
09283-35L01	116E-20	09355-50108-135	146E-8	09407-12402	308D-5
	116A-21		146E-6		308E-5
	116B-21		336A-9		309C-3
	116C-21		336B-9		309D-3
	116D-21		336C-9		450A-53
09289-22L01	116E-21	09355-50108-370	336D-9	09407-14407	450B-53
	220A-27		336E-9		501A-8
	220B-27		116A-4		501B-8
	220C-27		116B-4		501C-8
	220D-27		116C-4		501D-8
09289-45L01	220E-27	09381-20003	116D-4	09407-25402	412A-26
	116A-19		116E-4		412B-26
	116B-19		412A-19		412C-26
	116C-19		412B-19		412D-26
	116D-19		412C-19		553A-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09420-04006	553B-2	09471-12028	336B-22	09492-75001	128C-2
	553C-2		336C-22		128D-2
	160A-8		336D-22		128E-15
	160B-8		336E-22		
09440-07078	160C-8	09471-12103	501A-6		
	160D-8		501A-14		
	160E-8		501B-6		
	201A-15		501B-14		
09440-08043	201B-15	09481-20001	501C-6		
	201C-15		501C-14		
	201D-15		501D-6		
	201E-15		501D-14		
09440-12027	220A-18	09482-00370	501A-2		
	220B-18		501A-4		
	220C-18		501A-18		
	220D-18		501B-2		
09440-40002	220E-18	09491-38007	501B-4		
	444A-30		501B-18		
	444B-30		501C-2		
	444C-30		501C-4		
09441-17002	570A-32	09492-65002	501C-18		
	570B-32		501D-2		
	220A-17		501D-4		
	220B-17		501D-18		
09443-12039	220C-17	09492-67004	319A-5		
	220D-17		319B-5		
	220E-17		319C-5		
	335A-12		319D-5		
09443-15031	335B-12	09491-38008	553A-11		
	335C-12		553B-11		
	335D-12		553C-11		
	335E-12		561A-5		
09448-29009	336A-32	09492-67004	561B-5		
	336B-35		10AA-6		
	336B-40		10AB-6		
	336C-35		10AC-6		
09448-29018	336D-38	09492-67004	10AD-6		
	336D-43		308A-7		
	336E-32		308B-7		
	336A-21		308C-7		
09448-29018	336B-21	09492-67004	308D-7		
	336C-21		308E-7		
	336D-21		128A-18		
	336E-21		128B-18		
09448-29018	335A-25	09492-67004	128C-18		
	335B-25		128D-18		
	335C-26		128E-11		
	335D-26		128E-2		
09448-29018	335E-25	09492-67004	128A-2		
	336A-22		128B-2		

[illegible]

SUZUKI **DT40W** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Technical Readiness Group, Quality Administration Department

300 Takatsuka, Minami, Hamamatsu, Japan

Reprint Prohibited

SUZUKI MOTOR CORPORATION