

SUZUKI

PARTS CATALOGUE

DT40W

DT40W

DT40WR

DT40WK



OUTBOARD MOTOR

P40/P90

2016-9

1ST EDITION

PREFACE

When it becomes necessary to replace parts on SUZUKI OUTBOARD MOTORS, always use SUZUKI GENUINE PARTS which have passed a strict inspection which guarantees quality and performance.

This parts catalogue covers the list of all service parts for SUZUKI DT40W production start 2016.

INSTRUCTIONS FOR QUOTING THE CATALOGUE

1. DIMENSIONS

Dimensions of the parts in this catalogue are indicated in unit millimeters.

2. ABBREVIATIONS

Abbreviations used in this catalogue are as follows:

AR	: As required	NT	: Number of teeth
ASSY	: Assembly	OPT	: Optional
E. NO.	: Engine number	OS	: Over size
F. NO.	: Frame number	STD	: Standard
D	: Diameter of material	T	: Thickness
ID	: Inside diameter	US	: Under size
OD	: Outside diameter	W	: Width
L	: Length	W/	: With
LH(PORT)	: Left hand side	S, L, L2	: Transom type
RH(STBD)	: Right hand side	SUS	: Stainless steel
~123456	: Up to E. NO. 04005-123456	PTT	: Power trim and tilt
123456~	: From E. NO. 04005-123456		
12 x 34 x 5.6.....	Figures in the description column		
	show the dimensions of parts.		
ID OD T(or W, L)			

→12345-56781 (Parts No.) : indicates that the parts number was changed to 12345-56781 and the new parts are interchangeable with the former ones but the former ones are not interchangeable with new ones.

←12345-56781 (Parts No.) : indicates that the former and new parts are interchangeable with each other and both are usable.

3. INNER PARTS OF ASSEMBLY

Part name with a dot (.) in front as shown in the description column indicates the component of the assembly also available individually.

4. MODIFICATION NOTICE

A parts bulletin will be sent to you on all occasions when changes in parts occur, including interchangeable modifications between new parts and old ones.

5. NOTE

5-1. There are some different parts from those of production models among spare parts for the administrative reasons and common use of them with other models.

5-2. In respect of rubber hoses and vinyl tubes, please be sure to use them by cutting off according to the length mentioned on parts catalogue or what is actually required on the vehicle.

5-3. Note that the drawings on the illustration page are for ready reference of spare parts number, not to be used as an assembly manual.
When assembling, use "SUZUKI SERVICE MANUAL".

6. SPECIFICATION CODE

This catalogue contains the parts for the model designed for the following spec.:

spec. code : DT40W : P40, P90
DT40WR : P40, P90
DT40WK : P40

7. MODEL NAME AND ENGINE NUMBER

MODEL	DESTINATION	TYPE	TRANSOM	ENGINE No.
DT40W	P40	04005	S, L, L2	04005-710001~
DT40W	P90	04005	S	04005-710001~
DT40WR	P40	04005	L, L2	04005-710001~
DT40WR	P90	04005	S	04005-710001~
DT40WK	P40	04005K	S, L, L2	04005K-710001~

MILLIMETER → INCH CONVERSION CHART

	0	1	2	3	4	5	6	7	8	9
00	.000	.039	.079	.118	.157	.197	.236	.276	.315	.354
10	.394	.433	.472	.512	.551	.591	.630	.669	.709	.748
20	.787	.827	.866	.906	.945	.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.535
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.214	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.031	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

How to read

	0	1	2	3	4
00	...	...	...	...	...
10	...	...	...	...	...
20	...	...	...	0.906	...
30	...	...	...	...	...

23 millimeters equal 0.906 inch

Contents are subject to change without notice or obligation.

FIG.10AA




DT40NE_P40,512_10AA
MAINTENANCE KIT

FIG.10AB




DT40NE_P40,512_10AB
MAINTENANCE KIT

FIG.10AC

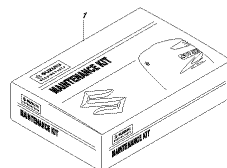


DT40NE_P40,512_10AC
MAINTENANCE KIT

FIG.10AD

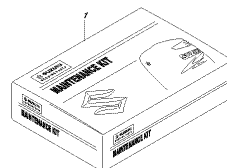


DT40NE_P40,512_10AD
MAINTENANCE KIT

FIG.112A

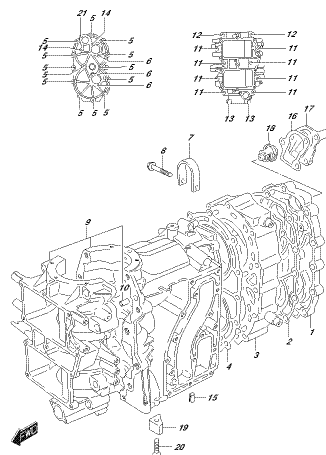


DT40NE_P40,512_112A
CYLINDER

FIG.112B

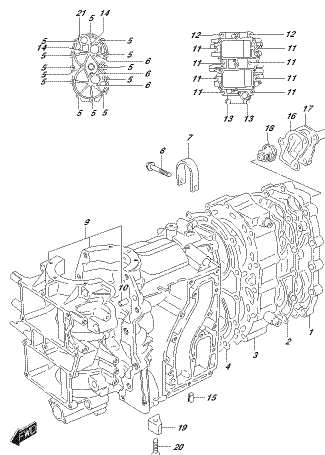


DT40NE_P40,512_112B
CYLINDER

FIG.112C

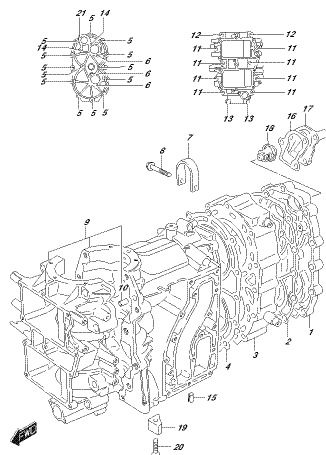


DT40NE_P40,512_112C
CYLINDER

FIG.112D

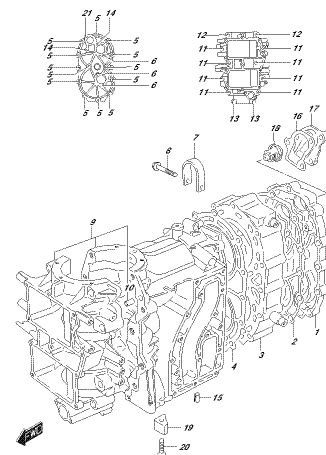


DT40NE_P40,512_112D
CYLINDER

FIG.112E

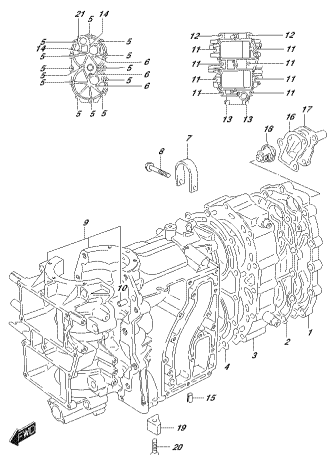


DT40NC_PAL_01Z_116E
C604VASH47

FIG.116A

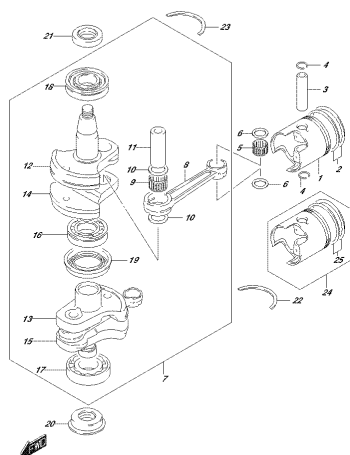


DT40NC_PAL_01Z_116A
C604VASH47

FIG.116B

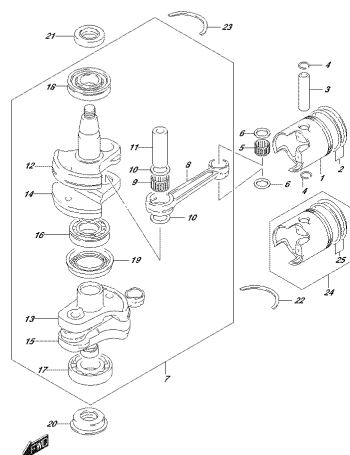


DT40NC_PAL_01Z_116B
C604VASH47

FIG.116C

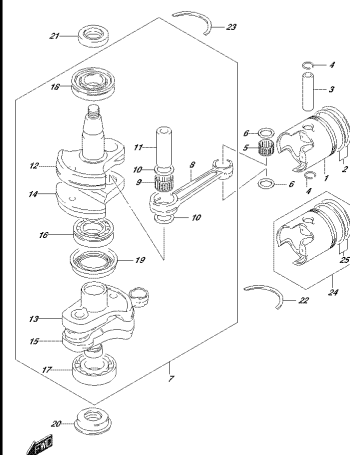


DT40NC_PAL_01Z_116C
C604VASH47

FIG.116D

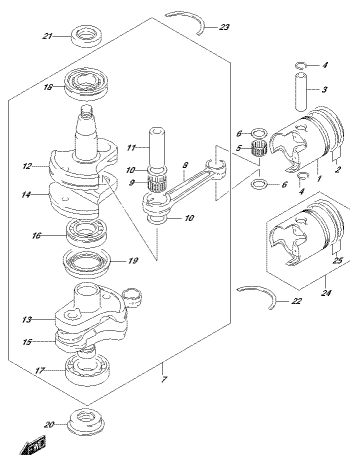


DT40NC_PAL_01Z_116D
C604VASH47

FIG.116E

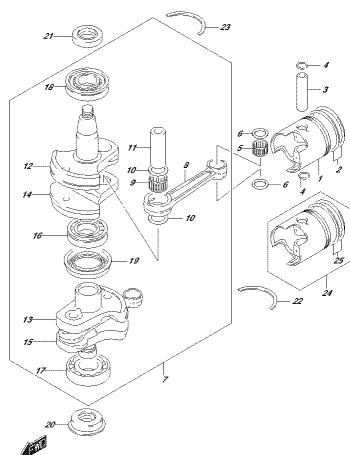


DT40NC_PAL_01Z_116E
C604VASH47

FIG.125A

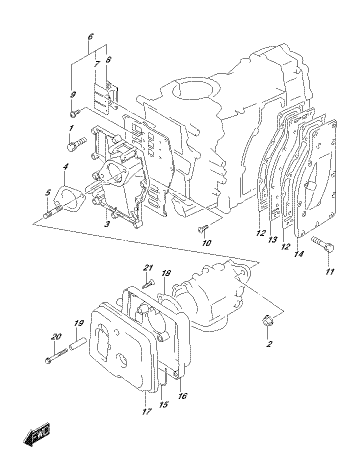


DT40NC_PAL_01Z_125A
PILET CASE

FIG.125B

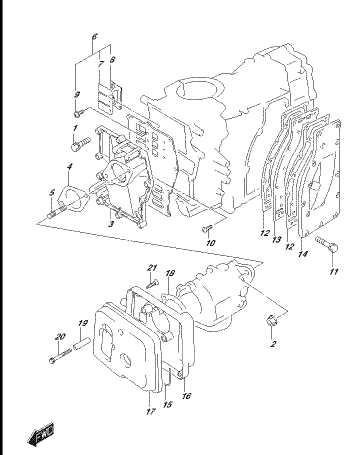


DT40NC_PAL_01Z_125B
PILET CASE

FIG. 125C

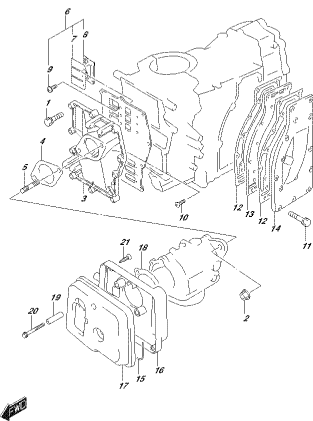


DT40MC_P40_017C_125C
PILEY OKSE

FIG. 125D

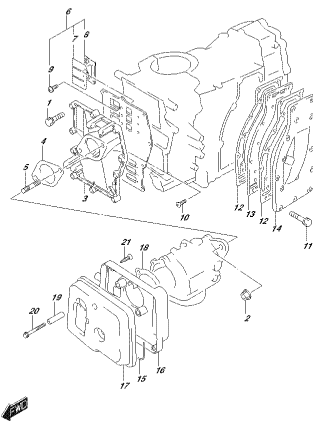


DT40MC_P40_017C_125D
PILEY OKSE

FIG. 125E

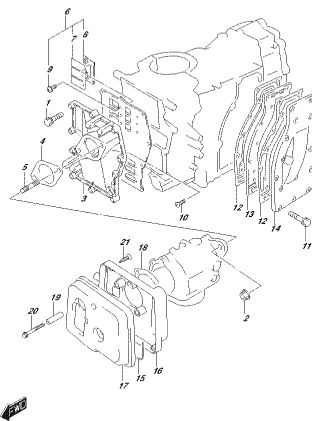


DT40MC_P40_017C_125E
PILEY OKSE

FIG. 128A

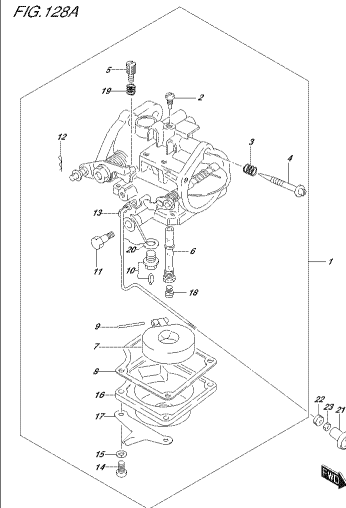


DT40MC_P40_017C_128A
CARBURETOR

FIG. 128B

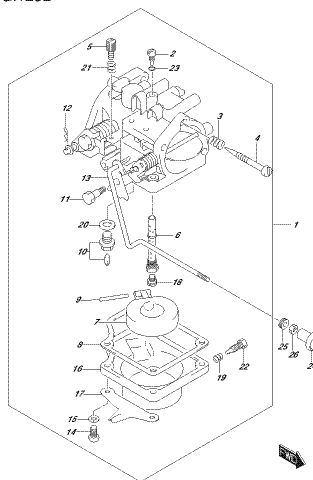


DT40MC_P40_017C_128B
CARBURETOR

FIG. 128C

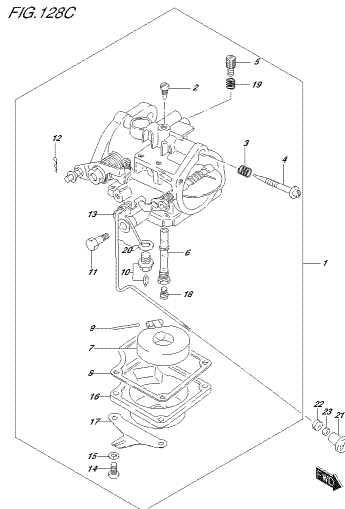


DT40MC_P40_017C_128C
CARBURETOR

FIG. 128D

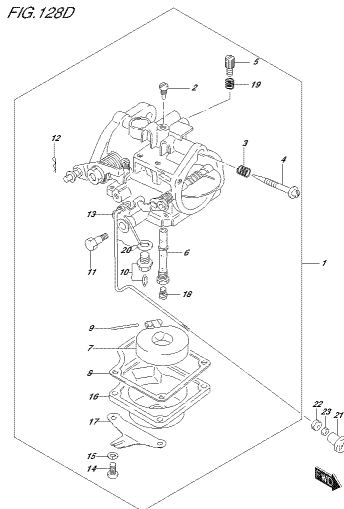


DT40MC_P40_017C_128D
CARBURETOR

FIG. 128E

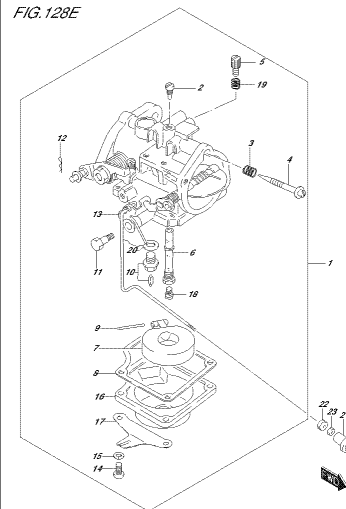


DT40MC_P40_017C_128E
CARBURETOR

FIG.128F

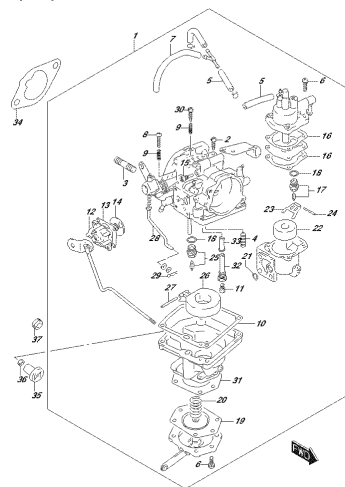


DT40MC_P40_017_128F
CNSG-RE-020

FIG.130A

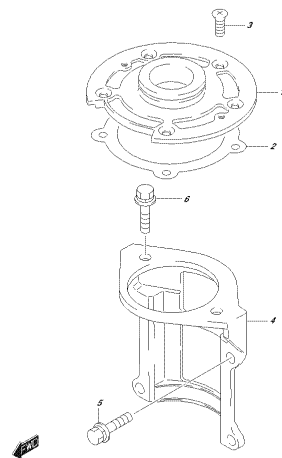


DT40MC_P40_017_130A
CNSG-RE-020

FIG.130B

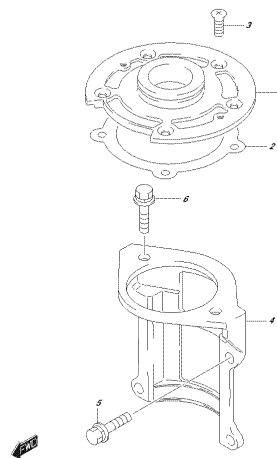


DT40MC_P40_017_130B
CNSG-RE-020

FIG.130C

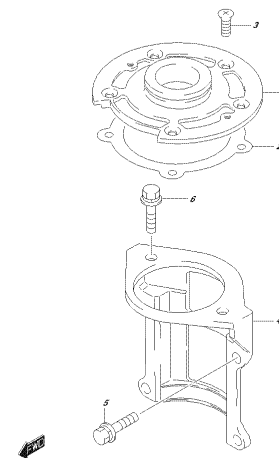


DT40MC_P40_017_130C
CNSG-RE-020

FIG.130D

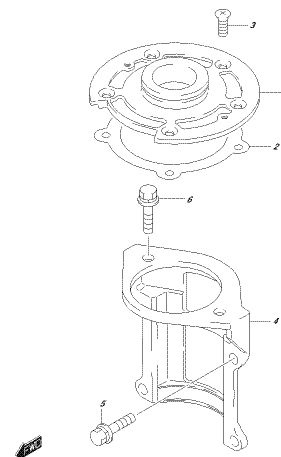


DT40MC_P40_017_130D
CNSG-RE-020

FIG.130E

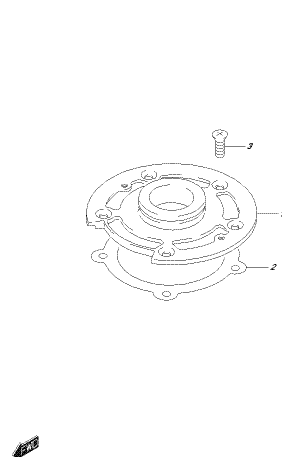


DT40MC_P40_017_130E
CNSG-RE-020

FIG.141A

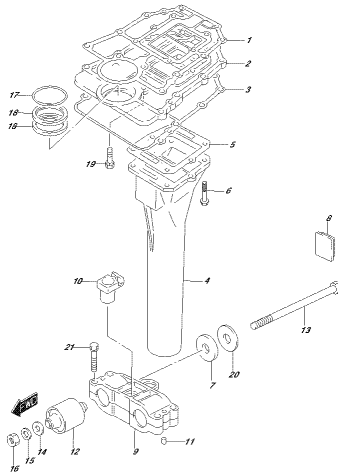


DT40MC_P40_017_141A
P-REK-017 FL08

FIG.141B

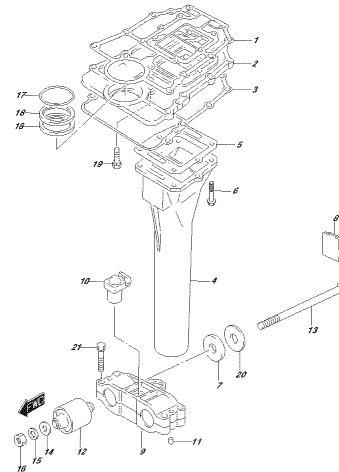


DT40MC_P40_017_141B
P-REK-017 FL08

FIG.141C

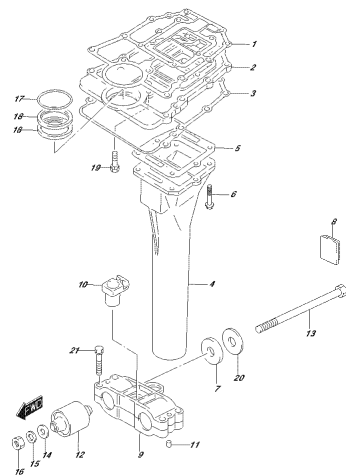


DT40NC_PRL01Z_H41C
FUEL PUMP

FIG.141D

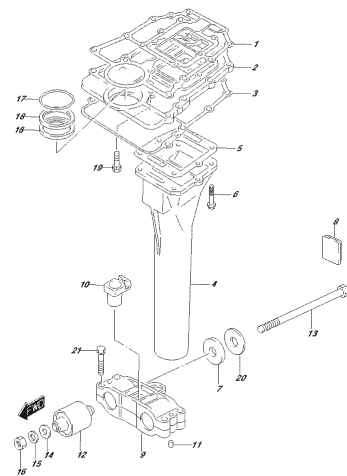


DT40NC_PRL01Z_H41D
FUEL PUMP

FIG.141E

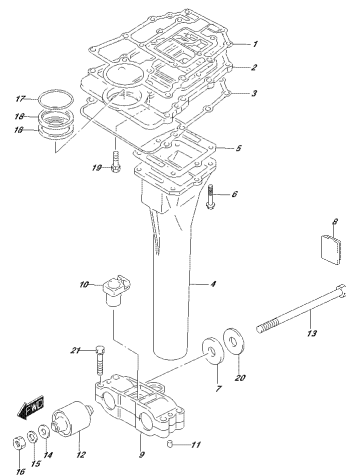


DT40NC_PRL01Z_H41E
FUEL PUMP

FIG.146A

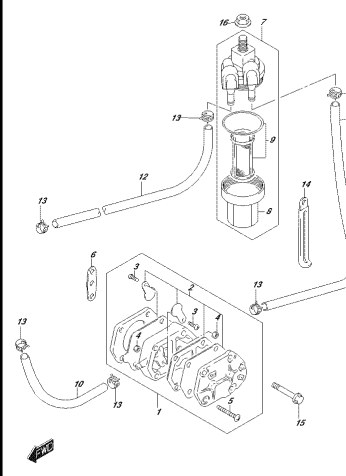


DT40NC_PRL01Z_H46A
FUEL PUMP

FIG.146B

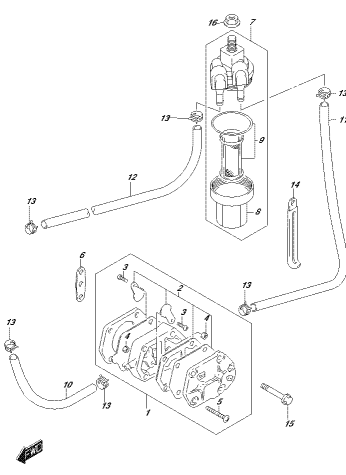


DT40NC_PRL01Z_H46B
FUEL PUMP

FIG.146C

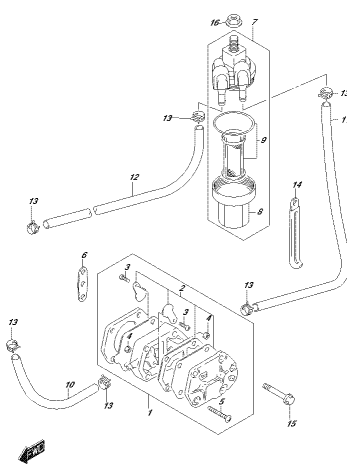


DT40NC_PRL01Z_H46C
FUEL PUMP

FIG.146D

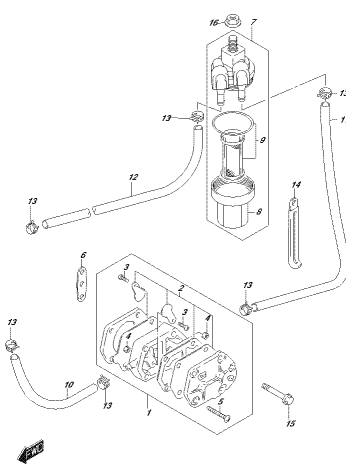


DT40NC_PRL01Z_H46D
FUEL PUMP

FIG.146E

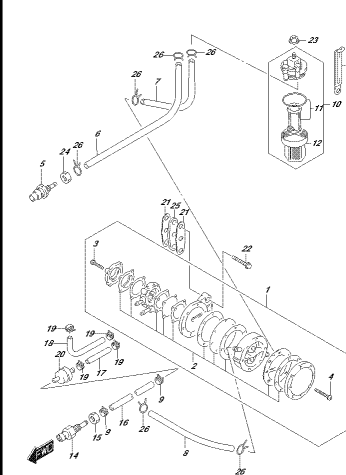


DT40NC_PRL01Z_H46E
FUEL PUMP

FIG.160A

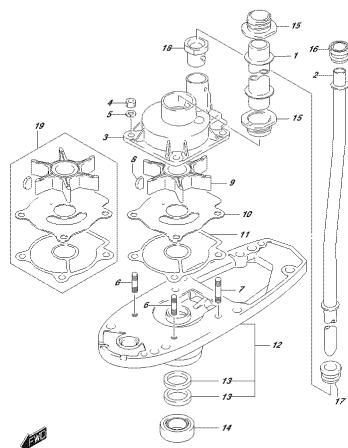


DT40MC_PAL_S17_160A
WATER PUMP

FIG.160B

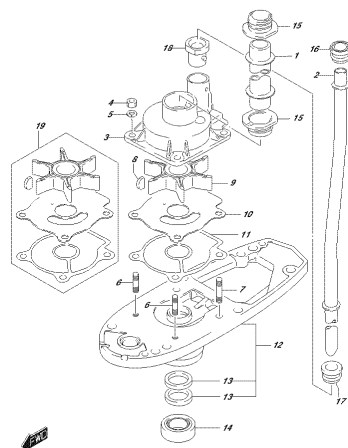


DT40MC_PAL_S17_160B
WATER PUMP

FIG.160C

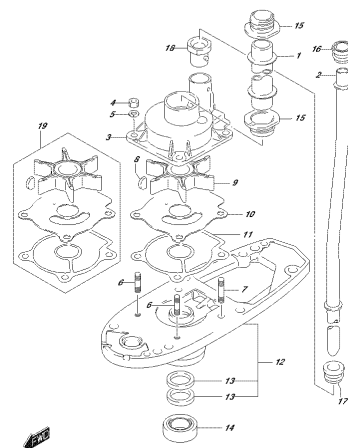


DT40MC_PAL_S17_160C
WATER PUMP

FIG.160D

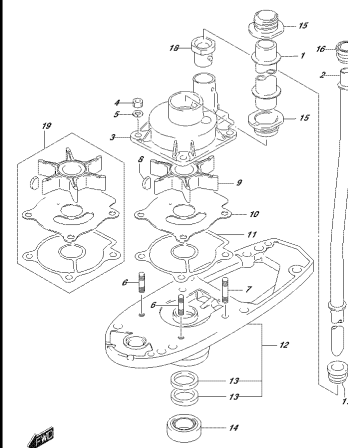


DT40MC_PAL_S17_160D
WATER PUMP

FIG.160E

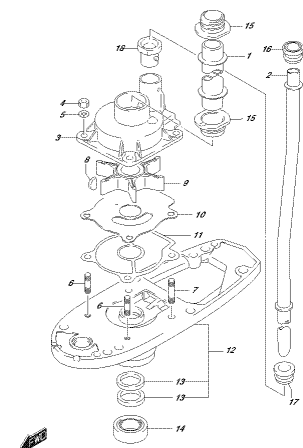


DT40MC_PAL_S17_160E
WATER PUMP

FIG.166A

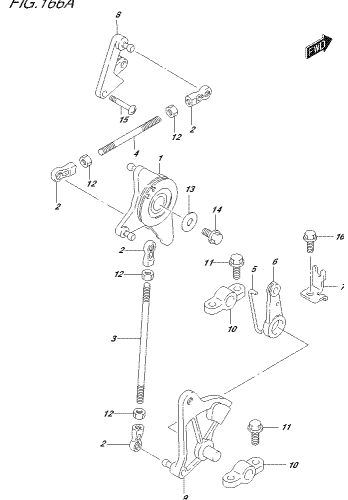


DT40MC_PAL_S17_166A
THROTTLE CONTROL

FIG.166B

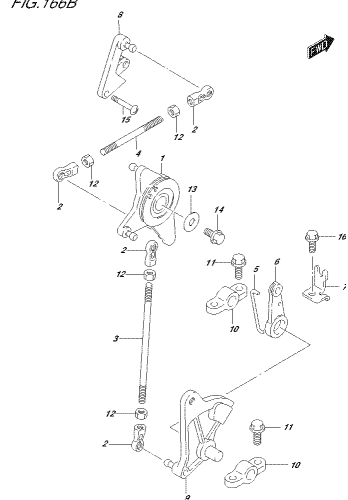


DT40MC_PAL_S17_166B
THROTTLE CONTROL

FIG.166C

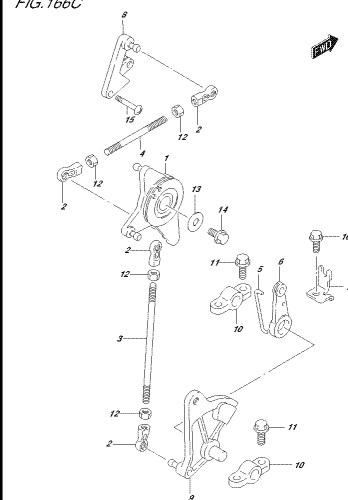


DT40MC_PAL_S17_166C
THROTTLE CONTROL

FIG.166D

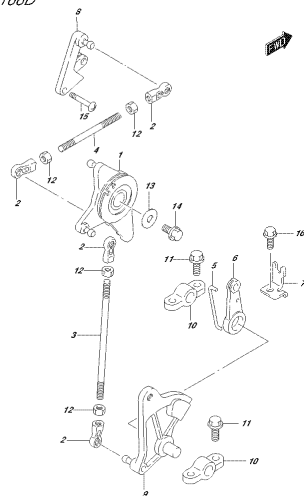


DT40N_PAL_S17_166D
FUSIBLE CONTROL

FIG.166E

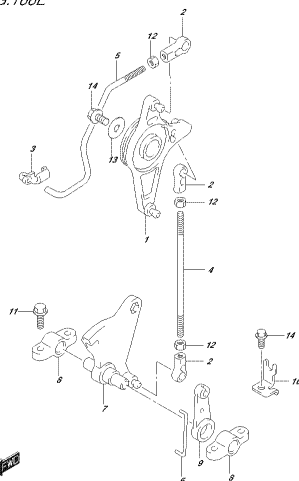


DT40N_PAL_S17_166E
FUSIBLE CONTROL

FIG.167A

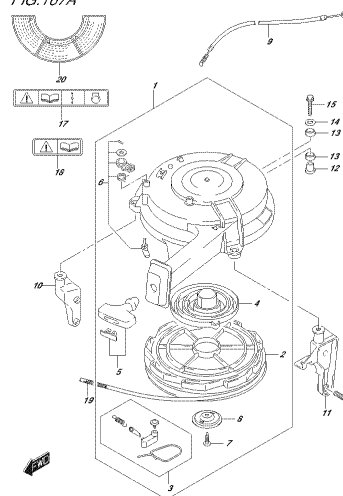


DT40N_PAL_S17_167A
BECKEL STARTER

FIG.201A

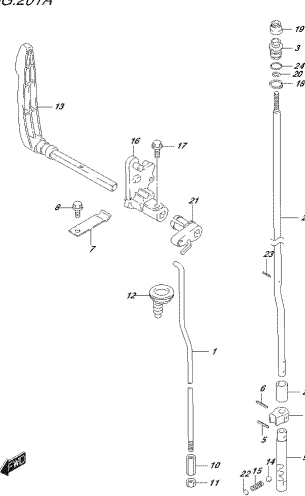


DT40N_PAL_S17_201A
CLUTCH

FIG.201B

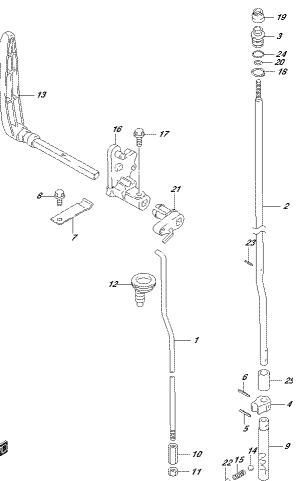


DT40N_PAL_S17_201B
CLUTCH

FIG.201C

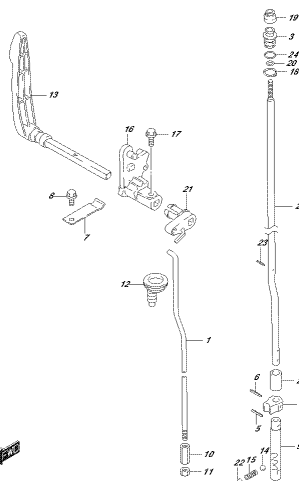


DT40N_PAL_S17_201C
CLUTCH

FIG.201D

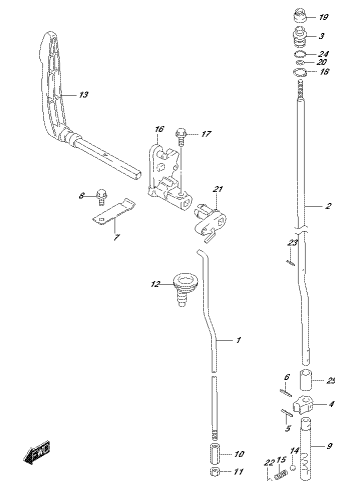


DT40N_PAL_S17_201D
CLUTCH

FIG.201E

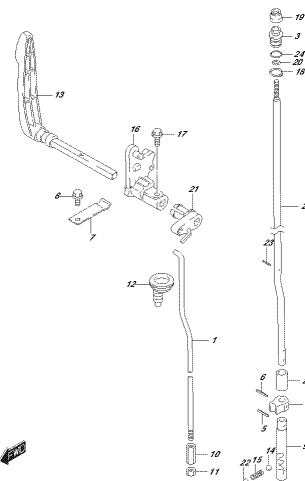


DT40N_PAL_S17_201E
CLUTCH

FIG.220A

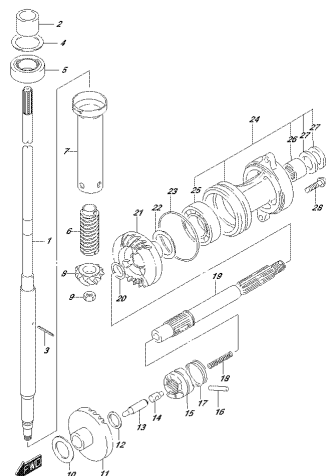


DT40MC_P&L_017_220A
TRANSMISSION

FIG.220B

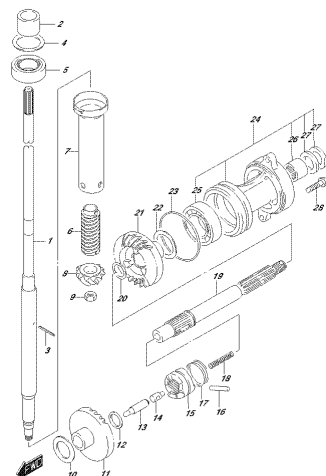


DT40MC_P&L_017_220B
TRANSMISSION

FIG.220C

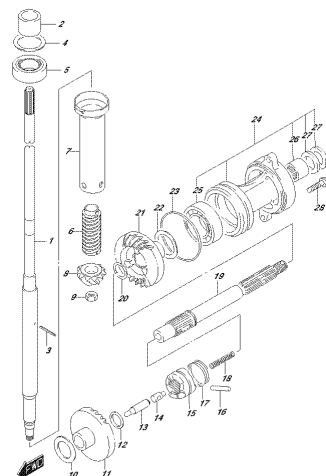


DT40MC_P&L_017_220C
TRANSMISSION

FIG.220D

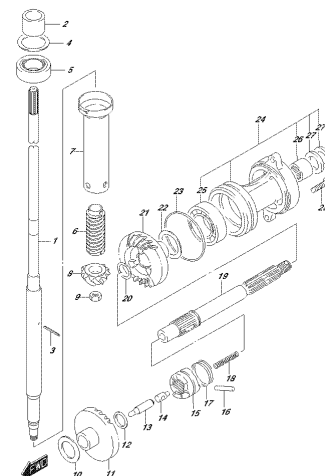


DT40MC_P&L_017_220D
TRANSMISSION

FIG.220E

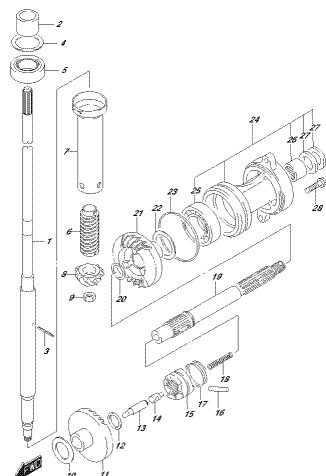


DT40MC_P&L_017_220E
TRANSMISSION

FIG.301A

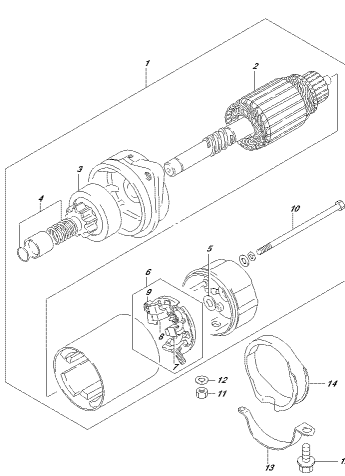


DT40MC_P&L_017_301A
STARTING MOTOR

FIG.301B

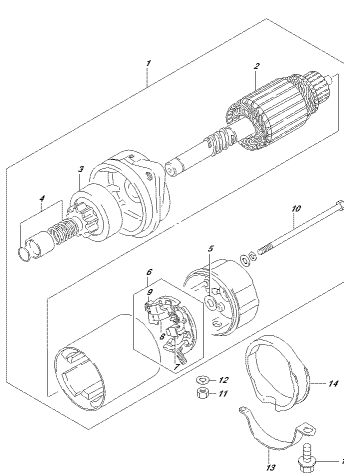


DT40MC_P&L_017_301B
STARTING MOTOR

FIG.301C

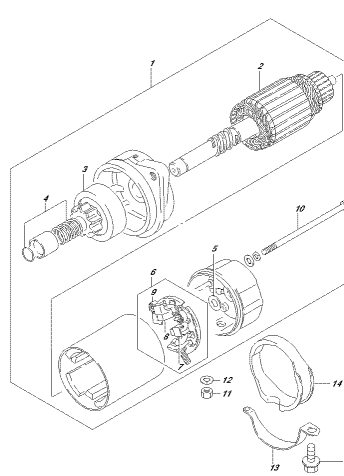


DT40MC_P&L_017_301C
STARTING MOTOR

FIG.301D

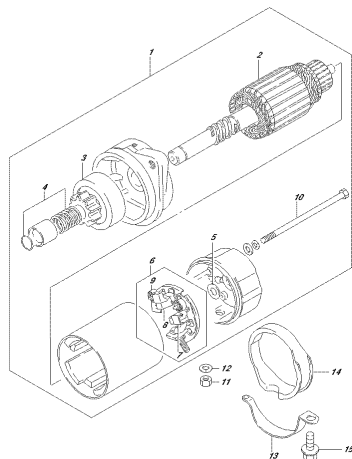


DT40NC_PAL_01Z_001D
STAGIONE1407030

FIG.303A

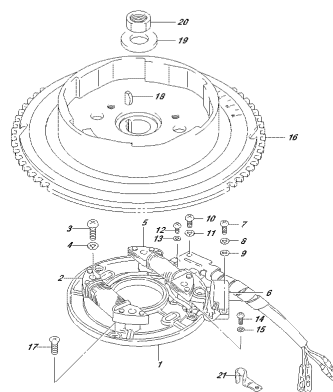


DT40NC_PAL_01Z_003A
MAGNETO

FIG.303B

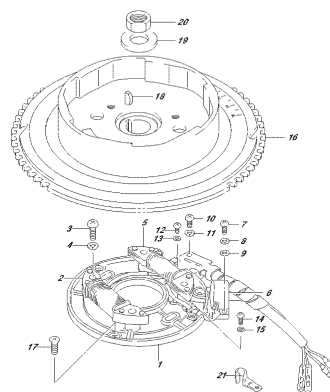


DT40NC_PAL_01Z_003B
MAGNETO

FIG.303C

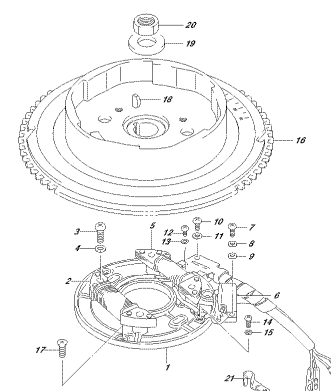


DT40NC_PAL_01Z_003C
MAGNETO

FIG.303D

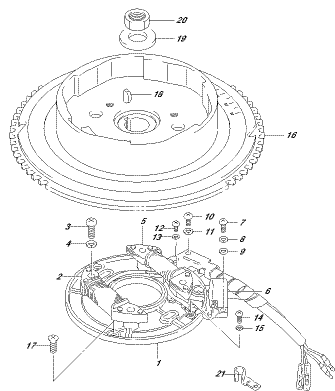


DT40NC_PAL_01Z_003D
MAGNETO

FIG.303E

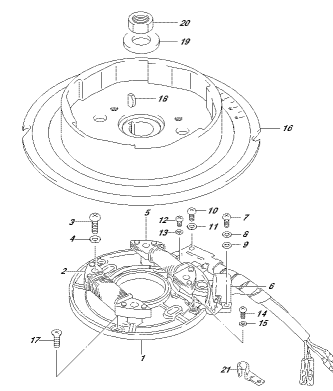


DT40NC_PAL_01Z_003E
MAGNETO

FIG.303A

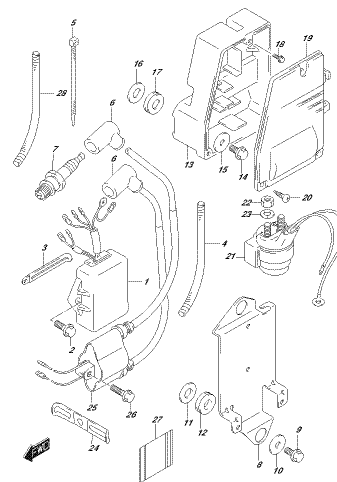


DT40NC_PAL_01Z_003A
10/10/2011

FIG.303B

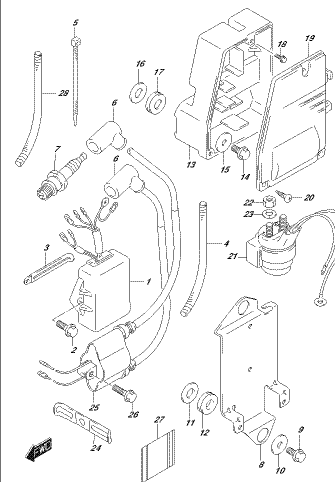


DT40NC_PAL_01Z_003B
10/10/2011

FIG.308C

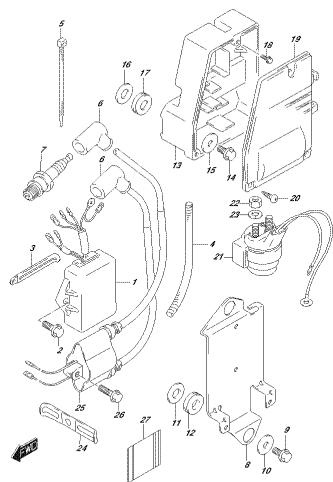


DT40NC_PAL_017_354C
IGNITION

FIG.308D

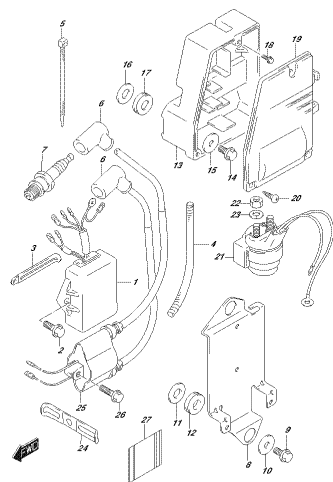


DT40NC_PAL_017_354D
IGNITION

FIG.308E

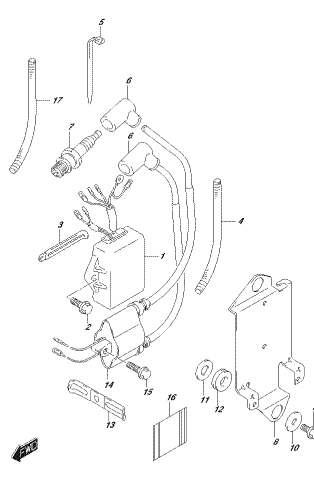


DT40NC_PAL_017_354E
IGNITION

FIG.309A

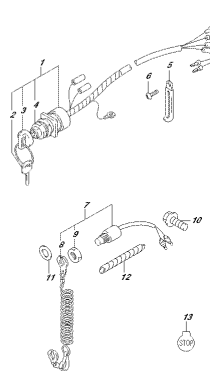


DT40NC_PAL_017_354A
IGNITION SWITCH

FIG.309B

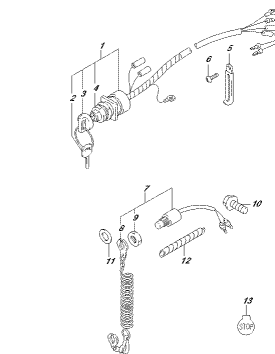


DT40NC_PAL_017_354B
IGNITION SWITCH

FIG.309C

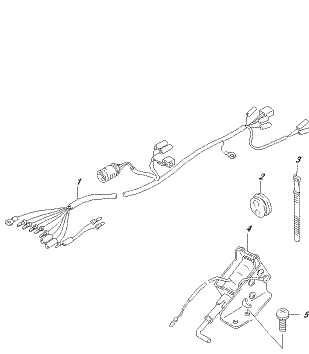


DT40NC_PAL_017_354C
IGNITION SWITCH

FIG.309D

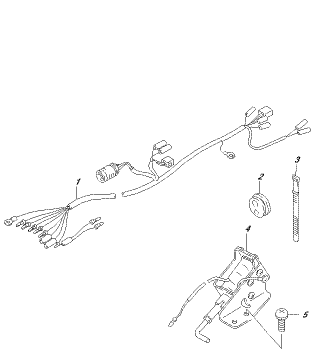


DT40NC_PAL_017_354D
IGNITION SWITCH

FIG.309E

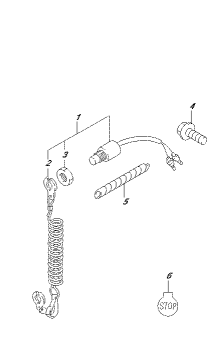


DT40NC_PAL_017_354E
IGNITION SWITCH

FIG.319A

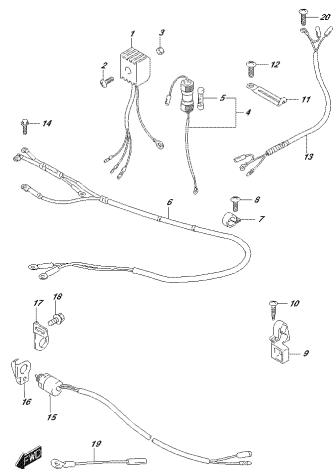


DT40NC_PAL_S17_319A
ELECTRICAL

FIG.319B

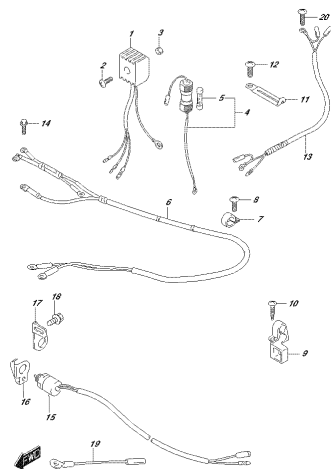


DT40NC_PAL_S17_319B
ELECTRICAL

FIG.319C

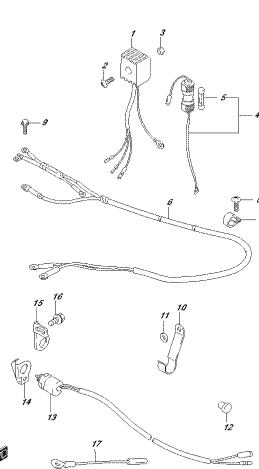


DT40NC_PAL_S17_319C
ELECTRICAL

FIG.319D

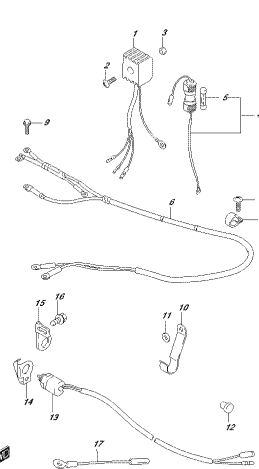


DT40NC_PAL_S17_319D
ELECTRICAL

FIG.319E

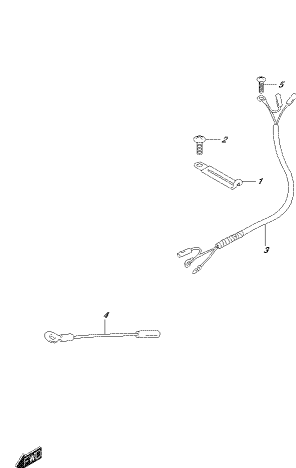


DT40NC_PAL_S17_319E
ELECTRICAL

FIG.335A

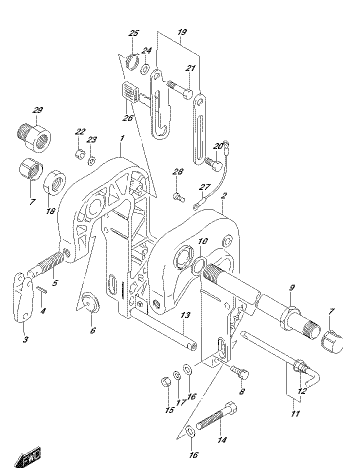


DT40NC_PAL_S17_335A
CLAMP BRACKET

FIG.335B

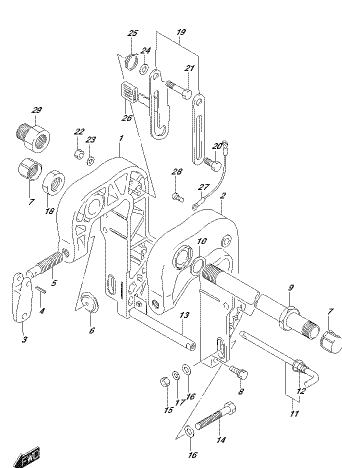

DT40NC_PAL_S17_335B
CLAMP BRACKET

FIG.335C

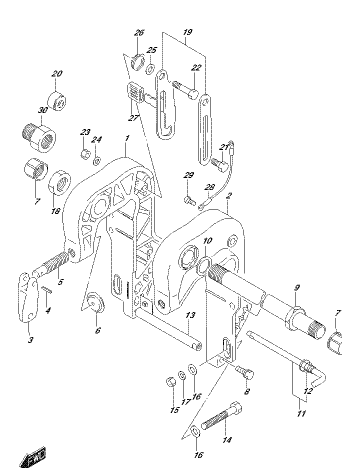

DT40NC_PAL_S17_335C
CLAMP BRACKET

FIG.335D

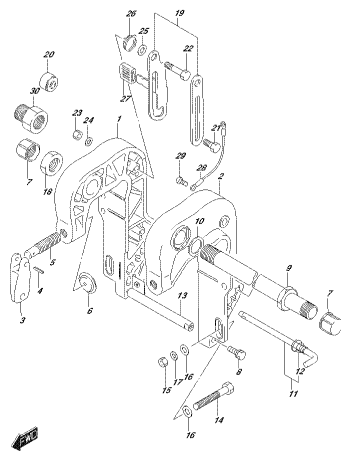
DT40MC_PAL_017_035D
CLAMP BRACKET

FIG.335E

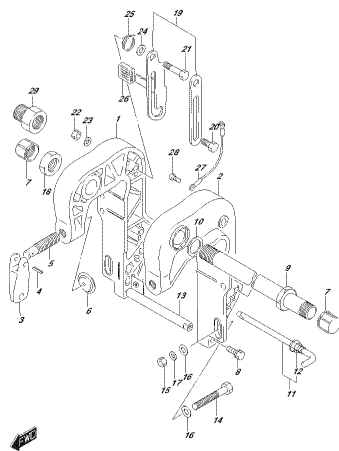
DT40MC_PAL_017_035E
CLAMP BRACKET

FIG.336A

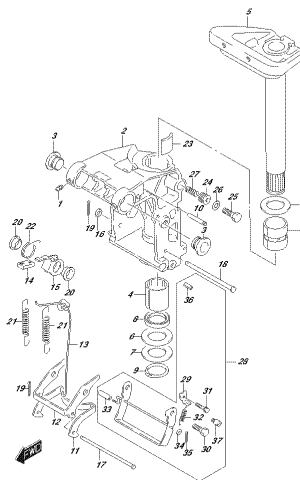
DT40MC_PAL_017_036A
SWIRL BRACKET

FIG.336B

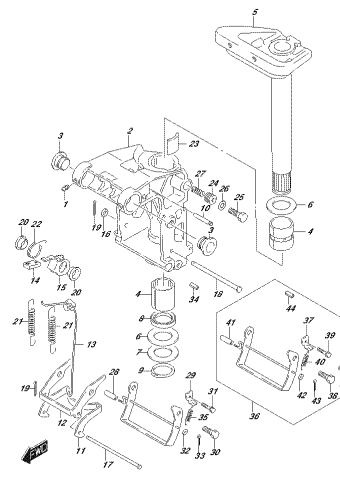
DT40MC_PAL_017_036B
SWIRL BRACKET

FIG.336C

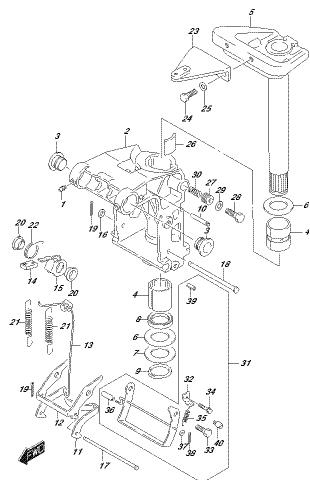
DT40MC_PAL_017_036C
SWIRL BRACKET

FIG.336D

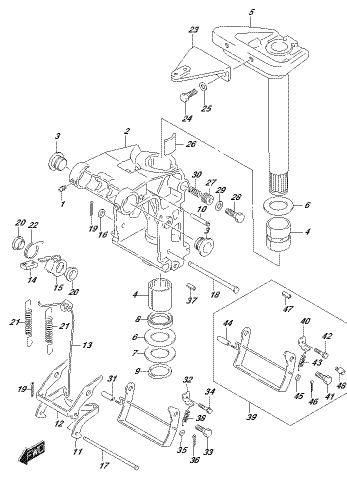
DT40MC_PAL_017_036D
SWIRL BRACKET

FIG.336E

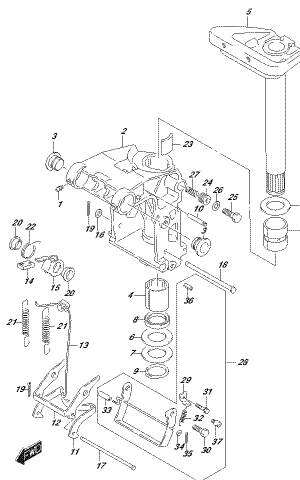
DT40MC_PAL_017_036E
SWIRL BRACKET

FIG.405A




DT40MC_PAL_017_405A
19016 SHAFT HELDING

FIG.405B




DT40NE_P&L_S1Z_405D
09515-SHAFT-140-3RD

FIG.405C

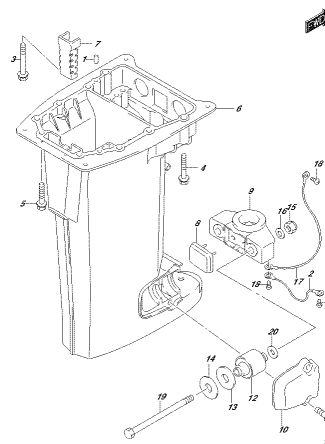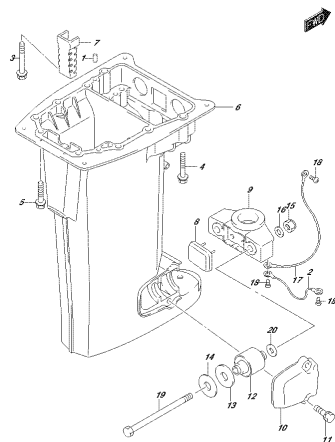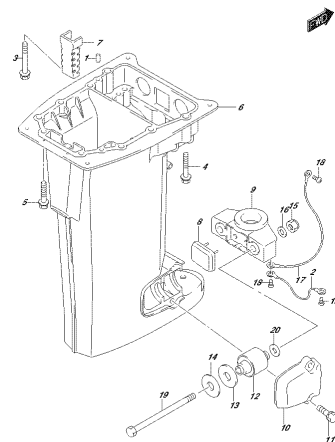


DT40NE_P&L_S1Z_405C
09515-SHAFT-140-3RD

FIG.405D

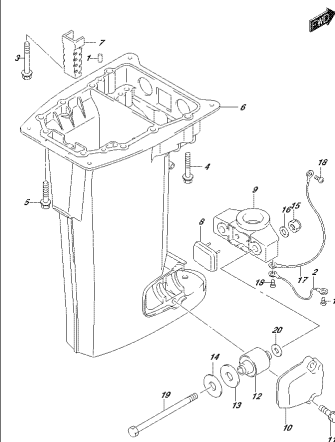


DT40NE_P&L_S1Z_405D
09515-SHAFT-140-3RD

FIG.405E

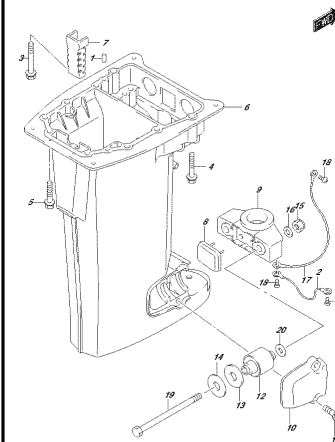


DT40NE_P&L_S1Z_405E
09515-SHAFT-140-3RD

FIG.407A

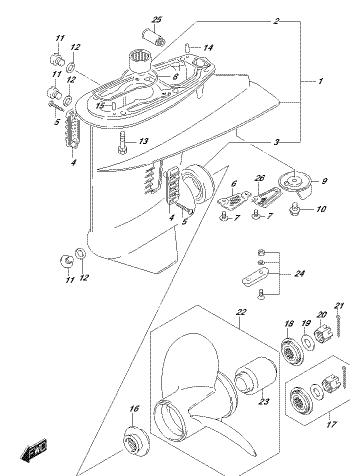


DT40NE_P&L_S1Z_407A
GEAR CASE

FIG.412A

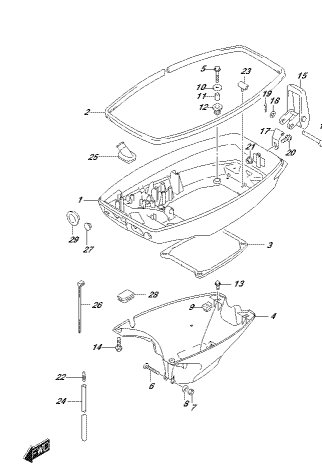


DT40NE_P&L_S1Z_412A
LOWER COVER

FIG.412B

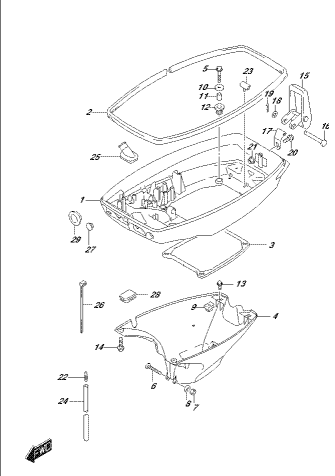


DT40NE_P&L_S1Z_412B
LOWER COVER

FIG.412C

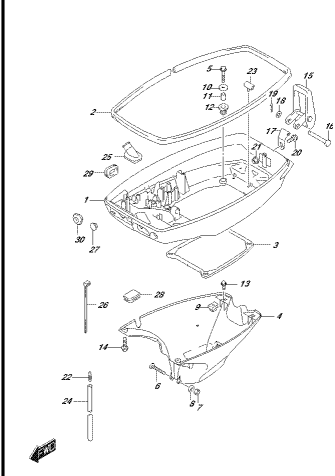


DT40NE_P&L_S1Z_412C
LOWER COVER

FIG.412D

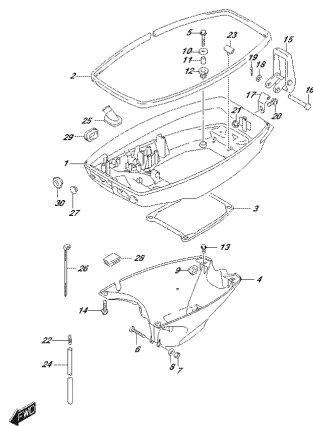


DT40E_P40,41SD
LOWER COVER

FIG.412E

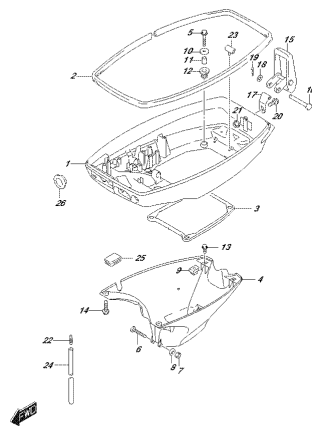


DT40E_P40,41SE
LOWER COVER

FIG.420A

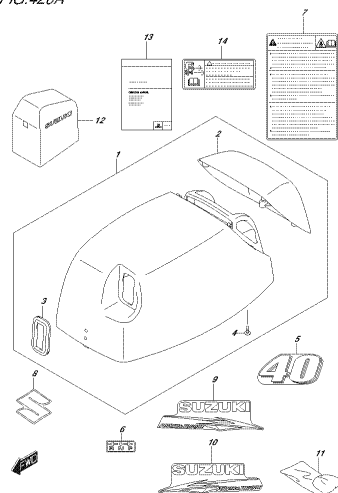


DT40E_P40,42A
ENGINE COVER

FIG.420B

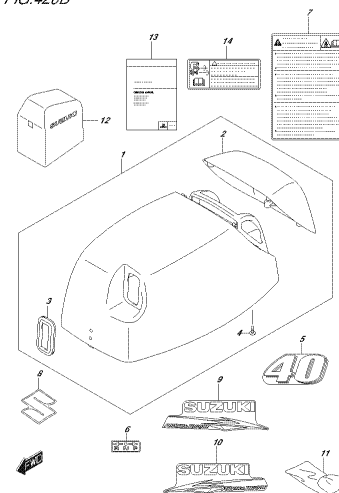


DT40E_P40,42B
ENGINE COVER

FIG.420C

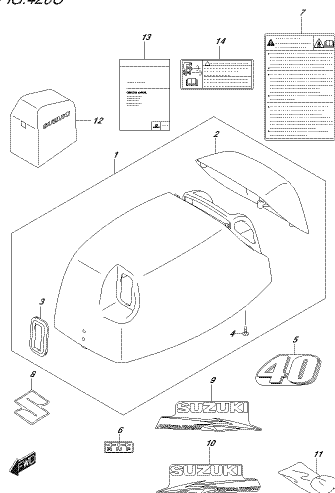


DT40E_P40,42C
ENGINE COVER

FIG.420D

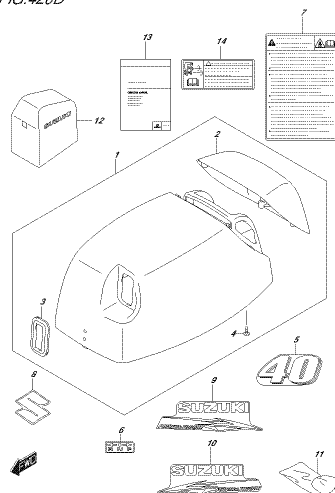


DT40E_P40,42D
ENGINE COVER

FIG.420E

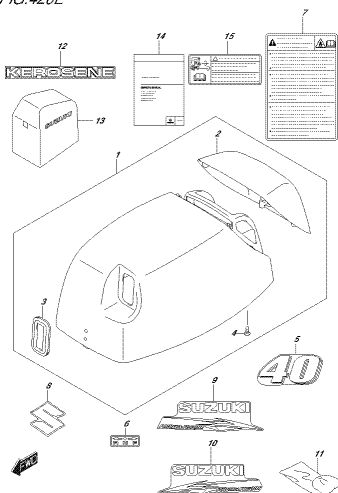


DT40E_P40,42E
ENGINE COVER

FIG.432A

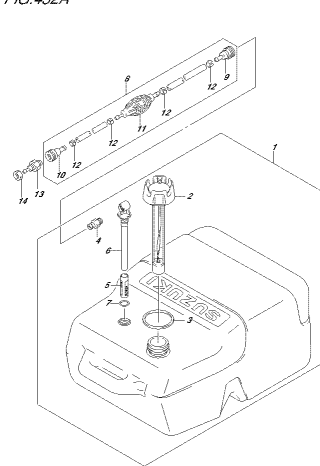


DT40E_P40,43A
FUEL TANK

FIG.444B

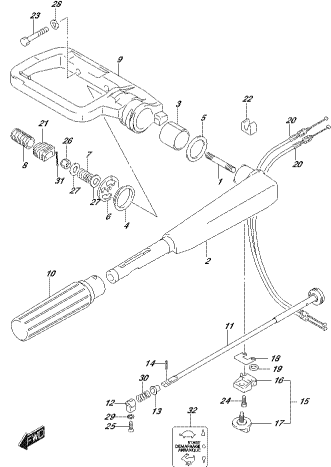


DT40NC_P&L_017_444B
TILESS HANDLE

FIG.444C

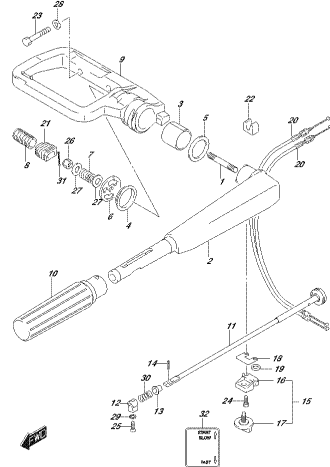


DT40NC_P&L_017_444C
TILESS HANDLE

FIG.450A

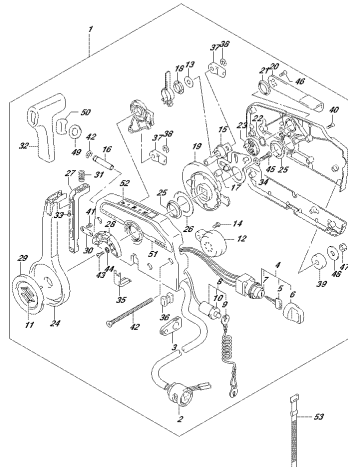


DT40NC_P&L_017_450A
REMOTE CONTROL

FIG.450B

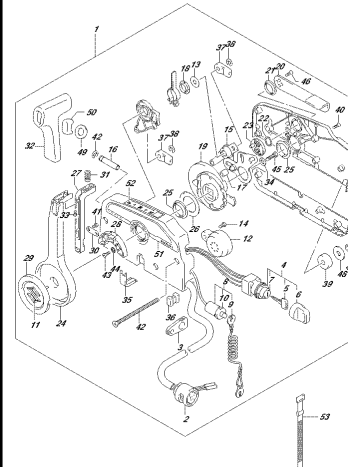


DT40NC_P&L_017_450B
REMOTE CONTROL

FIG.454A

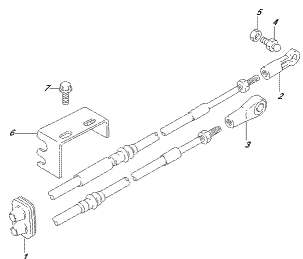


DT40NC_P&L_017_454A
REMOTE CONTROL HOLDER

FIG.454B

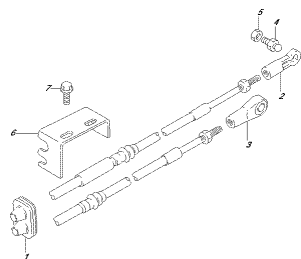


DT40NC_P&L_017_454B
REMOTE CONTROL HOLDER

FIG.501A

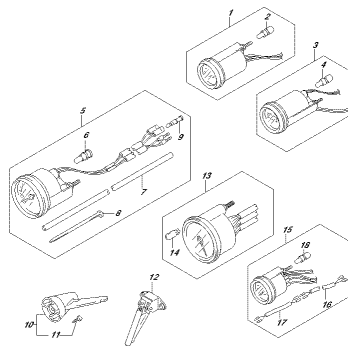


DT40NC_P&L_017_501A
OPTIMIZER

FIG.501B

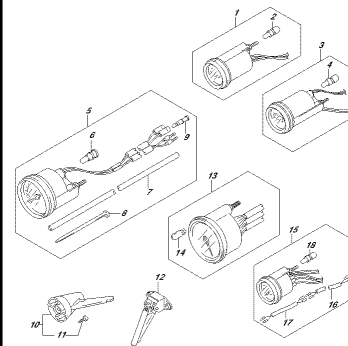


DT40NC_P&L_017_501B
OPTIMIZER

FIG.501C

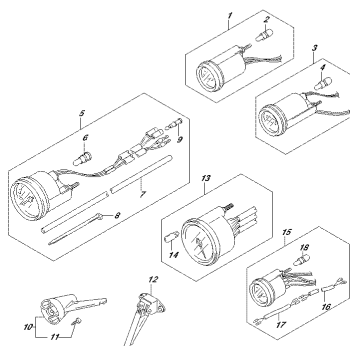


DT40MC_PAL_017C_001C
OPT-ARMATE

FIG.501D

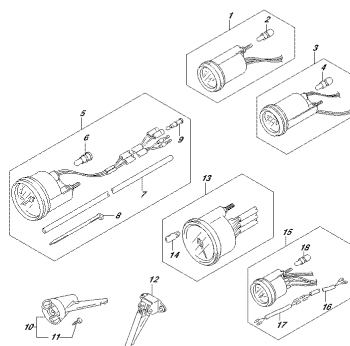


DT40MC_PAL_017C_001D
OPT-ARMATE

FIG.508A

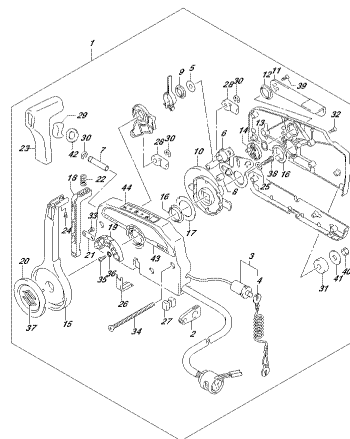


DT40MC_PAL_017C_008A
OPT-ARMATE CONTROL

FIG.513A

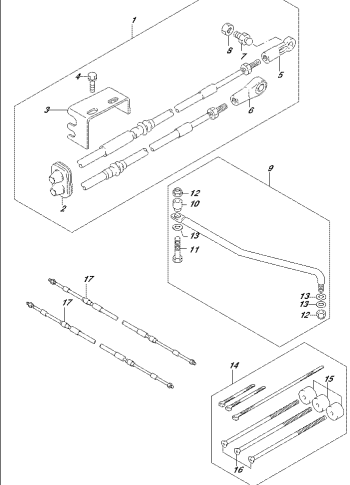


DT40MC_PAL_017C_013A
OPT-ARMATE CONTROL PARTS

FIG.513B

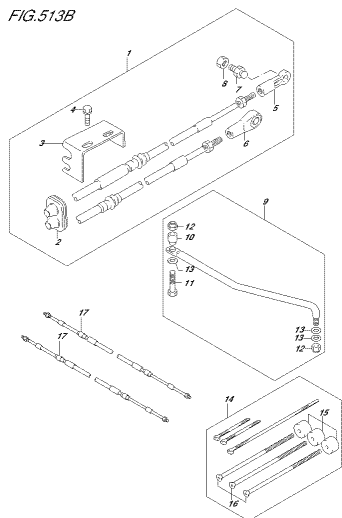


DT40MC_PAL_017C_013B
OPT-ARMATE CONTROL PARTS

FIG.513C

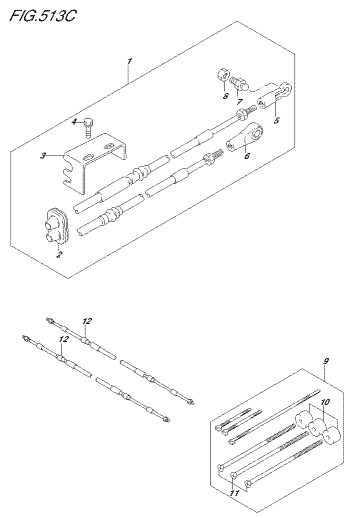


DT40MC_PAL_017C_013C
OPT-ARMATE CONTROL PARTS

FIG.513D

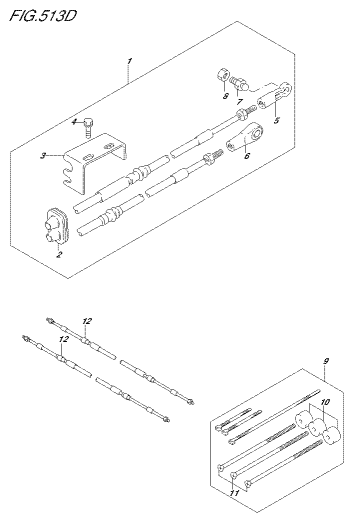


DT40MC_PAL_017C_013D
OPT-ARMATE CONTROL PARTS

FIG.513E

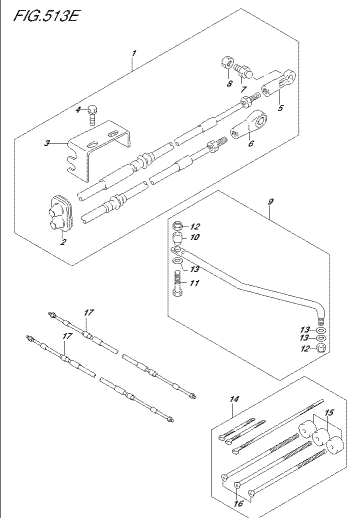


DT40MC_PAL_017C_013E
OPT-ARMATE CONTROL PARTS

FIG.550A

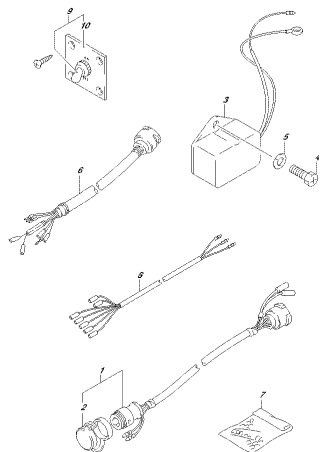


DT40M_PAL017_550A
OPT.ELECTRICAL

FIG.550B

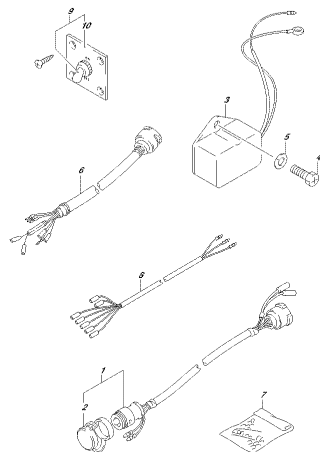


DT40M_PAL017_550B
OPT.ELECTRICAL

FIG.553A

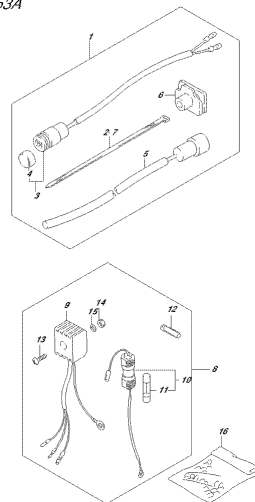


DT40M_PAL017_553A
OPT.ELECTRICAL (MANUAL STARTER)

FIG.553B

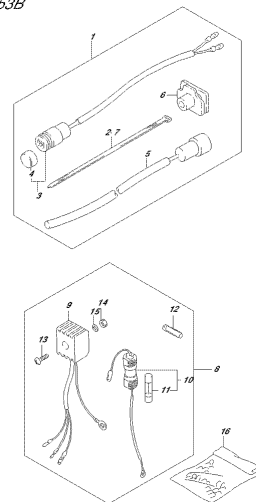


DT40M_PAL017_553B
OPT.ELECTRICAL (MANUAL STARTER)

FIG.553C

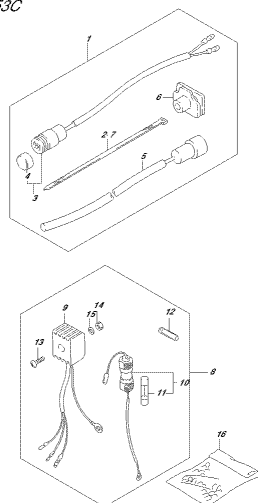


DT40M_PAL017_553C
OPT.ELECTRICAL (MANUAL STARTER)

FIG.554A

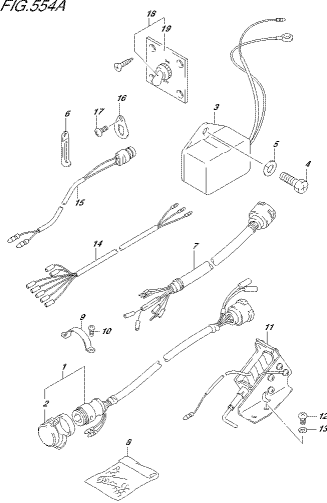


DT40M_PAL017_554A
OPT.ELECTRICAL (ELECTRIC STARTER)

FIG.554B

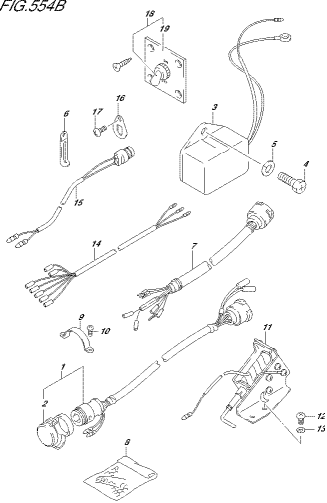


DT40M_PAL017_554B
OPT.ELECTRICAL (ELECTRIC STARTER)

FIG.561A

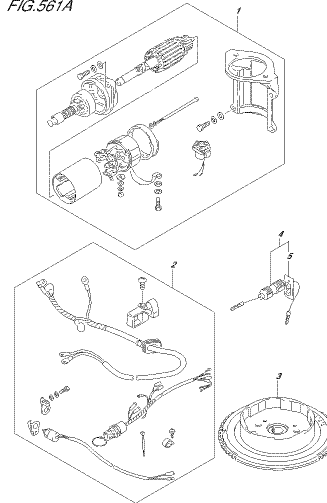


DT40M_PAL017_561A
OPT.STARTING NOTCH (MANUAL STARTER)

FIG.561B

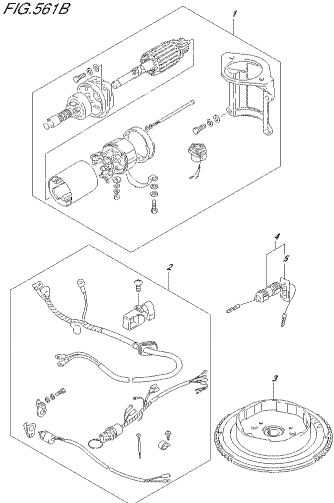


OPTIONAL PAIR 51C 8010
OFF-STARTING NOTCH (MANUAL STARTER)

FIG.570A

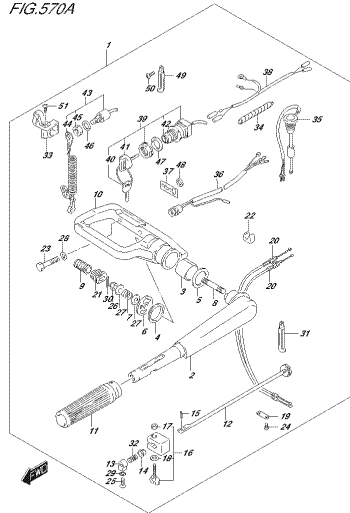

OPTIONAL PAIR 51C 8204
OFF-RELEASE HANDLE

FIG.570B

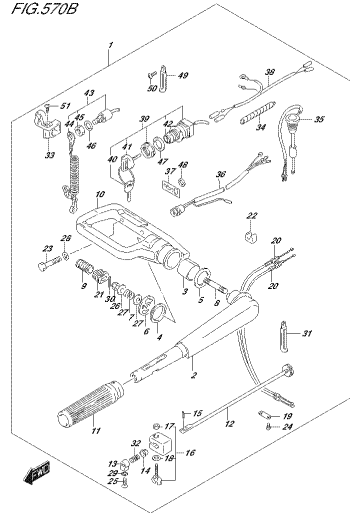

OPTIONAL PAIR 51C 8205
OFF-RELEASE HANDLE

FIG.10AA

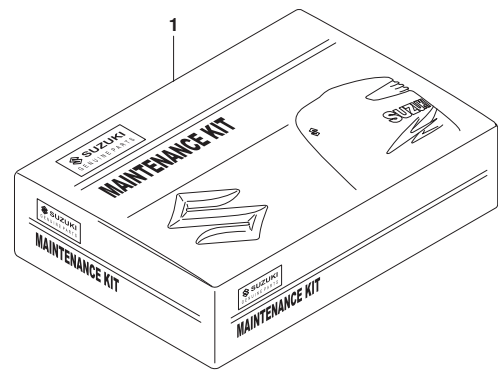


FIG.10AA (1-B-2) MAINTENANCE KIT (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

FIG.10AB

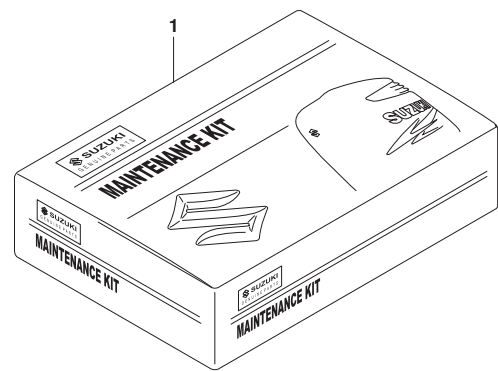


FIG.10AB (1-B-3) MAINTENANCE KIT (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

FIG.10AC

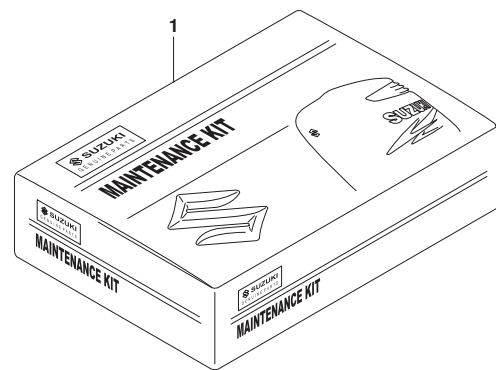


FIG.10AC (1-B-4) MAINTENANCE KIT (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

FIG.10AD

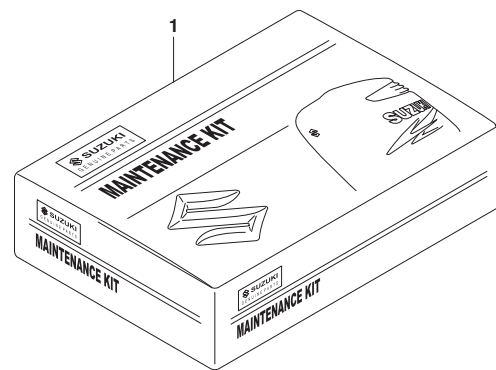


FIG.10AD (1-B-5) MAINTENANCE KIT (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	17400-92810	MAINTENANCE KIT	1	
2	17400-94412	.KIT, WATER PUMP REPAIR	1	NOT ILLUSTRATED
3	17685-94410	.GASKET, THERMOSTAT COVER	1	NOT ILLUSTRATED
4	09168-10022	.GASKET (10X17X1.5)	2	NOT ILLUSTRATED
5	09204-03003	.COTTER PIN (D:3.6,L:25)	1	NOT ILLUSTRATED
6	09482-00370	.SPARK PLUG (BR8HS-10)	2	NOT ILLUSTRATED

FIG.112A (1-B-6) CYLINDER (DT40W P40)

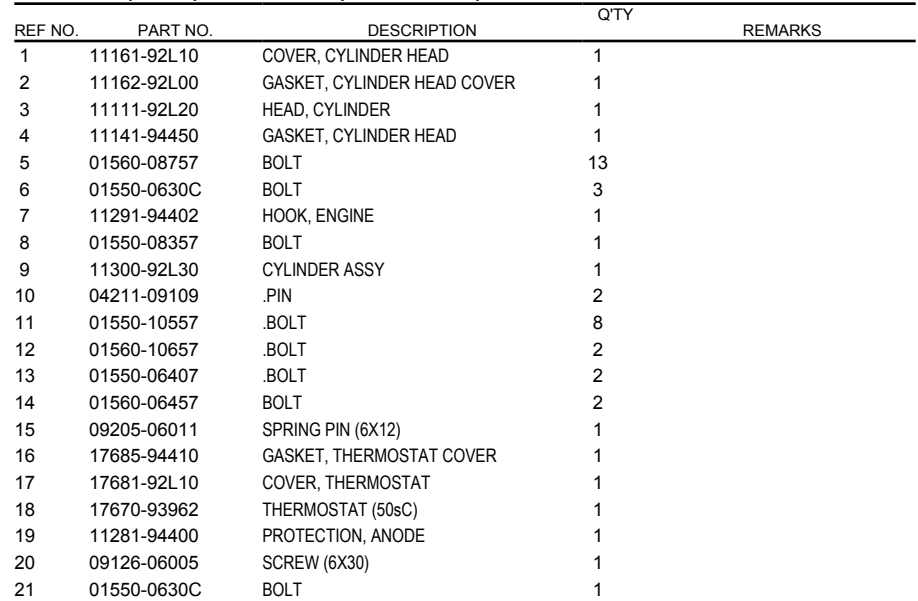


FIG.112B

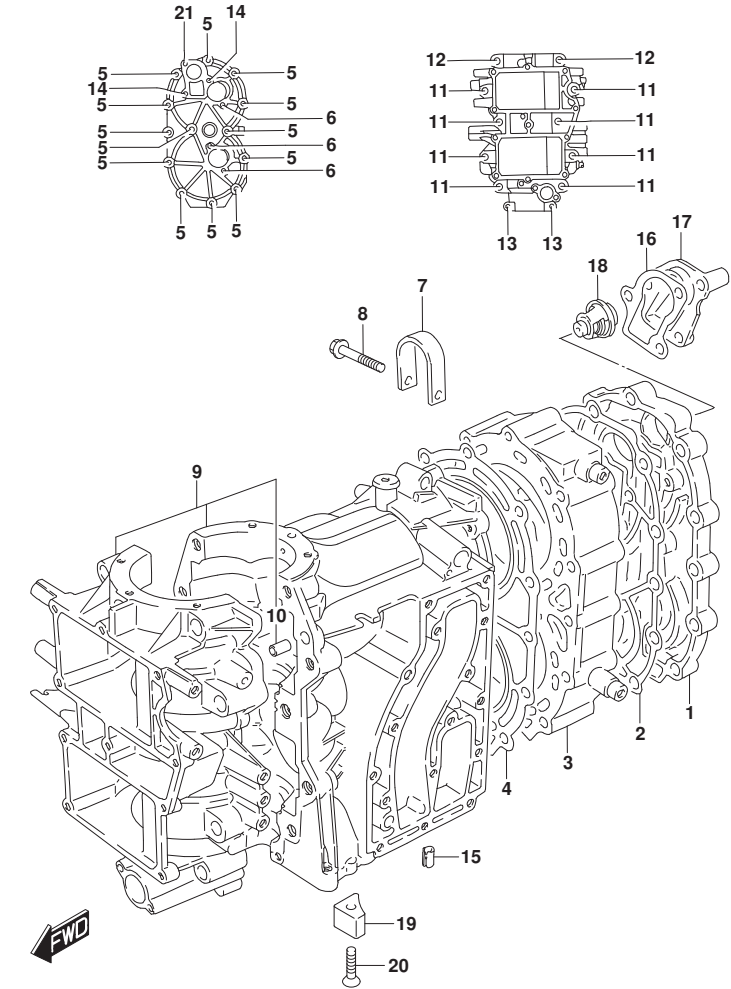


FIG.112B (1-B-7) CYLINDER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-0630C	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-0630C	BOLT	1	

FIG.112C

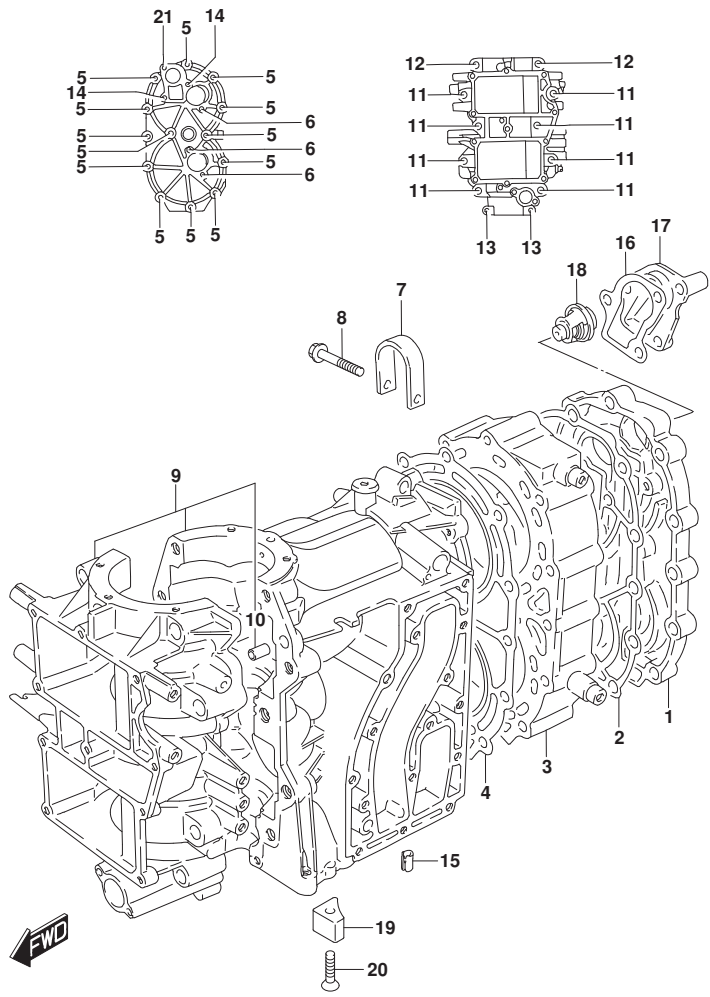


FIG.112C (1-B-8) CYLINDER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-0630C	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-0630C	BOLT	1	

FIG.112D

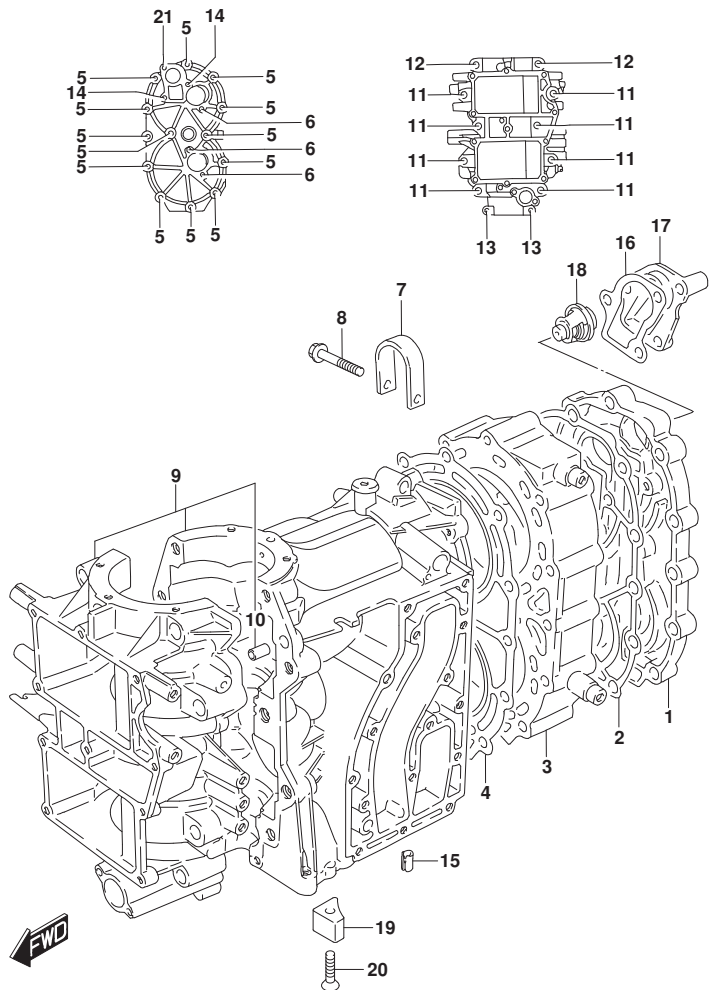


FIG.112D (1-B-9) CYLINDER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L20	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-0630C	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-93962	THERMOSTAT (50sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-0630C	BOLT	1	

FIG.112E

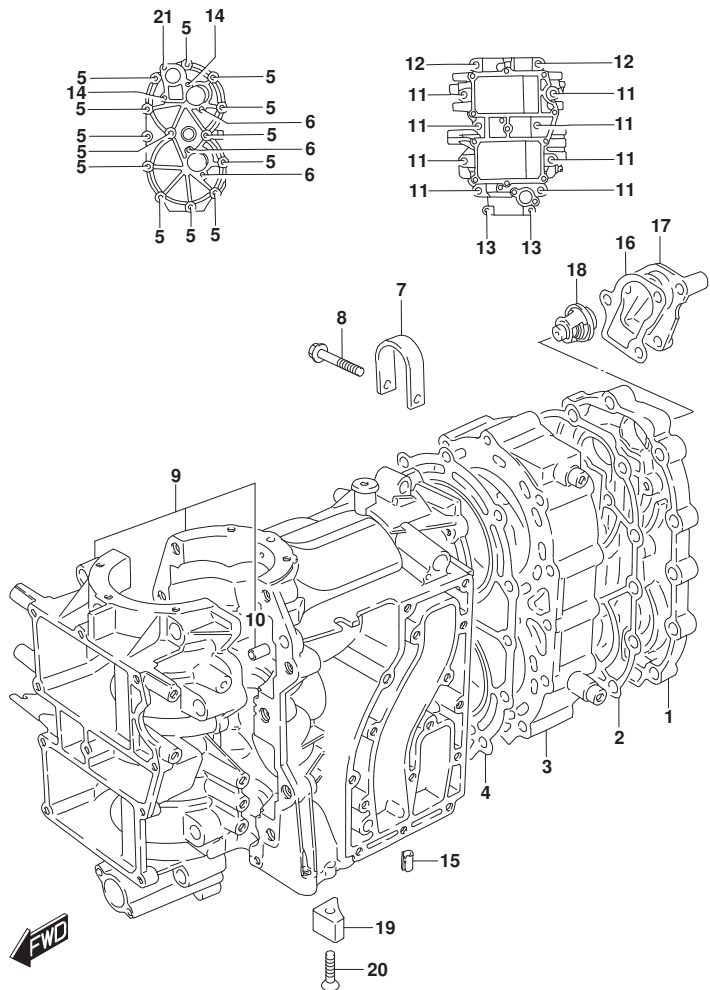


FIG.112E (1-B-10) CYLINDER (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11161-92L10	COVER, CYLINDER HEAD	1	
2	11162-92L00	GASKET, CYLINDER HEAD COVER	1	
3	11111-92L30	HEAD, CYLINDER	1	
4	11141-94450	GASKET, CYLINDER HEAD	1	
5	01560-08757	BOLT	13	
6	01550-0630C	BOLT	3	
7	11291-94402	HOOK, ENGINE	1	
8	01550-08357	BOLT	1	
9	11300-92L30	CYLINDER ASSY	1	
10	04211-09109	.PIN	2	
11	01550-10557	.BOLT	8	
12	01560-10657	.BOLT	2	
13	01550-06407	.BOLT	2	
14	01560-06457	BOLT	2	
15	09205-06011	SPRING PIN (6X12)	1	
16	17685-94410	GASKET, THERMOSTAT COVER	1	
17	17681-92L10	COVER, THERMOSTAT	1	
18	17670-94402	THERMOSTAT (60sC)	1	
19	11281-94400	PROTECTION, ANODE	1	
20	09126-06005	SCREW (6X30)	1	
21	01550-0630C	BOLT	1	

FIG.116A

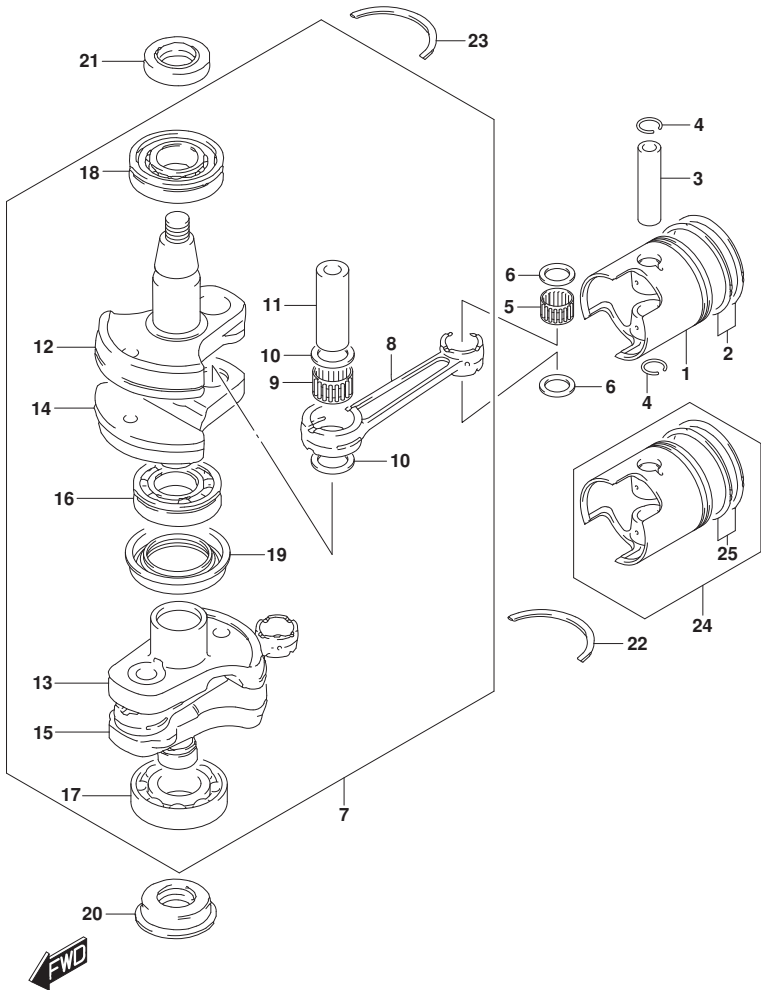


FIG.116A (1-B-11) CRANKSHAFT (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27005	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35005	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116B

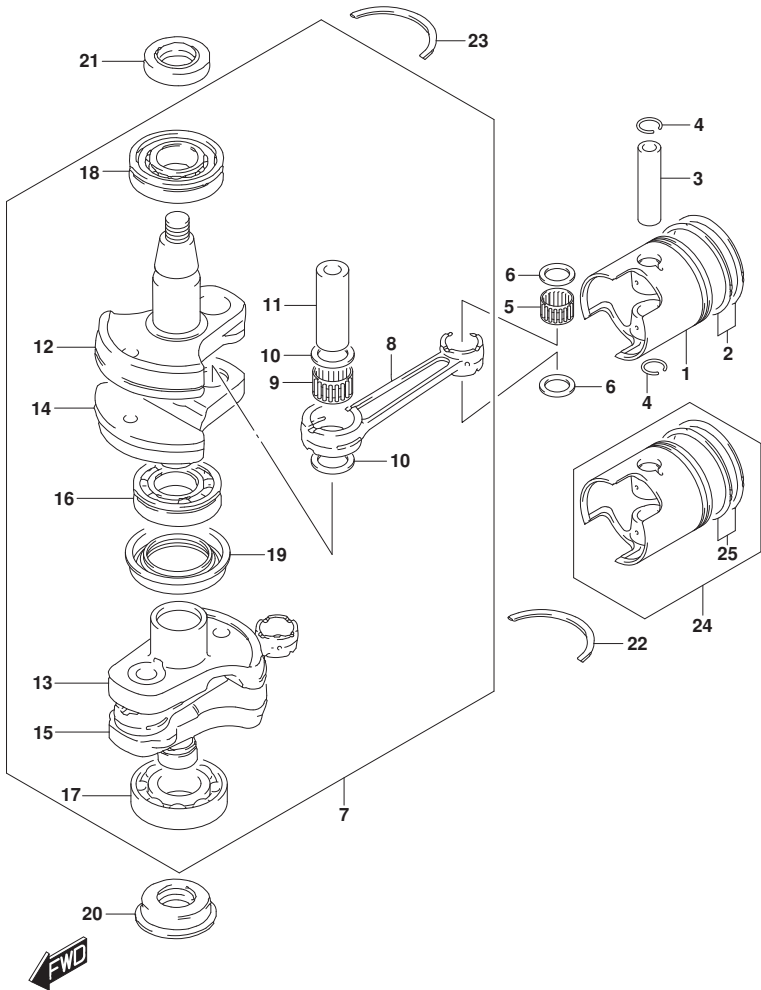


FIG.116B (1-B-12) CRANKSHAFT (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27005	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35005	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116C

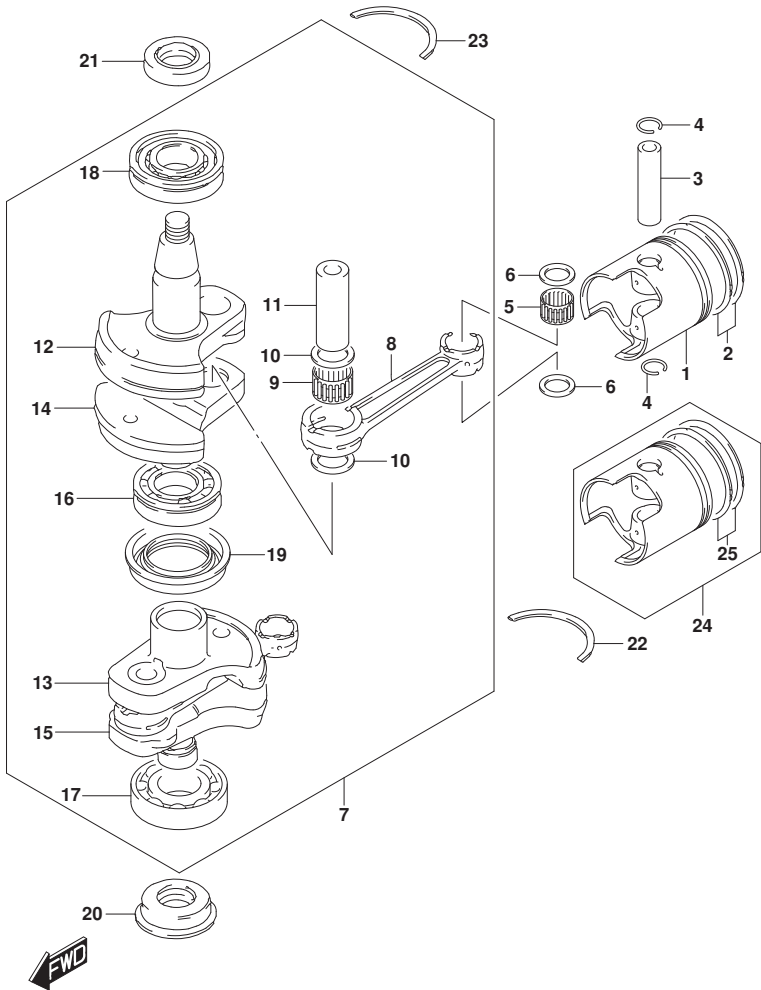


FIG.116C (1-B-13) CRANKSHAFT (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27005	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35005	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116D

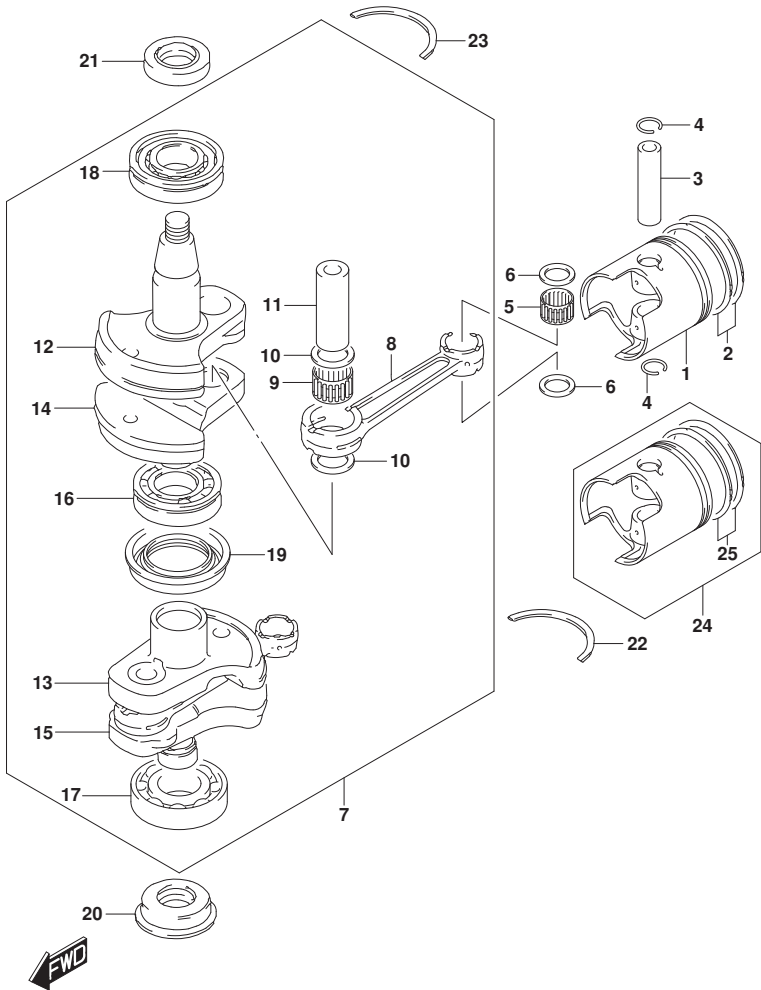


FIG.116D (1-B-14) CRANKSHAFT (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-94400	PISTON	2	
2	12140-94400	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27005	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35005	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.116E

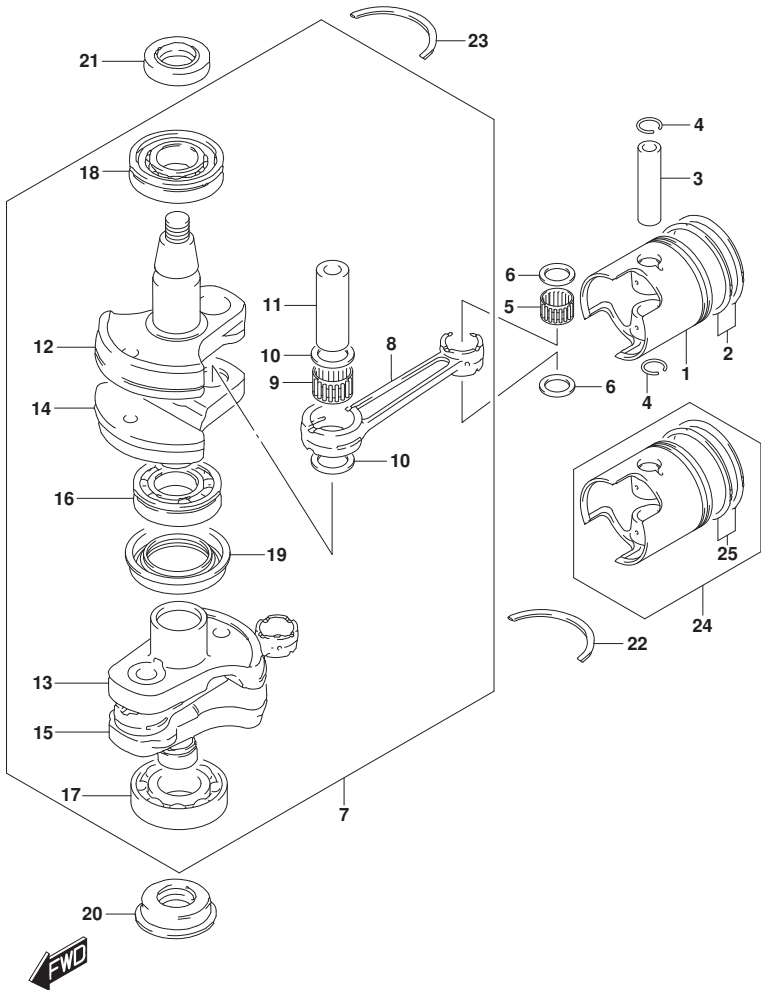


FIG.116E (1-B-15) CRANKSHAFT (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	12110-92L20-0B0	PISTON	2	
2	12140-94410	RING SET, PISTON	2	
3	12151-94400	PIN, PISTON	2	
4	09381-20003	CIRCLIP	4	
5	09263-20072	BEARING (20X26X24)	2	
6	09169-20007	WASHER	4	
7	12200-92L30	CRANKSHAFT ASSY	1	
8	12161-94400	.CONNECTING ROD	2	
9	09263-27008	.BEARING (27X37X22)	2	
10	09160-27008	.WASHER (27X36X1)	4	
11	12211-94410	.PIN, CRANK	2	
12	12221-92L20	.CRANKSHAFT, UPPER	1	
13	12232-92L20	.WHEEL, CRANKSHAFT UNDER	1	
14	12231-92L20	.WHEEL, CRANKSHAFT UPPER	1	
15	12240-92L20	.CRANKSHAFT, UNDER	1	
16	09262-30068	.BEARING (30X72X19)	1	
17	09262-35L09	.BEARING (35X72X17)	1	
18	09264-35005	.BEARING (35X80X21)	1	
19	09289-45L01	.OIL SEAL (45X72X12)	1	
20	09283-30062	OIL SEAL (30X55X8)	1	
21	09283-35L01	OIL SEAL (35X55X7)	1	
22	09390-72008	C-RING	1	
23	09390-80002	C RING(ID:76.8,OD:86,T:1.9)	1	
24	12100-94400-050	PISTON SET (OS:0.50)	2	OPT
25	12140-94400-050	.RING SET, PISTON (OS:0.50)	2	OPT

FIG.125A

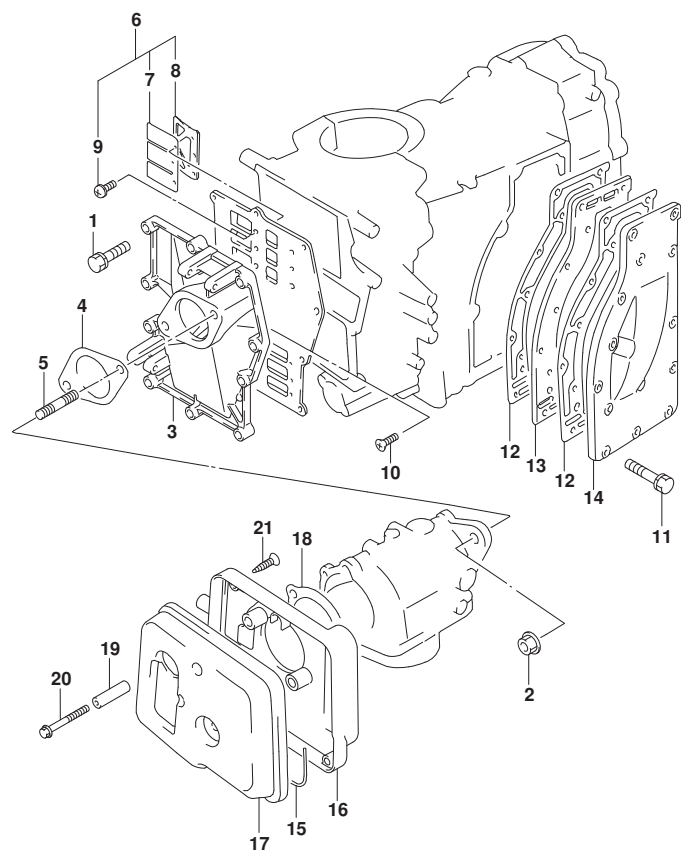


FIG.125A (1-C-2) INLET CASE (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0630C	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-0630C	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L10	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09180-06254	SPACER (6.1X8X34)	2	
20	09116-06513	BOLT (6X45)	2	
21	03222-0520B	SCREW	5	

FIG.125B

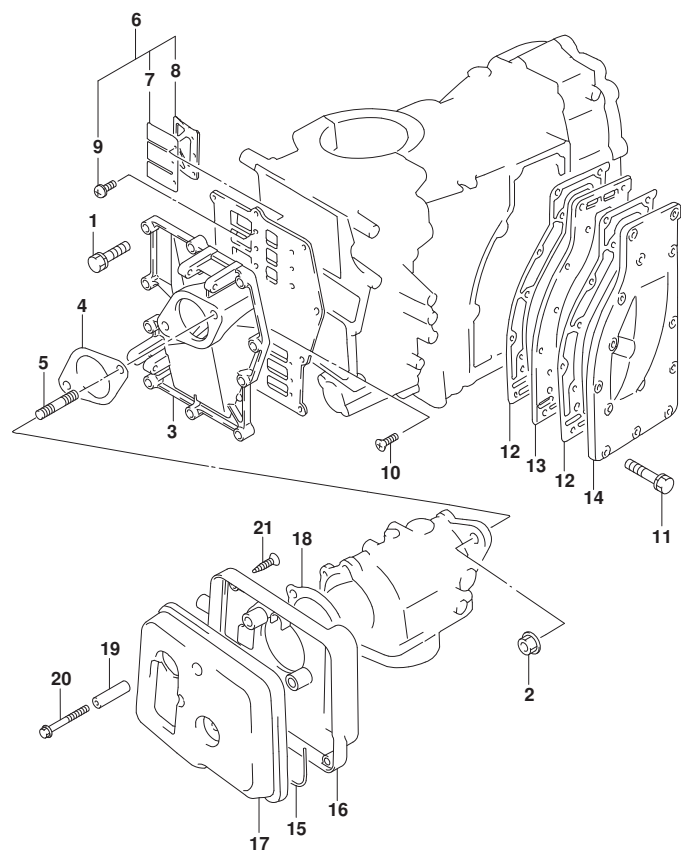


FIG.125B (1-C-3) INLET CASE (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0630C	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-0630C	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L10	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09180-06254	SPACER (6.1X8X34)	2	
20	09116-06513	BOLT (6X45)	2	
21	03222-0520B	SCREW	5	

FIG.125C

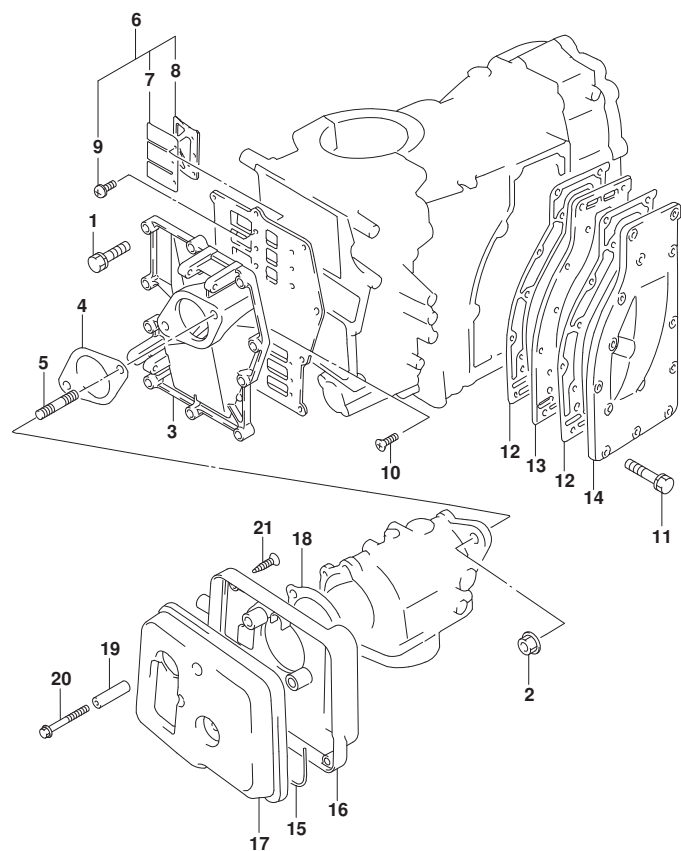


FIG.125C (1-C-4) INLET CASE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0630C	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-0630C	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L10	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09180-06254	SPACER (6.1X8X34)	2	
20	09116-06513	BOLT (6X45)	2	
21	03222-0520B	SCREW	5	

FIG.125D

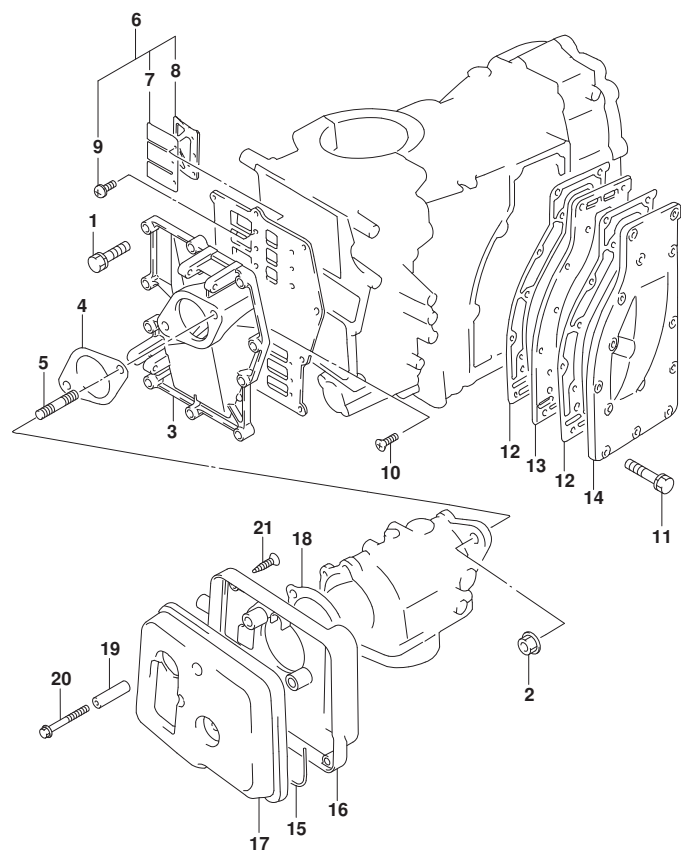


FIG.125D (1-C-5) INLET CASE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0630C	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L00	CASE, INLET	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	2	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-0630C	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L10	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09180-06254	SPACER (6.1X8X34)	2	
20	09116-06513	BOLT (6X45)	2	
21	03222-0520B	SCREW	5	

FIG.125E

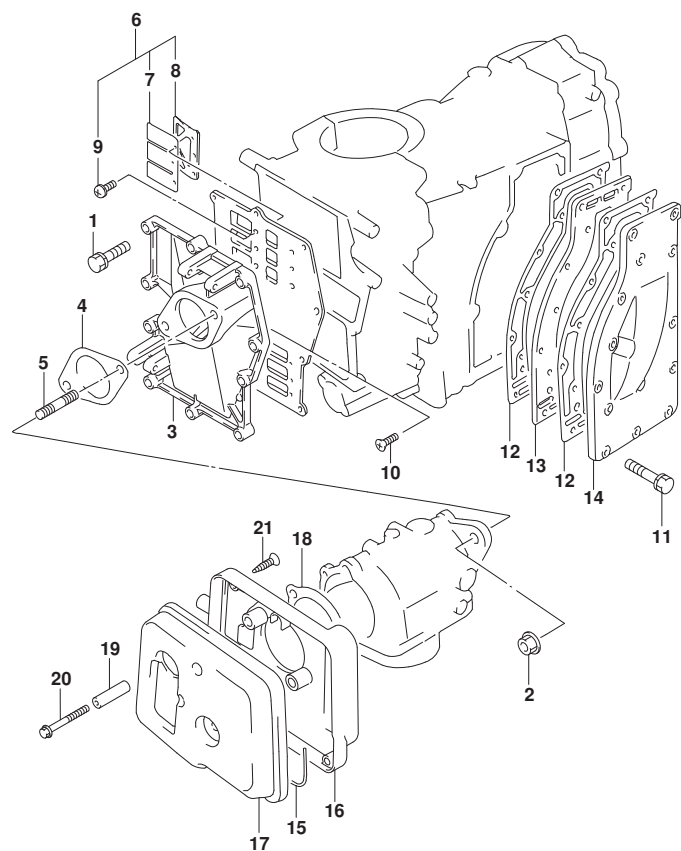


FIG.125E (1-C-6) INLET CASE (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	01550-0630C	BOLT	10	
2	08316-10087	NUT	2	
3	13111-92L10-YAY	CASE, INLET (BLACK)	1	
4	13125-95210	GASKET, CARBURETOR	1	
5	01411-0820A	STUD BOLT	1	
6	13150-92L00	VALVE ASSY, REED	1	
7	13153-92L00	.VALVE, REED	4	
8	13152-92L00	.STOPPER, REED VALVE	4	
9	02112-3306A	.SCREW	12	
10	02122-06167	SCREW	1	
11	01550-0630C	BOLT	16	
12	14151-92L00	GASKET, EXHAUST COVER	2	
13	14131-92L10	PLATE, EXHAUST	1	
14	14141-92L10	COVER, EXHAUST	1	
15	09280-63001	O RING (D:1.9,ID:63.1)	1	
16	13811-92L10	CASE, SILENCER	1	
17	13812-92L00	COVER, SILENCER	1	
18	13855-95210	GASKET, SILENCER	1	
19	09180-06254	SPACER (6.1X8X34)	2	
20	09116-06513	BOLT (6X45)	2	
21	03222-0520B	SCREW	5	

FIG.128A

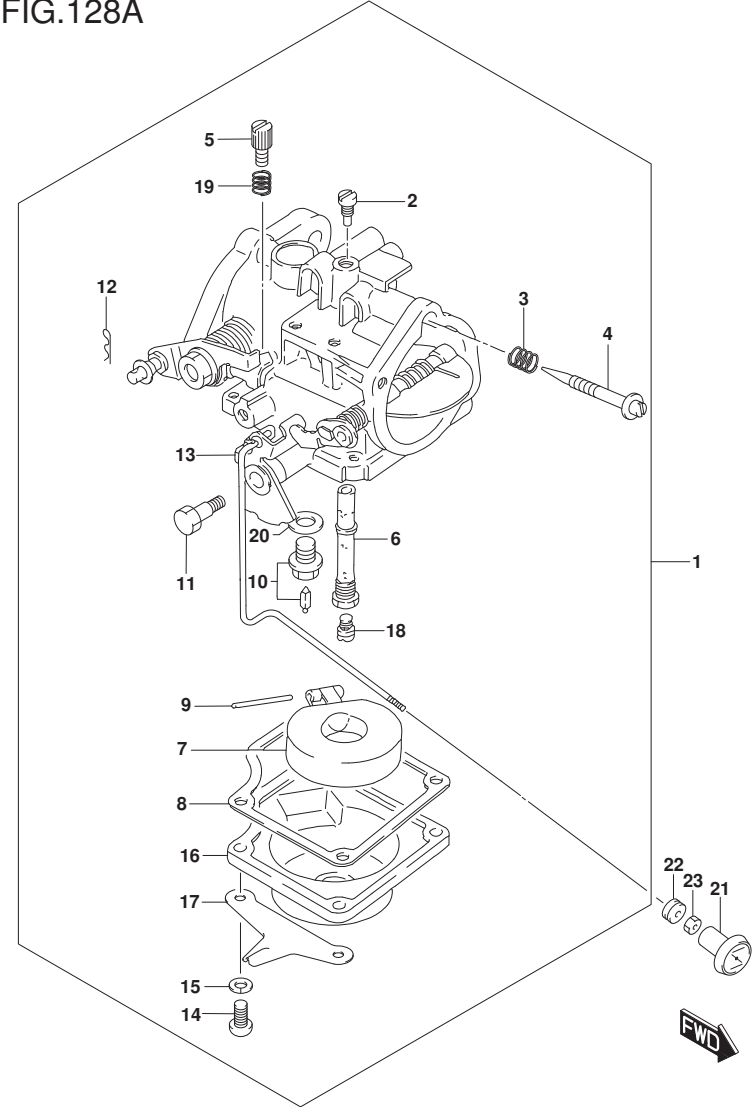


FIG.128A (1-C-7) CARBURETOR TRANSOM(S,L) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128B

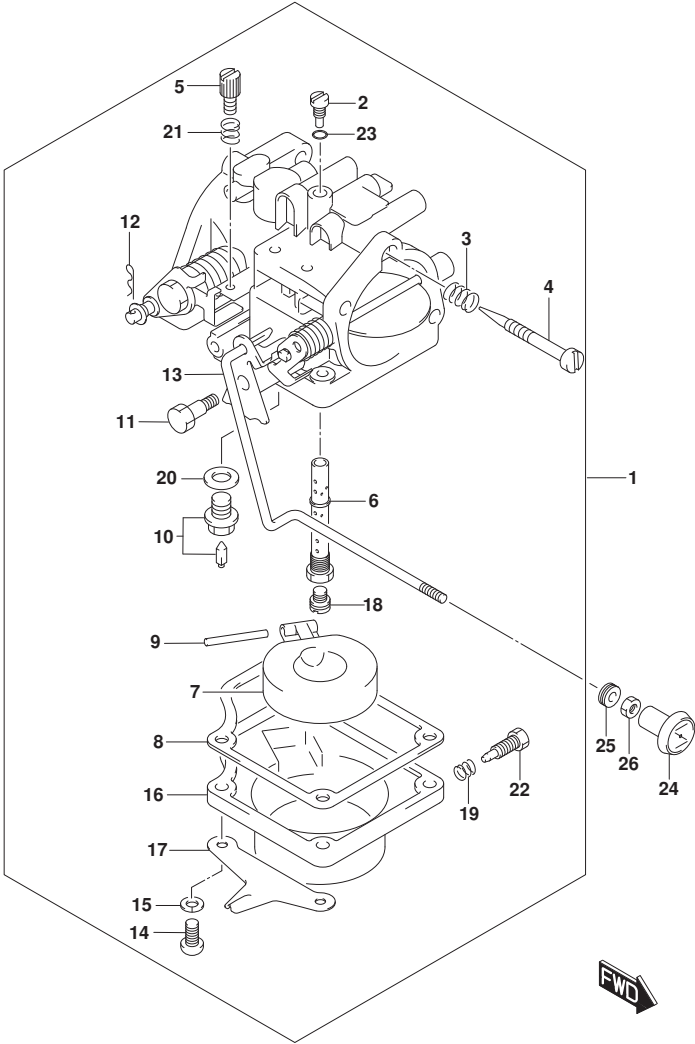


FIG.128B (1-C-8) CARBURETOR TRANSOM(L2) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944K0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95520	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94310	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94410	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13268-96111	.SPRING	1	
22	13279-90010	.SCREW	1	
23	13294-28010	.O RING	1	
24	13631-93501	KNOB, STARTER	1	
25	09320-04009	BUSH	1	
26	09140-04007	NUT	1	
27	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128C

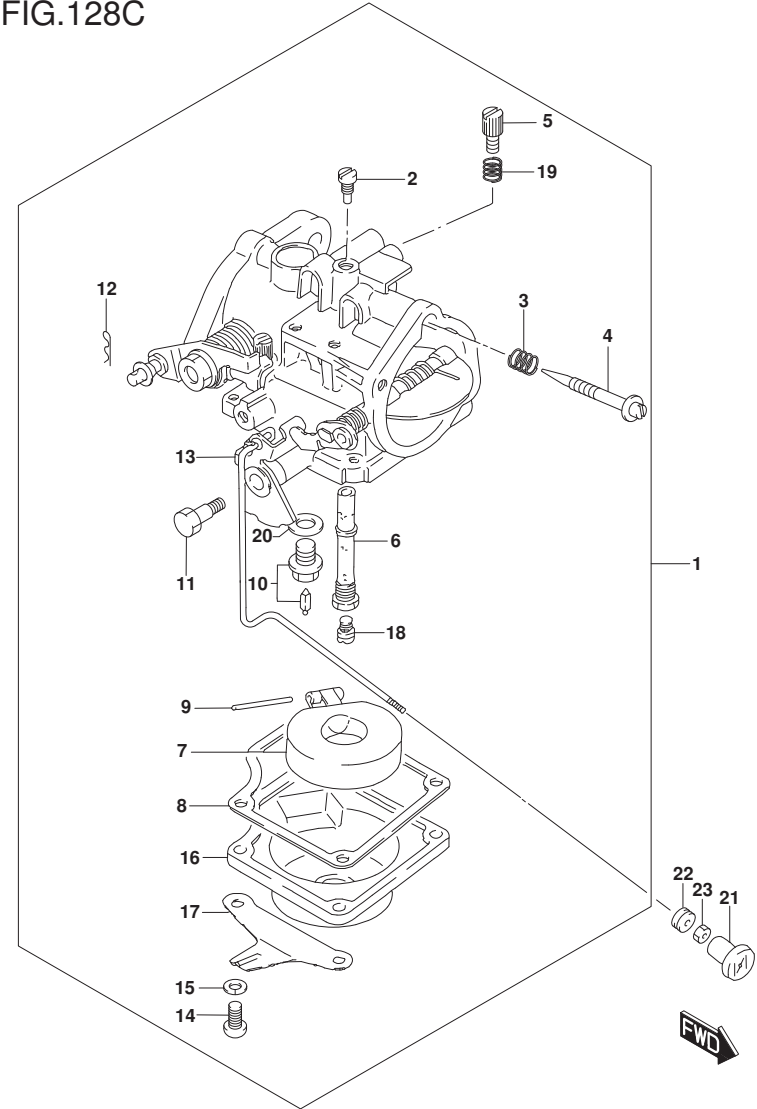


FIG.128C (1-C-9) CARBURETOR (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128D

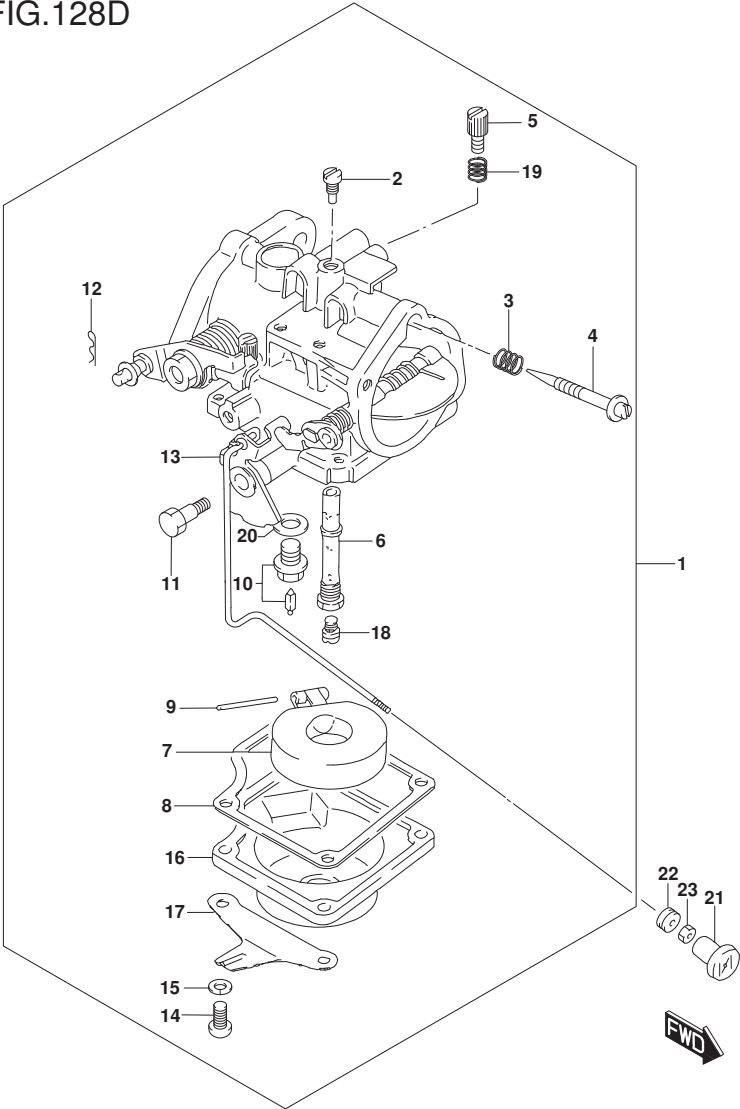


FIG.128D (1-C-10) CARBURETOR (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET, MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128E


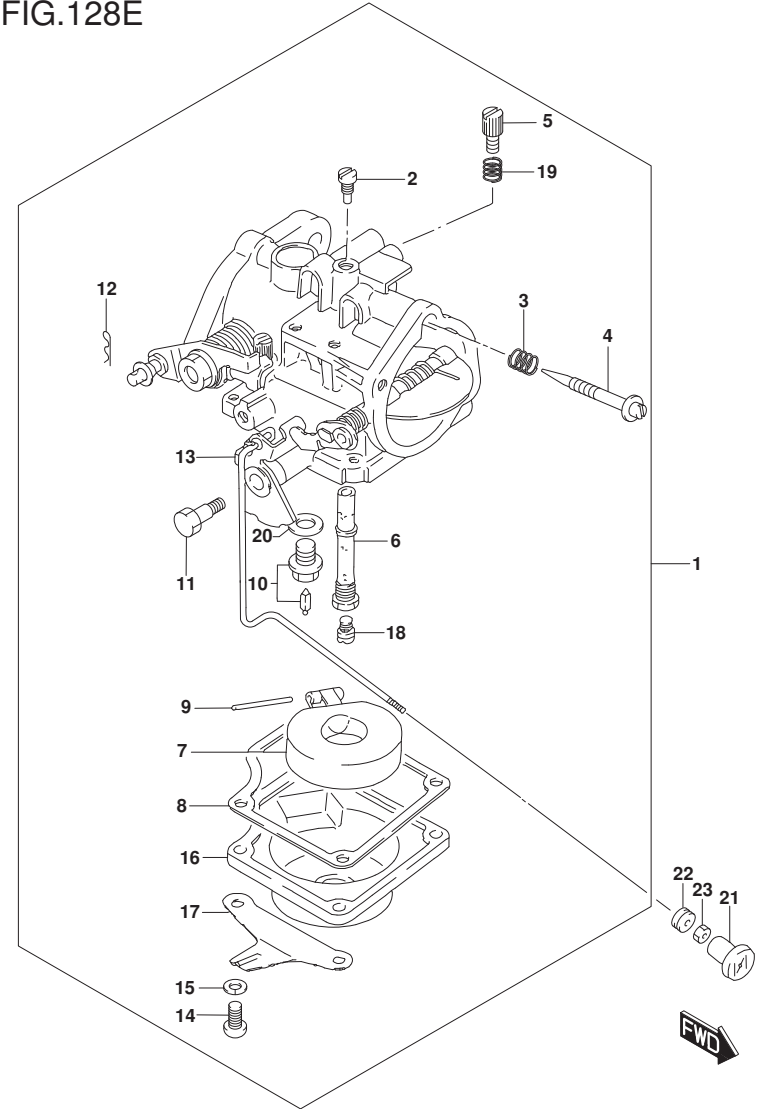


FIG.128E (1-C-11) CARBURETOR (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944J0	CARBURETOR ASSY	1	
2	09492-67004	.JET, PILOT (67.5)	1	
3	13271-93311	.SPRING, AIR SCREW	1	
4	13269-95210	.SCREW, PILOT AIR	1	
5	13267-93900	.SCREW	1	
6	13235-94400	.NOZZLE	1	
7	13250-93012	.FLOAT	1	
8	13251-95220	.GASKET, FLOAT CHAMBER	1	
9	13254-98300	.PIN, FLOAT	1	
10	13370-97E20	.VALVE ASSY, NEEDLE	1	
11	13613-94300	.BOLT	1	
12	13464-96350	.PIN	1	
13	13580-94400	.LEVER ASSY	1	
14	02112-05167	.SCREW	4	
15	08321-0105A	.LOCK WASHER	4	
16	13245-94400	.CHAMBER, FLOAT	1	
17	13426-95211	.PLATE, SPRING	1	
18	09491-38007	.JET,MAIN (190)	1	
19	13268-96111	.SPRING	1	
20	13392-58600	.GASKET, VALVE SEAT	1	
21	13631-93501	KNOB, STARTER	1	
22	09320-04009	BUSH	1	
23	09140-04007	NUT	1	
24	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.128F

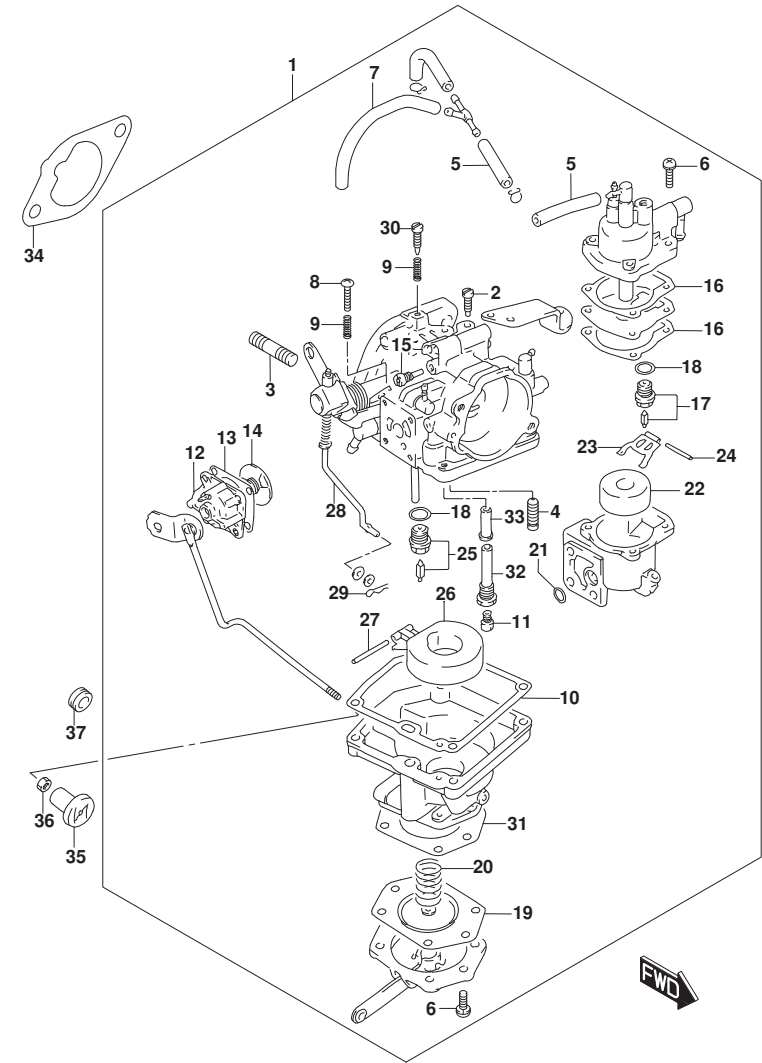

DT40W_P40_017_128F
CARBURETOR

FIG.128F (1-C-12) CARBURETOR (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	13200-944D0	CARBURETOR	1	
2	09492-65002	.JET,PILOT (65)	1	FOR GASOLINE
3	01411-0820A	.STUD BOLT	1	
4	13443-94350	.VALVE	1	
5	13651-95300	.HOSE	2	
6	13249-93900	.SCREW	10	
7	13651-95300	.HOSE	1	
8	13534-96300	.SCREW	1	
9	13268-96111	.SPRING	2	
10	13245-94350	.GASKET, FLOAT CHAMBER	1	FOR KEROSENE
11	09491-38008	.JET, MAIN (195)	1	
12	13419-94400	.COVER, VALVE	1	
13	13418-94360	.GASKET	1	
14	13415-94350	.DISC, STARTER	1	
15	09492-75001	.JET, PILOT (75)	1	FOR KEROSENE
16	13265-94360	.GASKET	2	FOR GASOLINE
17	13370-94350	.NEEDLE VALVE ASSY	1	FOR GASOLINE
18	13392-58600	.PACKING	2	
19	13450-94350	.DIAPHRAGM ASSY	1	
20	13441-94350	.SPRING	1	
21	13521-78100	.O RING	1	
22	13270-94350	.FLOAT	1	FOR GASOLINE
23	13282-94350	.ARM	1	
24	13254-98410	.PIN	1	FOR GASOLINE
25	13370-27310	.NEEDLE VALVE ASSY	1	FOR KEROSENE
26	13250-93012	.FLOAT ASSY	1	FOR KEROSENE
27	13254-98300	.PIN	1	FOR KEROSENE
28	13462-94351	.ROD	1	
29	13464-96350	.SPRING PIN	1	
30	13269-98100	.SCREW, PILOT	1	
31	13446-94360	.GASKET	1	
32	13236-94460	.NOZZLE, MAIN	1	
33	13237-94460	.NOZZLE	1	

DT40W_P40_017

FIG.128F

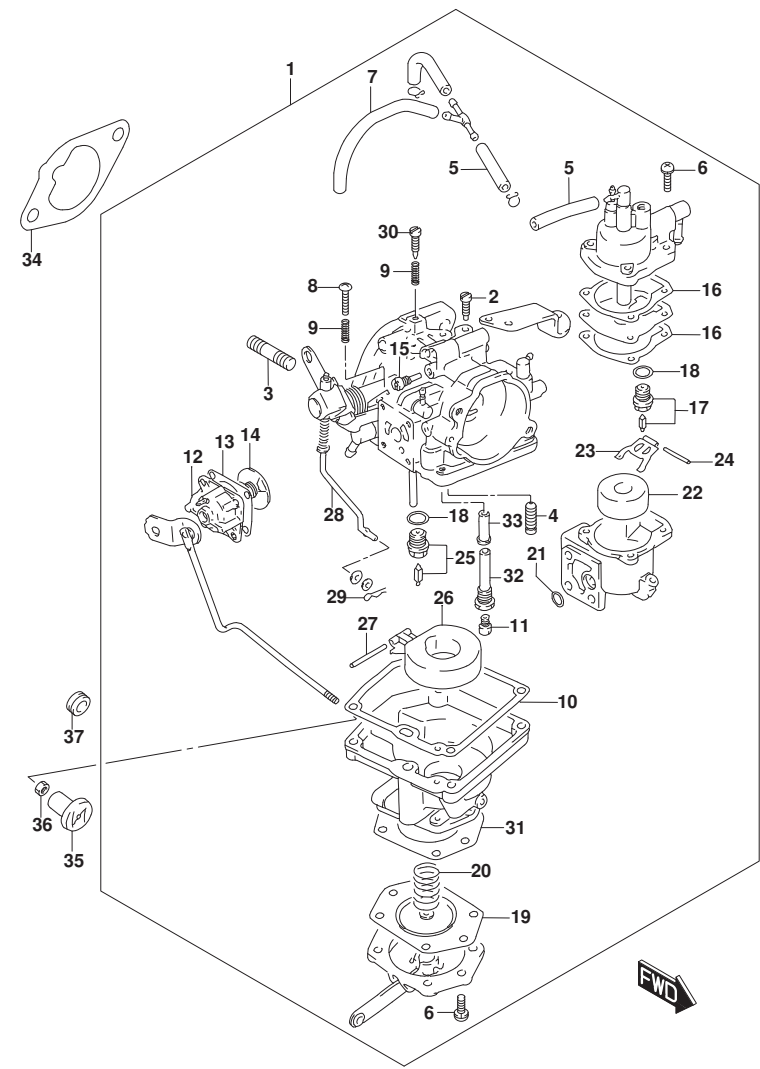


FIG.128F (1-C-13) CARBURETOR (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	13126-94450	PLATE, AIR FLOW CONTROL	1	
35	13631-93501	KNOB, STARTER	1	
36	09140-04007	NUT	1	
37	09320-04009	BUSH	1	
38	13910-94400	REPAIR KIT, CARBURETOR	1	OPT NOT ILLUSTRATED

FIG.130A

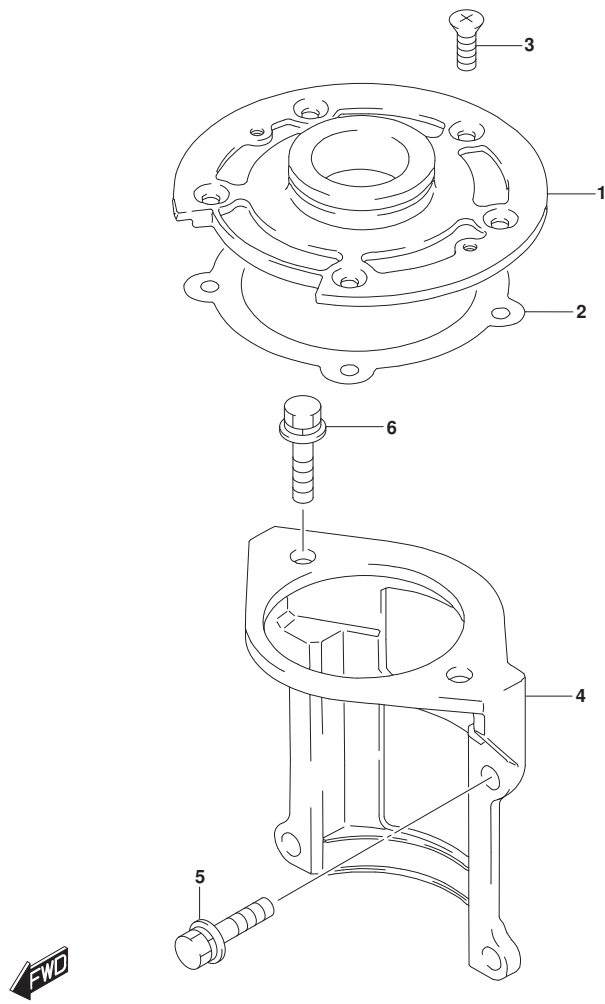


FIG.130A (1-C-14) OIL SEAL HOUSING (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	W/ELECTRIC STARTER
5	01550-08257	BOLT	4	W/ELECTRIC STARTER
6	01580-08257	BOLT	2	W/ELECTRIC STARTER

FIG.130B

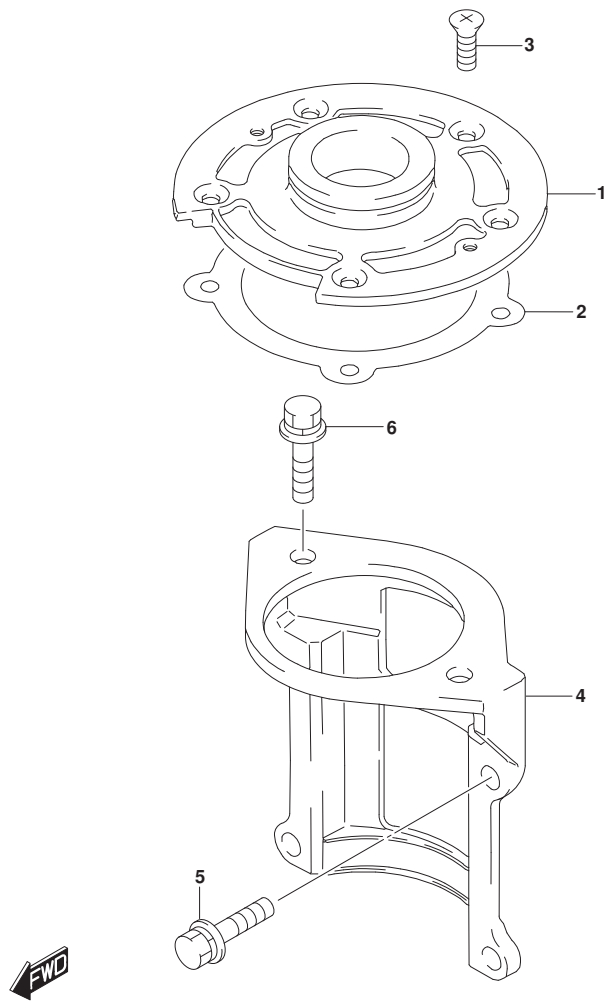


FIG.130B (1-C-15) OIL SEAL HOUSING (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	W/ELECTRIC STARTER
5	01550-08257	BOLT	4	W/ELECTRIC STARTER
6	01580-08257	BOLT	2	W/ELECTRIC STARTER

FIG.130C

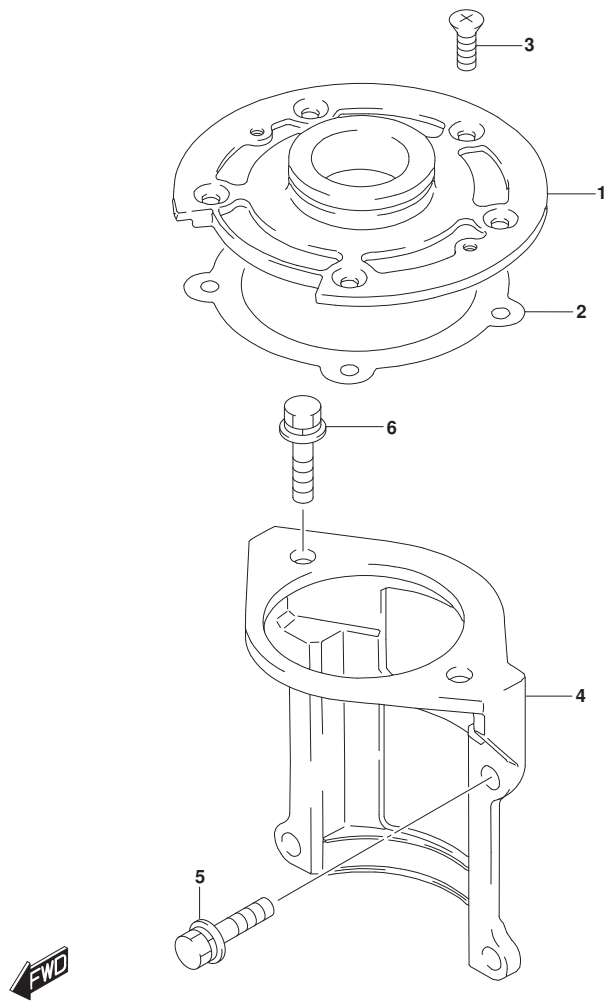


FIG.130C (1-D-2) OIL SEAL HOUSING (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	
5	01550-08257	BOLT	4	
6	01580-08257	BOLT	2	

FIG.130D

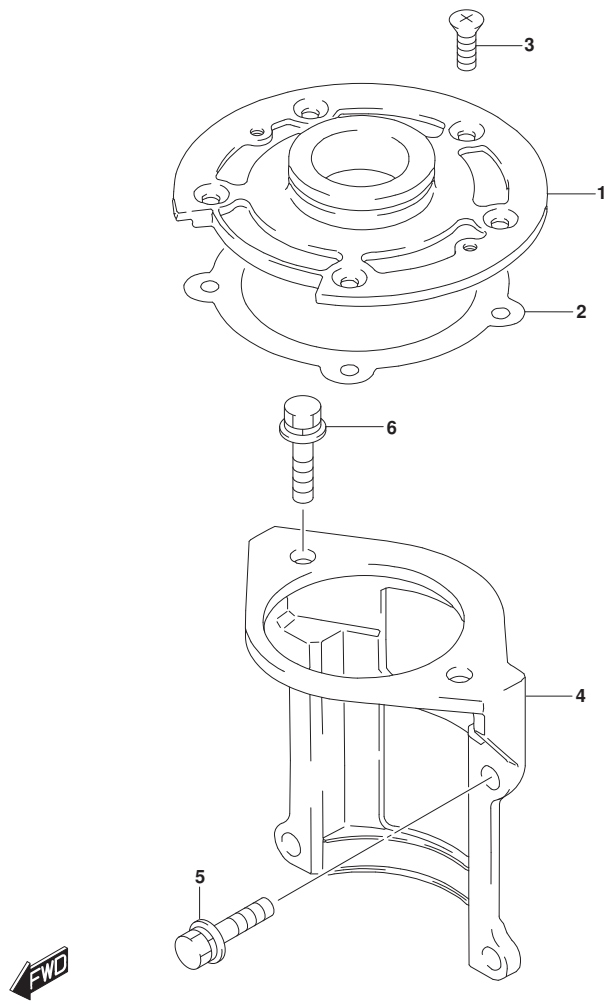


FIG.130D (1-D-3) OIL SEAL HOUSING (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	
4	31911-92L00	BRACKET, STARTING MOTOR	1	
5	01550-08257	BOLT	4	
6	01580-08257	BOLT	2	

FIG.130E

FIG.130E (1-D-4) OIL SEAL HOUSING (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11411-92L10	HOUSING, UPPER OIL SEAL	1	
2	11413-94411	GASKET, UPPER OIL SEAL	1	
3	09126-06022	SCREW (6X16)	5	


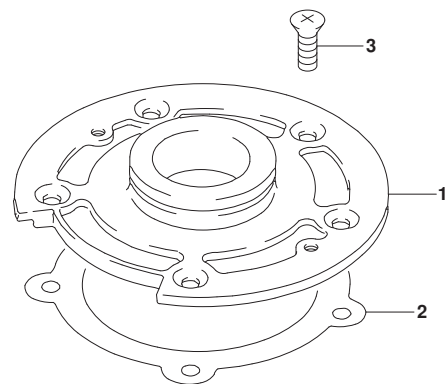


FIG.141A

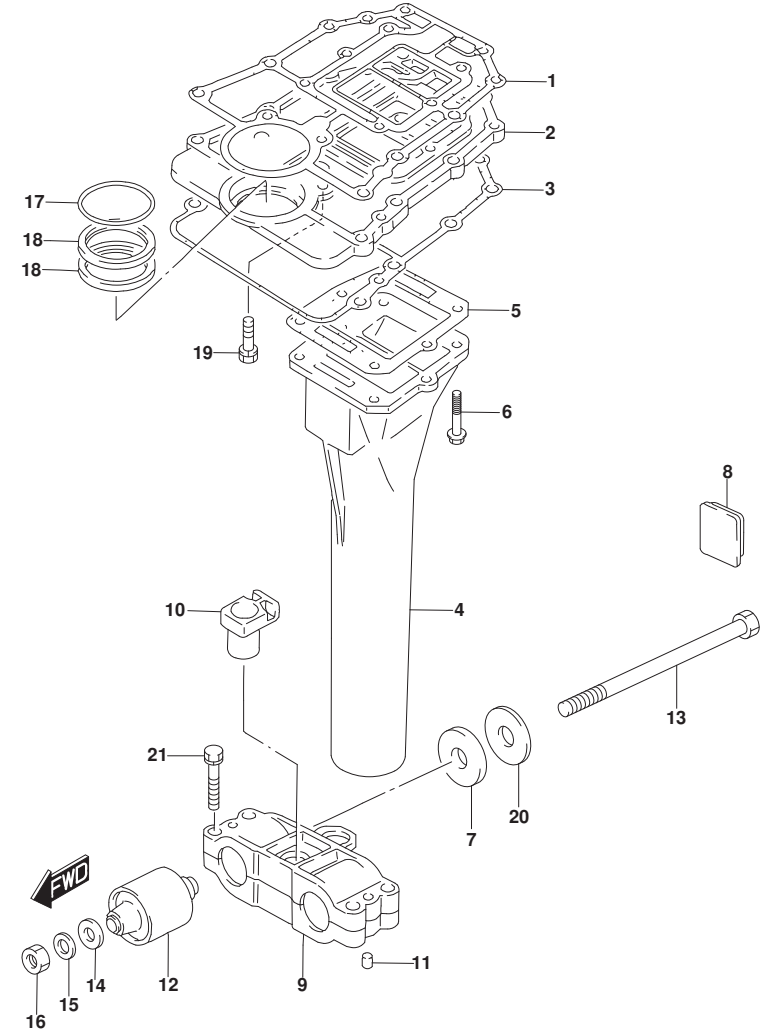


DT40W_P40_017_141A
EXHAUST TUBE

FIG.141A (1-D-5) EXHAUST TUBE (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

FIG.141B

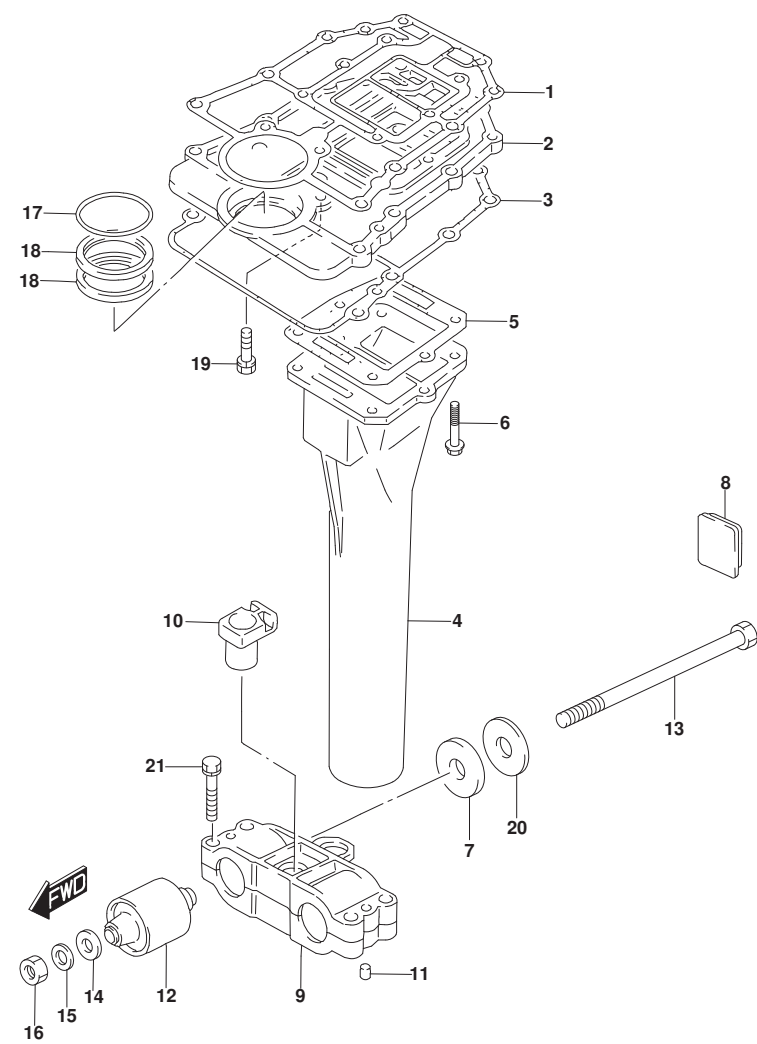


DT40W_P40_017_141B
EXHAUST TUBE

FIG.141B (1-D-6) EXHAUST TUBE (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_017

FIG.141C

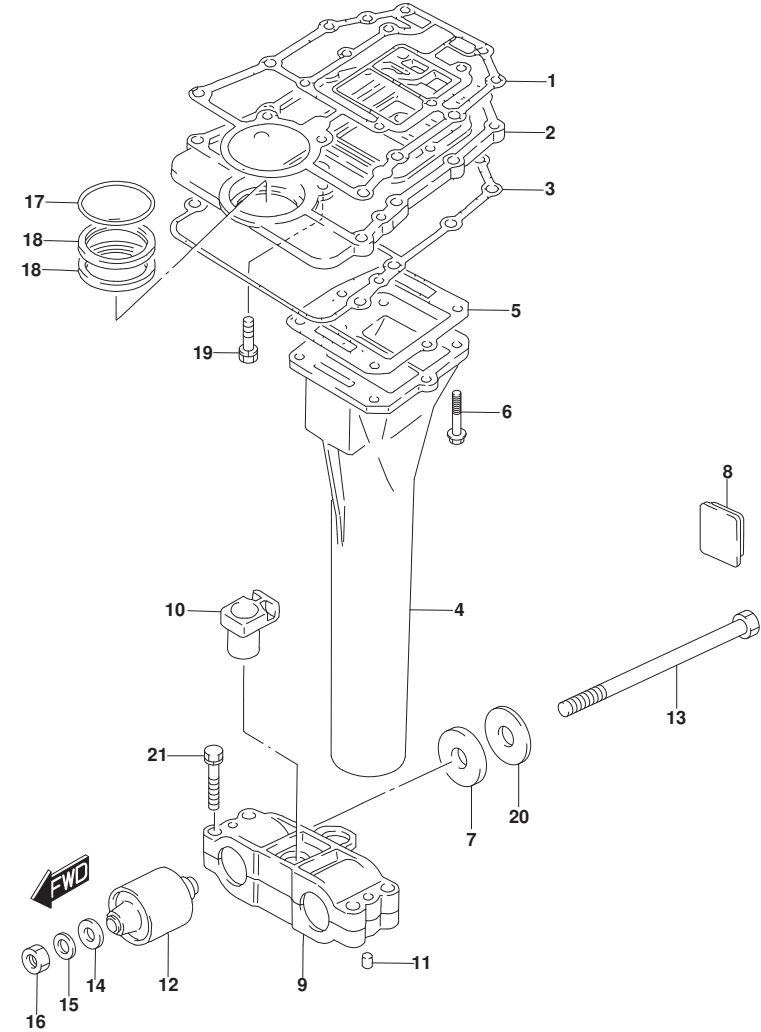


DT40W_P40_017_141C
EXHAUST TUBE

FIG.141C (1-D-7) EXHAUST TUBE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(L)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	W/TRANSOM(L2)
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_017

FIG.141D

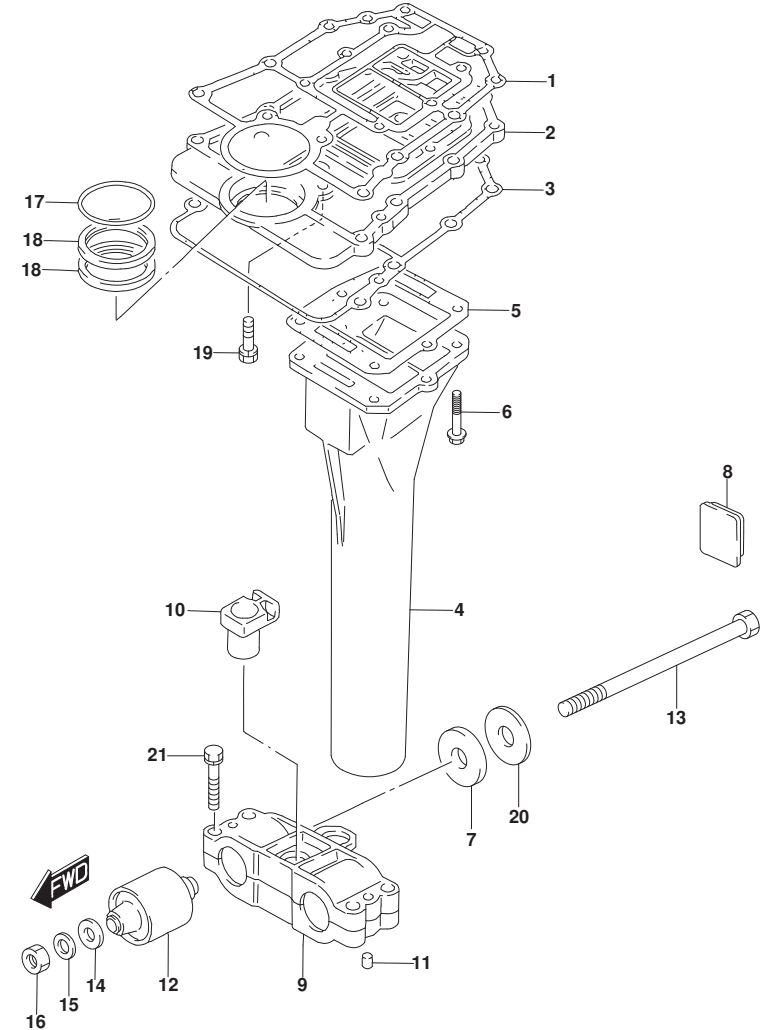


DT40W_P40_017_141D
EXHAUST TUBE

FIG.141D (1-D-8) EXHAUST TUBE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_017

FIG.141E

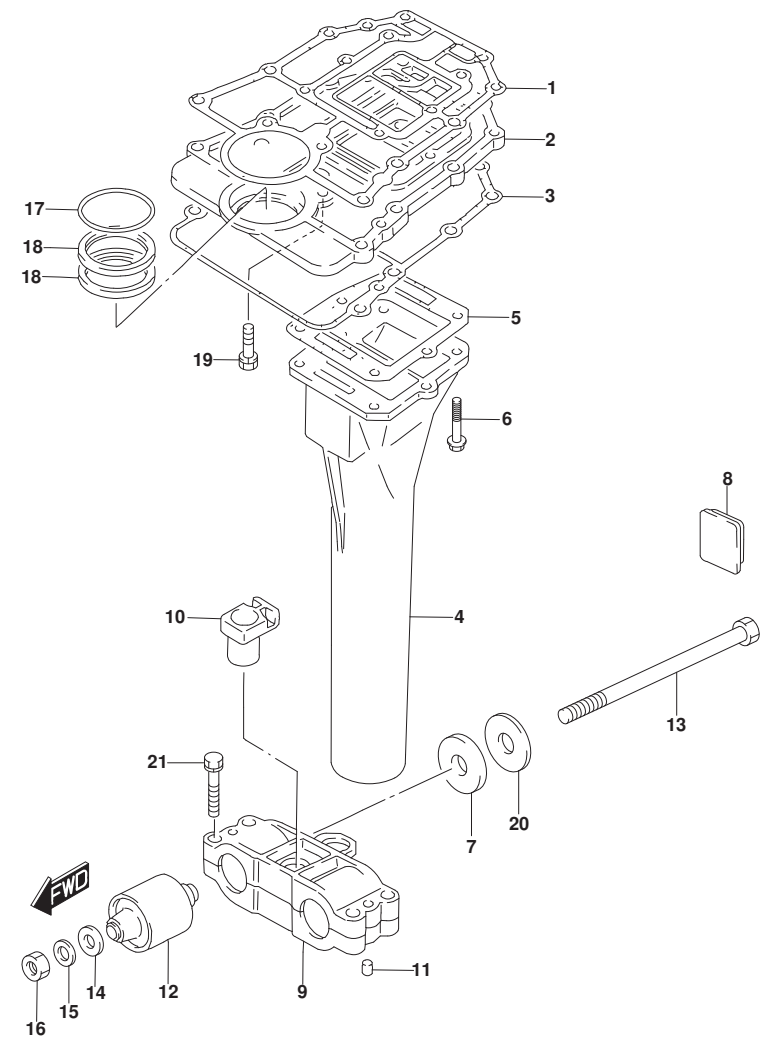

DT40W_P40_017_141E
EXHAUST TUBE

FIG.141E (1-D-9) EXHAUST TUBE (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	11433-92L00	GASKET, UNDER OIL SEAL	1	
2	11431-92L00	HOUSING, UNDER OIL SEAL	1	
3	11434-92L00	GASKET, UNDER OIL SEAL LOWER	1	
4-1	14211-94451	TUBE, EXHAUST	1	W/TRANSOM(S) W/TRANSOM(L) W/TRANSOM(L2)
4-2	14211-92L20	TUBE, EXHAUST (L2)	1	
5	14212-94413	GASKET, EXHAUST TUBE	1	
6	09116-06234	BOLT (6X35)	6	
7	54121-94401	STOPPER, UPPER THRUST	2	
8	54125-94400	MOUNT, UPPER THRUST REVERSE	1	
9	54137-92L10	CASE, UPPER MOUNT	2	
10	54146-94400	GUIDE, UPPER MOUNT CASE	1	
11	09202-07001	PIN (7X10)	2	
12	54130-92L00	MOUNT, UPPER	2	
13	09100-10321	BOLT (10X150)	2	
14	09160-10148	WASHER (10X20X3)	2	
15	09160-10082	WASHER (10.5X19X2)	2	
16	09159-10050	NUT	2	
17	09280-50008	O RING (D:3.1, ID:49.4)	1	
18	09282-17009	OIL SEAL (17X28X6)	2	
19	09116-06228	BOLT (6X20)	2	
20	09160-10080	WASHER (10.2X44X3)	2	
21	09116-08155	BOLT (8X45)	4	

DT40W_P40_017

FIG.146A

FIG.146A (1-D-10) FUEL PUMP (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94311	PUMP, FUEL	1	
2	15170-94320	.DIAPHRAGM SET	1	
3	15183-94301	.SCREW	2	
4	15186-94300	.NUT	2	
5	15851-94300	.SCREW	3	
6	15321-99710	GASKET, FUEL PUMP	1	
7	15410-94400	FILTER ASSY, FUEL	1	
8	15413-87D10	.CUP	1	
9	15430-87D10	.ELEMENT SET	1	
10	15211-91J00-110	HOSE, FUEL (PUMP TO CARB)	1	
11	15211-91J00-135	HOSE, FUEL (FILTER TO PUMP)	1	
12	15211-91J00-400	HOSE, FUEL (CONNECTOR TO FILTER)	1	
13	09401-08413	CLIP	6	
14	29404-93J10	CLAMP	1	
15	01547-06407	BOLT	2	
16	08316-10087	NUT	1	

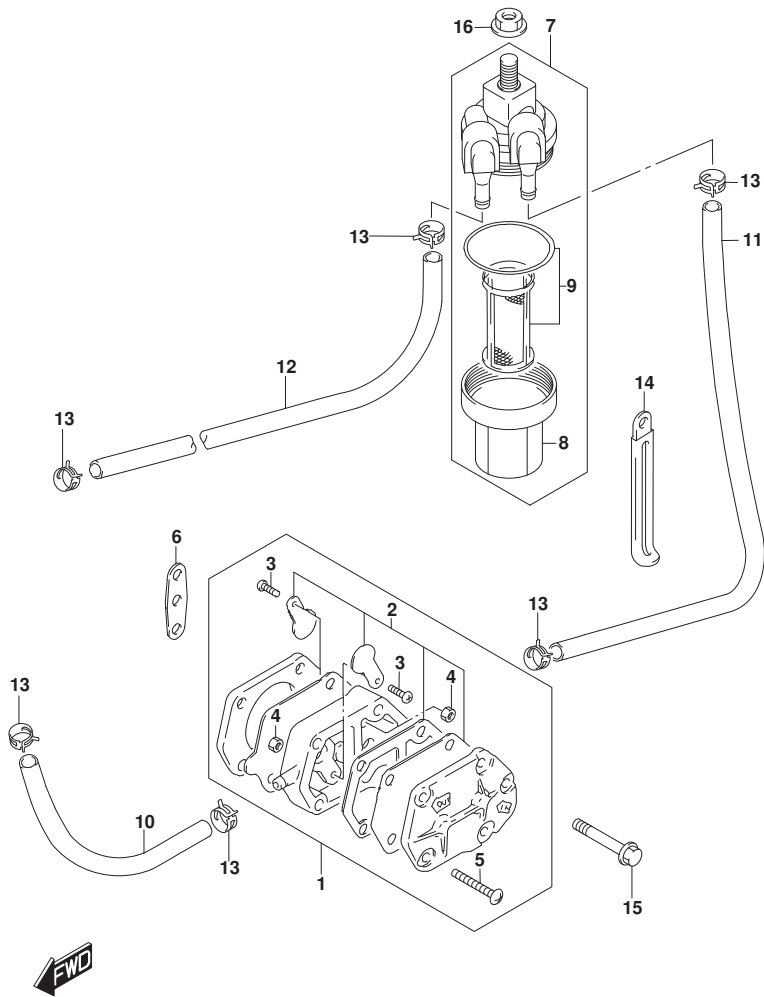


FIG.146B (1-D-11) FUEL PUMP (DT40W P90)


DT40W_P40_017

FIG.146C

FIG.146C (1-D-12) FUEL PUMP (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94311	PUMP, FUEL	1	
2	15170-94320	.DIAPHRAGM SET	1	
3	15183-94301	.SCREW	2	
4	15186-94300	.NUT	2	
5	15851-94300	.SCREW	3	
6	15321-99710	GASKET, FUEL PUMP	1	
7	15410-94400	FILTER ASSY, FUEL	1	
8	15413-87D10	.CUP	1	
9	15430-87D10	.ELEMENT SET	1	
10	15211-91J00-110	HOSE, FUEL (PUMP TO CARB)	1	
11	15211-91J00-135	HOSE, FUEL (FILTER TO PUMP)	1	
12	15211-91J00-400	HOSE, FUEL (CONNECTOR TO FILTER)	1	
13	09401-08413	CLIP	6	
14	29404-93J10	CLAMP	1	
15	01547-06407	BOLT	2	
16	08316-10087	NUT	1	

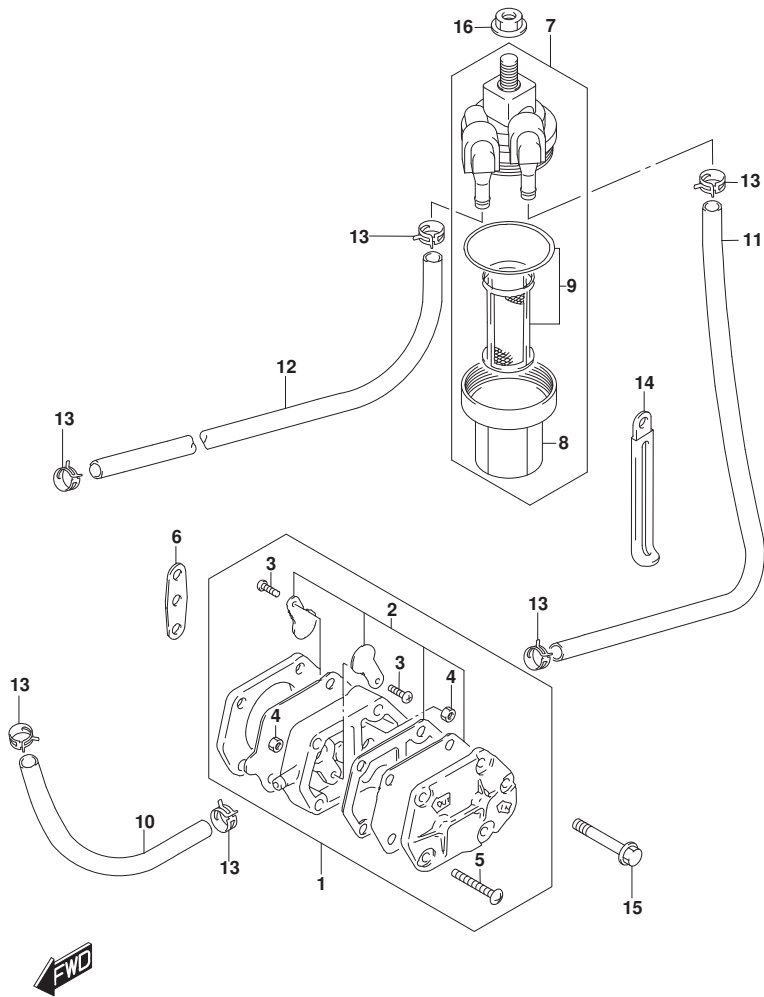


FIG.146D

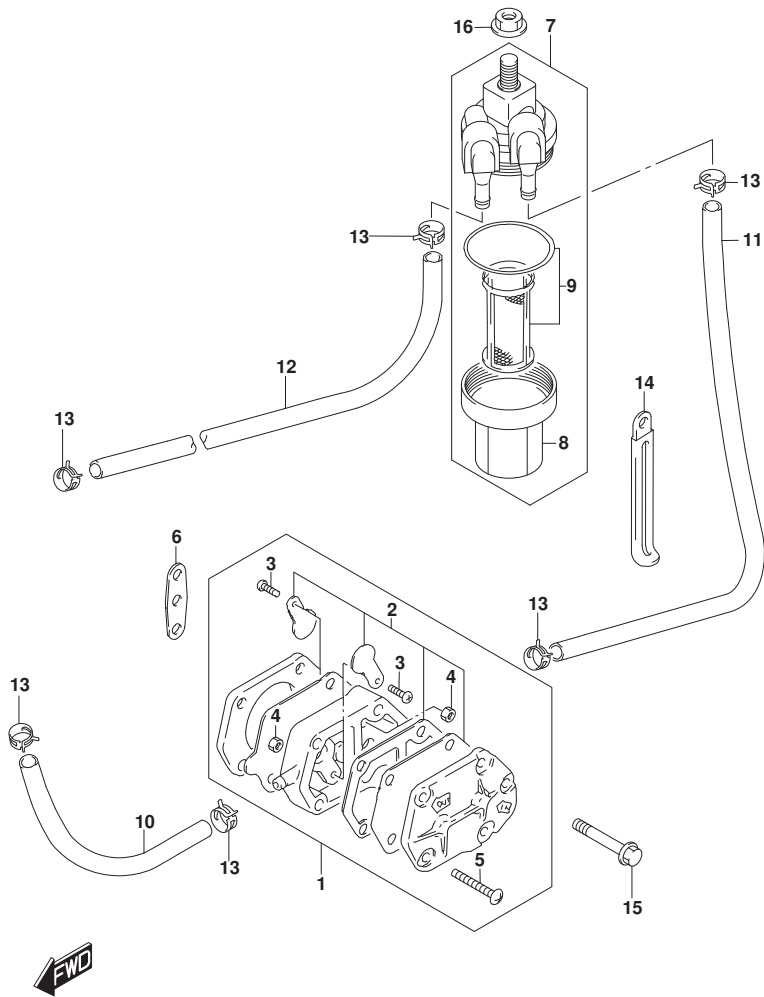


FIG.146D (1-D-13) FUEL PUMP (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	15100-94311	PUMP, FUEL	1	
2	15170-94320	.DIAPHRAGM SET	1	
3	15183-94301	.SCREW	2	
4	15186-94300	.NUT	2	
5	15851-94300	.SCREW	3	
6	15321-99710	GASKET, FUEL PUMP	1	
7	15410-94400	FILTER ASSY, FUEL	1	
8	15413-87D10	.CUP	1	
9	15430-87D10	.ELEMENT SET	1	
10	15211-91J00-110	HOSE, FUEL (PUMP TO CARB)	1	
11	15211-91J00-135	HOSE, FUEL (FILTER TO PUMP)	1	
12	15211-91J00-400	HOSE, FUEL (CONNECTOR TO FILTER)	1	
13	09401-08413	CLIP	6	
14	29404-93J10	CLAMP	1	
15	01547-06407	BOLT	2	
16	08316-10087	NUT	1	

FIG.146E (1-D-14) FUEL PUMP (DT40WK P40)

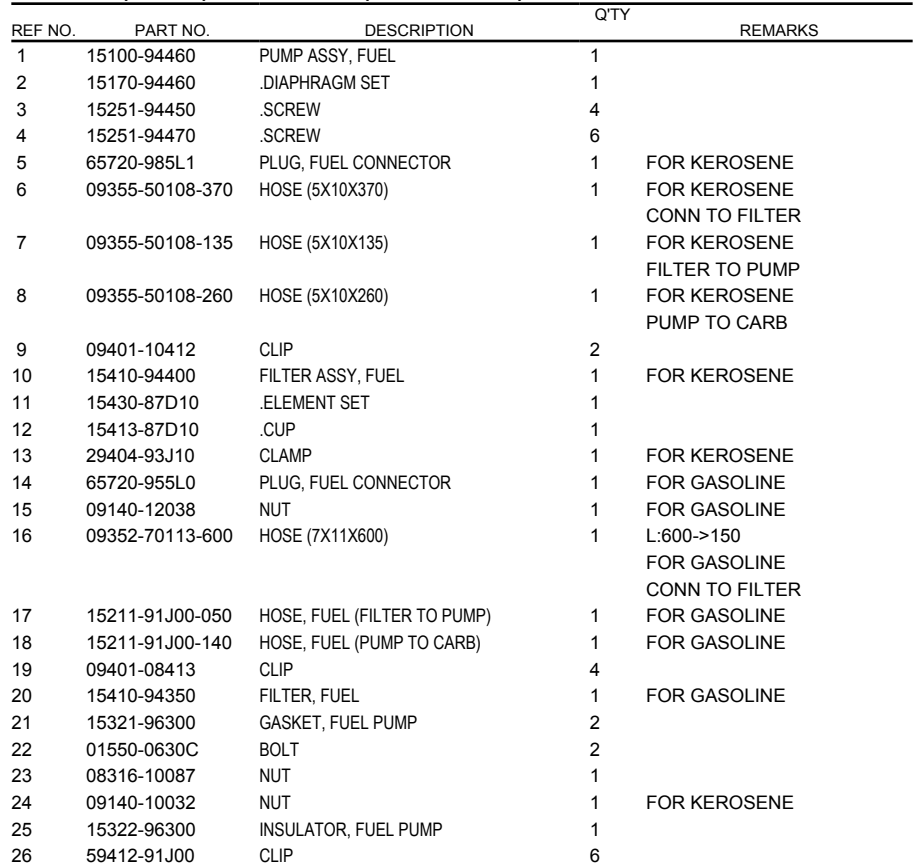


FIG.160A (1-D-15) WATER PUMP (DT40W P40)

DT40W_P40_017

FIG.160B (1-E-2) WATER PUMP (DT40W P90)

DT40W_P40_017

FIG.160C

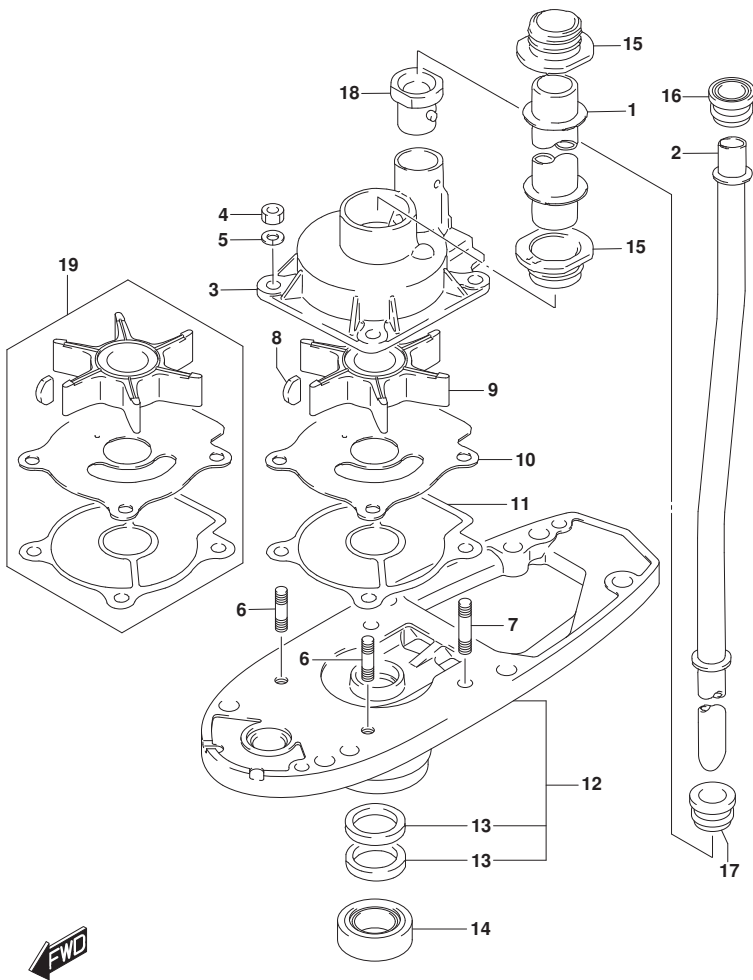


FIG.160C (1-E-3) WATER PUMP (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	17431-92L20	TUBE, WATER PUMP SEAL (L)	1	W/TRANSOM(L) L:126
1-2	17431-92L00	TUBE, WATER PUMP SEAL (L2)	1	W/TRANSOM(L2) L:173
2-1	17561-92L60	TUBE, WATER (L)	1	W/TRANSOM(L) L:446
2-2	17561-92L70	TUBE, WATER (L2)	1	W/TRANSOM(L2) L:493
3	17410-92L00	CASE, WATER PUMP	1	
4	29141-93J00	NUT	4	
5	29162-93J00	LOCK WASHER	4	
6	09108-06060	STUD BOLT	2	
7	09108-06061	STUD BOLT	2	
8	09420-04006	KEY	1	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-92L00	PANEL, PUMP CASE UNDER	1	
11	17472-96303	GASKET, PUMP CASE UNDER	1	
12	56130-92L20-YAY	HOUSING, DRIVE SHAFT BEARING (BLACK)	1	
13	09282-17L01	.OIL SEAL (17X32X6)	2	
14	09265-20015	BEARING (20X42X15)	1	
15	17432-96300	GROMMET, WATER PUMP SEAL TUBE	2	
16	17563-94400	GROMMET, WATER TUBE, UPPER	1	
17	17565-94400	GROMMET, WATER TUBE, MIDDLE	1	
18	17566-94400	GROMMET, WATER TUBE, LOWER	1	
19	17400-94412	KIT, WATER PUMP REPAIR	1	OPT

FIG.160D (1-E-4) WATER PUMP (DT40WR P90)

DT40W_P40_017

FIG.160E

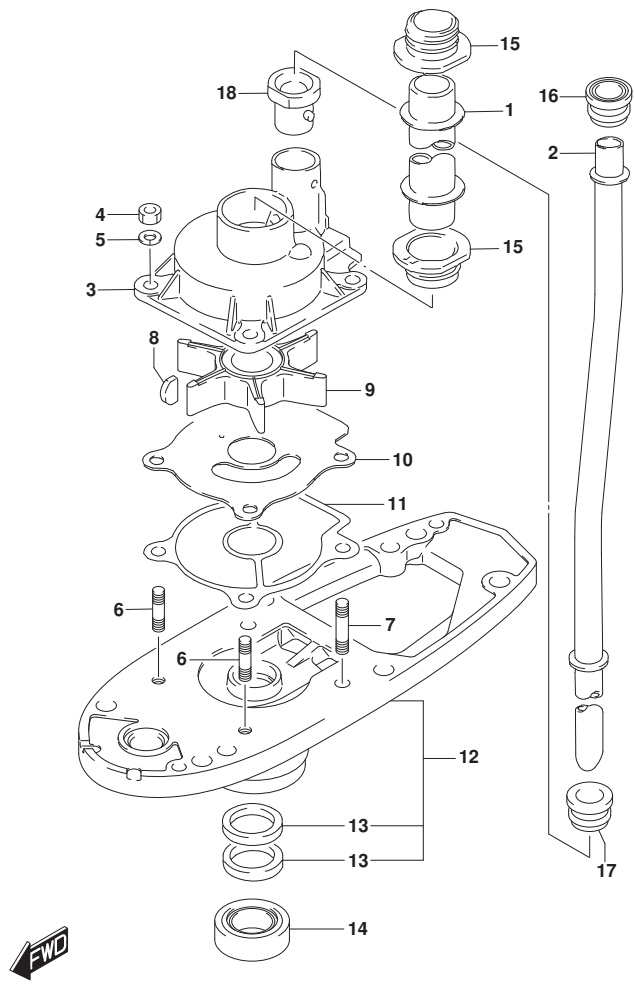


FIG.160E (1-E-5) WATER PUMP (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	17431-92L10	TUBE, WATER PUMP SEAL (S)	1	W/TRANSOM(S) L:21
1-2	17431-92L20	TUBE, WATER PUMP SEAL (L)	1	W/TRANSOM(L) L:126
1-3	17431-92L00	TUBE, WATER PUMP SEAL (L2)	1	W/TRANSOM(L2) L:173
2-1	17561-92L50	TUBE, WATER (S)	1	W/TRANSOM(S) L:366
2-2	17561-92L60	TUBE, WATER (L)	1	W/TRANSOM(L) L:446
2-3	17561-92L70	TUBE, WATER (L2)	1	W/TRANSOM(L2) L:493
3	17410-92L00	CASE, WATER PUMP	1	
4	29141-93J00	NUT	4	
5	29162-93J00	LOCK WASHER	4	
6	09108-06060	STUD BOLT	2	
7	09108-06061	STUD BOLT	2	
8	09420-04006	KEY	1	
9	17461-96312	IMPELLER, WATER PUMP	1	
10	17471-92L00	PANEL, PUMP CASE UNDER	1	
11	17472-96303	GASKET, PUMP CASE UNDER	1	
12	56130-92L20-YAY	HOUSING, DRIVE SHAFT BEARING (BLACK)	1	
13	09282-17L01	.OIL SEAL (17X32X6)	2	
14	09265-20015	BEARING (20X42X15)	1	
15	17432-96300	GROMMET, WATER PUMP SEAL TUBE	2	
16	17563-94400	GROMMET, WATER TUBE, UPPER	1	
17	17565-94400	GROMMET, WATER TUBE, MIDDLE	1	
18	17566-94400	GROMMET, WATER TUBE, LOWER	1	

FIG.166A

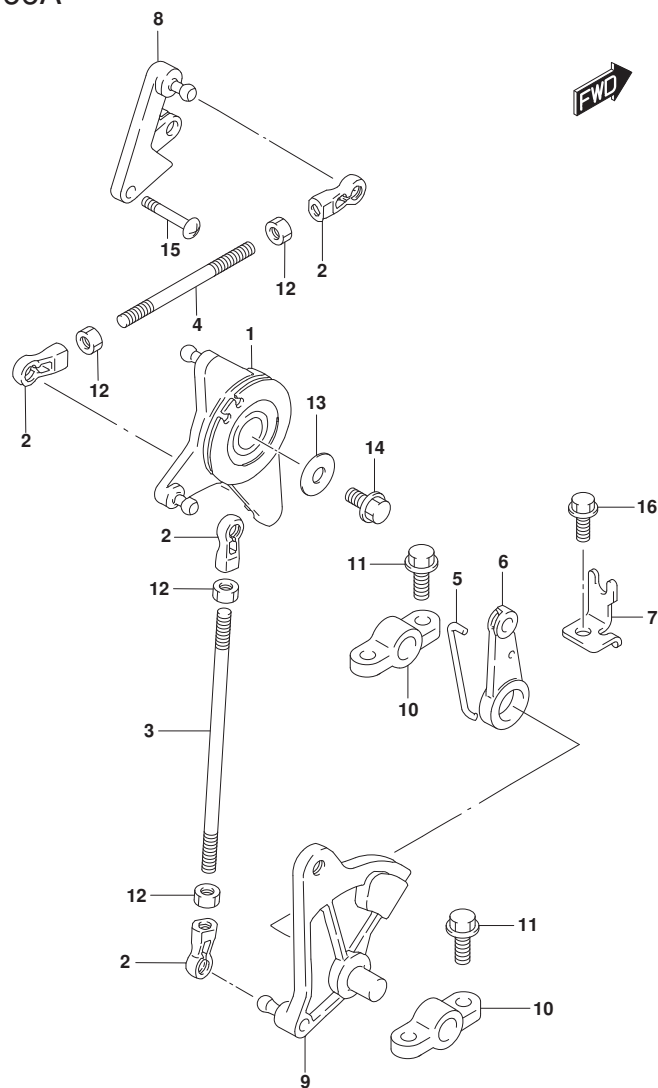


FIG.166A (1-E-6) THROTTLE CONTROL (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09116-06227	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-0612C	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-0612C	BOLT	1	

FIG.166B

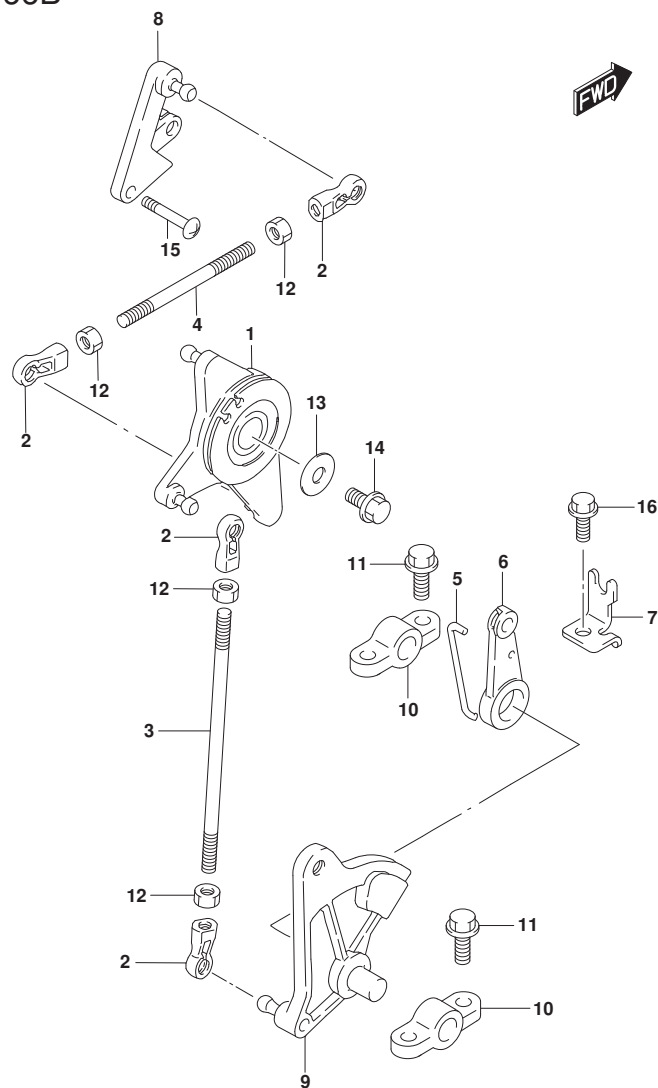


FIG.166B (1-E-7) THROTTLE CONTROL (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09116-06227	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-0612C	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-0612C	BOLT	1	

FIG.166C

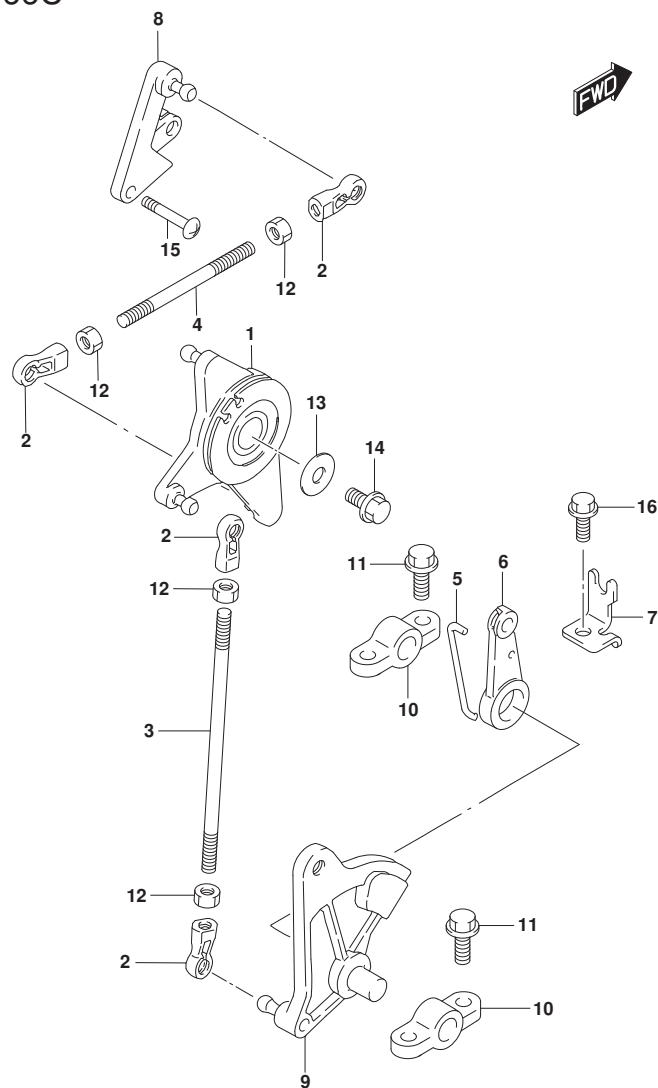


FIG.166C (1-E-8) THROTTLE CONTROL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09116-06227	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-0612C	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-0612C	BOLT	1	

FIG.166D

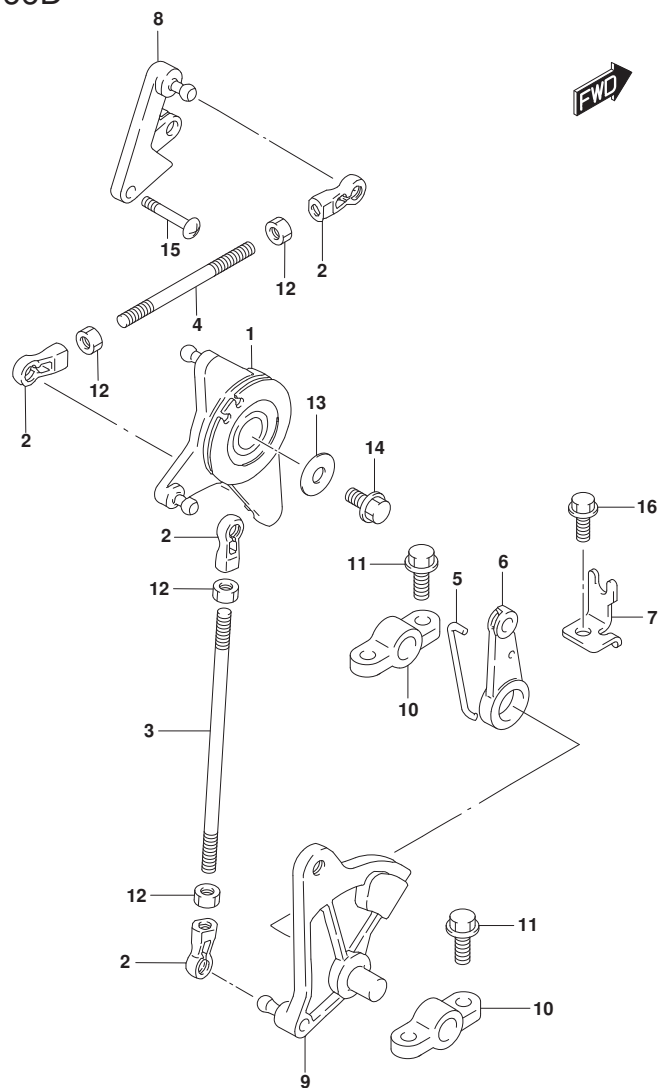


FIG.166D (1-E-9) THROTTLE CONTROL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	4	
3	19135-94400	ROD (LEVER TO LIMITER)	1	
4	19136-95510	ROD, THROTTLE	1	
5	19654-94421	ROD (CLUTCH TO NSI LEVER)	1	
6	19851-94401	LEVER, NSI	1	
7	19861-92L00	STAY, NSI CABLE	1	
8	19522-94400	LEVER, THROTTLE	1	
9	19811-94400	LIMITER, THROTTLE	1	
10	19815-94400	HOLDER, THROTTLE LIMITER	2	
11	09116-06227	BOLT (6X20)	4	
12	09140-05005	NUT	4	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-0612C	BOLT	1	
15	02142-05307	SCREW	1	
16	01550-0612C	BOLT	1	

FIG.166E

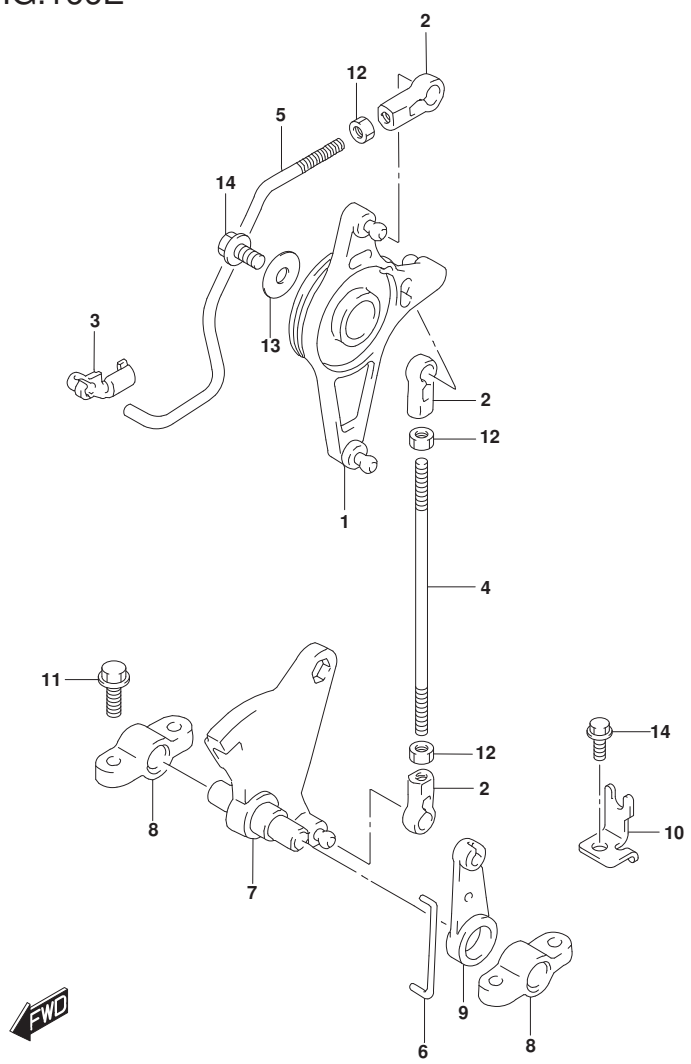


FIG.166E (1-E-10) THROTTLE CONTROL (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	19121-94400	LEVER, THROTTLE CONTROL	1	
2	19131-95502	CONNECTOR	3	
3	19132-96300	CONNECTOR, THROTTLE ROD	1	
4	19135-94400	ROD (LEVER TO LIMITER)	1	
5	19136-94451	ROD, THROTTLE	1	
6	19654-94421	ROD (CLUTCH TO NSI)	1	
7	19811-94400	LIMITER, THROTTLE	1	
8	19815-94400	HOLDER, THROTTLE LIMITER	2	
9	19851-94401	LEVER, NSI	1	
10	19861-92L00	STAY, NSI CABLE	1	
11	09116-06227	BOLT (6X20)	4	
12	09140-05005	NUT	3	
13	09160-06084	WASHER (6.5X18X1.6)	1	
14	01550-0612C	BOLT	2	

FIG.167A

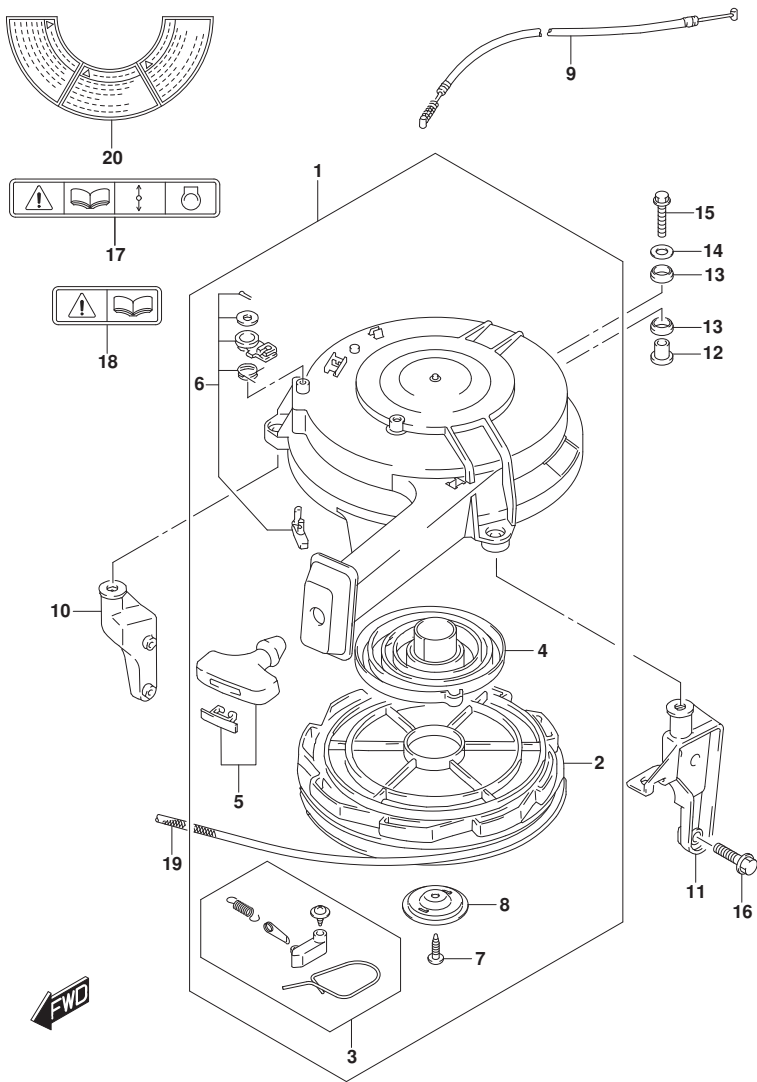


FIG.167A (1-E-11) RECOIL STARTER

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	18100-92L10	STARTER ASSY, RECOIL	1	
2	18120-96320	.REEL	1	
3	18130-91L00	.RATCHET SET	1	
4	18142-96300	.SPRING, SPIRAL	1	
5	18210-93002	.GRIP	1	
6	18280-96320	.NSI SET	1	
7	18132-89L00	.SCREW	1	
8	18151-96310	.PLATE, FRICTION	1	
9	18290-92L00	CABLE, NSI	1	
10	18711-92L10	BRACE, STBD	1	
11	18721-92L10	BRACE, PORT	1	
12	09180-08169	SPACER (8.6X12X17)	3	
13	09320-12059	CUSHION	6	
14	09160-08124	WASHER (8.5X20X1.6)	3	
15	01550-08357	BOLT	3	
16	01550-0625C	BOLT	4	
17	69711-93E10	LABEL, CAUTION (S.I.G.P.)	1	
18	69712-93E10	LABEL, CAUTION (S.I.G.P.)	1	
19	99000-81159-50M	ROPE (L:50000)	1	OPT L:50000->1750
20	61472-94J00	LABEL, RECOIL STARTER	1	

FIG.201A


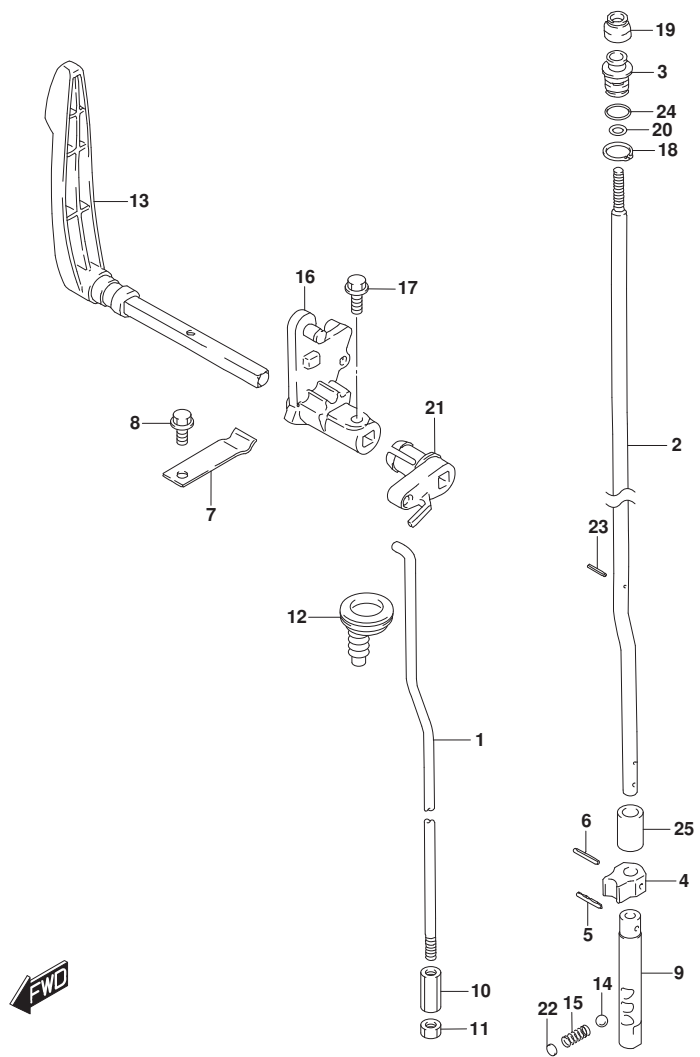


FIG.201A (1-E-12) CLUTCH (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-0612C	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.201B

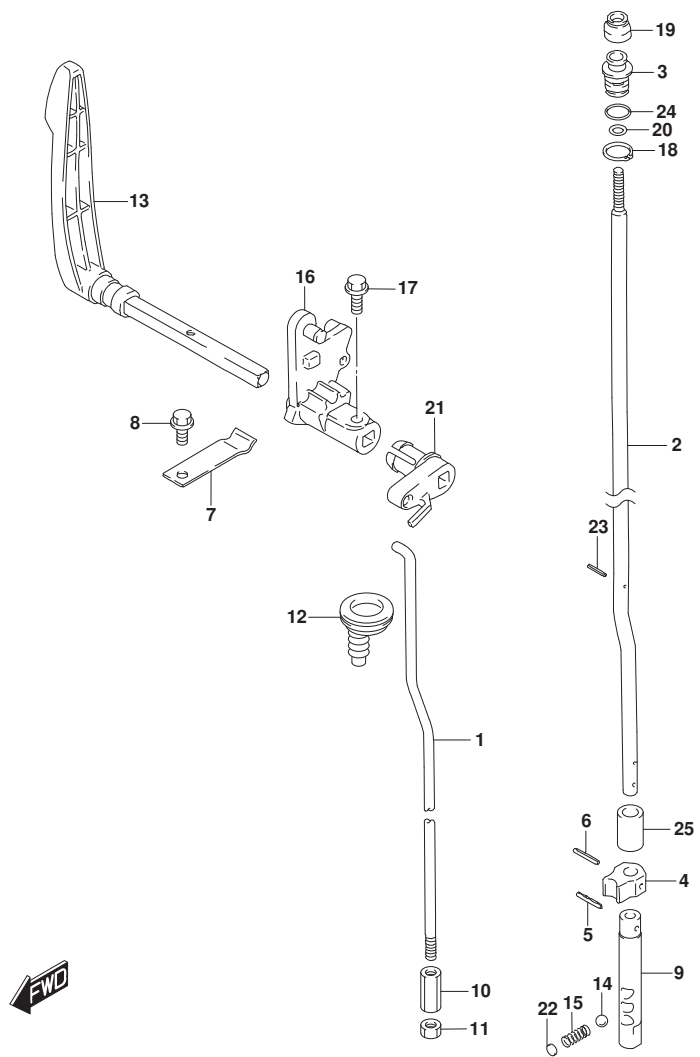

DT40W_P40_017_201B
CLUTCH

FIG.201B (1-E-13) CLUTCH (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-0612C	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

DT40W_P40_017

FIG.201C

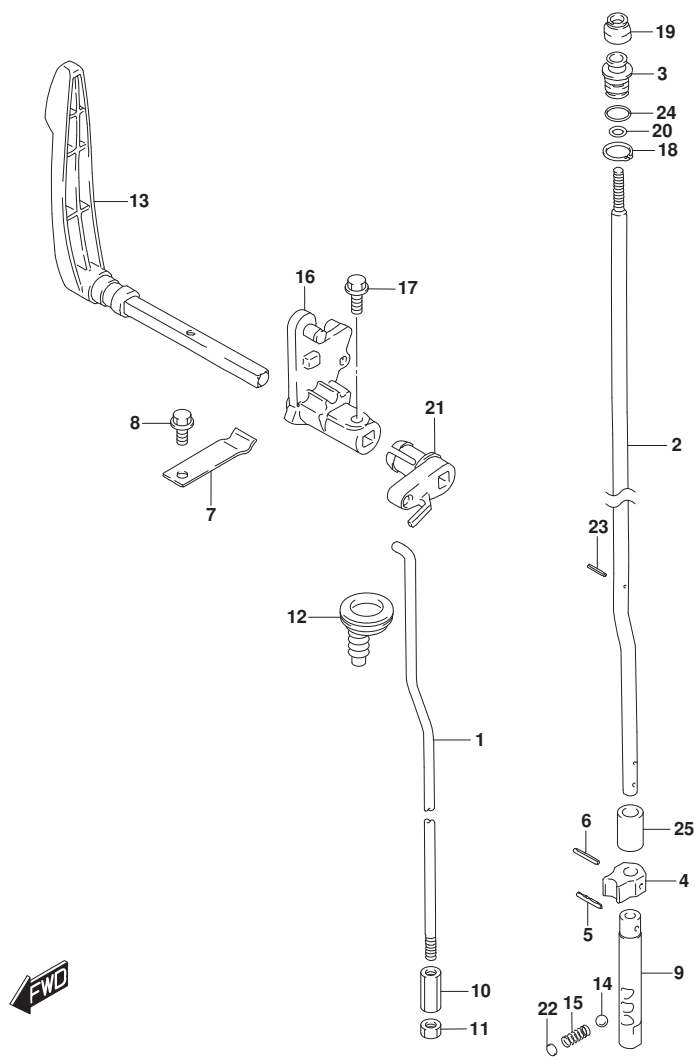


FIG.201C (1-E-14) CLUTCH (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-2	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-0612C	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.201D

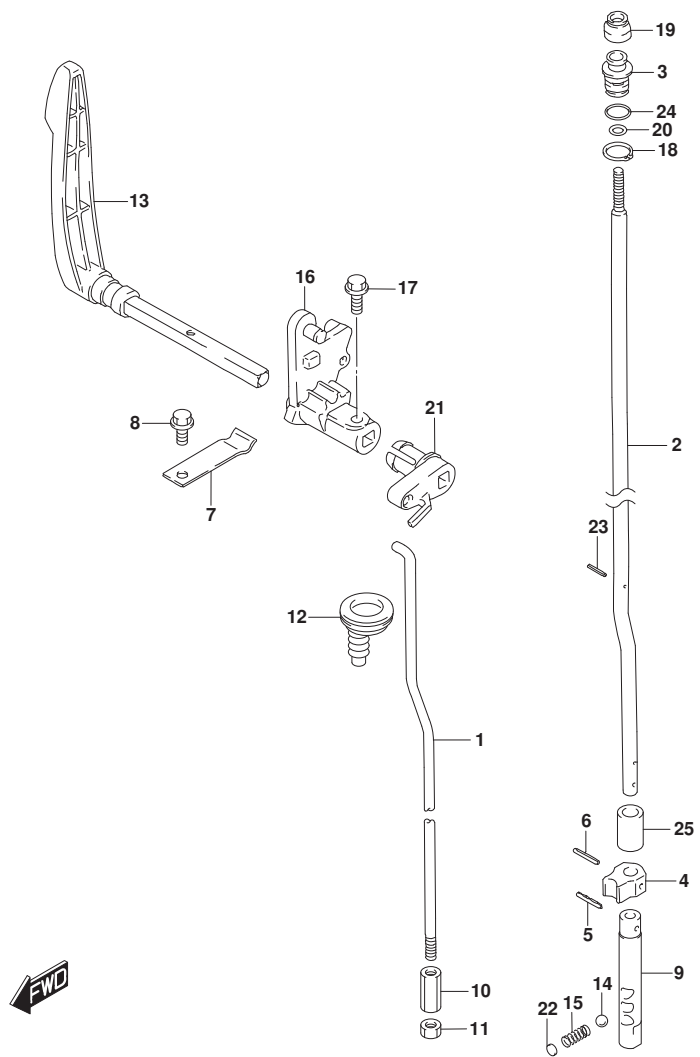


FIG.201D (1-E-15) CLUTCH (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-0612C	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.201E


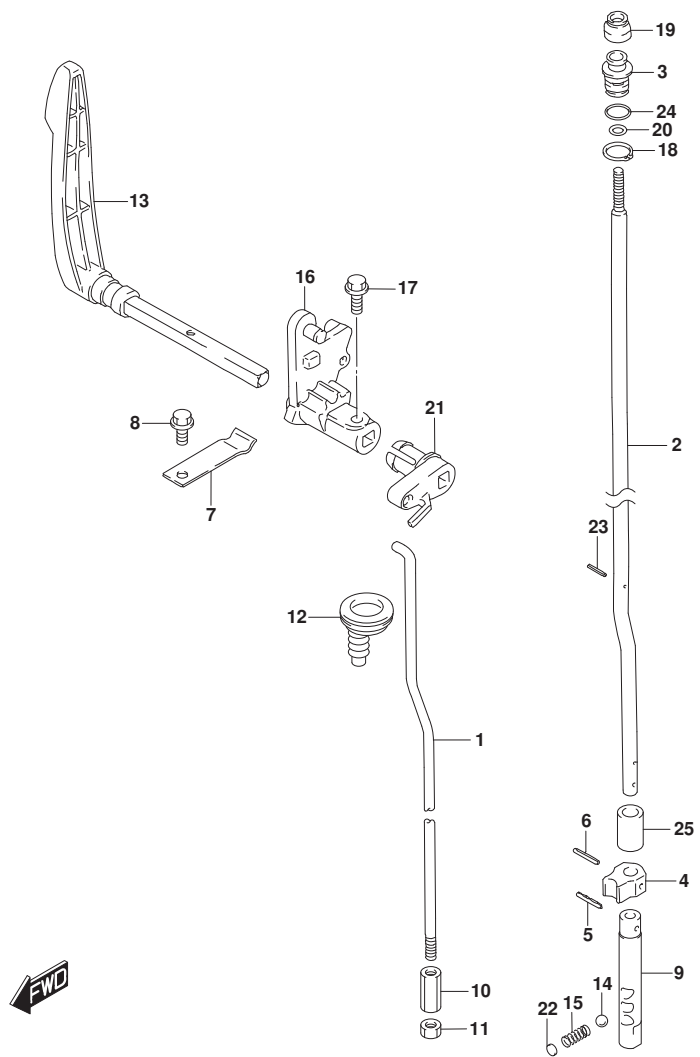


FIG.201E (1-F-2) CLUTCH (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	23111-92L00	ROD, CLUTCH	1	
2-1	25111-92L50	ROD, SHIFT (S)	1	W/TRANSOM(S)
2-2	25111-92L60	ROD, SHIFT (L)	1	W/TRANSOM(L)
2-3	25111-92L70	ROD, SHIFT (L2)	1	W/TRANSOM(L2)
3	25211-92L00	GUIDE, SHIFT ROD	1	
4	25212-94401	GUIDE, SHIFT ROD LOWER	1	
5	09205-03021	SPRING PIN (3.5X12)	1	
6	09205-02013	SPRING PIN (2.5X16)	1	
7	23213-94400	SPRING, CLUTCH NOTCH	1	
8	01550-0612C	BOLT	1	
9	25311-94402	CAM SHIFT	1	
10	23311-95J00	CONNECTOR, CLUTCH ROD	1	
11	29141-93J00	NUT	1	
12	23131-92L00	BOOT, CLUTCH	1	
13	21110-94402	LEVER, CLUTCH	1	
14	09260-10005	BALL	1	
15	09440-07078	SPRING	1	
16	21121-92L00	PLATE, CLUTCH	1	
17	01550-05167	SCREW	1	
18	08331-3115A	CIRCLIP	1	
19	25223-94400	SEAL, SHIFT ROD	1	
20	09280-08005	O RING (D:1.7,ID:7.7)	1	
21	23211-94401	ARM, CLUTCH ROD	1	
22	21121-93300	PLATE, CLUTCH NOTCH	1	
23	09205-02004	SPRING PIN (2.5X12)	1	
24	09280-11001	O RING (D:2.4,ID:10.8)	1	
25	25232-96302	MAGNET, GEAR CASE	1	

FIG.220A

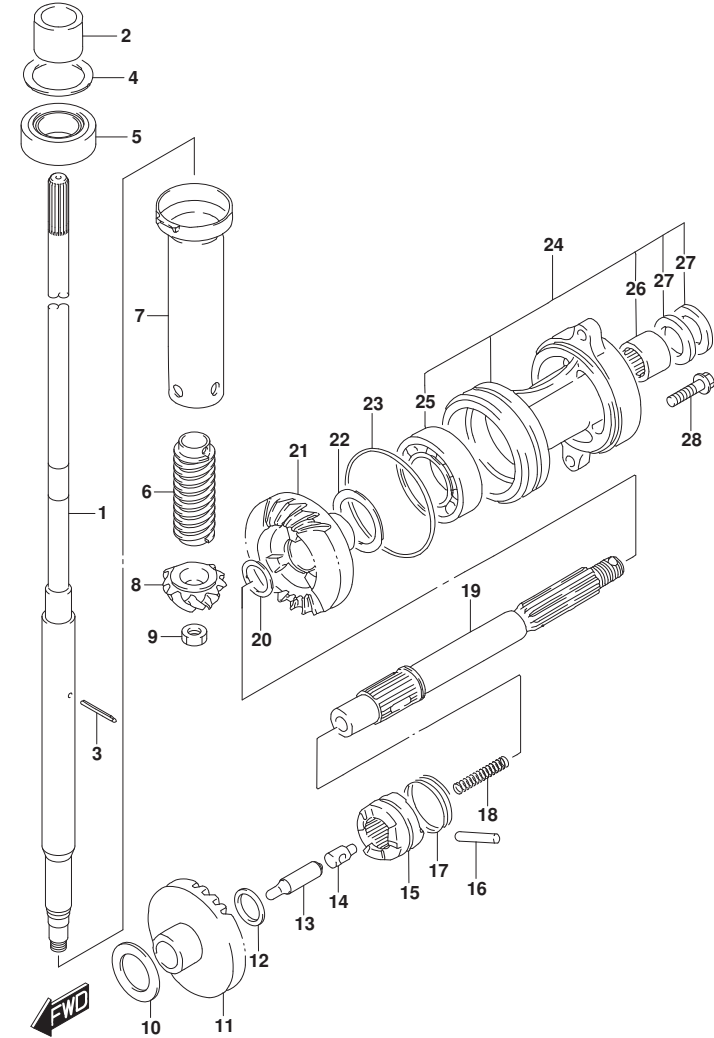

DT40W_P40_017_220A
TRANSMISSION

FIG.220A (1-F-3) TRANSMISSION (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

DT40W_P40_017


This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 28. The assembly sequence is as follows:

- Part 1** (Long shaft) is the central component.
- Part 3** (Pin) is inserted into the shaft near the bottom.
- Part 10** (Cap) is placed over the bottom of the shaft.
- Part 11** (Gear) is mounted on the shaft.
- Part 12** (Washer) is placed between the gear and the cap.
- Part 13** (Pin) is inserted into the gear.
- Part 14** (Pin) is inserted into the gear.
- Part 15** (Housing) is mounted on the shaft.
- Part 16** (Pin) is inserted into the housing.
- Part 17** (Pin) is inserted into the housing.
- Part 18** (Pin) is inserted into the housing.
- Part 19** (Shaft) is inserted into the housing.
- Part 20** (Washer) is placed between the gear and the housing.
- Part 21** (Washer) is placed between the gear and the housing.
- Part 22** (Washer) is placed between the gear and the housing.
- Part 23** (Washer) is placed between the gear and the housing.
- Part 24** (Housing) is mounted on the shaft.
- Part 25** (Washer) is placed between the housing and the shaft.
- Part 26** (Washer) is placed between the housing and the shaft.
- Part 27** (Washer) is placed between the housing and the shaft.
- Part 28** (Pin) is inserted into the housing.
- Part 2** (Cap) is placed over the top of the shaft.
- Part 4** (Washer) is placed between the cap and the shaft.
- Part 5** (Washer) is placed between the cap and the shaft.
- Part 6** (Washer) is placed between the cap and the shaft.
- Part 7** (Housing) is mounted on the shaft.
- Part 8** (Washer) is placed between the housing and the shaft.
- Part 9** (Washer) is placed between the housing and the shaft.

A **FWD** (Forward) arrow is located at the bottom left of the diagram.

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

FIG.220B

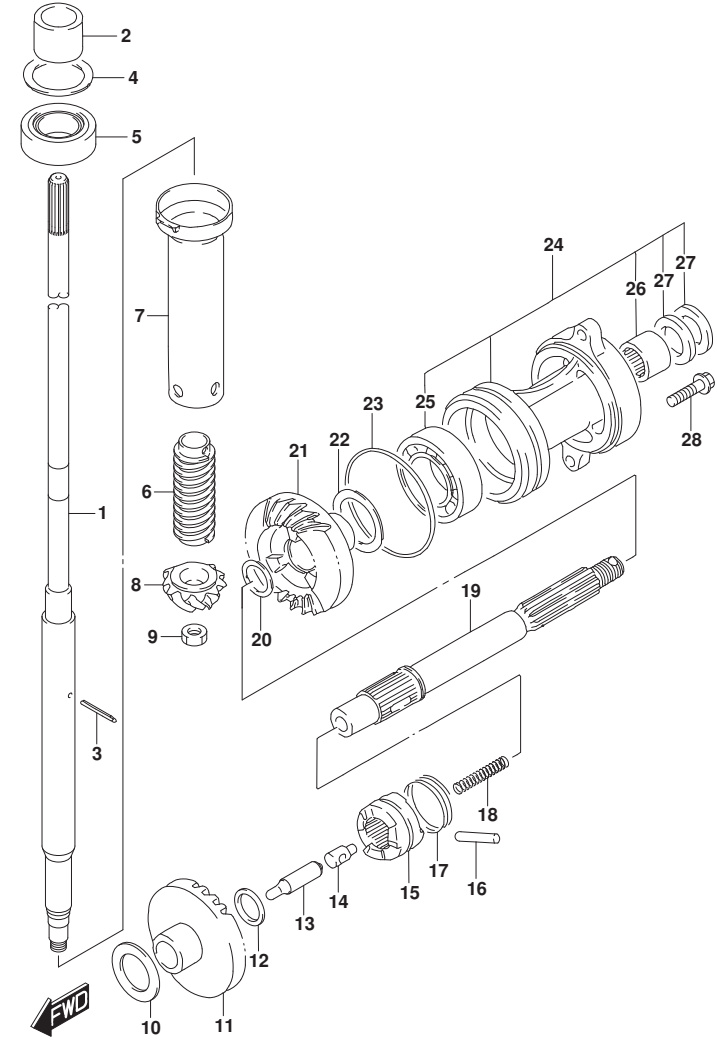


DT40W_P40_017_220B
TRANSMISSION

FIG.220B (1-F-5) TRANSMISSION (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

FIG.220B

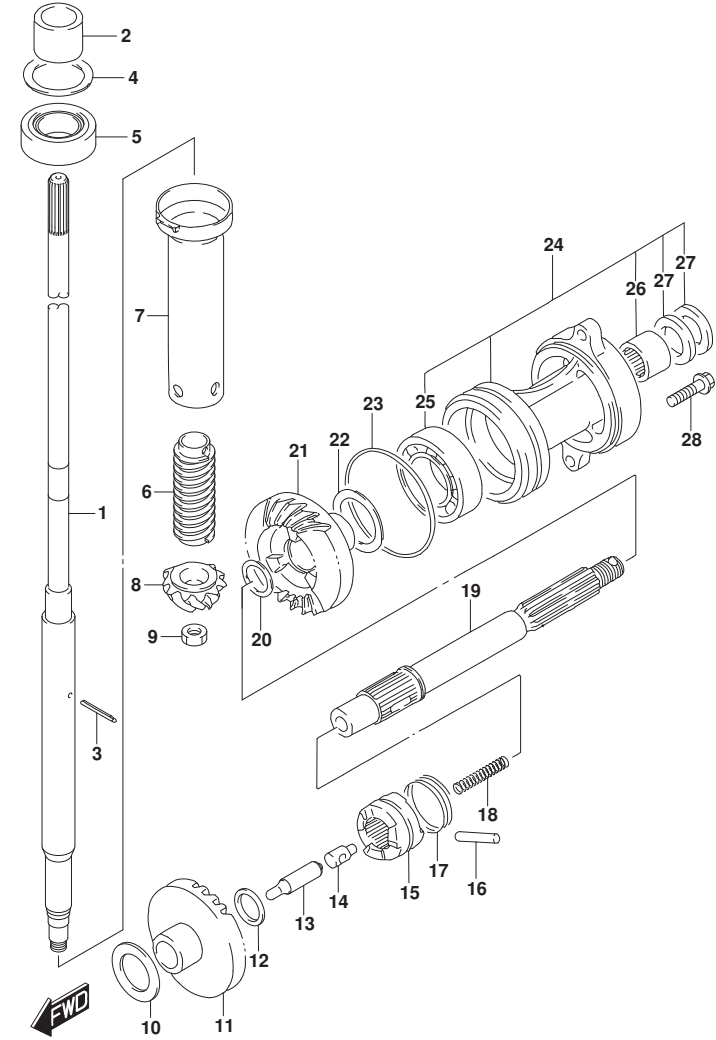

DT40W_P40_017_220B
TRANSMISSION

FIG.220B (1-F-6) TRANSMISSION (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

DT40W_P40_017

FIG.220C


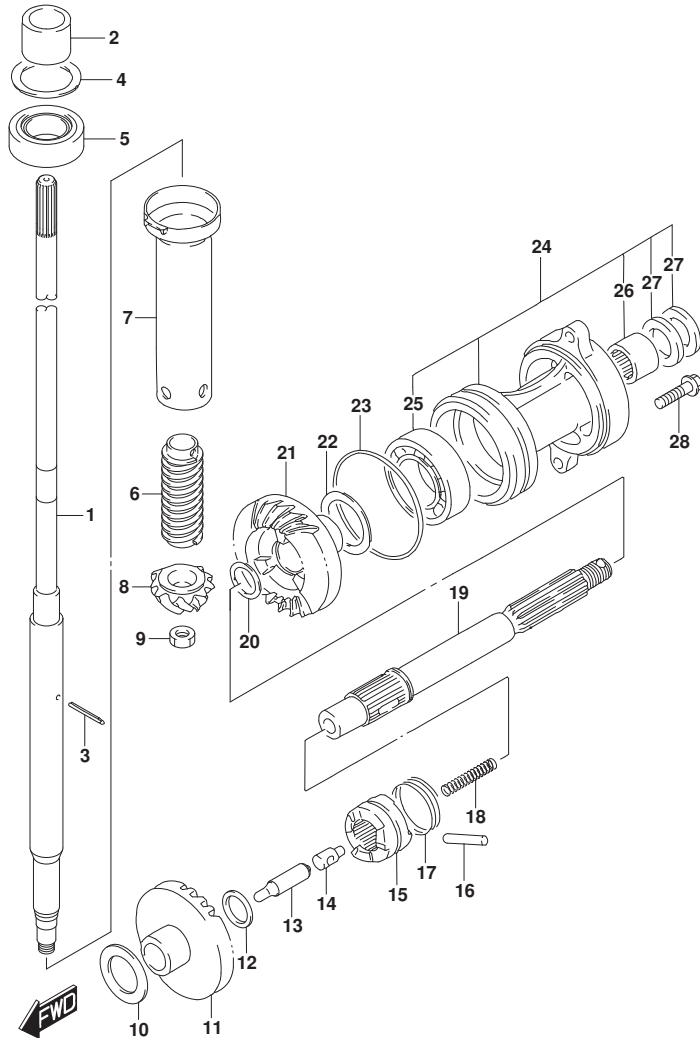


FIG.220C (1-F-7) TRANSMISSION (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-2	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	
18	09440-08043	SPRING	1	

FIG.220C

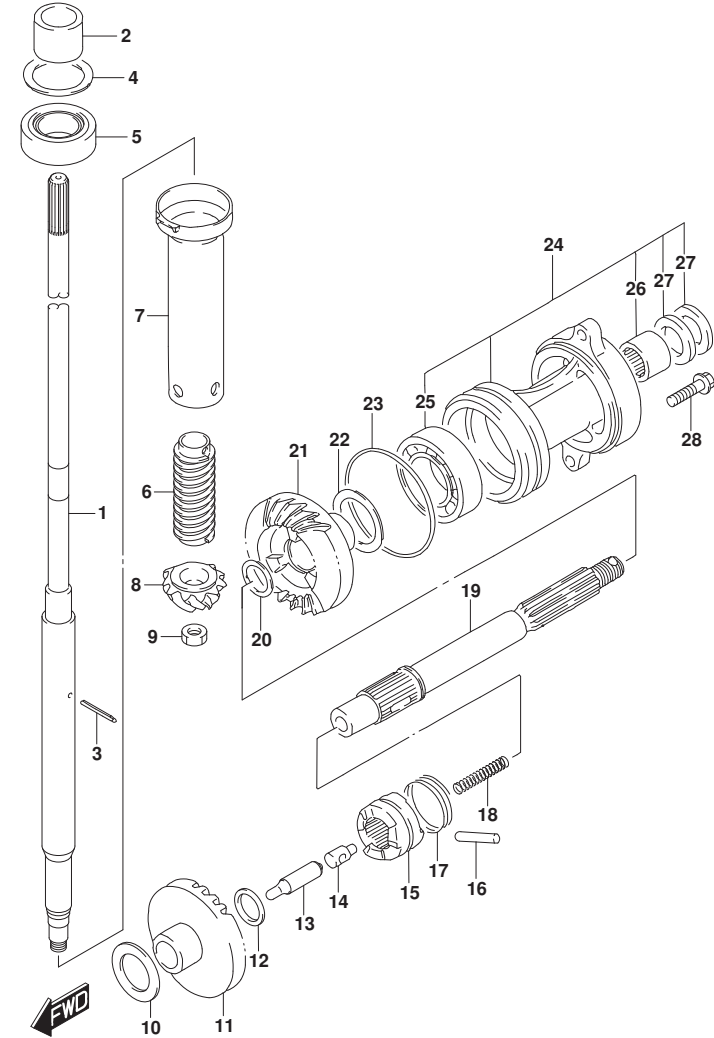


DT40W_P40_017_220C
TRANSMISSION

FIG.220C (1-F-8) TRANSMISSION (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

FIG.220D

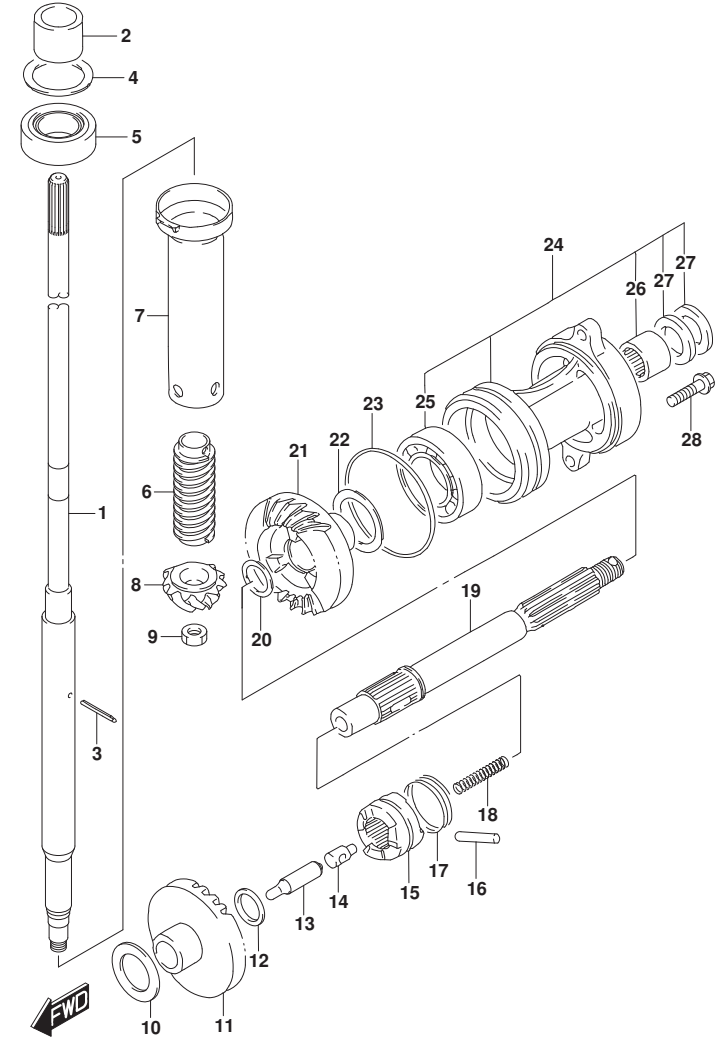


DT40W_P40_017_220D
TRANSMISSION

FIG.220D (1-F-9) TRANSMISSION (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

DT40W_P40_017

FIG.220D

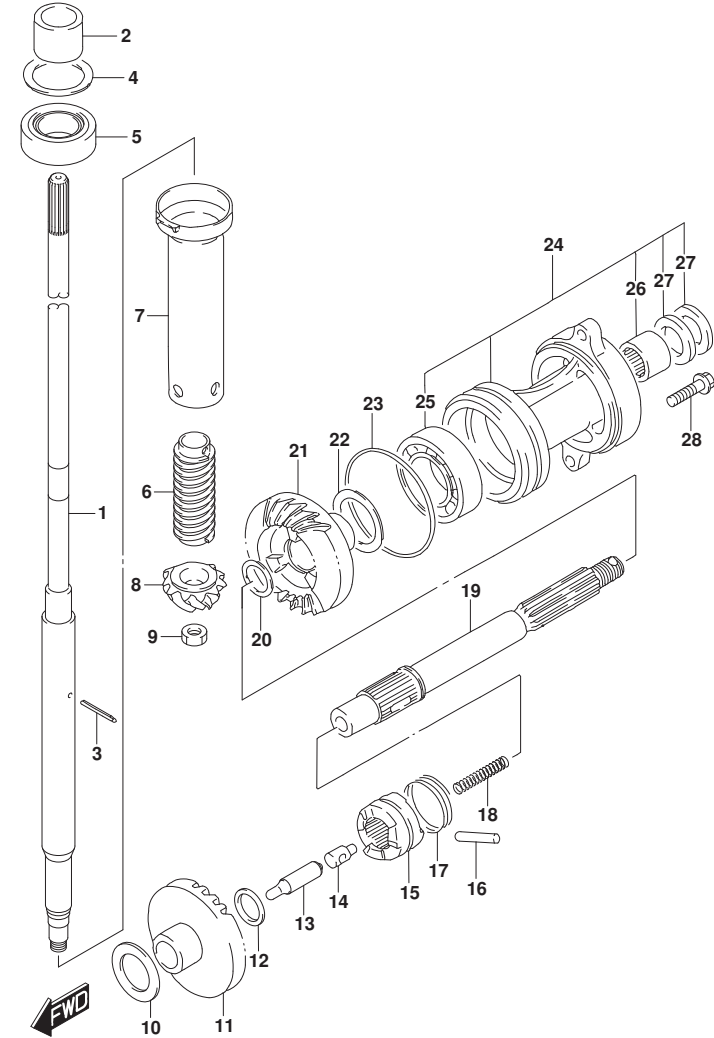


DT40W_P40_017_220D
TRANSMISSION

FIG.220D (1-F-10) TRANSMISSION (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

DT40W_P40_017

FIG.220E

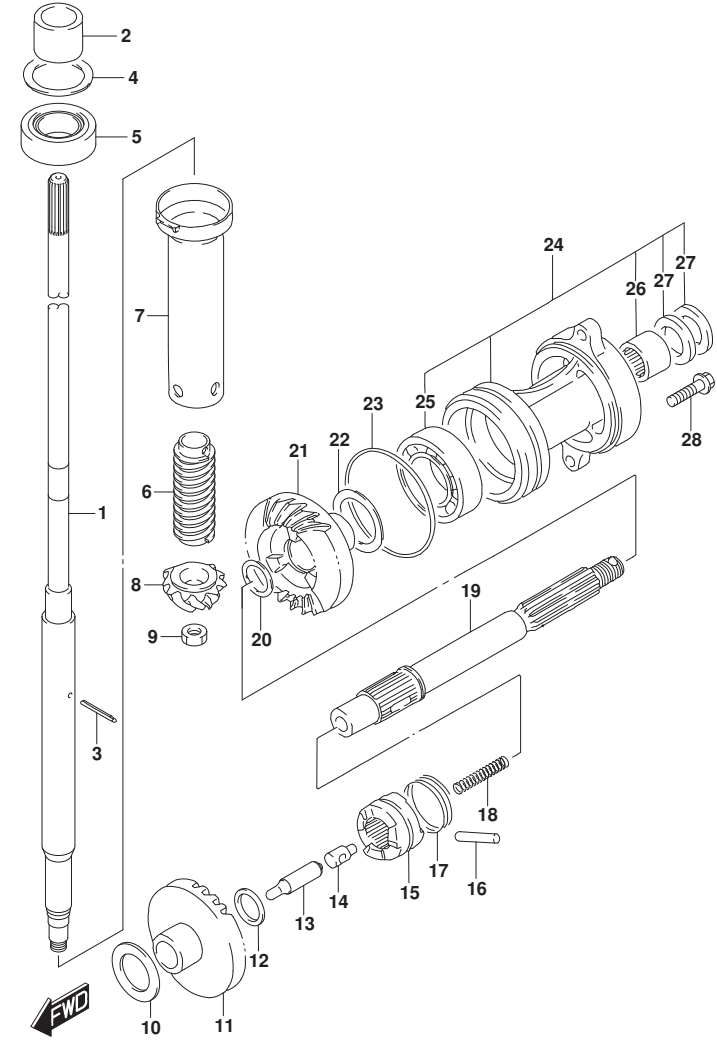


DT40W_P40_017_220E
TRANSMISSION

FIG.220E (1-F-11) TRANSMISSION (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	57110-92L60	SHAFT, DRIVE (S)	1	W/TRANSOM(S)
1-2	57110-92L70	SHAFT, DRIVE (L)	1	W/TRANSOM(L)
1-3	57110-92L50	SHAFT, DRIVE (L2)	1	W/TRANSOM(L2)
2	57130-94301	BUSH, DRIVE SHAFT	1	W/TRANSOM(L) W/TRANSOM(L2)
3	09205-03019	SPRING PIN (3X10)	1	
4-1	09181-35101	SHIM (T:0.50)	AR	
4-2	09181-33001	SHIM (T:0.55)	AR	
4-3	09181-33002	SHIM (T:0.60)	AR	
4-4	09181-33003	SHIM (T:0.65)	AR	
4-5	09181-33004	SHIM (T:0.70)	AR	
4-6	09181-33005	SHIM (T:0.75)	AR	
4-7	09181-33006	SHIM (T:0.80)	AR	
4-8	09181-33007	SHIM (T:0.85)	AR	
4-9	09181-33008	SHIM (T:0.90)	AR	
4-10	09181-33009	SHIM (T:0.95)	AR	
4-11	09181-35110	SHIM (T:1.00)	AR	
5	09265-20015	BEARING (20X42X15)	1	
6	57133-88L01	COLLAR, DRIVE SHAFT	1	
7	57133-92L00	HOUSING, DRIVE SHAFT SPRING	1	
8	57311-94402	PINION (NT:11)	1	
9	09140-12034	NUT	1	
10-1	09181-30186	SHIM (T:0.5)	AR	
10-2	09181-30187	SHIM (T:0.6)	AR	
10-3	09181-30188	SHIM (T:0.7)	AR	
10-4	09181-30190	SHIM (T:0.8)	AR	
10-5	09181-30192	SHIM (T:0.9)	AR	
11	57510-94402	GEAR, FORWARD (NT:23)	1	
12	08211-20263	THRUST WASHER	AR	
13	57631-95303	ROD, PUSH	1	
14	57634-88L00	PIN	1	
15	57621-92L10	SHIFTER, CLUTCH DOG	1	
16	09202-05022	PIN (5.5X38.5)	1	
17	09440-40002	SPRING	1	

DT40W_P40_017

FIG.220E

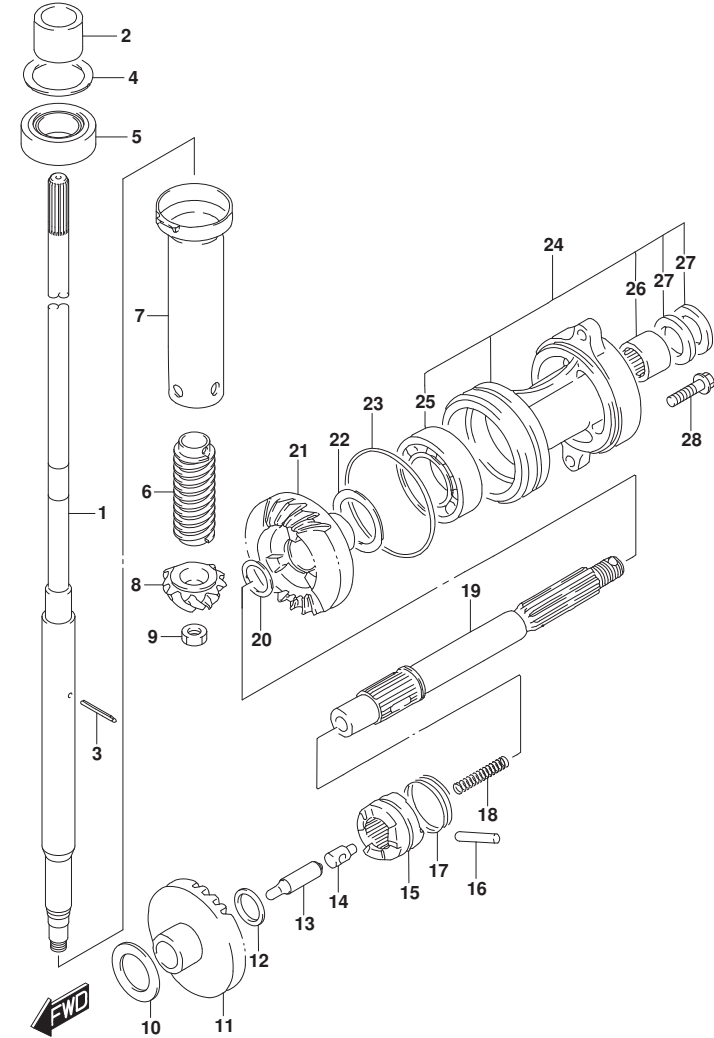

DT40W_P40_017_220E
TRANSMISSION

FIG.220E (1-F-12) TRANSMISSION (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
18	09440-08043	SPRING	1	
19	57610-92L10	SHAFT, PROPELLER	1	
20-1	09160-22018	WASHER (T:1.8)	AR	
20-2	09160-22019	WASHER (T:1.9)	AR	
20-3	09160-22020	WASHER (T:2.0)	AR	
20-4	09160-22021	WASHER (T:2.1)	AR	
20-5	09160-22022	WASHER (T:2.2)	AR	
20-6	09160-22023	WASHER (T:2.3)	AR	
21	57521-94401	GEAR, REVERSE (NT:23)	1	
22-1	08221-35455	SHIM (T:0.5)	AR	
22-2	09181-35131	SHIM (T:0.6)	AR	
22-3	09181-35132	SHIM (T:0.7)	AR	
22-4	08221-35456	SHIM (T:0.8)	AR	
22-5	09181-35136	SHIM (T:0.9)	AR	
22-6	08211-35451	WASHER (T:1.0)	AR	
23	09280-75001	O RING (D:3.3,ID:75)	1	
24	56120-92L10-YAY	HOUSING, PROPELLER SHAFT BRG (BLACK)	1	
25	09262-35070	.BEARING (35X62X14)	1	
26	09263-22020	.BEARING (22.2X28.5X19)	1	
27	09289-22L01	.OIL SEAL (22X35X5)	2	
28	09116-08151	BOLT (8X30)	2	

DT40W_P40_017

FIG.301A

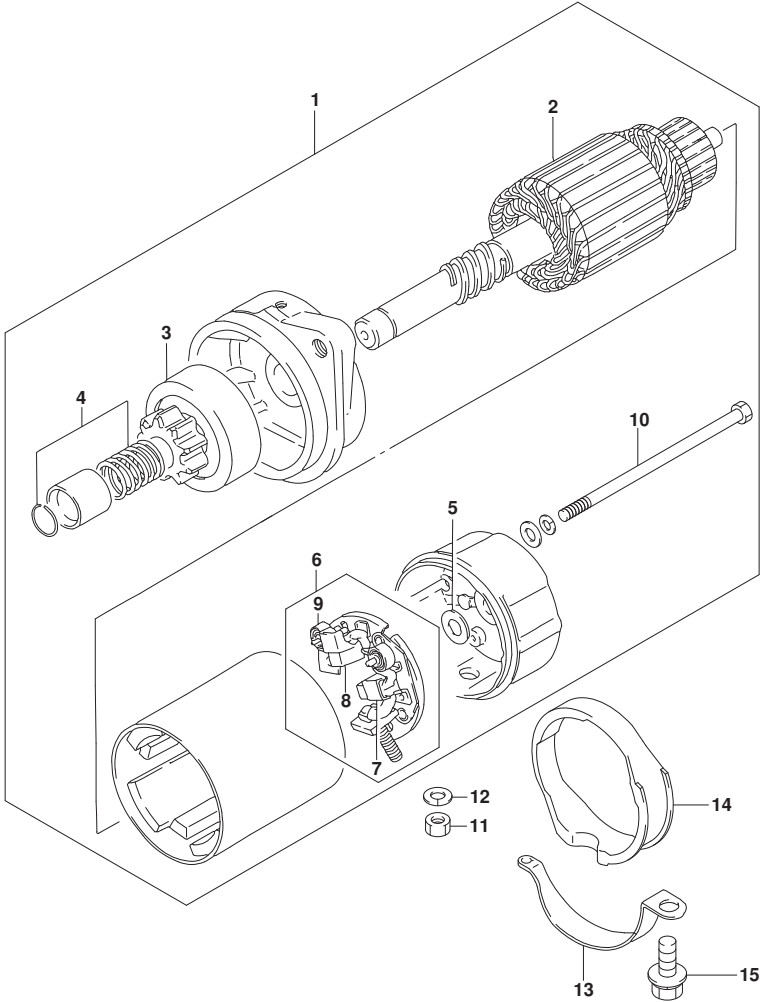


FIG.301A (1-F-13) STARTING MOTOR (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.301B

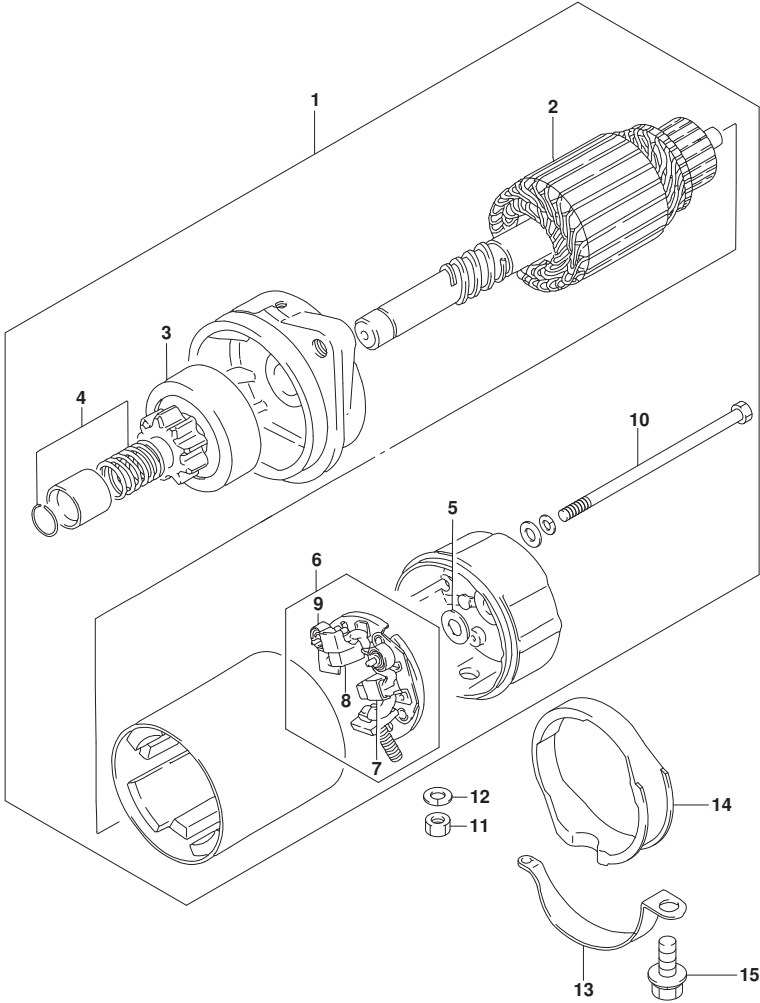


FIG.301B (1-F-14) STARTING MOTOR (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.301C

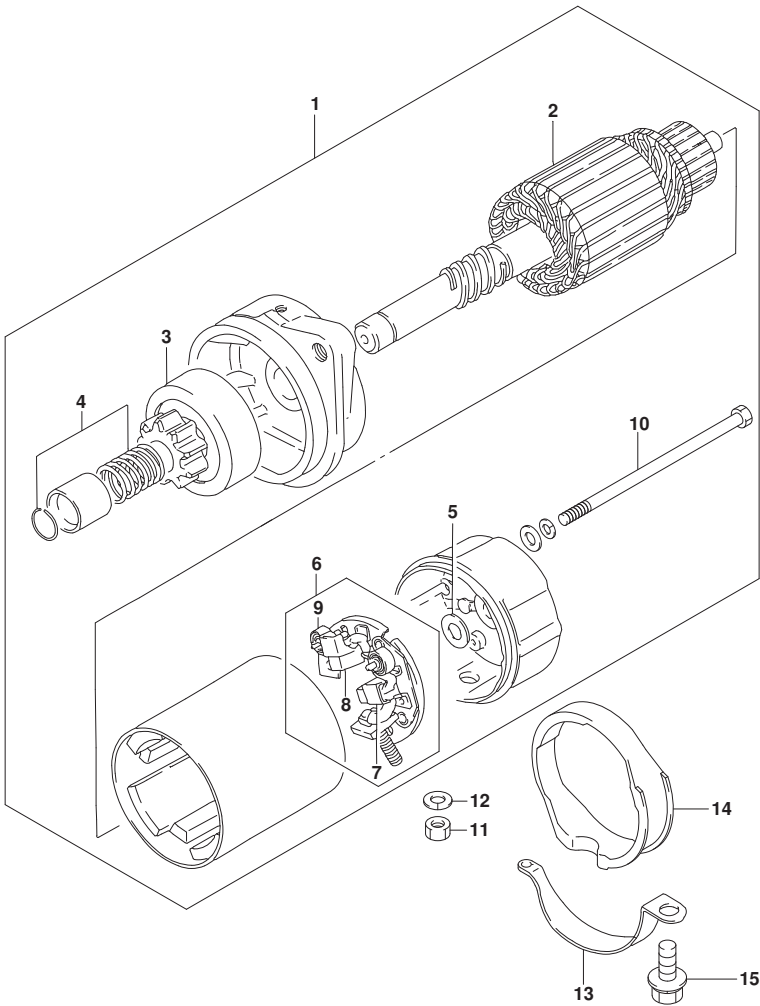


FIG.301C (1-F-15) STARTING MOTOR (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.301D

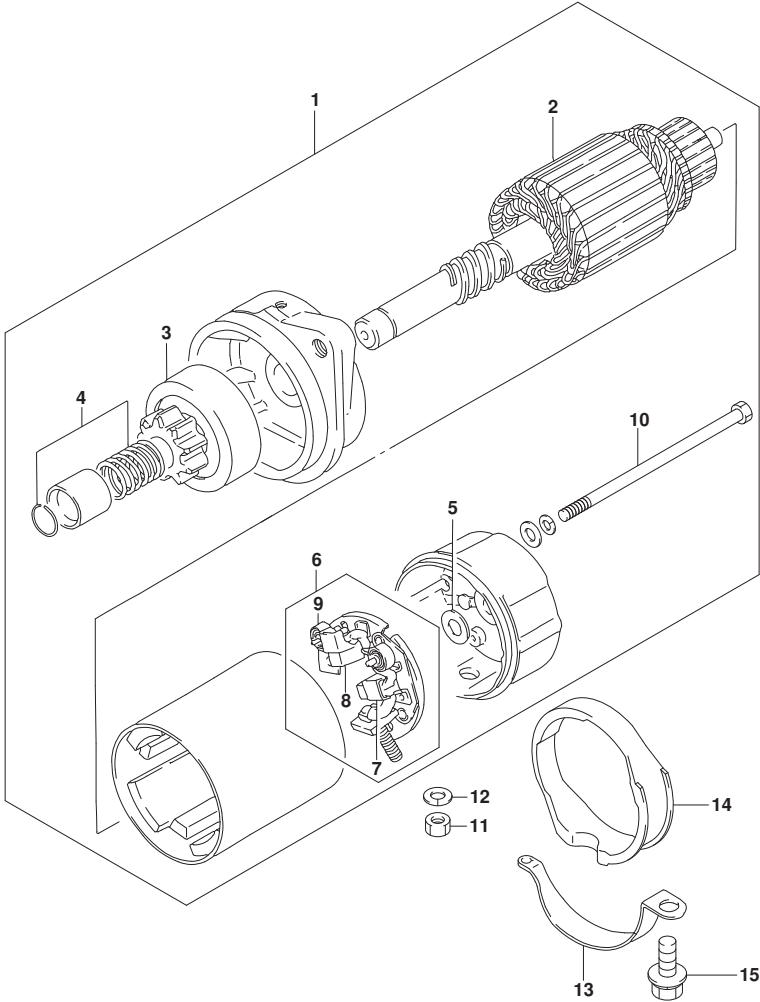


FIG.301D (1-G-2) STARTING MOTOR (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31100-94401	MOTOR ASSY, STARTING	1	
2	31310-96300	.ARMATURE	1	
3	31320-94400	.PINION ASSY	1	
4	31312-96300	.STOPPER SET, PINION	1	
5	31360-96300	.WASHER SET	1	
6	31173-89J00	.HOLDER ASSY, BRUSH	1	
7	31131-96300	..BRUSH (+)	1	
8	31132-96300	..BRUSH (-)	1	
9	31135-89J00	..SPRING, BRUSH	2	
10	31281-93340	.BOLT	2	
11	08310-00067	NUT	1	
12	08321-01067	LOCK WASHER	1	
13	31912-92L00	BAND, STARTING MOTOR	1	
14	31918-94401	DAMPER, LOWER	1	
15	01580-08257	BOLT	2	

FIG.303A

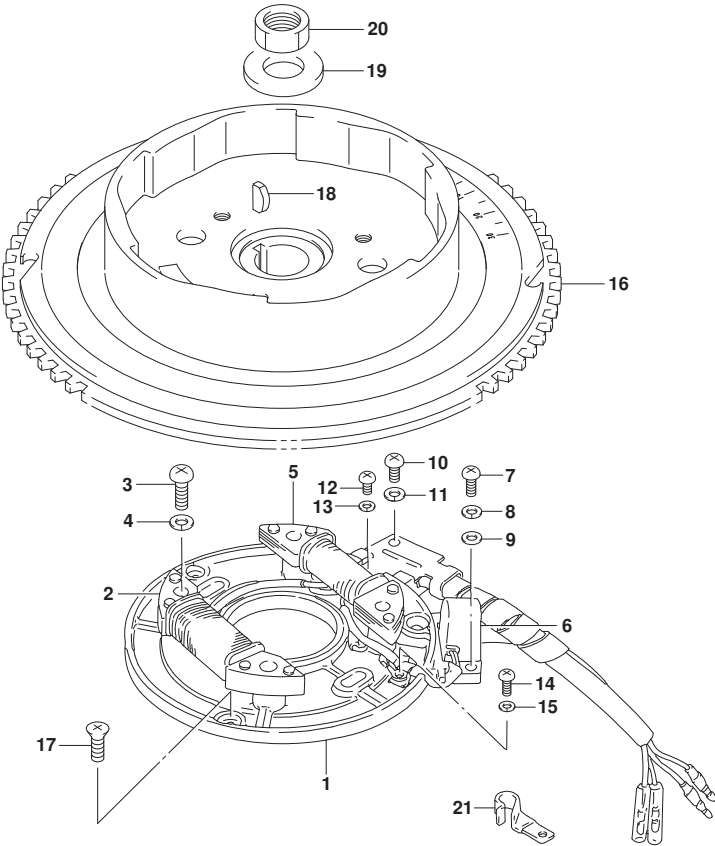


FIG.303A (1-G-3) MAGNETO (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32101-94430	STARTER ASSY	1	W/ELECTRIC STARTER
1-2	32101-92L10	STARTER ASSY	1	W/MANUAL STARTER
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16-1	32102-92L00	FLYWHEEL	1	W/ELECTRIC STARTER
16-2	32102-92L30	FLYWHEEL	1	W/MANUAL STARTER
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	

FIG.303B

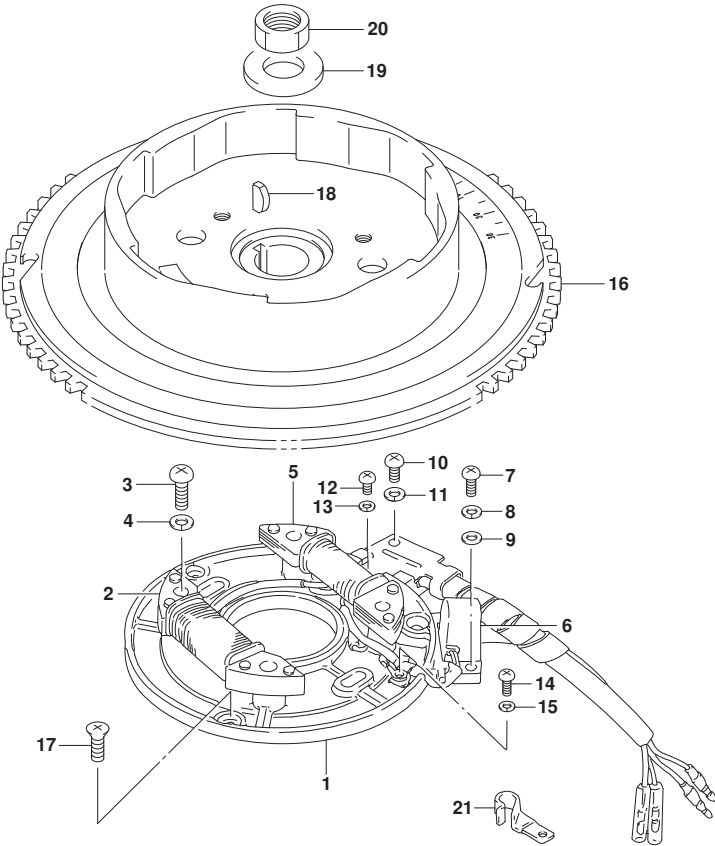


FIG.303B (1-G-4) MAGNETO (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	32101-94430	STARTER ASSY	1	W/ELECTRIC STARTER
1-2	32101-92L10	STARTER ASSY	1	W/MANUAL STARTER
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16-1	32102-92L00	FLYWHEEL	1	W/ELECTRIC STARTER
16-2	32102-92L30	FLYWHEEL	1	W/MANUAL STARTER
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	

FIG.303C

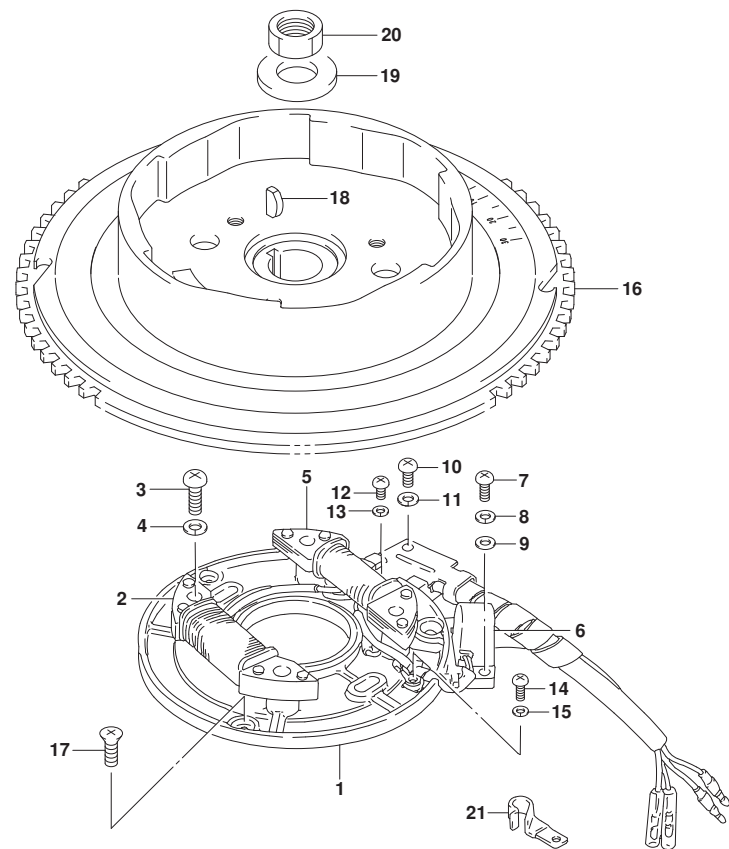


FIG.303C (1-G-5) MAGNETO (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32101-94430	STARTER ASSY	1	
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16	32102-92L00	FLYWHEEL	1	
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	

FIG.303D

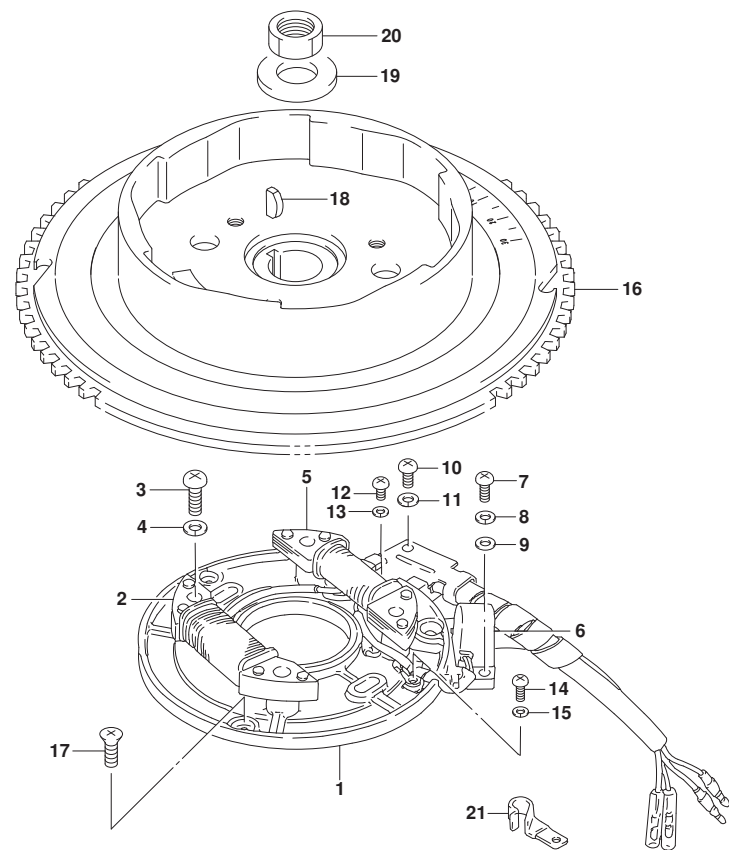


FIG.303D (1-G-6) MAGNETO (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32101-94430	STARTER ASSY	1	
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16	32102-92L00	FLYWHEEL	1	
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.303E


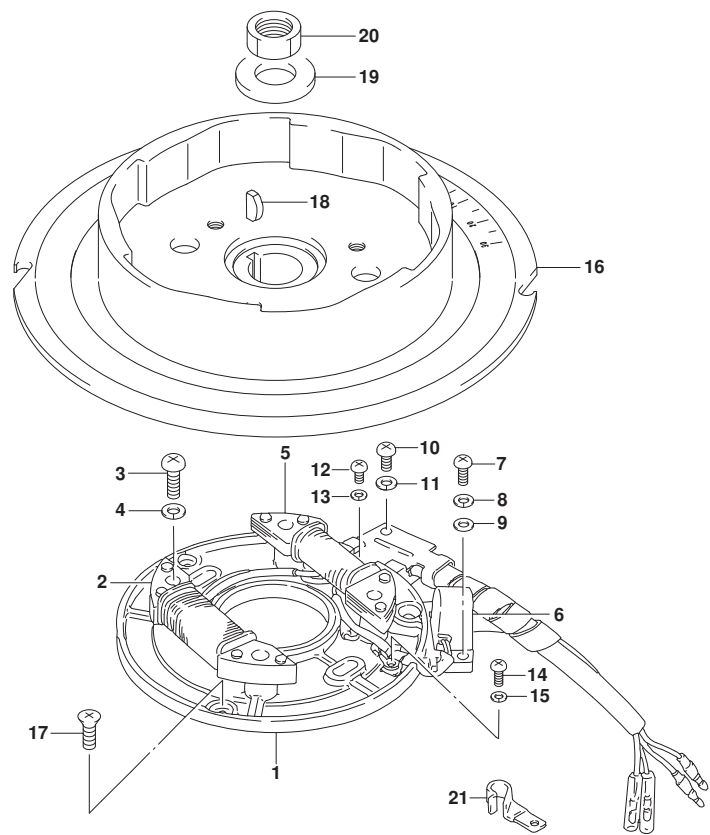


FIG.303E (1-G-7) MAGNETO (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32101-92L10	STARTER ASSY	1	
2	32120-94420	COIL, LIGHTING	1	
3	02112-06257	SCREW	4	
4	08321-01067	LOCK WASHER	4	
5	32140-94400	COIL, IGNITION PRIMARY	1	
6	32150-94410	SENSOR, IGNITION TIMING	1	
7	02112-05107	SCREW	2	
8	08322-01057	WASHER	2	
9	08321-0105A	LOCK WASHER	2	
10	02112-05107	SCREW	1	
11	08321-0105A	LOCK WASHER	1	
12	02112-04087	SCREW	1	
13	08321-01047	LOCK WASHER	1	
14	02112-04067	SCREW	2	
15	08321-01047	LOCK WASHER	2	
16	32102-92L40	FLYWHEEL	1	
17	09138-05011	SCREW (5X14)	2	
18	08341-31059	KEY	1	
19	09160-18011	WASHER (18.5X35X4)	1	
20	09140-18014	NUT	1	
21	09403-10312	CLAMP	1	



FIG.308A

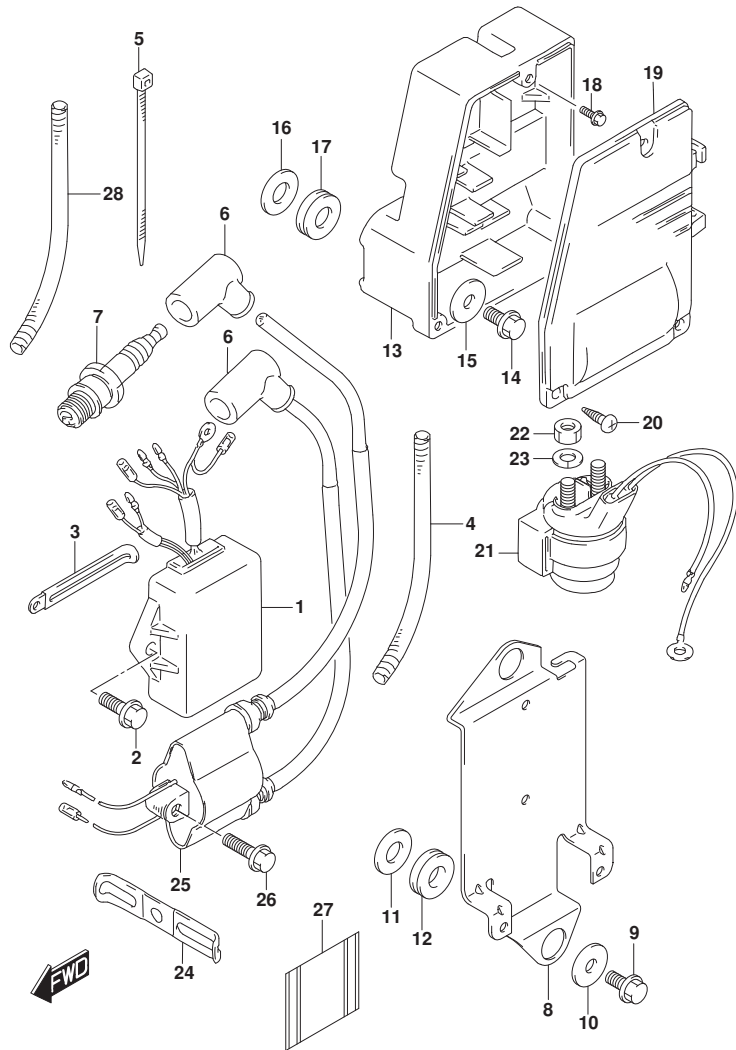


DT40W_P40_017_308A
IGNITION

FIG.308A (1-G-8) IGNITION (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	W/ELECTRIC STARTER
14	01550-06127	BOLT	1	W/ELECTRIC STARTER
15	09160-06084	WASHER (6.5X18X1.6)	2	W/ELECTRIC STARTER
16	09160-12007	WASHER (12.5X26X1.6)	2	W/ELECTRIC STARTER
17	09320-12011	CUSHION	2	W/ELECTRIC STARTER
18	01550-06127	BOLT	1	W/ELECTRIC STARTER
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	W/ELECTRIC STARTER
20	03212-0512B	SCREW	3	W/ELECTRIC STARTER
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	W/ELECTRIC STARTER
22	08310-00067	NUT	2	W/ELECTRIC STARTER
23	08321-01067	LOCK WASHER	2	W/ELECTRIC STARTER
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-0620C	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	
28	33833-91J00	TUBE	1	L:250->100 W/MANUAL STARTER

FIG.308B

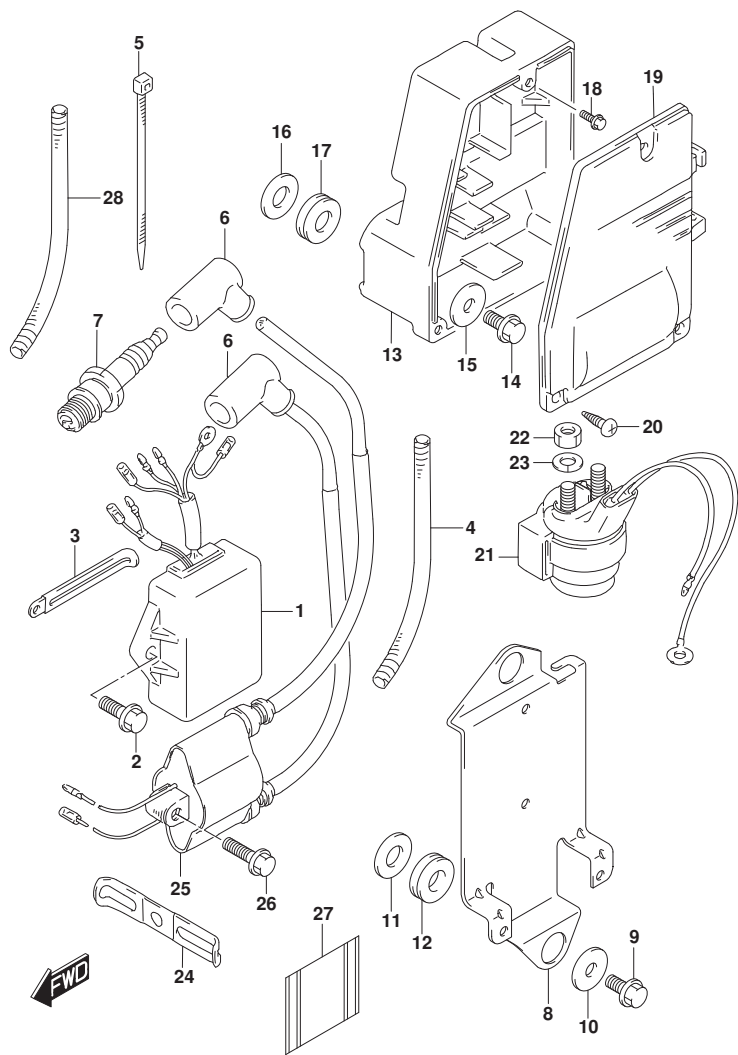


DT40W_P40_017_308B
IGNITION

FIG.308B (1-G-9) IGNITION (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	W/ELECTRIC STARTER
14	01550-06127	BOLT	1	W/ELECTRIC STARTER
15	09160-06084	WASHER (6.5X18X1.6)	2	W/ELECTRIC STARTER
16	09160-12007	WASHER (12.5X26X1.6)	2	W/ELECTRIC STARTER
17	09320-12011	CUSHION	2	W/ELECTRIC STARTER
18	01550-06127	BOLT	1	W/ELECTRIC STARTER
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	W/ELECTRIC STARTER
20	03212-0512B	SCREW	3	W/ELECTRIC STARTER
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	W/ELECTRIC STARTER
22	08310-00067	NUT	2	W/ELECTRIC STARTER
23	08321-01067	LOCK WASHER	2	W/ELECTRIC STARTER
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-0620C	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	
28	33833-91J00	TUBE	1	L:250->100 W/MANUAL STARTER

FIG.308C

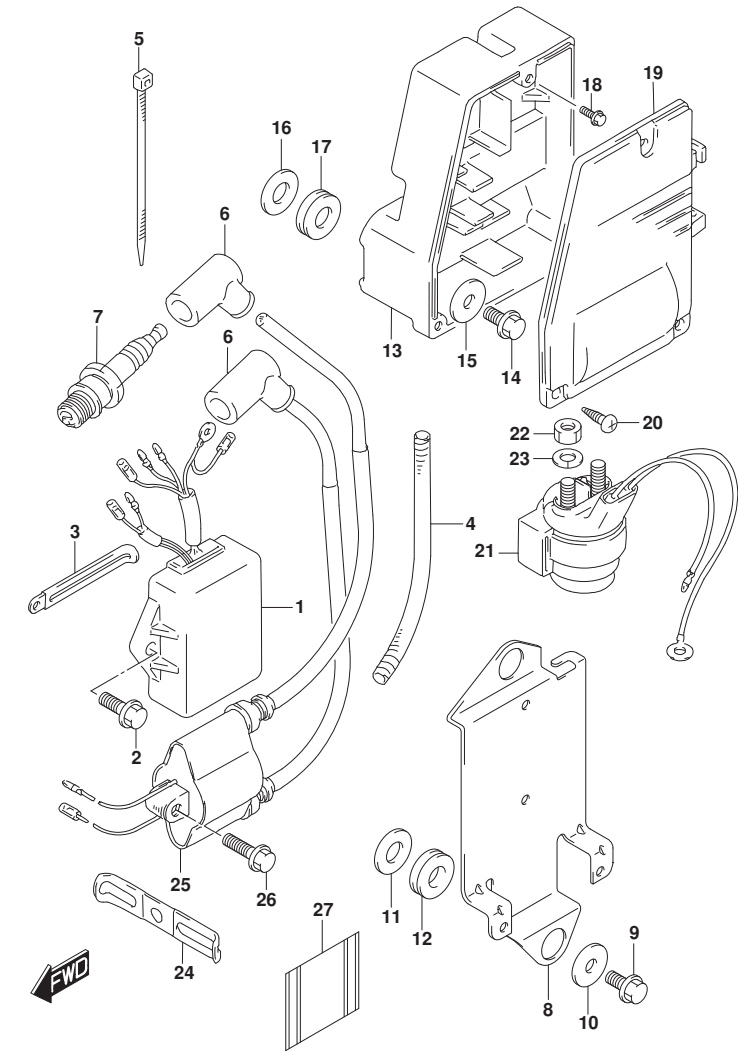


DT40W_P40_017_308C
IGNITION

FIG.308C (1-G-10) IGNITION (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	
14	01550-06127	BOLT	1	
15	09160-06084	WASHER (6.5X18X1.6)	2	
16	09160-12007	WASHER (12.5X26X1.6)	2	
17	09320-12011	CUSHION	2	
18	01550-06127	BOLT	1	
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	
20	03212-0512B	SCREW	3	
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	
22	08310-00067	NUT	2	
23	08321-01067	LOCK WASHER	2	
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-0620C	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	

DT40W_P40_017

FIG.308D

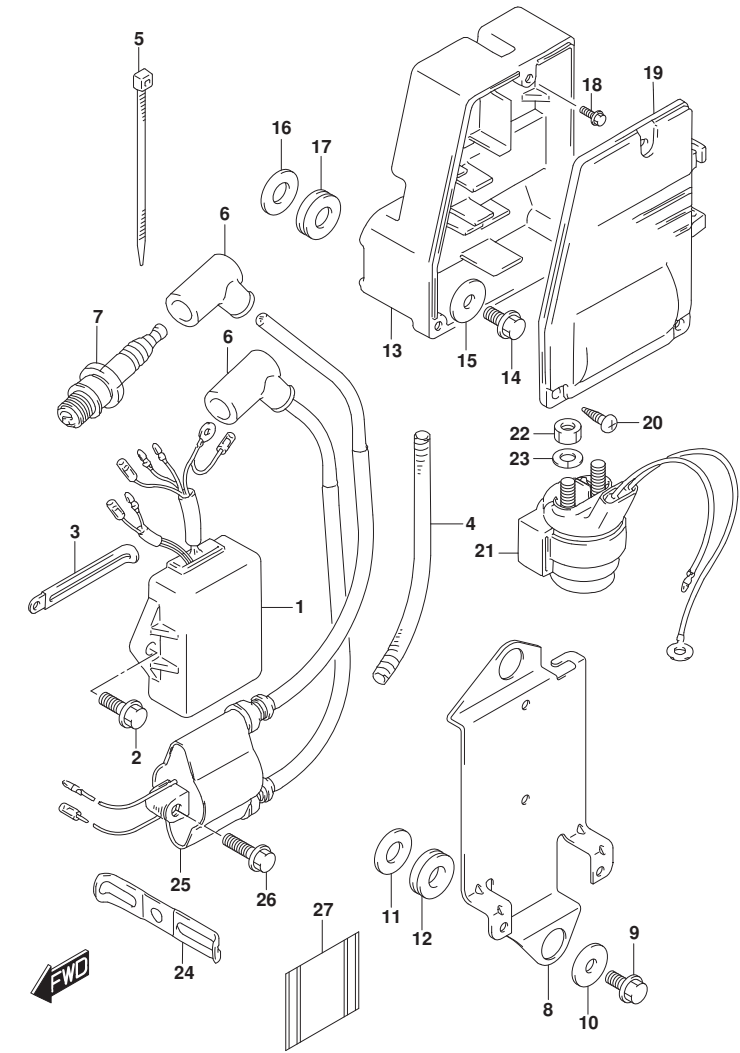

DT40W_P40_017_308D
IGNITION

FIG.308D (1-G-11) IGNITION (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L20	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00370	SPARK PLUG (BR8HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI/CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32890-94401	HOLDER, ELECTRIC PARTS	1	
14	01550-06127	BOLT	1	
15	09160-06084	WASHER (6.5X18X1.6)	2	
16	09160-12007	WASHER (12.5X26X1.6)	2	
17	09320-12011	CUSHION	2	
18	01550-06127	BOLT	1	
19	32891-94401	COVER, ELECTRIC PARTS HOLDER	1	
20	03212-0512B	SCREW	3	
21	31800-94401	RELAY ASSY, STARTING MOTOR	1	
22	08310-00067	NUT	2	
23	08321-01067	LOCK WASHER	2	
24	32919-92L00	CLAMP, HIGH TENSION CORD	1	
25	33410-92L10	COIL, IGNITION	1	
26	01550-0620C	BOLT	2	
27	32916-92L10	COVER, CONNECTOR	1	

DT40W_P40_017

FIG.308E

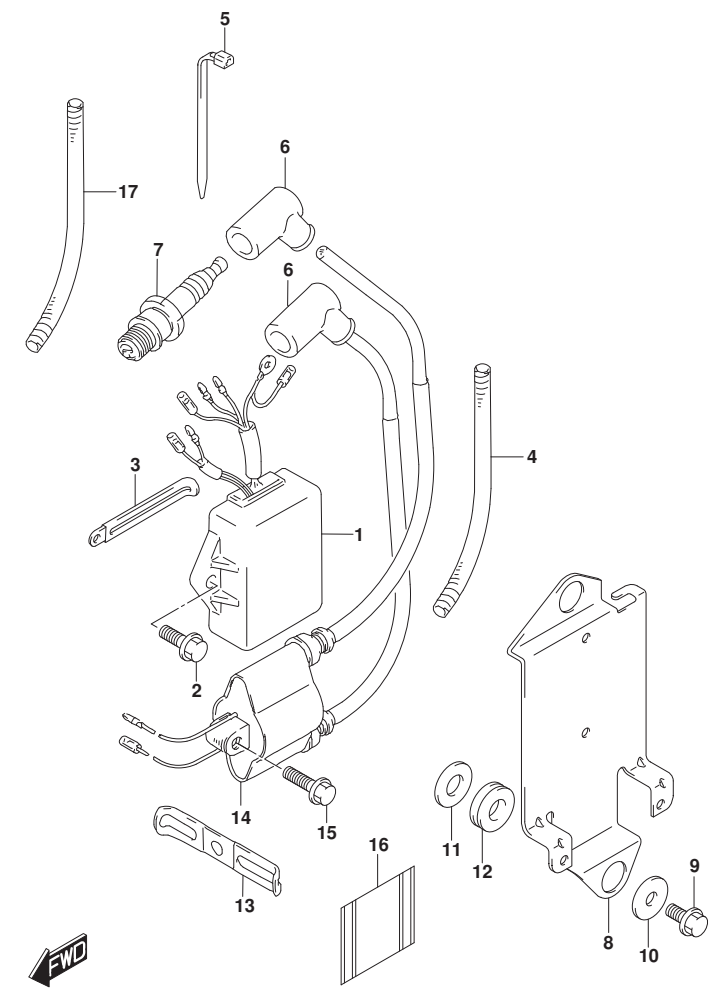


FIG.308E (1-G-12) IGNITION (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32900-92L30	CDI UNIT	1	
2	01550-06127	BOLT	2	
3	29404-93J10	CLAMP	1	
4	33833-91J00	TUBE	1	L:250->100
5	09407-10404	CLAMP (L:100)	2	
6	33510-95520	CAP, SPARK PLUG	2	
7	09482-00532	SPARK PLUG (B7HS-10)	2	NGK
8	32950-92L00	HOLDER, CDI / CONTROL UNIT	1	
9	01550-06127	BOLT	2	
10	09160-06084	WASHER (6.5X18X1.6)	2	
11	09160-12007	WASHER (12.5X26X1.6)	2	
12	09320-12011	CUSHION	2	
13	32919-92L00	CLAMP, HIGH TENSION CORD	1	
14	33410-92L10	COIL, IGNITION	1	
15	01550-0620C	BOLT	2	
16	32916-92L10	COVER, CONNECTOR	1	
17	33833-91J00	TUBE	1	L:250->100

FIG.309A

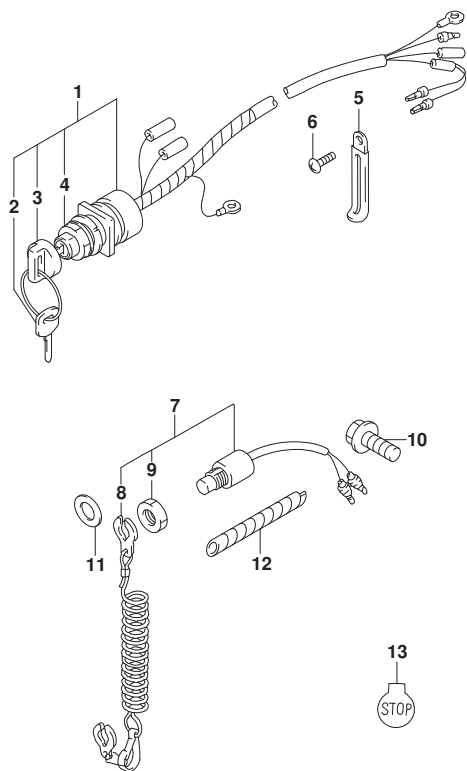


FIG.309A (1-G-13) IGNITION SWITCH (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37110-94471	SWITCH ASSY, IGNITION	1	W/ELECTRIC STARTER
2-1	37141-99EA0	.KEY (941)	1	W/ELECTRIC STARTER
2-2	37141-99EB0	.KEY (942)	1	W/ELECTRIC STARTER
2-3	37141-99E00	.KEY (931)	1	W/ELECTRIC STARTER
2-4	37141-99E10	.KEY (932)	1	W/ELECTRIC STARTER
2-5	37141-99E20	.KEY (933)	1	W/ELECTRIC STARTER
2-6	37141-99E30	.KEY (934)	1	W/ELECTRIC STARTER
2-7	37141-99E40	.KEY (935)	1	W/ELECTRIC STARTER
2-8	37141-99E50	.KEY (936)	1	W/ELECTRIC STARTER
2-9	37141-99E60	.KEY (937)	1	W/ELECTRIC STARTER
2-10	37141-99E70	.KEY (938)	1	W/ELECTRIC STARTER
2-11	37141-99E80	.KEY (939)	1	W/ELECTRIC STARTER
2-12	37141-99E90	.KEY (940)	1	W/ELECTRIC STARTER
3	37143-99E00	.CAP, KEY	1	W/ELECTRIC STARTER
4	37149-93J00	.CAP, CYLINDER BODY	1	W/ELECTRIC STARTER
5	29404-93J10	CLAMP	1	W/ELECTRIC STARTER
6	02142-06127	SCREW	1	W/ELECTRIC STARTER
7	37830-92L02	SWITCH ASSY, EMERGENCY & STOP	1	
8	37823-97J00	.PLATE, LOCK	1	
9	37826-97J00	.NUT	1	
10	01550-06127	BOLT	1	W/MANUAL STARTER
11	09160-25069	WASHER (25X40X1.1)	1	W/ELECTRIC STARTER
12	33833-91J00	TUBE (L:250)	1	L:250->100
13	37835-95D00	LABEL, STOP	1	W/MANUAL STARTER



FIG.309B

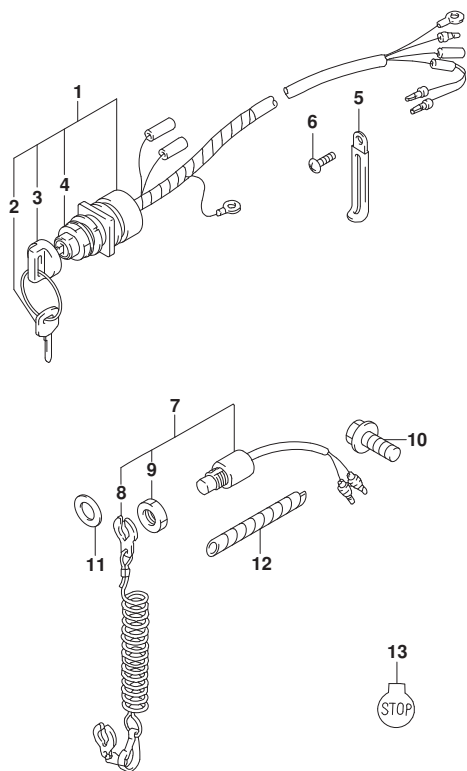


FIG.309B (1-G-14) IGNITION SWITCH (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37110-94471	SWITCH ASSY, IGNITION	1	W/ELECTRIC STARTER
2-1	37141-99EA0	.KEY (941)	1	W/ELECTRIC STARTER
2-2	37141-99EB0	.KEY (942)	1	W/ELECTRIC STARTER
2-3	37141-99E00	.KEY (931)	1	W/ELECTRIC STARTER
2-4	37141-99E10	.KEY (932)	1	W/ELECTRIC STARTER
2-5	37141-99E20	.KEY (933)	1	W/ELECTRIC STARTER
2-6	37141-99E30	.KEY (934)	1	W/ELECTRIC STARTER
2-7	37141-99E40	.KEY (935)	1	W/ELECTRIC STARTER
2-8	37141-99E50	.KEY (936)	1	W/ELECTRIC STARTER
2-9	37141-99E60	.KEY (937)	1	W/ELECTRIC STARTER
2-10	37141-99E70	.KEY (938)	1	W/ELECTRIC STARTER
2-11	37141-99E80	.KEY (939)	1	W/ELECTRIC STARTER
2-12	37141-99E90	.KEY (940)	1	W/ELECTRIC STARTER
3	37143-99E00	.CAP, KEY	1	W/ELECTRIC STARTER
4	37149-93J00	.CAP, CYLINDER BODY	1	W/ELECTRIC STARTER
5	29404-93J10	CLAMP	1	W/ELECTRIC STARTER
6	02142-06127	SCREW	1	W/ELECTRIC STARTER
7	37830-92L02	SWITCH ASSY, EMERGENCY & STOP	1	
8	37823-97J00	.PLATE, LOCK	1	
9	37826-97J00	.NUT	1	
10	01550-06127	BOLT	1	W/MANUAL STARTER
11	09160-25069	WASHER (25X40X1.1)	1	W/ELECTRIC STARTER
12	33833-91J00	TUBE (L:250)	1	L:250->100
13	37835-95D00	LABEL, STOP	1	W/MANUAL STARTER



FIG.309C

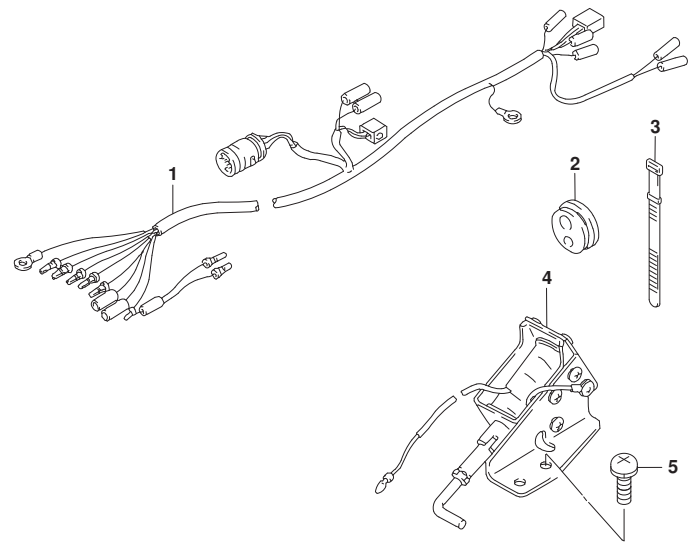


FIG.309C (1-G-15) IGNITION SWITCH (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36610-94411	HARNESS ASSY, WIRING	1	
2	36612-94421	GROMMET	1	
3	09407-12402	CLAMP (L:120)	1	
4	38600-94400	SOLENOID ASSY, CHOKE	1	
5	02112-35127	SCREW	2	



FIG.309D

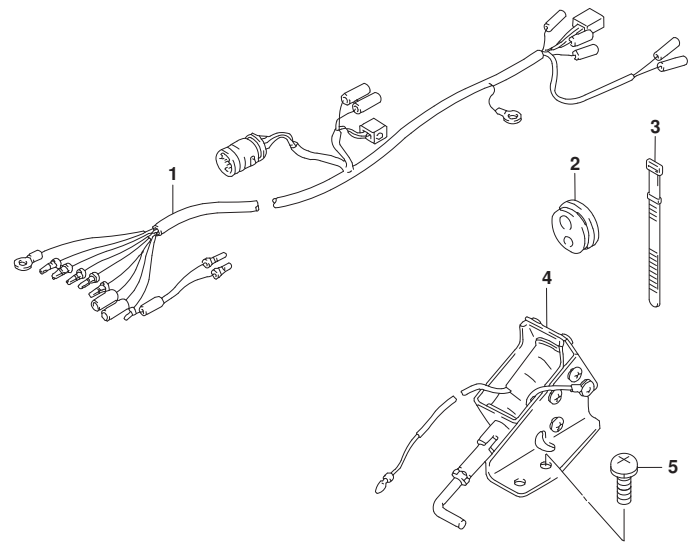


FIG.309D (1-H-2) IGNITION SWITCH (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	36610-94411	HARNESS ASSY, WIRING	1	
2	36612-94421	GROMMET	1	
3	09407-12402	CLAMP (L:120)	1	
4	38600-94400	SOLENOID ASSY, CHOKE	1	
5	02112-35127	SCREW	2	



FIG.309E

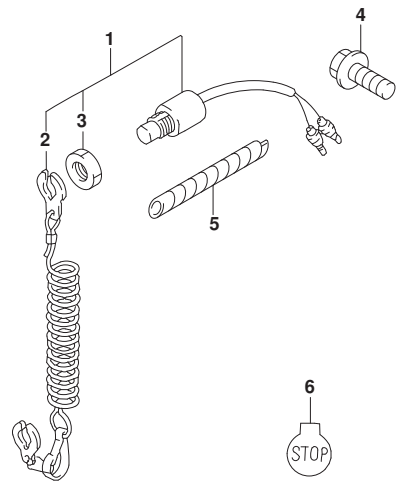


FIG.309E (1-H-3) IGNITION SWITCH (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	37830-92L02	SWITCH ASSY, EMERGENCY & STOP	1	
2	37823-97J00	.PLATE, LOCK	1	
3	37826-97J00	.NUT	1	
4	01550-06127	BOLT	1	
5	33833-91J00	TUBE (L:250)	1	L:250->100
6	37835-95D00	LABEL, STOP	1	



FIG.319A

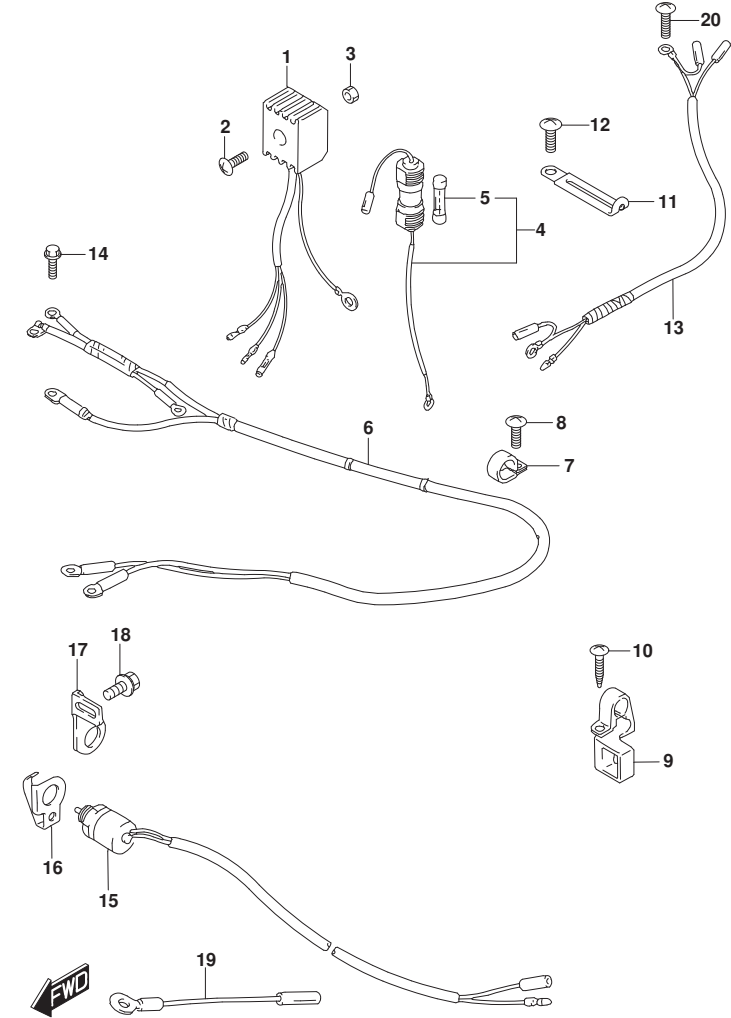


FIG.319A (1-H-4) ELECTRICAL (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	W/ELECTRIC STARTER
2	02142-05257	SCREW	1	W/ELECTRIC STARTER
3	08310-00057	NUT	1	W/ELECTRIC STARTER
4	36740-93901	FUSE CASE ASSY	1	W/ELECTRIC STARTER
5	09481-20001	.FUSE (20A)	1	W/ELECTRIC STARTER
6	33810-94411	CABLE ASSY, STARTER	1	W/ELECTRIC STARTER
7	09403-14204	CLAMP	1	W/ELECTRIC STARTER
8	02142-06167	SCREW	1	W/ELECTRIC STARTER
9	33816-96300	CLAMP, CABLE	1	W/ELECTRIC STARTER
10	03241-0625A	SCREW	1	W/ELECTRIC STARTER
11	29404-93J10	CLAMP	1	W/MANUAL STARTER
12	02142-06127	SCREW	1	W/MANUAL STARTER
13	36899-92L00	LEAD, STOP ETC	1	W/MANUAL STARTER
14	01550-06167	BOLT	1	W/ELECTRIC STARTER
15	37721-94404	SWITCH ASSY, NEUTRAL	1	W/ELECTRIC STARTER
16	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
17	37726-94402	BRACKET, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
18	01580-06167	BOLT	1	W/ELECTRIC STARTER
19	36895-94400	LEAD, ENGINE GROUND	1	
20	02142-06167	SCREW	1	W/MANUAL STARTER

FIG.319B

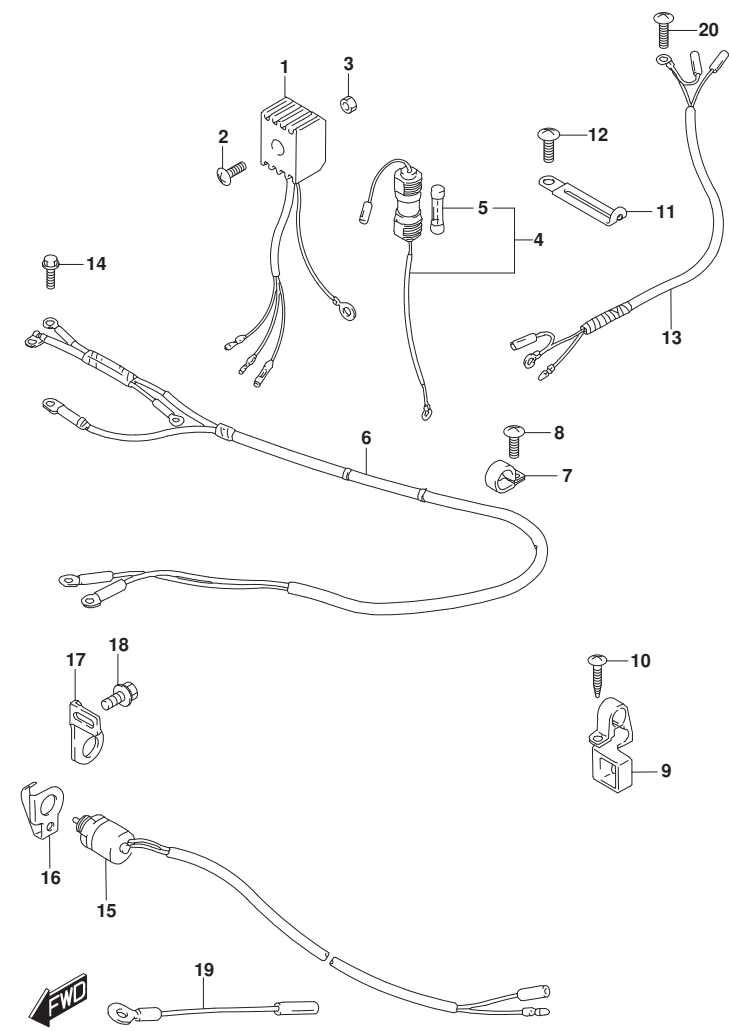


FIG.319B (1-H-5) ELECTRICAL (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	W/ELECTRIC STARTER
2	02142-05257	SCREW	1	W/ELECTRIC STARTER
3	08310-00057	NUT	1	W/ELECTRIC STARTER
4	36740-93901	FUSE CASE ASSY	1	W/ELECTRIC STARTER
5	09481-20001	.FUSE (20A)	1	W/ELECTRIC STARTER
6	33810-94411	CABLE ASSY, STARTER	1	W/ELECTRIC STARTER
7	09403-14204	CLAMP	1	W/ELECTRIC STARTER
8	02142-06167	SCREW	1	W/ELECTRIC STARTER
9	33816-96300	CLAMP, CABLE	1	W/ELECTRIC STARTER
10	03241-0625A	SCREW	1	W/ELECTRIC STARTER
11	29404-93J10	CLAMP	1	W/MANUAL STARTER
12	02142-06127	SCREW	1	W/MANUAL STARTER
13	36899-92L00	LEAD, STOP ETC	1	W/MANUAL STARTER
14	01550-06167	BOLT	1	W/ELECTRIC STARTER
15	37721-94404	SWITCH ASSY, NEUTRAL	1	W/ELECTRIC STARTER
16	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
17	37726-94402	BRACKET, NEUTRAL SWITCH	1	W/ELECTRIC STARTER
18	01580-06167	BOLT	1	W/ELECTRIC STARTER
19	36895-94400	LEAD, ENGINE GROUND	1	
20	02142-06167	SCREW	1	W/MANUAL STARTER

FIG.319C

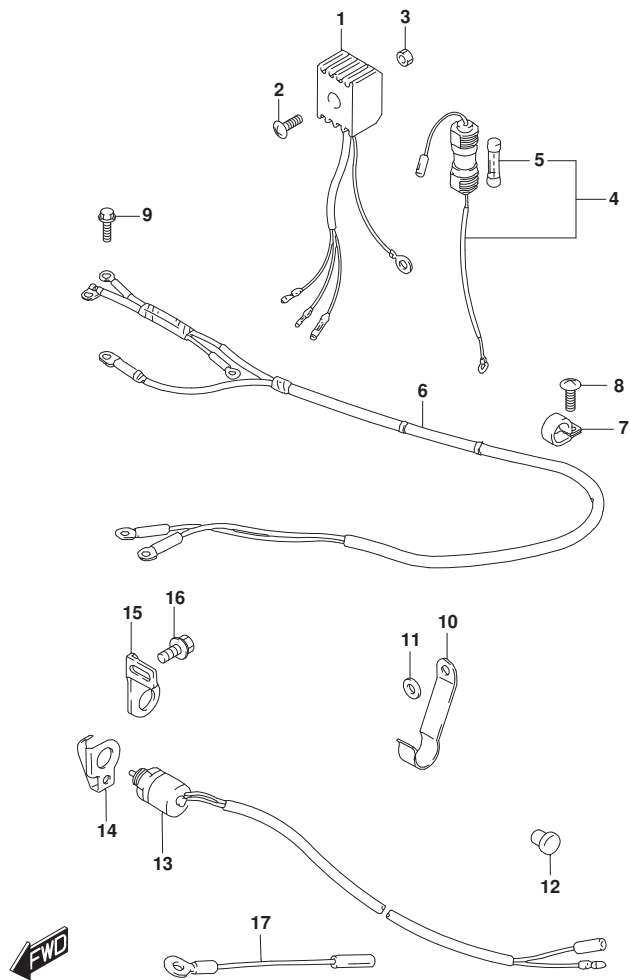


FIG.319C (1-H-6) ELECTRICAL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	
2	02142-05257	SCREW	1	
3	08310-00057	NUT	1	
4	36740-93901	FUSE CASE ASSY	1	
5	09481-20001	.FUSE (20A)	1	
6	33810-94411	CABLE ASSY, STARTER	1	
7	09403-14204	CLAMP	1	
8	02142-06167	SCREW	1	
9	01550-06167	BOLT	1	
10	36791-94504	HOLDER, CONNECTOR	1	
11	08322-0106C	WASHER	1	
12	09250-09001	CAP (OD:14)	1	
13	37721-94404	SWITCH ASSY, NEUTRAL	1	
14	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	
15	37726-94402	BRACKET, NEUTRAL SWITCH	1	
16	01580-06167	BOLT	1	
17	36895-94400	LEAD, ENGINE GROUND	1	

FIG.319D

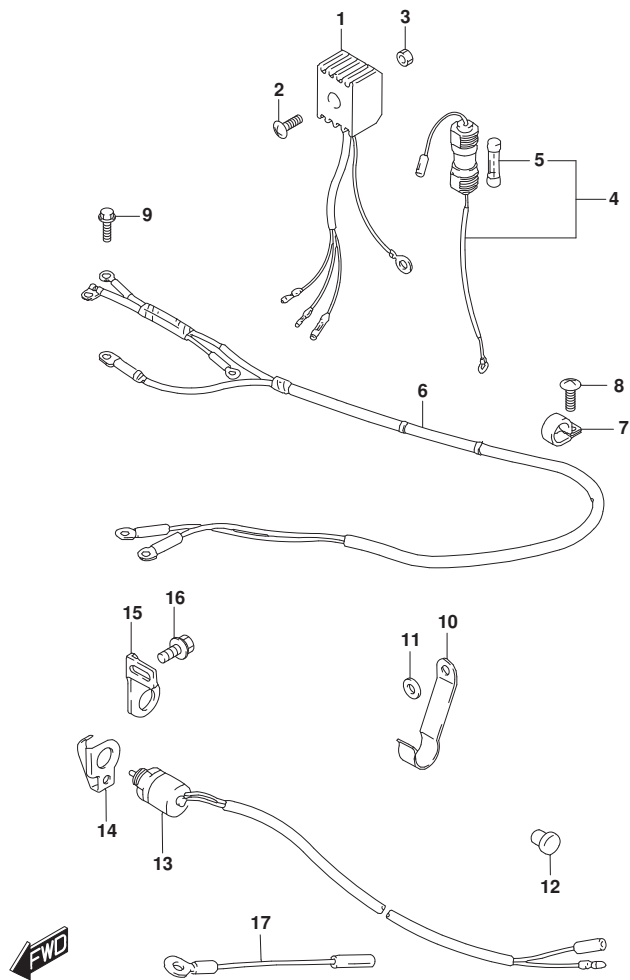


FIG.319D (1-H-7) ELECTRICAL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	32800-95D01	RECTIFIER ASSY	1	
2	02142-05257	SCREW	1	
3	08310-00057	NUT	1	
4	36740-93901	FUSE CASE ASSY	1	
5	09481-20001	.FUSE (20A)	1	
6	33810-94411	CABLE ASSY, STARTER	1	
7	09403-14204	CLAMP	1	
8	02142-06167	SCREW	1	
9	01550-06167	BOLT	1	
10	36791-94504	HOLDER, CONNECTOR	1	
11	08322-0106C	WASHER	1	
12	09250-09001	CAP (OD:14)	1	
13	37721-94404	SWITCH ASSY, NEUTRAL	1	
14	37725-94302	ACTUATOR, NEUTRAL SWITCH	1	
15	37726-94402	BRACKET, NEUTRAL SWITCH	1	
16	01580-06167	BOLT	1	
17	36895-94400	LEAD, ENGINE GROUND	1	

FIG.319E


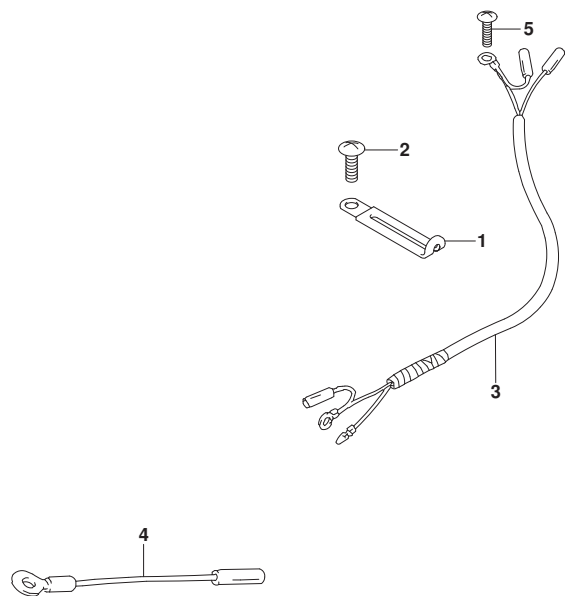


FIG.319E (1-H-8) ELECTRICAL (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	29404-93J10	CLAMP	1	
2	02142-06127	SCREW	1	
3	36899-92L00	LEAD, STOP ETC	1	
4	36895-94400	LEAD, ENGINE GROUND	1	
5	02142-06167	SCREW	1	



FIG.335A

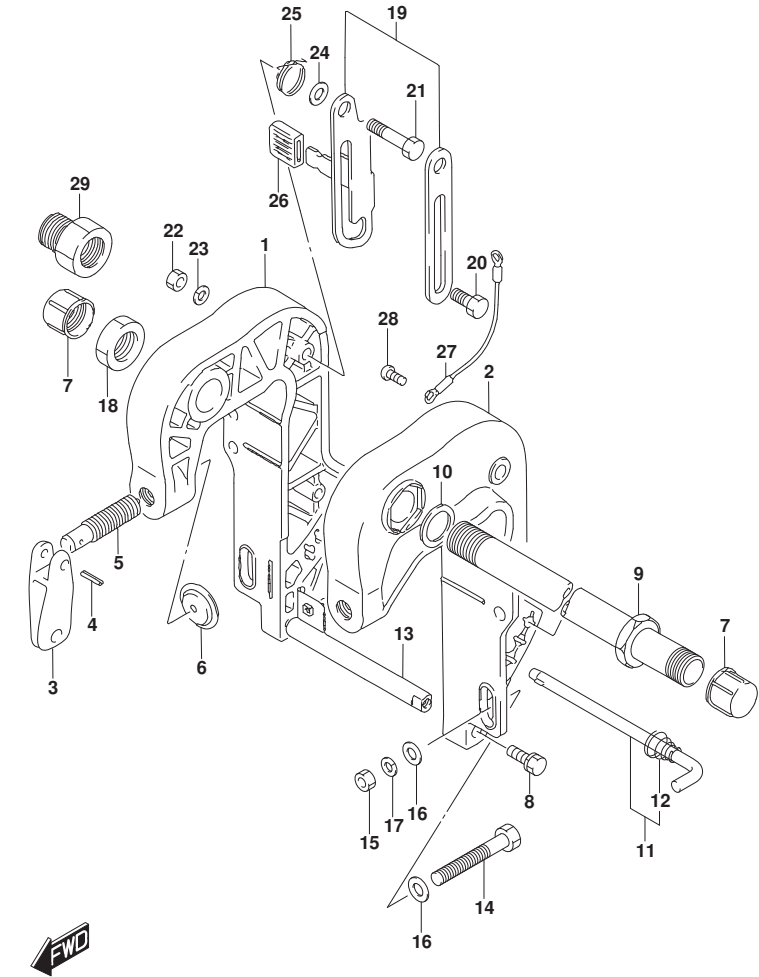


DT40W_P40_017_335A
CLAMP BRACKET

FIG.335A (1-H-9) CLAMP BRACKET (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-92L10-YAY	BRACKET, CLAMP STBD (BLACK)	1	OPT
2	41121-92L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	OPT
3	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	2	
4	09205-06021	SPRING PIN (6X25)	2	
5	41211-94302	SCREW, CLAMP	2	
6	41213-94J01	PLATE, CLAMP	2	
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2	
8	09116-08152	BOLT (8X35)	2	
9	41130-92L00	SHAFT, CLAMP BRACKET	1	
10	09160-22033	WASHER (22.5X38X1)	1	
11	45420-92L00	PIN, TILT LOCK	1	
12	09441-17002	.SPRING	1	
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1	
14	09100-08311	BOLT (8X90)	2	
15	09140-08023-XC0	NUT	2	
16	09160-08081	WASHER (8.5X23X1.5)	4	
17	29162-93J10	LOCK WASHER	2	
18	09159-22006	NUT	1	
19	41200-92L00	ARM ASSY, TILT	1	
20	09111-10067	BOLT (10X20.5)	2	
21	09111-10069	BOLT (10X54.5)	2	
22	09140-10031	NUT	2	
23	09162-10005	LOCK WASHER	2	
24	09160-10082	WASHER (10.5X19X2)	2	
25	09448-29009	SPRING	1	
26	41225-94400	RUBBER, TILT LOCK	1	
27	36894-95201	LEAD (L:165)	1	
28	29125-93J10	SCREW	2	
29	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT

DT40W_P40_017

FIG.335B

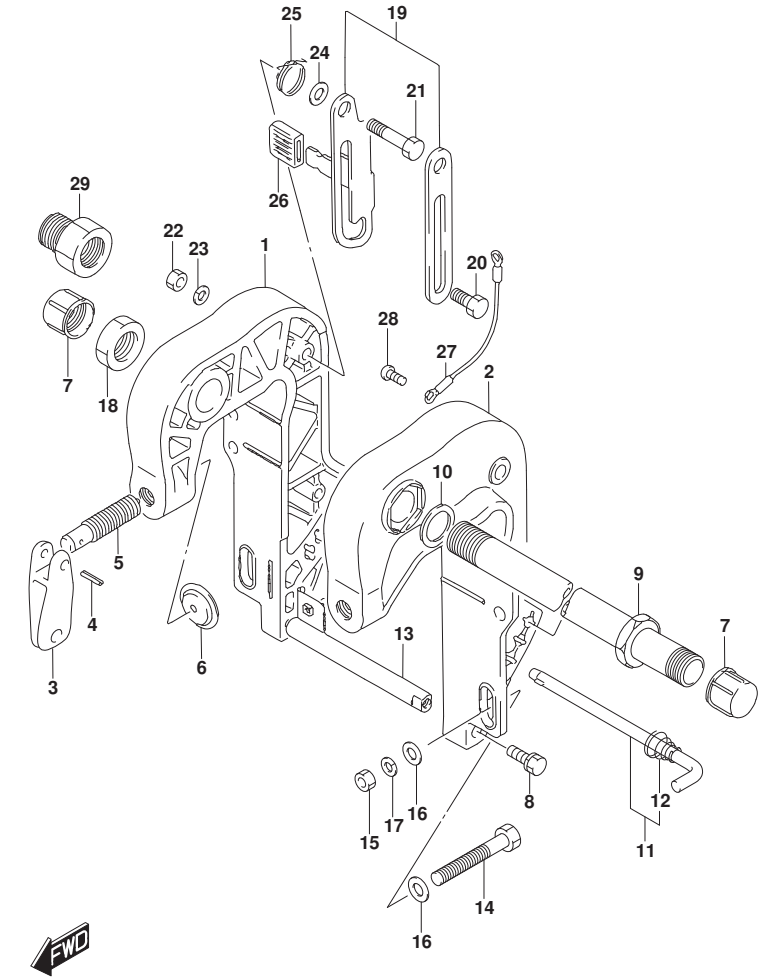


DT40W_P40_017_335B
CLAMP BRACKET

FIG.335B (1-H-10) CLAMP BRACKET (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	41111-92L10-YAY	BRACKET, CLAMP STBD (BLACK)	1	OPT
2	41121-92L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	OPT
3	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	2	
4	09205-06021	SPRING PIN (6X25)	2	
5	41211-94302	SCREW, CLAMP	2	
6	41213-94J01	PLATE, CLAMP	2	
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2	
8	09116-08152	BOLT (8X35)	2	
9	41130-92L00	SHAFT, CLAMP BRACKET	1	
10	09160-22033	WASHER (22.5X38X1)	1	
11	45420-92L00	PIN, TILT LOCK	1	
12	09441-17002	.SPRING	1	
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1	
14	09100-08311	BOLT (8X90)	2	
15	09140-08023-XC0	NUT	2	
16	09160-08081	WASHER (8.5X23X1.5)	4	
17	29162-93J10	LOCK WASHER	2	
18	09159-22006	NUT	1	
19	41200-92L00	ARM ASSY, TILT	1	
20	09111-10067	BOLT (10X20.5)	2	
21	09111-10069	BOLT (10X54.5)	2	
22	09140-10031	NUT	2	
23	09162-10005	LOCK WASHER	2	
24	09160-10082	WASHER (10.5X19X2)	2	
25	09448-29009	SPRING	1	
26	41225-94400	RUBBER, TILT LOCK	1	
27	36894-95201	LEAD (L:165)	1	
28	29125-93J10	SCREW	2	
29	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT

DT40W_P40_017

FIG.335C

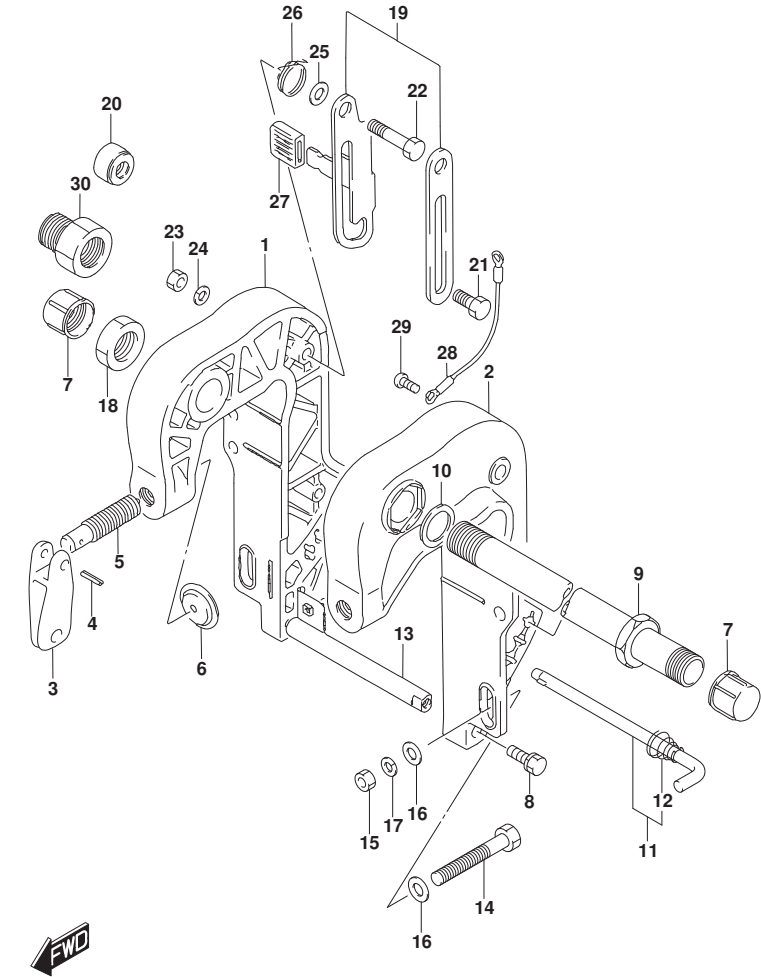


DT40W_P40_017_335C
CLAMP BRACKET

FIG.335C (1-H-11) CLAMP BRACKET (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	41111-92L10-YAY	BRACKET, CLAMP STBD (BLACK)	1	OPT	
2	41121-92L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	OPT	
3	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	2		
4	09205-06021	SPRING PIN (6X25)	2		
5	41211-94302	SCREW, CLAMP	2		
6	41213-94J01	PLATE, CLAMP	2		
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2		
8	09116-08152	BOLT (8X35)	2		
9	41130-92L00	SHAFT, CLAMP BRACKET	1		
10	09160-22033	WASHER (22.5X38X1)	1		
11	45420-92L00	PIN, TILT LOCK	1		
12	09441-17002	.SPRING	1		
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1		
14	09100-08311	BOLT (8X90)	2		
15	09140-08023-XC0	NUT	2		
16	09160-08081	WASHER (8.5X23X1.5)	4		
17	29162-93J10	LOCK WASHER	2		
18	09159-22006	NUT	1		
19	41200-92L00	ARM ASSY, TILT	1		
20	41161-94400	SEAL, STEERING CABLE	1		
21	09111-10067	BOLT (10X20.5)	2		
22	09111-10069	BOLT (10X54.5)	2		
23	09140-10031	NUT	2		
24	09162-10005	LOCK WASHER	2		
25	09160-10082	WASHER (10.5X19X2)	2		
26	09448-29009	SPRING	1		
27	41225-94400	RUBBER, TILT LOCK	1		
28	36894-95201	LEAD (L:165)	1		
29	29125-93J10	SCREW	2		
30	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT	

DT40W_P40_017

FIG.335D

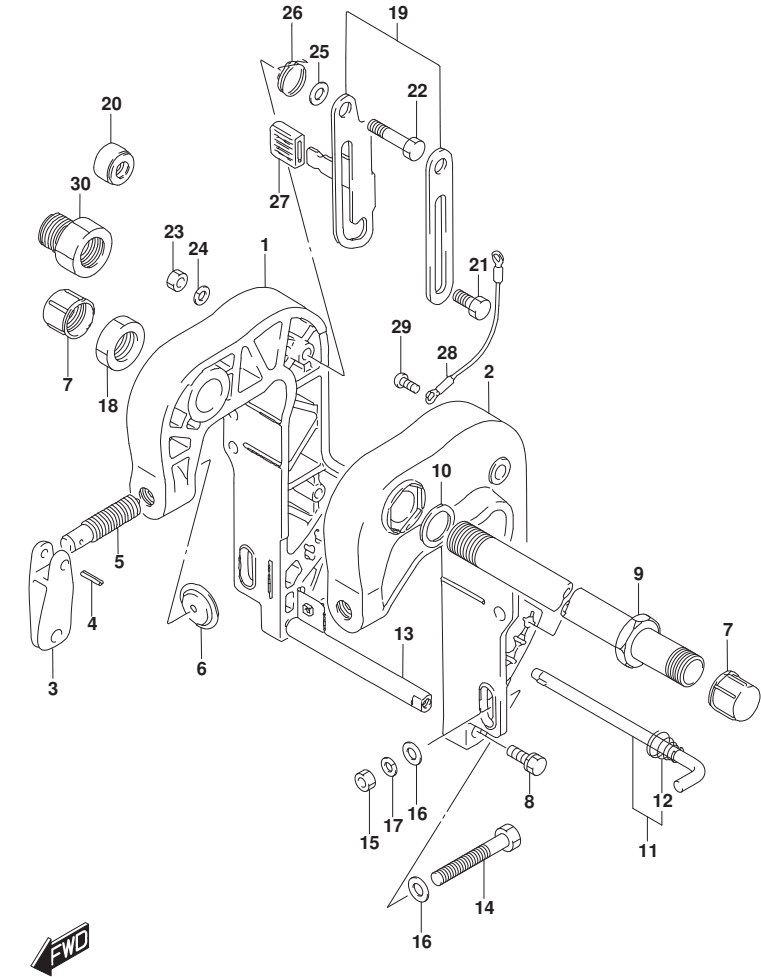


DT40W_P40_017_335D
CLAMP BRACKET

FIG.335D (1-H-12) CLAMP BRACKET (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	41111-92L10-YAY	BRACKET, CLAMP STBD (BLACK)	1	OPT	
2	41121-92L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	OPT	
3	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	2		
4	09205-06021	SPRING PIN (6X25)	2		
5	41211-94302	SCREW, CLAMP	2		
6	41213-94J01	PLATE, CLAMP	2		
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2		
8	09116-08152	BOLT (8X35)	2		
9	41130-92L00	SHAFT, CLAMP BRACKET	1		
10	09160-22033	WASHER (22.5X38X1)	1		
11	45420-92L00	PIN, TILT LOCK	1		
12	09441-17002	.SPRING	1		
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1		
14	09100-08311	BOLT (8X90)	2		
15	09140-08023-XC0	NUT	2		
16	09160-08081	WASHER (8.5X23X1.5)	4		
17	29162-93J10	LOCK WASHER	2		
18	09159-22006	NUT	1		
19	41200-92L00	ARM ASSY, TILT	1		
20	41161-94400	SEAL, STEERING CABLE	1		
21	09111-10067	BOLT (10X20.5)	2		
22	09111-10069	BOLT (10X54.5)	2		
23	09140-10031	NUT	2		
24	09162-10005	LOCK WASHER	2		
25	09160-10082	WASHER (10.5X19X2)	2		
26	09448-29009	SPRING	1		
27	41225-94400	RUBBER, TILT LOCK	1		
28	36894-95201	LEAD (L:165)	1		
29	29125-93J10	SCREW	2		
30	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT	

DT40W_P40_017

FIG.335E

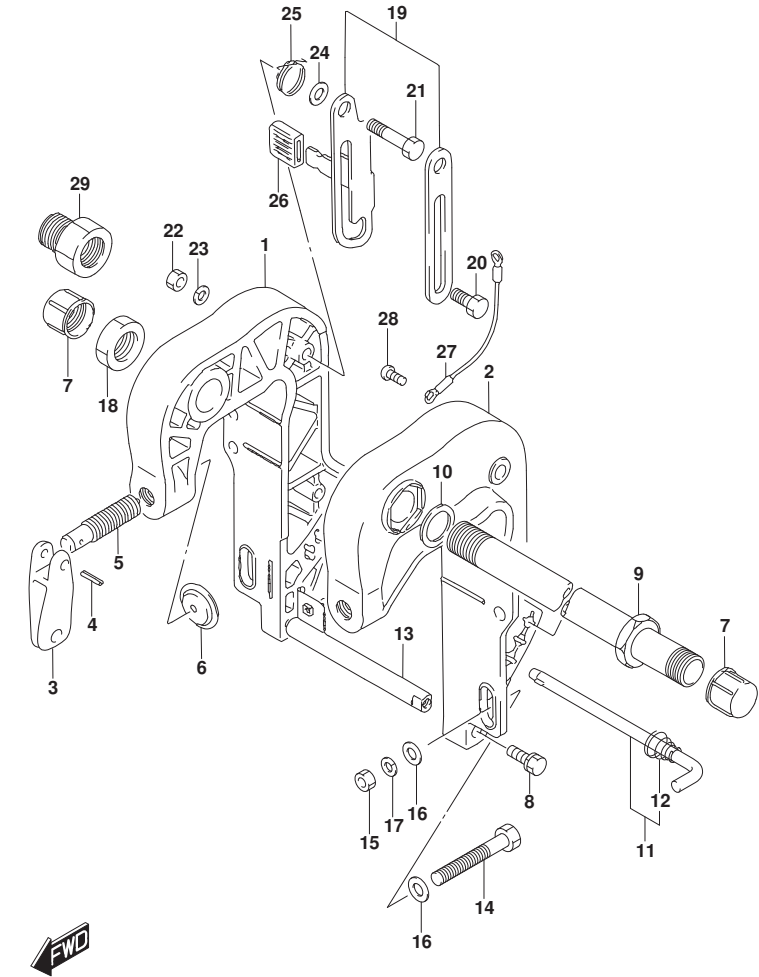


DT40W_P40_017_335E
CLAMP BRACKET

FIG.335E (1-H-13) CLAMP BRACKET (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1	41111-92L10-YAY	BRACKET, CLAMP STBD (BLACK)	1	OPT	
2	41121-92L10-YAY	BRACKET, CLAMP PORT (BLACK)	1	OPT	
3	41212-91LL0-YAY	HANDLE, CLAMP (BLACK)	2		
4	09205-06021	SPRING PIN (6X25)	2		
5	41211-94302	SCREW, CLAMP	2		
6	41213-94J01	PLATE, CLAMP	2		
7	41151-94500	CAP, CLAMP BRACKET SHAFT	2		
8	09116-08152	BOLT (8X35)	2		
9	41130-92L00	SHAFT, CLAMP BRACKET	1		
10	09160-22033	WASHER (22.5X38X1)	1		
11	45420-92L00	PIN, TILT LOCK	1		
12	09441-17002	.SPRING	1		
13	41311-92L00	ROD, CLAMP BRACKET LOWER	1		
14	09100-08311	BOLT (8X90)	2		
15	09140-08023-XC0	NUT	2		
16	09160-08081	WASHER (8.5X23X1.5)	4		
17	29162-93J10	LOCK WASHER	2		
18	09159-22006	NUT	1		
19	41200-92L00	ARM ASSY, TILT	1		
20	09111-10067	BOLT (10X20.5)	2		
21	09111-10069	BOLT (10X54.5)	2		
22	09140-10031	NUT	2		
23	09162-10005	LOCK WASHER	2		
24	09160-10082	WASHER (10.5X19X2)	2		
25	09448-29009	SPRING	1		
26	41225-94400	RUBBER, TILT LOCK	1		
27	36894-95201	LEAD (L:165)	1		
28	29125-93J10	SCREW	2		
29	41141-94301	ATTACHMENT, STEERING CABLE	1	OPT	

DT40W_P40_017

FIG.336A

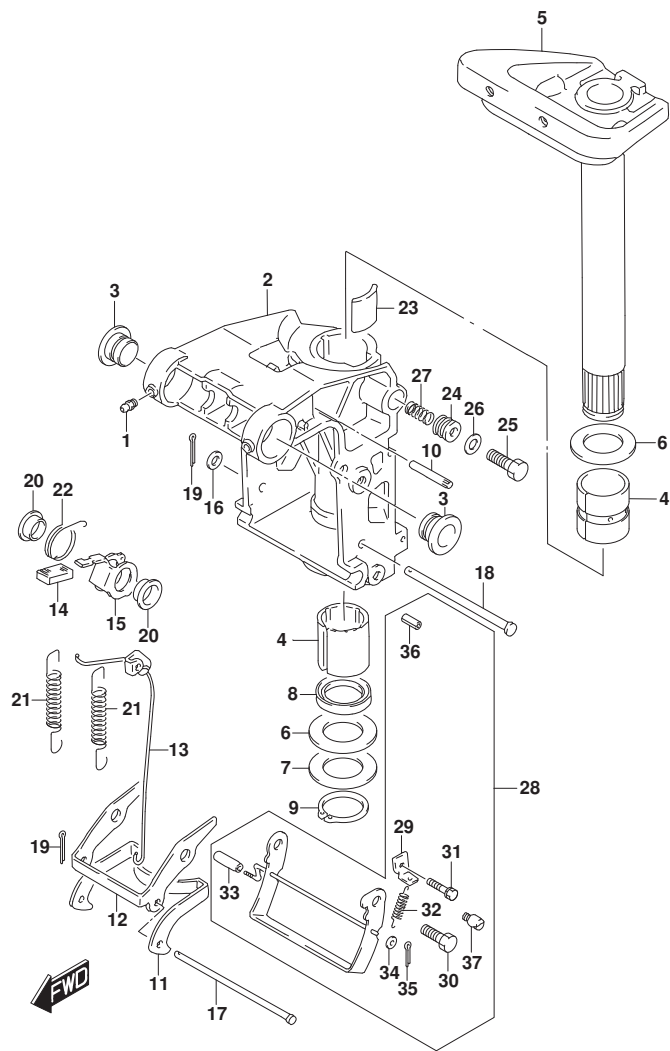

DT40W_P40_017_336A
SWIVEL BRACKET


FIG.336A (1-H-14) SWIVEL BRACKET (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-YAY	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-YAY	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43411-97E00	ADJUSTER, STEERING	1	
24	43412-93900	COVER, STEERING ADJUSTER	1	
25	09100-08309	BOLT (8X35)	1	
26	09160-08091	WASHER (8.5X14X1.0)	1	
27	29440-93J00	SPRING, STEERING ADJUSTER	1	

DT40W_P40_017

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
28	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT
29	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT
30	09111-10045	.BOLT (10X20.8)	2	OPT
31	09117-06030	.BOLT (6X16)	1	OPT
32	09443-12039	.SPRING	1	OPT
33	45255-95500	.KNOB, RELEASE LEVER	1	OPT
34	09160-05029	.WASHER (5.5X12X0.8)	1	OPT
35	09204-01002	.PIN	1	OPT
36	09205-08002	.SPRING PIN (8X16)	1	OPT
37	45331-94610	.PIN, SHALLOW DRIVE	1	OPT

FIG.336B

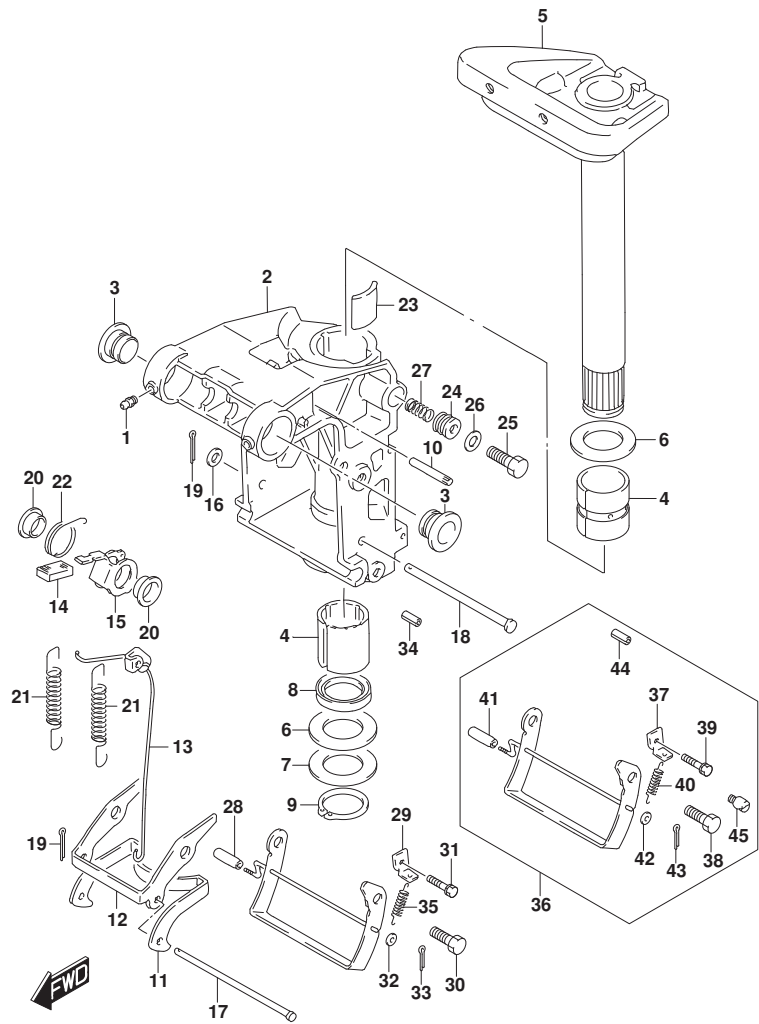


DT40W_P40_017_336B
SWIVEL BRACKET

FIG.336B (1-I-2) SWIVEL BRACKET (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-YAY	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-YAY	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43411-97E00	ADJUSTER, STEERING	1	
24	43412-93900	COVER, STEERING ADJUSTER	1	
25	09100-08309	BOLT (8X35)	1	
26	09160-08091	WASHER (8.5X14X1.0)	1	
27	29440-93J00	SPRING, STEERING ADJUSTER	1	
28	45255-95500	KNOB, RELEASE LEVER	1	
29	45713-92L00	STOPPER, SHALLOW WATER DRIVE	1	
30	09111-10067	BOLT (10X20.5)	2	
31	09116-06225	BOLT (6X15)	1	
32	09160-05029	WASHER (5.5X12X0.8)	1	
33	09204-01002	PIN	1	
34	09205-08002	SPRING PIN (8X16)	1	

FIG.336B

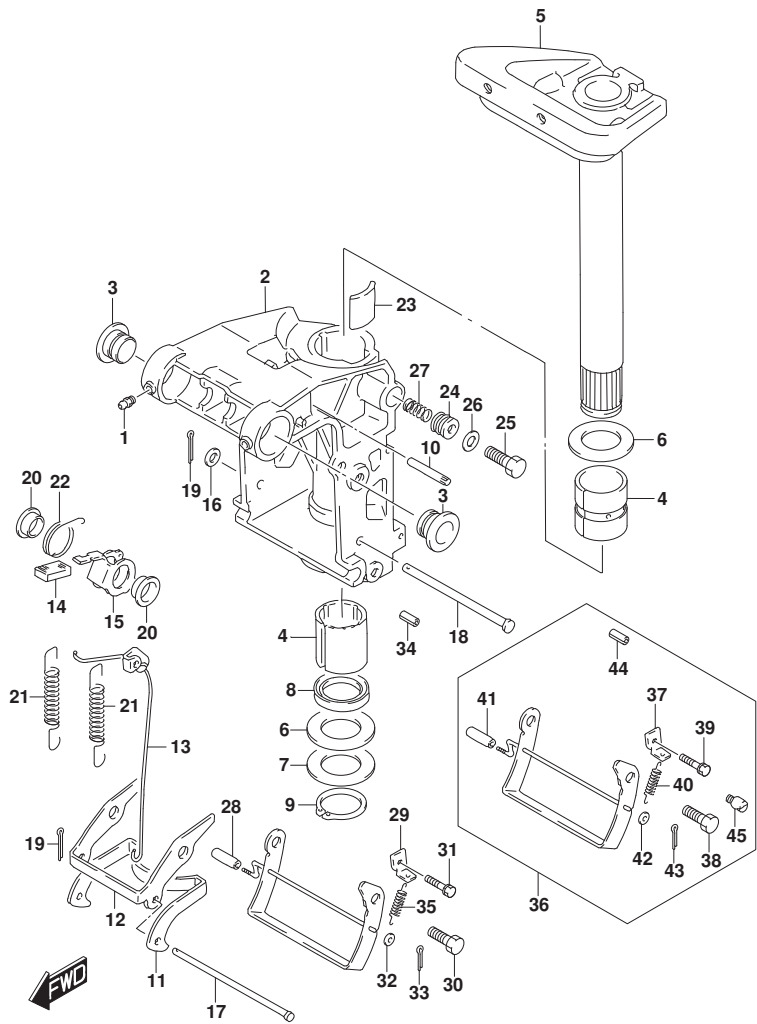


DT40W_P40_017_336B
SWIVEL BRACKET

FIG.336B (1-1-3) SWIVEL BRACKET (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
35	09443-12039	SPRING	1		
36	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
37	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
38	09111-10045	.BOLT (10X20.8)	2	OPT	
39	09117-06030	.BOLT (6X16)	1	OPT	
40	09443-12039	.SPRING	1	OPT	
41	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
42	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
43	09204-01002	.PIN	1	OPT	
44	09205-08002	.SPRING PIN (8X16)	1	OPT	
45	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

DT40W_P40_017

FIG.336C

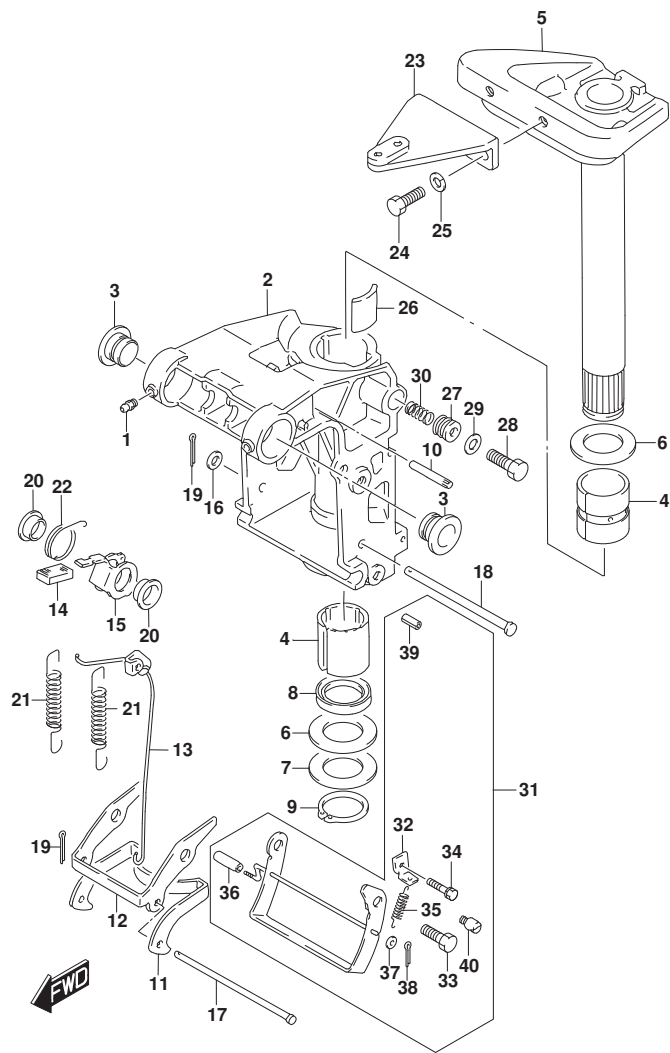


DT40W_P40_017_336C
SWIVEL BRACKET

FIG.336C (1-I-4) SWIVEL BRACKET (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-YAY	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-YAY	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43755-97E01	ATTACHMENT, STEERING BRACKET	1	
24	09100-10316	BOLT (10X25)	2	
25	09162-10005	LOCK WASHER	2	
26	43411-97E00	ADJUSTER, STEERING	1	
27	43412-93900	COVER, STEERING ADJUSTER	1	
28	09100-08309	BOLT (8X35)	1	
29	09160-08091	WASHER (8.5X14X1.0)	1	
30	29440-93J00	SPRING, STEERING ADJUSTER	1	

FIG.336C

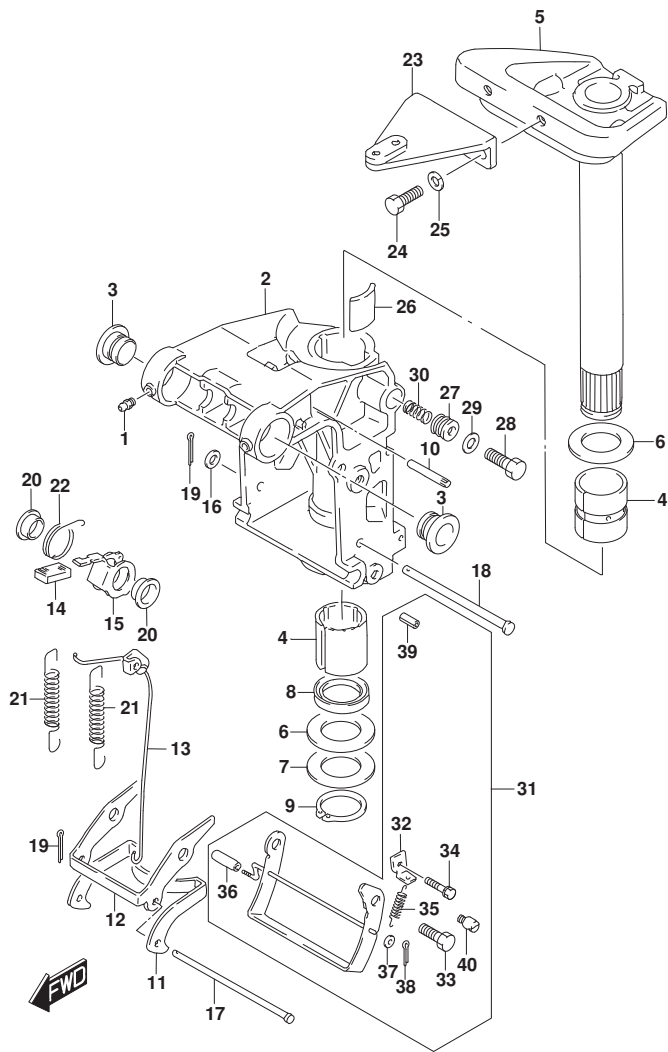


DT40W_P40_017_336C
SWIVEL BRACKET

FIG.336C (1-I-5) SWIVEL BRACKET (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
31	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
32	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
33	09111-10045	.BOLT (10X20.8)	2	OPT	
34	09117-06030	.BOLT (6X16)	1	OPT	
35	09443-12039	.SPRING	1	OPT	
36	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
37	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
38	09204-01002	.PIN	1	OPT	
39	09205-08002	.SPRING PIN (8X16)	1	OPT	
40	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

DT40W_P40_017

FIG.336D

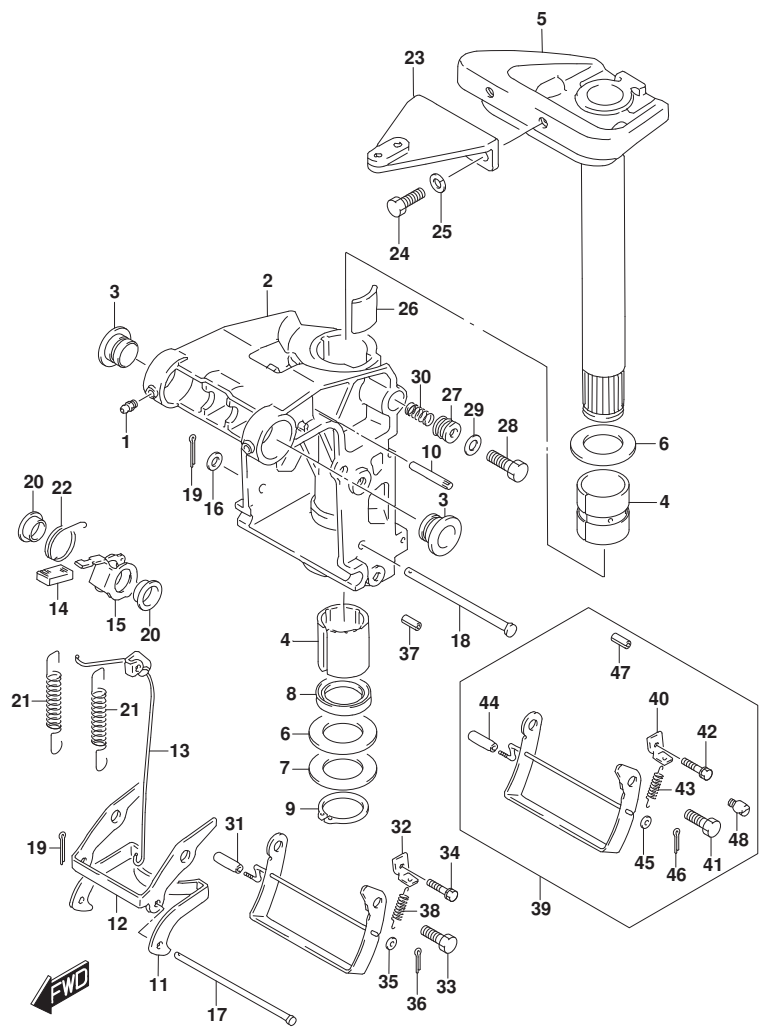


DT40W_P40_017_336D
SWIVEL BRACKET

FIG.336D (1-I-6) SWIVEL BRACKET (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-YAY	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-YAY	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43755-97E01	ATTACHMENT, STEERING BRACKET	1	
24	09100-10316	BOLT (10X25)	2	
25	09162-10005	LOCK WASHER	2	
26	43411-97E00	ADJUSTER, STEERING	1	
27	43412-93900	COVER, STEERING ADJUSTER	1	
28	09100-08309	BOLT (8X35)	1	
29	09160-08091	WASHER (8.5X14X1.0)	1	
30	29440-93J00	SPRING, STEERING ADJUSTER	1	
31	45255-95500	KNOB, RELEASE LEVER	1	
32	45713-92L00	STOPPER, SHALLOW WATER DRIVE	1	
33	09111-10067	BOLT (10X20.5)	2	
34	09116-06225	BOLT (6X15)	1	

DT40W_P40_017

FIG.336D

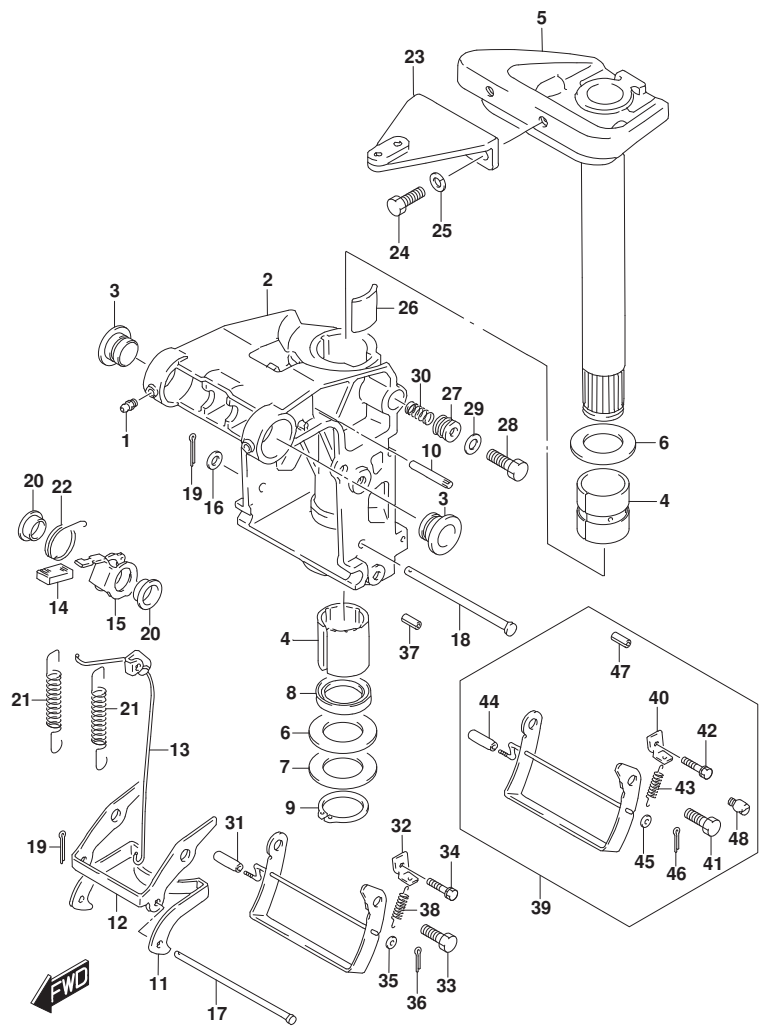


DT40W_P40_017_336D
SWIVEL BRACKET

FIG.336D (1-I-7) SWIVEL BRACKET (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	09160-05029	WASHER (5.5X12X0.8)	1	
36	09204-01002	PIN	1	
37	09205-08002	SPRING PIN (8X16)	1	
38	09443-12039	SPRING	1	
39	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT
40	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT
41	09111-10045	.BOLT (10X20.8)	2	OPT
42	09117-06030	.BOLT (6X16)	1	OPT
43	09443-12039	.SPRING	1	OPT
44	45255-95500	.KNOB, RELEASE LEVER	1	OPT
45	09160-05029	.WASHER (5.5X12X0.8)	1	OPT
46	09204-01002	.PIN	1	OPT
47	09205-08002	.SPRING PIN (8X16)	1	OPT
48	45331-94610	.PIN, SHALLOW DRIVE	1	OPT

DT40W_P40_017

FIG.336E

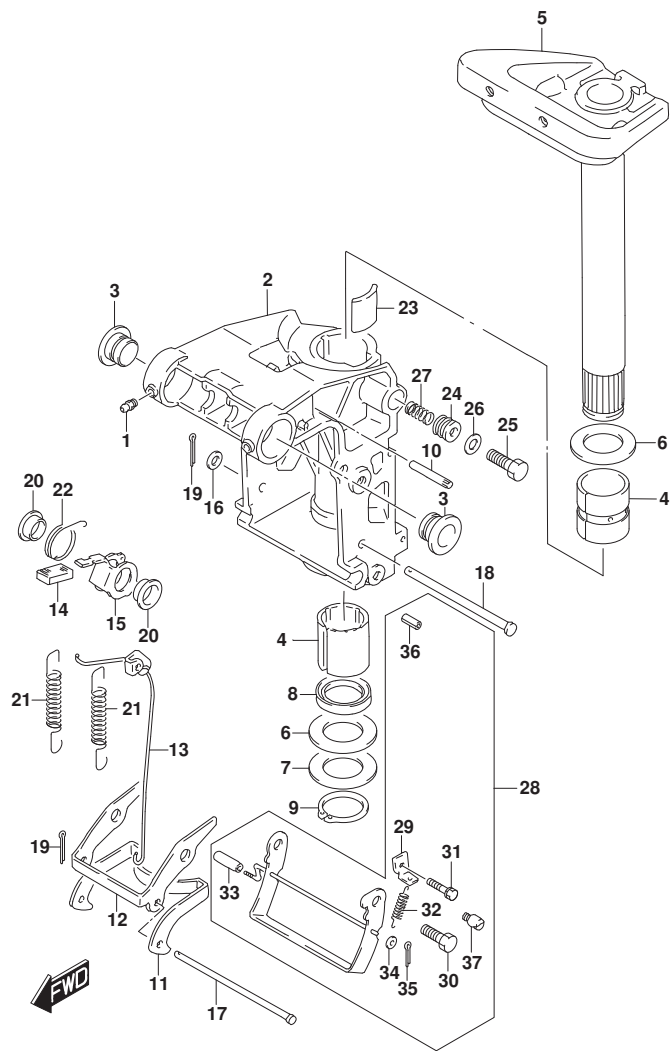


DT40W_P40_017_336E
SWIVEL BRACKET

FIG.336E (1-I-8) SWIVEL BRACKET (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	22511-99011	NIPPLE, GREASE	3	
2	43111-92L10-YAY	BRACKET, SWIVEL (BLACK)	1	
3	43211-87JL0	BUSH, SWIVEL BRACKET	2	
4	43711-97E01	BUSH, STEERING	2	
5	43750-92L20-YAY	BRACKET, STEERING (BLACK)	1	
6	09160-39001	WASHER (39.5X64X1)	3	
7	09181-39001	SHIM (39.5X64X0.3)	AR	
8	09282-39001	OIL SEAL (39X51X5)	1	
9	09380-38003	CIRCLIP	1	
10	41225-94502	PIN, RELEASE ARM	1	
11	45231-92L00	ARM, REVERSE LOCK	1	
12	45241-92L00	LINK, REVERSE LOCK ARM	1	
13	45250-92L00	LINK, RELEASE	1	
14	45255-93001	RUBBER, RELEASE LEVER	1	
15	45261-92L00	LEVER, RELEASE	1	
16	09160-08091	WASHER (8.5X14X1.0)	1	
17	09200-05015	PIN (5X117)	1	
18	09200-08043	PIN (8X11)	1	
19	09204-01002	PIN	2	
20	09306-22006	BUSH (22.6X27X8)	2	
21	09443-15031	SPRING	2	
22	09448-29018	SPRING	1	
23	43411-97E00	ADJUSTER, STEERING	1	
24	43412-93900	COVER, STEERING ADJUSTER	1	
25	09100-08309	BOLT (8X35)	1	
26	09160-08091	WASHER (8.5X14X1.0)	1	
27	29440-93J00	SPRING, STEERING ADJUSTER	1	

DT40W_P40_017

FIG.336E

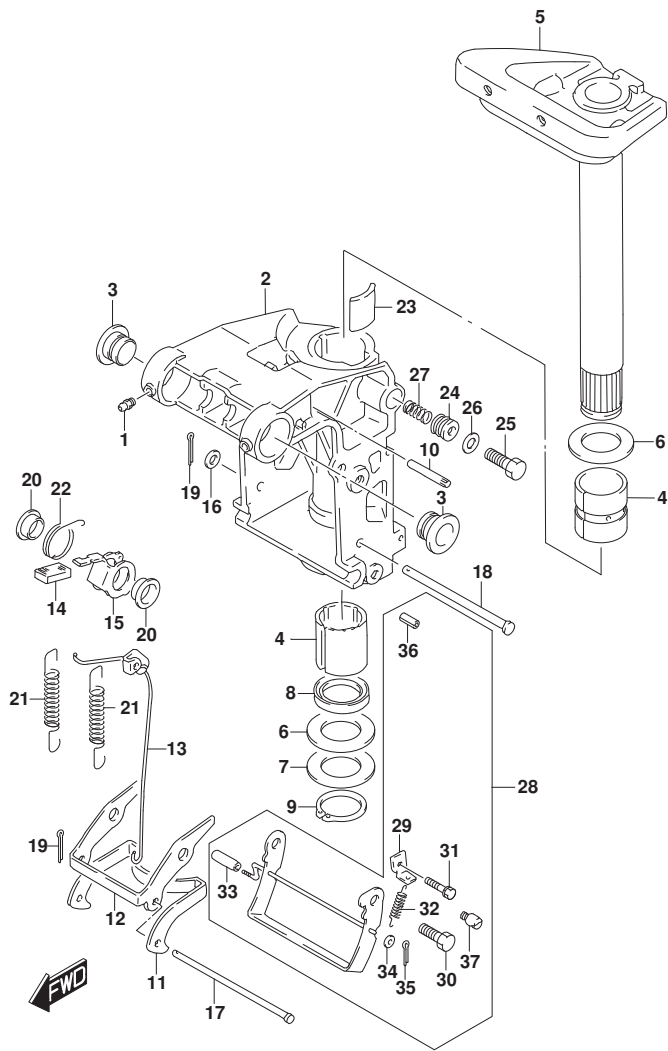


DT40W_P40_017_336E
SWIVEL BRACKET

FIG.336E (1-I-9) SWIVEL BRACKET (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
28	45700-92L00	SHALLOW WATER DRIVE ASSY	1	OPT	
29	45713-92L00	.STOPPER, SHALLOW WATER	1	OPT	
30	09111-10045	.BOLT (10X20.8)	2	OPT	
31	09117-06030	.BOLT (6X16)	1	OPT	
32	09443-12039	.SPRING	1	OPT	
33	45255-95500	.KNOB, RELEASE LEVER	1	OPT	
34	09160-05029	.WASHER (5.5X12X0.8)	1	OPT	
35	09204-01002	.PIN	1	OPT	
36	09205-08002	.SPRING PIN (8X16)	1	OPT	
37	45331-94610	.PIN, SHALLOW DRIVE	1	OPT	

DT40W_P40_017

FIG.405A

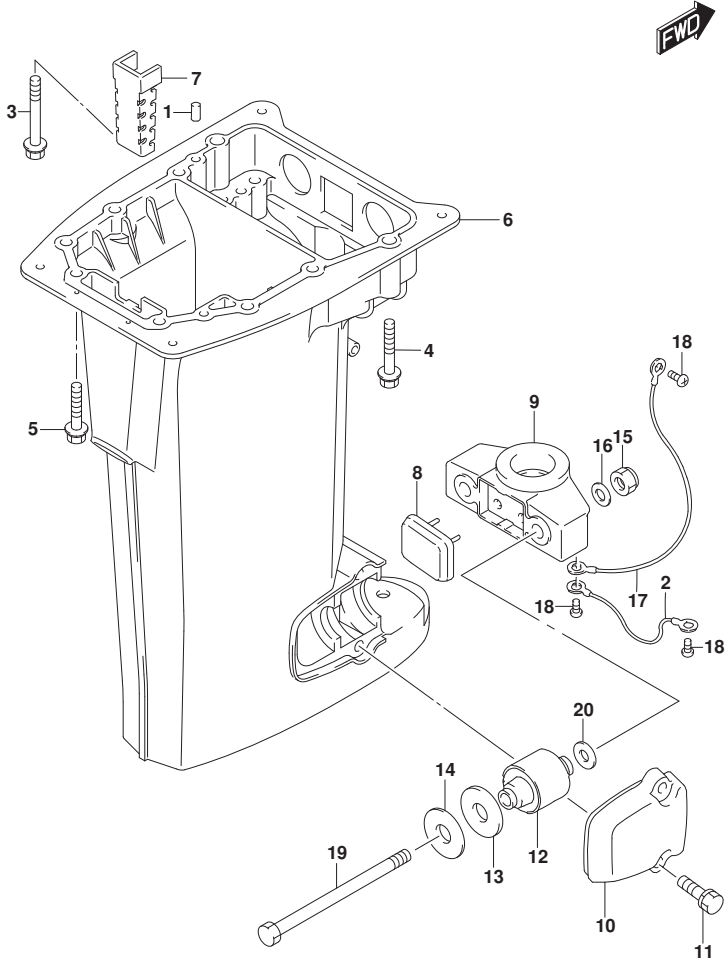


DT40W_P40_017_405A
DRIVE SHAFT HOUSING

FIG.405A (1-I-10) DRIVE SHAFT HOUSING (DT40W P40)


REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09202-06031	PIN (6X12)	2	
2	36894-95201	LEAD (L:165)	1	
3	09118-08172	BOLT (8X85)	1	
4	09118-08171	BOLT (8X75)	2	
5	09118-08168	BOLT (8X50)	6	
6-1	52110-92L30-YAY	HOUSING, DRIVE SHAFT (S) (BLACK)	1	W/TRANSOM(S)
6-2	52110-92L50-YAY	HOUSING, DRIVE SHAFT (SL) (BLACK)	1	W/TRANSOM(L)
6-3	52110-92L40-YAY	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L2)
7	11435-94400	PLATE, EXHAUST RELEASE	1	
8	54151-99E00	MOUNT, LOWER THRUST	1	
9	54211-92L00-YAY	BRACKET, LOWER MOUNT (BLACK)	1	
10	54221-92L10-YAY	COVER, LOWER MOUNT (BLACK)	2	
11	09116-08153	BOLT (8X35)	4	
12-1	54160-94410	MOUNT, LOWER	2	W/TRANSOM(S) W/TRANSOM(L)
12-2	54160-92L00	MOUNT, LOWER	2	W/TRANSOM(L2)
13	54165-94400	DAMPER, REVERSE STOP, LOWER	2	
14	09160-13018	WASHER (13X40X3)	2	
15	09159-12014	NUT	2	
16	09160-12066	WASHER (12.5X22X2.5)	2	
17	36894-94401	LEAD (L:195)	1	
18	29125-93J10	SCREW	3	
19	09100-12123	BOLT (12X125)	2	
20	09160-12108	WASHER (12X28X1)	2	

DT40W_P40_017




DT40W_P40_017

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	09202-06031	PIN (6X12)	2	
2	36894-95201	LEAD (L:165)	1	
3	09118-08172	BOLT (8X85)	1	
4	09118-08171	BOLT (8X75)	2	
5	09118-08168	BOLT (8X50)	6	
6-1	52110-92L50-YAY	HOUSING, DRIVE SHAFT (SL) (BLACK)	1	W/TRANSOM(L)
6-2	52110-92L40-YAY	HOUSING, DRIVE SHAFT (L) (BLACK)	1	W/TRANSOM(L2)
7	11435-94400	PLATE, EXHAUST RELEASE	1	
8	54151-99E00	MOUNT, LOWER THRUST	1	
9	54211-92L00-YAY	BRACKET, LOWER MOUNT (BLACK)	1	
10	54221-92L10-YAY	COVER, LOWER MOUNT (BLACK)	2	
11	09116-08153	BOLT (8X35)	4	
12-1	54160-94410	MOUNT, LOWER	2	W/TRANSOM(L)
12-2	54160-92L00	MOUNT, LOWER	2	W/TRANSOM(L2)
13	54165-94400	DAMPER, REVERSE STOP, LOWER	2	
14	09160-13018	WASHER (13X40X3)	2	
15	09159-12014	NUT	2	
16	09160-12066	WASHER (12.5X22X2.5)	2	
17	36894-94401	LEAD (L:195)	1	
18	29125-93J10	SCREW	3	
19	09100-12123	BOLT (12X125)	2	
20	09160-12108	WASHER (12X28X1)	2	




DT40W_P40_017



DT40W_P40_017

FIG.407A

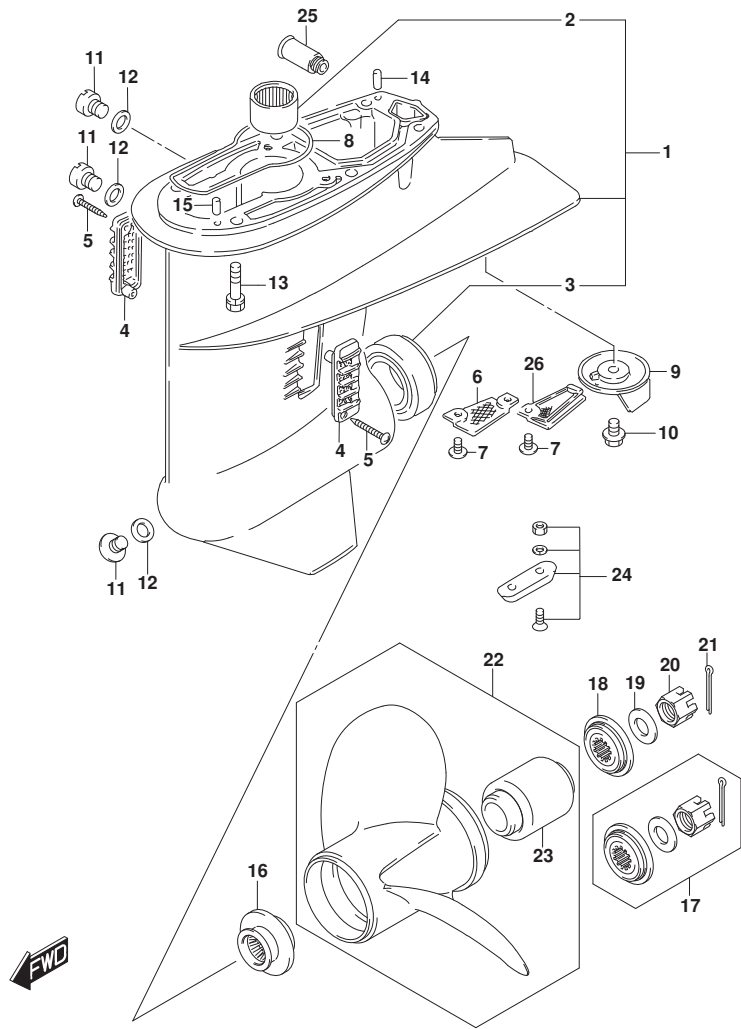

DT40W_P40_017_407A
GEAR CASE

FIG.407A (1-I-15) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	55100-92L20-YAY	CASE ASSY, GEAR (BLACK)	1	
2	09263-22039	.BEARING (22X30X30)	1	
3	09265-30004	.BEARING (30X62X17.25)	1	
4	17631-91L00	FILTER, WATER	2	
5	03142-04309	SCREW	2	
6	17635-87E00	FILTER, SUB WATER	1	
7	09125-05046	SCREW (5X12)	2	
8	55122-88L00	RING, GEAR CASE SEAL	1	
9	55125-92L00	TAB, TRIM	1	
10	09116-08147	BOLT (8X16)	1	
11	09248-10008	PLUG (10X7.5)	3	
12	09168-10022	GASKET (10X17X1.5)	3	
13	09116-08155	BOLT (8X45)	6	
14	09202-06027	PIN (6X23)	1	
15	09202-06025	PIN (6X17)	1	
16	57632-92L00	STOPPER, PROPELLER BUSH	1	
17	57630-92L01	PROPELLER NUT KIT	1	OPT
18	57633-94300	SPACER, PROPELLER NUT	1	
19	09160-16054	WASHER (16X32X3)	1	
20	09141-16008	NUT	1	
21	09204-03003	COTTER PIN (D:3.6,L:25)	1	
22-1	58100-88L13-019	PROPELLER (3X11-1/2X10) (BLACK)	1	
22-2	58100-88L23-019	PROPELLER (3X11-1/2X11) (BLACK)	1	
22-3	58100-88LA0-019	PROPELLER (3X11-5/8X12) (BLACK)	1	
22-4	58100-88LB0-019	PROPELLER (3X11-1/2X13) (BLACK)	1	
22-5	58100-88L52-019	PROPELLER (3X11-3/8X14) (BLACK)	1	
22-6	58100-88L62-019	PROPELLER (3X11-1/4X15) (BLACK)	1	
23	58120-88L01	.BUSH, PROPELLER	1	

FIG.407A


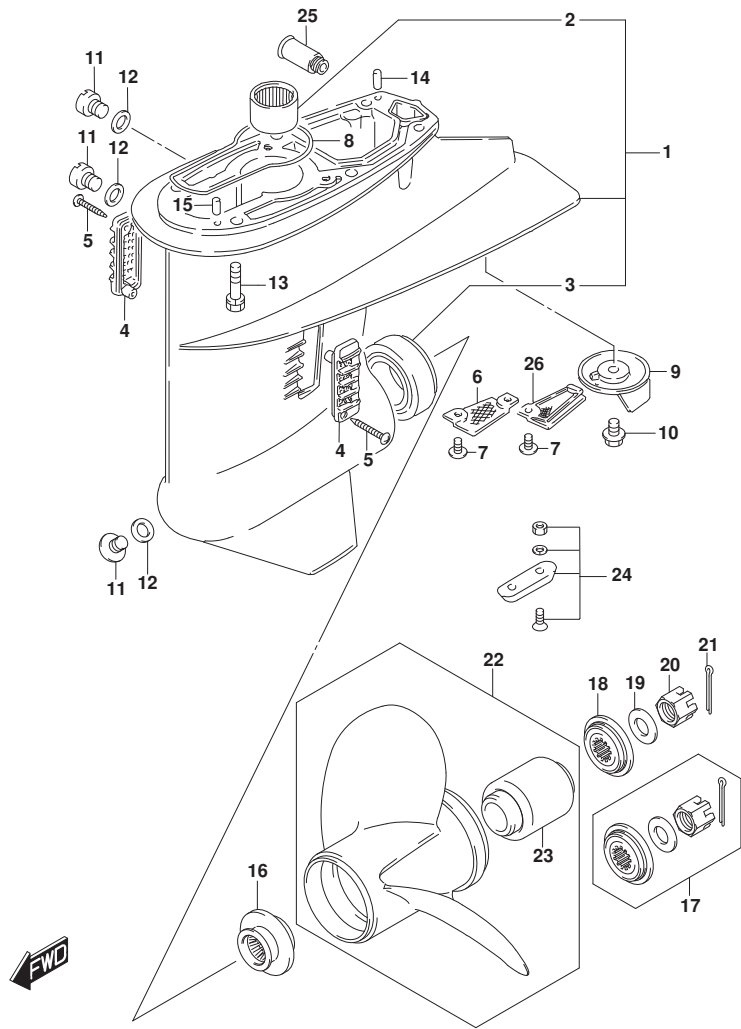


FIG.407A (1-J-2) GEAR CASE

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	55300-95500	ZINC, PROTECTION	1	OPT
25	55181-95200	ATTACHMENT, FLUSH HOSE	1	OPT
26	17635-87E10	PLATE, GEAR CASE	1	OPT
27	25700-88L00	KIT, GEAR CASE RE-SEALING	1	OPT
				NOT ILLUSTRATED

FIG.412A

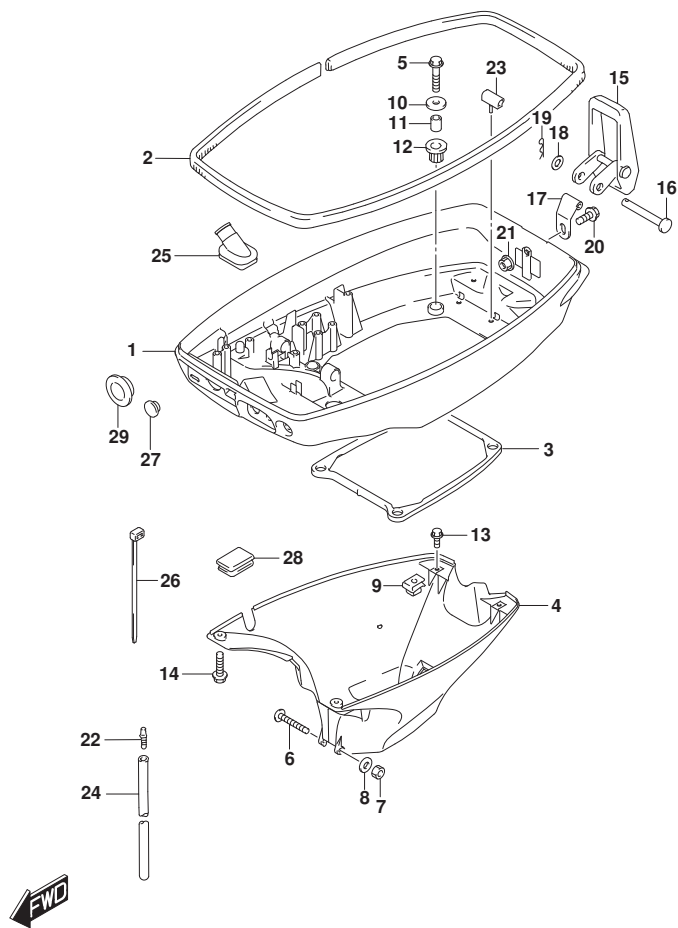


DT40W_P40_017_412A
LOWER COVER

FIG.412A (1-J-3) LOWER COVER (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	W/ELECTRIC STARTER
26	09407-25402	CLAMP (L:250)	1	W/ELECTRIC STARTER
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28-1	39669-94400	PLUG, LOWER COVER	1	W/ELECTRIC STARTER
28-2	39669-94400	PLUG, LOWER COVER	2	W/MANUAL STARTER
29	09250-33001	CAP (OD:40)	1	W/MANUAL STARTER

FIG.412B

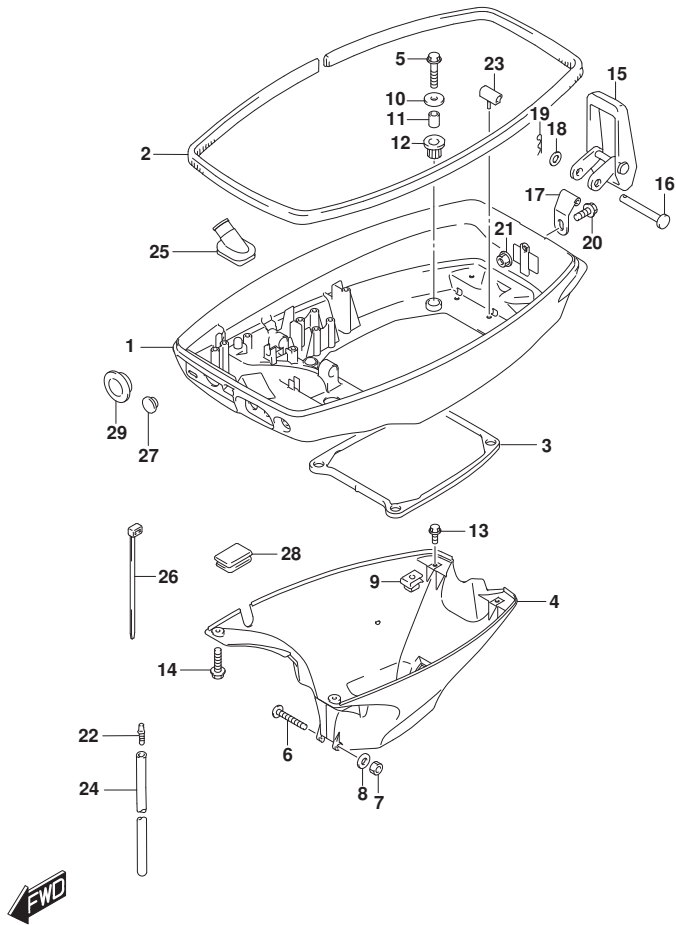

DT40W_P40_017_412B
LOWER COVER

FIG.412B (1-J-4) LOWER COVER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	W/ELECTRIC STARTER
26	09407-25402	CLAMP (L:250)	1	W/ELECTRIC STARTER
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28-1	39669-94400	PLUG, LOWER COVER	1	W/ELECTRIC STARTER
28-2	39669-94400	PLUG, LOWER COVER	2	W/MANUAL STARTER
29	09250-33001	CAP (OD:40)	1	W/MANUAL STARTER

DT40W_P40_017

FIG.412C

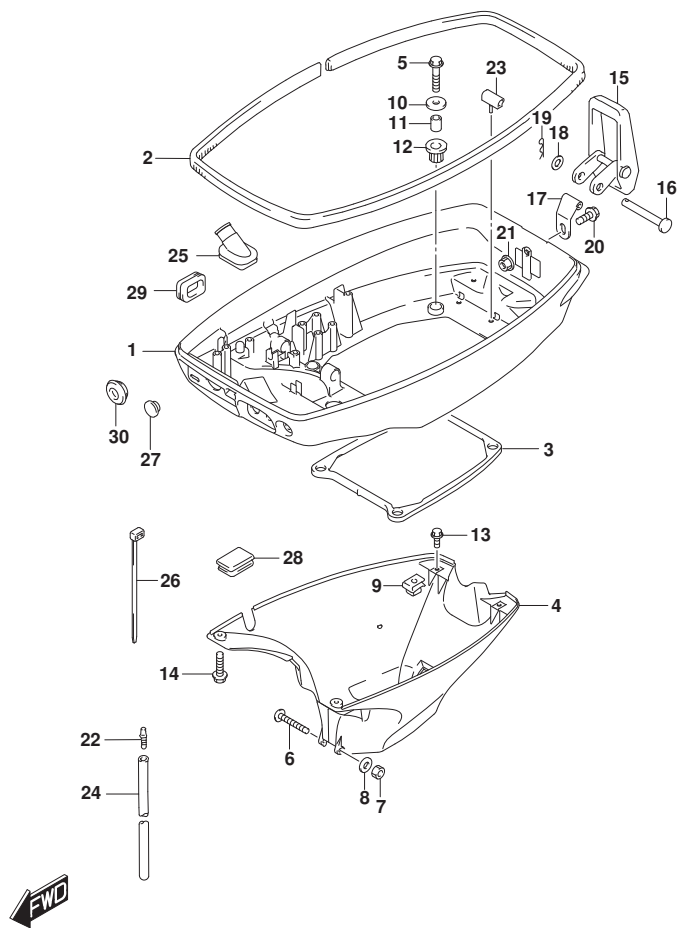


FIG.412C (1-J-5) LOWER COVER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	
26	09407-25402	CLAMP (L:250)	1	
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28	39669-94400	PLUG, LOWER COVER	1	
29	63625-94300	CAP, THROTTLE CABLE	1	
30	09250-16008	PLUG (OD:24)	1	

FIG.412D

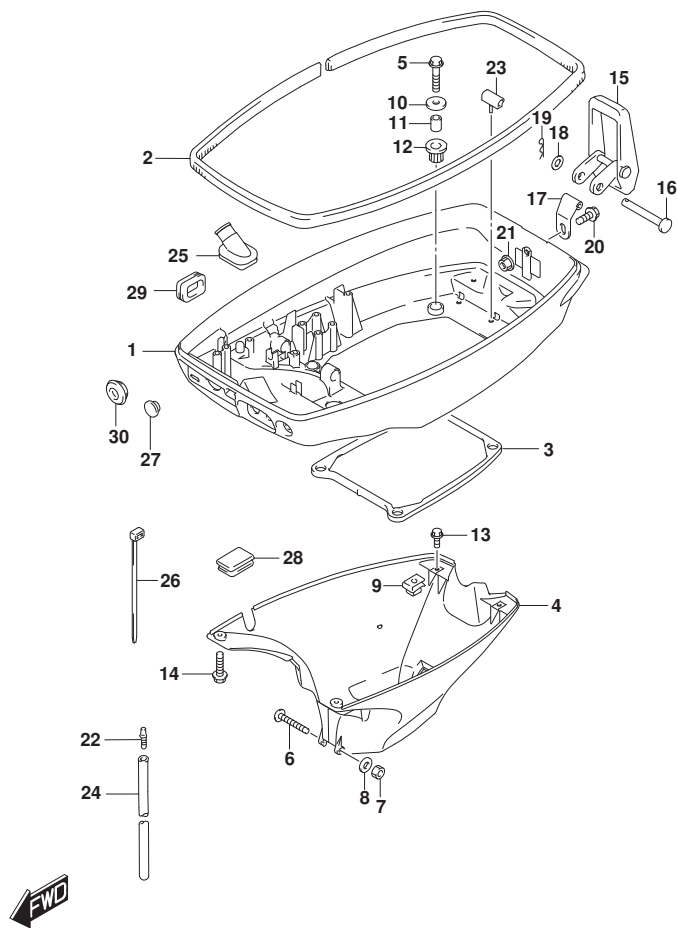


FIG.412D (1-J-6) LOWER COVER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	33811-94400	GROMMET, STARTER CABLE	1	
26	09407-25402	CLAMP (L:250)	1	
27	09250-12006	CAP (OD:20)	1	LAMP HOLE
28	39669-94400	PLUG, LOWER COVER	1	
29	63625-94300	CAP, THROTTLE CABLE	1	
30	09250-16008	PLUG (OD:24)	1	

FIG.412E

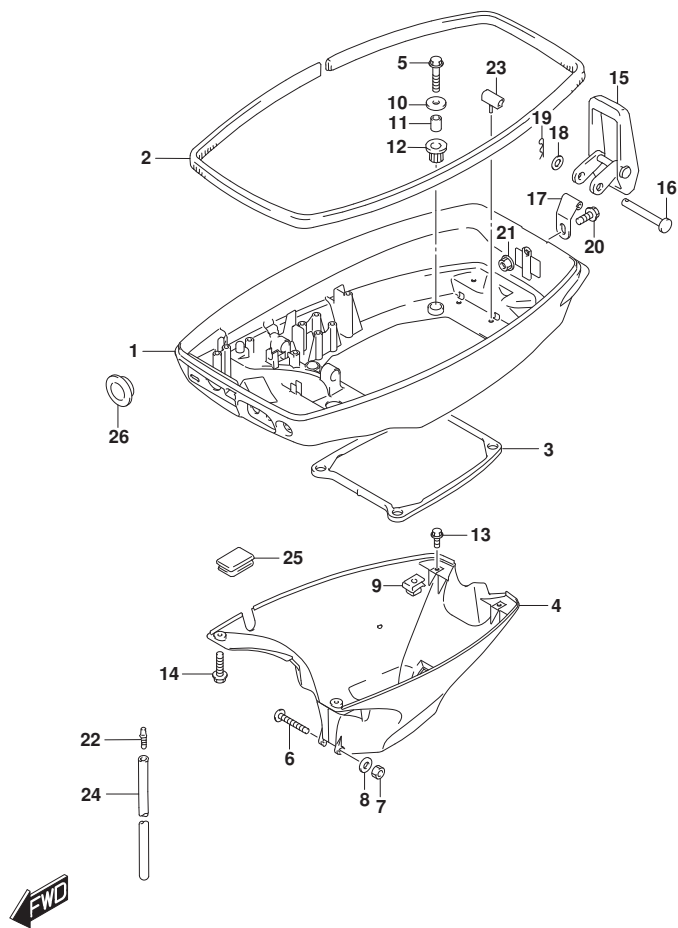


FIG.412E (1-J-7) LOWER COVER (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61111-92L20-YAY	COVER, ENGINE LOWER (BLACK)	1	
2	61112-94412	RUBBER, ENGINE LOWER COVER	1	
3	61113-92L00	SEAL, ENGINE LOWER COVER	1	
4	61131-92L00-QGF	COVER, ENGINE HOLDER (BLACK)	1	
5	09116-06232	BOLT (6X30)	4	
6	09125-05129	SCREW (5X50)	1	
7	09159-05042	NUT	1	
8	09160-05029	WASHER (5.5X12X0.8)	1	
9	09148-06017	NUT	2	
10	09160-06104	WASHER (6.5X24X2)	4	
11	09180-06295	SPACER (6.5X10X16)	4	
12	09320-10035	CUSHION	4	
13	09116-06227	BOLT (6X20)	2	
14	09116-06223	BOLT (6X12)	2	
15	61610-90L00	FASTENER	1	
16	61616-93EL0	PIN, LEVER	1	
17	61642-90L00	HOLDER, FASTENER LEVER	1	
18	09161-04012	WASHER (4.2X11X1)	1	
19	09385-04003	CLIP	1	
20	09116-06227	BOLT (6X20)	1	
21	08310-00067	NUT	1	
22	61155-94400	TUBE, WATER INSPECTION	1	
23	61138-944L0	COVER, WATER	3	
24	09352-50903-600	HOSE (5X9X600)	1	L:600->50
25	39669-94400	PLUG, LOWER COVER	2	
26	09250-33001	CAP (OD:40)	1	

FIG.420A

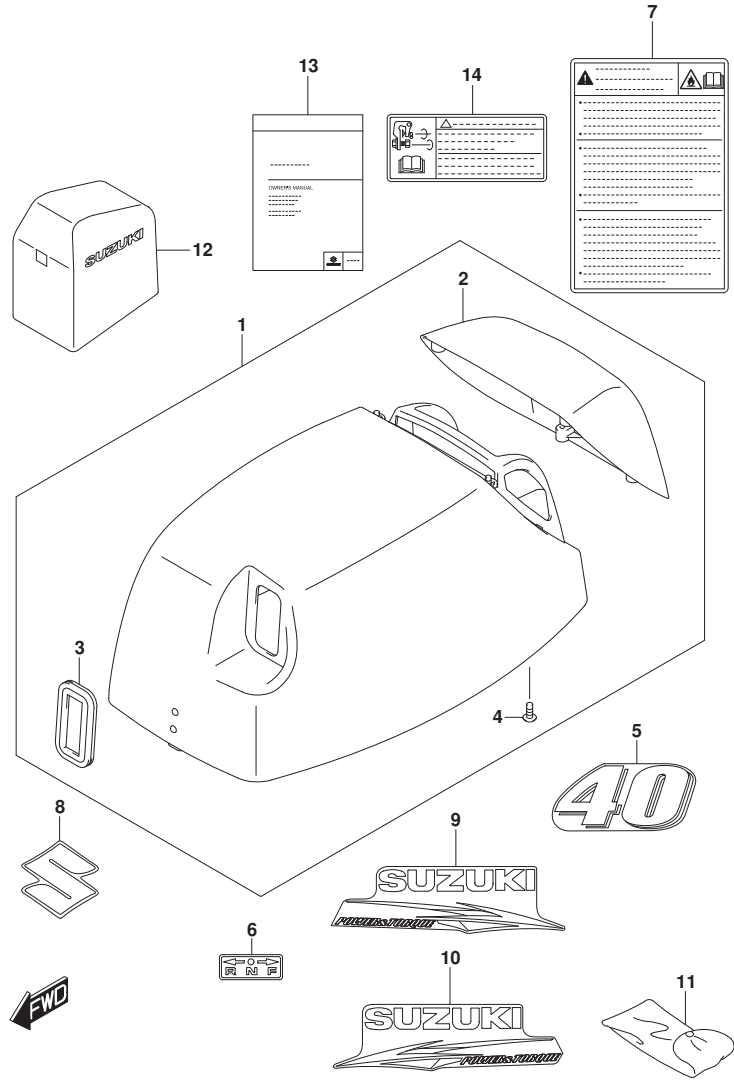


FIG.420A (1-J-8) ENGINE COVER (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-92L01-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L10	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L10	STRIPE, ENGINE COVER STBD	1	
10	61453-91L10	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	68110-87L00	COVER, WEATHER	1	OPT
13	99011-92LA0-063	MANUAL, OWNER'S	1	
14	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.420B

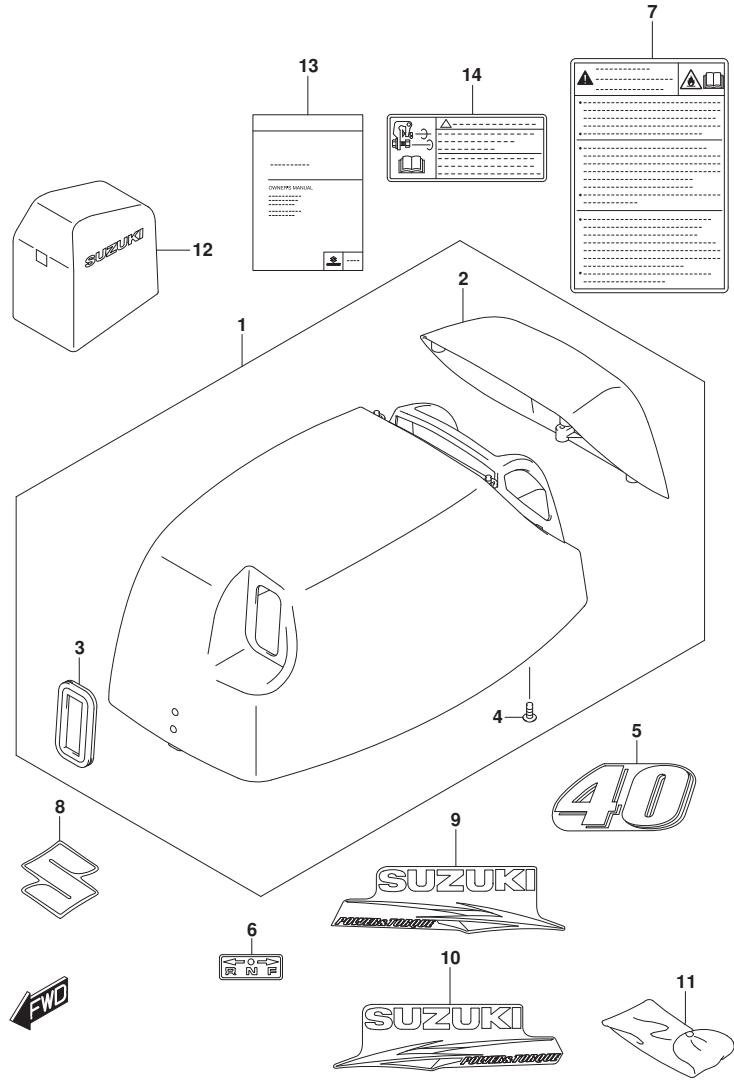


FIG.420B (1-J-9) ENGINE COVER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-92L01-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L10	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L10	STRIPE, ENGINE COVER STBD	1	
10	61453-91L10	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	68110-87L00	COVER, WEATHER	1	OPT
13	99011-92LA0-063	MANUAL, OWNER'S	1	
14	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.420C


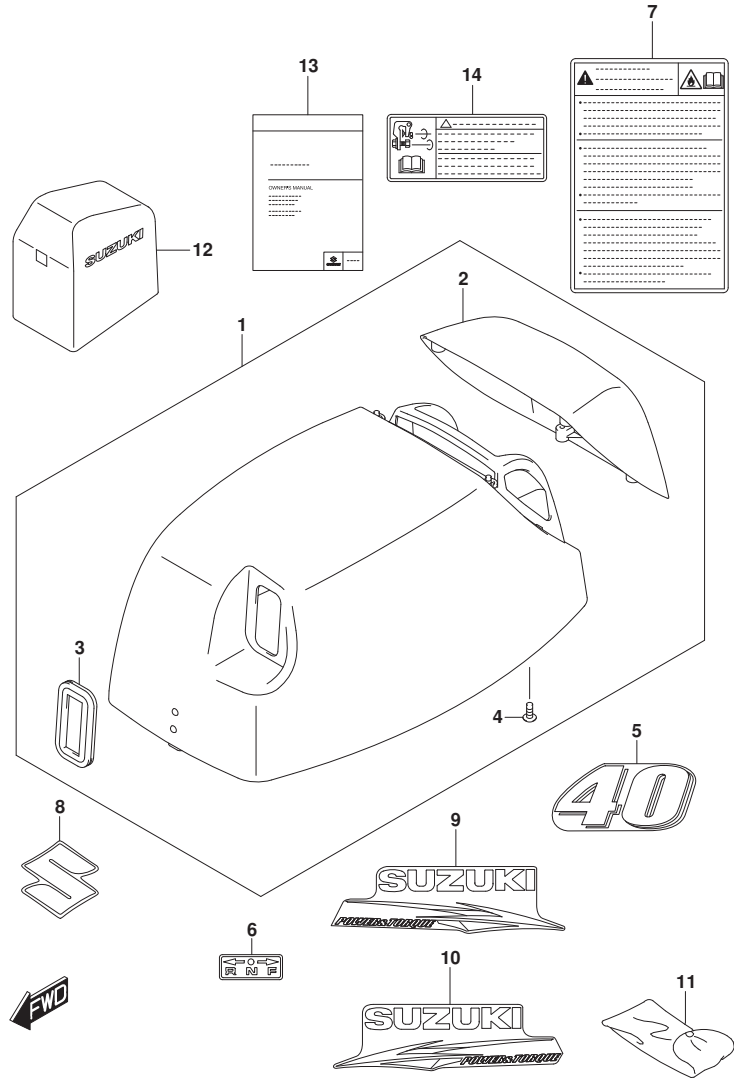


FIG.420C (1-J-10) ENGINE COVER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-92L01-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L10	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L10	STRIPE, ENGINE COVER STBD	1	
10	61453-91L10	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	68110-87L00	COVER, WEATHER	1	OPT
13	99011-92LA0-063	MANUAL, OWNER'S	1	
14	69911-91J50	MARK, CLAMP BRACKET	1	

DT40W_P40_017_420D
ENGINE COVER



DT40W_P40_017

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	61400-92L01-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L10	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L10	STRIPE, ENGINE COVER STBD	1	
10	61453-91L10	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	68110-87L00	COVER, WEATHER	1	OPT
13	99011-92LA0-063	MANUAL, OWNER'S	1	
14	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.420E

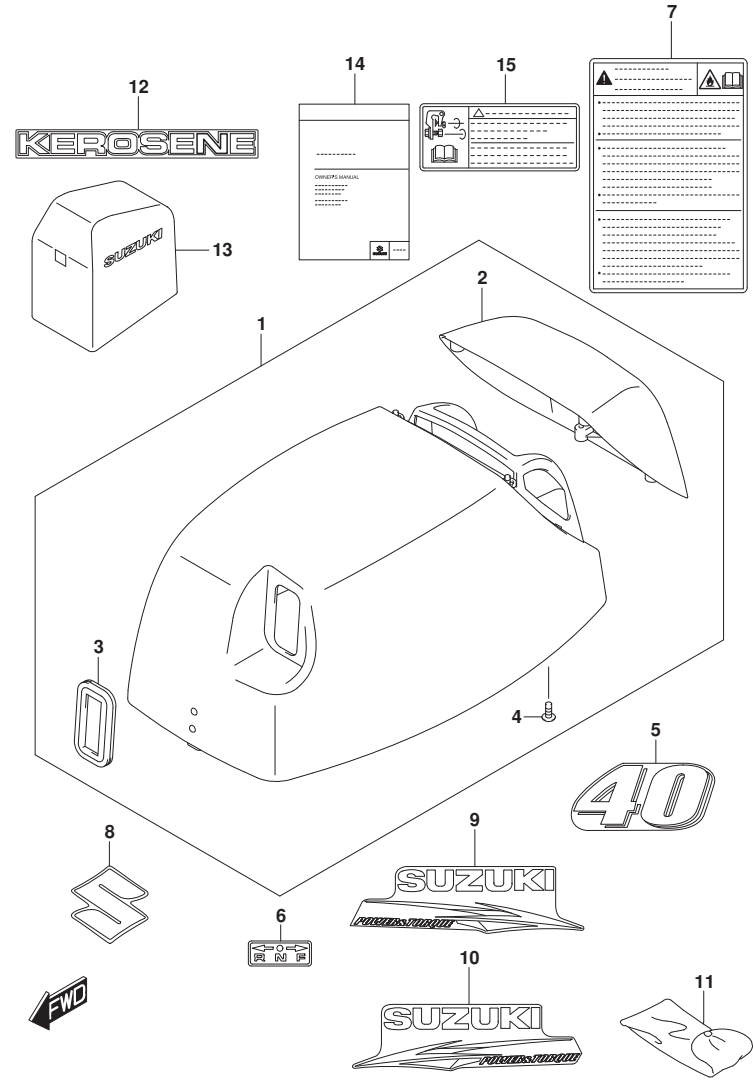


FIG.420E (1-J-12) ENGINE COVER (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	61400-92L01-YAY	COVER SET, ENGINE (BLACK)	1	
2	61431-92L00-YAY	.HANDLE, TILT UP (BLACK)	1	
3	61622-95500	.SEAL, RECOIL STARTER	1	
4	03542-06169	.SCREW	4	
5	61435-92L10	MARK, EMBLEM REAR (40)	1	
6	21131-96010	MARK, CLUTCH SHIFT	1	
7	61458-89L00	LABEL, ENGINE COVER	1	
8	68111-91L00	EMBLEM, "S"	1	
9	61443-91L10	STRIPE, ENGINE COVER STBD	1	
10	61453-91L10	STRIPE, ENGINE COVER PORT	1	
11	59800-90L01	TOOL ASSY	1	
12	61449-95L00	MARK, KEROSENE	1	
13	68110-87L00	COVER, WEATHER	1	OPT
14	99011-92LB0-063	MANUAL, OWNER'S	1	
15	69911-91J50	MARK, CLAMP BRACKET	1	

FIG.432A (1-J-13) FUEL TANK (PLASTIC/25L) (DT40W P40)


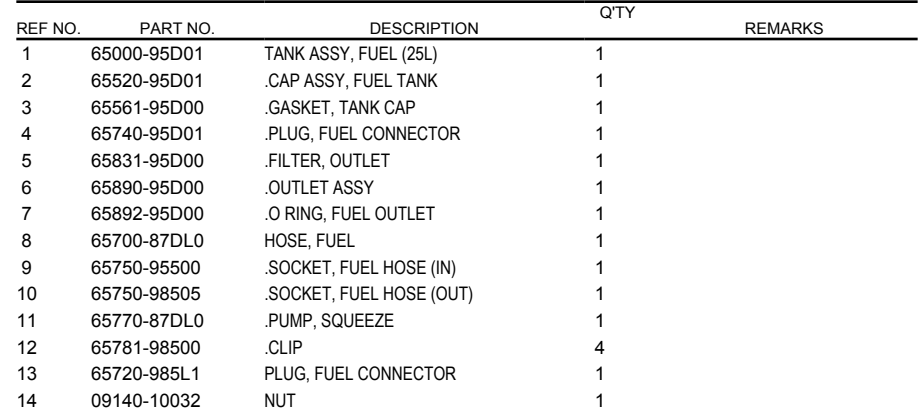


FIG.432B

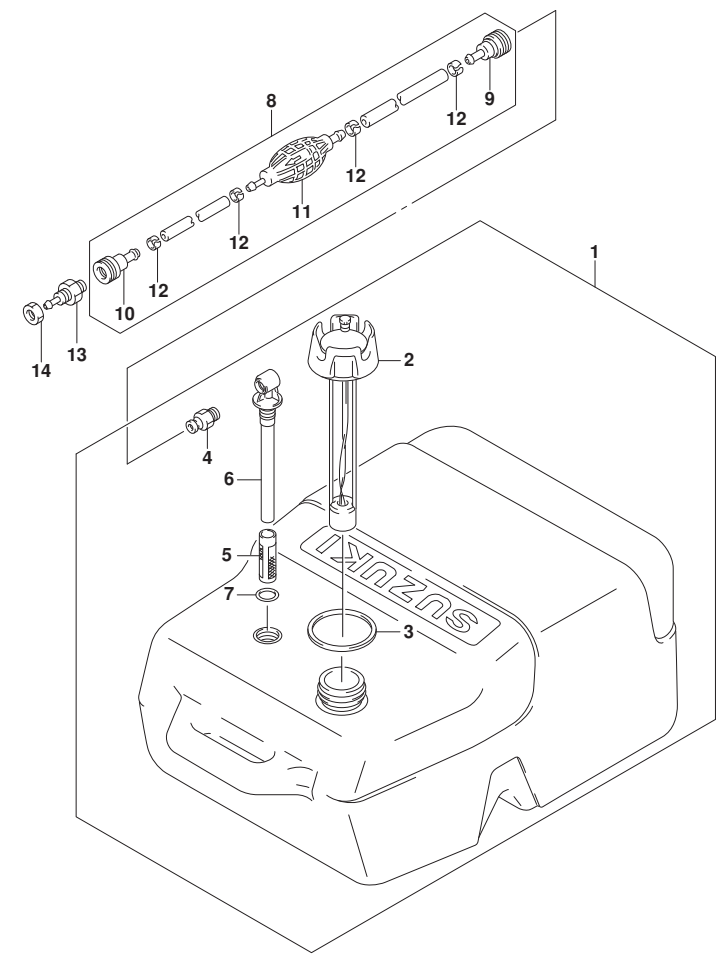

DT40W_P40_017_432B
FUEL TANK

FIG.432B (1-J-14) FUEL TANK (PLASTIC/25L) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-95500	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

DT40W_P40_017

FIG.432C


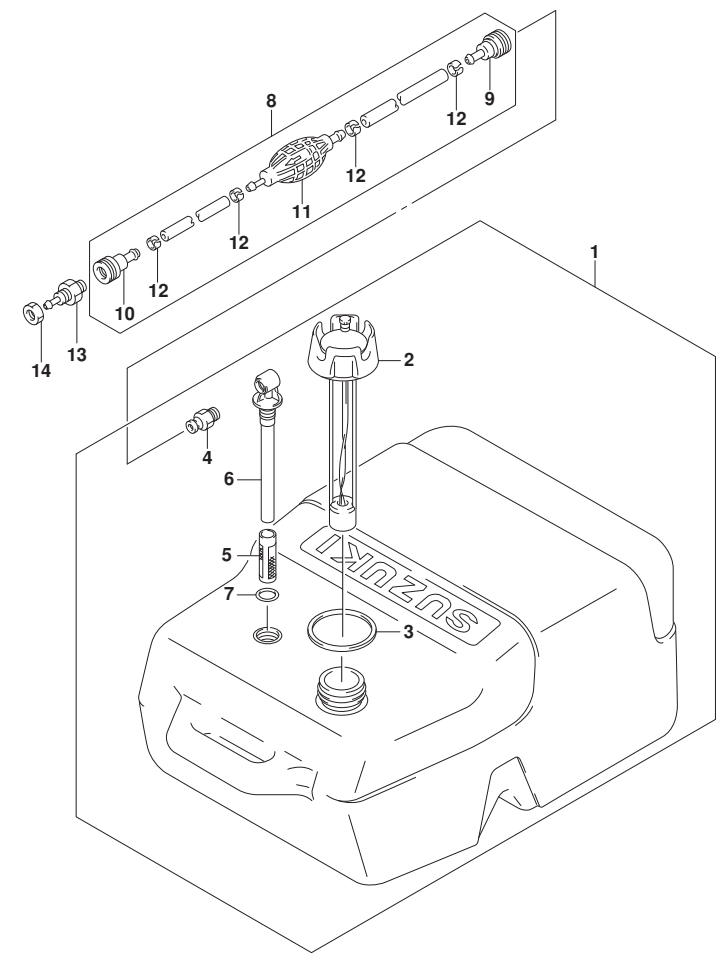


FIG.432C (1-J-15) FUEL TANK (PLASTIC/25L) (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-95500	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

FIG.432D

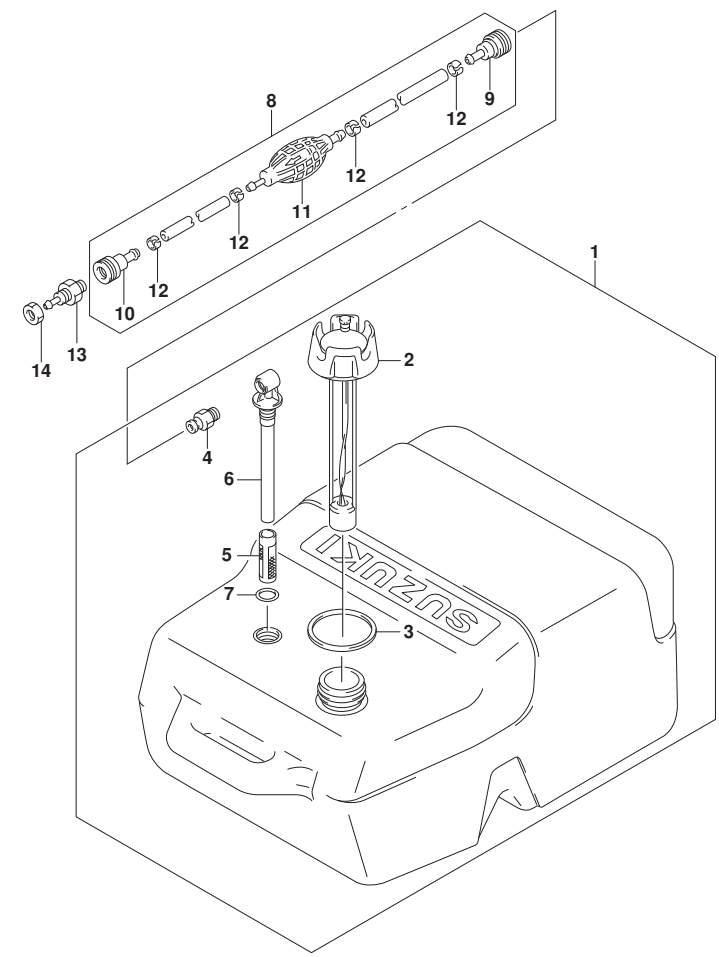


DT40W_P40_017_432D
FUEL TANK

FIG.432D (1-K-2) FUEL TANK (PLASTIC/25L) (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-87DL0	HOSE, FUEL	1	
9	65750-95500	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65770-87DL0	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65720-985L1	PLUG, FUEL CONNECTOR	1	
14	09140-10032	NUT	1	

DT40W_P40_017


DT40W_P40_017_432E
FUEL TANK



DT40W_P40_017

REF NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	65000-95D01	TANK ASSY, FUEL (25L)	1	
2	65520-95D01	.CAP ASSY, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65740-95D01	.PLUG, FUEL CONNECTOR	1	
5	65831-95D00	.FILTER, OUTLET	1	
6	65890-95D00	.OUTLET ASSY	1	
7	65892-95D00	.O RING, FUEL OUTLET	1	
8	65700-96362	HOSE, FUEL (L:2620)	1	FOR KEROSENE W/FUEL TANK
9	65750-95500	.SOCKET, FUEL HOSE (IN)	1	
10	65750-98505	.SOCKET, FUEL HOSE (OUT)	1	
11	65779-93900	.UNION, FUEL HOSE	1	
12	65781-98500	.CLIP	4	
13	65700-94424	HOSE, FUEL	1	FOR KEROSENE N/FUEL TANK
14	65750-98505	.SOCKET, FUEL HOSE	1	
15	65779-93900	.UNION, FUEL HOSE	1	
16	65781-98500	.CLIP	4	
17	65830-95500	.FILTER	1	
18	65842-94401	.TUBE	1	
19	09401-10412	.CLIP	1	
20	65318-93910	MARK, KEROSENE CAUTION	1	W/FUEL TANK

FIG.432F

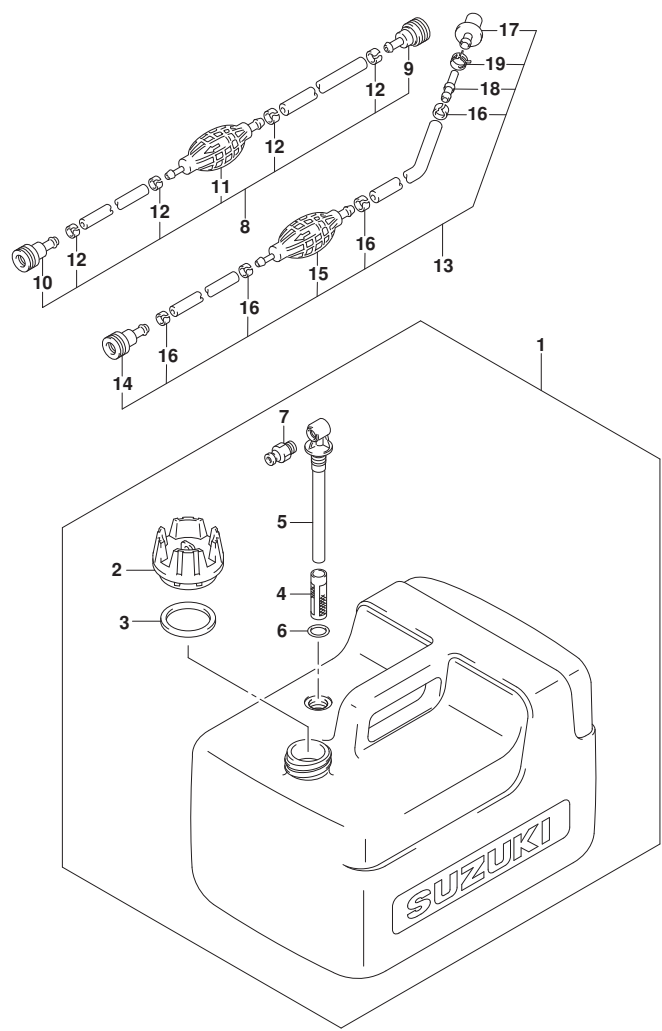

DT40W_P40_017_432F
FUEL TANK

FIG.432F (1-K-4) FUEL TANK (PLASTIC/12L) (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	65000-99100	TANK ASSY, FUEL (12L)	1	
2	65520-99100	.CAP, FUEL TANK	1	
3	65561-95D00	.GASKET, TANK CAP	1	
4	65831-95D00	.FILTER, OUTLET	1	
5	65890-99100	.OUTLET ASSY	1	
6	65892-95D00	.O RING, FUEL OUTLET	1	
7	65740-99100	.PLUG, FUEL CONNECTOR	1	
8	65700-95D04	HOSE, FUEL (L:2550)	1	FOR GASOLINE W/FUEL TANK
9	65750-95500	.SOCKET, FUEL HOSE (OUT)	1	
10	65750-98505	.SOCKET, FUEL HOSE (IN)	1	
11	65770-99J01	.PUMP, SQUEEZE	1	
12	65781-98500	.CLIP	4	
13	65700-94416	HOSE, FUEL	1	FOR GASOLINE N/FUEL TANK
14	65750-95500	.SOCKET, FUEL HOSE	1	
15	65770-90J11	.PUMP, SQUEEZE	1	
16	65781-98500	.CLIP	4	
17	65830-95500	.FILTER	1	
18	65842-94401	.TUBE	1	
19	09401-10412	.CLIP	1	

FIG.442A

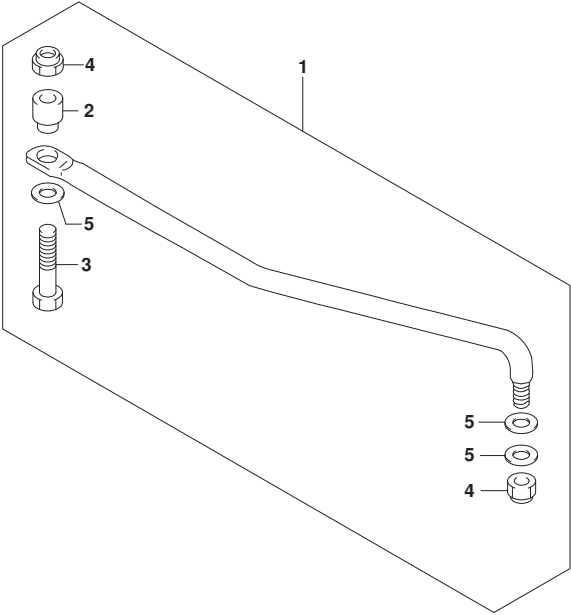


FIG.442A (1-K-5) DRAG LINK (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67701-94430	LINK ASSY, DRAG	1	
2	67721-94310	.SPACER	1	
3	67725-99E20	.BOLT	1	
4	67726-99E00	.NUT	2	
5	67728-99E00	.WASHER	3	

FIG.442B


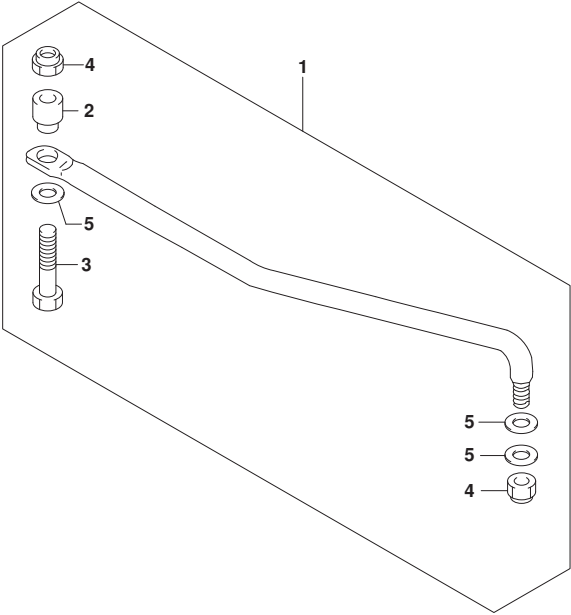


FIG.442B (1-K-6) DRAG LINK (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67701-94430	LINK ASSY, DRAG	1	
2	67721-94310	.SPACER	1	
3	67725-99E20	.BOLT	1	
4	67726-99E00	.NUT	2	
5	67728-99E00	.WASHER	3	

FIG.444A

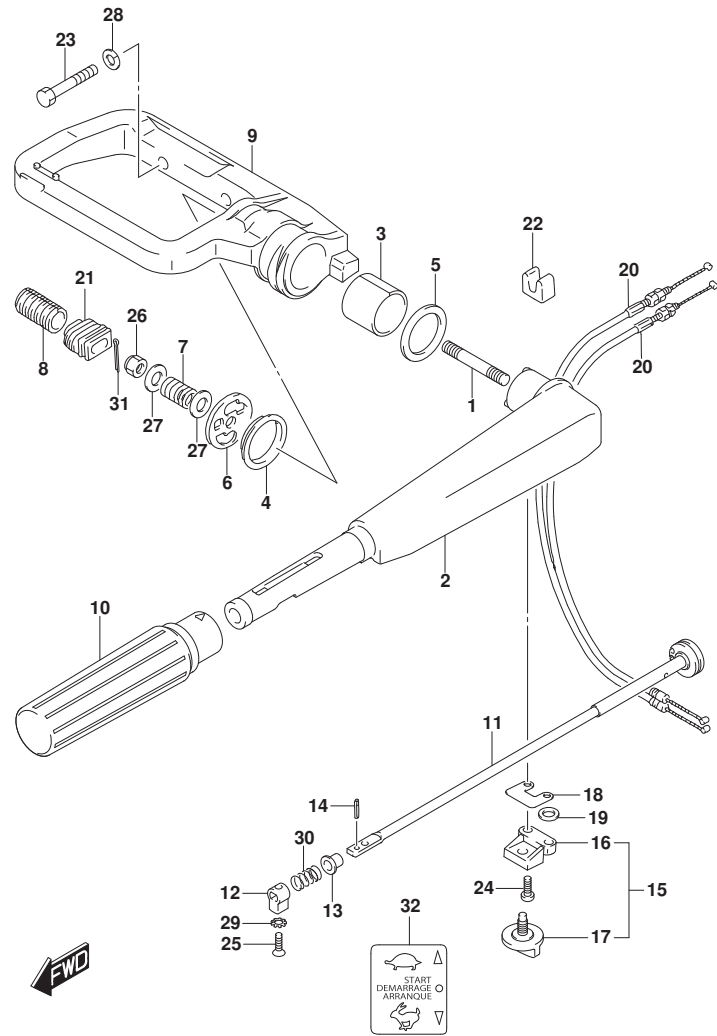


DT40W_P40_017_444A
TILLER HANDLE

FIG.444A (1-K-7) TILLER HANDLE (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09108-10137	STUD BOLT	1	
2	63111-92L00-YAY	HANDLE, TILLER (BLACK)	1	
3	63115-97E00	BUSH, TILLER HANDLE	1	
4	63116-97E00	WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	PLATE, TILLER HANDLE	1	
7	63126-97E01	SPRING, HANDLE STUD	1	
8	63128-97E00	COVER, HANDLE NUT	1	
9	63131-92L10-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
10	63210-93E30	GRIP, HANDLE	1	
11	63220-91L00	ROD, HANDLE	1	
12	63223-92D00	STOPPER, HANDLE ROD	1	
13	63225-93200	BUSH, HANDLE ROD	1	
14	09205-03038	SPRING PIN (3X14)	1	
15	63240-94J10	ADJUSTER, HANDLE GRIP	1	
16	63241-986B0	SUPPORT, HANDLE ROD	1	
17	63244-94J00	KNOB, THROTTLE ADJUSTER	1	
18	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
19	09148-06008	NUT	1	
20	63610-92L00	CABLE, THROTTLE	2	
21	63625-96300	GROMMET, THROTTLE CABLE	1	
22	63627-94400	GUIDE, THROTTLE CABLE	1	
23	09100-10317	BOLT (10X50)	2	
24	09136-05041	SCREW (5X20)	2	
25	09126-06015	SCREW (6X23)	1	
26	09159-10050	NUT	1	
27	09160-10082	WASHER (10.5X19X2)	2	
28	09162-10005	LOCK WASHER	2	
29	09163-06001	LOCK WASHER	1	
30	09440-12027	SPRING	1	
31	09204-01002	PIN	1	
32	63215-93401	MARK, HANDLE GRIP	1	

DT40W_P40_017

FIG.444B

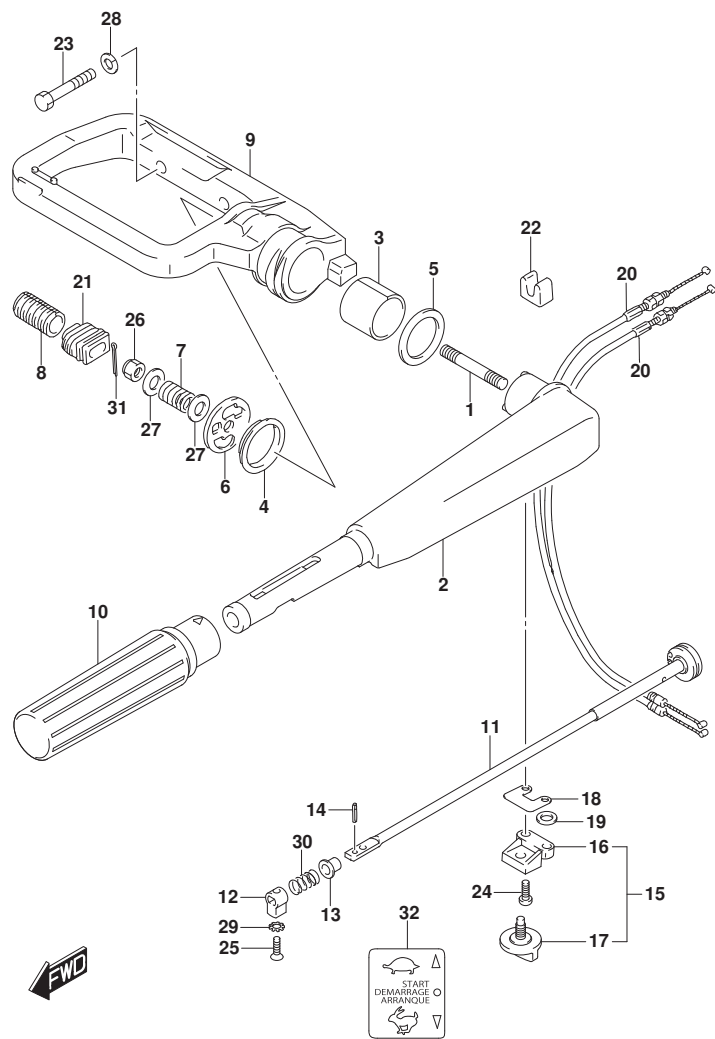


DT40W_P40_017_444B
TILLER HANDLE

FIG.444B (1-K-8) TILLER HANDLE (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09108-10137	STUD BOLT	1	
2	63111-92L00-YAY	HANDLE, TILLER (BLACK)	1	
3	63115-97E00	BUSH, TILLER HANDLE	1	
4	63116-97E00	WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	PLATE, TILLER HANDLE	1	
7	63126-97E01	SPRING, HANDLE STUD	1	
8	63128-97E00	COVER, HANDLE NUT	1	
9	63131-92L10-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
10	63210-93E30	GRIP, HANDLE	1	
11	63220-91L00	ROD, HANDLE	1	
12	63223-92D00	STOPPER, HANDLE ROD	1	
13	63225-93200	BUSH, HANDLE ROD	1	
14	09205-03038	SPRING PIN (3X14)	1	
15	63240-94J10	ADJUSTER, HANDLE GRIP	1	
16	63241-986B0	SUPPORT, HANDLE ROD	1	
17	63244-94J00	KNOB, THROTTLE ADJUSTER	1	
18	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
19	09148-06008	NUT	1	
20	63610-92L00	CABLE, THROTTLE	2	
21	63625-96300	GROMMET, THROTTLE CABLE	1	
22	63627-94400	GUIDE, THROTTLE CABLE	1	
23	09100-10317	BOLT (10X50)	2	
24	09136-05041	SCREW (5X20)	2	
25	09126-06015	SCREW (6X23)	1	
26	09159-10050	NUT	1	
27	09160-10082	WASHER (10.5X19X2)	2	
28	09162-10005	LOCK WASHER	2	
29	09163-06001	LOCK WASHER	1	
30	09440-12027	SPRING	1	
31	09204-01002	PIN	1	
32	63215-93401	MARK, HANDLE GRIP	1	

FIG.444C

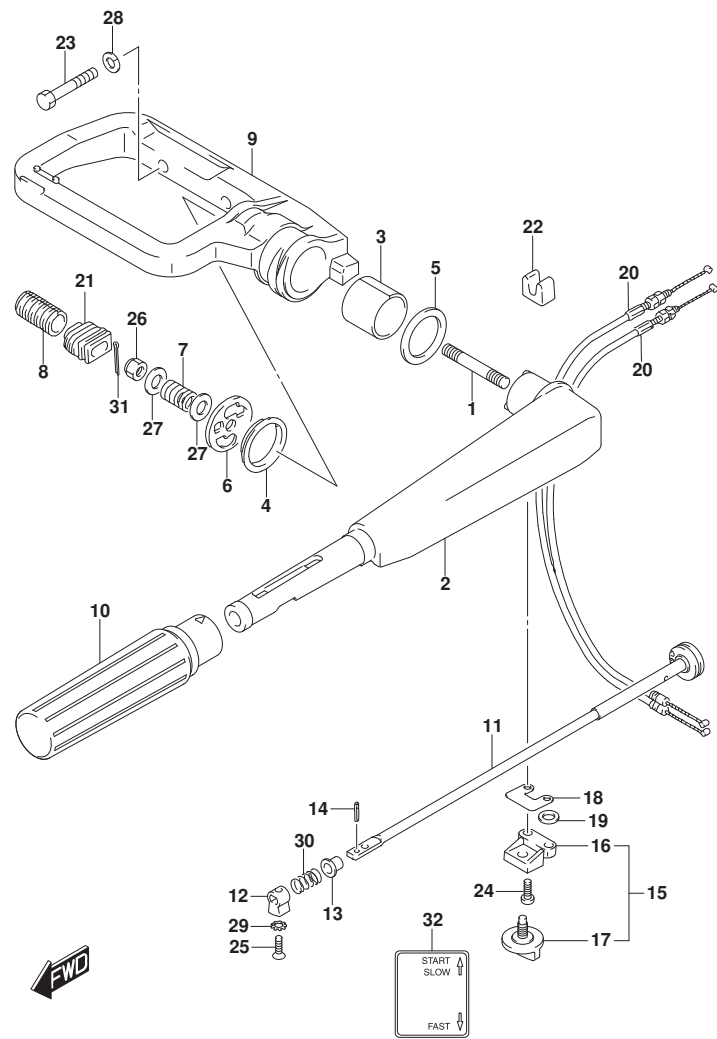

DT40W_P40_017_444C
TILLER HANDLE

FIG.444C (1-K-9) TILLER HANDLE (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	09108-10137	STUD BOLT	1	
2	63111-92L00-YAY	HANDLE, TILLER (BLACK)	1	
3	63115-97E00	BUSH, TILLER HANDLE	1	
4	63116-97E00	WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	PLATE, TILLER HANDLE	1	
7	63126-97E01	SPRING, HANDLE STUD	1	
8	63128-97E00	COVER, HANDLE NUT	1	
9	63131-92L10-YAY	BRACKET, TILLER HANDLE (BLACK)	1	
10	63210-93E30	GRIP, HANDLE	1	
11	63220-91L00	ROD, HANDLE	1	
12	63223-89E00	STOPPER, HANDLE ROD	1	
13	63225-93200	BUSH, HANDLE ROD	1	
14	09205-03038	SPRING PIN (3X14)	1	
15	63240-94J10	ADJUSTER, HANDLE GRIP	1	
16	63241-986B0	SUPPORT, HANDLE ROD	1	
17	63244-94J00	KNOB, THROTTLE ADJUSTER	1	
18	63225-94J00	PLATE, HANDLE ROD ADJUSTER	1	
19	09148-06008	NUT	1	
20	63610-92L00	CABLE, THROTTLE	2	
21	63625-96300	GROMMET, THROTTLE CABLE	1	
22	63627-94400	GUIDE, THROTTLE CABLE	1	
23	09100-10317	BOLT (10X50)	2	
24	09136-05041	SCREW (5X20)	2	
25	09126-06015	SCREW (6X23)	1	
26	09159-10050	NUT	1	
27	09160-10082	WASHER (10.5X19X2)	2	
28	09162-10005	LOCK WASHER	2	
29	09163-06001	LOCK WASHER	1	
30	09440-12027	SPRING	1	
31	09204-01002	PIN	1	
32	63215-93450	MARK, HANDLE GRIP	1	

DT40W_P40_017

FIG.450A


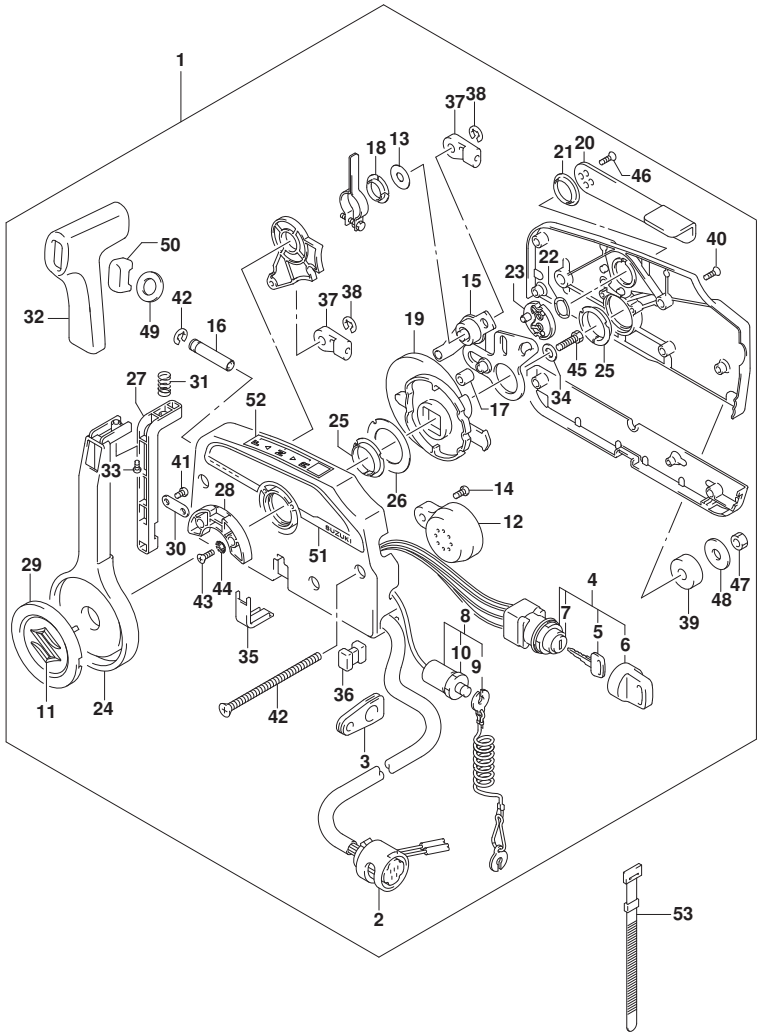


FIG.450A (1-K-10) REMOTE CONTROL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-97E50	REMOTE CONTROL ASSY	1	
2	36620-92E20	..WIRE ASSY, REMOCON	1	
3	36628-92E00	..GROMMET	1	
4	37110-99E01	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	1	
5-2	37141-99E10	..KEY (932)	1	
5-3	37141-99E20	..KEY (933)	1	
5-4	37141-99E30	..KEY (934)	1	
5-5	37141-99E40	..KEY (935)	1	
5-6	37141-99E50	..KEY (936)	1	
5-7	37141-99E60	..KEY (937)	1	
5-8	37141-99E70	..KEY (938)	1	
5-9	37141-99E80	..KEY (939)	1	
5-10	37141-99E90	..KEY (940)	1	
5-11	37141-99EA0	..KEY (941)	1	
5-12	37141-99EB0	..KEY (942)	1	
6	37143-99E00	..CAP, KEY	1	
7	37149-93J00	..CAP, CYLINDER BODY	1	
8	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
9	37823-92E01	..PLATE	1	
10	37826-92J00	..NUT	1	
11	77811-54GB0-0PG	..EMBLEM, SUZUKI (CHROME)	1	
12	38500-92X50	..BUZZER, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X20)	1	
15	67220-95620	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	
18	67232-95600	..BUSH	1	
19	67238-87D00	..GEAR, DRIVE	1	
20	67241-99E10	..LEVER, FREE THROTTLE	1	
21	67243-95600	..BUSH	1	
22	67244-95600	..WAVE WASHER	1	
23	67245-95600	..DRUM, FREE THROTTLE	1	

FIG.450A

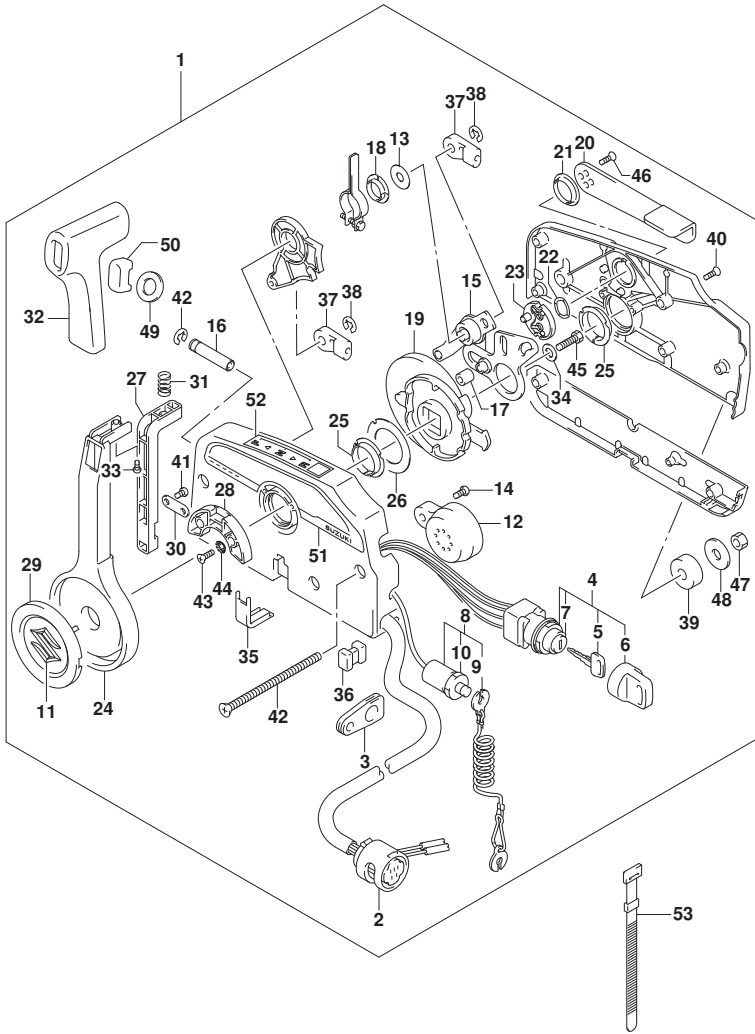

DT40W_P40_017_450A
REMOTE CONTROL

FIG.450A (1-K-11) REMOTE CONTROL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	.ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUT LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW, BUZZER BRKT	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67292-94300	.E RING	3	
39	67294-95600	.SPACER	3	
40	67296-90J10	.SCREW, COVER	5	
41	67296-94300	.SCREW	2	
42	67296-95600	.SCREW	3	
43	67296-95610	.SCREW	2	
44	67297-95600	.WASHER	2	
45	09100-08232	.BOLT (8X30)	1	
46	09126-05003	.SCREW (5X12)	2	
47	09140-06020	.NUT	3	
48	09160-06104	.WASHER (6.5X24X2)	3	
49	37859-90J00	.SPACER	1	
50	37864-94J10	.CAP,PTT SW	1	
51	67282-94L00	.DECAL,REMOCON SIDE	1	
52	67284-94L00	.MARK,HANDLE LEVER	1	
53	09407-12402	CLAMP (L:120)	2	

DT40W_P40_017

FIG.450B


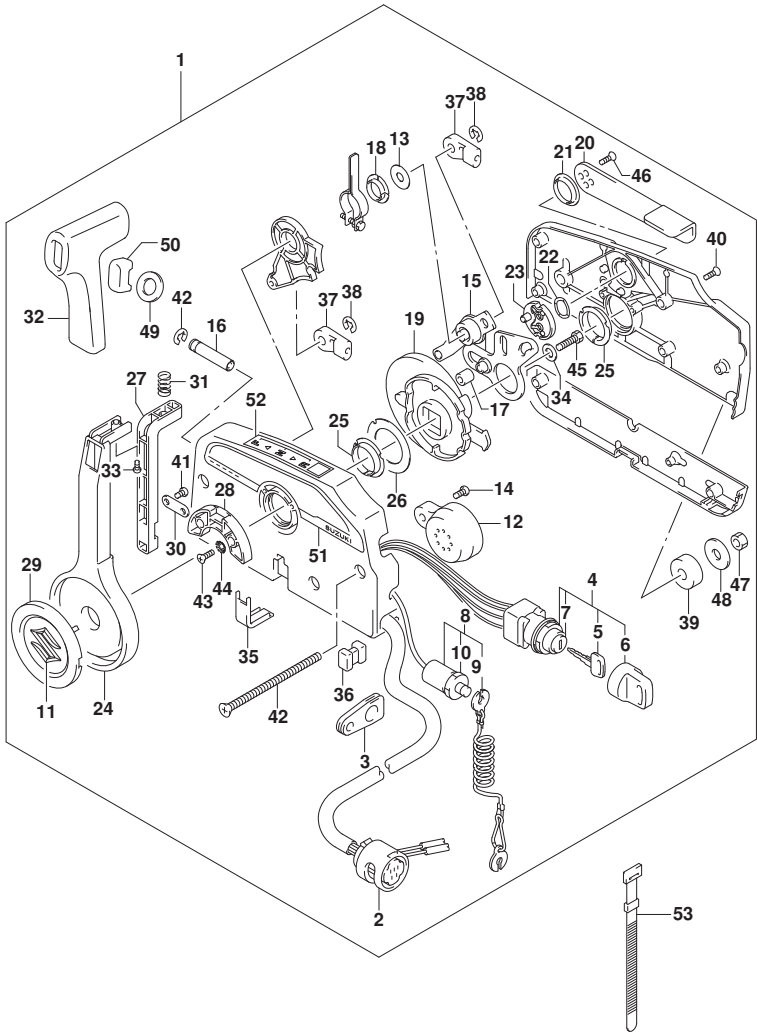


FIG.450B (1-K-12) REMOTE CONTROL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-97E50	REMOTE CONTROL ASSY	1	
2	36620-92E20	..WIRE ASSY, REMOCON	1	
3	36628-92E00	..GROMMET	1	
4	37110-99E01	..SWITCH ASSY, IGNITION	1	
5-1	37141-99E00	..KEY (931)	1	
5-2	37141-99E10	..KEY (932)	1	
5-3	37141-99E20	..KEY (933)	1	
5-4	37141-99E30	..KEY (934)	1	
5-5	37141-99E40	..KEY (935)	1	
5-6	37141-99E50	..KEY (936)	1	
5-7	37141-99E60	..KEY (937)	1	
5-8	37141-99E70	..KEY (938)	1	
5-9	37141-99E80	..KEY (939)	1	
5-10	37141-99E90	..KEY (940)	1	
5-11	37141-99EA0	..KEY (941)	1	
5-12	37141-99EB0	..KEY (942)	1	
6	37143-99E00	..CAP, KEY	1	
7	37149-93J00	..CAP, CYLINDER BODY	1	
8	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
9	37823-92E01	..PLATE	1	
10	37826-92J00	..NUT	1	
11	77811-54GB0-0PG	..EMBLEM, SUZUKI (CHROME)	1	
12	38500-92X50	..BUZZER, WARNING	1	
13	67212-95600	..WASHER	1	
14	67214-92E00	..SCREW (5X20)	1	
15	67220-95620	..PLATE ASSY	1	
16	67223-99E10	..KNOB, BRAKE ADJUST	1	
17	67229-95600	..ROLLER	1	
18	67232-95600	..BUSH	1	
19	67238-87D00	..GEAR, DRIVE	1	
20	67241-99E10	..LEVER, FREE THROTTLE	1	
21	67243-95600	..BUSH	1	
22	67244-95600	..WAVE WASHER	1	
23	67245-95600	..DRUM, FREE THROTTLE	1	

FIG.450B

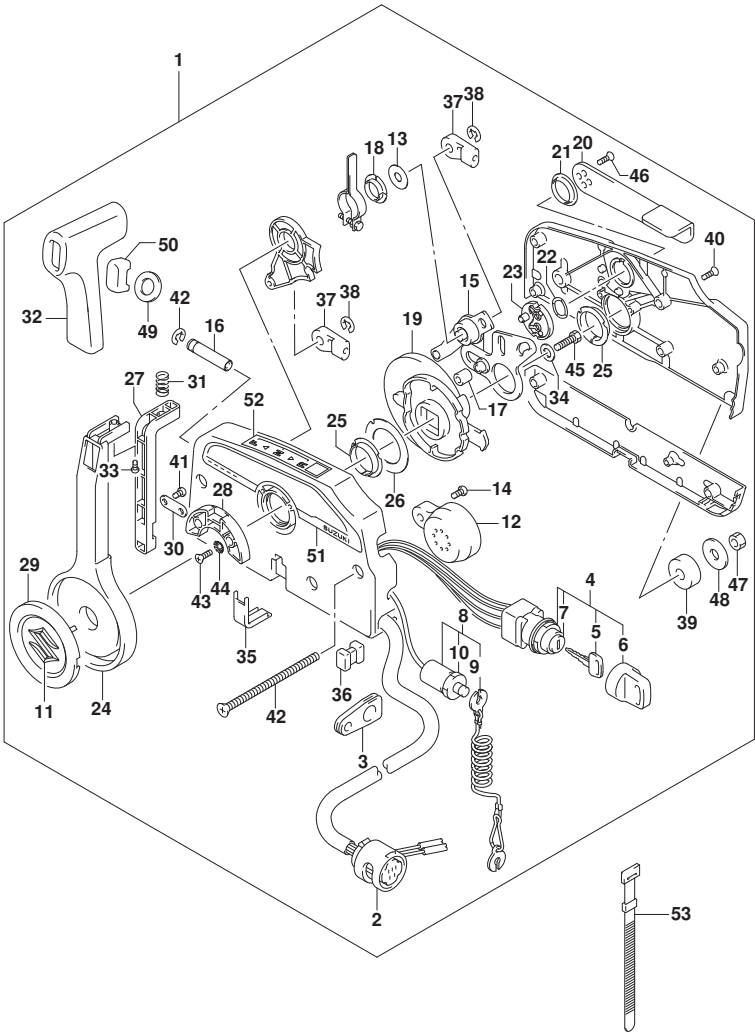

DT40W_P40_017_450B
REMOTE CONTROL

FIG.450B (1-K-13) REMOTE CONTROL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
24	67251-99E20	.LEVER, HANDLE	1	
25	67252-95600	.BUSH	2	
26	67253-95600	.WASHER	1	
27	67255-99E10	.ARM, LOCK	1	
28	67256-95600	.HOLDER, NEUT LOCK	1	
29	67257-99E10	.CAP, LEVER	1	
30	67258-99E00	.BRACKET	1	
31	67259-87D00	.SPRING, NEUTRAL ARM	1	
32	67261-99E10	.GRIP	1	
33	67296-94310	.SCREW, BUZZER BRKT	1	
34	67264-95600	.WASHER	1	
35	67267-93J00	.COVER, WIRE	1	
36	67273-95600	.SPACER	1	
37	67275-95600	.END, CABLE	2	
38	67292-94300	.E RING	3	
39	67294-95600	.SPACER	3	
40	67296-90J10	.SCREW, COVER	5	
41	67296-94300	.SCREW	2	
42	67296-95600	.SCREW	3	
43	67296-95610	.SCREW	2	
44	67297-95600	.WASHER	2	
45	09100-08232	.BOLT (8X30)	1	
46	09126-05003	.SCREW (5X12)	2	
47	09140-06020	.NUT	3	
48	09160-06104	.WASHER (6.5X24X2)	3	
49	37859-90J00	.SPACER	1	
50	37864-94J10	.CAP,PTT SW	1	
51	67282-94L00	.DECAL,REMOCON SIDE	1	
52	67284-94L00	.MARK,HANDLE LEVER	1	
53	09407-12402	CLAMP (L:120)	2	

DT40W_P40_017

FIG.454A

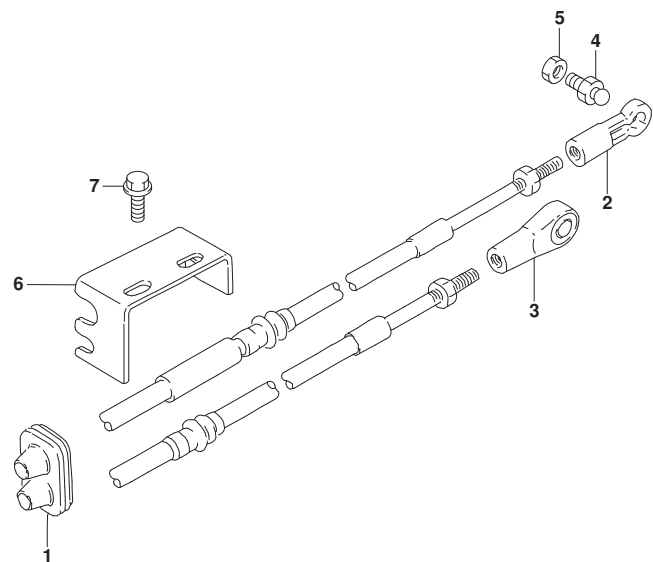


FIG.454A (1-K-14) REMOCON CABLE HOLDER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67331-94400	GROMMET, REMOCON CABLE	1	
2	67466-95200	CONNECTOR, THROTTLE CABLE	1	
3	67467-94404	CONNECTOR, CLUTCH CABLE	1	
4	09119-06047	PIVOT	1	
5	29141-93J00	NUT	1	
6	67341-94400	HOLDER, REMOCON CABLE	1	
7	09116-06225	BOLT (6X15)	2	

FIG.454B

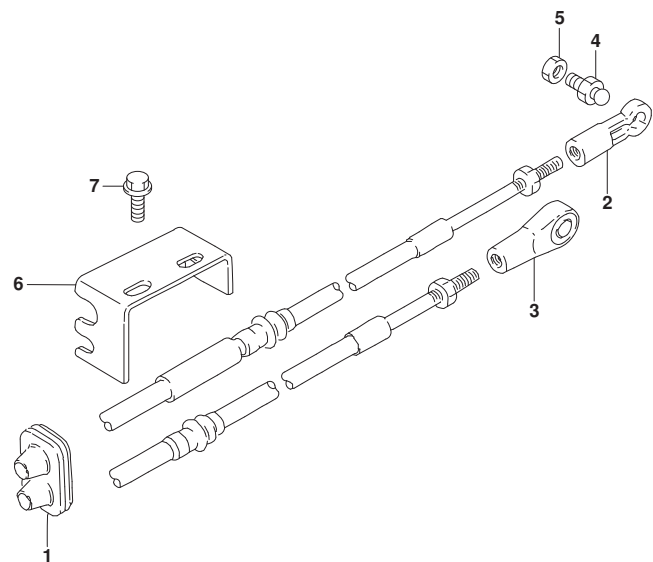


FIG.454B (1-K-15) REMOCON CABLE HOLDER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67331-94400	GROMMET, REMOCON CABLE	1	
2	67466-95200	CONNECTOR, THROTTLE CABLE	1	
3	67467-94404	CONNECTOR, CLUTCH CABLE	1	
4	09119-06047	PIVOT	1	
5	29141-93J00	NUT	1	
6	67341-94400	HOLDER, REMOCON CABLE	1	
7	09116-06225	BOLT (6X15)	2	

FIG.501A

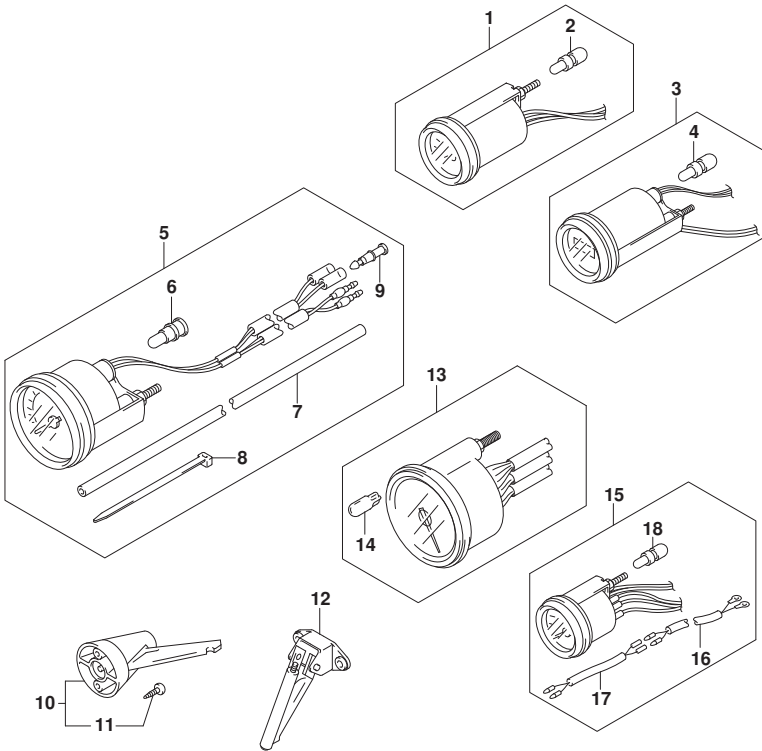


FIG.501A (1-L-2) OPT:METER (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J00	METER ASSY, HOUR	1	BLACK
3-2	34500-93J11	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501B

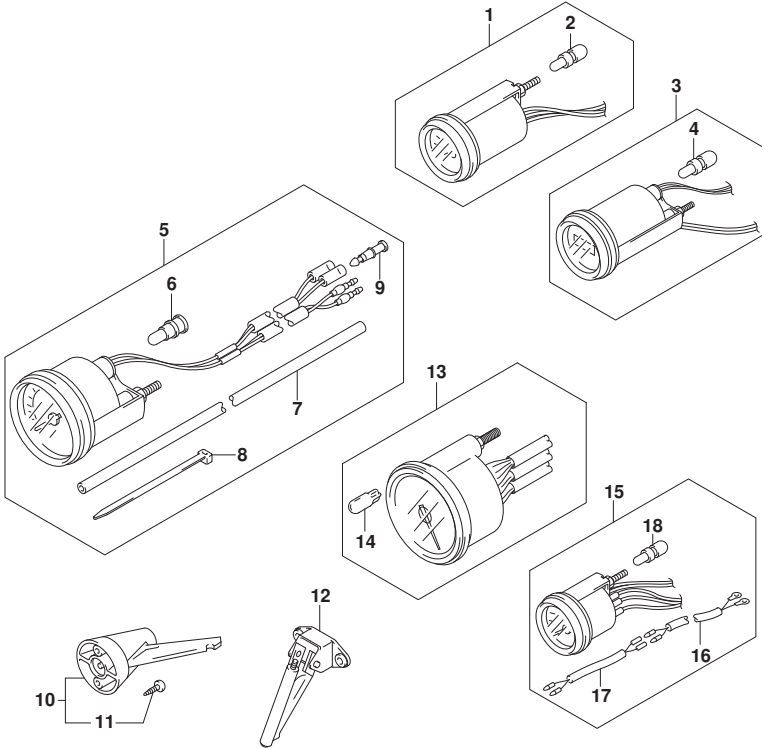


FIG.501B (1-L-3) OPT:METER (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J00	METER ASSY, HOUR	1	BLACK
3-2	34500-93J11	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	03112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501C

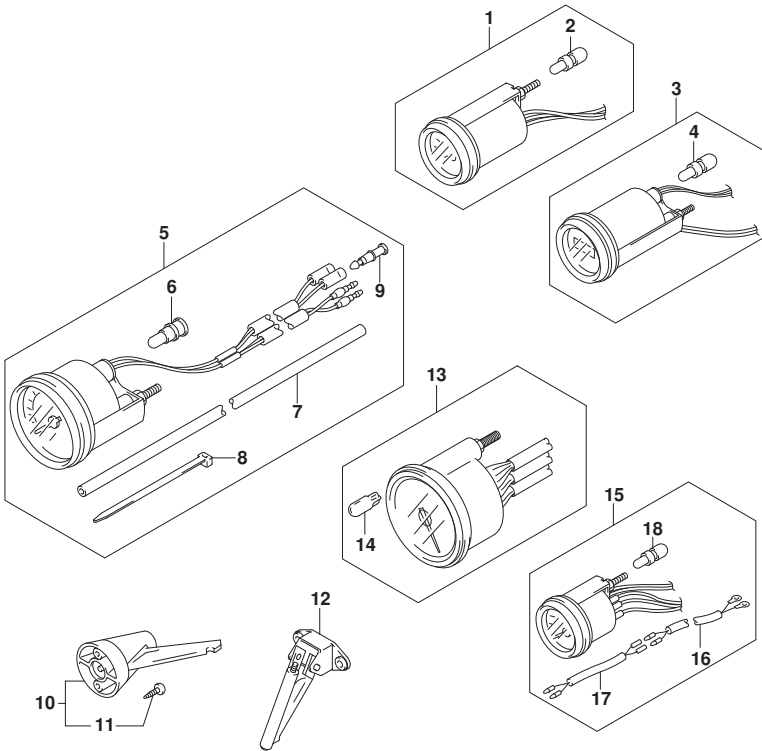


FIG.501C (1-L-4) OPT:METER (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J00	METER ASSY, HOUR	1	BLACK
3-2	34500-93J11	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	02112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.501D


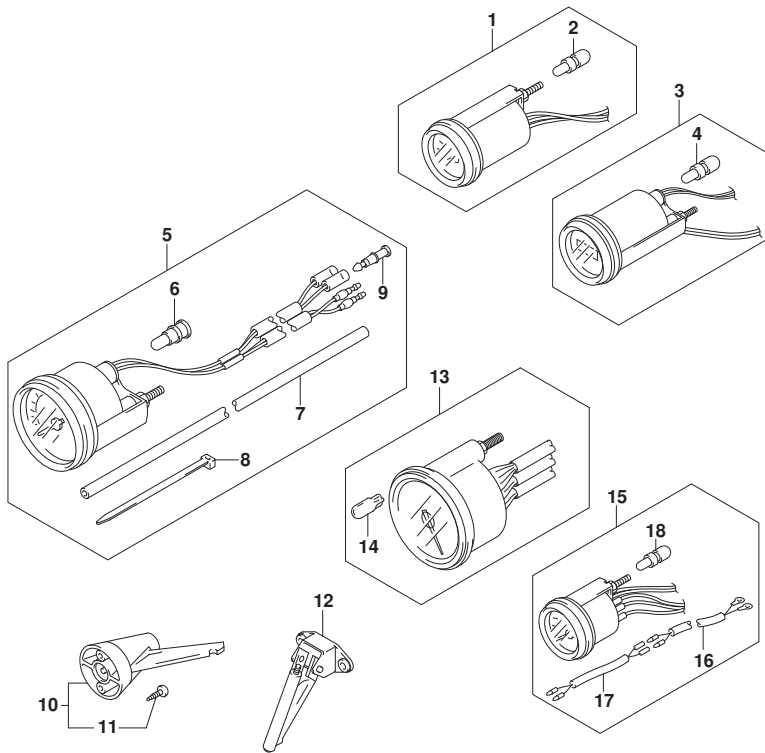


FIG.501D (1-L-5) OPT:METER (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	34600-93J00	METER ASSY, VOLTAGE	1	BLACK
1-2	34600-93J11	METER ASSY, VOLTAGE	1	WHITE
2	09471-12103	.BULB (12V,3W,T6.5)	1	
3-1	34500-93J00	METER ASSY, HOUR	1	BLACK
3-2	34500-93J11	METER ASSY, HOUR	1	WHITE
4	09471-12103	.BULB (12V,3W,T6.5)	1	
5-1	34100-93J20	SPEEDOMETER ASSY	1	MAX 80KM/H BLACK
5-2	34100-93J31	SPEEDOMETER ASSY	1	MAX 80KM/H WHITE
5-3	34100-93J40	SPEEDOMETER ASSY	1	MAX 45KNOTS BLACK
5-4	34100-93J51	SPEEDOMETER ASSY	1	MAX 45KNOTS WHITE
6	09471-12028	.BULB (12V3.4W,T10)	1	
7	34191-92E00	.TUBE	1	
8	09407-14407	.CLAMP (L:145)	2	
9	36615-96300	.TERMINAL, RESIN	2	
10	34190-95500	SENDER ASSY, SPEEDOMETER	1	
11	02112-0630B	.SCREW	2	
12	34190-87D00	SENDER ASSY, SPEEDOMETER	1	
13-1	34200-93J20	TACHOMETER ASSY	1	BLACK
13-2	34200-93J32	TACHOMETER ASSY	1	WHITE
14	09471-12028	.BULB (12V3.4W,T10)	1	
15-1	34300-93J00	GAUGE ASSY, FUEL	1	BLACK
15-2	34300-93J11	GAUGE ASSY, FUEL	1	WHITE
16	34310-92E00	.LEAD, FUEL GAUGE	1	
17	34360-92E00	.ADAPTER, FUEL GAUGE	1	
18	09471-12103	.BULB (12V,3W,T6.5)	1	

FIG.508A

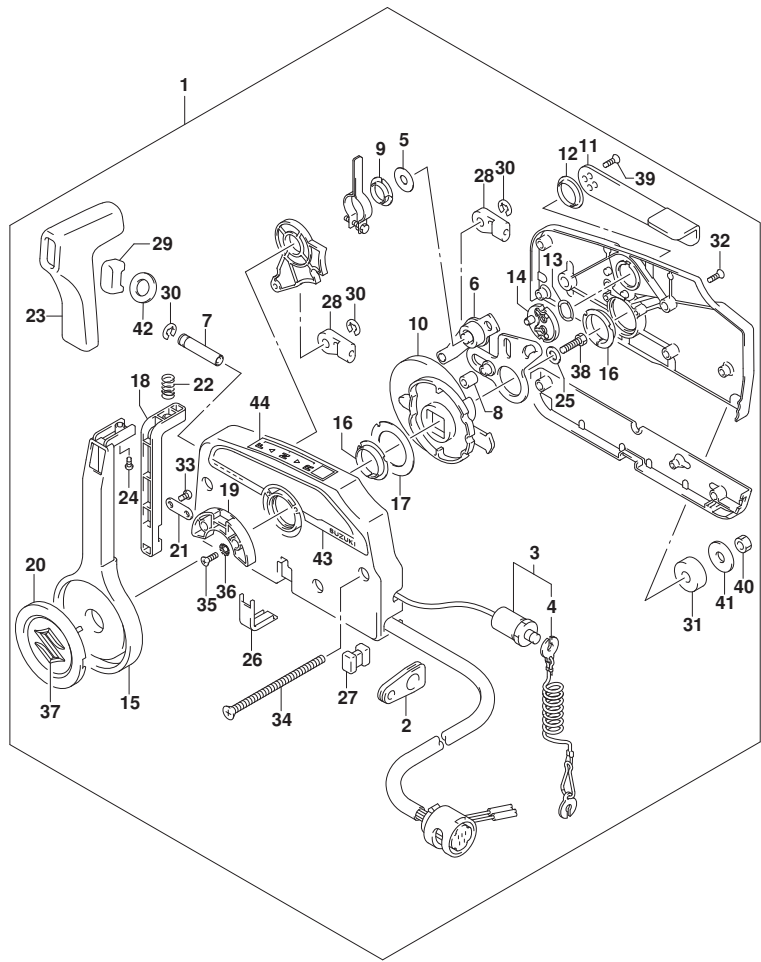

DT40W_P40_017_508A
OPT:REMOTE CONTROL

FIG.508A (1-L-6) OPT:REMOTE CONTROL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67200-91J20	REMOTE CONTROL ASSY	1	
2	36628-92E00	.GROMMET, WIRE HARNESS	1	
3	37830-95D03	.SWITCH ASSY, EMERGENCY & STOP	1	
4	37823-92E01	..PLATE, LOCK	1	
5	67212-95600	.WASHER	1	
6	67220-95630	.PLATE ASSY	1	
7	67223-99E10	.KNOB, BRAKE ADJUST	1	
8	67229-95600	.ROLLER	1	
9	67232-95600	.BUSH	1	
10	67238-87D00	.GEAR, DRIVE	1	
11	67241-99E10	.LEVER, FREE THROTTLE	1	
12	67243-95600	.BUSH	1	
13	67244-95600	.WAVE WASHER	1	
14	67245-95600	.DRUM, FREE THROTTLE	1	
15	67251-99E20	.LEVER, HANDLE	1	
16	67252-95600	.BUSH	2	
17	67253-95600	.WASHER	1	
18	67255-99E10	.ARM, LOCK	1	
19	67256-95600	.HOLDER, NEUTRAL LOCK	1	
20	67257-99E10	.CAP, LEVER	1	
21	67258-99E00	.BRACKET	1	
22	67259-87D00	.SPRING, NEUTRAL ARM	1	
23	67261-99E10	.GRIP	1	
24	67296-94310	.SCREW	1	
25	67264-95600	.WASHER	1	
26	67267-93J00	.COVER, WIRE	1	
27	67273-95600	.SPACER	1	
28	67275-95600	.END, CABLE	2	
29	37864-94J10	.CAP, PTT SWITCH	1	
30	67292-94300	.E RING	3	
31	67294-95600	.SPACER	3	
32	67296-90J10	.SCREW, REAR COVER	5	
33	67296-94300	.SCREW	2	
34	67296-95600	.SCREW	3	

FIG.508A

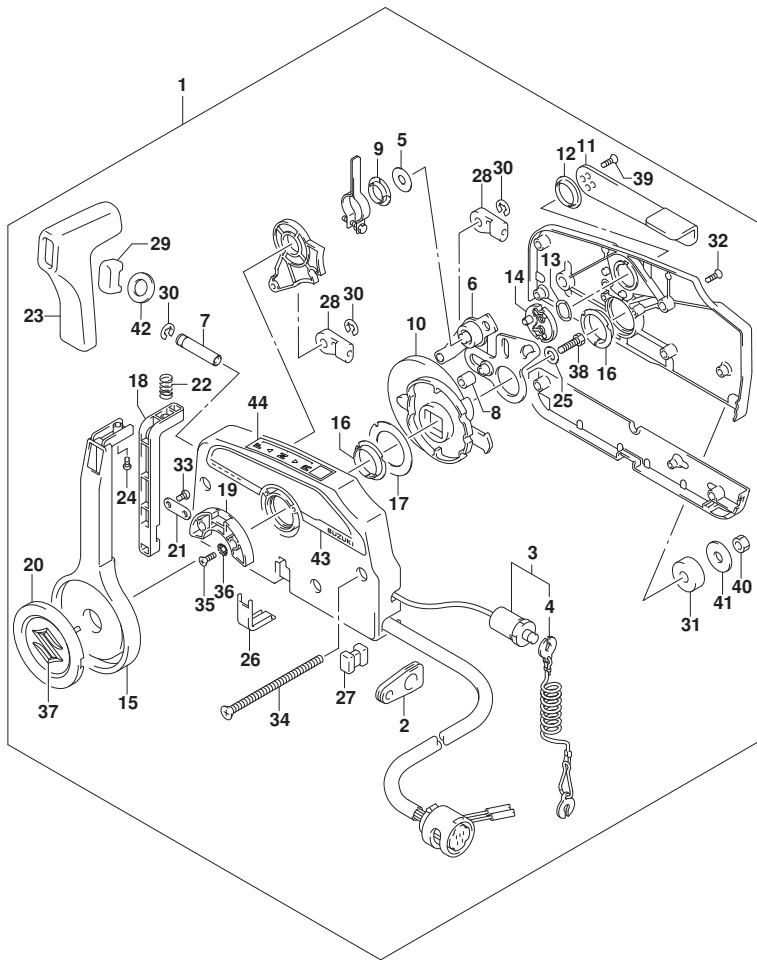


FIG.508A (1-L-7) OPT:REMOTE CONTROL

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
35	67296-95610	.SCREW	2	
36	67297-95600	.WASHER	2	
37	77811-54GB0-0PG	.EMBLEM, REAR MARK S (CHROME)	1	
38	09100-08232	.BOLT (8X30)	1	
39	09126-05003	.SCREW (5X12)	2	
40	09140-06020	.NUT	3	
41	09160-06104	.WASHER (6.5X24X2)	3	
42	37859-90J00	.SPACER	1	
43	67282-94L00	.DECAL, REMOCON SIDE	1	
44	67284-94L00	.MARK, HANDLE LEVER	1	

FIG.513A

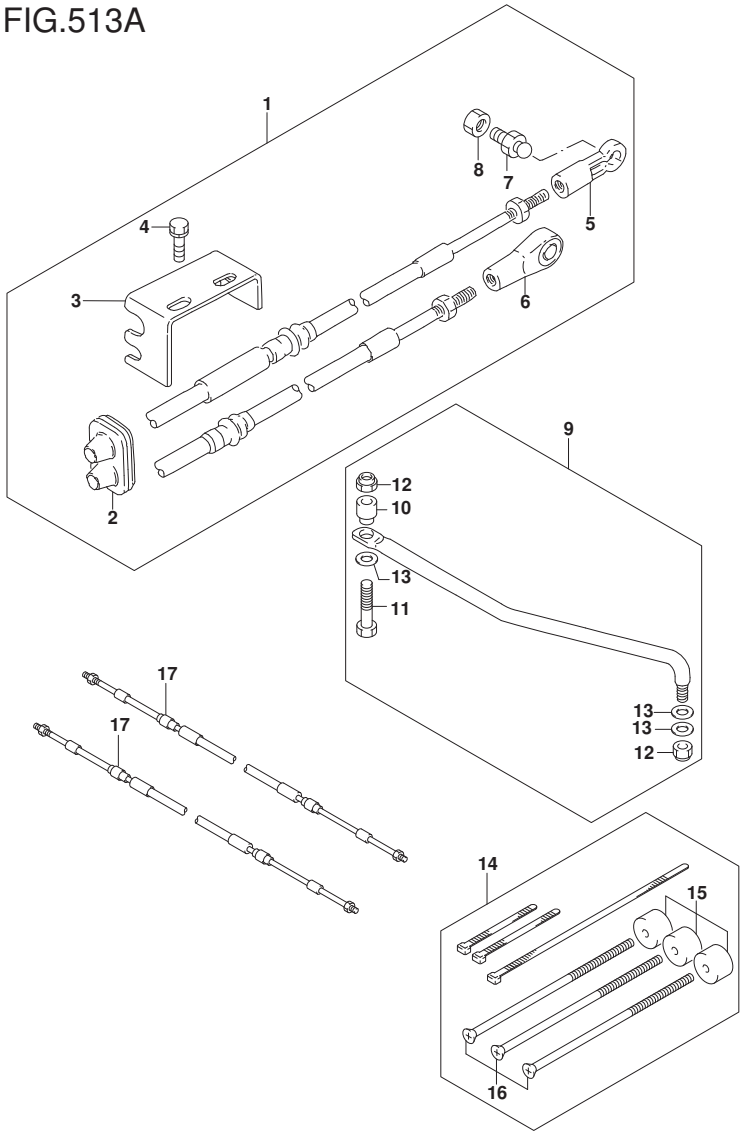


FIG.513A (1-L-8) OPT:REMOTE CONTROL PARTS (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67701-94430	LINK ASSY, DRAG	1	
10	67721-94310	.SPACER	1	
11	67725-99E20	.BOLT	1	
12	67726-99E00	.NUT	2	
13	67728-99E00	.WASHER	3	
14	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
15	67294-95600	.SPACER	3	
16	67296-95621	.SCREW	3	
17-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
17-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
17-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
17-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
17-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
17-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
17-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
17-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
17-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513B

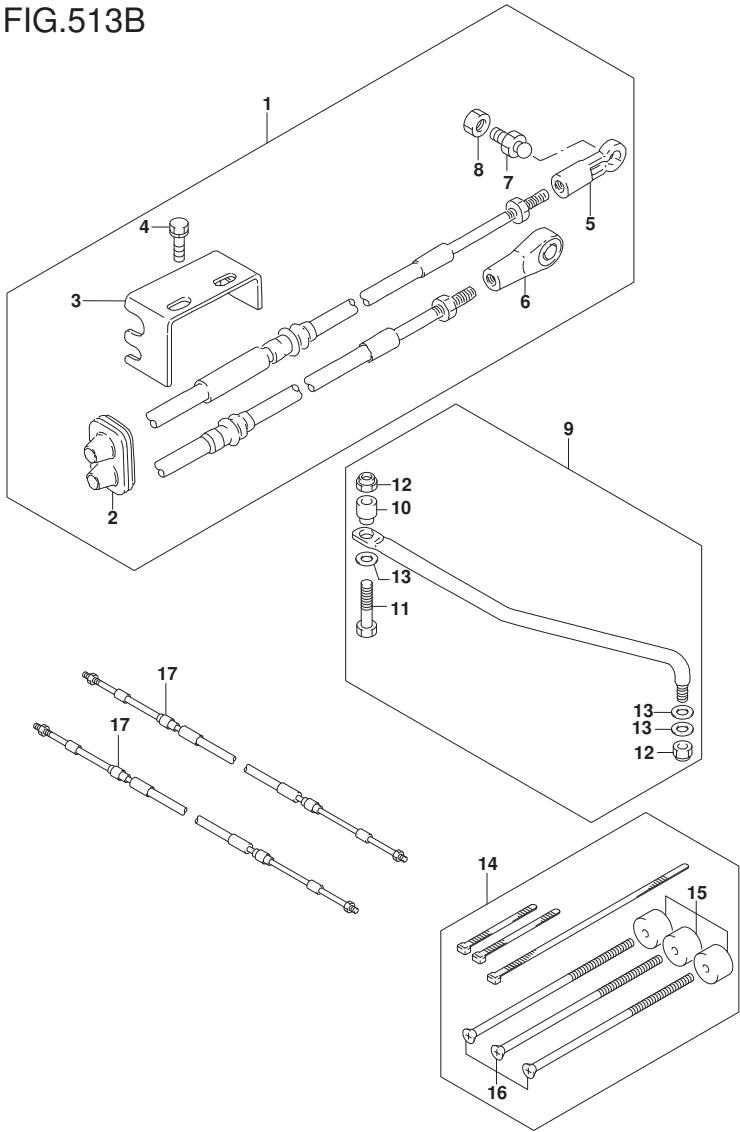


FIG.513B (1-L-9) OPT:REMOTE CONTROL PARTS (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67701-94430	LINK ASSY, DRAG	1	
10	67721-94310	.SPACER	1	
11	67725-99E20	.BOLT	1	
12	67726-99E00	.NUT	2	
13	67728-99E00	.WASHER	3	
14	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
15	67294-95600	.SPACER	3	
16	67296-95621	.SCREW	3	
17-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
17-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
17-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
17-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
17-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
17-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
17-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
17-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
17-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513C

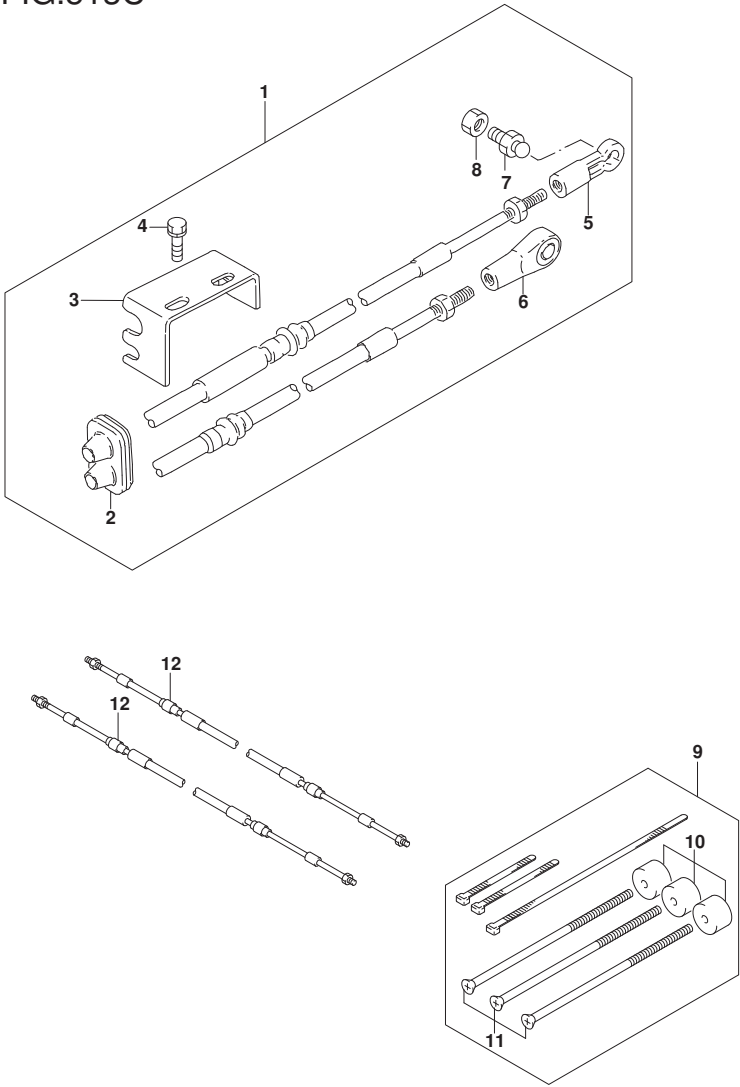


FIG.513C (1-L-10) OPT:REMOTE CONTROL PARTS (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
10	67294-95600	.SPACER	3	
11	67296-95621	.SCREW	3	
12-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
12-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
12-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
12-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
12-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
12-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
12-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
12-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
12-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513D

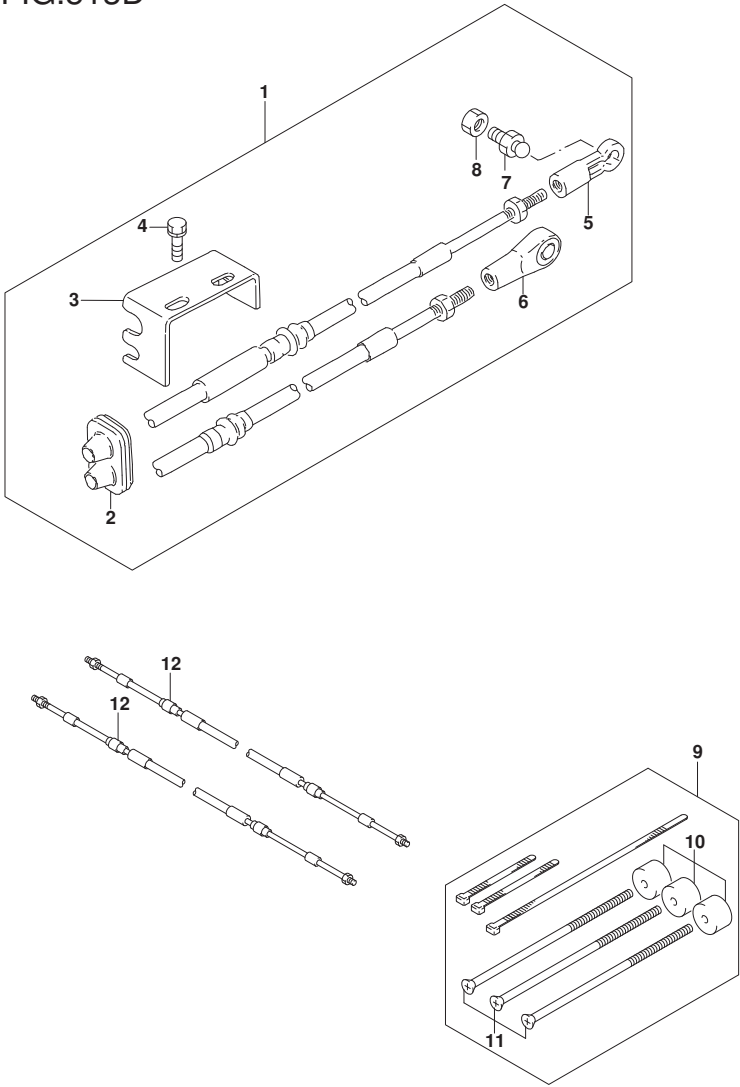


FIG.513D (1-L-11) OPT:REMOTE CONTROL PARTS (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
10	67294-95600	.SPACER	3	
11	67296-95621	.SCREW	3	
12-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
12-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
12-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
12-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
12-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
12-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
12-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
12-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
12-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.513E

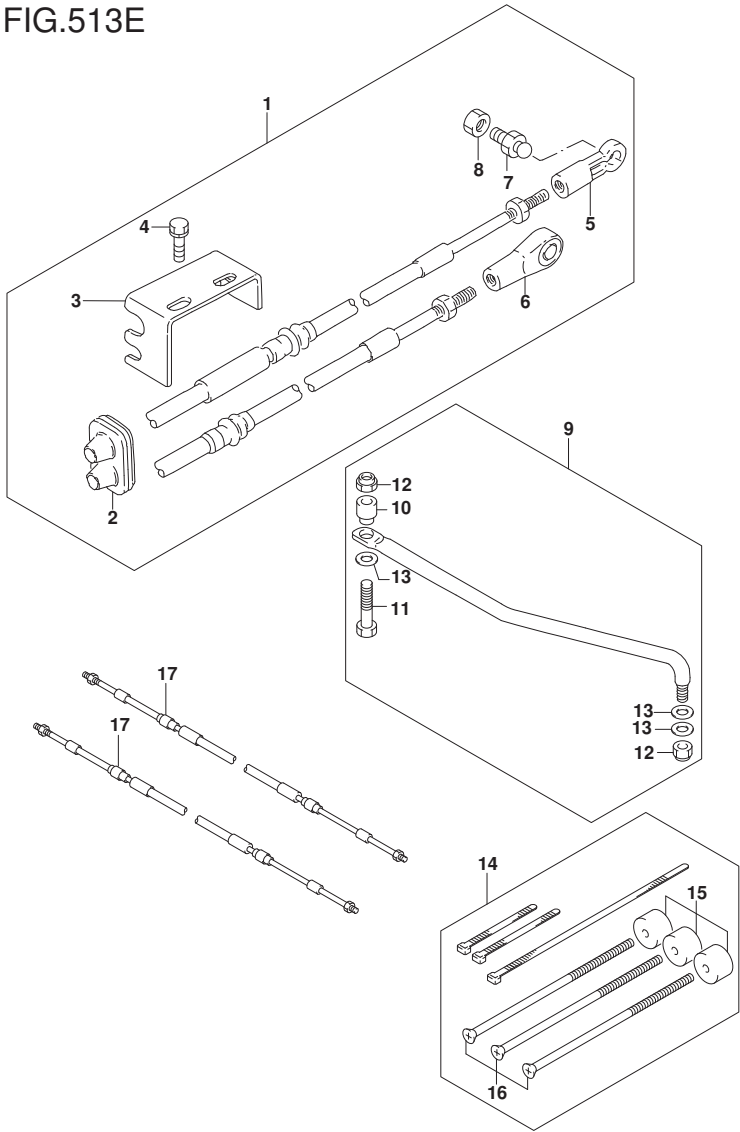


FIG.513E (1-L-12) OPT:REMOTE CONTROL PARTS (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	67130-94812	PARTS ASSY, REMOCON	1	
2	67331-94400	.GROMMET, REMOCON CABLE	1	
3	67341-94400	.HOLDER, REMOCON CABLE	1	
4	09116-06237	.BOLT (6X15)	2	
5	67466-95200	.CONNECTOR, REMOCON CABLE	1	
6	67467-94404	.CONNECTOR, REMOCON CABLE (CL)	1	
7	09119-06047	.PIVOT	1	
8	29141-93J00	.NUT	1	
9	67701-94430	LINK ASSY, DRAG	1	
10	67721-94310	.SPACER	1	
11	67725-99E20	.BOLT	1	
12	67726-99E00	.NUT	2	
13	67728-99E00	.WASHER	3	
14	67140-95600	ATTACHMENT KIT, TWIN R/CON	1	
15	67294-95600	.SPACER	3	
16	67296-95621	.SCREW	3	
17-1	67320-93J00	CABLE, REMOCON 8F (2.4M)	2	
17-2	67320-93J10	CABLE, REMOCON 10F (3.1M)	2	
17-3	67320-93J20	CABLE, REMOCON 12F (3.7M)	2	
17-4	67320-93J30	CABLE, REMOCON 14F (4.2M)	2	
17-5	67320-93J40	CABLE, REMOCON 16F (4.8M)	2	
17-6	67320-93J50	CABLE, REMOCON 18F (5.4M)	2	
17-7	67320-93J60	CABLE, REMOCON 20F (6.1M)	2	
17-8	67320-93J70	CABLE, REMOCON 22F (6.7M)	2	
17-9	67320-93J80	CABLE, REMOCON 24F (7.3M)	2	

FIG.550A

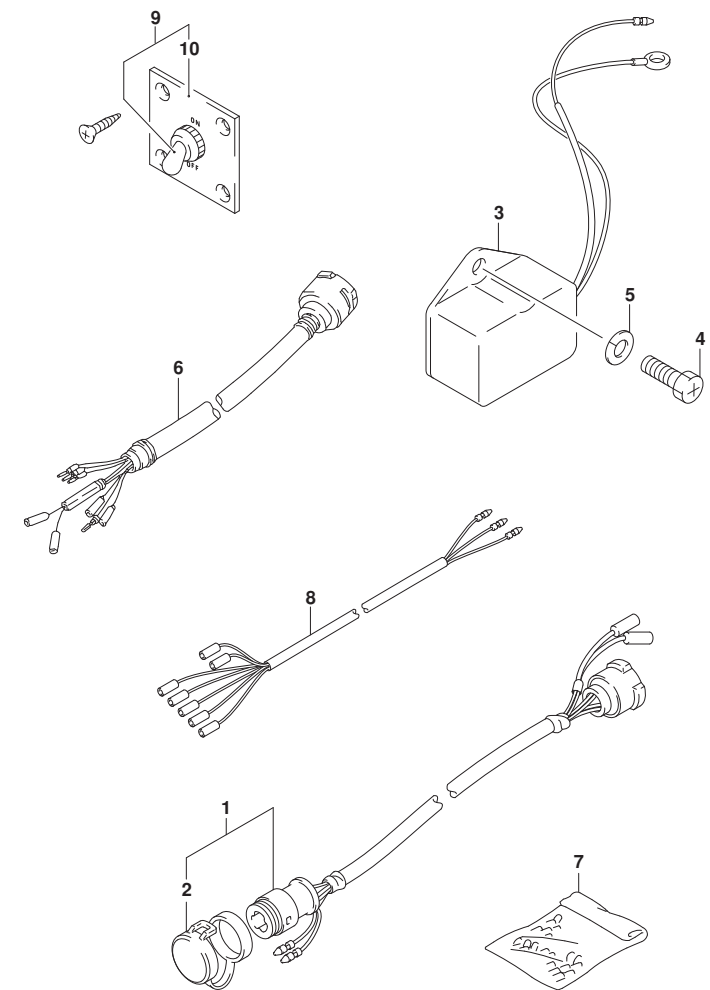


FIG.550A (2-B-2) OPT:ELECTRICAL (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000	
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000	
2	36631-94300	.CAP	1		
3	32500-95722	REGULATOR ASSY, VOLTAGE	1		
4	02162-06127	SCREW	2		
5	08321-01067	LOCK WASHER	2		
6	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1		
7	36990-87D00	TERMINAL/SLEEVE SET	1		
8	36630-92E00	WIRE, INSTRUMENT	1		
9	37210-93J00	PANEL ASSY, LIGHTING SW	1		
10	37212-93J00	.PANEL, LIGHTING SW	1		

FIG.550B

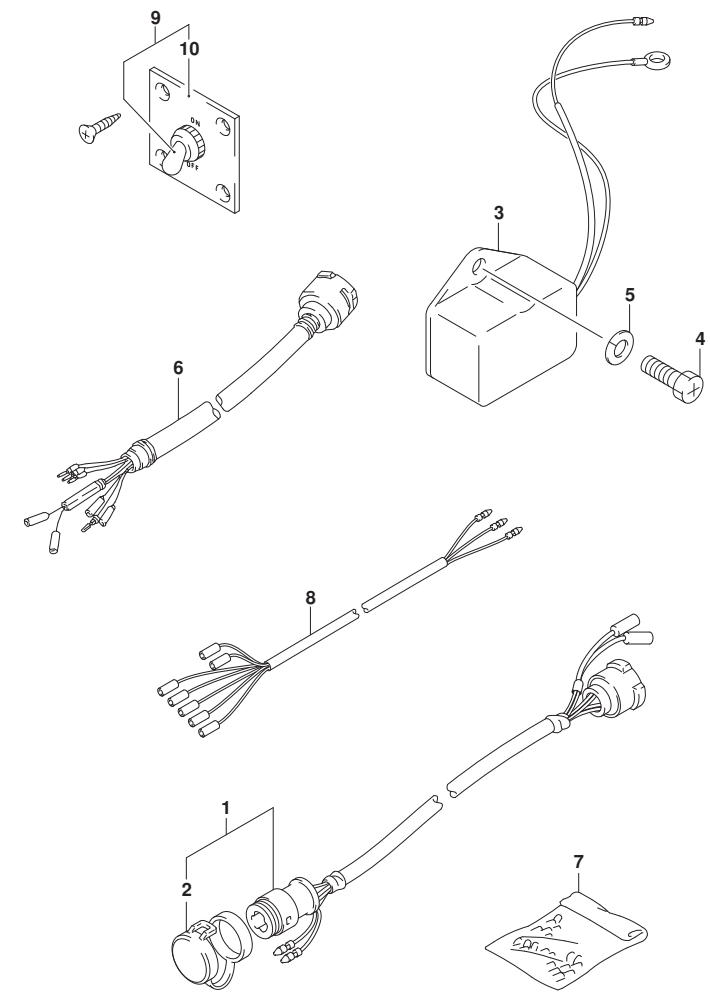


FIG.550B (2-B-3) OPT:ELECTRICAL (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY		REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000	
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000	
2	36631-94300	.CAP	1		
3	32500-95722	REGULATOR ASSY, VOLTAGE	1		
4	02162-06127	SCREW	2		
5	08321-01067	LOCK WASHER	2		
6	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1		
7	36990-87D00	TERMINAL/SLEEVE SET	1		
8	36630-92E00	WIRE, INSTRUMENT	1		
9	37210-93J00	PANEL ASSY, LIGHTING SW	1		
10	37212-93J00	.PANEL, LIGHTING SW	1		

FIG.553A

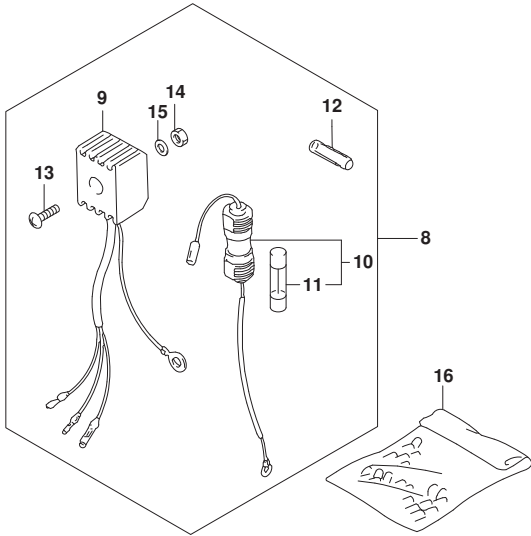
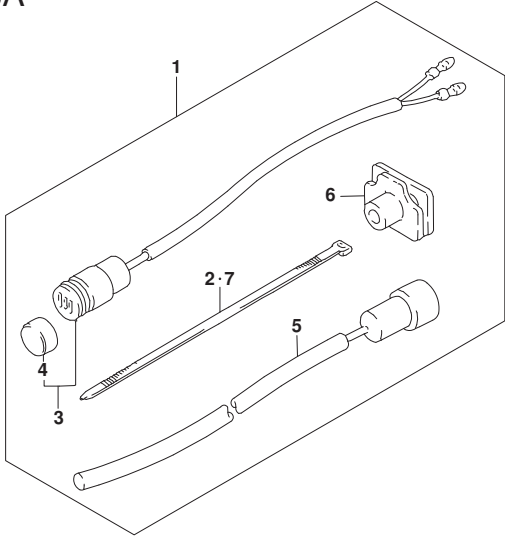


FIG.553A (1-L-13) OPT:ELECTRICAL (MANUAL STARTER) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	39600-93910	RECEPTACLE SET	1	
2	09407-25402	.CLAMP (L:250)	1	
3	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
4	36634-93910	.CAP	1	
5	39602-93900	.PLUG ASSY, LIGHTING	1	
6	39603-94400	.GROMMET, LIGHTING CABLE	1	
7	09407-10403	.CLAMP (L:95)	1	
8	32801-94402	RECTIFIER SET	1	
9	32800-95D01	.RECTIFIER ASSY	1	
10	36740-95253	.CASE ASSY, FUSE	1	
11	09481-20001	..FUSE (20A)	1	
12	37132-93700	.CONNECTOR, LEAD	1	
13	02142-05257	.SCREW	1	
14	08310-00057	.NUT	1	
15	08321-0105A	.LOCK WASHER	1	
16	36990-87D00	TERMINAL/SLEEVE SET	1	

FIG.553B

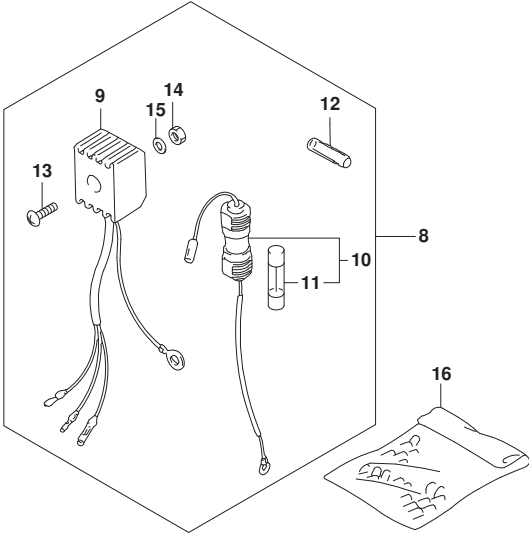
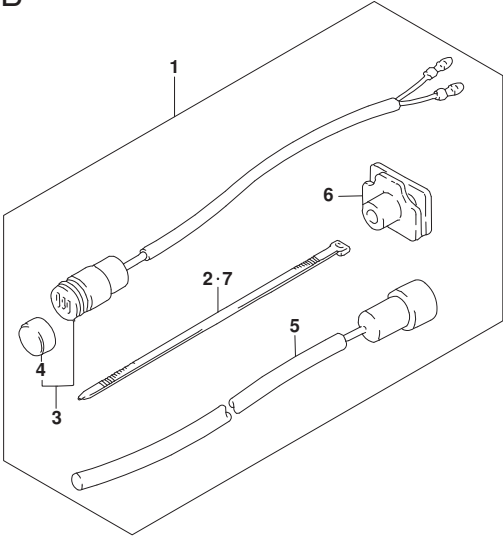


FIG.553B (1-L-14) OPT:ELECTRICAL (MANUAL STARTER) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	39600-93910	RECEPTACLE SET	1	
2	09407-25402	.CLAMP (L:250)	1	
3	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
4	36634-93910	.CAP	1	
5	39602-93900	.PLUG ASSY, LIGHTING	1	
6	39603-94400	.GROMMET, LIGHTING CABLE	1	
7	09407-10403	.CLAMP (L:95)	1	
8	32801-94402	RECTIFIER SET	1	
9	32800-95D01	.RECTIFIER ASSY	1	
10	36740-95253	.CASE ASSY, FUSE	1	
11	09481-20001	..FUSE (20A)	1	
12	37132-93700	.CONNECTOR, LEAD	1	
13	02142-05257	.SCREW	1	
14	08310-00057	.NUT	1	
15	08321-0105A	.LOCK WASHER	1	
16	36990-87D00	TERMINAL/SLEEVE SET	1	

FIG.553C

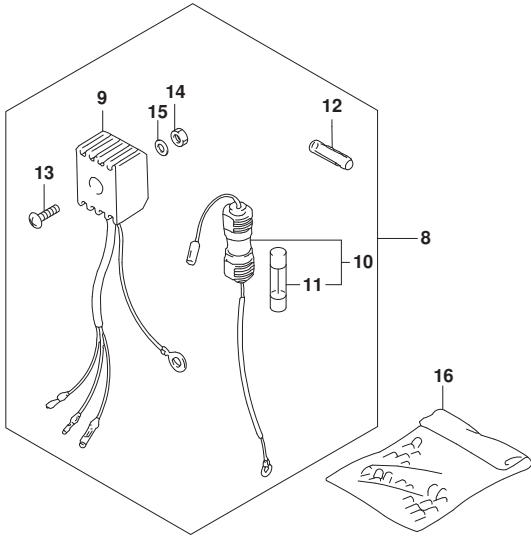
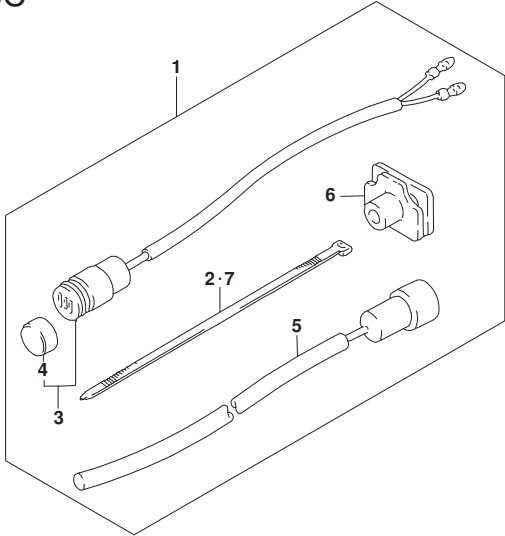


FIG.553C (1-L-15) OPT:ELECTRICAL (MANUAL STARTER) (DT40WK P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	39600-93910	RECEPTACLE SET	1	
2	09407-25402	.CLAMP (L:250)	1	
3	39601-95D00	.RECEPTACLE ASSY, LIGHTING	1	
4	36634-93910	.CAP	1	
5	39602-93900	.PLUG ASSY, LIGHTING	1	
6	39603-94400	.GROMMET, LIGHTING CABLE	1	
7	09407-10403	.CLAMP (L:95)	1	
8	32801-94402	RECTIFIER SET	1	
9	32800-95D01	.RECTIFIER ASSY	1	
10	36740-95253	.CASE ASSY, FUSE	1	
11	09481-20001	..FUSE (20A)	1	
12	37132-93700	.CONNECTOR, LEAD	1	
13	02142-05257	.SCREW	1	
14	08310-00057	.NUT	1	
15	08321-0105A	.LOCK WASHER	1	
16	36990-87D00	TERMINAL/SLEEVE SET	1	

FIG.554A


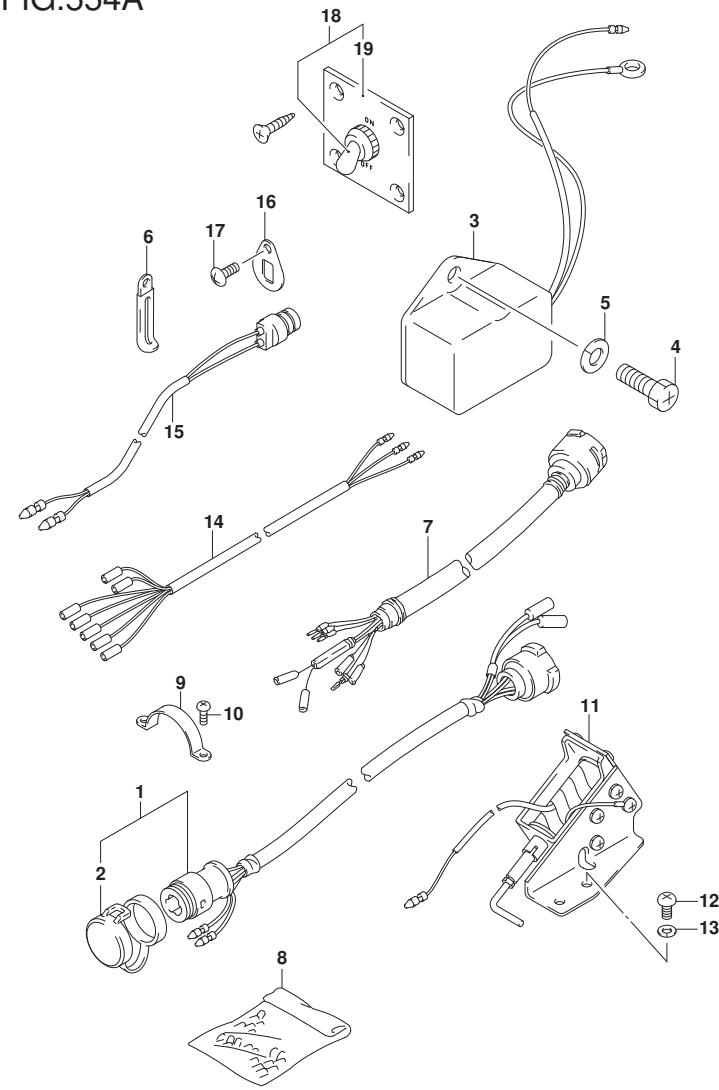


FIG.554A (2-B-4) OPT:ELECTRICAL (ELECTRIC STARTER) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000
2	36631-94300	.CAP	1	
3	32500-95722	REGULATOR ASSY, VOLTAGE	1	
4	02162-06127	SCREW	2	
5	08321-01067	LOCK WASHER	2	
6	29404-93J10	CLAMP	1	
7	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1	
8	36990-87D00	TERMINAL/SLEEVE SET	1	
9	38501-95500	BAND, BUZZER	1	
10	02112-05087	SCREW	2	
11	38600-94400	SOLENOID ASSY, CHOKE	1	
12	02112-05107	SCREW	2	
13	08321-0105A	LOCK WASHER	2	
14	36630-92E00	WIRE, INSTRUMENT	1	
15	34850-94610	SENSOR ASSY, HEAT	1	
16	34853-94700	SUPPORTER, HEAT SENSOR	1	
17	29125-93J00	SCREW	1	
18	37210-93J00	PANEL ASSY, LIGHTING SW	1	
19	37212-93J00	.PANEL, LIGHTING SW	1	

FIG.554B

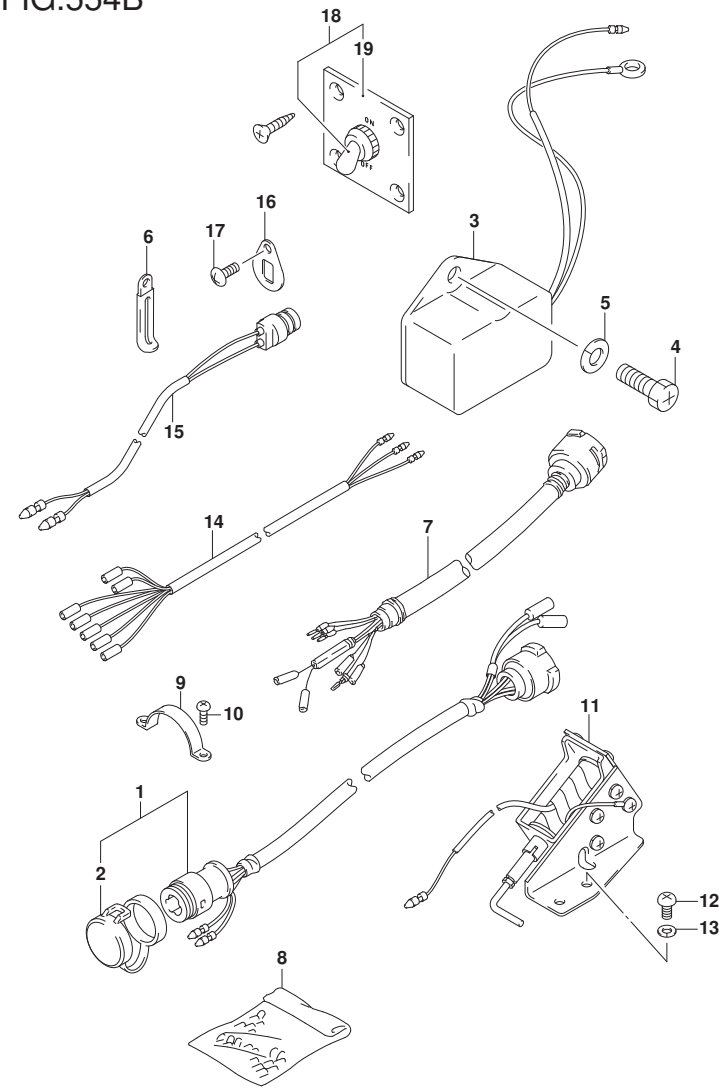

DT40W_P40_017_554B
OPT:ELECTRICAL (ELECTRIC STARTER)

FIG.554B (2-B-5) OPT:ELECTRICAL (ELECTRIC STARTER) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1-1	36620-87D20	WIRING HARNESS EXTENSION	1	L:5000
1-2	36620-95302	WIRING HARNESS EXTENSION	1	L:2000
2	36631-94300	.CAP	1	
3	32500-95722	REGULATOR ASSY, VOLTAGE	1	
4	02162-06127	SCREW	2	
5	08321-01067	LOCK WASHER	2	
6	29404-93J10	CLAMP	1	
7	36620-92E00	WIRING ASSY, REMOCON EXTENSION	1	
8	36990-87D00	TERMINAL/SLEEVE SET	1	
9	38501-95500	BAND, BUZZER	1	
10	02112-05087	SCREW	2	
11	38600-94400	SOLENOID ASSY, CHOKE	1	
12	02112-05107	SCREW	2	
13	08321-0105A	LOCK WASHER	2	
14	36630-92E00	WIRE, INSTRUMENT	1	
15	34850-94610	SENSOR ASSY, HEAT	1	
16	34853-94700	SUPPORTER, HEAT SENSOR	1	
17	29125-93J00	SCREW	1	
18	37210-93J00	PANEL ASSY, LIGHTING SW	1	
19	37212-93J00	.PANEL, LIGHTING SW	1	

FIG.561A


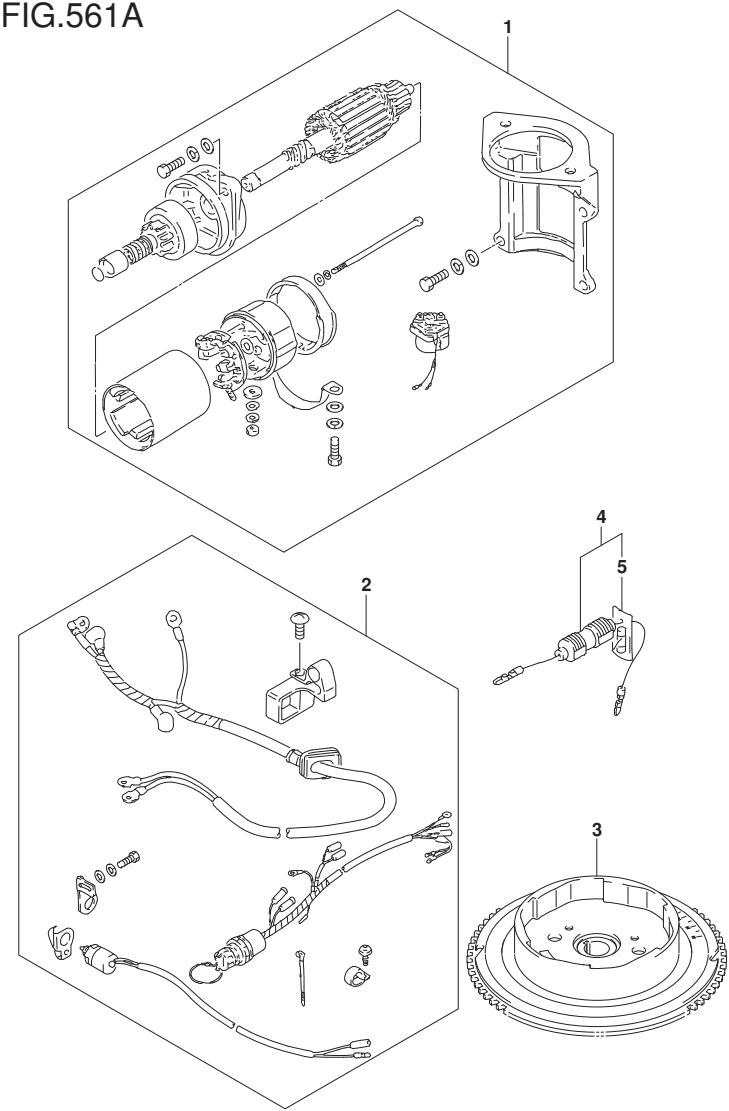


FIG.561A (2-B-6) OPT:STARTING MOTOR (MANUAL STARTER) (DT40W P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31101-94402-0EP	MOTOR SET, STARTING (BLACK)	1	
2	33800-94433	CABLE/SWITCH SET, STARTING	1	
3	32102-92L00	FLYWHEEL	1	
4	36740-93901	CASE ASSY, FUSE	1	
5	09481-20001	.FUSE (20A)	1	

FIG.561B

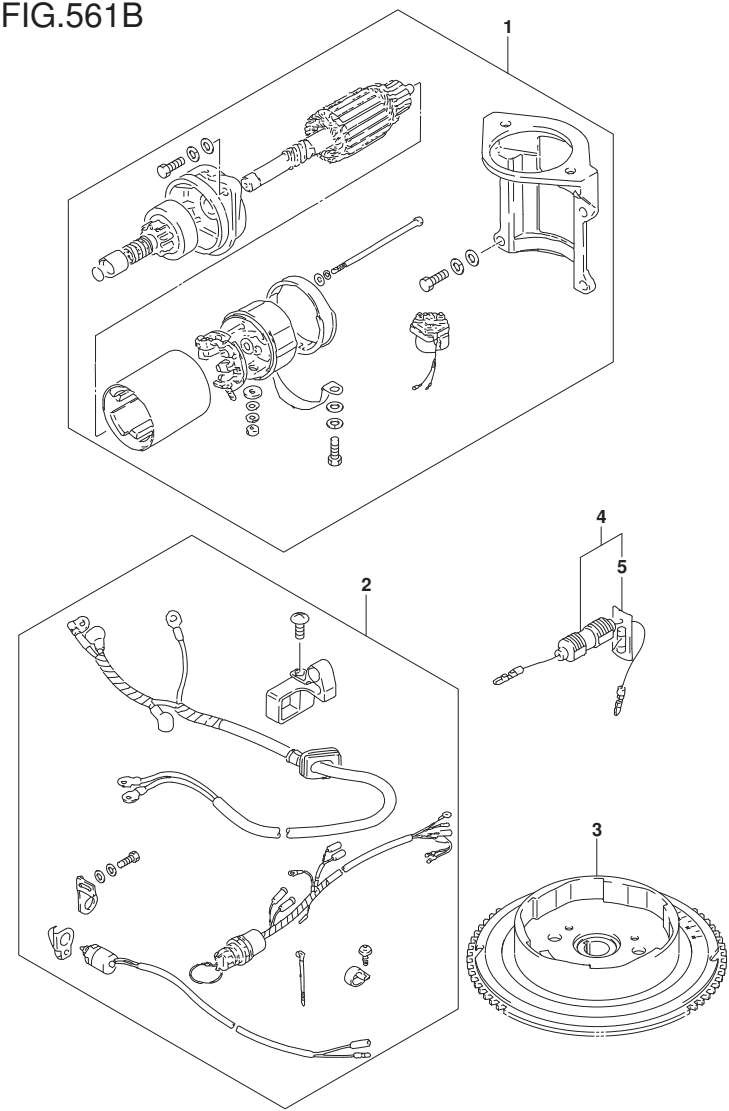

DT40W_P40_017_561B
OPT:STARTING MOTOR (MANUAL STARTER)

FIG.561B (2-B-7) OPT:STARTING MOTOR (MANUAL STARTER) (DT40W P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	31101-94402-0EP	MOTOR SET, STARTING (BLACK)	1	
2	33800-94433	CABLE/SWITCH SET, STARTING	1	
3	32102-92L00	FLYWHEEL	1	
4	36740-93901	CASE ASSY, FUSE	1	
5	09481-20001	.FUSE (20A)	1	

FIG.570A


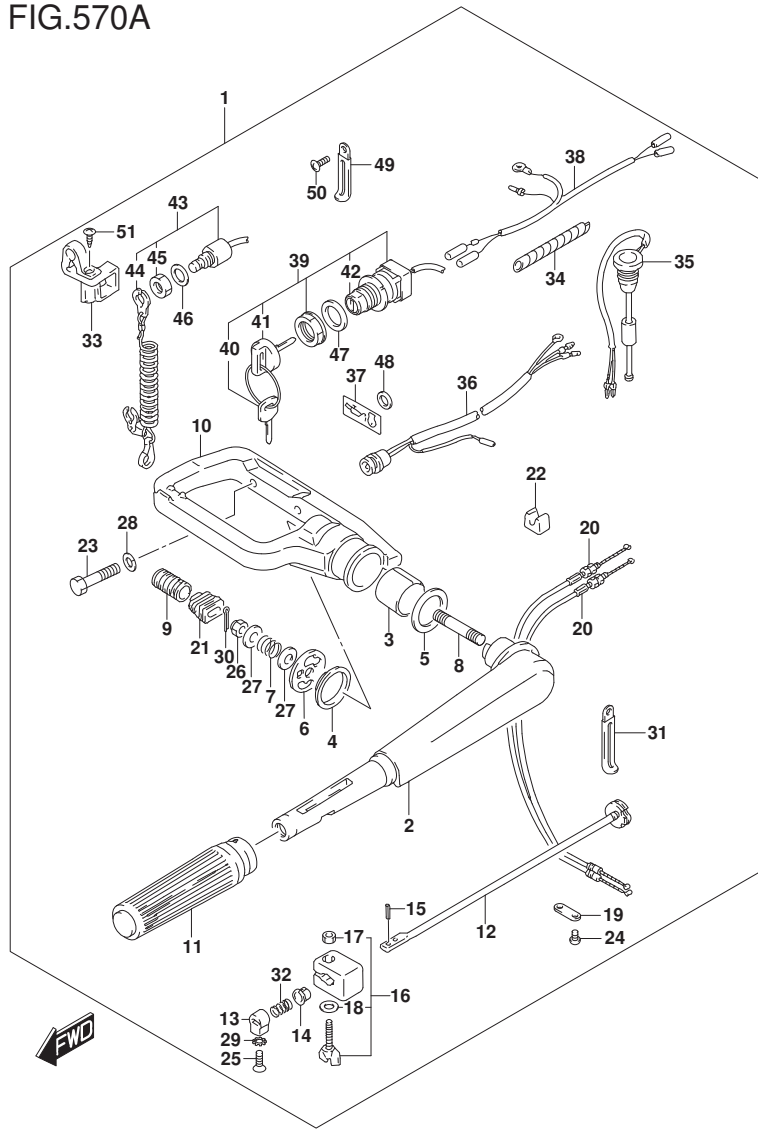


FIG.570A (2-B-8) OPT:TILLER HANDLE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63001-97E08-YAY	HANDLE ASSY, TILLER (BLACK)	1	
2	63111-97E05-YAY	.HANDLE, TILLER (BLACK)	1	
3	63115-97E00	.BUSH, TILLER HANDLE	1	
4	63116-97E00	.WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	.WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	.PLATE, TILLER HANDLE	1	
7	63126-97E01	.SPRING, HANDLE STUD	1	
8	09108-10137	.STUD BOLT	1	
9	63128-97E00	.COVER, HANDLE NUT	1	
10	63131-97E03-YAY	.BRACKET, TILLER HANDLE (BLACK)	1	
11	63210-93E30	.GRIP	1	
12	63220-96302	.ROD, HANDLE	1	
13	63223-92D00	.STOPPER, HANDLE ROD	1	
14	63225-93200	.BUSH, HANDLE ROD	1	
15	63227-93200	.PIN, HANDLE ROD	1	
16	63240-97E20	.ADJUSTER SET, HANDLE GRIP	1	
17	09140-05005	.NUT	1	
18	09160-05029	..WASHER (5.5X12X0.8)	1	
19	63241-92D00	.SUPPORT, HANDLE ROD	1	
20	63610-92L00	.CABLE ASSY, THROTTLE	2	
21	63625-96300	.GROMMET, THROTTLE CABLE	1	
22	63627-94400	.GUIDE, THROTTLE CABLE	1	
23	09100-10155	.BOLT (10X50)	2	
24	09125-05046	.SCREW (5X12)	2	
25	09126-06015	.SCREW (6X23)	1	
26	09159-10050	.NUT	1	
27	09160-10082	.WASHER (10.5X19X2)	2	
28	09162-10005	.LOCK WASHER	2	
29	09163-06001	.LOCK WASHER	1	
30	09204-01002	.PIN	1	
31	29404-93J20	.CLAMP, THROTTLE CABLE	1	
32	09440-12027	.SPRING	1	
33	33816-96300	.CLAMP, CABLE	1	

FIG.570A

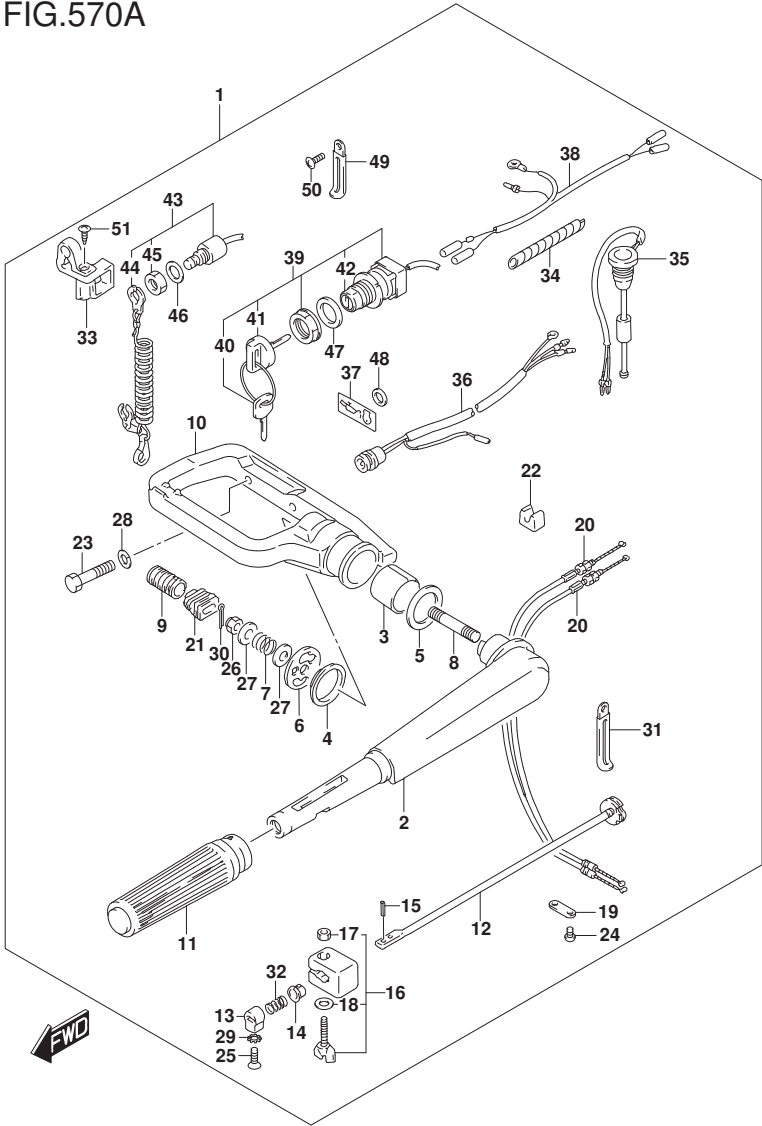

DT40W_P40_017_570A
OPT:TILLER HANDLE

FIG.570A (2-B-9) OPT:TILLER HANDLE (DT40WR P40)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	33833-91J00	..TUBE, EMERGENCY SWITCH LEAD	1	
35	34860-94402	..SENSOR ASSY, OIL LEVEL	1	
36	36360-94400	..LAMP ASSY, OIL WARNING	1	
37	36367-95D10-064	..LABEL, OIL (WHITE)	1	
38	36893-94410	..WIRE ASSY, IGNITION SW EXT	1	
39	37110-94471	..SWITCH ASSY, IGNITION	1	
40-1	37141-99E00	..KEY (931)	1	
40-2	37141-99E10	..KEY (932)	1	
40-3	37141-99E20	..KEY (933)	1	
40-4	37141-99E30	..KEY (934)	1	
40-5	37141-99E40	..KEY (935)	1	
40-6	37141-99E50	..KEY (936)	1	
40-7	37141-99E60	..KEY (937)	1	
40-8	37141-99E70	..KEY (938)	1	
40-9	37141-99E80	..KEY (939)	1	
40-10	37141-99E90	..KEY (940)	1	
40-11	37141-99EA0	..KEY (941)	1	
40-12	37141-99EB0	..KEY (942)	1	
41	37143-99E00	..CAP, KEY	1	
42	37149-93J00	..CAP, CYLINDER BODY	1	
43	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
44	37823-92E01	..PLATE	1	
45	37826-92J00	..NUT	1	
46	09160-12067	..WASHER (12.5X23X1)	1	
47	09160-25069	..WASHER (25X40X1.1)	1	
48	09320-11004	..CUSHION	1	
49	29404-93J10	..CLAMP, IGNITION SWITCH LEAD	1	
50	02142-06127	..SCREW	1	
51	03241-0625A	..SCREW	1	

DT40W_P40_017

FIG.570B

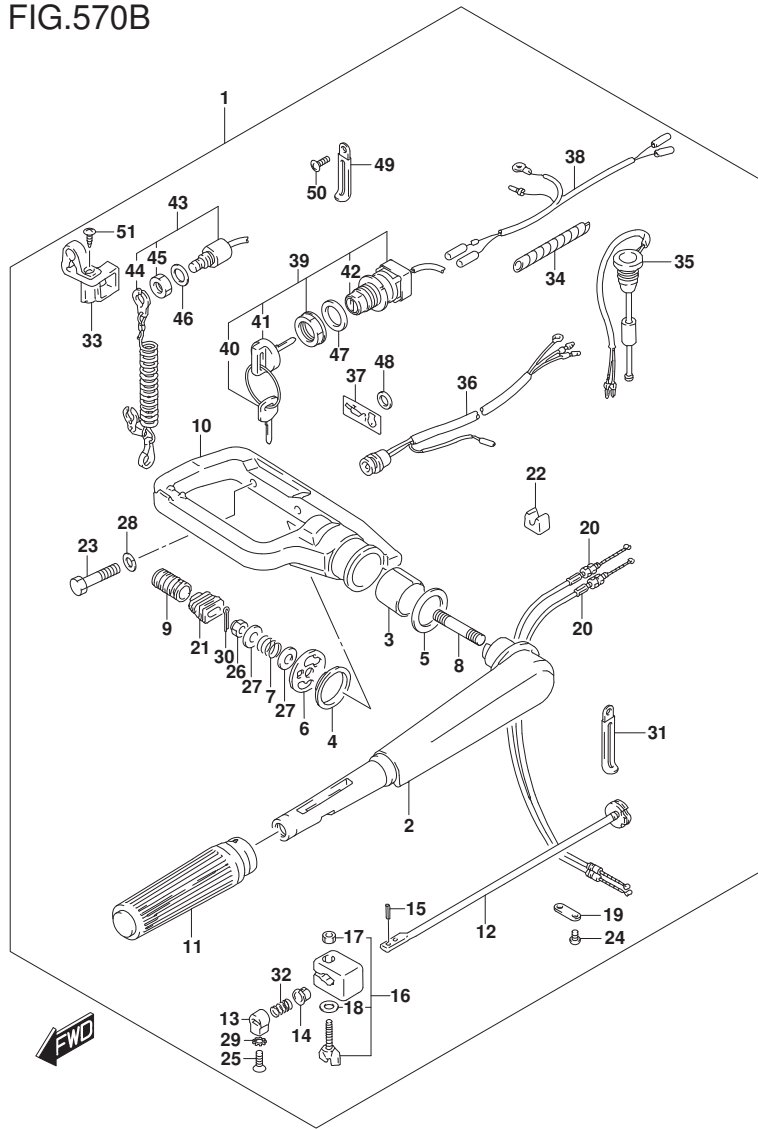


FIG.570B (2-B-10) OPT:TILLER HANDLE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	63001-97E08-YAY	HANDLE ASSY, TILLER (BLACK)	1	
2	63111-97E05-YAY	.HANDLE, TILLER (BLACK)	1	
3	63115-97E00	.BUSH, TILLER HANDLE	1	
4	63116-97E00	.WASHER, TILLER HANDLE NO.1	1	
5	63117-97E01	.WASHER, TILLER HANDLE NO.2	1	
6	63125-97E01	.PLATE, TILLER HANDLE	1	
7	63126-97E01	.SPRING, HANDLE STUD	1	
8	09108-10137	.STUD BOLT	1	
9	63128-97E00	.COVER, HANDLE NUT	1	
10	63131-97E03-YAY	.BRACKET, TILLER HANDLE (BLACK)	1	
11	63210-93E30	.GRIP	1	
12	63220-96302	.ROD, HANDLE	1	
13	63223-92D00	.STOPPER, HANDLE ROD	1	
14	63225-93200	.BUSH, HANDLE ROD	1	
15	63227-93200	.PIN, HANDLE ROD	1	
16	63240-97E20	.ADJUSTER SET, HANDLE GRIP	1	
17	09140-05005	.NUT	1	
18	09160-05029	..WASHER (5.5X12X0.8)	1	
19	63241-92D00	.SUPPORT, HANDLE ROD	1	
20	63610-92L00	.CABLE ASSY, THROTTLE	2	
21	63625-96300	.GROMMET, THROTTLE CABLE	1	
22	63627-94400	.GUIDE, THROTTLE CABLE	1	
23	09100-10155	.BOLT (10X50)	2	
24	09125-05046	.SCREW (5X12)	2	
25	09126-06015	.SCREW (6X23)	1	
26	09159-10050	.NUT	1	
27	09160-10082	.WASHER (10.5X19X2)	2	
28	09162-10005	.LOCK WASHER	2	
29	09163-06001	.LOCK WASHER	1	
30	09204-01002	.PIN	1	
31	29404-93J20	.CLAMP, THROTTLE CABLE	1	
32	09440-12027	.SPRING	1	
33	33816-96300	.CLAMP, CABLE	1	

FIG.570B

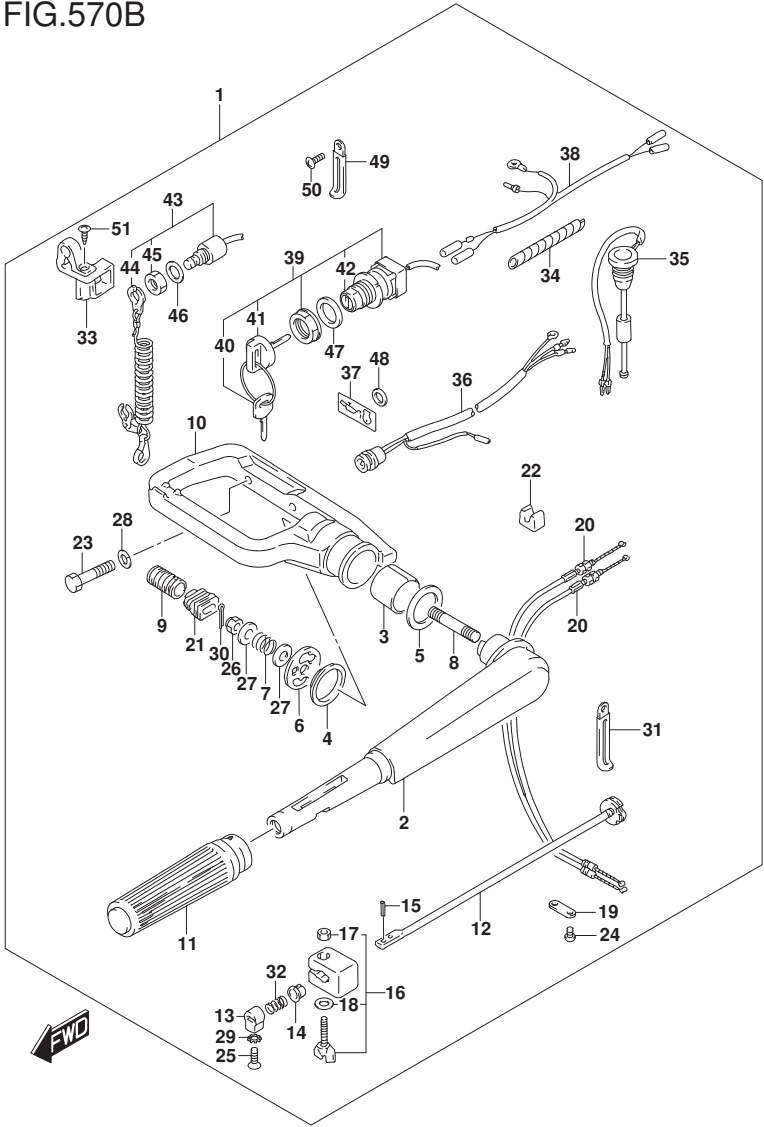


FIG.570B (2-B-11) OPT:TILLER HANDLE (DT40WR P90)

REF NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
34	33833-91J00	..TUBE, EMERGENCY SWITCH LEAD	1	
35	34860-94402	..SENSOR ASSY, OIL LEVEL	1	
36	36360-94400	..LAMP ASSY, OIL WARNING	1	
37	36367-95D10-064	..LABEL, OIL (WHITE)	1	
38	36893-94410	..WIRE ASSY, IGNITION SW EXT	1	
39	37110-94471	..SWITCH ASSY, IGNITION	1	
40-1	37141-99E00	..KEY (931)	1	
40-2	37141-99E10	..KEY (932)	1	
40-3	37141-99E20	..KEY (933)	1	
40-4	37141-99E30	..KEY (934)	1	
40-5	37141-99E40	..KEY (935)	1	
40-6	37141-99E50	..KEY (936)	1	
40-7	37141-99E60	..KEY (937)	1	
40-8	37141-99E70	..KEY (938)	1	
40-9	37141-99E80	..KEY (939)	1	
40-10	37141-99E90	..KEY (940)	1	
40-11	37141-99EA0	..KEY (941)	1	
40-12	37141-99EB0	..KEY (942)	1	
41	37143-99E00	..CAP, KEY	1	
42	37149-93J00	..CAP, CYLINDER BODY	1	
43	37820-92E04	..SWITCH ASSY, EMERGENCY	1	
44	37823-92E01	..PLATE	1	
45	37826-92J00	..NUT	1	
46	09160-12067	..WASHER (12.5X23X1)	1	
47	09160-25069	..WASHER (25X40X1.1)	1	
48	09320-11004	..CUSHION	1	
49	29404-93J10	..CLAMP, IGNITION SWITCH LEAD	1	
50	02142-06127	..SCREW	1	
51	03241-0625A	..SCREW	1	

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
10000		11431-92L00	141A-2 141B-2 141C-2 141D-2 141E-2	12200-92L30	116A-7 116B-7 116C-7 116D-7 116E-7
	11111-92L20	11433-92L00	141A-1 141B-1 141C-1 141D-1	12211-94410	116A-11 116B-11 116C-11 116D-11
	11111-92L30		141E-1		116E-11
	11141-94450	11434-92L00	141A-3 141B-3 141C-3 141D-3	12221-92L20	116A-12 116B-12 116C-12 116D-12
			141E-3		116E-12
11161-92L10	112A-1 112B-1 112C-1 112D-1 112E-1	11435-94400	405A-7 405B-7 405C-7 405D-7 405E-7	12231-92L20	116A-14 116B-14 116C-14 116D-14 116E-14
11162-92L00	112A-2 112B-2 112C-2 112D-2 112E-2	12100-94400-050	116A-24 116B-24 116C-24 116D-24 116E-24	12232-92L20	116A-13 116B-13 116C-13 116D-13 116E-13
11281-94400	112A-19 112B-19 112C-19 112D-19 112E-19	12110-92L20-0B0 12110-94400	116E-1 116A-1 116B-1 116C-1 116D-1	12240-92L20	116A-15 116B-15 116C-15 116D-15 116E-15
11291-94402	112A-7 112B-7 112C-7 112D-7 112E-7	12140-94400	116A-2 116B-2 116C-2 116D-2	13111-92L00	125A-3 125B-3 125C-3 125D-3
11300-92L30	112A-9 112B-9 112C-9 112D-9 112E-9	12140-94400-050	116A-25 116B-25 116C-25 116D-25 116E-25	13111-92L10-YAY	125E-3
	112A-9 112B-9 112C-9 112D-9 112E-9	12140-94410	116E-2	13125-95210	125A-4 125B-4 125C-4 125D-4 125E-4
11411-92L10	130A-1 130B-1 130C-1 130D-1 130E-1	12151-94400	116A-3 116B-3 116C-3 116D-3 116E-3	13126-94450 13150-92L00	128F-34 125A-6 125B-6 125C-6 125D-6
11413-94411	130A-2 130B-2 130C-2 130D-2 130E-2	12161-94400	116A-8 116B-8 116C-8 116D-8 116E-8	13152-92L00	125E-6 125A-8 125B-8 125C-8 125D-8

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
13153-92L00	125E-8 125A-7 125B-7 125C-7 125D-7 125E-7	13268-96111	128A-19 128B-19 128B-21 128C-19 128D-19		128C-12 128D-12 128E-12 128F-29 128F-21
13200-944D0 13200-944J0	128F-1 128A-1 128C-1 128D-1 128E-1	13269-95210	128E-19 128F-9 128A-4 128C-4 128D-4	13521-78100 13534-96300 13580-94400	128F-8 128A-13 128B-13 128C-13 128D-13
13200-944K0 13235-94400	128B-1 128A-6 128B-6 128C-6 128D-6	13269-95520 13269-98100 13270-94350 13271-93311	128E-4 128B-4 128F-30 128F-22 128A-3 128B-3	13613-94300	128A-11 128C-11 128D-11 128E-11
13236-94460 13237-94460 13245-94350 13245-94400	128E-6 128F-32 128F-33 128F-10 128A-16 128C-16 128D-16 128E-16	13279-90010 13282-94350 13294-28010 13370-27310 13370-94350 13370-97E20	128B-22 128F-23 128B-23 128F-25 128F-17 128A-10	13613-94310 13631-93501	128B-11 128A-21 128B-24 128C-21 128D-21 128E-21
13245-94410 13249-93900 13250-93012	128B-16 128F-6 128A-7 128B-7 128C-7 128D-7 128E-7	13392-58600	128B-10 128C-10 128D-10 128E-10 128A-20 128B-20	13811-92L10	125A-16 125B-16 125C-16 125D-16 125E-16 125A-17
13251-95220	128E-7 128F-26 128A-8 128B-8 128C-8 128D-8 128E-8		128B-20 128C-20 128D-20 128E-20 128F-18	13812-92L00	125B-17 125C-17 125D-17 125E-17 125A-18
13254-98300	128D-8 128E-8 128A-9 128B-9 128C-9 128D-9 128E-9	13415-94350 13418-94360 13419-94400 13426-95211	128F-14 128F-13 128F-12 128A-17 128B-17 128C-17	13855-95210	125B-18 125C-18 125D-18 125E-18 128A-24 128B-27
13254-98410 13265-94360 13267-93900	128F-27 128F-24 128F-16 128A-5 128B-5 128C-5 128D-5 128E-5	13441-94350 13443-94350 13446-94360 13462-94351 13464-96350	128E-17 128F-20 128F-4 128F-31 128F-19 128F-28 128A-12 128B-12	13910-94400	128D-24 128E-24 128F-38 125A-13 125B-13 125C-13 125D-13 125E-13
				14131-92L10	125A-13 125B-13 125C-13 125D-13 125E-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
14141-92L10	125A-14 125B-14 125C-14 125D-14 125E-14	146C-11 146D-11 146E-18 146A-12 146B-12	160D-3 160E-3 160A-1-3 160B-1-3 160C-1-2	17431-92L00	
14151-92L00	125A-12 125B-12 125C-12 125D-12 125E-12	15211-91J00-140 15211-91J00-400 15251-94450 15251-94470 15321-96300	146C-12 146D-12 146E-3 146E-4 146E-21	17431-92L10	
14211-92L20	141A-4-2 141B-4-2 141C-4-2 141D-4-2 141E-4-2	15321-99710 15322-96300 15410-94350 15410-94400	146A-6 146B-6 146C-6 146D-6 146E-25	17431-92L20	
14211-94451	141A-4-1 141B-4-1 141C-4-1 141D-4-1 141E-4-1	146E-20 146A-7 146B-7 146C-7 146D-7	160E-1-2 160A-15 160B-15 160C-15 160D-15	17432-96300	
14212-94413	141A-5 141B-5 141C-5 141D-5 141E-5	15413-87D10 15430-87D10	146E-10 146A-8 146B-8 146C-8 146D-8	17461-96312	
15100-94311	146A-1 146B-1 146C-1 146D-1	15430-87D10	146E-12 146A-9 146B-9 146C-9	17471-92L00	
15100-94460	146E-1		146D-9		
15170-94320	146A-2 146B-2 146C-2 146D-2	15851-94300	146E-11 146A-5 146B-5 146C-5	17472-96303	
15170-94460	146E-2		146D-5		
15183-94301	146A-3 146B-3 146C-3 146D-3	17400-92810	10AA-1 10AB-1 10AC-1 10AD-1	17561-92L50	
15186-94300	146A-4 146B-4 146C-4 146D-4	17400-94412	10AA-2 10AB-2 10AC-2 10AD-2	17561-92L60	
15211-91J00-050	146E-17		160A-19		
15211-91J00-110	146A-10 146B-10 146C-10 146D-10		160B-19 160C-19 160D-19 160A-3	17561-92L70	
15211-91J00-135	146A-11 146B-11	17410-92L00	160B-3 160C-3		

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
17563-94400	160A-16 160B-16 160C-16 160D-16 160E-16	166C-1 166D-1 166E-1 166A-2 166B-2	19131-95502	20000	
17565-94400	160A-17 160B-17 160C-17 160D-17 160E-17	166C-2 166D-2 166E-2 166E-3 166A-3	19132-96300 19135-94400	21110-94402	201A-13 201B-13 201C-13 201D-13 201E-13
17566-94400	160A-18 160B-18 160C-18 160D-18 160E-18	166B-3 166C-3 166D-3 166E-4 166E-5	19136-94451 19136-95510	21121-92L00	201A-16 201B-16 201C-16 201D-16 201E-16
17631-91L00	407A-4 407A-6 407A-26 112A-18	166A-4 166B-4 166C-4 166D-4	19136-95510	21121-93300	201A-22 201B-22 201C-22 201D-22
17635-87E00	407A-6	166B-4			
17635-87E10	407A-26	166C-4			
17670-93962	112A-18 112B-18 112C-18 112D-18	166A-8 166B-8 166C-8 166D-8	19522-94400	21131-96010	201E-22 420A-6 420B-6 420C-6 420D-6
17670-94402	112E-18	166A-5	19654-94421		420E-6
17681-92L10	112A-17 112B-17 112C-17 112D-17	166B-5 166C-5 166D-5 166E-6		22511-99011	336A-1 336B-1 336C-1 336D-1
17685-94410	10AA-3 10AB-3 10AC-3 10AD-3	166A-9 166B-9 166C-9 166D-9	19811-94400		336E-1
	112A-16 112B-16 112C-16 112D-16	166E-7 166A-10 166B-10 166C-10	19815-94400	23111-92L00	201A-1 201B-1 201C-1 201D-1 201E-1
18100-92L10	167A-1 167A-2 167A-3 167A-7	166E-8 166A-6 166B-6 166C-6	19851-94401	23131-92L00	201A-12 201B-12 201C-12 201D-12 201E-12
18120-96320	167A-2	166A-6			201A-21
18130-91L00	167A-3	166B-6			201B-21
18132-89L00	167A-7	166C-6			201C-21
18142-96300	167A-4	166D-6			201D-21
18151-96310	167A-8	166E-9			201E-21
18210-93002	167A-5	166A-7	19861-92L00		
18280-96320	167A-6	166B-7			
18290-92L00	167A-9	166C-7		23213-94400	201A-7 201B-7 201C-7 201D-7 201E-7
18711-92L10	167A-10	166D-7			
18721-92L10	167A-11	166E-10			
19121-94400	166A-1 166B-1				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
23311-95J00	201A-10 201B-10 201C-10 201D-10 201E-10		335D-29 335E-28 405A-18 405B-18 405C-18		554B-6 570A-49 570B-49 570A-31 570B-31
25111-92L50	201A-2-1 201B-2-1 201D-2-1 201E-2-1	29141-93J00	405D-18 405E-18 160A-4 160B-4	29440-93J00	336A-27 336B-27 336C-30 336D-30
25111-92L60	201A-2-2 201B-2-2 201C-2-1 201D-2-2 201E-2-2		160C-4 160D-4 160E-4 201A-11 201B-11		336E-27
25111-92L70	201A-2-3 201B-2-3 201C-2-2 201D-2-3 201E-2-3		201C-11 201D-11 201E-11 454A-5 454B-5	31100-94401	301A-1 301B-1 301C-1 301D-1
25211-92L00	201A-3 201B-3 201C-3 201D-3 201E-3		513A-8 513B-8 513C-8 513D-8 513E-8	31101-94402-0EP	561A-1 561B-1
25212-94401	201A-4 201B-4 201C-4 201D-4 201E-4	29162-93J00	513D-8 160A-5 160B-5 160C-5 160D-5 160E-5	31131-96300	301A-7 301B-7 301C-7 301D-7
25223-94400	201A-19 201B-19 201C-19 201D-19 201E-19	29162-93J10	301A-8 301B-8 301C-8 301D-8	31132-96300	301A-8 301B-8 301C-8 301D-8
25232-96302	201A-25 201B-25 201C-25 201D-25 201E-25	29404-93J10	335A-17 335B-17 335C-17 335D-17 335E-17 146A-14 146B-14 146C-14 146D-14 146E-13	31135-89J00	301A-9 301B-9 301C-9 301D-9
25311-94402	201A-9 201B-9 201C-9 201D-9 201E-9		335E-17 335F-17 335G-17 335H-17 335I-17 301A-6 301B-6 301C-6 301D-6 301E-6	31173-89J00	301A-6 301B-6 301C-6 301D-6 301E-6
25700-88L00	407A-27		308A-3 308B-3 308C-3 308D-3 308E-3 309A-5	31281-93340	301A-10 301B-10 301C-10 301D-10 301E-10
29125-93J00	554A-17 554B-17		309B-5 319A-11 319B-11 319E-1	31310-96300	301A-2 301B-2 301C-2 301D-2
29125-93J10	335A-28 335B-28 335C-29		554A-6	31312-96300	301A-4 301B-4 301C-4 301D-4 301A-3

30000

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
31360-96300	301B-3 301C-3 301D-3 301A-5 301B-5 301C-5 301D-5	32500-95722	303B-6 303C-6 303D-6 303E-6 550A-3 550B-3 554A-3 554B-3 319A-1 319B-1 319C-1 319D-1 553A-9 553B-9 553C-9 553D-9	33510-95520	308E-14 308A-6 308B-6 308C-6 308D-6 308E-6 561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
31800-94401	308A-21 308B-21 308C-21 308D-21 130A-4 130B-4 130C-4 130D-4	32800-95D01	308E-14 308F-14 308G-14 308H-14 308I-14 308J-14 308K-14 308L-14 308M-14 308N-14 308O-14 308P-14 308Q-14 308R-14 308S-14 308T-14 308U-14 308V-14 308W-14 308X-14 308Y-14 308Z-14	33800-94433	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
31911-92L00	301A-13 301B-13 301C-13 301D-13 301A-14 301B-14 301C-14 301D-14 303A-1-2 303B-1-2 303E-1	32801-94402	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	33811-94400	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
31912-92L00	301A-13 301B-13 301C-13 301D-13 301A-14 301B-14 301C-14 301D-14 303A-1-2 303B-1-2 303E-1	32890-94401	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	33816-96300	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
31918-94401	301A-14 301B-14 301C-14 301D-14 303A-1-2 303B-1-2 303E-1	32891-94401	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	33833-91J00	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
32101-92L10	303A-1-2 303B-1-2 303E-1	32900-92L20	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	34100-93J20	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
32102-92L00	303A-16-1 303B-16-1 303C-16 303D-16 561A-3 561B-3 303A-16-2 303B-16-2 303E-16 303A-2 303B-2 303C-2 303D-2 303E-2 303A-5 303B-5 303C-5 303D-5 303E-5 303A-6	32900-92L30 32916-92L10	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	34100-93J31	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
32102-92L30	303A-16-2 303B-16-2 303E-16 303A-2 303B-2 303C-2 303D-2 303E-2 303A-5 303B-5 303C-5 303D-5 303E-5 303A-6	32919-92L00	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	34100-93J40	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25
32140-94400	303A-5 303B-5 303C-5 303D-5 303E-5 303A-6	33410-92L10	308B-13 308C-13 308D-13 308E-13 308F-13 308G-13 308H-13 308I-13 308J-13 308K-13 308L-13 308M-13 308N-13 308O-13 308P-13 308Q-13 308R-13 308S-13 308T-13 308U-13 308V-13 308W-13 308X-13 308Y-13 308Z-13	34190-87D00	561A-2 561B-2 319A-6 319B-6 319C-6 319D-6 412A-25 412B-25 412C-25 412D-25

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
34190-95500	501B-12	34850-94610	501D-1-2	36740-95253	319D-4
	501C-12		554A-15		561A-4
	501D-12		554B-15		561B-4
	501A-10		554A-16		553A-10
34191-92E00	501B-10	34860-94402	554B-16	36791-94504	553B-10
	501C-10		570A-35		553C-10
	501D-10		570B-35		319C-10
	501A-7		570A-36		319D-10
34200-93J20	501B-7	36360-94400	570B-36	36893-94410	570A-38
	501C-7		570A-37		570B-38
	501D-7		570B-37		405A-17
	501A-13-1		309C-1		405B-17
34200-93J32	501B-13-1	36612-94421	309D-1	36894-94401	405C-17
	501C-13-1		309C-2		405D-17
	501D-13-1		309D-2		405E-17
	501A-13-2		501A-9		335A-27
34300-93J00	501B-13-2	36615-96300	501B-9	36894-95201	335B-27
	501C-13-2		501C-9		335C-28
	501D-13-2		501D-9		335D-28
	501A-15-1		550A-1-1		335E-27
34300-93J11	501B-15-1	36620-87D20	550B-1-1	36895-94400	405A-2
	501C-15-1		554A-1-1		405B-2
	501D-15-1		554B-1-1		405C-2
	501A-15-2		550A-6		405D-2
34310-92E00	501B-15-2	36620-92E00	550B-6	36899-92L00	405E-2
	501C-15-2		554A-7		319A-19
	501D-15-2		554B-7		319B-19
	501A-16		450A-2		319C-17
34360-92E00	501B-16	36620-95302	450B-2	36990-87D00	319D-17
	501C-16		550A-1-2		319E-4
	501D-16		550B-1-2		319A-13
	501A-17		554A-1-2		319B-13
34500-93J00	501B-17	36628-92E00	554B-1-2	37110-94471	319E-3
	501C-17		450A-3		550A-7
	501D-17		450B-3		550B-7
	501A-3-1		508A-2		553A-16
34500-93J11	501B-3-1	36630-92E00	550A-8	37110-99E01	553B-16
	501C-3-1		550B-8		553C-16
	501D-3-1		554A-14		554A-8
	501A-3-2		554B-14		554B-8
34600-93J00	501B-3-2	36631-94300	550A-2	37132-93700	309A-1
	501C-3-2		550B-2		309B-1
	501D-3-2		554A-2		570A-39
	501A-1-1		554B-2		570B-39
34600-93J11	501B-1-1	36634-93910	553A-4	37141-99E00	450A-4
	501C-1-1		553B-4		450B-4
	501D-1-1		553C-4		553A-12
	501A-1-2		319A-4		553B-12
	501B-1-2		319B-4		553C-12
	501C-1-2		319C-4		309A-2-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
37141-99E90	309B-2-3	37141-99E10	450B-5-9	37820-92E04	319B-17
	450A-5-1		570A-40-9		319C-15
	450B-5-1		570B-40-9		319D-15
	570A-40-1		309A-2-12		450A-8
37141-99E10	570B-40-1	37141-99E20	309B-2-12	37823-92E01	450B-8
	309A-2-4		450A-2-10		570A-43
	309B-2-4		450B-5-10		570B-43
	450A-5-2		570A-40-10		450A-9
37141-99E20	450B-5-2	37141-99E30	570B-40-10	37826-92J00	450B-9
	570A-40-2		309A-2-1		508A-4
	570B-40-2		309B-2-1		570A-44
	309A-2-5		450A-5-11		570B-44
37141-99E30	309B-2-5	37141-99E40	450B-5-11	37830-92L02	309A-8
	450A-5-3		570A-40-11		309B-8
	450B-5-3		570B-40-11		309E-2
	570A-40-3		309A-2-2		450A-10
37141-99E40	570B-40-3	37141-99E50	309B-2-2	37826-97J00	450B-10
	309A-2-6		450A-5-12		570A-45
	309B-2-6		450B-5-12		570B-45
	450A-5-4		570A-40-12		309A-9
37141-99E50	450B-5-4	37149-93J00	570B-40-12	37830-95D03	309B-9
	570A-40-4		309A-3		309E-3
	570B-40-4		309B-3		309A-7
	309A-2-7		450A-6		309B-7
37141-99E60	309B-2-7	37210-93J00	450B-6	37859-90J00	309E-1
	450A-5-5		570A-41		508A-3
	450B-5-5		570B-41		309A-13
	570A-40-5		309A-4		309B-13
37141-99E70	570B-40-5	37212-93J00	309B-4	37864-94J10	309E-6
	309A-2-8		450A-7		450A-49
	309B-2-8		450B-7		450B-49
	450A-5-6		570A-42		508A-42
37141-99E80	450B-5-6	37721-94404	570B-42	39600-93910	450A-50
	570A-40-6		550A-9		450B-50
	570B-40-6		550B-9		508A-29
	309A-2-9		554A-18		450A-12
37141-99E90	309B-2-9	37725-94302	554B-18	39601-95D00	450B-12
	450A-5-7		550A-10		554A-9
	450B-5-7		550B-10		554B-9
	570A-40-7		554A-19		309C-4
37141-99E00	570B-40-7	37726-94402	554B-19	39602-93900	309D-4
	309A-2-10		319A-15		554A-11
	309B-2-10		319B-15		554B-11
	450A-5-8		319C-13		553A-1
37141-99E00	450B-5-8		319D-13		553B-1
	570A-40-8		319A-16		553C-1
	570B-40-8		319B-16		553A-3
	309A-2-11		319C-14		553B-3
	309B-2-11		319D-14		553C-3
	450A-5-9		319A-17		553A-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
39603-94400	553B-5	41211-94302	335D-19	43711-97E01	336D-27
	553C-5		335E-19		336E-24
	553A-6		335A-5		336A-4
	553B-6		335B-5		336B-4
39669-94400	553C-6	41212-91LL0-YAY	335C-5	43750-92L20-YAY	336C-4
	412A-28-1		335D-5		336D-4
	412A-28-2		335E-5		336E-4
	412B-28-1		335A-3		336A-5
	412B-28-2	41213-94J01	335B-3	43755-97E01	336B-5
	412C-28		335C-3		336C-5
	412D-28		335D-3		336D-5
	412E-25		335E-3		336E-5
40000		41225-94400	335A-6	45231-92L00	336C-23
			335B-6		336D-23
			335C-6		336A-11
			335D-6		336B-11
41111-92L10-YAY		41225-94502	335E-6	45241-92L00	336C-11
			335A-26		336D-11
			335B-26		336E-11
			335C-27		336A-12
41121-92L10-YAY		41311-92L00	335D-27	45250-92L00	336B-12
			335E-26		336C-12
			336A-10		336D-12
			336B-10		336E-12
41130-92L00		43111-92L10-YAY	336C-10	45255-93001	336A-13
			336D-10		336B-13
			336E-10		336C-13
			335A-13		336D-13
41141-94301		43211-87JL0	335B-13	45255-95500	336E-13
			335C-13		336A-14
			335D-13		336B-14
			335E-13		336C-14
41151-94500		43411-97E00	336A-2	45331-94610	336D-14
			336B-2		336E-14
			336C-2		336A-33
			336D-2		336B-28
41161-94400		43412-93900	336E-2		336B-41
			336A-3		336C-36
			336B-3		336D-31
			336C-3		336D-44
41200-92L00			336D-3		336E-33
			336E-3		336A-15
			336A-23		336B-15
			336B-23		336C-15
			336C-26		336D-15
			336D-26		336E-15
			336E-23		336A-37
			336A-24		336B-45
			336B-24		336C-40
			336C-27		336D-48

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
45420-92L00	336E-37	54137-92L10	141B-12	56130-92L20-YAY	220B-24
	335A-11		141C-12		220C-24
	335B-11		141D-12		220D-24
	335C-11		141E-12		220E-24
45700-92L00	335D-11	54146-94400	141A-9	57110-92L50	160A-12
	335E-11		141B-9		160B-12
	336A-28		141C-9		160C-12
	336B-36		141D-9		160D-12
45713-92L00	336C-31	54151-99E00	141E-9	57110-92L60	160E-12
	336D-39		141A-10		220A-1-3
	336E-28		141B-10		220B-1-3
	336A-29		141C-10		220C-1-2
	336B-29	54160-92L00	141D-10	57110-92L70	220D-1-3
	336B-37		141E-10		220E-1-3
	336C-32		405A-8		220A-1-1
	336D-32		405B-8		220B-1-1
50000	336D-40	54160-94410	405C-8	57130-94301	220D-1-1
	336E-29		405D-8		220E-1-1
			405E-8		220A-1-2
			405A-12-2		220B-1-2
52110-92L30-YAY		54165-94400	405B-12-2	57133-88L01	220C-1-1
			405C-12-2		220D-1-2
			405D-12-2		220E-1-2
			405E-12-2		220A-2
52110-92L40-YAY		54211-92L00-YAY	405A-12-1	57311-94402	220B-2
			405B-12-1		220C-2
			405C-12-1		220D-2
			405D-12-1		220E-2
52110-92L50-YAY		54221-92L10-YAY	405E-12-1	57510-94402	220A-6
			405A-13		220B-6
			405B-13		220C-6
			405C-13		220D-6
54121-94401		55100-92L20-YAY	405D-13	57521-94401	220E-6
			405E-13		220A-7
			405A-9		220B-7
			405B-9		220C-7
54125-94400		55122-88L00	405C-9		220D-7
			405D-9		220E-7
			405E-9		220A-8
			405A-10		220B-8
54130-92L00		55125-92L00	405B-10		220C-8
			405C-10		220D-8
			405D-10		220E-8
			405E-10		220A-11
		55181-95200	407A-1		220B-11
			407A-8		220C-11
			407A-9		220D-11
			407A-25		220E-11
		55300-95500	407A-24		220A-21
			220A-24		220B-21

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
57610-92L10	220C-21	61112-94412	412A-2	61458-89L00	420E-10
	220D-21		412B-2		420A-7
	220E-21		412C-2		420B-7
	220A-19		412D-2		420C-7
	220B-19		412E-2		420D-7
57621-92L10	220C-19	61113-92L00	412A-3	61472-94J00 61610-90L00	420E-7
	220D-19		412B-3		167A-20
	220E-19		412C-3		412A-15
	220A-15		412D-3		412B-15
	220B-15		412E-3		412C-15
57630-92L01 57631-95303	220C-15	61131-92L00-QGF	412A-4	61616-93ELO	412D-15
	220D-15		412B-4		412E-15
	220E-15		412C-4		412A-16
	407A-17		412D-4		412B-16
	220A-13		412E-4		412C-16
57632-92L00 57633-94300 57634-88L00	220B-13	61138-944L0	412A-23	61622-95500	412D-16
	220C-13		412B-23		412E-16
	220D-13		412C-23		420A-3
	220E-13		412D-23		420B-3
	407A-16		412E-23		420C-3
57633-94300 57634-88L00	407A-18	61155-94400	412A-22	61642-90L00	420D-3
	220A-14		412B-22		420E-3
	220B-14		412C-22		412A-17
	220C-14		412D-22		412B-17
	220D-14		412E-22		412C-17
58100-88L13-019 58100-88L23-019 58100-88L52-019 58100-88L62-019 58100-88LA0-019 58100-88LB0-019 58120-88L01 59412-91J00 59800-90L01	220E-14	61400-92L01-YAY	420A-1	63001-97E08-YAY	412D-17
	407A-22-1		420B-1		412E-17
	407A-22-2		420C-1		570A-1
	407A-22-5		420D-1		570B-1
	407A-22-6		420E-1		444A-2
58100-88LA0-019 58100-88LB0-019 58120-88L01 59412-91J00 59800-90L01	407A-22-3	61431-92L00-YAY	420A-2	63111-92L00-YAY	444B-2
	407A-22-4		420B-2		444C-2
	407A-23		420C-2		570A-2
	146E-26		420D-2		570B-2
	420A-11		420E-2		444A-3
420B-11 420C-11 420D-11 420E-11		61435-92L10	420A-5	63111-97E05-YAY	444B-3
			420B-5		444C-3
			420C-5		570A-3
			420D-5		570B-3
			420E-5		444A-4
60000		61443-91L10	420A-9	63116-97E00	444B-4
			420B-9		444C-4
			420C-9		570A-4
			420D-9		570B-4
			420E-9		444A-5
61111-92L20-YAY	412A-1	61449-95L00 61453-91L10	420E-12	63117-97E01	444B-5
	412B-1		420A-10		444C-5
	412C-1		420B-10		570A-5
	412D-1		420C-10		570B-5
	412E-1		420D-10		444A-6

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
63126-97E01	444B-6	63240-97E20	570A-16	63241-92D00	65700-94416
	444C-6		570B-16		65700-94424
	570A-6		570A-19		65700-95D04
	570B-6		570B-19		65700-96362
	444A-7		444A-16		65720-955L0
63128-97E00	444B-7	63241-986B0	444B-16	63244-94J00	146E-14
	444C-7		444C-16		146E-5
	570A-7		444A-17		432A-13
	570B-7		444B-17		432B-13
	444A-8		444C-17		432C-13
63131-92L10-YAY	444B-8	63610-92L00	444A-20	63625-94300	432D-13
	444C-8		444B-20		65740-95D01
	570A-9		444C-20		432A-4
	570B-9		570A-20		432B-4
	444A-9		570B-20		432C-4
63131-97E03-YAY	444B-9	63625-96300	412C-29	63210-93E30	432D-4
	444C-9		412D-29		65740-99100
	570A-10		444A-21		65750-95500
	570B-10		444B-21		432A-9
	444A-10		444C-21		432B-9
63215-93401	444B-10	63627-94400	570A-21	65000-95D01	432C-9
	444C-10		570B-21		432D-9
	570A-11		444A-22		432E-9
	570B-11		444B-22		432F-9
	444A-32		444C-22		432F-14
63215-93450 63220-91L00	444B-32	65000-95D01	570A-22	65750-98505	432A-10
	444C-32		570B-22		432B-10
	444A-11		432A-1		432C-10
	444B-11		432B-1		432D-10
	444C-11		432C-1		432E-10
63220-96302	570A-12	65000-99100	432D-1	65318-93910	432F-10
	570B-12		432E-1		65770-87DL0
	444C-12		432F-1		432A-11
	444A-12		432E-20		432B-11
	444B-12		432A-2		432C-11
63225-93200	570A-13	65520-95D01	432B-2	65770-90J11	432D-11
	570B-13		432C-2		432F-15
	444A-13		432D-2		65779-93900
	444B-13		432E-2		432E-11
	444C-13		432F-2		432F-15
63225-94J00	570A-14	65561-95D00	432A-3	65781-98500	432B-12
	570B-14		432B-3		432C-12
	444A-18		432C-3		432D-12
	444B-18		432D-3		432E-12
	444C-18		432E-3		432F-16
63227-93200	570A-15	65700-87DL0	432F-3	65830-95500	432F-12
	570B-15		432A-8		432F-17
	444A-15		432B-8		432E-17
	444B-15		432C-8		432F-17
	444C-15		432D-8		432A-5

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
65842-94401	432C-5	67241-99E10	508A-10	67282-94L00	450B-37
	432D-5		450A-20		508A-28
	432E-5		450B-20		450A-51
	432F-4		508A-11		450B-51
65890-95D00	432E-18	67243-95600	450A-21	67284-94L00	508A-43
	432F-18		450B-21		450A-52
	432A-6		508A-12		450B-52
	432B-6		450A-22		508A-44
65890-99100 65892-95D00	432C-6	67244-95600	450B-22	67292-94300	450A-38
	432D-6		508A-13		450B-38
	432E-6		450A-23		508A-30
	432F-5		450B-23		450A-39
67130-94812	432A-7	67251-99E20	508A-14	67294-95600	450B-39
	432B-7		450A-24		508A-31
	432C-7		450B-24		513A-15
	432D-7		508A-15		513B-15
67130-94812	432E-7	67252-95600	450A-25	67296-90J10	513C-10
	432F-6		450B-25		513D-10
	513A-1		508A-16		513E-15
	513B-1		450A-26		450A-40
67140-95600	513C-1	67253-95600	450B-26	67296-94300	450B-40
	513D-1		508A-17		508A-32
	513E-1		450A-27		450A-41
	513A-14		450B-27		450B-41
67200-91J20 67200-97E50	513B-14	67255-99E10	508A-18	67296-94310	508A-33
	513C-9		450A-28		450A-33
	513D-9		450B-28		450B-33
	513E-14		508A-19		508A-24
67212-95600	508A-1	67256-95600	450A-29	67296-95600	450A-42
	450A-1		450B-29		450B-42
	450B-1		508A-20		508A-34
	450A-13		450A-30		450A-43
67214-92E00	450B-13	67257-99E10	450B-30	67296-95610	450B-43
	508A-5		508A-21		508A-35
	450A-14		450A-31		508A-35
	450B-14		450A-14		513A-16
67220-95620	450A-15	67258-99E00	450B-31	67296-95621	513B-16
	450B-15		508A-22		513C-11
	508A-6		450A-32		513D-11
	67223-99E10		450B-32		513E-16
67229-95600	450A-16	67261-99E10	508A-23	67297-95600	450A-44
	450B-16		450A-34		450B-44
	508A-7		450B-34		508A-36
	450A-17		508A-25		513A-17-1
67232-95600	450B-17	67264-95600	450A-35	67320-93J00	513B-17-1
	508A-8		450B-35		513C-12-1
	450A-18		508A-26		513D-12-1
	450B-18		450A-36		513E-17-1
67238-87D00	508A-9	67273-95600	450B-36	67320-93J10	513A-17-2
	450A-19		508A-27		513B-17-2
	450B-19		450A-37		513C-12-2

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
67320-93J20	513D-12-2	67466-95200	513E-3	67320-93J30	513E-17-2
	513E-17-2		454A-2		513A-17-3
	513A-17-3		454B-2		513B-17-3
	513B-17-3		513A-5		513C-12-3
67320-93J30	513C-12-3	67467-94404	513B-5	67320-93J40	513D-12-3
	513D-12-3		513C-5		513E-17-3
	513E-17-3		513D-5		513A-17-4
	513A-17-4		513E-5		513B-17-4
67320-93J40	513B-17-4	67701-94430	454A-3	67320-93J50	513C-12-4
	513C-12-4		454B-3		513D-12-4
	513D-12-4		513A-6		513E-17-4
	513E-17-4		513B-6		513A-17-5
67320-93J50	513A-17-5	67721-94310	513C-6	67320-93J60	513B-17-5
	513B-17-5		513D-6		513C-12-5
	513C-12-5		442A-1		513D-12-5
	513D-12-5		442B-1		513E-17-5
67320-93J60	513E-17-5	67725-99E20	513A-9	67320-93J70	513A-17-6
	513A-17-6		513B-9		513B-17-6
	513B-17-6		513E-9		513C-12-6
	513C-12-6		442A-2		513D-12-6
67320-93J70	442A-2	67726-99E00	442B-2	67320-93J80	513E-17-6
	513E-17-6		513A-10		513A-17-7
	513A-17-7		513B-10		513B-17-7
	513B-17-7		513E-10		513C-12-7
67320-93J80	513C-12-7	67728-99E00	442A-3	67331-94400	513D-12-7
	513D-12-7		442B-3		513E-17-7
	513E-17-7		513A-11		513A-17-8
	513A-17-8		513B-11		513B-17-8
67320-93J80	513B-17-8	68110-87L00	513E-11	67341-94400	513C-12-8
	513C-12-8		442A-4		513D-12-8
	513D-12-8		442B-4		513E-17-8
	513E-17-8		513A-12		513A-17-9
67320-93J80	513A-17-9	68111-91L00	513B-12	68111-91L00	513B-17-9
	513B-17-9		513E-12		513C-12-9
	513C-12-9		442A-5		513D-12-9
	513D-12-9		442B-5		513E-17-9
67331-94400	513E-17-9	68111-91L00	513A-13	68111-91L00	454A-1
	454A-1		513B-13		454B-1
	454B-1		513E-13		513A-2
	513A-2		420A-12		513B-2
67341-94400	513B-2	68111-91L00	420B-12	68111-91L00	513C-2
	513C-2		420C-12		513D-2
	513D-2		420D-12		513E-2
	513E-2		420E-13		454A-6
67341-94400	454A-6	68111-91L00	420A-8	68111-91L00	454B-6
	454B-6		420B-8		513A-3
	513A-3		420C-8		513B-3
	513B-3		420D-8		513C-3
67341-94400	513C-3	68111-91L00	420E-8	68111-91L00	513D-3
	513D-3				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
01550-05167	201A-17	01550-0630C	112A-6	01560-10657	112E-5
	201B-17		112A-21		112A-12
	201C-17		112B-6		112B-12
	201D-17		112B-21		112C-12
	201E-17		112C-6		112D-12
01550-06127	308A-2		112C-21	01580-06167	112E-12
	308A-9		112D-6		319A-18
	308A-14		112D-21		319B-18
	308A-18		112E-6		319C-16
	308B-2		112E-21		319D-16
	308B-9		125A-1	01580-08257	130A-6
	308B-14		125A-11		130B-6
	308B-18		125B-1		130C-6
	308C-2		125B-11		130D-6
	308C-9		125C-1		301A-15
	308C-14		125C-11	02112-04067	301B-15
	308C-18		125D-1		301C-15
	308D-2		125D-11		301D-15
	308D-9		125E-1		303A-14
	308D-14		125E-11		303B-14
	308D-18	01550-06407	146E-22	02112-04087	303C-14
	308E-2		112A-13		303D-14
	308E-9		112B-13		303E-14
	309A-10		112C-13		303A-12
	309B-10		112D-13		303B-12
01550-0612C	309E-4	01550-08257	112E-13	02112-05087	303C-12
	166A-14		130A-5		303D-12
	166A-16		130B-5		303E-12
	166B-14		130C-5		554A-10
	166B-16		130D-5		554B-10
	166C-14	01550-08357	112A-8	02112-05107	303A-7
	166C-16		112B-8		303A-10
	166D-14		112C-8		303B-7
	166D-16		112D-8		303B-10
	166E-14		112E-8		303C-7
	201A-8	01550-10557	167A-15		303C-10
	201B-8		112A-11		303D-7
	201C-8		112B-11		303D-10
	201D-8		112C-11		303E-7
	201E-8		112D-11		303E-10
01550-06167	319A-14	01560-06457	112E-11	02112-05167	554A-12
	319B-14		112A-14		554B-12
	319C-9		112B-14		128A-14
	319D-9		112C-14		128B-14
	308A-26		112D-14		128C-14
01550-0620C	308B-26	01560-08757	112E-14	02112-06257	128D-14
	308C-26		112A-5		128E-14
	308D-26		112B-5		303A-3
	308E-15		112C-5		303B-3
	167A-16		112D-5		303C-3

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
02112-0630B	303D-3	03222-0520B	308C-20		301C-11
	303E-3		308D-20		301D-11
	501C-11		125A-21		308A-22
	501D-11		125B-21		308B-22
	125A-9		125C-21		308C-22
02112-3306A	125B-9	03241-0625A	125D-21		308D-22
	125C-9		125E-21		412A-21
	125D-9		319A-10		412B-21
	125E-9		319B-10		412C-21
	309C-5		570A-51		412D-21
02112-35127	309D-5	03542-06169	570B-51	08316-10087	412E-21
	125A-10		420A-4		125A-2
	125B-10		420B-4		125B-2
	125C-10		420C-4		125C-2
	125D-10		420D-4		125D-2
02142-05257	125E-10	04211-09109	420E-4		125E-2
	319A-2		112A-10		146A-16
	319B-2		112B-10		146B-16
	319C-2		112C-10		146C-16
	319D-2		112D-10		146D-16
02142-05307	553A-13	08211-20263	112E-10	08321-01047	146E-23
	553B-13		220A-12		303A-13
	553C-13		220B-12		303A-15
	166A-15		220C-12		303B-13
	166B-15		220D-12		303B-15
02142-06127	166C-15	08211-35451	220E-12		303C-13
	166D-15		220A-22-6		303C-15
	309A-6		220B-22-6		303D-13
	309B-6		220C-22-6		303D-15
	319A-12		220D-22-6		303E-13
02142-06167	319B-12	08221-35455	220E-22-6	08321-0105A	303E-15
	319E-2		220A-22-1		128A-15
	570A-50		220B-22-1		128B-15
	570B-50		220C-22-1		128C-15
	319A-8		220D-22-1		128D-15
	319A-20	08221-35456	220E-22-1		128E-15
	319B-8		220A-22-4		303A-9
	319B-20		220B-22-4		303A-11
	319C-8		220C-22-4		303B-9
	319D-8		220D-22-4		303B-11
02162-06127	319E-5	08310-00057	220E-22-4		303C-9
	550A-4		319A-3		303C-11
	550B-4		319B-3		303D-9
	554A-4		319C-3		303D-11
	554B-4		319D-3		303E-9
03112-0630B	501A-11		553A-14		303E-11
	501B-11		553B-14		553A-15
	407A-5		553C-14		553B-15
	308A-20		301A-11		553C-15
	308B-20		301B-11		554A-13

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
08321-01067	554B-13	09100-10316	336C-24	09116-06225	412D-14
	301A-12		336D-24		412E-14
	301B-12	09100-10317	444A-23		336B-31
	301C-12		444B-23		336D-34
	301D-12		444C-23		454A-7
	303A-4	09100-10321	141A-13	09116-06227	454B-7
	303B-4		141B-13		166A-11
	303C-4		141C-13		166B-11
	303D-4		141D-13		166C-11
	303E-4		141E-13		166D-11
	308A-23	09100-12123	405A-19		166E-11
	308B-23		405B-19		412A-13
	308C-23		405C-19		412A-20
	308D-23		405D-19		412B-13
	550A-5		405E-19		412B-20
08322-01057	550B-5	09108-06060	160A-6		412C-13
	554A-5		160B-6		412C-20
	554B-5		160C-6		412D-13
	303A-8		160D-6		412D-20
	303B-8		160E-6		412E-13
	303C-8	09108-06061	160A-7	09116-06228	412E-20
	303D-8		160B-7		141A-19
	303E-8		160C-7		141B-19
	319C-11		160D-7		141C-19
	319D-11		160E-7		141D-19
08331-3115A	201A-18	09108-10137	444A-1	09116-06232	141E-19
	201B-18		444B-1		412A-5
	201C-18		444C-1		412B-5
	201D-18		570A-8		412C-5
	201E-18		570B-8		412D-5
08341-31059	303A-18	09111-10045	336A-30	09116-06234	412E-5
	303B-18		336B-38		141A-6
	303C-18		336C-33		141B-6
	303D-18		336D-41		141C-6
	303E-18		336E-30		141D-6
09100-08232	450A-45	09111-10067	335A-20	09116-06237	141E-6
	450B-45		335B-20		513A-4
09100-08309	508A-38		335C-21		513B-4
	336A-25		335D-21		513C-4
	336B-25		335E-20		513D-4
	336C-28		336B-30	09116-06513	513E-4
	336D-28		336D-33		125A-20
	336E-25	09111-10069	335A-21		125B-20
	335A-14		335B-21		125C-20
	335B-14		335C-22		125D-20
09100-08311	335C-14		335D-22	09116-08147	125E-20
	335D-14		335E-21		407A-10
	335E-14	09116-06223	412A-14	09116-08151	220A-28
	570A-23		412B-14		220B-28
	570B-23		412C-14		220C-28

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09116-08152	220D-28	09126-05003	412C-6	09140-10031	335A-22
	220E-28		412D-6		335B-22
	335A-8		412E-6		335C-23
	335B-8		450A-46		335D-23
	335C-8		450B-46		335E-22
09116-08153	335D-8	09126-06005	508A-39	09140-10032	146E-24
	335E-8		112A-20		432A-14
	405A-11		112B-20		432B-14
	405B-11		112C-20		432C-14
	405C-11		112D-20		432D-14
09116-08155	405D-11	09126-06015	112E-20	09140-12034	220A-9
	405E-11		444A-25		220B-9
	141A-21		444B-25		220C-9
	141B-21		444C-25		220D-9
	141C-21		570A-25		220E-9
09117-06030	141D-21	09126-06022	570B-25	09140-12038	146E-15
	141E-21		130A-3	09140-18014	303A-20
	407A-13		130B-3		303B-20
	336A-31		130C-3		303C-20
	336B-39		130D-3		303D-20
09118-08168	336C-34	09136-05041	130E-3	09141-16008	303E-20
	336D-42		444A-24		407A-20
	336E-31		444B-24	09148-06008	444A-19
	405A-5		444C-24		444B-19
	405B-5	09138-05011	303A-17		444C-19
09118-08171	405C-5		303B-17	09148-06017	412A-9
	405D-5		303C-17		412B-9
	405E-5		303D-17		412C-9
	405A-4		303E-17		412D-9
	405B-4	09140-04007	128A-23		412E-9
09118-08172	405C-4		128B-26	09159-05042	412A-7
	405D-4		128C-23		412B-7
	405E-4		128D-23		412C-7
	405A-3		128E-23		412D-7
	405B-3		128F-36		412E-7
09119-06047	405C-3	09140-05005	166A-12	09159-10050	141A-16
	405D-3		166B-12		141B-16
	405E-3		166C-12		141C-16
	454A-4		166D-12		141D-16
	454B-4		166E-12		141E-16
	513A-7	09140-06020	570A-17		444A-26
	513B-7		570B-17		444B-26
	513C-7		450A-47		444C-26
	513D-7		450B-47		570A-26
	513E-7		508A-40		570B-26
09125-05046	407A-7	09140-08023-XC0	335A-15	09159-12014	405A-15
09125-05129	570A-24		335B-15		405B-15
	570B-24		335C-15		405C-15
	412A-6		335D-15		405D-15
	412B-6		335E-15		405E-15

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09159-22006	335A-18		336C-16		405C-20
	335B-18		336C-29		405D-20
	335C-18		336D-16		405E-20
	335D-18		336D-29	09160-13018	405A-14
09160-05029	335E-18		336E-16		405B-14
	336A-34		336E-26		405C-14
	336B-32	09160-08124	167A-14		405D-14
	336B-42	09160-10080	141A-20		405E-14
	336C-37		141B-20	09160-16054	407A-19
	336D-35		141C-20	09160-18011	303A-19
	336D-45		141D-20		303B-19
	336E-34		141E-20		303C-19
	412A-8	09160-10082	141A-15		303D-19
	412B-8		141B-15		303E-19
	412C-8		141C-15	09160-22018	220A-20-1
	412D-8		141D-15		220B-20-1
	412E-8		141E-15		220C-20-1
	570A-18		335A-24		220D-20-1
	570B-18		335B-24		220E-20-1
			335C-25	09160-22019	220A-20-2
09160-06084	166A-13		335D-25		220B-20-2
	166B-13		335E-24		220C-20-2
	166C-13		444A-27		220D-20-2
	166D-13		444B-27		220E-20-2
	166E-13		444C-27	09160-22020	220A-20-3
	308A-10		570A-27		220B-20-3
	308A-15		570B-27		220C-20-3
	308B-10		141A-14		220D-20-3
	308B-15	09160-10148	141B-14		220E-20-3
	308C-10		141C-14	09160-22021	220A-20-4
	308C-15		141D-14		220B-20-4
	308D-10		141E-14		220C-20-4
09160-06104	308D-15	09160-12007	308A-11		220D-20-4
	308E-10		308A-16		220E-20-4
	412A-10		308B-11	09160-22022	220A-20-5
	412B-10		308B-16		220B-20-5
	412C-10		308C-11		220C-20-5
	412D-10		308C-16		220D-20-5
	412E-10		308D-11		220E-20-5
	450A-48		308D-16	09160-22023	220A-20-6
	450B-48		308E-11		220B-20-6
	508A-41		405A-16		220C-20-6
	335A-16	09160-12066	405B-16		220D-20-6
	335B-16		405C-16		220E-20-6
	335C-16		405D-16	09160-22033	335A-10
	335D-16		405E-16		335B-10
	335E-16		570A-46		335C-10
	336A-16	09160-12067	570B-46		335D-10
09160-08091	336A-26		405A-20		335E-10
	336B-16	09160-12108	405B-20	09160-25069	309A-11
	336B-16				
	336B-26				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
	309B-11	09180-06295	412A-11		220E-4-5
	570A-47		412B-11	09181-33005	220A-4-6
	570B-47		412C-11		220B-4-6
	116A-10		412D-11		220C-4-6
09160-27008	116B-10		412E-11		220D-4-6
	116C-10	09180-08169	167A-12		220E-4-6
	116D-10	09181-30186	220A-10-1	09181-33006	220A-4-7
	116E-10		220B-10-1		220B-4-7
09160-39001	336A-6		220C-10-1		220C-4-7
	336B-6		220D-10-1		220D-4-7
	336C-6		220E-10-1		220E-4-7
	336D-6	09181-30187	220A-10-2	09181-33007	220A-4-8
09161-04012	336E-6		220B-10-2		220B-4-8
	412A-18		220C-10-2		220C-4-8
	412B-18		220D-10-2		220D-4-8
	412C-18		220E-10-2		220E-4-8
09162-10005	412D-18	09181-30188	220A-10-3	09181-33008	220A-4-9
	412E-18		220B-10-3		220B-4-9
	335A-23		220C-10-3		220C-4-9
	335B-23		220D-10-3		220D-4-9
	335C-24		220E-10-3		220E-4-9
	335D-24	09181-30190	220A-10-4	09181-33009	220A-4-10
	335E-23		220B-10-4		220B-4-10
	336C-25		220C-10-4		220C-4-10
	336D-25		220D-10-4		220D-4-10
	444A-28		220E-10-4		220E-4-10
	444B-28	09181-30192	220A-10-5	09181-35101	220A-4-11
	444C-28		220B-10-5		220B-4-11
09163-06001	570A-28		220C-10-5		220C-4-11
	570B-28		220D-10-5		220D-4-11
	444A-29		220E-10-5		220E-4-11
	444B-29	09181-33001	220A-4-2	09181-35110	220A-4-11
	444C-29		220B-4-2		220B-4-11
	570A-29		220C-4-2		220C-4-11
	570B-29		220D-4-2		220D-4-11
			220E-4-2		220E-4-11
09168-10022	10AA-4		220A-4-3	09181-35131	220A-22-2
	10AB-4	09181-33002	220B-4-3		220B-22-2
	10AC-4		220C-4-3		220C-22-2
	10AD-4		220D-4-3		220D-22-2
09169-20007	407A-12		220E-4-3		220E-22-2
	116A-6		220A-4-4	09181-35132	220A-22-3
	116B-6	09181-33003	220B-4-4		220B-22-3
	116C-6		220C-4-4		220C-22-3
09180-06254	116D-6		220D-4-4		220D-22-3
	116E-6		220E-4-4		220E-22-3
	125A-19	09181-33004	220A-4-5	09181-35136	220A-22-5
	125B-19		220B-4-5		220B-22-5
	125C-19		220C-4-5		220C-22-5
	125D-19		220D-4-5		220D-22-5
	125E-19				

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09181-39001	220E-22-5	09204-03003	10AA-5	09250-16008	412C-27
	336A-7		10AB-5		412D-27
	336B-7		10AC-5		412C-30
	336C-7		10AD-5		412D-30
	336D-7		407A-21		412A-29
09200-05015	336E-7	09205-02004	201A-23	09260-10005	412B-29
	336A-17		201B-23		412E-26
	336B-17		201C-23		201A-14
	336C-17		201D-23		201B-14
	336D-17		201E-23		201C-14
09200-08043	336E-17	09205-02013	201A-6	09262-30068	201D-14
	336A-18		201B-6		201E-14
	336B-18		201C-6		116A-16
	336C-18		201D-6		116B-16
	336D-18		201E-6		116C-16
09202-05022	336E-18	09205-03019	220A-3	09262-35070	116D-16
	220A-16		220B-3		116E-16
	220B-16		220C-3		220A-25
	220C-16		220D-3		220B-25
	220D-16		220E-3		220C-25
09202-06025	220E-16	09205-03021	201A-5	09262-35L09	220D-25
	407A-15		201B-5		220E-25
	407A-14		201C-5		116A-17
	405A-1		201D-5		116B-17
	405B-1		201E-5		116C-17
09202-07001	405C-1	09205-03038	444A-14	09263-20072	116D-17
	405D-1		444B-14		116E-17
	405E-1		444C-14		116A-5
	141A-11		112A-15		116B-5
	141B-11		112B-15		116C-5
09204-01002	141C-11	09205-06021	112C-15	09263-22020	116D-5
	141D-11		112D-15		116E-5
	141E-11		112E-15		220A-26
	336A-19		335A-4		220B-26
	336A-35		335B-4		220C-26
09202-07001	336B-19	09205-08002	335C-4	09263-22039	220D-26
	336B-33		335D-4		220E-26
	336B-43		335E-4		407A-2
	336C-19		336A-36		116A-9
	336C-38		336B-34		116B-9
09202-07001	336D-19	09205-08002	336B-44	09263-27008	116C-9
	336D-36		336C-39		116D-9
	336D-46		336D-37		116E-9
	336E-19		336D-47		116A-18
	336E-35		336E-36		116B-18
09202-07001	444A-31	09248-10008	407A-11	09264-35005	116C-18
	444B-31		319C-12		116D-18
	444C-31		319D-12		116E-18
	570A-30		412A-27		160A-14
	570B-30		412B-27		160B-14

PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.	PART NO.	FIG.NO.-REF.NO.
09265-30004 09280-08005	160C-14	09283-35L01	116B-20	09352-70113-600 09355-50108-135 09355-50108-260 09380-38003	412D-24
	160D-14		116C-20		412E-24
	160E-14		116D-20		146E-16
	220A-5		116E-20		146E-7
	220B-5		116A-21		146E-8
	220C-5		116B-21		146E-6
	220D-5		116C-21		336A-9
	220E-5		116D-21		336B-9
	407A-3		116E-21		336C-9
	201A-20		220A-27		336D-9
09280-11001	201B-20	09289-22L01	220B-27	09381-20003	336E-9
	201C-20		220C-27		116A-4
	201D-20		220D-27		116B-4
	201E-20		220E-27		116C-4
	201A-24		116A-19		116D-4
	201B-24		116B-19		116E-4
	201C-24		116C-19		412A-19
	201D-24		116D-19		412B-19
	201E-24		116E-19		412C-19
	141A-17		336A-20		412D-19
09280-50008	141B-17	09306-22006	336B-20	09390-72008	412E-19
	141C-17		336C-20		116A-22
	141D-17		336D-20		116B-22
	141E-17		336E-20		116C-22
	125A-15		128A-22		116D-22
	125B-15		128B-25		116E-22
	125C-15		128C-22		116A-23
	125D-15		128D-22		116B-23
	125E-15		128E-22		116C-23
	220A-23		128F-37		116D-23
09280-63001	220B-23	09320-04009	412A-12	09390-80002	116E-23
	220C-23		412B-12		146A-13
	220D-23		412C-12		146B-13
	220E-23		412D-12		146C-13
	141A-18		412E-12		146D-13
	141B-18		570A-48		146E-19
	141C-18		570B-48		146E-9
	141D-18		308A-12		432E-19
	141E-18		308A-17		432F-19
	160A-13		308B-12		303A-21
09282-17009	160B-13	09320-10035	308B-17	09401-08413	303B-21
	160C-13		308C-12		303C-21
	160D-13		308C-17		303D-21
	160E-13		308D-12		303E-21
	336A-8		308D-17		319A-7
	336B-8		308E-12		319B-7
	336C-8		167A-13		319C-7
	336D-8		412A-24		319D-7
	336E-8		412B-24		553A-7
	116A-20		412C-24		553B-7

SUZUKI **DT40W** PARTS CATALOGUE

SUZUKI MOTOR CORPORATION All rights reserved

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

SUZUKI MOTOR CORPORATION

Service Material & Training Group, Service Material In-house Production Project
300 Takatsuka, Minami, Hamamatsu, Japan

Copyright © SUZUKI MOTOR CORPORATION 2016 All Rights Reserved

SUZUKI MOTOR CORPORATION